


## Warning

- The unit is to be connected to a 120V, 60Hz power source only.
- Capacity: 15A (1875 W) Resistive (General Purpose); 4A (500 W) Tungsten (Lighting), 1/3 HP. **Do Not Exceed Capacity.**
- Do not attempt to disassemble the unit. There are no serviceable parts inside.
- The timer is for indoor use only.
- **PLEASE READ THROUGH THE INSTRUCTIONS BEFORE USING.**

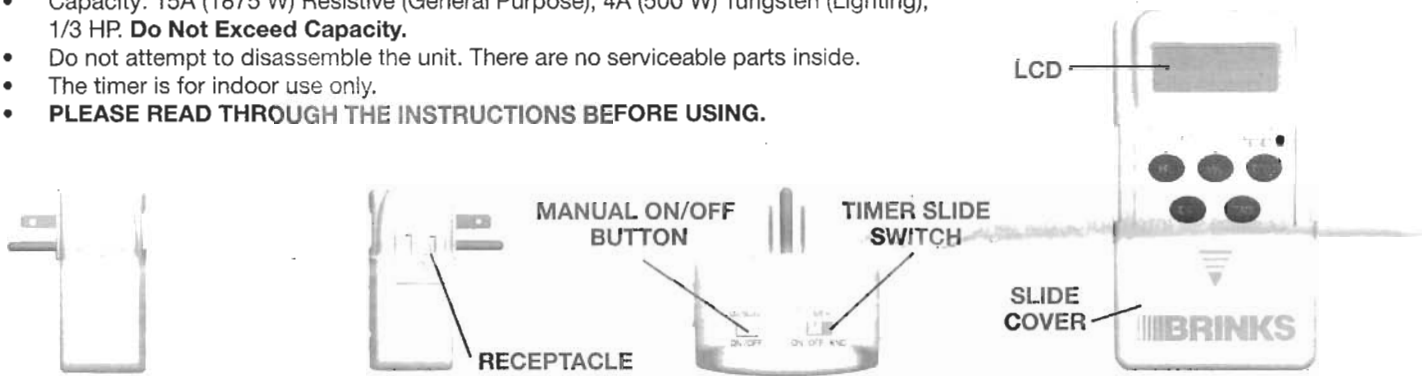

## Features

- Program up to 6 events for a maximum of 42 on/off cycles.
- There are 5 programming options:
  - Daily (every day of the week)
  - Weekdays only (M-F)
  - Weekend only (Sat & Sun)
  - Monday through Saturday
  - Individual Day (e.g. Wednesday only)
- Random On/Off feature turns power ON or OFF within +/- 15 minutes of programmed times
- Manual override On/Off button
- Rechargeable batteries to back up the power supply so that the timer retains the time and program settings in case the unit is unplugged or there is a power failure.
- Slide Cover protects operating buttons.
- Grounded plug and receptacle

## Setting the Time

- When the timer is plugged into the outlet or the timer's battery is charged, display will flash "12:00 AM Sunday" (FIG 3). Pull down the slide cover. (FIG 4) Press "HR", "MIN" or "DAY" (hour/minute/day) buttons respectively to set up the correct time. Hold down the buttons for rapid increments. Once the correct day and time are displayed, press the "TIME" button once to lock the setting.
- In order to adjust the time after initialization, press and hold "TIME" button for one second to get in the time setting screen and repeat the above steps to set the new time.



FIG 3

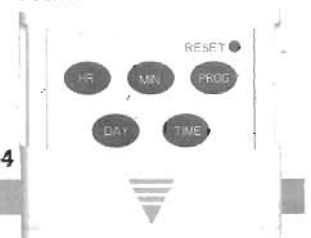


FIG 4

## Timer Program Setting

- Press and hold the "PROG" button for more than 1 second or until the display starts flashing (FIG 5). Number "1" indicates that program 1 is being set. "ON" indicates activation of timer function.



FIG 5: Setting the timer to turn on at 6 PM each Monday for Program 1



FIG 6: Setting the timer to turn off at 10:30 PM each Monday for Program 1

- Press "DAY", "HR" and "MIN" respectively to set up the time and day for the timer to be TURNED ON or ACTIVATED for Program 1. For "DAY" setting, you can choose daily (Mon-Sun), weekdays only (Mon-Fri), weekends (Sat-Sun) only, Monday through Saturday or one specific day (Monday is used in FIGS 5 and 6). Press "DAY" button repeatedly to reach your desired setting.

- After setting up the activation time, press "PROG" button again to set the time for the timer to be TURNED OFF or DEACTIVATED. The display changes from "ON" to "OFF" (FIG 6). Repeat these procedures to set up time and day for the timer to be TURNED OFF or DEACTIVATED. (For example, in FIGS 5 and 6, the timer will be turned on at 6:00 PM on Monday and will be turned off 10:30 PM on Monday.)
- NOTE: The timer programming function allows a different DAY setting for ON/OFF times. Generally, you want the same setting for each. For example, Weekend (SA SU) for both ON and OFF times. However, if a specific day is chosen, the day can vary between ON and OFF. For example, if Monday is chosen for ON, and Wednesday is chosen for OFF, the power will be ON from Monday through Wednesday.
- If you would like to enter the next program, pressing the "PROG" button again will take you to Program 2. Repeat the above steps to set the time and day. The unit can store up to 6 programs.
- During program setting, pressing the "RESET" button once will clear the current program setting. If the "RESET" button is pressed and held for more than 3 seconds during programming mode, ALL programs will be erased.
- To exit the programming screen, press the "TIME" button once.
- Set the "Timer Slide Switch" to the ON position in order to activate the program(s).
- Plug the timer into a wall socket and push the "Manual ON/OFF" button to OFF if you have not done so. If the "Manual ON/OFF" button is turned ON, the unit will act as a regular wall socket to the appliance connected to it.

**NOTE:** Because six programs can be active at once, it is possible to have conflicts and/or overlapping ON/OFF commands. For example, if Program 1 turns power ON at 4 PM daily and OFF at 6 PM daily, and Program 2 turns power ON at 3 PM and OFF at 8 PM on Thursday only. The timer will follow the commands of both programs in sequence. The result: on Thursday, the power will be ON at 3 PM (Program 2) and OFF at 6 PM (Program 1).

## Master Reset

- When in the top level menu (not setting the time or programming), press and hold the "RESET" button for more than 3 seconds. After a Master Reset, all time/program settings will be erased and the unit goes back to its default settings.

## Timer Slide Switch

- The "Timer Slide Switch" is located on the right of the top surface of the unit.
- ON - Timer Program is switched to ON. Activates the programs. The unit will be turned OFF and ON according to the set programs.
- OFF - Timer Program is switched to OFF. Deactivates the programs. Does not deactivate the unit and the unit can still connect the appliance to the power source.
- RND - Random Mode. All programs will be turned ON or OFF randomly (within a +/- 15 minutes range of preset times) to make the program seem random. As power will be turned on within a +/- 15 minute range of the programmed ON and OFF times, make sure the ON and OFF times are at least 30 minutes apart.

## Manual ON/OFF Button

- The "Manual ON/OFF" button is located on the left of the top surface of the unit.
- Manually turns the power ON and OFF. If the Manual ON/OFF setting is turned ON, the unit will act as a regular wall socket. Manually turning the unit ON or OFF will not deactivate the Timer Programs. The next programmed action will override the manual setting if the "Timer Slide Switch" is set to ON.

## WARRANTY

This product is warranted to be free from defects in material and workmanship for the life of the product. If a defect in material or workmanship occurs, call 1-800-562-5625 for instructions on how to have the defective product repaired or replaced free of charge.

### LIMITATIONS

- This warranty only covers the timer unit and is not extended to other components or equipment that is used in conjunction with the product.
  - This warranty is extended to the original purchaser of the product. A purchase receipt or other approved proof of purchase is required before warranty service will be rendered.
  - Unauthorized service or modification to this product or any furnished component will void the warranty in its entirety.
  - THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY PARTICULAR PURPOSE OR USE, AND SPECIFICALLY IN LIEU OF ALL SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES (INCLUDING BUT NOT LIMITED TO ANY LOSS OF BUSINESS OR PROFITS, WHETHER OR NOT FORESEEABLE) RESULTING FROM THE USE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY.
- Some states or provinces do not allow the exclusion of incidental or consequential damages, so the above limitation or exclusion may not apply.
- This warranty gives you specific rights, and you may also have other rights that vary from state to state.

### NOT COVERED

- Failure of the product as a result of an accident, abuse, negligence, alteration, or faulty installation, or any other failure not relating to faulty material or workmanship.
- Damaged caused by electronic equipment plugged into the timer.
- Reimbursement for inconvenience, installation, setup time, loss of use, or unauthorized service.
- Special, indirect, incidental or consequential damages.

