

# XRC 110 UNIVERSAL REMOTE CONTROL

## GETTING STARTED

Congratulations! Your XRC 110 universal remote control and StarSight™ bring new convenience to television viewing. By pressing a few keys you can see what's on TV, select the program you want, set-up to record programs on your VCR, and much more.

The XRC 110 also eliminates the frustration of having to use several remote controls. The XRC 110 has been designed to control most TV sets and VCRs in today's consumer market, as well as your cable terminal.

Before you start to program your remote control, please read the following important instructions.

- The XRC 110 allows you to control multiple devices. The only time you will need to change modes is when you want to switch control to a different device.

For example, say you are using the remote to control your cable terminal and now you want to change the channel on your VCR. First press VCR and then press the desired channel number key(s). To return to controlling your cable terminal, press the CABLE key and then the desired function key. The remote control will stay in the cable mode until you press another mode key.

- The AUX mode can be used for a second TV or VCR, or for a digital audio tuner.
- The four mode keys (AUX, VCR, CABLE, and TV) also serve as indicator lights which show which device is being controlled and help guide you through programming the remote. Refer to the **PROGRAMMING** Your XRC 110 section of this guide for details.
- You can program the XRC 110 to control volume through your cable terminal, TV, or VCR without being in that mode. For example, you can control volume through your TV even though the remote is in the cable mode. You must program the remote in order to use the volume control feature. Refer to **PROGRAMMING VOLUME CONTROL**.

- The XRC 110 also provides control of stand-alone digital audio tuners as well as services such as Music Choice™ (MC) and Digital Music Express™ (DMX).



## BATTERY REPLACEMENT

If the batteries in your remote control need to be replaced, use two fresh 1.5 volt, AA batteries.

To install or replace the batteries, slide the battery door on the back of the remote open and insert the batteries in the direction indicated. Then slide the battery door closed until it snaps into place.

Point the remote at your cable terminal and press CABLE then POWER to turn the terminal on. If the terminal does not turn on, remove the batteries, check their orientation, or replace them as needed.


Once you have programmed your remote control, you will not need to reprogram it after you take the batteries out to replace them.

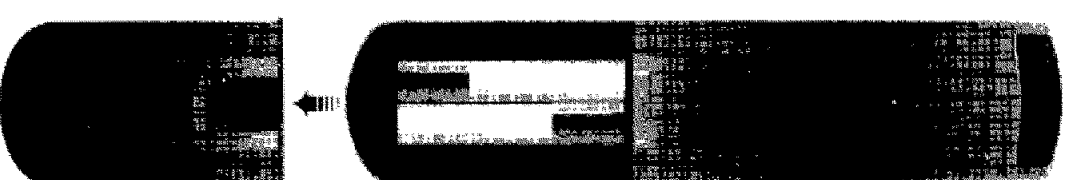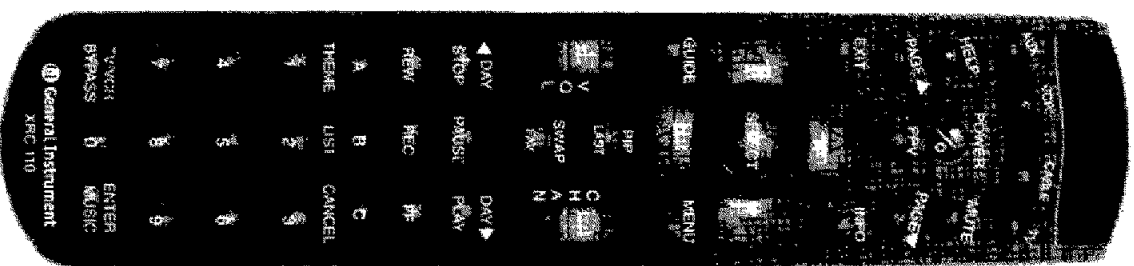

## THE KEYBOARD

The illustration below identifies the keys on your remote control; see your cable terminal and digital audio user guides for further instructions. Note that in the TV and VCR modes the PAUSE, PLAY, REW, REC, and FF keys control your VCR.

To record a program you must press the REC key twice. This feature was added to avoid accidental recording.

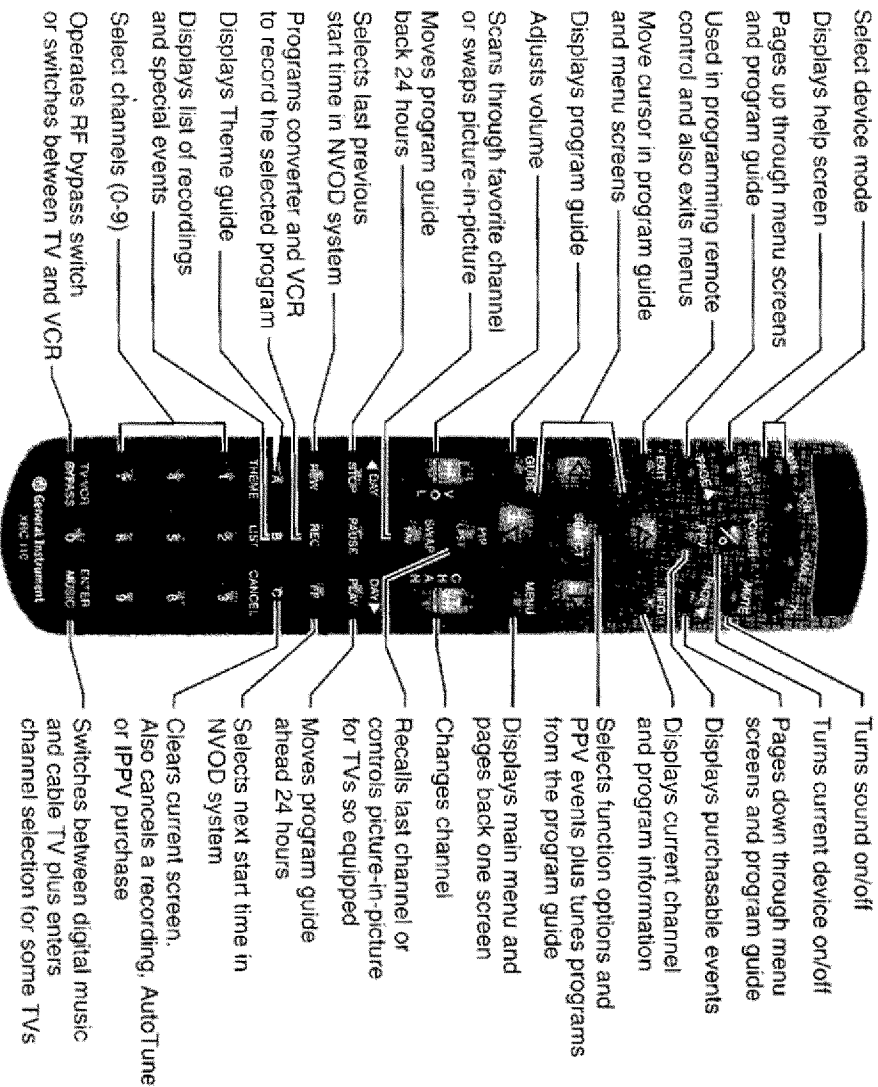

## PROGRAMMING YOUR

### XRC 110

You are now ready to program the XRC 110 remote control. Find the code for your cable terminal, TV set, VCR, and the device you wish to assign to the AUX mode, in the *DEVICE CODES* section at the end of this guide.

All codes are three-digit numbers. As you program for each mode, write down the correct codes in the spaces provided, for future use.

*Many devices have more than one code listed. For these cases, start with the first code listed. For example, if you have a Sony TV, the first code is 000.*

Please note after entering a device code, the mode indicator should flash twice. If all four mode indicators show one long flash, you have entered an invalid code. Try again.

Also note that if it takes you longer than 10 seconds to press the next key in the programming sequence, the whole sequence will be erased and you will have to start over. This feature was added to prevent you from accidentally reprogramming the remote during regular viewing.

#### PROGRAMMING FOR YOUR TERMINAL

The XRC 110 is already programmed to control the General Instrument CFT2200 and DCT 1000 cable terminals. If you have either of those terminals you can move on to *PROGRAMMING FOR YOUR TV*. If you have some other cable terminal, look up the manufacturer in the *DEVICE CODES* section and note the three-digit code.

On the remote control, press and hold CABLE until the four mode indicators flash twice. Now enter the three-digit code. The CABLE indicator should flash twice; if it doesn't, press and hold CABLE as described above and try again. For example, if you have a General Instrument cable terminal (other than the CFT2200 or DCT 1000), press and hold CABLE until the four mode indicators flash twice, then press 0-0-3.

After you have entered the code, point the remote at your terminal and press POWER. If your terminal turns on or off, you have finished programming for the terminal. Note your code below.

Cable Terminal Code \_\_\_\_\_

If, after trying all of the codes listed, the terminal still does not turn on or off, refer to the *IF THE DEVICE DOES NOT RESPOND* section of this guide.

## PROGRAMMING FOR YOUR TV

Look up the manufacturer of your TV in the *DEVICE CODES* section and note the three-digit code.

On the remote control, press and hold TV until the four mode indicators flash twice. Now enter the three-digit code. The TV indicator should flash twice; if it doesn't, press TV as described above and try again. For example, if you have a Sony TV, press and hold TV until the four mode indicators flash twice; then press 0-0-0.

After you have entered the code, point the remote at your TV and press POWER. If your TV turns on or off, you are finished programming for your TV. Note your TV set code below.

TV Code \_\_\_\_\_

If, after trying all of the codes listed, the TV still does not turn on or off, refer to the *IF THE DEVICE DOES NOT RESPOND* section of this guide.

## PROGRAMMING FOR YOUR VCR

Look up the manufacturer of your VCR in the *DEVICE CODES* section and note the code.

On the remote control, press and hold VCR until the four mode indicators flash twice. Now enter the three-digit code. The VCR indicator should flash twice; if it doesn't, press VCR as described above and try again. For example, if you have a JVC model, press and hold VCR until the four mode indicators flash twice, then press 0-0-8.

After you have entered the code, point the remote at your VCR and press POWER. If your VCR turns on or off, you have successfully programmed for the VCR. Note your VCR code below.

VCR Code \_\_\_\_\_

If you have tried all the codes listed for your VCR and it still does not turn on or off, refer to the *IF THE DEVICE DOES NOT RESPOND* section of this guide.

## PROGRAMMING THE AUX MODE

You can program the AUX mode to control another device such as a second TV or VCR, or a digital audio tuner.

Suppose you want to control a second VCR. Look up the manufacturer of your VCR in the *DEVICE CODES* section and note the code.

On the remote control, press and hold VCR until the four mode indicators flash twice. Now press 9-9-2. Next press and hold AUX until the four mode indicators flash twice. Finally, enter the three-digit code for your VCR. The AUX indicator should flash twice; if it doesn't, press AUX as described above and try again. For example, if you have a Mitsubishi VCR, press and hold VCR until the four mode indicators flash twice, then press 9-9-2-AUX (hold until the four mode indicators flash twice) —0-4-3.

After you have entered the code, point the remote at your VCR and press POWER. If the VCR turns on or off, you have successfully programmed for the VCR. Note the code below.

AUX Code \_\_\_\_\_

If you want to control a second TV, the key sequence is similar, except replace the vcr key with the tv key. The sequence is TV (hold until the mode indicators flash twice) —9-9-2 aux (hold until the indicators flash twice) — the device code for your TV.

If you have tried all the codes listed for the device you want to control and it still does not turn on or off, refer to the *IF THE DEVICE DOES NOT RESPOND* section of this guide.

## PROGRAMMING VOLUME CONTROL

You can program the XRC 110 to control volume through your cable terminal, your TV, or your VCR, without being in that mode. You can change your volume control selection at any time without disturbing the codes you programmed.

To program for volume control, first press and hold the mode key of the device in which volume is to be controlled until the four mode indicators flash twice. Next press 9—9—3. For example, if you want to control volume through your TV, press and hold TV until the four mode indicators flash twice, then press 9—9—3.

### **IF THE DEVICE DOES NOT RESPOND**

If the device you want to control does not respond, first try all of the manufacturer codes for the device. However, manufacturers often put their brand name on devices made by others. For these cases, the XRC 110 has a feature which will search the library of codes for you, and find the correct one.

### **CODE SEARCH**

Suppose you can't seem to find the correct code for your TV. To start the search, turn on your TV and aim the remote control directly at it.

Press and hold TV until the four mode indicators blink twice, then press 9—9—1. Now repeatedly press POWER—TV until your TV turns off.

You may need to press POWER—TV a number of times. *Be patient, and go slow, so you don't miss the correct code.*

When the TV turns off, press SELECT to lock in the code. The TV indicator will flash twice to indicate that the code is accepted. The TV set code is now programmed into the remote control.

To find your cable terminal, VCR, or AUX code, use the same procedure but substitute the CABLE, VCR or AUX key for the TV key.

If these procedures are successful, you will be able to control the devices you programmed; but you still have not discovered the device codes. If you want to record these codes for future reference, use the "blink back" feature described next.

### **CODE SEARCH USING "BLINK BACK"**

To use "blink back" to find your programmed TV code, press and hold TV until the four mode indicators flash twice, then press 9—9—0. Now press 1 and count the number of times the TV indicator blinks. This number is the first digit of your TV code. If the indicator does not blink after any step of this procedure, the digit is 0.

Next, press the 2 key. The TV indicator will blink again. Count the number of blinks to find the second digit of the code. Finally, press 3. The number of blinks is the third and final digit of the code.

You can also find the programmed cable terminal, VCR, and AUX codes using the same procedure. But the beginning sequence is CABLE (hold for two blinks)—9—9—0, VCR (hold for two blinks)—9—9—0, or AUX (hold for two blinks)—9—9—0. Then use the 1, 2, and 3 keys as in the TV code search above.

## DEVICE CODES

### CODES FOR CABLE TERMINALS

#### FOR TELEVISION VIEWING

ABC	003, 011, 013, 014, 047
General Instrument	003, 011, 012, 014, 047, 276, 476, 690, 691,
Hitachi	011
Jerrold	003, 011, 012, 014, 047, 276, 476, 690, 691
Rembrandt	011
Signature	011
Starcom	003, 047
Tocom	012, 013
United Cable	003

#### FOR DIGITAL AUDIO LISTENING

General Instrument	459, 520
Jerrold	459, 520
Starcom	459
DMX (Scientific Atlanta)	460

### CODES FOR TELEVISION

A-Mark	003
Abex	032
Admiral	093
Adventura	046
Aiko	092
Akai	030, 098
Alaron	216
Alleron	179, 183
Ambassador	177
Anam	004, 009, 068, 180

Anam National	055, 161
AOC	003, 019, 030, 137, 185
Archer	003
Astro Text	379
Audiosonic	109
Audiovox	003, 180
Belcor	019
Bell & Howell	016, 154
Bradford	180
Brandt	109
Brockwood	019
Broksonic	003
Candle	030, 046, 056, 186
Carver	054
CCE	329
Celebrity	000
Citizen	030, 039, 046, 056, 060, 092, 186, 280
Clairtone	185
Concerto	056
Contec	157, 158, 180, 185
Craig	161, 180
Crown	039, 180
Curtis Mathes	030, 039, 060, 154, 415
CXC	180
Daewoo	019, 039, 066, 067, 091, 092, 451
Daytron	019
Dumont	017, 019
Dynatech	049
Electroband	000, 185
Electrohome	381, 389, 409
Emerson	019, 038, 039, 154, 158, 177, 178, 179, 180, 182, 183, 185, 236, 280, 282, 463
Envision	030
Ferguson	109
Fisher	154, 159
Fujitsu	179
Funai	179, 180
Futuretech	180
GE	021, 027, 029, 047, 051, 055, 135, 138, 174, 178, 251, 279, 282
GEC	437
Gibraltar	017, 019, 030
GoldStar	001, 002, 019, 030, 032, 039, 056, 106, 109, 178, 409
Gradiente	392
Grundig	070

Grunpy	179, 180	Penney	002, 003, 018, 019, 021, 027, 030, 032, 039, 047, 051, 060, 110, 135, 138, 149, 156, 178, 309
Hallmark	178	Philco	019, 030, 054, 096, 302
Harvard	068, 180	Philips	054
Hitachi	032, 038, 056, 109, 145, 151, 173, 227, 279, 409, 413	Pilot	019, 030, 039
Ima	180	Pioneer	038, 109, 166
Infinity	054	Portland	019, 039, 092
Janeil	046	Priceclub	060
JBL	054	Prism	051
JCB	000	Proscan	047
Jensen	050	Proton	003, 031, 178, 466
JVC	036, 053, 069, 160, 169, 182	Pulsar	017
Kamp	216	Pulser	019
Kawasho	158, 216, 308	Quasar	051, 055, 219, 250
Kenwood	019, 030	Radio Shack	019, 032, 039, 165, 180, 409
Kloss	024, 046	RCA	018, 019, 029, 038, 047, 090, 135, 174, 254, 278
KMC	106	Realistic	019, 030, 032, 039, 056, 154, 165, 178, 180
KTV	030, 039, 180, 183, 185, 280	Rhapsody	183, 185, 216
Logik	016	Runco	017, 030, 251
Luxman	056	Saba	109
LXI	047, 054, 148, 154, 156, 178	Sampo	030, 032, 039, 100, 110
M-Electronic	109	Samsung	019, 030, 032, 039, 056, 060, 110, 178, 329, 408, 427, 482
Magnavox	030, 036, 054, 096, 186, 230, 386	Samsux	039
Majestic	015, 016	Sanyo	107, 146, 154, 159, 232, 484
Marantz	030, 054	Scimitsu	019
Megatron	003, 145, 178	Scotch	178
MEI	185	Scott	019, 178, 179, 180, 236, 309
Memorex	016, 056, 106, 150, 154, 178	Sears	015, 047, 054, 056, 146, 148, 149, 154, 156, 159, 168, 171, 178, 179, 281
MGA	019, 030, 150, 155, 178	Sharp	039, 093, 157, 165, 220, 281, 386, 491
Midland	017, 032, 039, 047, 051, 135	Shogun	019
Minutz	021	Signature	016
Mitsubishi	014, 019, 098, 150, 155, 178, 241, 331, 358	Simpson	186, 187
Motorola	055, 093	Sony	000, 011, 080, 111, 353
MTC	019, 030, 049, 056, 060, 091, 185	Soundesign	178, 179, 180, 186
Multitech	049, 180	Spectricon	003, 137
NAD	156, 166, 178	Squareview	171
NEC	019, 030, 036, 056, 434	SSS	019, 180
Nikko	030, 092, 178	Starlite	180
Noblex	430	Supre-Macy	046
Nordmende	109	Supreme	000
NTC	092	Sylvania	030, 054, 096, 381
Onwa	180	Symphonic	171
Optimus	154, 166	Tandy	093
Optonica	093, 165		
Orion	236		
Panasonic	051, 054, 055, 162, 226, 250, 338, 375		

Tatung	003, 049, 055, 396
Technics	051, 250
Techwood	051, 056
Teknika	016, 019, 039, 054, 056, 060, 092, 150, 175, 179, 180, 186, 322
Telefunken	074, 109
Tera	031
Thomson	109, 209
TMK	056, 177, 178
Toshiba	036, 060, 149, 154, 156
Tosonic	185
Totevision	039
Trical	157
Ultra	391
Universal	027
Vector Research	030
Victor	053
Video Concepts	098
Vidikron	054, 242
Vidtech	019, 178
Viking	046
Wards	016, 019, 020, 021, 027, 028, 029, 030, 054, 056, 080, 096, 111, 165, 174, 178, 179, 202
Yamaha	019, 030
Zenith	016, 017
Zonda	003

### CODES FOR VCRs

Action	317
Advantz	356
Adventura	000
Aiko	278
Aiwa	000, 406, 436, 468
Akai	041, 049, 156, 242
American High	035
Asha	240
Audiovox	037
Beaurnark	240
Broksonic	121, 184, 211, 235, 361
Calix	037
Canon	035, 102
Capehart	020
Carver	081
CCE	072, 278

Citizen	037, 278
Coit	072
Craig	037, 047, 072, 240, 271
Curtis Mathes	035, 041, 060
Cybernex	051, 240
Daewoo	017, 020, 045, 087, 278
Daytron	020
Dynatech	000
Electrohome	037
Electrophonic	037
Emerex	032
Emerson	000, 002, 036, 037, 043, 068, 088, 121, 184, 208, 209, 211, 212, 278, 294, 295, 361, 479
Fisher	047, 054
Fuji	033, 035
Furai	000, 325
Garrard	000, 325
GE	035, 060, 202
Go Video	232, 279, 350
GoldStar	037, 038, 471, 480
Gradiente	000, 408
Grundig	195
Harley Davidson	000
Harman/Kardon	038
Harwood	068, 072
Headquarter	046
HI-Q	047
Hitachi	041, 042, 082, 105, 235, 292, 396
Jensen	041
JVC	008, 041, 067, 206, 207, 384
Kenwood	038, 041, 067, 384
KLH	072
Kodak	035, 037
Lloyd	000
Lloyd's	208
Logik	072
LXI	037
Magnavox	035, 039, 081, 103, 110, 149
Magnin	240
Marantz	035, 081
Marta	037
Matsushita	035
MEI	035
Memorex	000, 035, 037, 039, 046, 047, 048, 240, 268, 299
MGA	043

MGN Technology	240
Minolta	042, 105
Mitsubishi	043, 067, 173, 242, 443
Motorola	035, 048
MTC	000, 240
Multitech	000, 072
NEC	038, 040, 041, 050, 067, 082
Nikko	037
Noblex	240
Olympus	035, 226
Optimus	037, 048, 432
Optonica	062
Orion	479
Panasonic	035, 102, 162, 225, 226, 227, 246, 254, 378, 454
Penney	035, 037, 038, 040, 042, 054, 240
Pentax	042, 105
Philco	035
Philips	035, 062, 081, 110, 403
Pilot	037
Pioneer	067
Portland	020
Protec	072
Pulsar	039, 051
Quarter	046
Quartz	046, 155
Quasar	035
Radio Shack	000, 037, 325
Radix	037
Randex	037
RCA	042, 060, 105, 149, 202, 277, 453
Realistic	000, 035, 037, 046, 047, 048, 062, 240
Ricoh	034, 253
Runco	039
Samsung	045, 051, 240
Sanky	039, 048
Sansui	041, 067, 082, 271
Sanyo	046, 047, 240, 268, 372
Scott	043, 045, 121, 184, 210, 211, 212
Sears	035, 037, 042, 046, 047, 054, 057, 105
Sharp	048, 062
Shintom	072
Shogun	051, 240
Singer	072
Sony	022, 032, 033, 034, 035, 253, 275
STS	042

Sunpak	253
Sylvania	000, 035, 043, 081, 103, 110
Symphonic	000, 325
Tatung	041
Teac	000, 041
Technics	035, 162, 246
Teknika	000, 035, 037, 052
TMK	036, 208, 240
Toshiba	043, 045, 057, 210, 212, 366
Totevision	037, 240
Unitech	240
Vector	045
Vector Research	038, 040
Video Concepts	040, 045, 221
Videosonic	240
Wards	000, 035, 042, 047, 048, 062, 072, 149, 212, 240
XR-1000	000, 035, 072
Yamaha	038
Zenith	033, 034, 039

Copyright © 1996 by General Instrument Corporation. No part of the contents of this book may be reproduced or transmitted in any form or by any means without the written permission of the publisher.

Music Choice is a trademark of General Instrument Corporation.

Digital Music Express is a trademark of International Cablecasting Technologies, Inc.

StarSight is a registered trademark of StarSight Telecast, Inc.