

SC240 SC230
FOR CD
(SC 241 Not Shown)



Info-Igine

SANS FRAIS

I-800-962-3986

- SOLE
CONTROL

Une division de Recoton Corp.
2950 Lake Emma Road, Lake Mary, FL 32746
c1996 par Recoton Corp.
Les specifications peuvent
changer sans preavis

SC 2 3 0
SC 2 4 0
SC 2 4 1

CONSERVEZ POUR REFERENCE ULTERIEURE

Part No. 2425-1746

CONTENTS

Important	Note	13
A short introduction to your new remote.		
Key	Diagram	14
Get to know your Sole control's buttons.		
Power	Up!	14
Shows how to install the batteries.		
TV	Set-up	15
Following these steps makes Set-UP simple.		
VCR	Set-up	16
Easy-to-follow programming instructions.		
cable	Set-up	17
Set your Sole Control to eliminate that costly cable remote.		
CD	Set-Up	18
For the SC240 model Only.		
CD	Key Diagram	19
For the SC240 model Only		
Sleep	Timer	20
Your SC240 can turn Off your TV automatically		
Special	Features.	20
Adjust the volume of the TV while using the VCR keys.		
Code	Finder Mode	21
scan the sole Control's code library to find the code you need.		
TROUBLESHOOTING		22
Helpful hints if you need them.		
SMART LITE	Instructions	23
Turn the keypad light off and on.		
Warranty	Information	23

NOTE

Important note for new owners.

Thank you for purchasing a Sole Control remote. Right now, your remote will not work any device. You will need to program the remote once you install the batteries.


To program the remote, you will need to find the three-digit code number for your device and brand in the Code Book (manual #2). There is probably more than one code listed, but one of them should operate your component.

It is important to know that the first code listed isn't necessarily the one that works your component. Try all the manufacturer's codes for the one that best operates your component. Keep entering the codes in the remote following the instructions (found on the next few pages).

The Sole control should work exactly as your original remote did. Enjoy!

If you have any problems please Call a customer service representative at the Sole Control InfoLine toll free at 1-800-962-3986.

Key Diagram

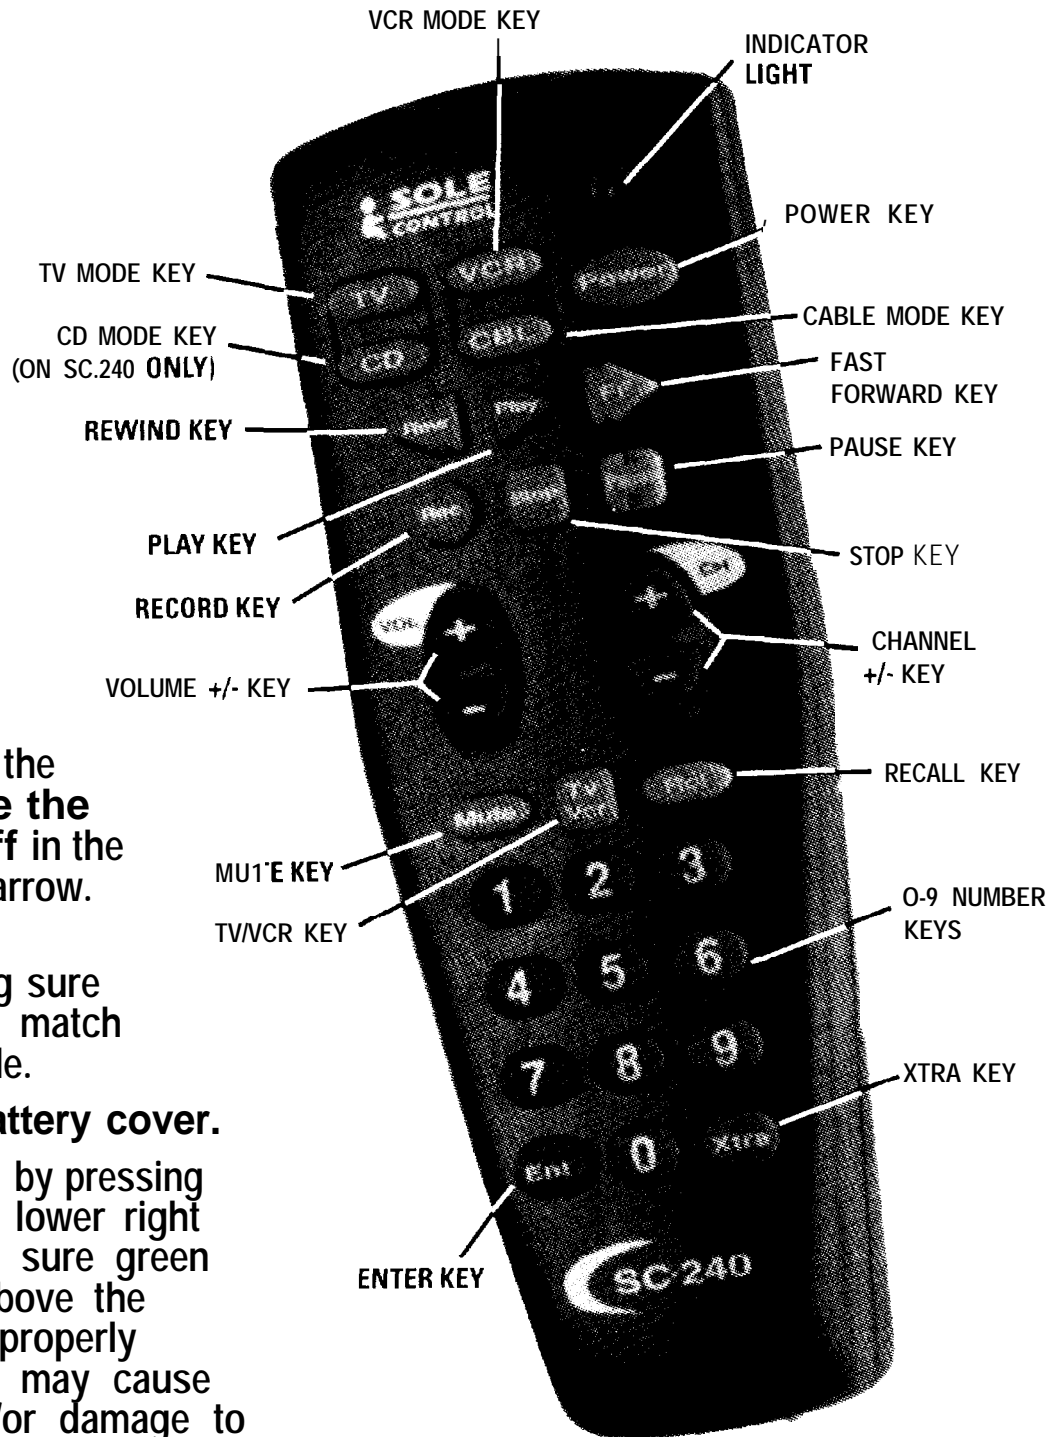

POWER UP!

1. On the back of the Sole Control, slide the battery cover off in the direction of the arrow.
2. Install 2 "AAA" batteries, making sure the + and - marks match the diagram inside.
3. Replace the battery cover.
4. Test batteries by pressing the "Xtra" key (in lower right corner) and make sure green light comes on above the "Power" key. (Improperly installed batteries may cause acid leakage and/or damage to your SC•230, SC•240 or SC•241.)

NOTE: When you replace dead batteries or take them out, you will need to reprogram your Sole Control.


The SC•230 has the capability of operating up to 3 devices: "TV", "VCR", and "CBL". The SC•240 and SC•241 add the ability to operate a fourth device, "CD".




TV set-up:

1. Turn on your TV. In manual #2, find the **3-digit code numbers** for your TV brand.


2. Press **"Xtra"** key. The green light will come on.

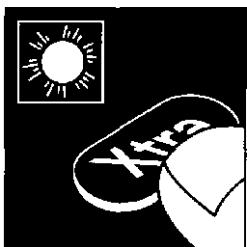


3. Press **"TV"** key. The green light will blink once to indicate that the component has been selected.

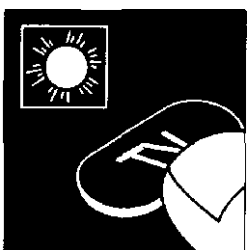

4. Within thirty seconds, **enter in a 3-digit code number**. The green light will flash when each code number is entered correctly. After the last number is entered, the light will blink multiple times to indicate that a valid code has been programmed into the remote, and then remain off.

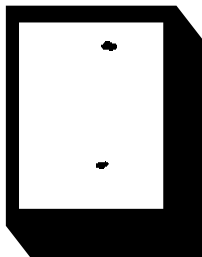

5. **Test code by pressing "Power" key**. If the TV comes on, you've got the right code. If it doesn't, return to step 2 and use the next 3-digit code listed.

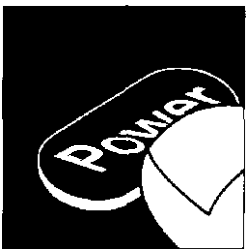


NOTE: If none of the codes turn your TV on, try the code finder mode (page 21).




VCR set-up:


1. Turn on your TV and VCR and insert a tape. In manual #2, find the **3-digit code numbers** for your VCR brand.

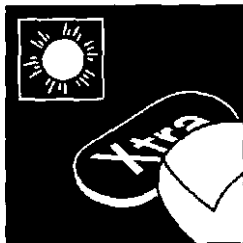


2 Press "**Xtra**" key. The green light will come on.

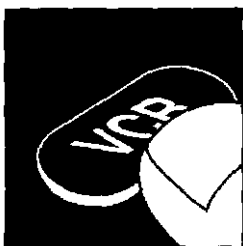

3. Press "**VCR**" key.

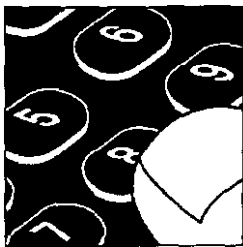

4. Within thirty seconds, **enter in a 3-digit code number**. The green light will flash when code is entered correctly.

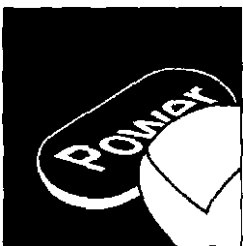

5. **Test code by pressing "Power" key**. If the VCR turns off, you've found the right code. If it doesn't, return to step 2 and use the next 3-digit code listed.


NOTE: If none of the codes turn your VCR on, try the code finder mode (page 21).

If you've programmed your TV code already and want to operate it now, press TV key.




CABLE set-up:

1. Turn on your TV and cable box. In manual #2, find the **3-digit code numbers** for your cable box brand.

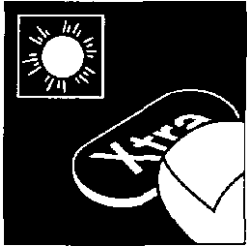


2. Press **"Xtra"** key. The green light will come on.

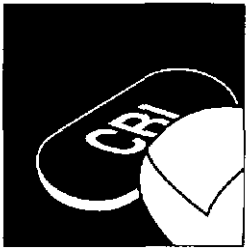

3. Press **"CBL"** key.



4. Within thirty seconds, **enter in a 3-digit code number**. The green light will flash when code is entered correctly.

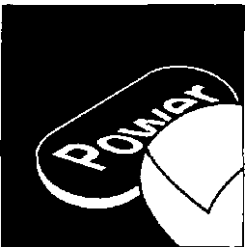

5. **Test code by pressing "Power" key**. If the cable box turns off, you've found the right code. If it doesn't, return to step 2 and use the next 3-digit code listed.

NOTE: If none of the listed codes work your box, try the code finder mode (page 21).


If you've already programmed your TV or VCR and want to operate it now, press "TV" or "VCR".

SC240 & SC241



CD set-up:


1. Turn on your CD player and insert a CD. In manual #2, find the **3-digit** code numbers for your CD player brand.

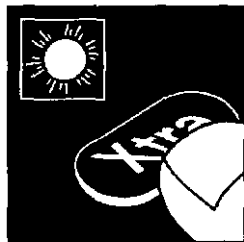


2. Press "**Xtra**" key. The green light will come on.



3. Press "CD" key.

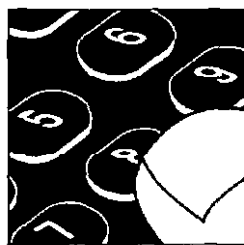

4. Within thirty seconds, enter in a **3-digit code** number. The green light will flash when code is entered correctly.

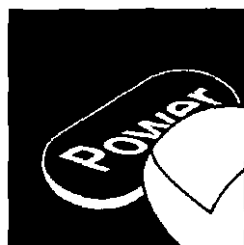


5. Test code by pressing "Power" key. If the CD player turns off, you've found the right code. If it doesn't, return to step 2 and use the next 3-digit code listed.

NOTE: If none of the listed codes work your CD player, try the code finder mode (page 21).

If you've *already* programmed your TV, cable, or VCR and want to **Operate** it now, press "TV", "CBL", or "VCR".

DIAGRAM INDICATES
KEY FUNCTIONS AS
THEY RELATE TO
CD PLAYER KEYS.

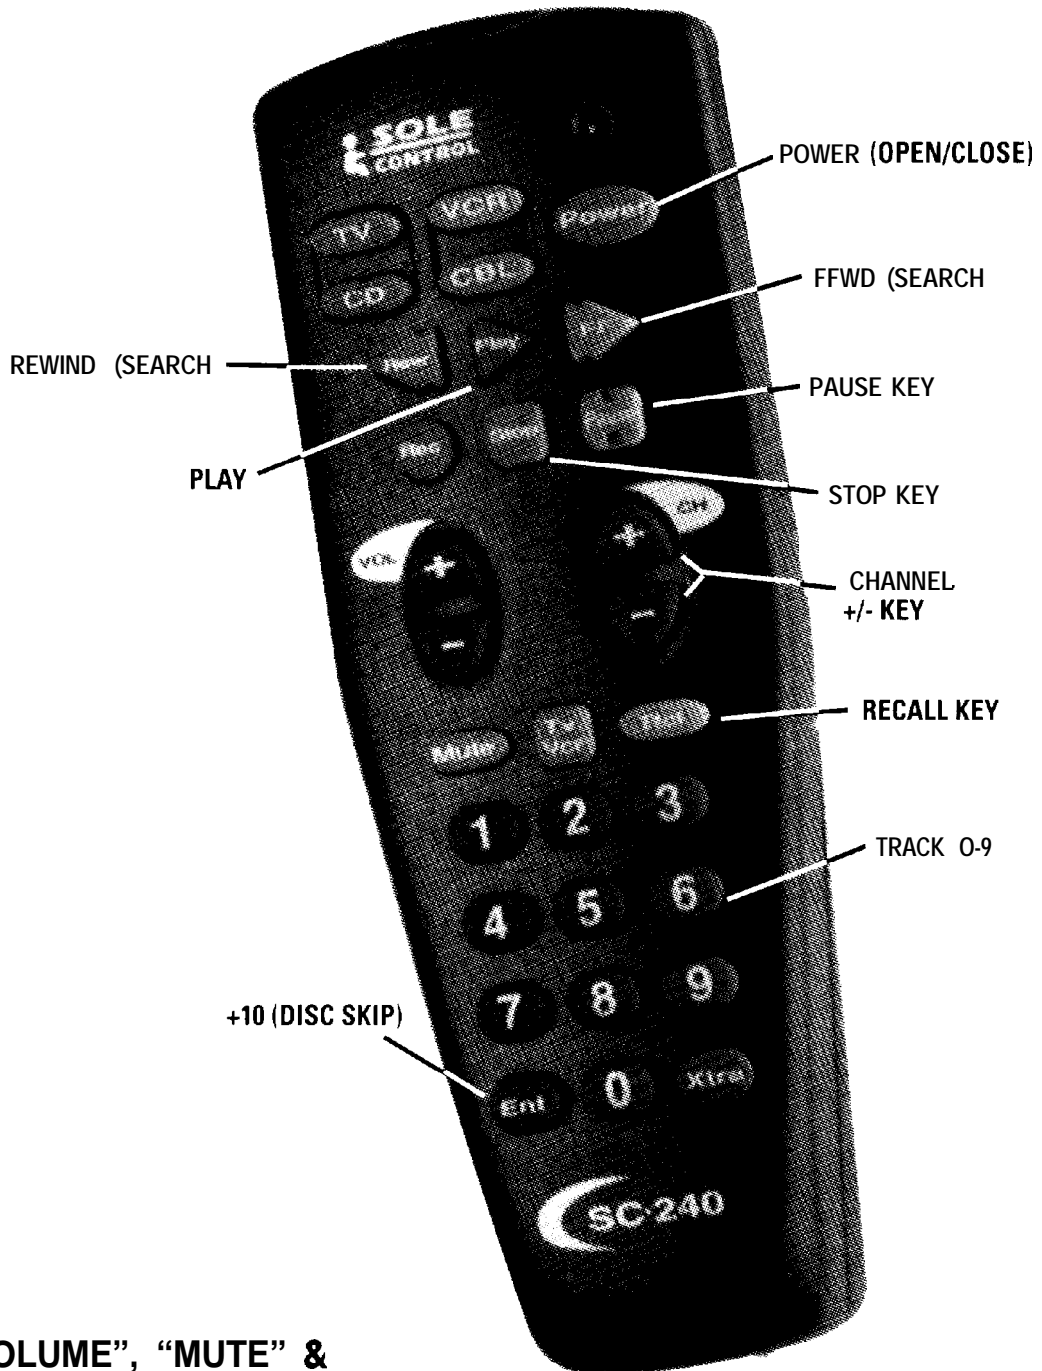

NOTE: "VOLUME", "MUTE" & "RECORD" will not operate in the CD mode.

**SLEEP/TIMER FUNCTION
(SC.240 & SC•241)**

Your SC•240 or SC•241 is equipped and programmed with a SLEEP/TIMER function, separate from your TV or for a TV not equipped with SLEEP/TIMER.



1. Press "Xtra".



2. Press "TV" key.



3. Press "Power".



4. Press numerical keys 01-99 for the desired amount of minutes.

(Example: 01=1 minute; 99=99 minutes) When the

programmed number of minutes has elapsed, the SC•240 or SC•241 will turn off your TV.

NOTE: The SC•240 and SC•241 can be used to control all functions and devices while in SLEEP/TIMER mode. To cancel SLEEP/TIMER mode, repeat steps 1-3. Enter the number 00 with the numerical keys to cancel the SLEEP/TIMER mode.


** You must have Your SC*240 or SC•241 pointed at Your TV for the SLEEP/TIMER mode to work properly.

SPECIAL FEATURES


While in one mode, the SC•230, SC•240, and SC.241 allow you to use some features of your components. The following chart lists which functions crossover to other components.

CURRENT MODE	OTHER MODE	CROSSOVER FUNCTIONS
VCR	TV	Volume Up/Down, Mute
TV	VCR	Play, Pause, Fast Forward, Rewind, Record
CBL	TV	Volume Up/Down, Mute
CBL	VCR	Play, Pause, Fast Forward, Rewind, Record


1. Turn on **component** (TV, VCR, cable box, or CD player)

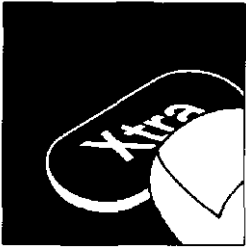


2. Press **"Xtra"**. (the green light will come on).

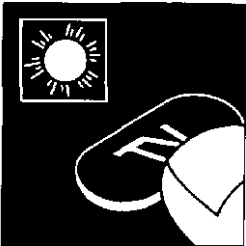

3. Press **component key** ("TV", "VCR", "CBL" or "CD"). The green light blinks and stays on).

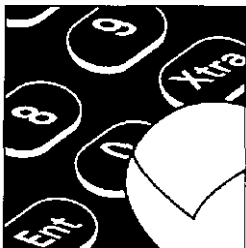

4. Press **"0"."0"."0"** within eight seconds (the green light will stay on).

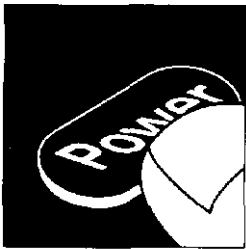

5. Press **"Power"** key until your component turns off, waiting two seconds between each time you press **"Power"**.**




6. As soon as the **Sole Control** turns your component off, press **"Xtra"**.

**For CD mode, press "Play" until CD plays.


STORED CODE IDENTIFICATION

Forget your Codes?


If you didn't write down the code numbers when you programmed your remote and you haven't removed the batteries, your Sole Control can tell you what your codes are. Just follow these instructions.

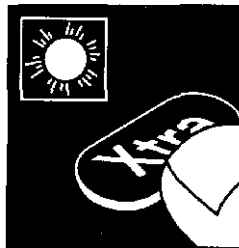

1. Press the **"Xtra"** key (the green light will come on).

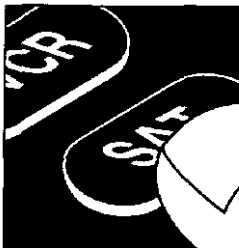

2. Press the **component key** for which you would like to know the code programmed.

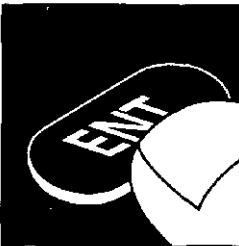

3. Press the **"Ent"** key.

4. **Count the number of blinks.** There will be three sets of blinks, separated by a two second pause. Make sure you write the code number below for future use!

T V - - - - _ VCR _ - _ - _
 CBL _ - _ - _ CD _ - _ - _

NOTE: 10 blinks=0, 1 blink=1
 Example: 3 blinks-pause-
 1 blink-pause-10 blinks=310

Problem:

- No power in remote (no light).
- The green light didn't flash after the code was entered.
- Code enters into remote, but the component doesn't respond.
- None of the codes work the component.

Solution:

Check battery installation and battery freshness. Press "Xtra" to see if green light comes on.

Enter the code within thirty seconds after you press "Xtra". Try the code again.

Try the next code on the list. One of the codes should work your component.

After trying all the codes, turn to page 21 and try the **CODE FINDER MODE**.

HELPFUL HINTS

- Enter only one three-digit code at a time.
- The first code listed isn't always the one for your component. Try them all. Some codes work better than others.
- If none of the codes on the list work, try the **CODE FINDER MODE**, page 21.
- Enter the code within thirty seconds after pressing "Xtra".
- The most often used code for each brand is listed first.
- Reprogram the remote if the batteries are changed or taken out.
- If you have any problems or questions, call the **InfoLine** at **1-800-962-3986**.

SC•241 LITE INSTRUCTIONS

To turn OFF the light on your SMART LITE SC•241 remote control:

- 1. Press the "Xtra" button.**
- 2. Press the "Power" button.**

To turn ON the light on your SMART LITE SC•241 remote control:

Follow instructions 1 & 2.

NOTE: The SC•241 will turn OFF during CODE FINDER MODE and SLEEP/TIMER MODE to save battery power. Constant use of light in the SC•241 may reduce the life of the batteries.

30 DAY SATISFACTION GUARANTEE

Recoton Corporation (the Company) warrants to the original retail purchaser of this product, that should you be dissatisfied with this Wireless product for any reason during the first thirty days, we will refund your money. **Call 1-800-RECOTON to obtain information regarding the procedure for receiving a refund.**

ONE YEAR LIMITED WARRANTY

Recoton Corporation (the Company) warrants to the original retail purchaser of this product that should the product or any part thereof be proven defective in material or workmanship within One Year from the date of original purchase, such defects will be replaced without charge for parts or labor. This warranty does not apply to any incidental or consequential damages.

To obtain replacement within the terms of this warranty, the product should be delivered, transportation prepaid, to the Dealer where purchased or to the Company, along with proof of date of purchase. **Call 1-800-RECOTON to obtain information regarding the procedure for proper return of your product, if your Dealer does not honor the warranty.**

THIS WARRANTY DOES NOT APPLY TO ANY PRODUCT OR PART THEREOF WHICH HAS BEEN DAMAGED THROUGH ALTERATION, MISHANDLING, MISUSE, NEGLIGENCE OR ACCIDENT. THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, AND NO PERSONS OR REPRESENTATIVE IS AUTHORIZED TO ASSUME FOR THE COMPANY ANY OTHER LIABILITY IN CONNECTION WITH THE SALE OF THIS PRODUCT. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGE SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

NON-WARRANTY SERVICE

If non-warranty service is required, the product may be sent to the Company for repair/replacement, transportation prepaid, by calling **1-800-RECOTON** for details, complete instructions, and service fee charges.

TV CODES

A-MARK					
448					
Admiral					
403	417	419	424	478	
Aiko					
404					
Akai					
401	415	463	502		
Amstrad					
465					
Anam					
418	421				
Anam National					
487					
AOC					
401	404	411	433	448	467
494					
Audinac					
521					
Audio					
449					
Audiovox					
421					
Baycraft					
417	467	492	493		
Bell & Howell					
405	419	424	478	482	
Rlaupunkt					
525	526	529			
Broksonic					
401	417	418	465	466	473
506					
candle					
401	402	404	418	420	448
449	450	462	466	467	473
477	479	481	491	492	504
Canon					
401					
Carver					
473					
CCE					
473					

TV CODES

Cetronic					
421					
Citizen					
401	402	404	420	449	466
classic					
401	502				
Colortyme					
403	415	425	427	456	462
472	478	482			
Concherto					
401	473				
Contec					
421					
Contec Cony					
418	421	458			
Craig					
418	421	454	462	466	488
492					
Crosley					
405	482				
Crown					
448	473	492			
Curtis					
401	495				
Curtis Mathes					
401	403	405	415	426	433
448	450	462	467	472	481
482					
cxc					
418	421				
Daewoo					
401	404	420	433	448	449
450	467	487	495	507	
Daytron					
404	448	454	467	495	
Drean					
473					
Electra					
401					
Electrohome					
401	407	415	445	448	453
463	467	497			

TV CODES**Emerson**

401	407	408	409	414	415
416	417	418	419	421	448
454	458	465	467	468	481
484	488	491	492	505	510
511	512				

Encore

453

Envision

401 433 472

Fisher

423	434	435	442	457	459
460	475	483	502	503	

Fortress

415

Funai

418 421 453 491

Futuretech

418 421

Garrard

515

GE

401	402	403	406	415	418
426	436	438	444	467	487
496	504	506			

Goldstar

401	415	433	448	450	467
472	478	479	494		

Gradiente

519 523

Granada

415 448 453 456 485

Crundig

402	448	468	489	525	527
528	530				

Hallmark

401

Harmon

401

Hitachi

401	402	403	404	413	414
419	445	448	452	453	455
467	485	486	493	524	

TV CODES**Infinity**

415 456 473

JBL

415 456 473

JC Penney

401	402	403	411	415	433
436	448	457	462	472	504
506					

Jensen

416

JVC

402 420 446 449 476 523

Kawasho

412 433 458 502

Kenwood

401 415 433 444

Kloss

487

KMC

448

KTV

412	418	421	441	443	448
458	467				

Lloyd's

415 445 494

Logik

424

Luxman

401

LXI-See also Sears, Sanyo, & Fisher

401 403 405 435 473 515

Magnasonic

401 415 419 491

Magnavox

401	402	405	407	445	419
420	433	449	454	456	467
468	473	477	482	491	492

Marantz

401	405	415	433	444	456
467	468	472	473	482	

Matsushita

430

TV CODES

Megatron-See also Hitachi					
493					
Memorex					
401	415	423	424	445	472
497	514				
Metz					
525					
MCA					
401	415	424	463	497	
Minerva					
525	527	528			
Mitsubishi					
401	402	410	415	430	433
445	448	455	456	461	463
467	480	497			
MTC					
401	404	423	427	433	458
462	473				
Multivision					
509					
NAD					
415	435				
NEC					
401	415	433	444	467	468
Nikko-See Daewoo, Goldstar					
404					
Nishi					
462					
Noblex					
522					
Nobliko					
528					
Nyon					
401	506				
Onwa					
418	421				
Optimus					
501					
Orion					
417					
Panasonic					
402	404	406	415	421	432
436	468	473	487	488	489
507	515				

TV CODES

Penney					
401					
Philco					
401	404	405	407	415	419
420	433	449	454	456	467
468	473	482	491	492	493
507					
Philips					
405	410	420	449	456	473
482	502				
Pioneer					
415	444	467	468	487	501
Portland					
401	433	448	450	467	495
Prima					
450					
Prism					
46%					
Proscan					
403	426				
Proton					
401	403	415	427	440	448
452	466	467	472	492	
Pulsar					
401	404	415	427	465	467
472	494				
Quasar					
402	406	415	454	468	486
487	489	507			
Quelle					
525	527	528	530		
Radio shack					
403	405	415	418	421	425
429	442	445	447	448	487
Ranser					
479					
RCA					
403	411	426	436	448	487
506					
Remocon					
450					
Runco					
402					

TV CODES

Saisho
465

Sampo
401 402 433 467 487

Samsung
401 419 433 446 448 451
462 467 481 504 513 514

Sansei
404

Sansui
425

Sanyo
423 431 434 442 457 459
460 475 483 503 520

Scott
417 418 421 448 467 484
491

Sears
401 403 405 418 423 426
431 434 435 442 448 453
457 459 460 471 473 475
482 483 485 503 506

Semp
435

serie **Dorada**
401 435 479

sharp
415 419 422 425 429 437
445 448 452 477 494 499

slam
473

Siemens
525

Signature
424 460

Silver
401 415

Simpson
401 415

Sony
448 464 497 502 516

Sony Unified
502

TV CODES

soundesign
401 407 414 416 418 421
467 492

sss
415 418 421 433

supra
401

Sylvania
401 404 405 407 415 420
433 449 454 456 467 468
471 473 477 482 491 492

Symphonic
421 491 515

Talent
482

Tandy
405

Tatung
466 487

Technics
402 406 468 489

Techwood
401 415 482

Teknika
401 404 415 418 421 424
433 444 448 467 492 494

Telefunken
415

TMK
401 415

Toshiba
415 435 457 460 461 462
472

Totevision
403

ultra
404

Vector
401

victor
449

video
418 430

TV CODES

vidikron
 482
 vldtech
 401 433
Viewmax
 450
 wards
 401 403 415 419 420 424
 425 429 433 436 438 449
 462 467 472 473 482 491
 492
 White
 473
XR 1000
 424 515
 Yamaha
 401 415 433 468
 zenith
 404 424 478

VCR CODES

Admiral
 652
Aiwa
 662 623 676
Alba
 632
 Amstrad
 662
ASA
 609 673
Beaumarck
 615
Bell & Howell
 663
Blaupunkt
 663 672
 Broksonic
 609 626 630 642 661
 Bush
 675
 Candle-See also Citizen
 609 612 615 621 631 632
 635 647 651 662 673 674

VCR CODES

Canon
 651
Capehart
 632
 Carver
 609
 CCE
 635 675
 Citizen
 612 615 621 647 651 662
 colortyme
 610 651
 Craig
 616 673 675 682
 Curtis Mathes
 610 612 615 621 631 647
 648 651 658 662
 Daewoo
 612 621 632 635
Daytron
 632 635
Decca
 609
DeGraaf
 665
Denon
 646
Dumont
 609
 Dynatech
 612 621 662
Electrohome
 609 649 653 656 659 673
Emerson
 608 609 610 612 617 621
 625 626 627 630 631 642
 647 649 659 660 661 662
 663 669 673 678 679 680
 681
 Finlandia
 609
Finlux
 609 662 665

VCR CODES

Fisher
612 616 621 622 646 663
677

Funai—See also Goldstar
615 662

Garrad
662

GE
610 615 624 647 651 673

Genexxa
662

Go Video
609 674

Goldstar
615 654 662 673 674

Goodmans
675

Gradiente
610 618 633 655 662 673
687

Granada
609 649 659 663

Grundig
690 691 692 693 694

Hinari
675

Hitachi
612 624 640 646 647 662
665 684

Homeline
673

Interfunk
609

ITT-Nokia
671

JBL
612

JC Penney
615 646 651 673

JCL
651

Jensen
657

VCR CODES

JVC
607 608 618 633 646 647
651 657 663 671 685 686

Kenwood
646 648 657 663

Kirey
635

Lloyd's
615 616 648 662

Loewe Opta
609

Logik
675

Logik
675

LXI—See also Sears, Sanyo, & Fisher
662 673

Magnasonic—See also Daewoo & Goldstar
635 673

Magnavox
609 612 624 644 647 651
661 662 669 675

Magnin
615

Marantz
609 648 651 674

Marta
673

Matsui
631 660 662

Matsushita—See also Panasonic
651

MEI
612 651

Memorex
611 615 616 646 651 654
662 663 673

MGA—See Mitsubishi
649

MCN—See Magin
615

Midland
615

VCR CODES

Minolta					
646	665				
Mitsubishi					
609	643	649	653	656	659
666	673				
MTC					
662	675	682			
Multitech					
662	675				
NAD					
614					
NEC					
608	612	620	648	651	657
658	662	671	674		
Noblex					
682					
Nokia					
671					
Optimus —See also Realistic					
615	673				
Orion					
631	660				
Osaki					
673					
Panasonic					
610	612	621	651	669	670
675					
Penney					
651	665				
Pentax					
646	648	665			
Perdio					
662					
Philco					
609	630	635	644	646	651
660	662	668	684		
Philips					
609	612	621	644	651	
Phonola					
609					
Pilot					
673					
Pioneer					
614	637	644	614		

VCR CODES

Portland					
632					
Pro Max					
615					
Proscan —See also RCA					
610	655	673			
Proton					
675					
Pulsar					
628	635	651	662		
Pye					
609					
Quartz					
663					
Quasar					
610	651				
Radio Shack —See Realistic					
673					
RCA					
607	610	614	615	624	634
646	647	651	655	665	670
673					
Realistic					
611	615	616	651	652	659
662	663	673	677		
Rex					
671					
Saisho					
631	660				
salora					
663					
Samsung					
615	647	662	670	682	
Sansui					
626	671	675			
Sanyo					
611	616	622	639	646	663
673	677				
SBR					
609					
Schaub Lorenz					
671					
Schneider					
675					

VCR CODES

Scott
 612 621 630 660 669 673

Sears
 611 612 616 621 622 639
 643 646 648 651 657 662
 663 665 673 676 677

Sentra
 632

Sharp
 634 652 658 659 683

Shintom
 675

signature
 611 652

Singer
 675

Sony
 612 613 623 628 638 640
 657 674 687 688 689

STS
 665

Sylvania
 609 644 651 662 669

Symphonic
 615 616 662

Tandy
 662

Tashiko
 662

Tatung
 657

Teac
 662

Technics-See also Quasar
 651

Teknika
 634 651 662 673

Thomas
 662

TMK
 631

Toshiba
 612 613 616 621 622 635
 641 645 649

VCR CODES

Totevision
 651 673 682

Ultra
 632

Unitech
 615 670 682

vector
 648

video
 643 648

Videosonic
 682

wards
 609 612 615 616 621 647
 651 652 659 662 665 673
 675

XR 1000
 662 675

Yamaha
 648 657

Zenith
 647 654 673 676

CABLE CODES

ABC
 209 212 213 215 216 225
 232 250 254

AIM
 241

Antronix
 226

Archer
 226 235 254

Belcor
 235

cable vision
 260

Cableview
 219

Century
 254

Citizen
 226 241 248 254

CABLE CODES

Comtronics
248

Contec
205 209 212 214 218 221
232 249

Diamond
218

Eagle
250 248

Eastern
260

CC Electronics
226 231 248 254

Gemini
211 219 239 241

General -see also Jerrold,
& Starcom
216 225 229 241 249

Hamlin
217 218

Hitachi
225

Jasco
226

Jerrold
216 223 225 227 229 233
241 249 250

Magnavox
225

Memorex
220 243 250 254

Micro Com
246

Monarch
248

Movie Time
213 248 253 254

Northcoast
206

NSC
212 213 253 254

Oak-Oak sigma
209 212 218 230 247

CABLE CODES

Panasonic
205 207 214 220

Paragon
220 250 254

Philips
222 228 234 242 250 254
255

Pioneer
207 215

Proscan-See also RCA
236

Pulsar
226 248

Radio Shack
226 235 254

RCA
236

Realistic
226

Recoton
238

Regal
218

Rembrandt
212

Samsung
215 248

scientific Atlanta
212 221 232 237

signal
248

Signature
225

SL Marx
248

Sprucer
206 214

Starcom
216 222 225 227 229 240
241 243

Stargate
241 248

STS
213

CABLE CODES

Sylvania
244
Tandy
258
Telecaption
245 259
TeleView
248
Texscan
244 256
Tocom
212 213 214 253
U.S. Electronics
216 225 232
Unika
226 254
United Cable
216
Universal
226 231 235 238 240 254
Viewstar
212 250 257 258
wards
225
Warner-See also Samsung, & Scientific
Atlanta
215
zenith
206 220

CD CODES

CCE
937 938 940 941 943
Craig
949
crown
804
DBX
848
Denon
808 950 957
Emerson
951 954
Enlightened Audio
913
Fisher
886 887 899 909
Garrard
855
Cradiante
934 935 936
Harmon Kardon
883 892 903
Hitachi
824 866
JVC
809 814 825 826 841 858
919 961
Kenwood
832 833 838 916
Koss
958
Kyocera
802
Lloyd's
890
Luxman
807 910 922 923 924 929
Magnavox
808 814 821 856 871
Marantz
814 847 856 885 908
McIntosh
840

CD CODES

Acurus
944
Adcom
928
Aiwa
820 831 913 931 946 953
Akai
801 846 892 959
BSR
853 882
Carver
856 878 909

CD CODES

Mission					
821					
Mitsubishi					
813	892	902	960		
NAD					
805	854	884	912		
Nakamichi					
851	906	947			
NSM					
814	897				
Onkyo					
813	836	845	857	861	867
870	956				
Optimus					
827	831	850	859	903	905
917					
Panasonic					
823	834	877	895	921	952
Parasound					
861					
Philco					
937	942				
Philips					
814	829	839	856	885	
Pioneer					
813	819	823	884	891	a93
913	914	917	918		
Proscan					
875	899				
Quasar					
877					
Radio Shack					
810	817	827	872	873	
RCA					
862	875	899			
Realistic					
849	860	861			
Rotel					
814	835	856	861	880	
Samsung					
898					
Sansui					
821	839	885	888	910	920

CD CODES

Sanyo					
909					
Sears					
816					
Sharp					
800	823				
Sherwood					
810	817	852	872	873	945
Shure					
881					
Sony					
820	822	843	844	886	891
896	901	930	939	955	
Sylvania					
814	918				
Teac					
803	835	854	861	874	876
905	914				
Technics					
803	823	834	877	895	962
Toshiba					
806	818	884			
Yamaha					
830	879	880	889	894	907
926					