


SLV-360/390/390PX/660HF/690HF/L2MX/L2PA/L2PL/L4CS/ L4MX/L4PA/L4PL/L6HFCS/L6HFMX/L6HFPA/L6HFPL RMT-V181/V181A/V182A/V182B/V182D

SERVICE MANUAL

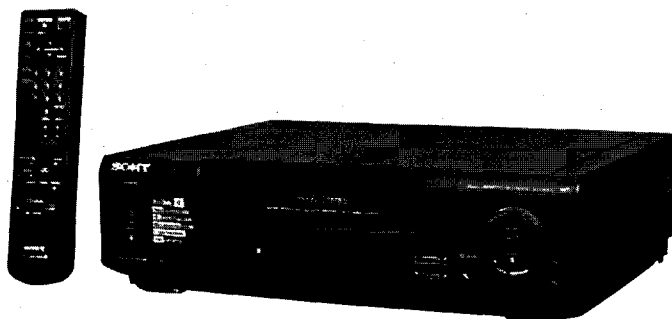

VHS

- Refer to the **SERVICE MANUAL** of **VHS MECHANICAL ADJUSTMENTS IV** for **MECHANICAL ADJUSTMENTS**. (9-973-623-11)

US Model

SLV-360/390/660HF/690HF

Canadian Model

SLV-360/660HF/690HF

MEXICAN Model

SLV-L2MX/L4MX/L6HFMX

PANAMANIAN Model

SLV-L2PA/L4PA/L6HFPA

PHILIPPINE Model

SLV-L2PL/L4PL/L6HFPL

CHILEAN Model

SLV-L4CS/L6HFCS

PX Model

SLV-390PX

H MECHANISM

SPECIFICATIONS

System

Format

VHS NTSC standard

Video recording system

Rotary head helical scanning FM system

Video heads

Double azimuth four heads

Video signal

NTSC color, EIA standards

Tape speed

SP: 33.35 mm/s (1 3/8 inches/s)

EP: 11.11 mm/s (7/16 inches/s)

LP: 16.67 mm/s (1 1/16 inches/s),
playback only

Maximum recording/playback time

8 hrs. in EP mode (with T-160 tape)

Fast-forward and rewind time

Approx. 3 min. (with T-120 tape)

Tuner section

Channel coverage

VHF 2 to 13

UHF 14 to 69

CATV A-8 to A-1, A to W, W+1 to W+84

Antenna

75-ohm antenna terminal for VHF/UHF

Inputs and outputs

LINE IN

VIDEO IN, phono jack (1)

Input signal: 1 Vp-p, 75 ohms, unbalanced,
sync negative

AUDIO IN, phono jack (2)

Input level: 327 mVrms

Input impedance: more than 47 kilohms

LINE OUT

VIDEO OUT, phono jack (1)

Output signal: 1 Vp-p, 75 ohms, unbalanced,
sync negative

AUDIO OUT, phono jack (2)

Standard output: 327 mVrms

Load impedance: 47 kilohms

Output impedance: less than 10 kilohms

Timer section

Clock

Quartz locked

Timer indication

12-hour cycle

Timer setting

8 programs per month (max.)

Power back-up

Built-in self-charging capacitor

Back-up duration: up to 3 hours at a time

US, Canadian, PX models up to 1 hour at a time

Except us, Canadian, PX models

General

Power requirements

See next page.

Power consumption

See next page.

Operating temperature

5°C to 40°C (41°F to 104°F)

Storage temperature

-20°C to 60°C (-4°F to 140°F)

Dimensions

Approx. 355 × 102 × 278 mm (w/h/d)

(Approx. 14 × 4 1/8 × 11 inches) including
projecting parts and controls

Mass

Approx. 4.0 kg (8 lb 13 oz)

Supplied accessories

Remote commander (1)

Size AA (R6) batteries (2)

75-ohm coaxial cable with F-type connectors (1)

AC power cord (1)

Audio/video cable (3 phono to 3 phono) (1)

Plug adaptor (1) (SLV-660HF PX/L6HF CS/
L6HF PL)



MICROFILM

VIDEO CASSETTE RECORDER

SONY®

• DIFFERENT SPECIFICATIONS LIST

MODEL	SLV-360	SLV-390	SLV-390PX	SLV-660HF	SLV-690HF
SPECIFICATION					
VIDEO/AUDIO HEADS	4 HEADS	4 HEADS	4 HEADS	6 HEADS	6 HEADS
AUDIO SYSTEM	MONAURAL	MONAURAL	MONAURAL	HIFI-STEREO	HIFI-STEREO
TUNER AUDIO (STEREO) SYSTEM	—	—	—	SAP	SAP
VCR + SYSTEM	—	BUILT-IN	BUILT-IN	—	BUILT-IN
POWER REQUIREMENTS	120V AC 60Hz	120V AC 60Hz	110-240V AC 50/60Hz	120V AC 60Hz	120V AC 60Hz
POWER CONSUMPTION	24W	24W	24W	26W	26W
REMOTE COMMANDER	RMT-V181	RMT-V182D	RMT-V182D	RMT-V182B	RMT-V182A

Abbreviations

CS : Chilean model
 MX : Mexican model
 PA : Panamanian model
 PL : Philippine model

MODEL	SLV-L2MX	SLV-L2PA	SLV-L2PL	SLV-L4MX	SLV-L4PA	SLV-L4CS	SLV-L4PL	SLV-L6HFMX	SLV-L6HFPA	SLV-L6HFCS	SLV-L6HFPL
SPECIFICATION											
VIDEO/AUDIO HEADS	2 HEADS			4 HEADS				6 HEADS			
AUDIO SYSTEM	MONAURAL			MONAURAL				HIFI-STEREO			
TUNER AUDIO (STEREO) SYSTEM	—			—				SAP			
VCR + SYSTEM	—			—				—			
POWER REQUIREMENTS	120V AC 60Hz		110-240V AC 50/60Hz	120V AC 60Hz		110-240V AC 50/60Hz		120V AC 60Hz		110-240V AC 50/60Hz	
POWER CONSUMPTION	18W			18W				20W			
REMOTE COMMANDER	RMT-V181			RMT-V181				RMT-V181A			

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK Δ OR DOTTED LINE WITH MARK Δ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE Δ SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set the customer:

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
4. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
5. Check the line cord for cracks and abrasion. Recommend the replacement of any such line cord to the customer.
6. Check the B+ voltage to see it is at the values specified.
7. Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA TW-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75V, so analog meters must have an accurate low voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig. A)

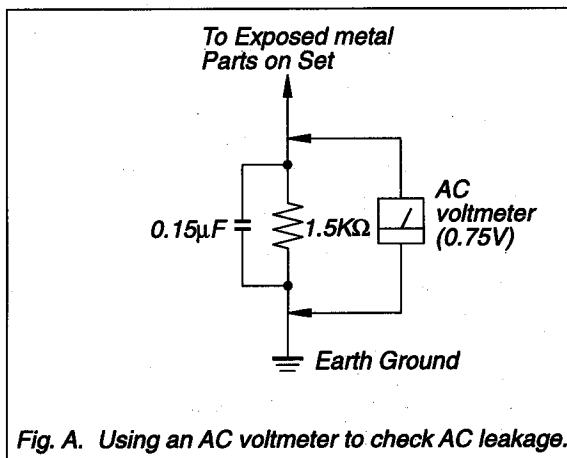


Fig. A. Using an AC voltmeter to check AC leakage.

TABLE OF CONTENTS

SERVICE NOTE

1.	HOW TO RETURN THE PINCH ROLLER, GUIDE ROLLER AND ELEVATOR CAM TO STOP MODE	6
2.	HOW TO RETURN A TAPE INTO CASSETTE HALF	6
3.	HOW TO REMOVE A CASSETTE FROM A MACHINE IF A CASSETTE IS LEFT IN A MACHINE IN TROUBLE	6
4.	HOW TO REMOVE DRUM ASSEMBLY	6
5.	HOW TO REPLACE A ROTARY UPPER DRUM.....	7
5-1.	HOW TO REMOVE A ROTARY UPPER DRUM ...	7
5-2.	HOW TO ATTACH NEW ROTARY UPPER DRUM.....	7

1. GENERAL

Getting Started	
Unpacking	1-1
Setting up the remote commander	1-1
Hookups	1-2
Setting the clock	1-7
Selecting a language	1-7
Presetting channels	1-8
Playing a tape	1-10
Recording TV programs	1-11
Playing/searching at various speeds	1-12
Checking/changing/cancelling timer setting	1-13
Recording stereo and bilingual programs	1-13
Adjusting the picture	1-14
Recording TV programs using the timer	1-14
Changing menu options	1-16
Editing with another VCR	1-16
Additional Information	
Index to parts and controls	1-18

2. DISASSEMBLY

2-1.	REMOVAL OF FRONT PANEL ASSY	2-1
2-2.	REMOVAL OF POWER BLOCK	2-1
2-3.	REMOVAL OF RP-195 BOARD and MA-248 BOARD	2-2
2-4.	REMOVAL OF MECHANISM	2-3
2-5.	CIRCUIT BOARDS LOCATION	2-3
2-6.	INTERNAL VIEWS.....	2-4

3. BLOCK DIAGRAM

3-1.	OVERALL BLOCK DIAGRAM.....	3-1
3-2.	VIDEO BLOCK DIAGRAM	3-4
3-3.	SERVO/SYSTEM CONTROL BLOCK DIAGRAM	3-7
3-4.	AUDIO BLOCK DIAGRAM	3-9
3-5.	TUNER BLOCK DIAGRAM	3-11
3-6.	POWER BLOCK DIAGRAM	3-13

4. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

4-1.	FRAME SCHEMATIC DIAGRAM	4-1
4-2.	PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS	4-3
	MA-248 (MAIN), RP-195 (HEAD AMP), DM-45 (TRANSLATION) PRINTED WIRING BOARDS	4-4

RP-195 (HEAD AMP) SCHEMATIC DIAGRAM ...	4-7
MA-248 (VIDEO) SCHEMATIC DIAGRAM	4-10
MA-248 (SERVO, SYSTEM CONTROL), SW-268 (SWITCH), DM-45 (TRANSLATION) SCHEMATIC DIAGRAMS	4-13
MA-248 (AUDIO) SCHEMATIC DIAGRAM	4-16
MA-248 (TUNER) SCHEMATIC DIAGRAM	4-19
MA-248 (DC POWER) SCHEMATIC DIAGRAM	4-21
POWER BLOCK (SR700) PRINTED WIRING BOARD AND SCHEMATIC DIAGRAM	4-23
POWER BLOCK (HS721SF) PRINTED WIRING BOARD AND SCHEMATIC DIAGRAM	4-25

5. REPAIR PARTS LIST

5-1.	EXPLODED VIEWS	5-1
5-1-1.	FRONT PANEL ASSY.....	5-1
5-1-2.	MAIN CHASSIS ASSEMBLY	5-2
5-1-3.	VHS MECHANISM DECK ASSEMBLY-1	5-3
5-1-4.	VHS MECHANISM DECK ASSEMBLY-2	5-4
5-1-5.	VHS MECHANISM DECK ASSEMBLY-3	5-5
5-1-6.	VHS MECHANISM DECK ASSEMBLY-4	5-6
5-2.	ELECTRICAL PARTS LIST	5-7

6. INTERFACE, IC PIN FUNCTION DESCRIPTION

6-1.	SYSTEM CONTROL — MECHANISM BLOCK INTERFACE (MA-248 board IC501)	6-1
6-2.	SYSTEM CONTROL — SERVO PERIPHERAL CIRCUIT INTERFACE (MA-248 board IC501).....	6-1
6-3.	SYSTEM CONTROL — SYSTEM CONTROL PERIPHERAL CIRCUIT INTERFACE (MA-248 board IC501)	6-2
6-4.	SYSTEM CONTROL AND RF MODULATOR — INPUT SELECTION BLOCK INTERFACE (MA-248 board IC501)	6-2
6-5.	SYSTEM CONTROL — VIDEO BLOCK INTERFACE (MA-248 board IC501)	6-2
6-6.	SYSTEM CONTROL — AUDIO BLOCK INTERFACE (MA-248 board IC501)	6-2
6-7.	SERVO/SYSTEM CONTROL MICROPROCESSOR M37775M5H311GP (MA-248 board IC501)	6-3

7. ADJUSTMENTS

7-1.	MECHANICAL ADJUSTMENTS	7-1
7-2.	ELECTRICAL ADJUSTMENTS.....	7-1
2-1.	PREPARATION BEFORE ADJUSTMENT	7-1
2-1-1.	Equipment Required.....	7-1
2-1-2.	Equipment Connection.....	7-1
2-1-3.	Input Signal Check	7-1
2-1-4.	Alignment Tape	7-1
2-1-5.	Input/Output Levels and Impedance	7-2
2-1-6.	Adjustment Sequence	7-2
2-2.	POWER SUPPLY CHECK	7-2
2-3.	SERVO SYSTEM CHECK	7-3
2-3-1.	RF Switching Position Check (MA-248, RP-195 Boards)	7-3
2-4.	VIDEO SYSTEM CHECKS	7-3
2-4-1.	X'tal OSC Check (RV-40 Board)	7-3

2-4-2.	SYNC AGC Check (MA-248 Board)	7-4
2-4-3.	White Clip/Dark Clip Check (MA-248 Board)	7-4
2-4-4.	Recording Y Level Check (MA-248 Board)	7-4
2-4-5.	Recording Chroma Level Check (MA-248 Board)	7-4
2-4-6.	Playback Level Check (MA-248 Board)	7-5
2-5.	AUDIO SYSTEM ADJUSTMENT	7-5
2-5-1.	VCO Fo Adjustment (MA-248 Board)	7-5
2-5-2.	Band Pass Filter Fo Adjustment (MA-248 Board)	7-6
2-5-3.	AF Switch Position Check (MA-248, RP-195 BoardS)	7-6
2-5-4.	ACE Head Adjustment	7-7
2-5-5.	E-E Output Level Check	7-7
2-5-6.	Overall Output Level and Distortion Factor Check	7-7
2-5-7.	Overall Noise Level Check	7-7
2-6.	ADJUSTMENT PARTS LOCATION DIAGRAM	7-8

SERVICE NOTE

1. HOW TO RETURN THE PINCH ROLLER, GUIDE ROLLER AND ELEVATOR CAM TO STOP MODE

- 1) Remove the VHS MD assembly from the machine. (Refer to section 2-4. Removal.)
- 2) Rotate the worm gear-1 of the cam motor beneath the MD assembly in the direction arrow (A) using a screw driver tip.

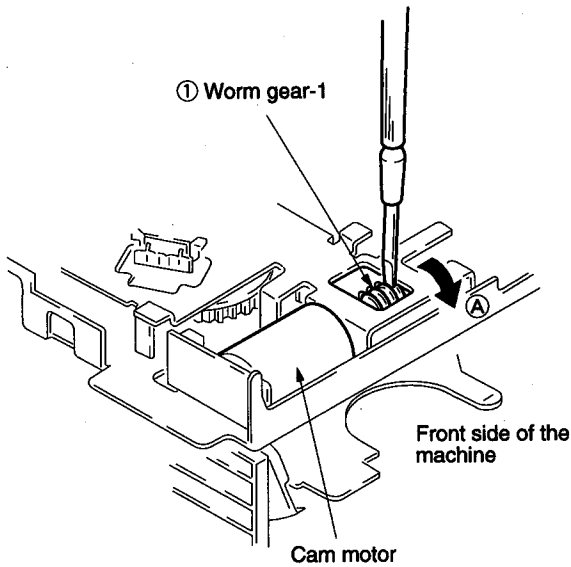


Fig. 1

2. HOW TO RETURN A TAPE INTO CASSETTE HALF

A tape can be rewound into a cassette half by rotating the flywheel-1 of the capstan motor in the direction of (A) with hand.

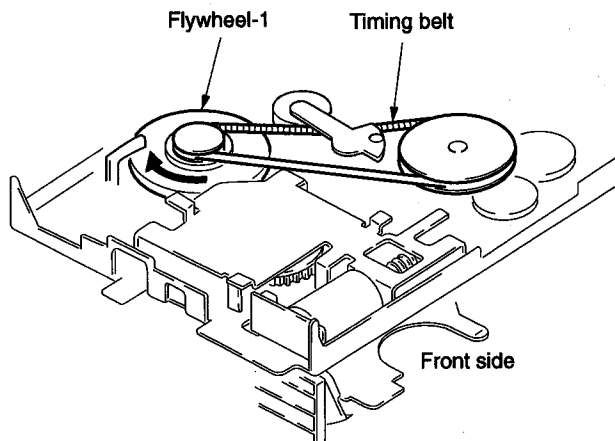


Fig. 2

3. HOW TO REMOVE A CASSETTE FROM A MACHINE IF A CASSETTE IS LEFT IN A MACHINE IN TROUBLE

Execute the section 2, and keep rotating the flywheel-1.

When executing section 1 to 3, take care that a tape slack should not be caught by a mechanism or a tape should not be damaged.

4. HOW TO REMOVE DRUM ASSEMBLY

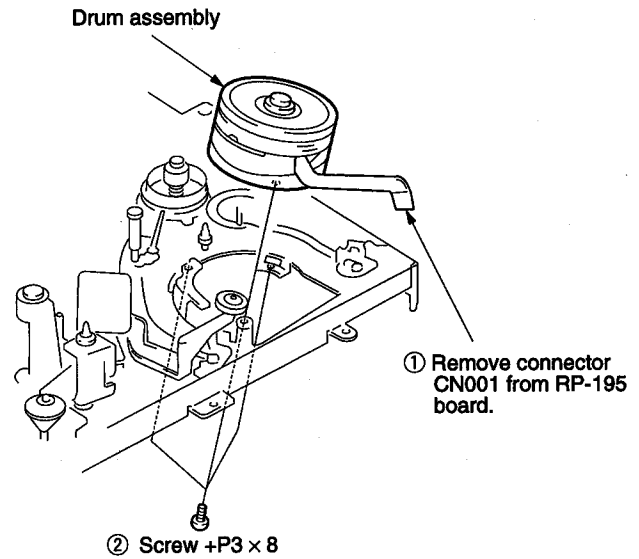


Illustration : SLV-660HF

Fig. 3

5. HOW TO REPLACE A ROTARY UPPER DRUM (SLV-660HF/690HF/L6HFCS/L6HFMX/L6HFPA/L6HFPL)

5-1. HOW TO REMOVE A ROTARY UPPER DRUM

- 1) Remove screw ① (+P3×8) and remove the ground shaft assembly ②. (Refer to Fig. 4.)
- 2) Remove soldering which is marked by arrow and remove the rotary upper drum board completely.
- 3) Remove two screws ③ (PSW3×8) and remove the rotary upper drum in the direction of (A). (Refer to Fig. 5.)
If removal is difficult, remove it while rotating it slowly.

Note: If removal is difficult, check again if soldering is removed completely.

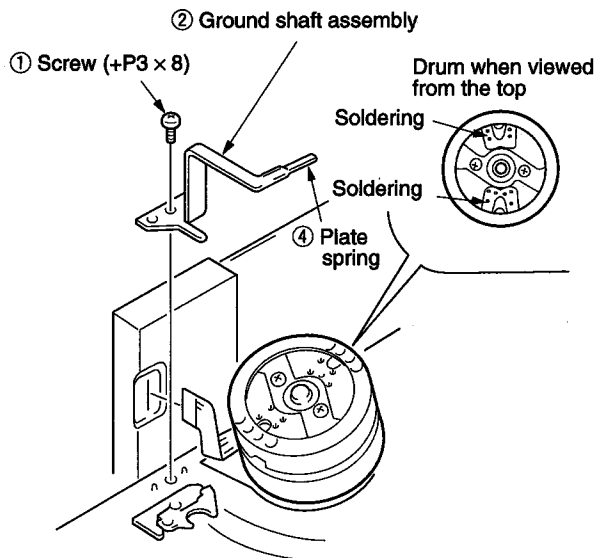


Fig. 4

5-2. HOW TO ATTACH A NEW ROTARY UPPER DRUM

- 1) Pay attention so that finger print or like must not be put when inserting a new upper drum into lower drum.
- 2) Align \Rightarrow mark of the rotary upper drum board with the \Rightarrow mark of the rotary transformer board so that the screw hole on the upper drum and that on the lower drum are aligned. (Refer to Fig. 5.)
- 3) If attaching is difficult, attach a upper drum while rotating it slowly.

Note: Pay attention not to damage the video heads.
Confirm that the upper drum is inserted completely.

- 4) Tighten the two screws ③ (PSW3×8). (Refer to Fig. 5.)
- 5) Fix the earth shaft ② by tightening the screw ① (+P3×8) so that protrusion at the tip of the earth shaft contacts the center of the drum shaft.

Note: When attaching the ground shaft assembly ②, never give force to the plate spring ④.

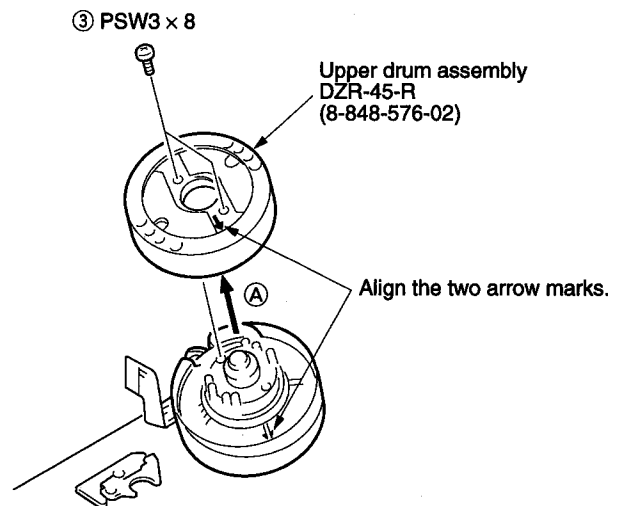


Fig. 5







SECTION 1
GENERAL

This section is extracted from the
SLV-660HF/L6HF instruction manual.

Step 1

Unpacking

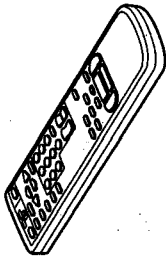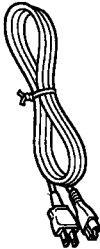Check that you have received the following items with the VCR:

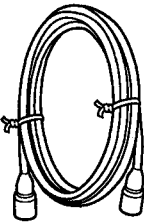- Remote commander 
- AC power cord 
- Size AA (R6) batteries 
- Audio/video cable (3-phono to 3-phono) 
- 75-ohm coaxial cable with F-type connectors 
- Plug adaptor (SLV-660HF PX/L6HF CS/L6HF PL) 

If the plug supplied with your VCR does not fit your power outlet, attach the supplied adaptor to the plug.


Getting Started

Step 2

Setting up the remote commander


Inserting the batteries

Insert two size AA (R6) batteries by matching the + and - on the batteries to the diagram inside the battery compartment.

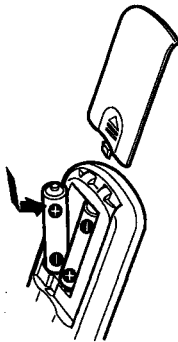

Using the remote commander

You can use this remote commander to operate this VCR and a Sony TV. Buttons on the remote commander marked with a dot (•) can be used to operate your Sony TV.

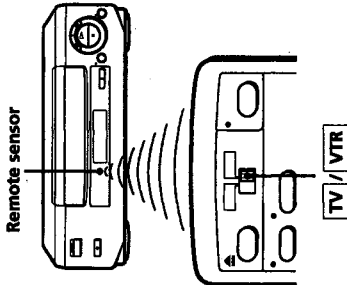

To operate

Set **TV/VTR** to the VCR **VTR** and point at the remote sensor on the VCR a Sony TV **TV** and point at the remote sensor on the TV

Notes

- With normal use, the batteries should last about three to six months.
- If you do not use the remote commander for an extended period of time, remove the batteries to avoid possible damage from battery leakage.
- Do not use a new battery with an old one.
- Do not use different types of batteries.

Step 3

Hookups

Selecting the best hookup option

There are many ways in which your VCR can be hooked up. To hook up your VCR so that it works best for you, first scan through the table below. Then use the accompanying diagrams and procedures on the following pages to set up your VCR.

If you have	Use	Refer to
TV that has audio/video input	Audio/video (A/V) hookup, then follow one of the hookups below.	Page 7
Antenna only, no cable TV	Hookup 1	Pages 8 to 9
Cable box with many scrambled channels	Hookup 2	Pages 10 to 11
No cable box or cable box with only a few scrambled channels	Hookup 3	Pages 12 to 13
Cable box with only a few scrambled channels, using an A/B switch	Hookup 4	Pages 14 to 15

After you've completed the connections, follow the instructions for setup. During setup, if you need more details on the procedure described, page numbers are provided where you can find complete, step-by-step instructions.

After you've completed the setup, you're ready to use your VCR.

Procedures differ depending on the hookup you used. For an overview, refer to "Quick reference to using the VCR" on the back cover.

Before you get started

- Turn off the power to all equipment.
- Do not connect the AC power cords until all of the connections are completed.
- Be sure you make connections firmly. Loose connections may cause picture distortion.
- If your TV doesn't match any of the examples provided, see your nearest Sony dealer or qualified technician.

Caution

Connections between the VCR's VHF/UHF connector and the antenna terminals of the TV receiver should be made only as shown in the following instructions. Failure to do so may result in operation that violates the regulations of the Federal Communications Commission regarding the use and operation of RF devices. Never connect the output of the VCR to an antenna or make simultaneous (parallel) antenna and VCR connections at the antenna terminals of your receiver.


Audio/video (A/V) hookup

Page 7


If your TV has audio/video (A/V) input jacks, you will get a better picture and sound if you hook up your VCR using these connections. In addition, for a true "home theater" experience, you should connect the audio outputs of your VCR or TV to your stereo system. If your TV doesn't have A/V inputs, see the following pages for antenna or cable hookups.

If you're not planning to use your VCR to record programs, you're finished setting up the VCR after you've made the connections shown on page 7. If you want to record off-air or off your cable TV system, complete these connections first, and then go to the following pages for antenna or cable hookups.

A Use this hookup if your TV has stereo jacks

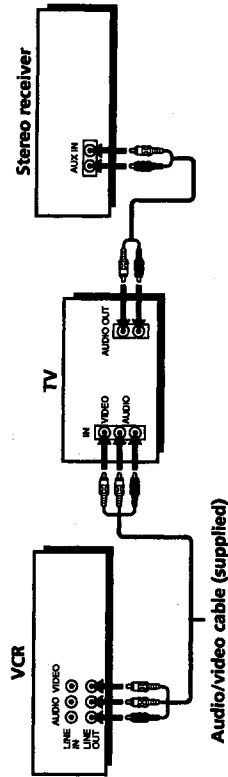

B Use this hookup if your TV doesn't have stereo jacks

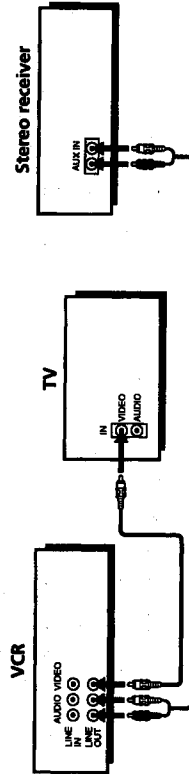

Note

To play a tape in stereo, you must use the A/V connection.

Note to CATV system installer

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Step 3: Hookups (continued)

Hookup 1


Pages 8 to 9

Antenna hookup


Make the following connections if you're using an antenna (if you don't have cable TV).

Use this hookup if you're using:

- VHF/UHF antenna (you get channels 2-13 and channels 14 and higher)
- UHF-only antenna (you get channels 14 and higher)
- Separate VHF and UHF antennas

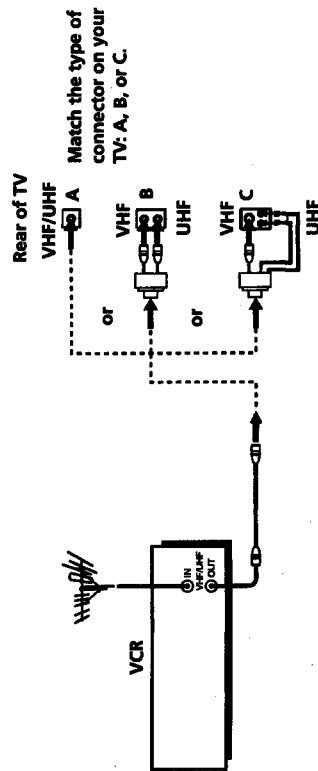

Use this hookup if you're using a VHF-only antenna (you get channels 2-13 only)

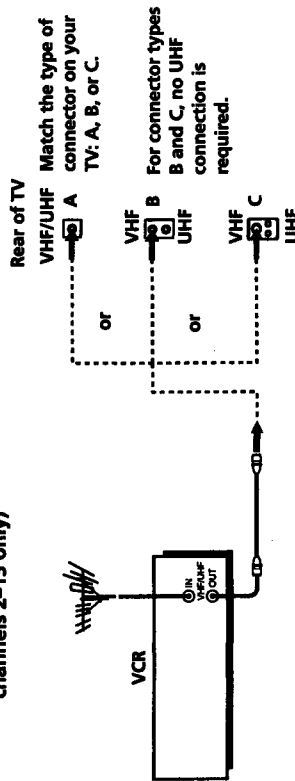


If you cannot connect your antenna cable to the VCR directly

If your antenna cable is a flat cable (300-ohm twin lead cable), attach an external antenna connector (not supplied) so you can connect the cable to the VHF/UHF IN connector. If you have separate cables for VHF and UHF antennas, you should use a U/V band mixer (not supplied). For details, see page 40.

Hookup 1: VCR setup


- 1 Set the RF UNIT switch to CH 3 or CH 4, whichever channel is not used in your area. If both are used, set the switch to either channel.




For details, see page 39. If you made A/V connections (page 7), you can skip this step.

- 2 Change the on-screen display language if desired. For details, see page 17.


- 1 Press MENU and select LANGUAGE.
- 2 Select the language, and press EXECUTE.

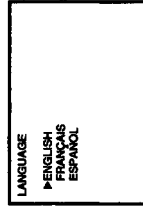

- 3 Press MENU and select TUNER PRESET. Set ANTENNA/CABLE to ANT. For details, see page 18.

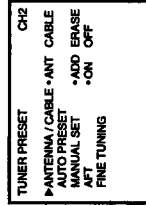

- 4 Preset the channels into the VCR. Select AUTO PRESET and press EXECUTE.

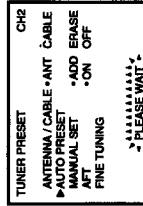

Step 3: Hookups (continued)

Hookup 2

Pages 10 to 11

Cable box with many scrambled channels

Recommended use


Use this hookup if your cable system scrambles all or most channels.

What you can do with this hookup


- Record any channel by selecting the channel on the cable box

What you can't do

- Record one channel while watching another channel

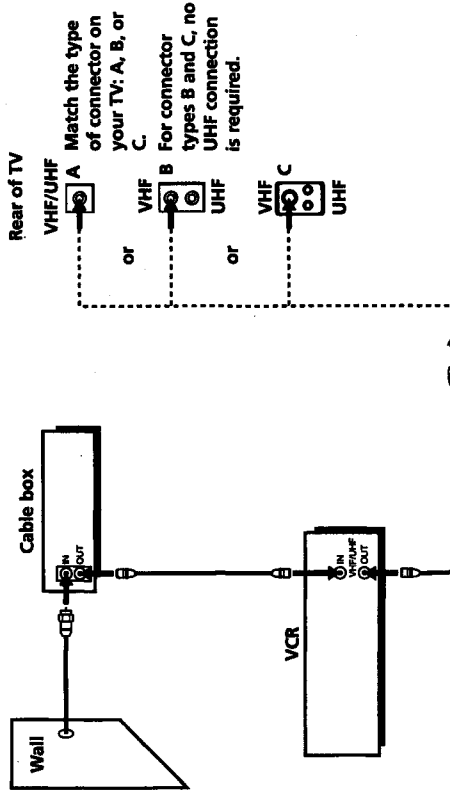

Hookup 2: VCR setup

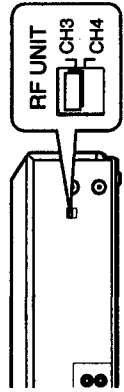

1 Set the RF UNIT switch to CH 3 or CH 4, whichever channel is not used in your area. If both are used, set the switch to either channel.


For details, see page 39. If you made A/V connections (page 7), you can skip this step.

2 Turn on your cable box.


3 Change the on-screen display language if desired. For details, see page 17.

• Press MENU and select LANGUAGE.


• Select the language, and press EXECUTE.

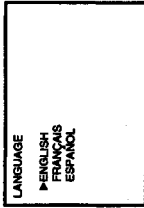

4 Press MENU and select TUNER PRESET. Set ANTENNA/CABLE to ANT. For details, see page 18.

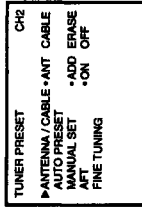

5 Preset the channels into the VCR. Select AUTO PRESET and press EXECUTE.

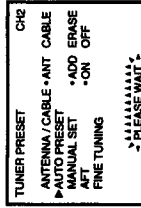

Step 3: Hookups (continued)

Hookup 3

Pages 12 to 13

No cable box, or cable box with only a few scrambled channels

Recommended use


Use this hookup if you do not have a cable box. Also use this hookup if your cable system scrambles only a few channels.

What you can do with this hookup


- Record any unscrambled channel by selecting the channel on the VCR

What you can't do

- Record scrambled channels that require a cable box

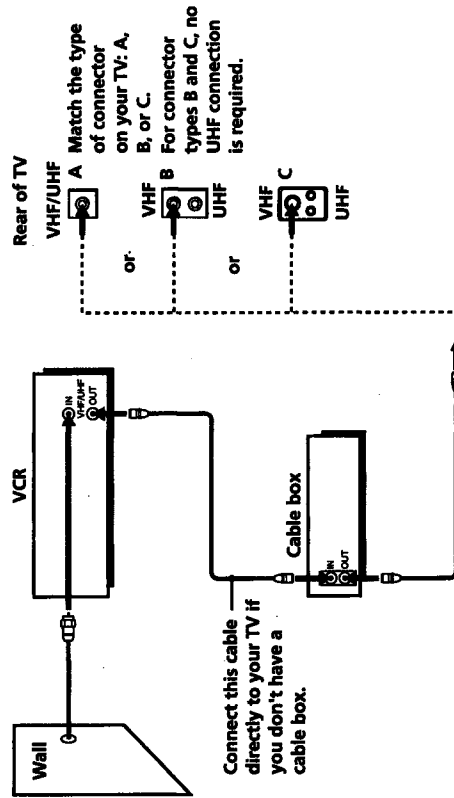

Hookup 3: VCR setup

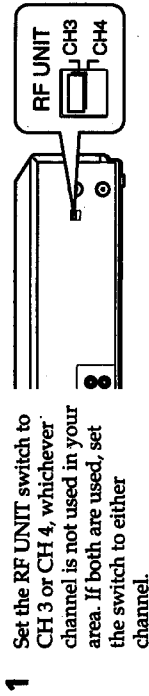

1 Set the RF UNIT switch to CH3 or CH4, whichever channel is not used in your area. If both are used, set the switch to either channel.


For details, see page 39. If you made A/V connections (page 7), you can skip this step.

2 Turn on your cable box.


3 Change the on-screen display language if desired. For details, see page 17.

1 Press MENU and select LANGUAGE.


2 Select the language, and press EXECUTE.

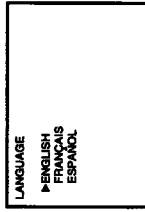

4 Press MENU and select TUNER PRESET. Set ANTENNA/CABLE to CABLE. For details, see page 18.

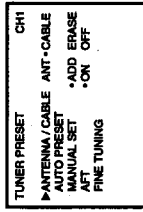

5 Preset the channels into the VCR. Select AUTO PRESET and press EXECUTE.

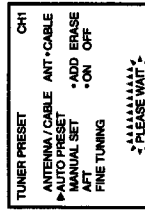

Step 3: Hookups (continued)

Hookup 4

Pages 14 to 15

Cable box with only a few scrambled channels, using an A/B switch

Recommended use


By using an A/B switch (not supplied), this hookup allows you to record both scrambled and unscrambled channels conveniently.

What you can do with this hookup

- Record any unscrambled channel by selecting the channel directly on the VCR (the A/B switch is set to A)
- Record any scrambled channel by selecting the channel on the cable box (the A/B switch is set to B)


What you can't do

- Record one scrambled channel while watching another channel (the A/B switch is set to B)

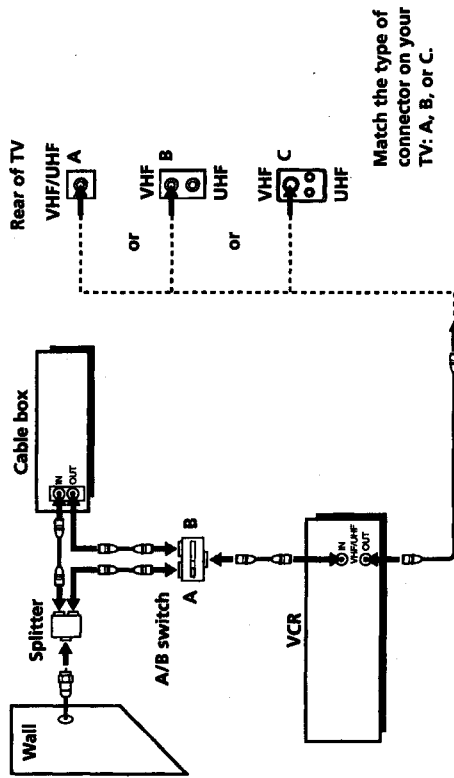

Match the type of connector on your TV: A, B, or C.
For connector types B and C, no UHF connection is required.

Hookup 4: VCR setup

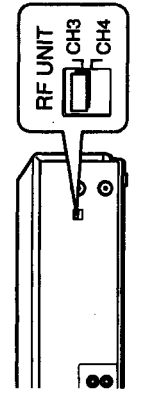

1 Set the RF UNIT switch to CH 3 or CH 4, whichever channel is not used in your area. If both are used, set the switch to either channel.


For details, see page 39. If you made A/V connections (page 7), you can skip this step.

2 Set the A/B switch to "A."


3 Change the on-screen display language if desired. For details, see page 17.

1 Press MENU and select LANGUAGE.


2 Select the language, and press EXECUTE.

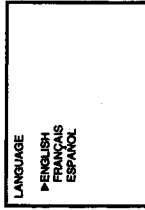


4 Press MENU and select TUNER PRESET. Set ANTENNA/CABLE to CABLE. For details, see page 18.

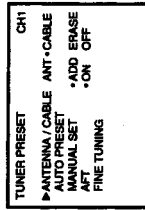

5 Preset the unscrambled channels into the VCR. Select AUTO PRESET and press EXECUTE.

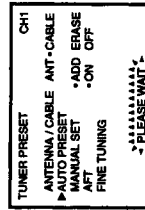

6 Preset the cable box output channel (usually 2, 3 or 4). For details, see page 20.

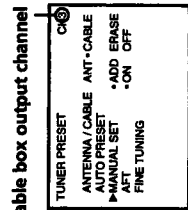

1 Press MENU and select TUNER PRESET.

2 Enter the cable box output channel.

3 Set MANUAL SET to ADD and press EXECUTE.


Step 4

Setting the clock


Set the time and date to use the timer feature for recording programs.

Before you start...


- Turn on the VCR and the TV.
- Set the TV to the VCR channel (channel 3 or 4). If your TV is connected to the VCR using A/V connections, set the TV to video input.
- Press TV/VTR to display the VTR indicator in the VCR's display window.

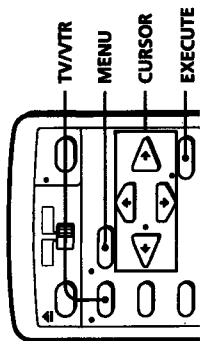


- 1 Press MENU, then press CURSOR \uparrow/\downarrow to move the cursor (\blacktriangleright) to CLOCK SET and press EXECUTE.

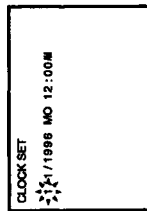

- 2 Press CURSOR \uparrow/\downarrow to set the month.



- 3 Press CURSOR \rightarrow to flash the day and press CURSOR \uparrow/\downarrow to set the day. The day of the week is set automatically.



- 4 Set the year, hour and minutes in the same way as the day.




- 5 EXECUTE Press EXECUTE to start the clock.




Selecting a language


You can change the on-screen display language.

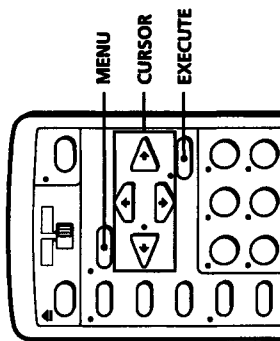

- 1 Press MENU, then press CURSOR \uparrow/\downarrow to move the cursor (\blacktriangleright) to LANGUAGE and press EXECUTE.

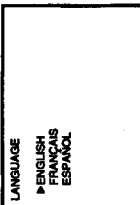

- 2 Press CURSOR \uparrow/\downarrow to select ENGLISH, FRANCAIS, or ESPAÑOL, then press EXECUTE.

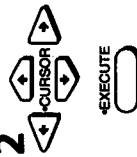

Presetting channels


This VCR is capable of receiving VHF channels 2 to 13, UHF channels 14 to 69 and unscrambled CATV channels 1 to 125. First, we recommend that you preset the receivable channels in your area using automatic presetting. Then, if there are any unwanted channels, disable them manually. If you have decided which channels you wish to preset, set them directly using manual presetting.

Before you start...


- Turn on the VCR and the TV.
- Set the TV to the VCR channel (channel 3 or 4). If your TV is connected to the VCR using A/V connections, set the TV to video input.
- Press TV/VTR to display the VTR indicator in the VCR's display window.

Presetting all receivable channels automatically


- 1 Press MENU, then press CURSOR \uparrow/\downarrow to move the cursor (\blacktriangleright) to TUNER PRESET and press EXECUTE.

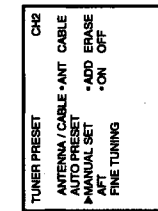


- 2 Press CURSOR \uparrow/\downarrow to select ANTENNA/CABLE.




- 3 To preset cable TV channels:
Press CURSOR \leftarrow/\rightarrow to set ANTENNA/CABLE to CABLE.

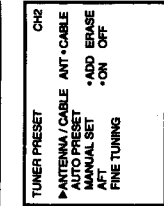

- To preset VHF and UHF channels:
Press CURSOR \leftarrow/\rightarrow to set ANTENNA/CABLE to ANT.

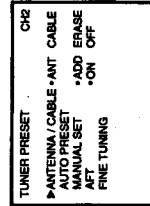


- 4 Press CURSOR \uparrow/\downarrow to select AUTO PRESET, then press EXECUTE.
All receivable channels are preset in numerical sequence. When no more receivable channels can be found, presetting stops and the picture from the lowest numbered channel is displayed on the TV screen.

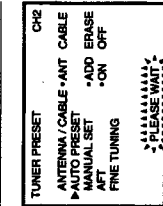

continued

Presetting channels (continued)

Presetting/disabling channels manually

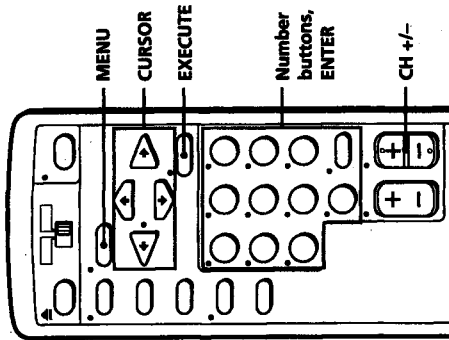

1 Press MENU and select TUNER PRESET, then press EXECUTE.



TUNER PRESET	CHZ
ANTENNA / CABLE • ANT CABLE	
AUTO PRESET	
▶MANUAL SET	•ADD ERASE
AFT	•ON OFF
FINE TUNING	

2 To preset a channel:

- 1 Press the number buttons to enter the channel number, then press ENTER.
- 2 Press CURSOR ◀/▶ to set MANUAL SET to ADD.



TUNER PRESET	CHZ
ANTENNA / CABLE • ANT CABLE	
AUTO PRESET	
▶MANUAL SET	•ADD ERASE
AFT	•ON OFF
FINE TUNING	

• To disable a channel:

- 1 Press CH +/- to select the channel number.
- 2 Press CURSOR ◀/▶ to set MANUAL SET to ERASE.




TUNER PRESET	CHZ
ANTENNA / CABLE • ANT CABLE	
AUTO PRESET	
▶MANUAL SET	ADD •ERASE
AFT	•ON OFF
FINE TUNING	

3 Repeat step 2 to preset or disable channels as required, then press EXECUTE.



If the picture is not clear

Normally, the Auto Fine Tuning (AFT) function automatically tunes in channels clearly. If, however, the picture of a channel is not clear, you can also use the manual tuning function.

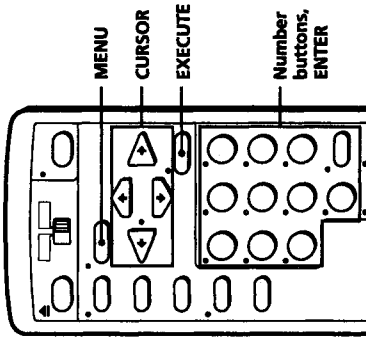

1 Press MENU and select TUNER PRESET, then press EXECUTE.



TUNER PRESET	CHZ
ANTENNA / CABLE • ANT CABLE	
AUTO PRESET	
▶MANUAL SET	•ADD ERASE
AFT	•ON OFF
FINE TUNING	

2 Press the number buttons to select the channel you want to fine-tune, then press ENTER.



TUNER PRESET	CHZ
ANTENNA / CABLE • ANT CABLE	
AUTO PRESET	
▶MANUAL SET	•ADD ERASE
AFT	•ON OFF
FINE TUNING	

3 Press CURSOR ◀/▶ to select FINE TUNING. The fine tuning meter appears.



TUNER PRESET	CHZ
ANTENNA / CABLE • ANT CABLE	
AUTO PRESET	
▶MANUAL SET	•ADD ERASE
AFT	•ON OFF
FINE TUNING	

4 Press CURSOR ◀/▶ to adjust to a clearer picture, then press EXECUTE. Note that the AFT setting switches to OFF.



TUNER PRESET	CHZ
ANTENNA / CABLE • ANT CABLE	
AUTO PRESET	
▶MANUAL SET	•ADD ERASE
AFT	•ON OFF
FINE TUNING	


SLV-360/390/390PX/660HF/690HF/L2MX/L2PA/L2PL/L4CS/ L4MX/L4PA/L4PL/L6HFCS/L6HFMX/L6HFPA/L6HFPL

SECTION 2


DISASSEMBLY

NOTE : Follow the disassembly procedure in the numerical order given.


2-1. REMOVAL OF FRONT PANEL ASSY

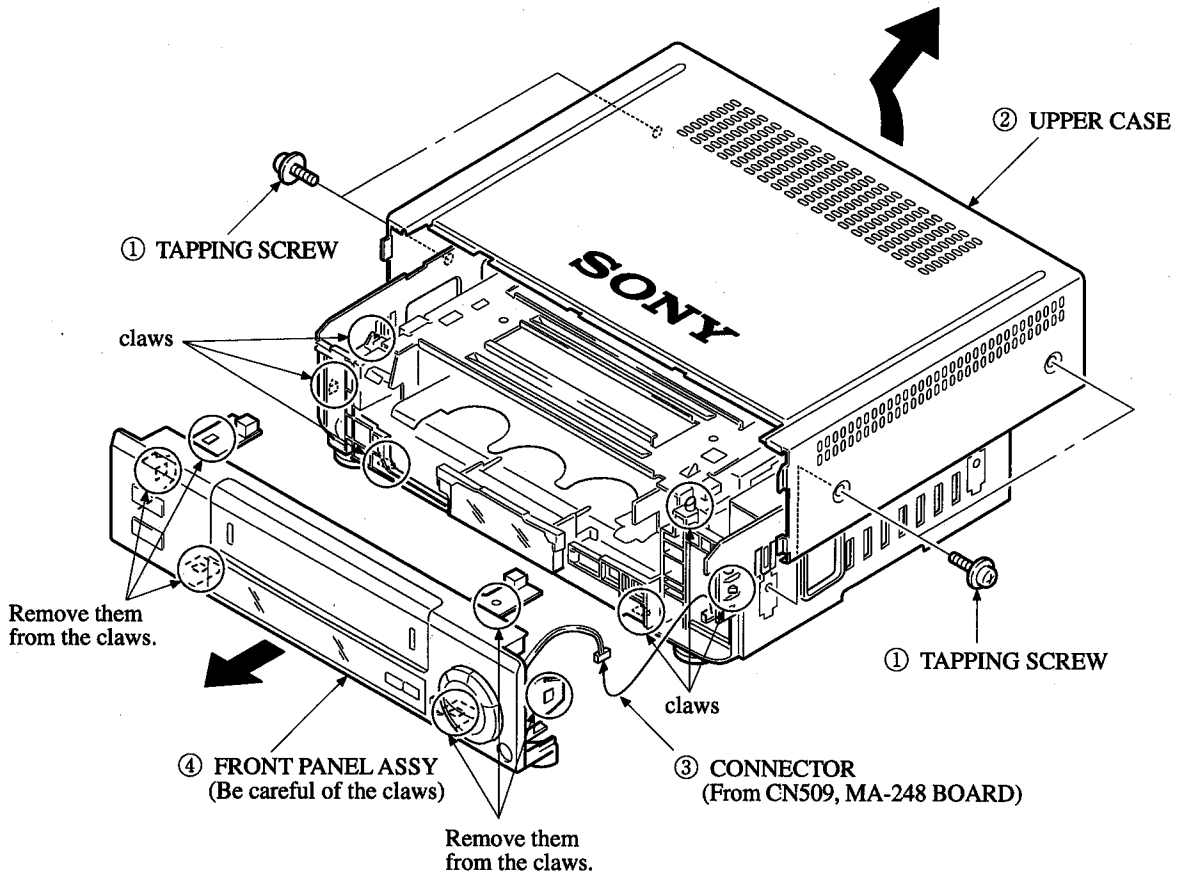

2-2. REMOVAL OF POWER BLOCK

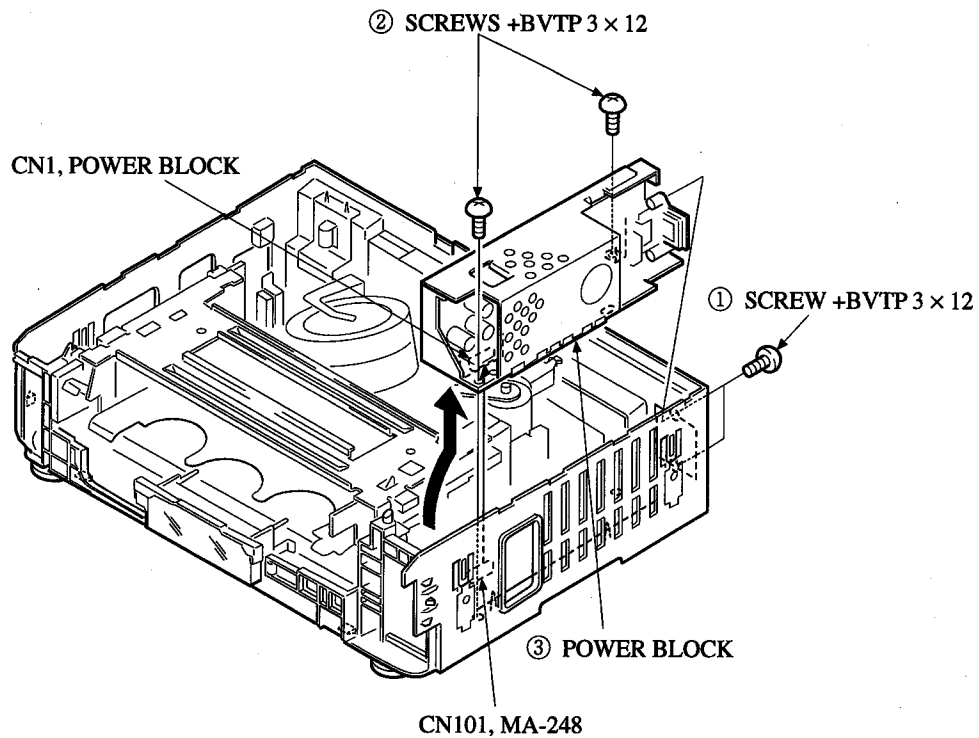


2-3. REMOVAL OF RP-195 BOARD and MA-248 BOARD

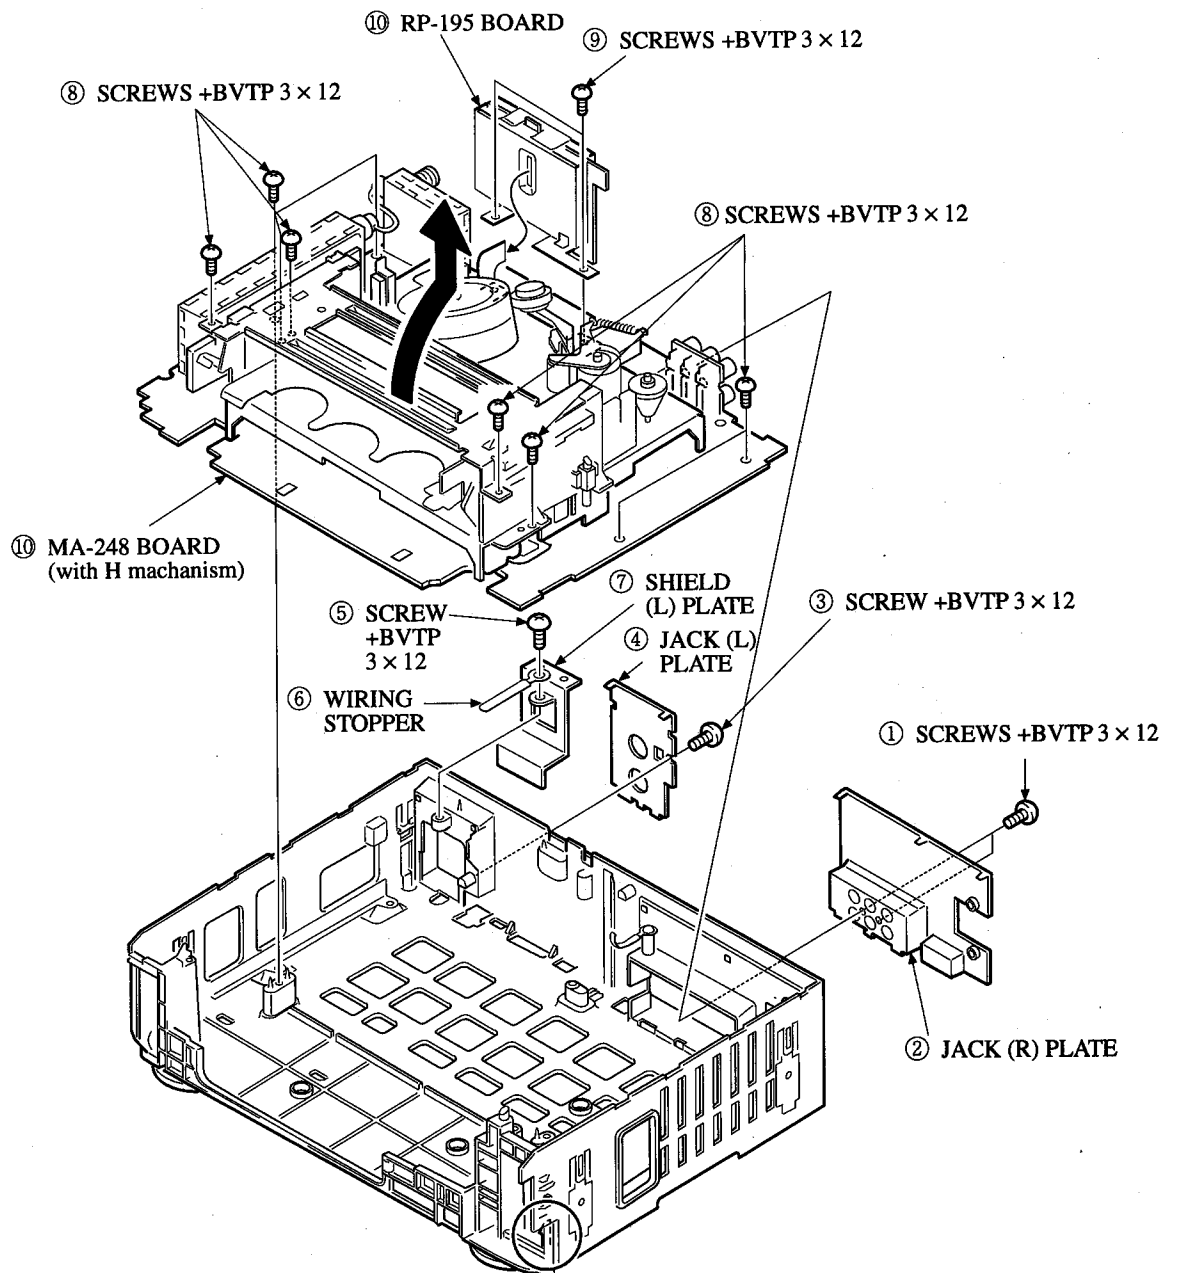


Be careful of a claw on removing MA-248 board with H mechanism ⑩.

2-4. REMOVAL OF H MECHANISM

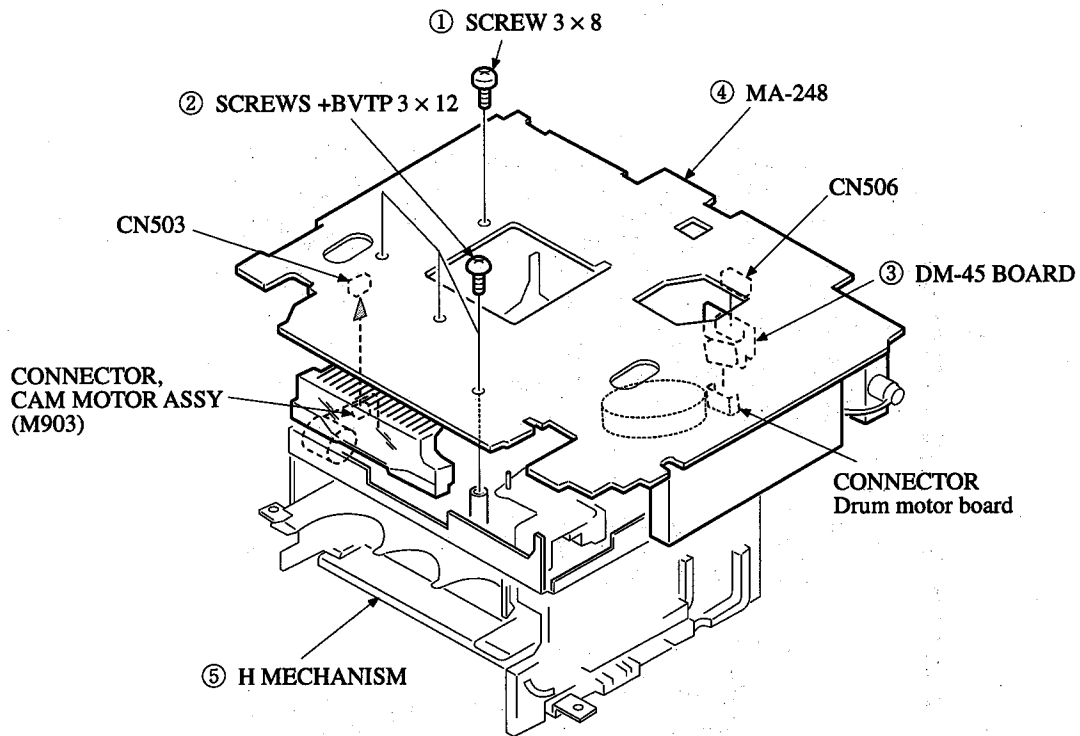


2-5. CIRCUIT BOARDS LOCATION

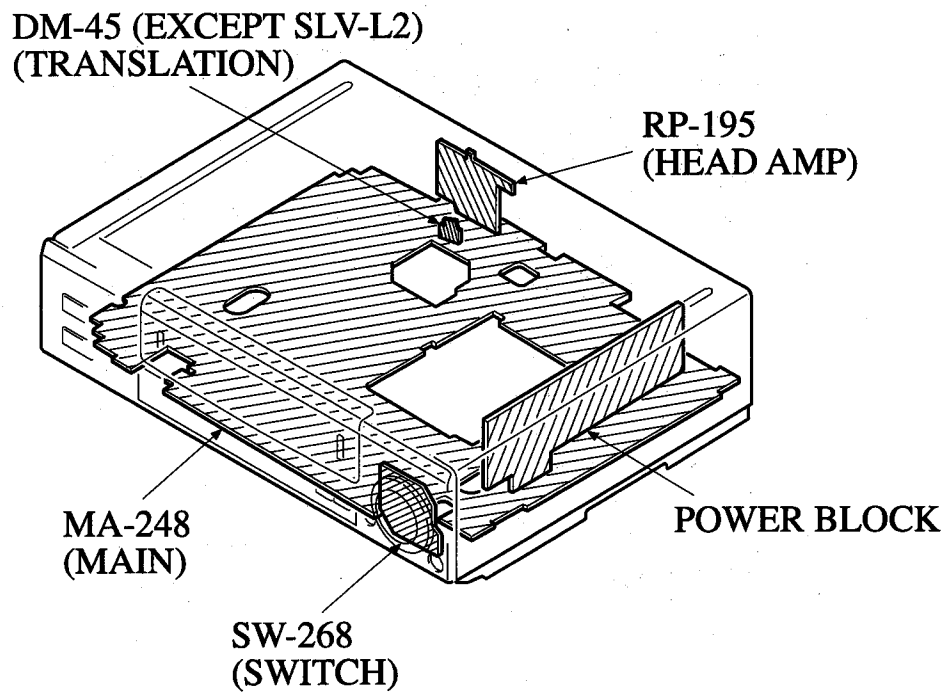


2-6. INTERNAL VIEWS

— Top view —

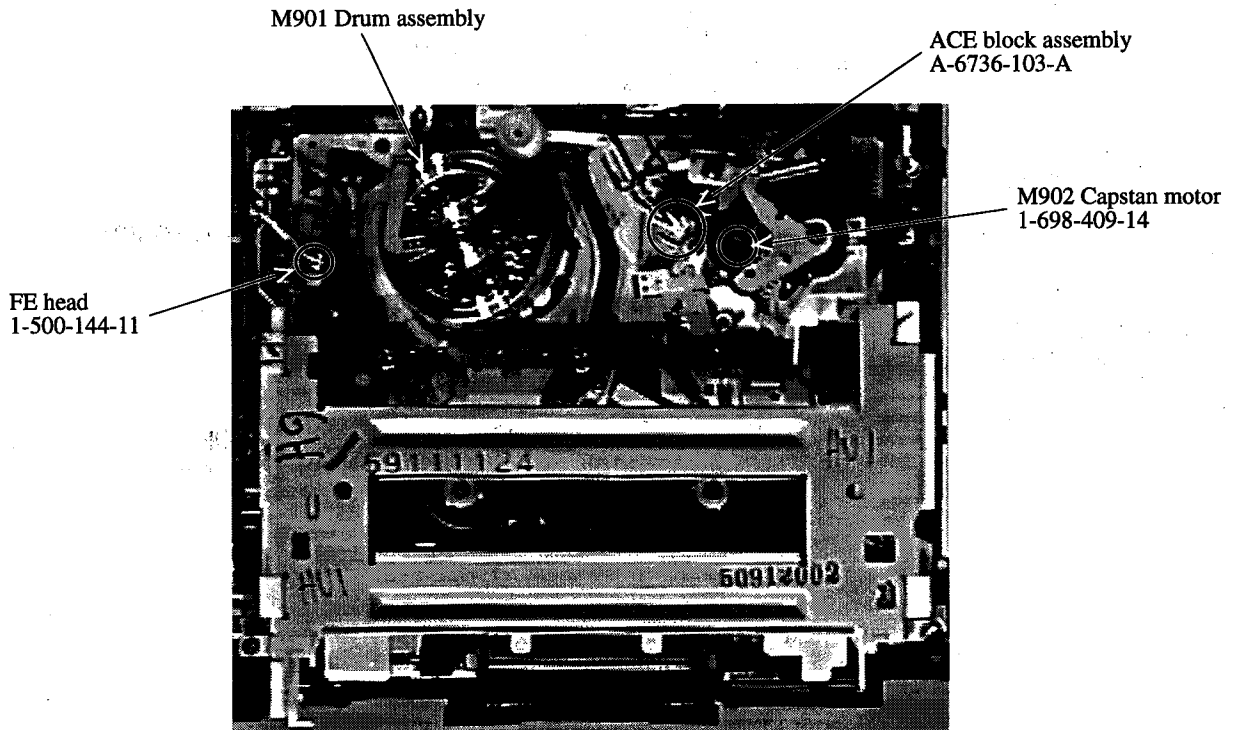



— Bottom view —

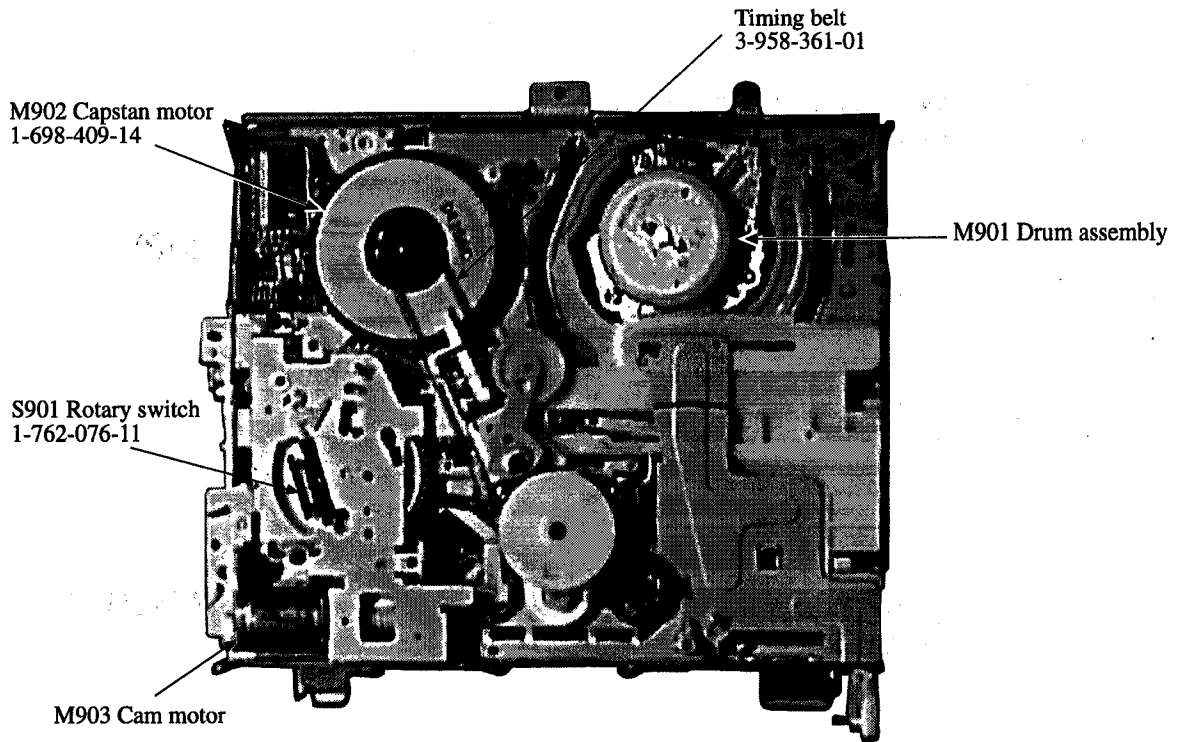

SECTION 3 BLOCK DIAGRAM



3-1. OVERALL BLOCK DIAGRAM

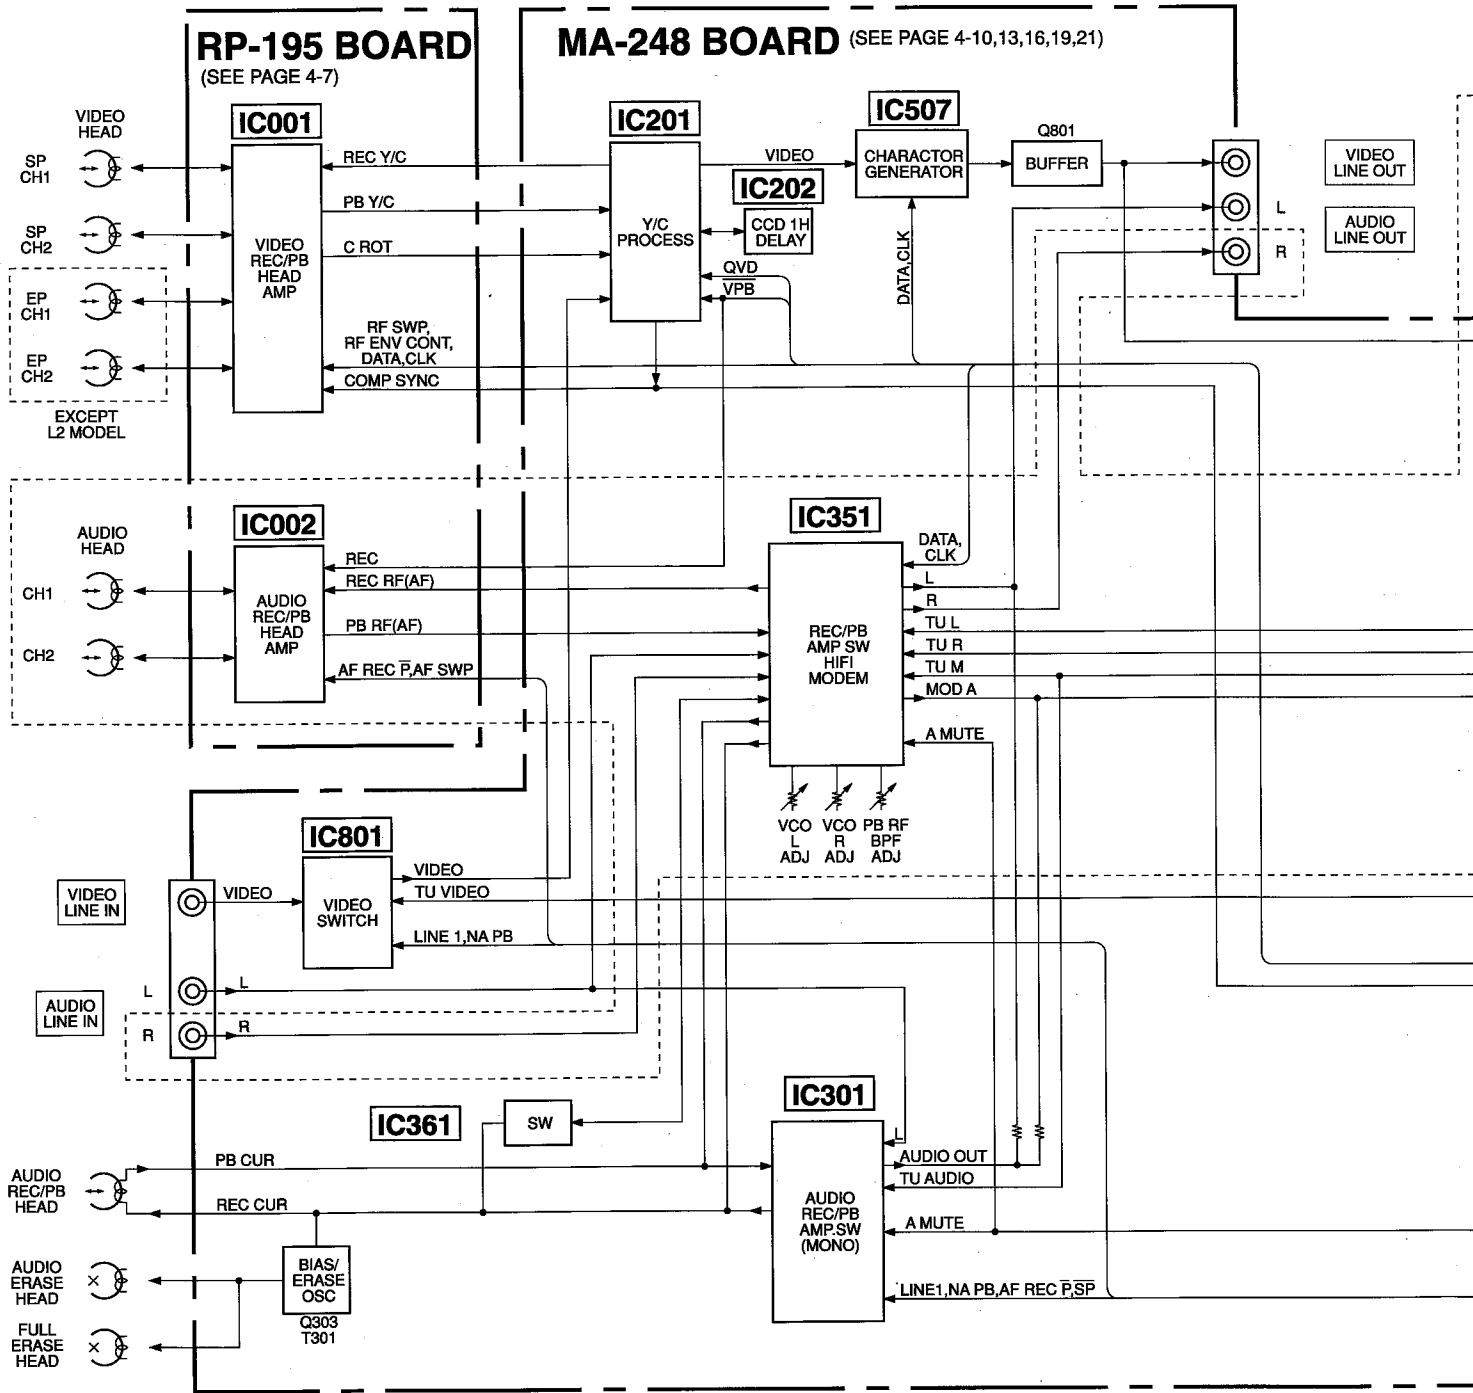


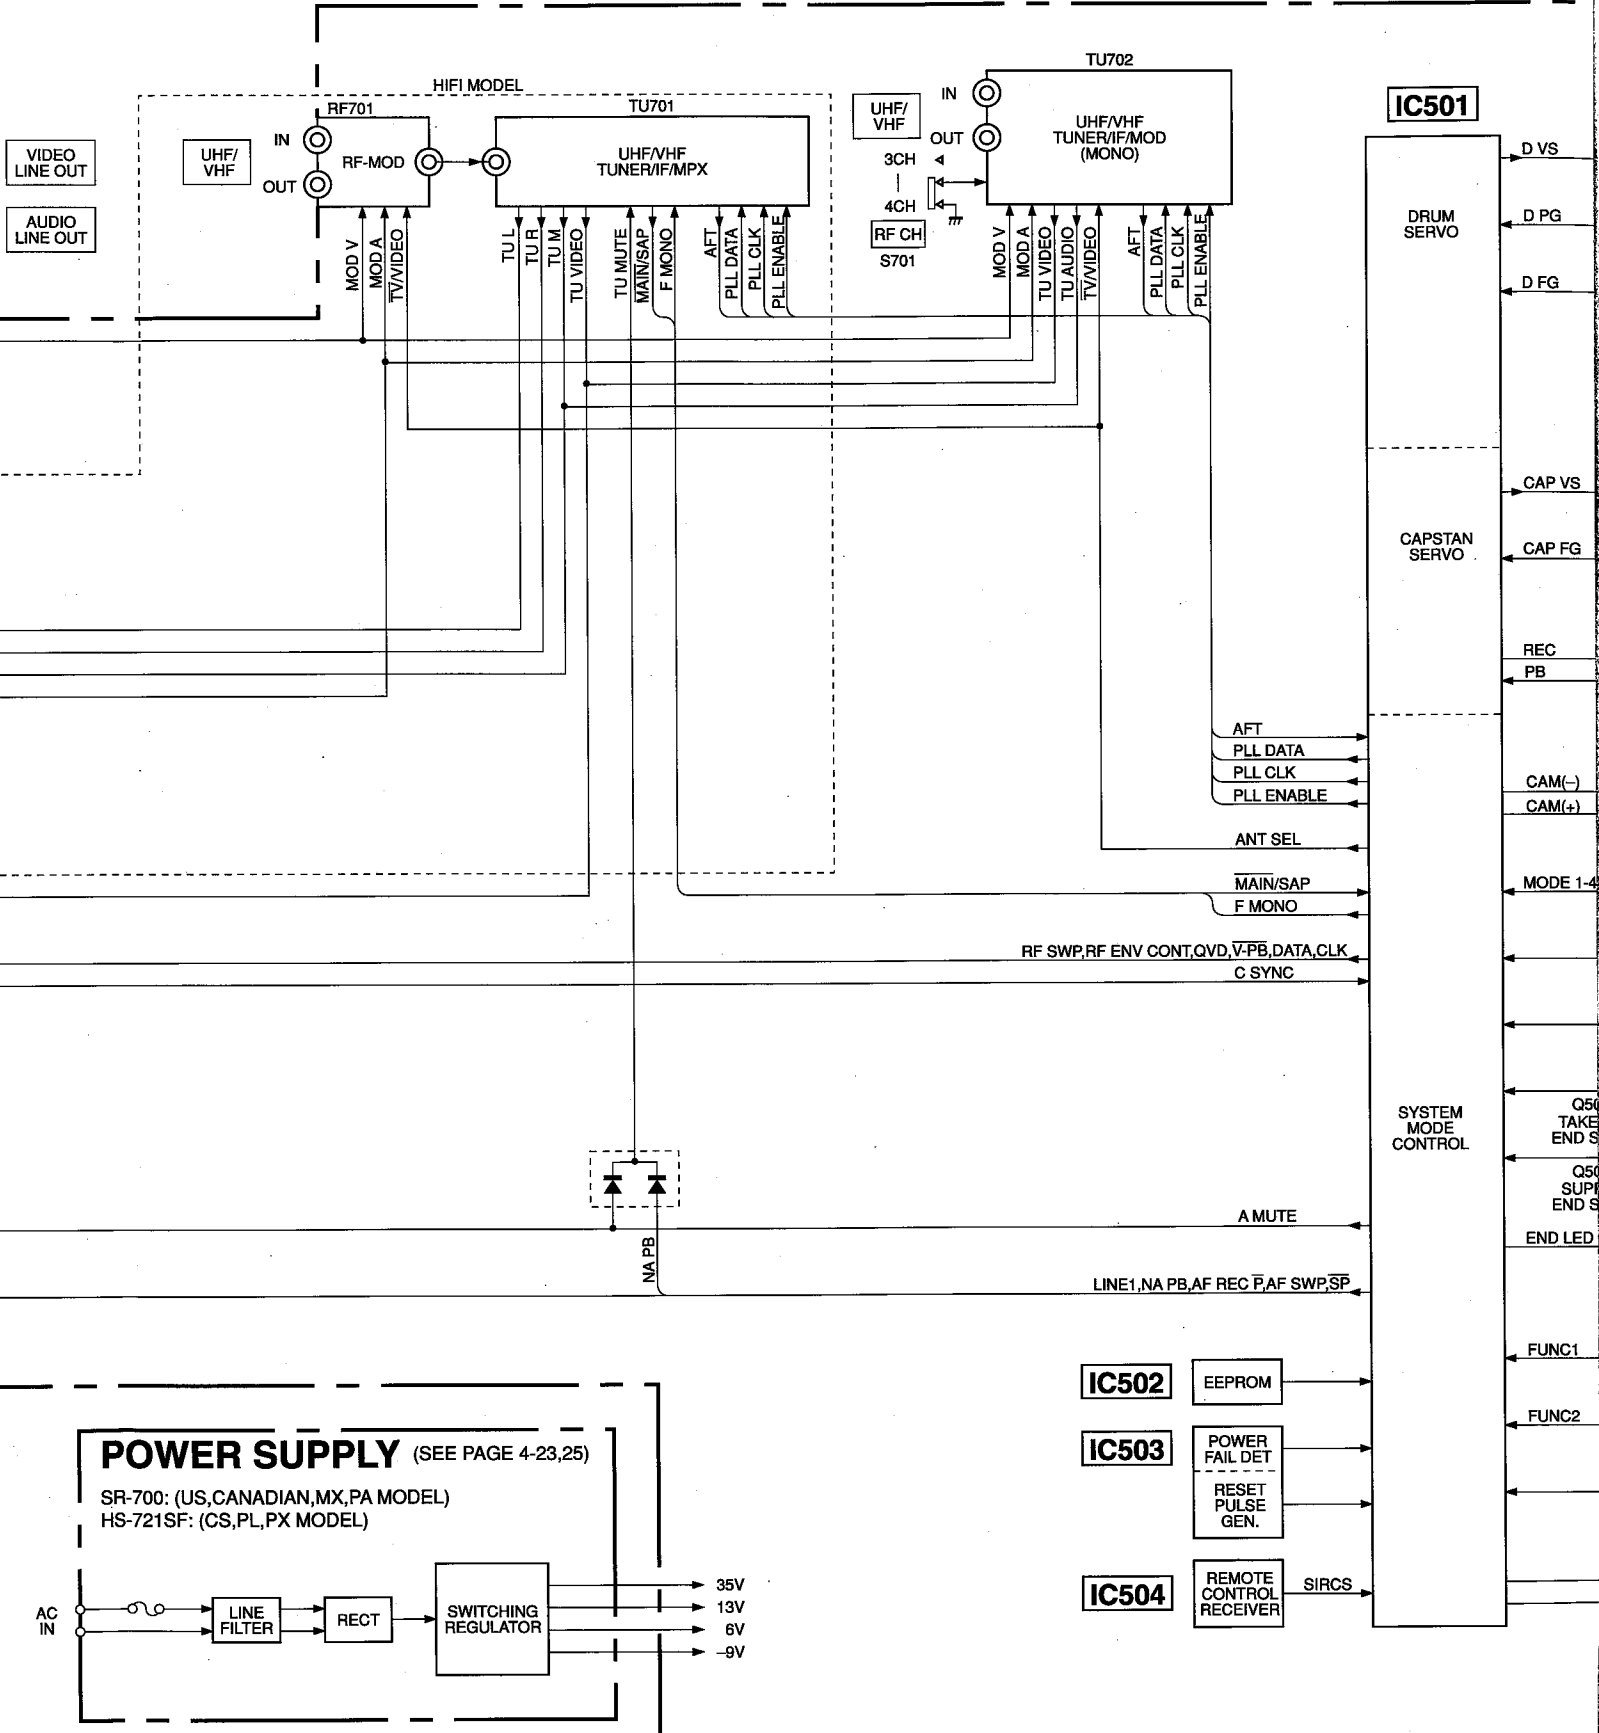


POWER SUPPLY (SEE PAGE 4-23,25)


SR-700: (US,CANADIAN,MX,PA MODEL)
 HS-721SF: (CS,PL,PX MODEL)

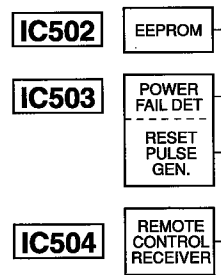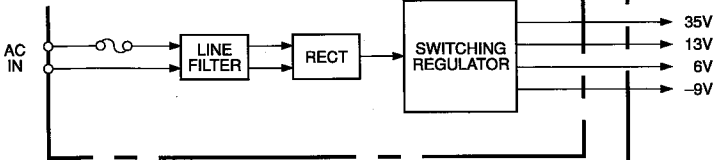

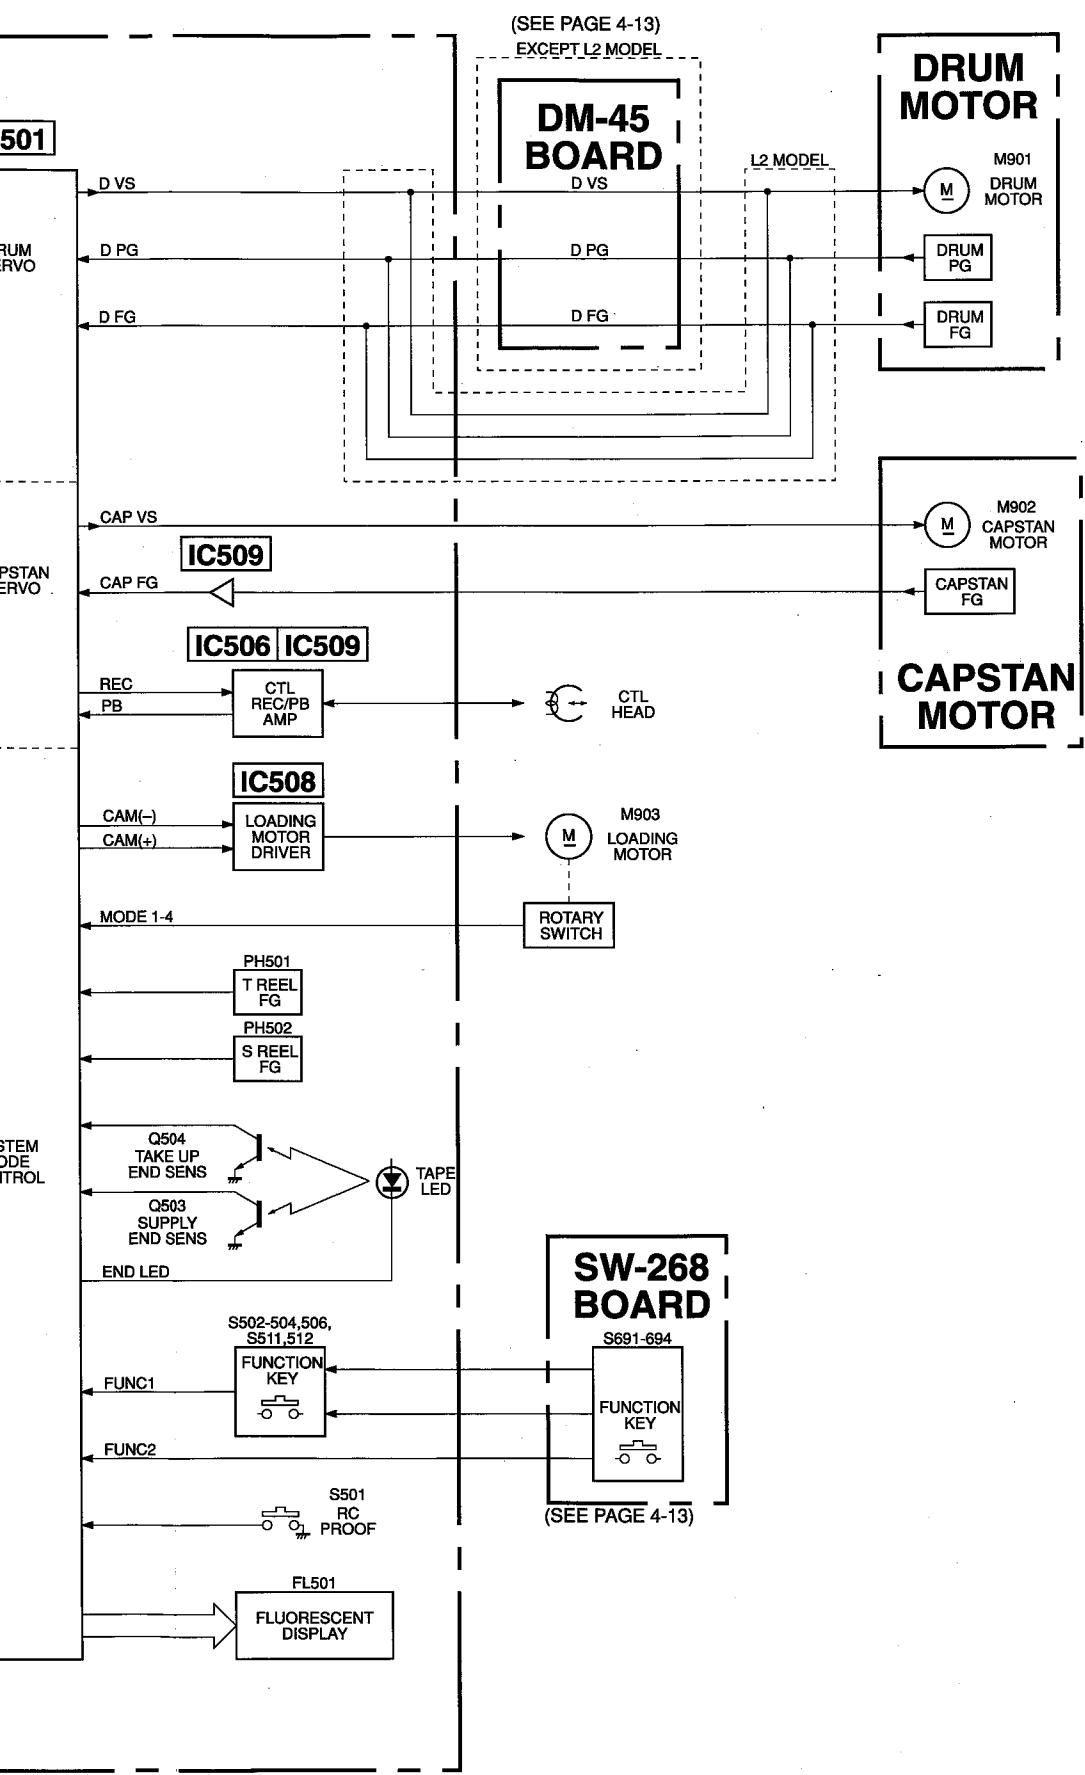

3-2. VIDEO BLOCK DIAGRAM

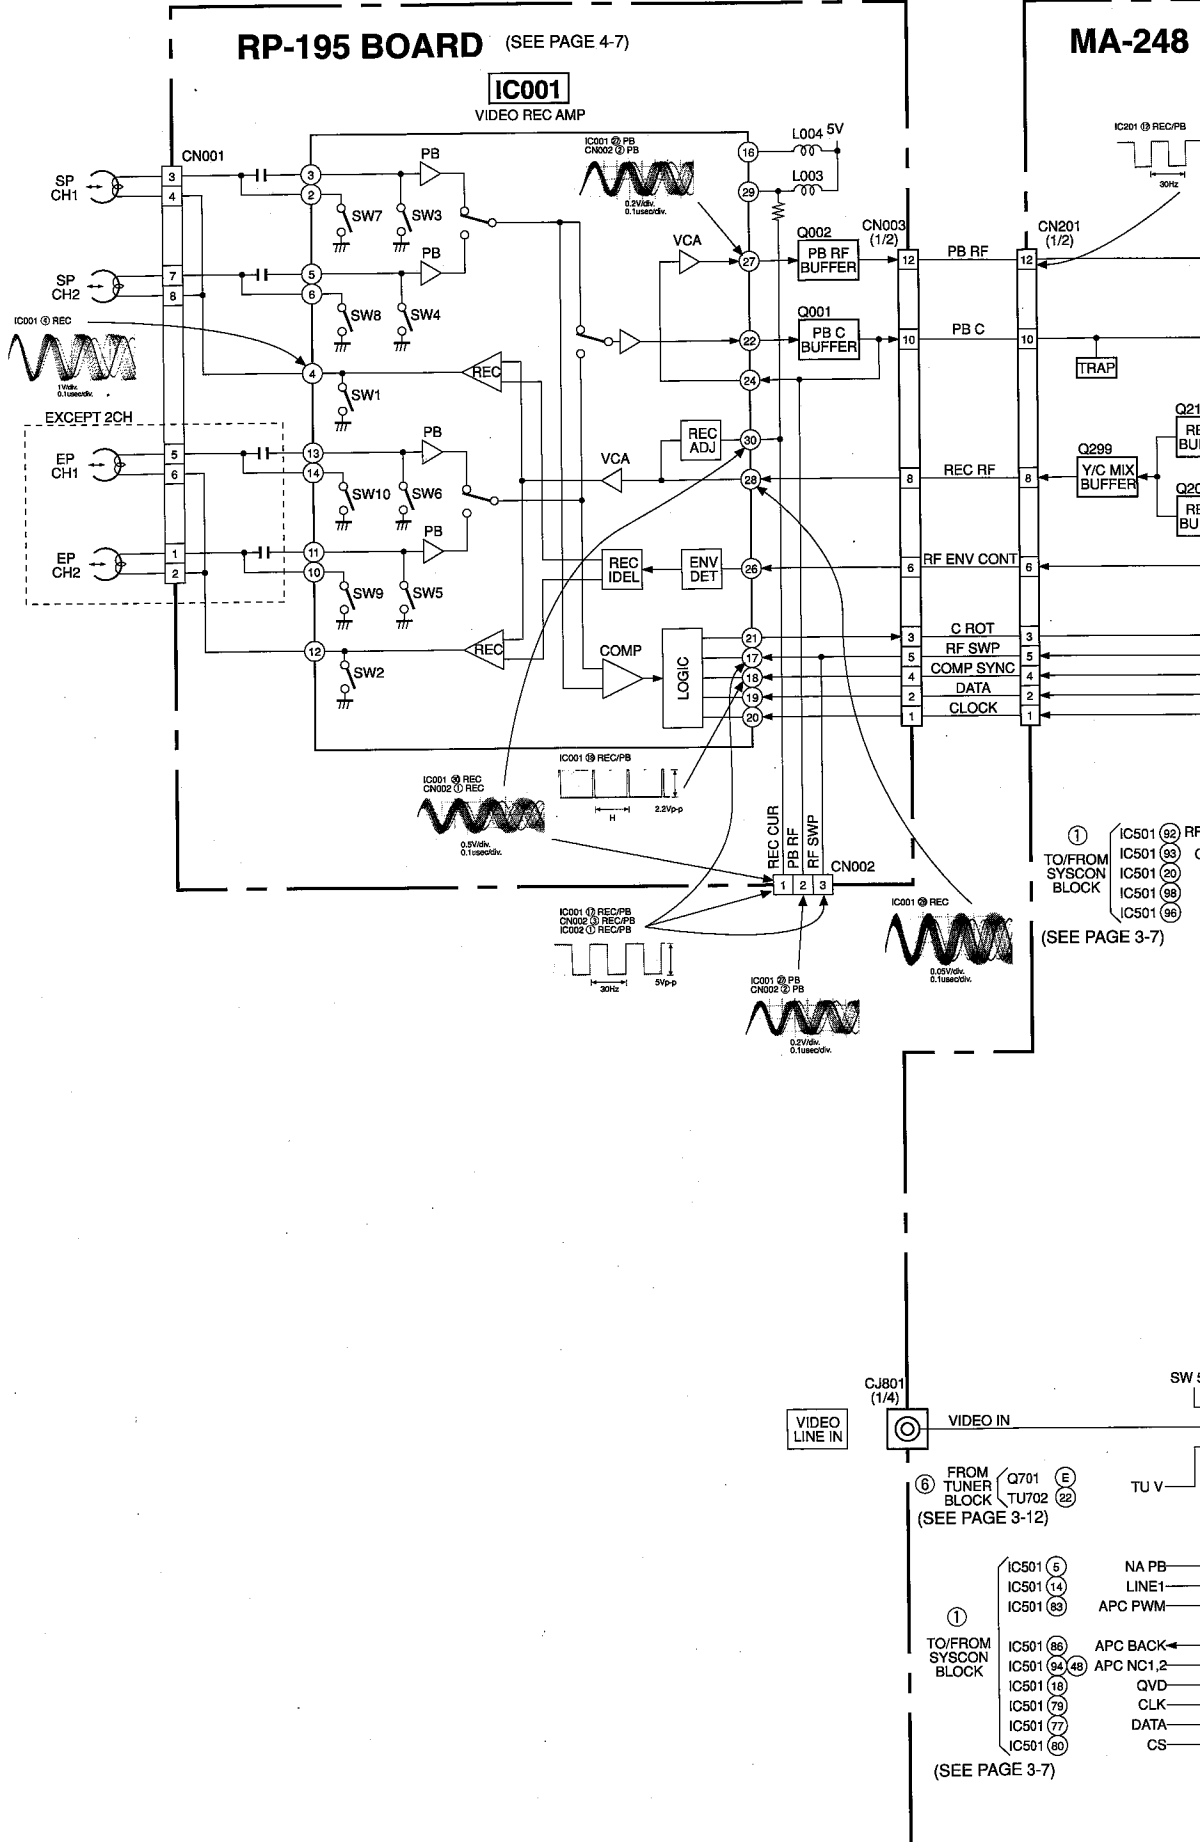

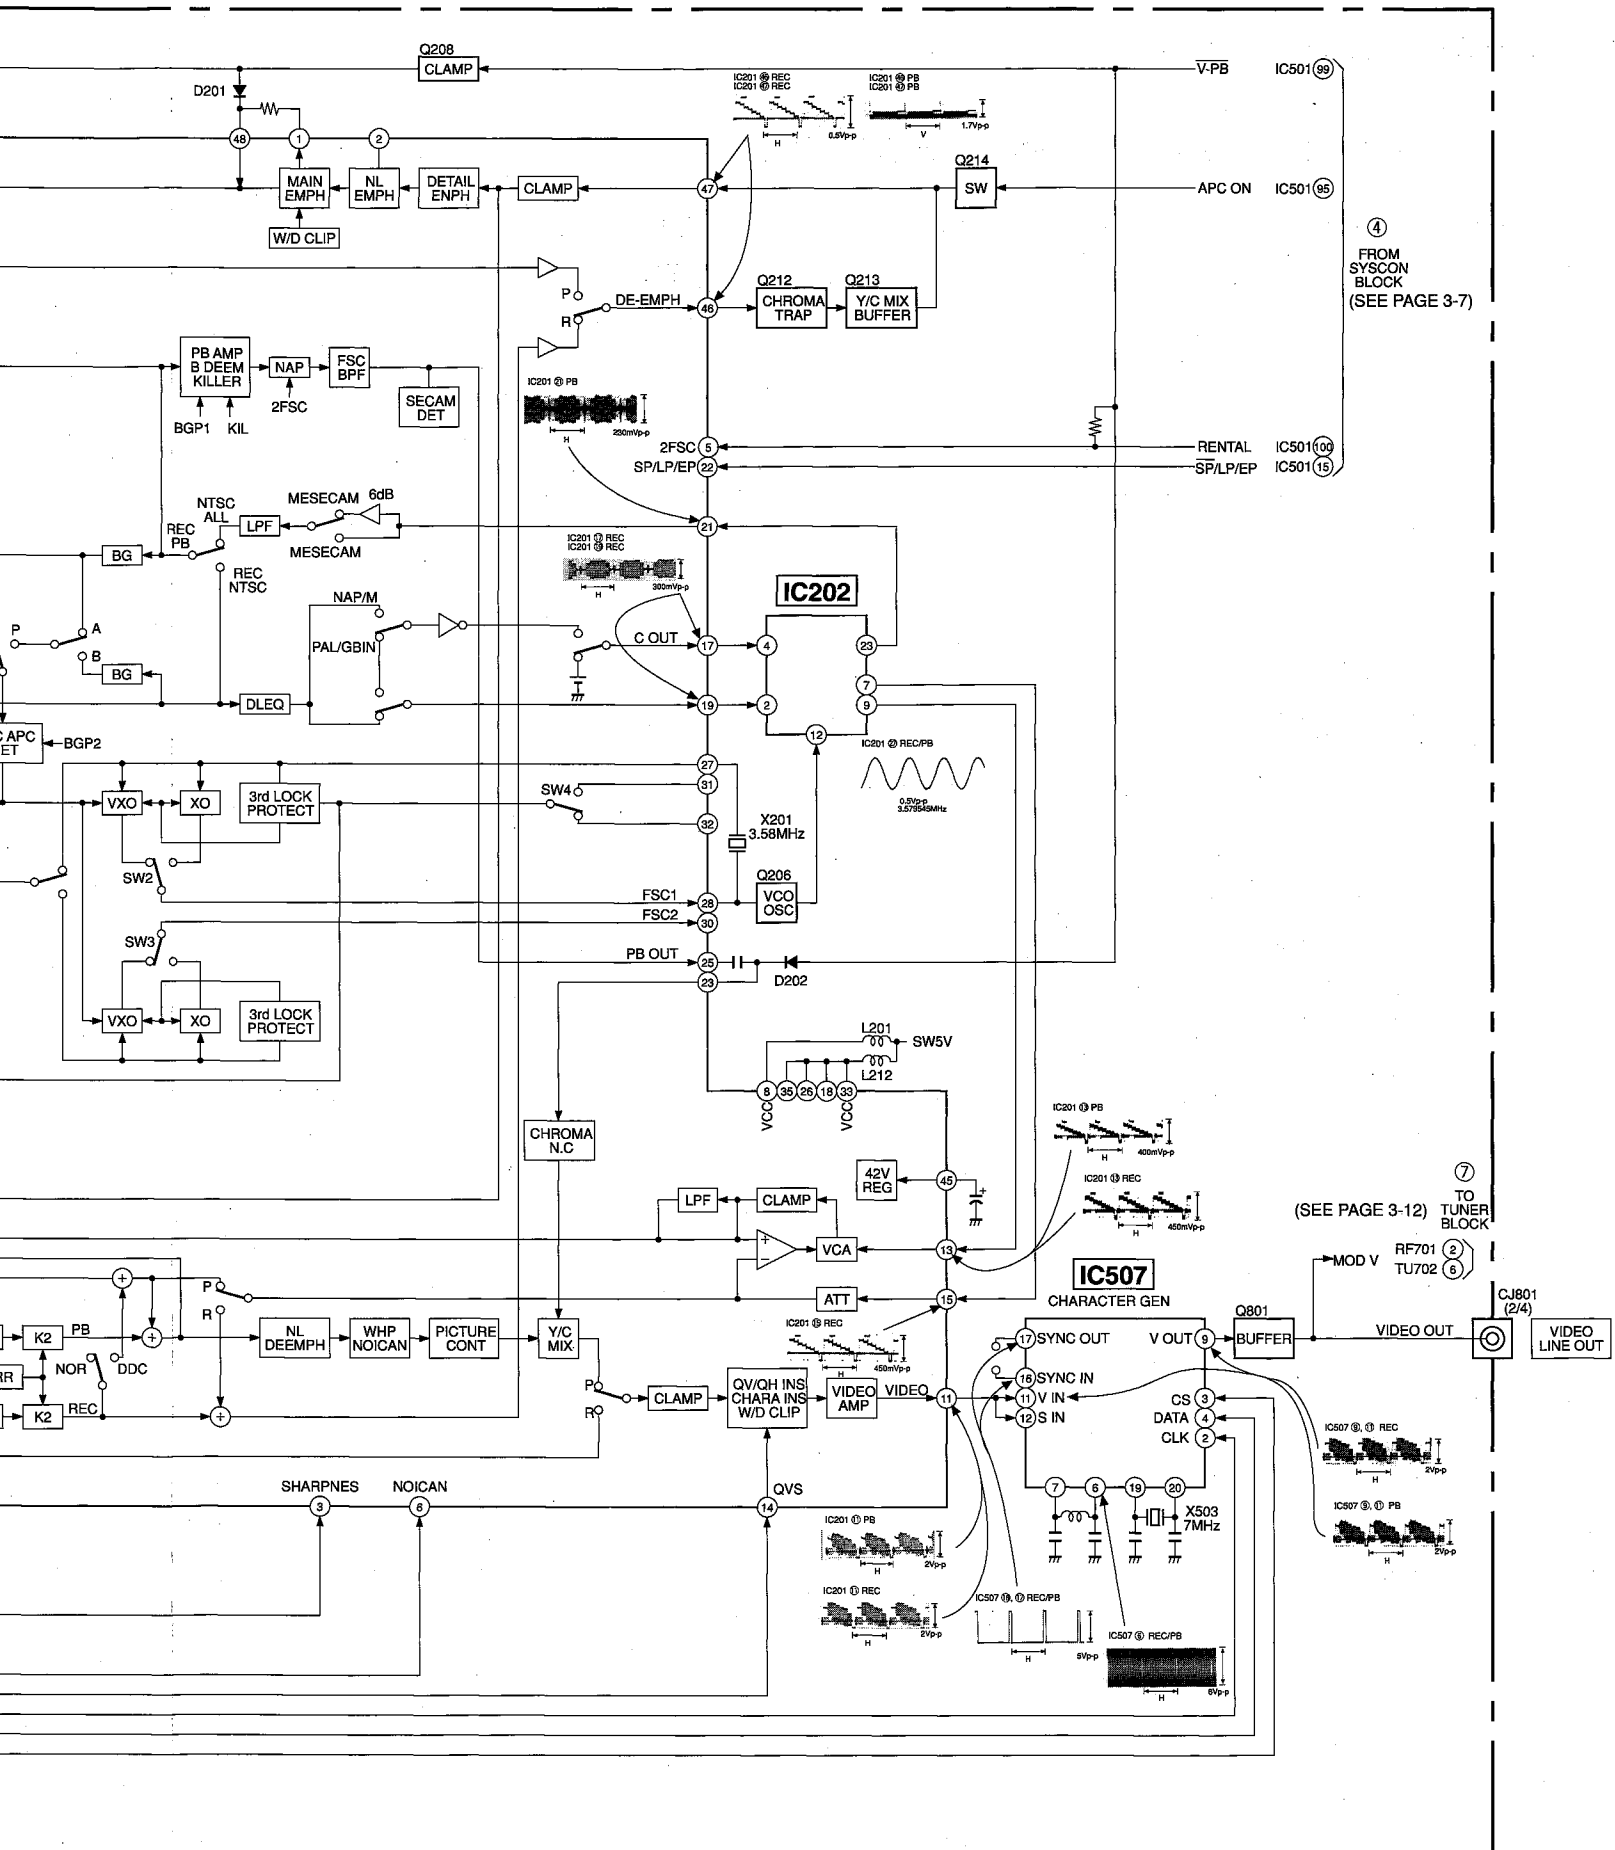


④ FROM SYSCON BLOCK (SEE PAGE 3-7)

⑦ TO TUNER BLOCK (SEE PAGE 3-12)

CJ801 (2/4) VIDEO LINE OUT

3-3. SERVO/SYSTEM CONTROL BLOCK DIAGRAM

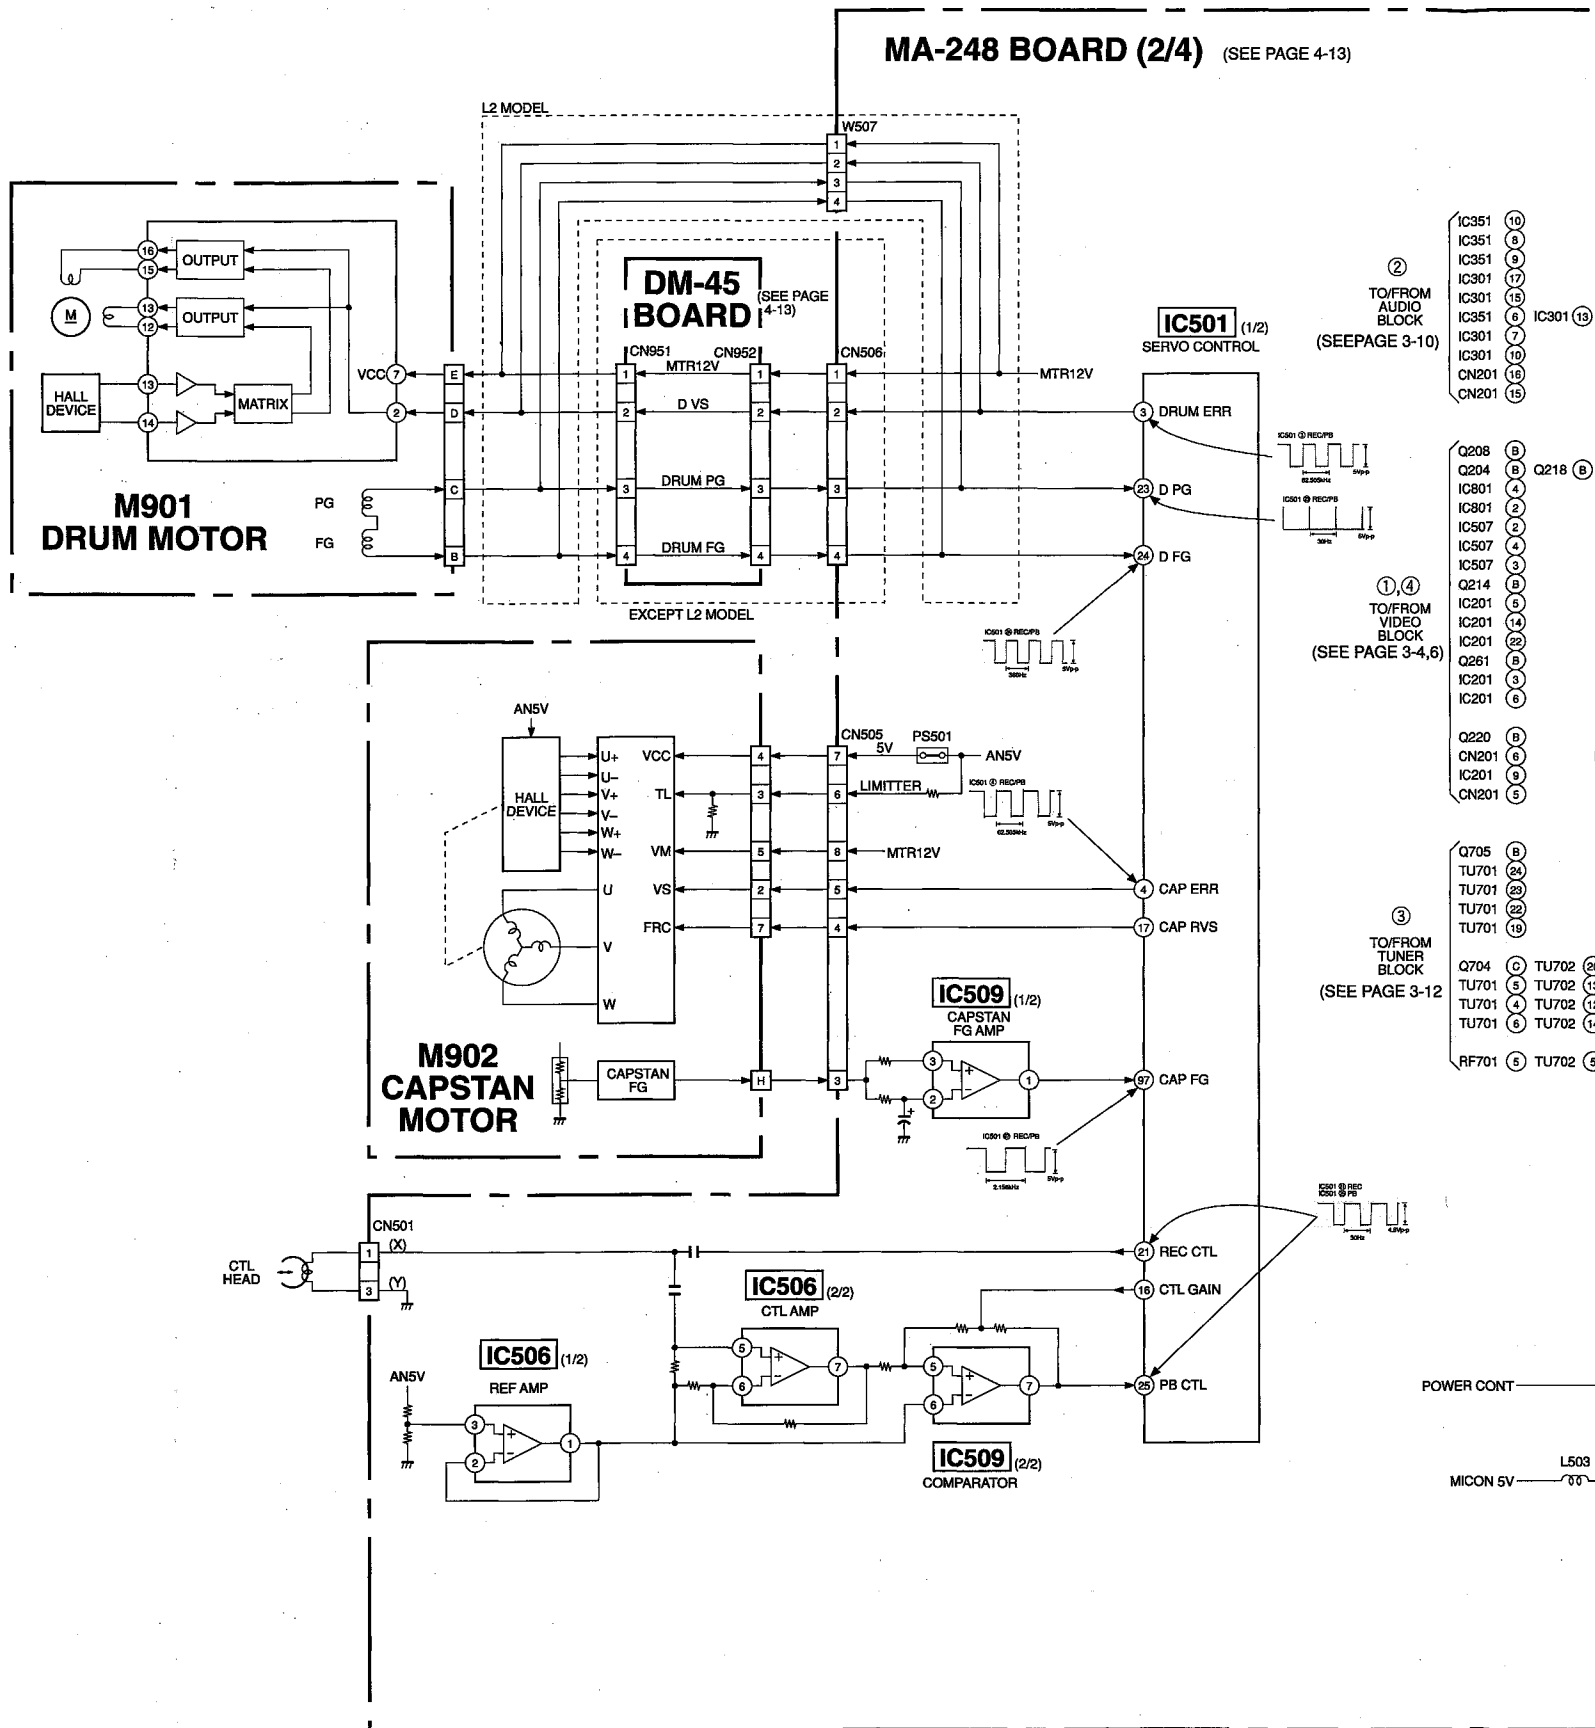

- ② TO/FROM AUDIO BLOCK (SEE PAGE 3-10)
- IC351 (10)
- IC351 (8)
- IC351 (9)
- IC301 (17)
- IC301 (15)
- IC351 (6)
- IC301 (7)
- IC301 (10)
- IC301 (16)
- CN201 (15)
- IC301 (18)
- Q208 (B)
- Q204 (B)
- IC801 (4)
- IC801 (2)
- IC507 (2)
- IC507 (4)
- IC507 (3)
- Q214 (B)
- IC201 (5)
- IC201 (14)
- IC201 (22)
- Q261 (B)
- IC201 (3)
- IC201 (6)
- Q220 (B)
- CN201 (8)
- IC201 (9)
- CN201 (5)
- ③ TO/FROM TUNER BLOCK (SEE PAGE 3-12)
- Q705 (B)
- TU701 (24)
- TU701 (29)
- TU701 (22)
- TU701 (19)
- Q704 (C)
- TU702 (20)
- TU701 (5)
- TU702 (13)
- TU701 (4)
- TU702 (12)
- TU701 (6)
- TU702 (14)
- RF701 (5)
- TU702 (5)

SLV-360/390/390PX/660HF/690HF/L2MX/L2PA/L2PL/L4CS/L4MX/L4PA/L4PL/L6HFCS/L6HFMX/L6HFPA/L6HFPL

PAGE 4-13)

IC501 (2/2) SYSTEM/MODE CONTROL

- IC351 (10)
- IC351 (8)
- IC351 (9)
- IC301 (17)
- IC301 (15)
- IC351 (6)
- IC301 (7)
- IC301 (10)
- CN201 (18)
- CN201 (15)

- Q208 (8)
- Q204 (8)
- IC801 (4)
- IC801 (2)
- IC507 (2)
- IC507 (4)
- IC507 (3)
- IC507 (3)
- Q214 (8)
- CN201 (5)
- IC201 (14)
- IC201 (22)
- IC201 (3)
- IC201 (6)

- Q220 (8)
- CN201 (8)
- IC201 (9)
- CN201 (5)

- Q705 (8)
- TU701 (24)
- TU701 (23)
- TU701 (22)
- TU701 (19)

- Q704 (5)
- TU702 (20)
- TU701 (5)
- TU702 (13)
- TU701 (4)
- TU702 (12)
- TU701 (6)
- TU702 (14)
- RF701 (5)
- TU702 (5)

- Q705 (8)
- TU701 (24)
- TU701 (23)
- TU701 (22)
- TU701 (19)

- Q704 (5)
- TU702 (20)
- TU701 (5)
- TU702 (13)
- TU701 (4)
- TU702 (12)
- TU701 (6)
- TU702 (14)
- RF701 (5)
- TU702 (5)



- Q705 (8)
- TU701 (24)
- TU701 (23)
- TU701 (22)
- TU701 (19)

- Q704 (5)
- TU702 (20)
- TU701 (5)
- TU702 (13)
- TU701 (4)
- TU702 (12)
- TU701 (6)
- TU702 (14)
- RF701 (5)
- TU702 (5)

- Q705 (8)
- TU701 (24)
- TU701 (23)
- TU701 (22)
- TU701 (19)

- Q704 (5)
- TU702 (20)
- TU701 (5)
- TU702 (13)
- TU701 (4)
- TU702 (12)
- TU701 (6)
- TU702 (14)
- RF701 (5)
- TU702 (5)


- Q705 (8)
- TU701 (24)
- TU701 (23)
- TU701 (22)
- TU701 (19)

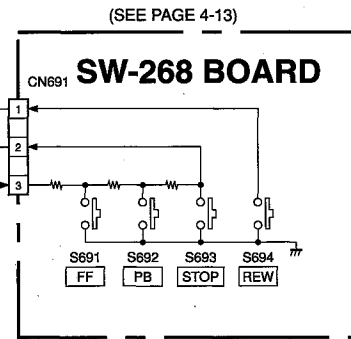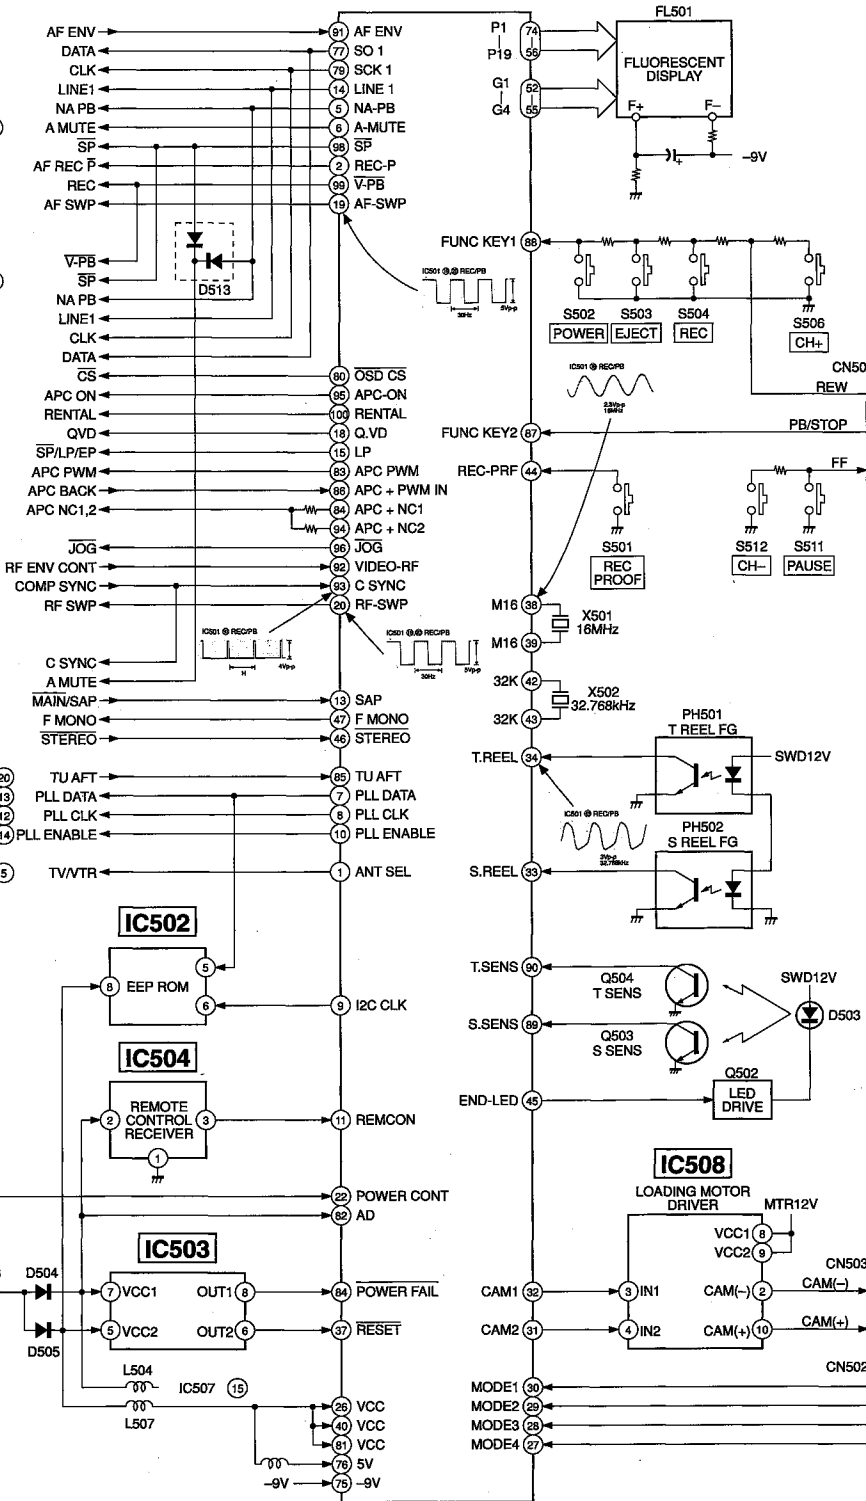


3-4. AUDIO BLOCK DIAGRAM

SLV-660HF/690HF/L6HF MODEL

RP-195 BOARD (2/2)
(SEE PAGE 4-7)

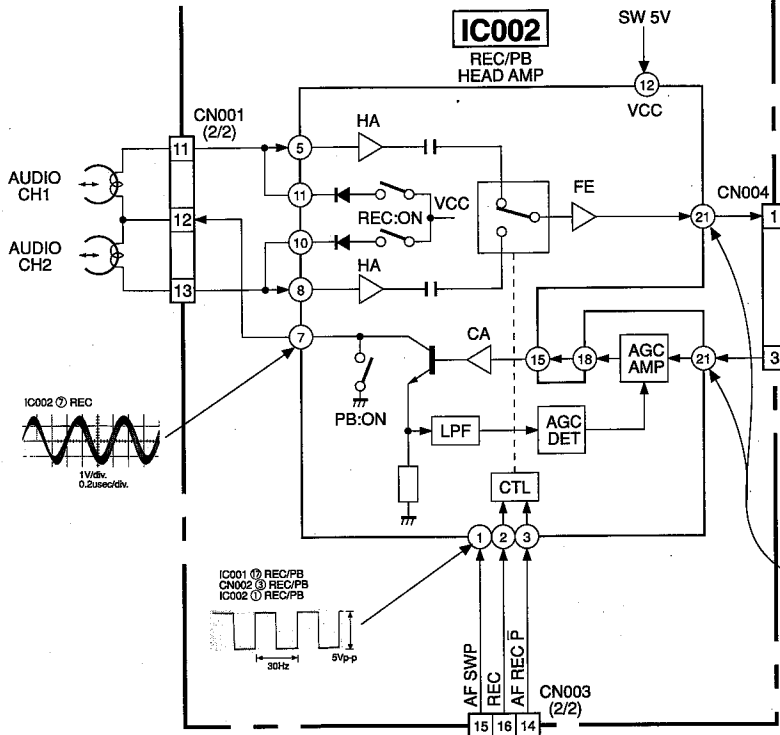


MA-248 BOARD (3/4) (SEE PAGE 4-16)

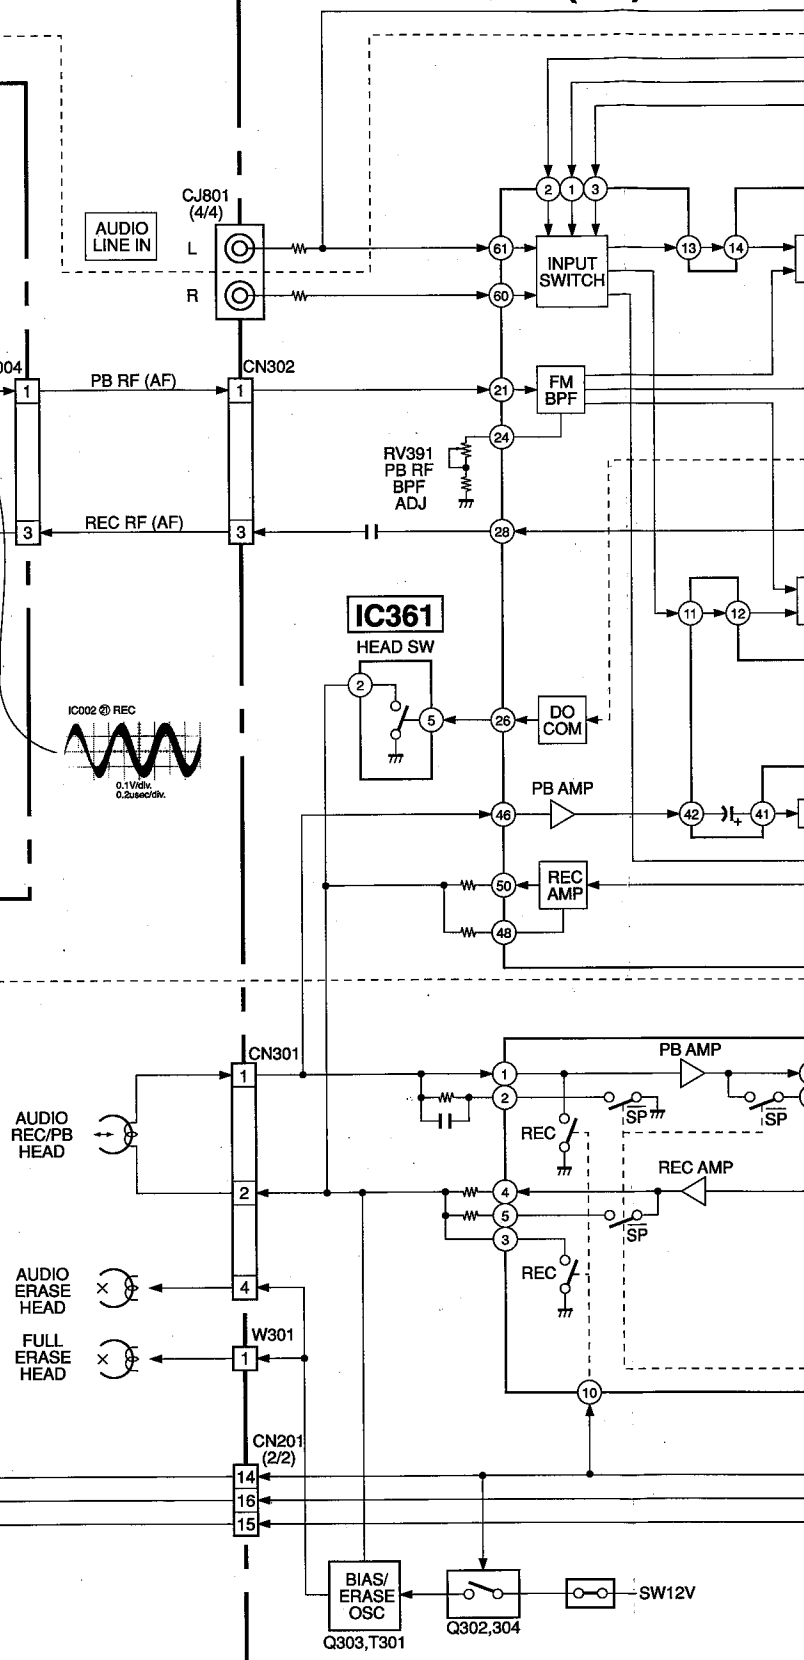





SECTION 4

PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

4-1. FRAME SCHEMATIC DIAGRAM

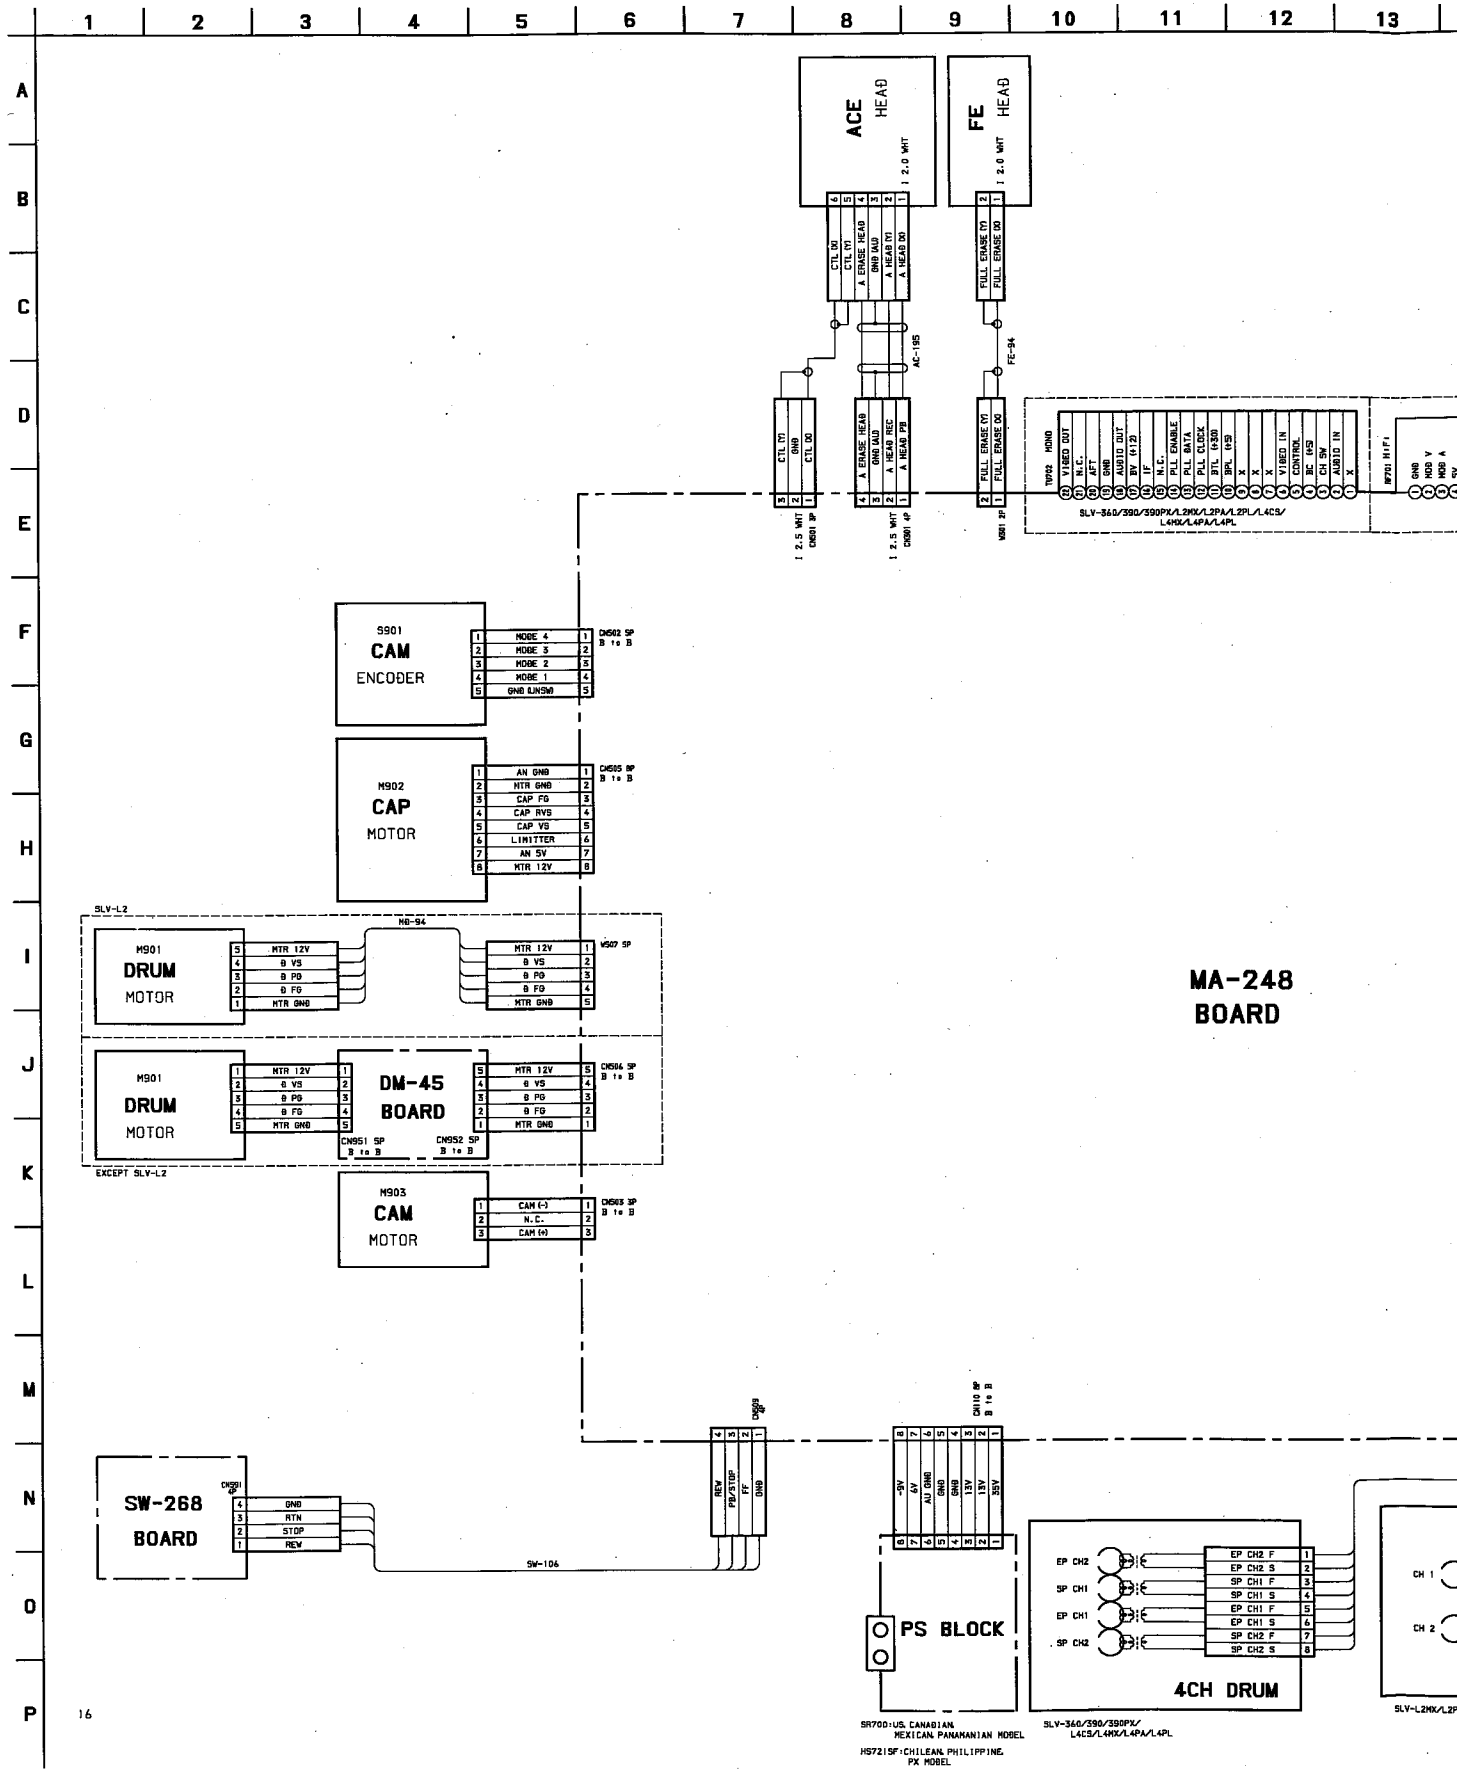

MA-248 BOARD

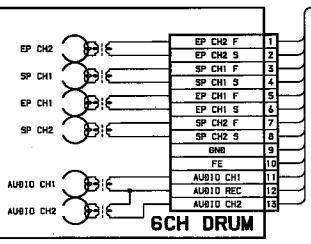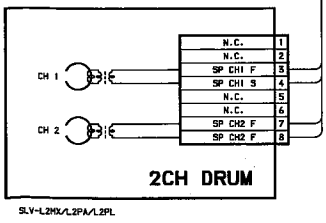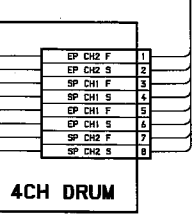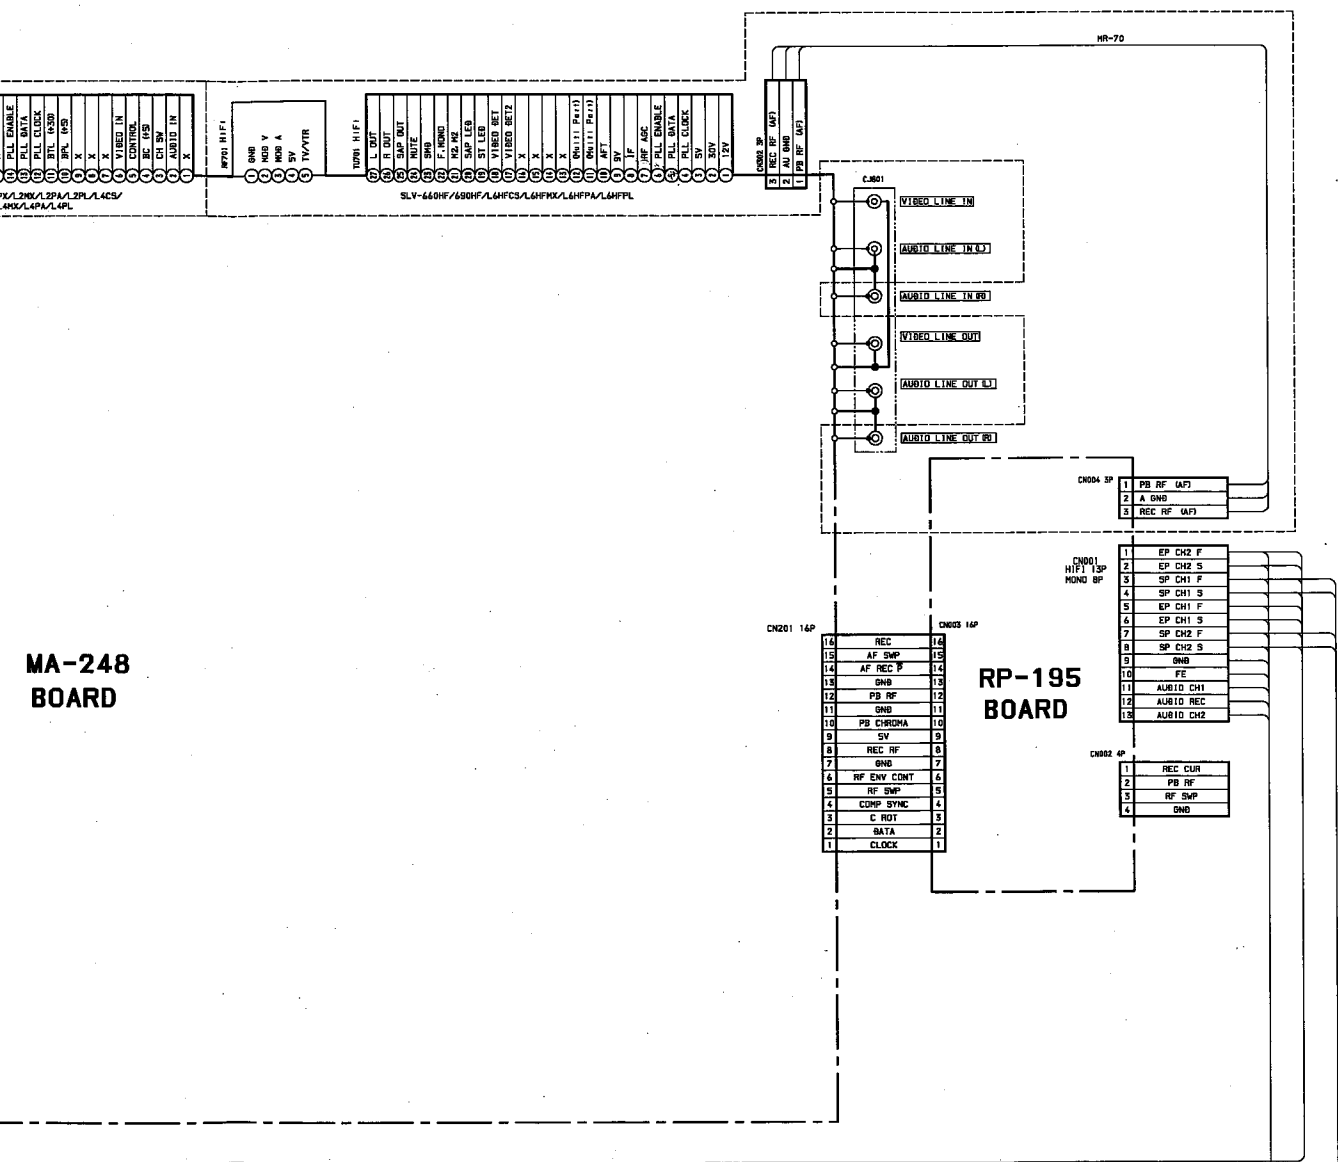




4-2. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS.

(In addition to this, the necessary note is printed in each block.)






For printed wiring boards:

-  : Through hole is omitted.
-  : Pattern from the side which enables seeing.
-  : Pattern of the rear side.*

***Caution:**

Pattern face side: (Conductor Side)	Parts on the pattern face side seen from the pattern face are indicated.
Pattern face side: (Component Side)	Parts on the parts face side seen from the parts face are indicated.



For schematic diagram:

- Caution when replacing chip parts.
New parts must be attached after removal of chip.
Be careful not to heat the minus side of tantalum capacitor, because it is damaged by the heat.
- All resistors are in ohms, 1/4 W unless otherwise noted.
Chip resistors: 1/10 W unless otherwise noted.
k Ω : 1000k Ω , M Ω : 1000K Ω .
- All capacitors are in μ F unless otherwise noted. pF: μ μ F.
50V or less are not indicated except for electrolytics and tantalums.
-  : panel designation.
-  : internal component
-  : B+Line.*
-  : B-Line.*
-  : IN/OUT direction of B line (+, -).*
- Circled numbers refer to wavforms.*
- Readings are taken with a color-bar signal input.
- Voltage are dc between ground and measurement points.*
- Readings are taken with a digital multimeter (DC10M Ω).*
- Voltage variations may be noted due to normal production tolerances.*


When indicating parts by reference number, please include the board name.

- *: indicated by the color red.

There are few cases that the part printed on this diagram isn't mounted in this model.

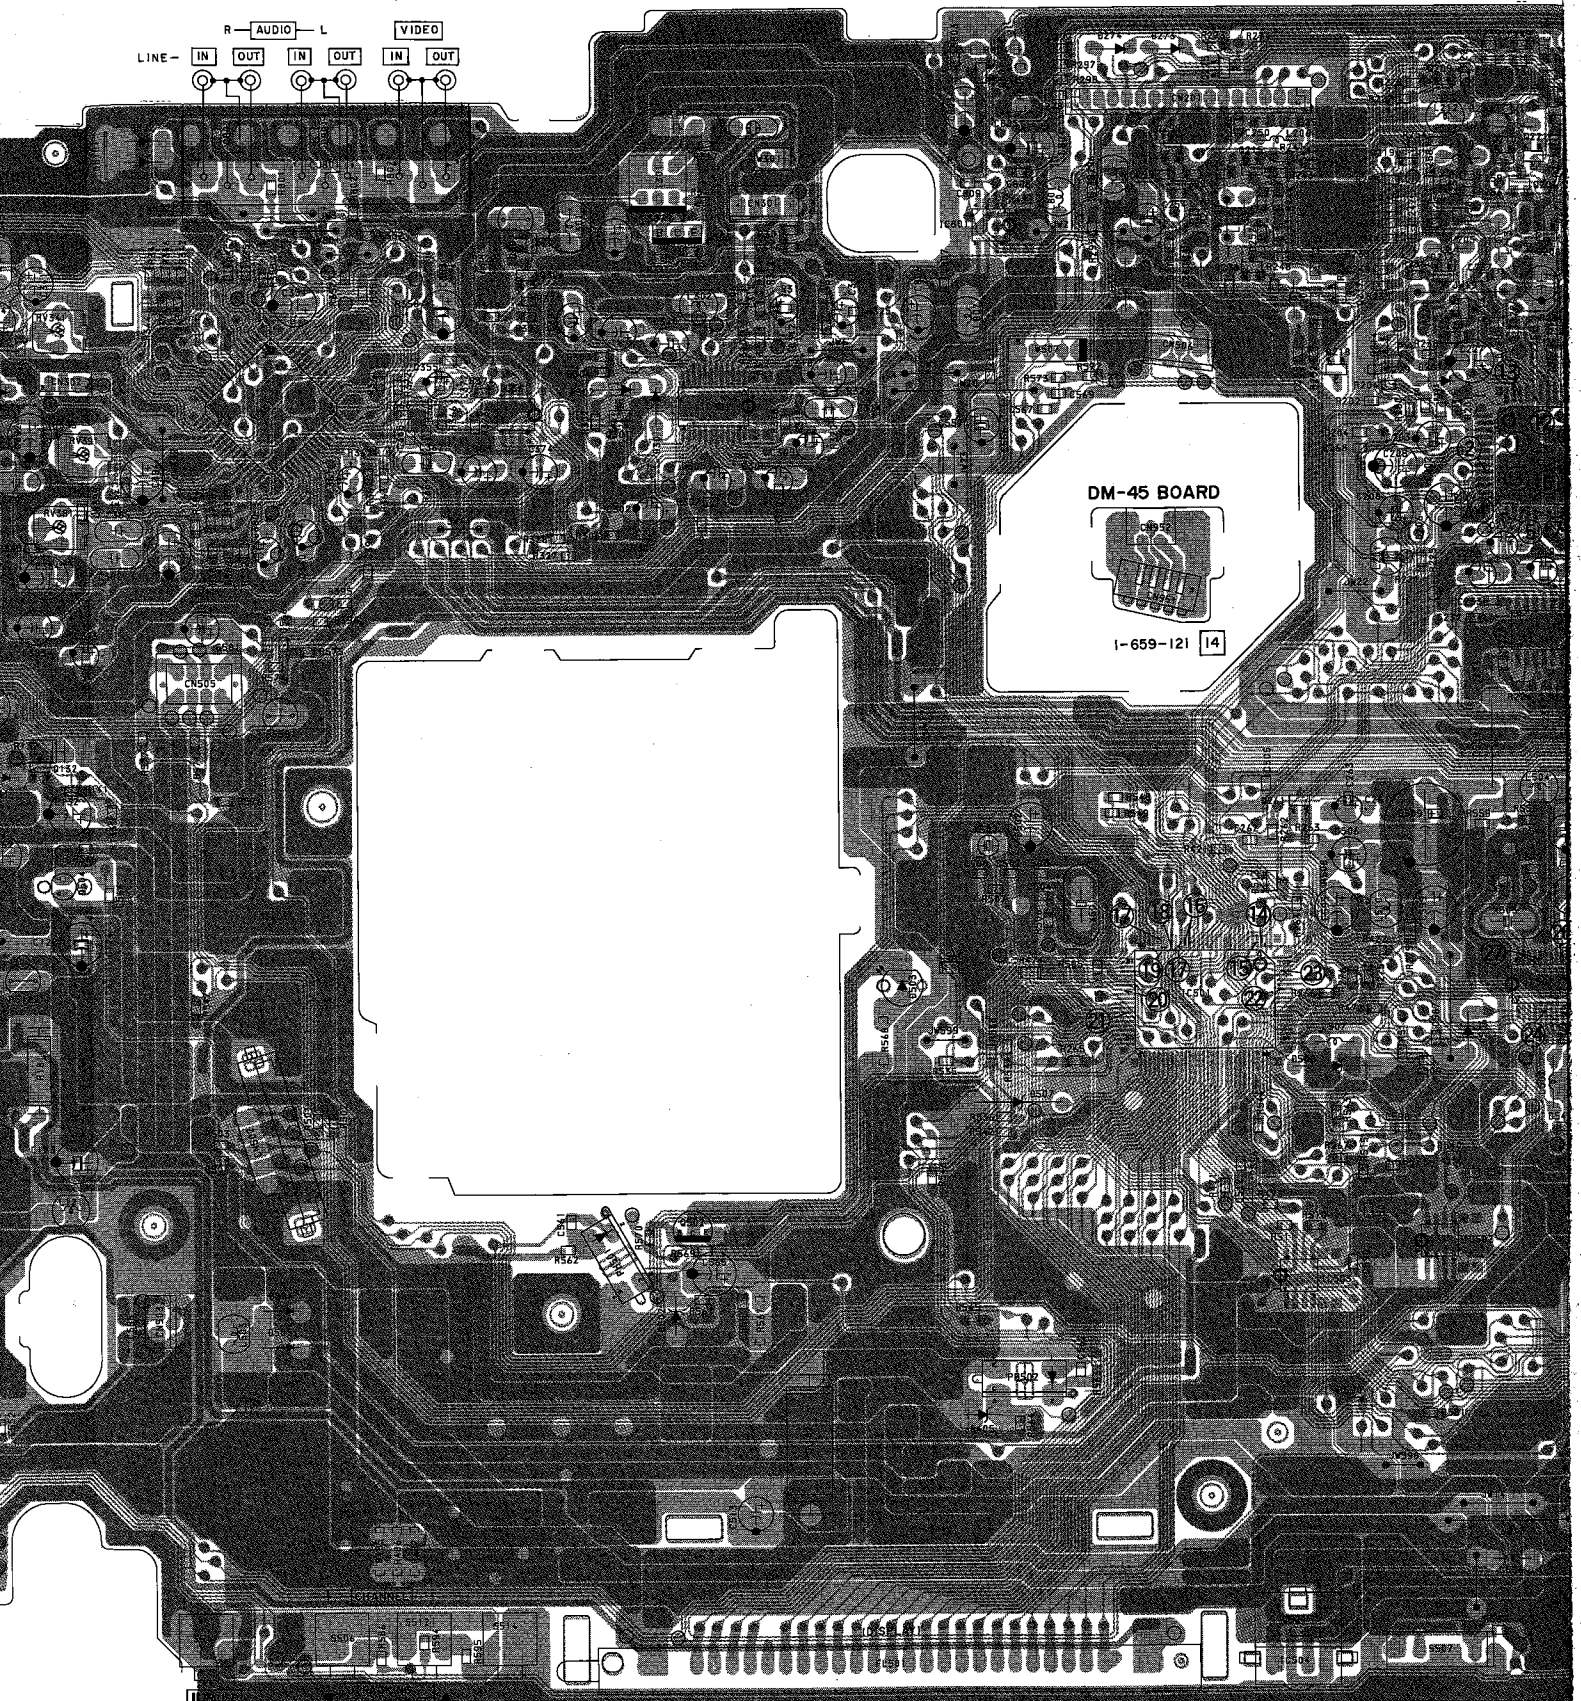


2 3 4 5 6 7 8 9 10

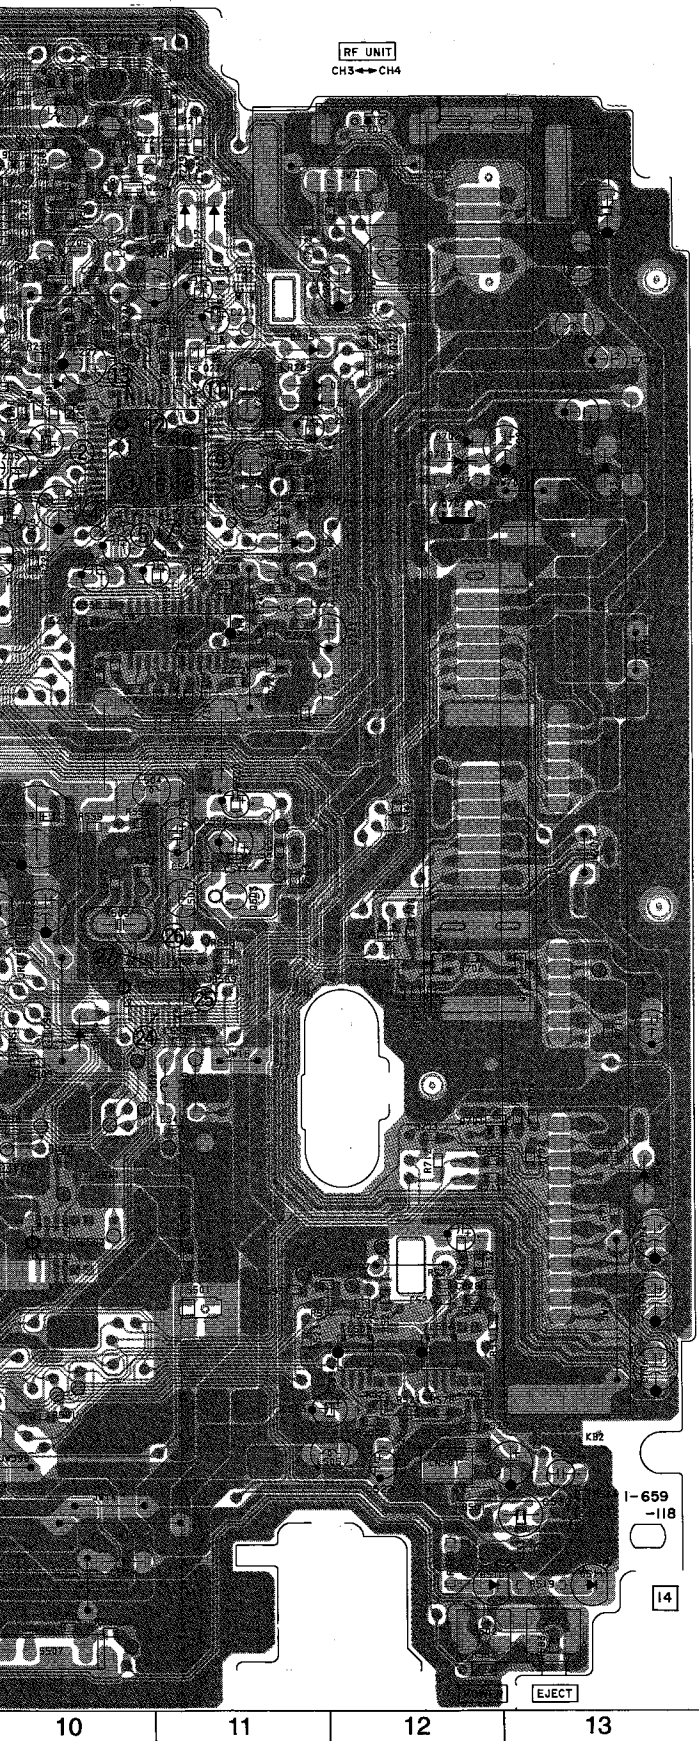


MA-248 BOARD

DM-45 BOARD

CN101	G-1	IC507	F-11	CN951	D-8
CN201	A-9	IC508	H-1	CN952	D-8
CN301	B-6	IC509	H-12		
CN302	C-2	IC801	B-7		
CN501	I-12				
CN502	G-3	Q131	E-1		
CN503	H-3	Q132	E-2		
CN505	E-3	Q161	F-1		
CN506	G-9	Q204	B-11		
CN509	J-1	Q206	D-11		
		Q208	B-11		
D131	E-2	Q209	A-10		
D161	E-1	Q210	B-10		
D162	E-1	Q211	A-11		
D201	C-10	Q212	B-10		
D202	D-11	Q213	C-10		
D204	C-11	Q214	C-10		
D205	C-12	Q215	B-9		
D301	C-5	Q216	B-9		
D302	C-5	Q217	B-9		
D391	C-2	Q218	C-9		
D503	G-7	Q219	B-10		
D504	H-3	Q220	C-11		
D505	H-3	Q261	E-9		
D506	G-10	Q299	B-8		
D507	G-8	Q301	C-5		
D508	G-9	Q302	B-5		
D510	J-12	Q303	B-6		
D513	F-9	Q304	B-5		
D701	D-12	Q391	C-1		
D702	D-12	Q392	C-2		
D703	D-13	Q502	H-6		
D704	G-13	Q503	F-11		
D801	B-3	Q504	F-2		
D802	A-3	Q701	G-12		
		Q702	D-12		
IC141	D-1	Q703	D-13		
IC201	D-11	Q704	F-12		
IC202	E-11	Q705	F-12		
IC301	C-6	Q801	A-7		
IC351	C-4				
IC361	C-6	RV341	C-2		
IC501	G-9	RV381	D-2		
IC502	H-10	RV391	C-2		
IC503	H-9				
IC504	J-9				
IC506	H-12				

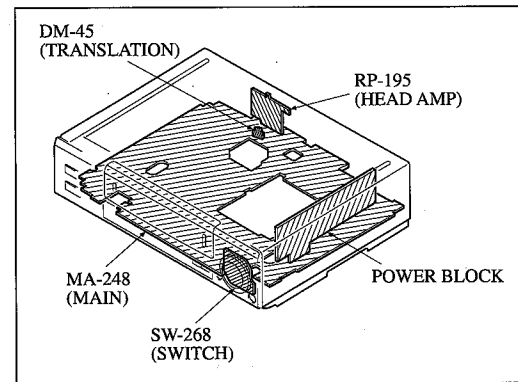

Playing a tape

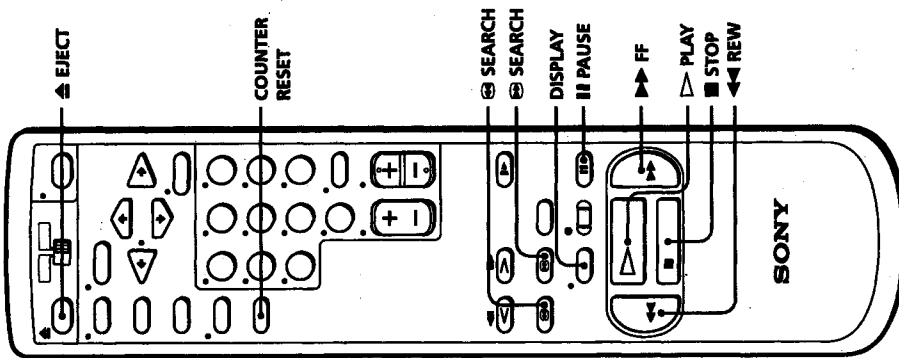

1 Turn on your TV and set it to the video channel.

2 Insert a tape.
The VCR turns on and starts playing automatically if you insert a tape with its safety tab removed.



3



Press **▶** **PLAY**.


When the tape reaches the end, it will rewind automatically.

Additional tasks

To	Press
Stop play	■ STOP
Pause play	▬ PAUSE
Resume play after pause	▬ PAUSE or ▶ PLAY
Search forward	▶▶ FF or ⊕ SEARCH during playback
Search backward	◀◀ REW or ⊖ SEARCH during playback
Fast-forward the tape	▶▶ FF during stop
Rewind the tape	◀◀ REW during stop
Eject the tape	⬆ EJECT

To use the time counter

At the point on the tape that you want to find later, press **COUNTER RESET**. The counter in the display window resets to "0H00M00S." Search for the point afterwards by referring to the counter.




To display the counter on the TV screen, press **DISPLAY**.

Notes

- Tapes recorded in the LP mode on other VCRs can be played back on this VCR but the picture quality cannot be guaranteed.
- The counter resets to "0H00M00S" whenever a tape is reinserted.
- The counter stops counting when it comes to a portion with no recording.

Recording TV programs

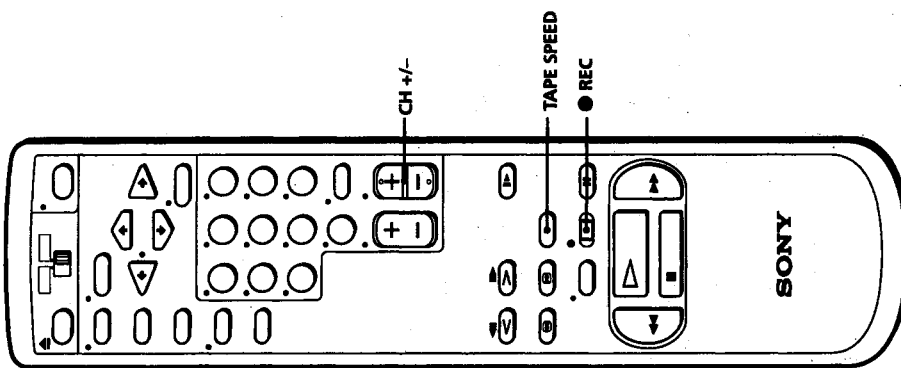

- 1 Turn on your TV and set it to the video channel.
To record from a cable box, turn it on.

- 2 Insert a tape with its safety tab in place.

- 3 Press CH +/- to select the channel you want to record.

- 4 Press TAPE SPEED to select the tape speed, SP or EP. EP provides recording time three times as long as SP, however, SP produces better picture and audio quality.


- 5 Press REC to start recording.

To stop recording

Press ■ STOP.

To check the remaining tape length

Press DISPLAY during playback or recording. The white bar indicates the approximate length of tape remaining.

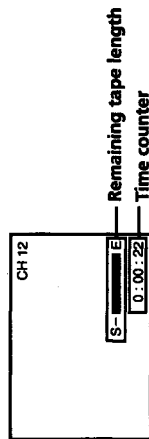


To watch another TV program while recording

- 1 Press TV/VTR to turn off the VTR indicator in the display window.
- 2 If the TV is connected to the VCR's LINE OUT jacks, set the TV to TV input; if not, skip this step.
- 3 Select another channel on the TV.

continued

Playing/searching at various speeds

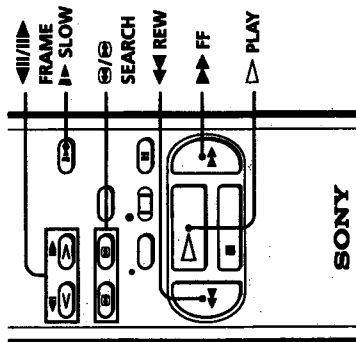

Playback options	Operation
Fast-forward/rewind	During stop, press FF or REW .
View the picture during fast-forward or rewind	During fast-forward, keep pressing FF . During rewind, keep pressing REW .
Play at high speed	During playback or pause, press SEARCH or SEARCH . To change direction, press FRAME or FRAME .
Play in slow motion	During playback or pause, press SLOW . To change direction, press FRAME or FRAME .
Play frame by frame	During pause, press FRAME or FRAME . Hold the button down to play one frame each second.
Play in reverse	During playback, press FRAME .
Rewind and start play	During stop, press PLAY on the VCR while pressing REW on the VCR.

To resume normal playback

Press **PLAY**.

Tip


- Adjust the picture using the **TRACKING** / **▲** (**STILL ADJUST**) buttons on the VCR if:
 - Streaks appear while playing in slow motion.
 - The picture shakes while pausing.

Notes

- The sound is muted during these operations.
- Tapes recorded in the LP mode on other VCRs can be played back on this VCR but the picture quality cannot be guaranteed.
- The picture may have white noise:
 - when playing at high speed in reverse
 - when playing in reverse slow motion
 - when playing in reverse.

Recording TV programs using the quick timer

After starting recording in the normal way, you can have the VCR stop recording automatically after a specified duration.

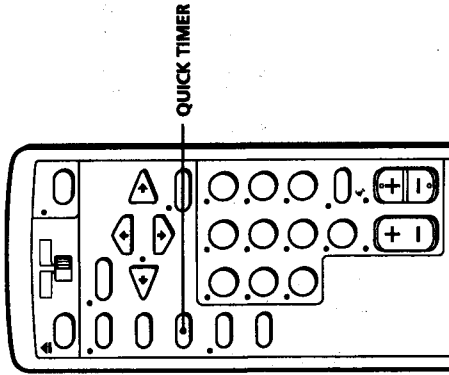


1 While recording, press **QUICK TIMER** once.



2 Press **QUICK TIMER** repeatedly to set the duration.

Each press advances the time in increments of 30 minutes.



The duration decreases minute by minute to 0:00, then the VCR stops recording and turns off automatically.

To extend the duration

Press **QUICK TIMER** repeatedly to set to the new duration.


To stop the VCR while recording

Press **STOP**.

Tip

- You can also set the quick timer and start recording during stop mode.

Checking/ changing/ cancelling timer settings

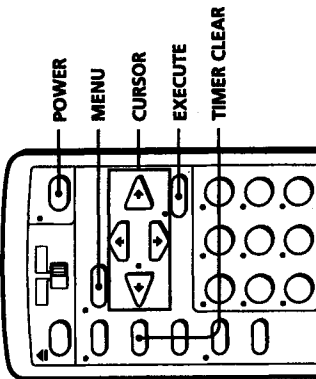

Before you start...

- Turn on your TV and set it to the video channel.

- 1 Press **POWER** to turn on the VCR.
- 2 Press **MENU** and select **TIMER SET/CHECK**:
 - If you want to change a setting, go on to the next step.
 - If you do not need to change the settings, press **EXECUTE**, then turn off the VCR to return to recording standby.

TIMER SET / CHECK	10/16 WE
DATE	TH 10/16 WE
START STOP CH	1 11:30M 11:15M 50P
1	8/25 FR 11:30M 11:15M 50P
MO - SA	1:00M 3:00M 4:30M 4:30M
EVERY/SU	1:55M 1:30M 4:2P

- 3 Press **CURSOR** \uparrow/\downarrow to select the setting you want to change or cancel:
 - To change the setting, press **CURSOR** \leftarrow/\rightarrow to flash the item you want to change, and press **CURSOR** \uparrow/\downarrow to reset it. Then, press **CURSOR** \rightarrow repeatedly until the cursor (\blacktriangleright) appears at the top of the line.
 - To cancel the setting, press **TIMER CLEAR**.
- 4 Press **EXECUTE**.
If any settings remain, turn off the VCR to return to recording standby.

When the timer settings overlap

The program that starts first has priority and the second program starts recording only after the first program has finished. If the programs start at the same time, the program listed first in the menu has priority.



Recording stereo and bilingual programs

Recording stereo programs

This VCR automatically receives and records stereo programs. When a stereo program is received, the **STEREO** indicator lights up. If there is noise in the stereo program, set **AUTO STEREO** in the **ADVANCED OPTIONS** menu to **OFF**. The sound will be recorded in monaural (on both hi-fi and normal audio tracks) but with less noise. For details, see page 36.

Recording bilingual programs

Normally, this VCR records only the main sound on both hi-fi and normal audio tracks. To record SAP (Second Audio Program) sound on the normal audio track, set **NORMAL AUDIO** in the **ADVANCED OPTIONS** menu to **SAP**. For details, see page 36.

Selecting the sound while recording/playing

Press **AUDIO MONITOR** to select the desired sound. (The sound being recorded will not change.)

Stereo program

To listen to (when playback)	Indicator on the TV screen
Stereo	STEREO
Left channel	L
Right channel	R
Monaural sound on the normal audio track*	No indicator appears

* Usually the mixed sound of left and right channels

Bilingual program

To listen to	Indicator in the display window
Main	No indicator appears
SAP (when recorded)	SAP


continued

Adjusting the picture

Adjusting the tracking

Although the VCR automatically adjusts the tracking when playing a tape (the AUTO TRACKING indicator flashes in the display window, then lights steadily), distortion may occur if the tape was recorded in poor condition. In this case, manually adjust the tracking.

Press the TRACKING ∇/\blacktriangle (STILL ADJUST) buttons on the VCR to display the tracking meter. The distortion should disappear as you press one of the two buttons. To resume automatic tracking adjustment, eject the tape.

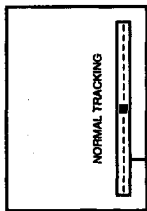

Tracking meter

About Adaptive Picture Control (APC)

Adaptive Picture Control (APC) automatically improves recording and playback quality by adjusting the VCR to the condition of the video heads and tape. To maintain better picture quality, we recommend that you set APC to ON in the ADVANCED OPTIONS menu (with the APC indicator in the display window lit).

APC playback

The APC function automatically works on all types of tapes, including rental tapes and tapes that were not recorded with APC.

APC recording

Whenever you insert a tape and first start recording, the VCR adjusts to the tape using the APC function (the APC indicator flashes rapidly). This adjustment is retained until the tape is ejected.

Note


- There is a delay of a few seconds before the VCR actually starts recording while the VCR analyzes the tape. To avoid the delay, first set the VCR to recording pause (the APC indicator flashes slowly) and press \bullet REC to have the VCR analyze the tape. After the APC indicator stops flashing, press \blacksquare PAUSE to start recording immediately. If you press \blacksquare PAUSE before the APC indicator stops flashing, the APC function is cancelled.

Recording TV programs using the timer

You can preset up to eight programs at a time.

Before you start...

- Check that the VCR clock is set to the correct time.
- Turn on your TV and set it to the video channel. When using a cable box, turn it on.
- Insert a tape with its safety tab in place. Make sure the tape is longer than the total recording time.

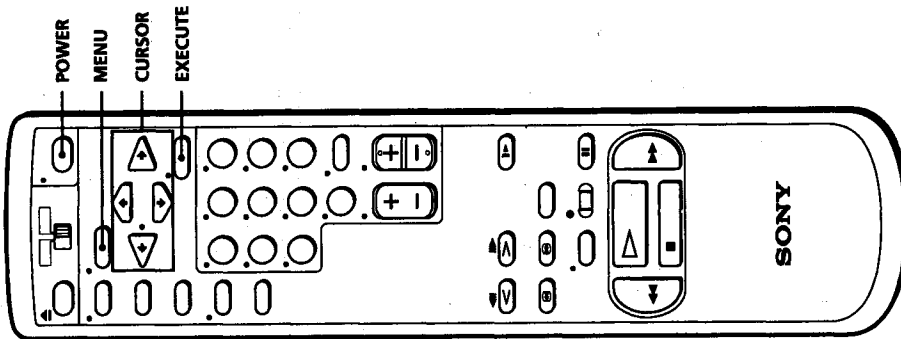

- Press MENU and select TIMER SET / CHECK, then press EXECUTE.

TIMER SET / CHECK	10/16 WE
DATE	START STOP CH
1	---
2	---
3	---
4	---
5	---
6	---
7	---
8	---

continued

Basic Operations

Recording TV programs using the timer (continued)

2 Set the date, start and stop times, channel number and tape speed:

1 Press **CURSOR** \rightarrow to flash each item in turn.

2 Press **CURSOR** \uparrow/\downarrow to set each item.

To correct a setting, press **CURSOR** \leftarrow to return to that setting and reset.

To record the same program every day or the same day every week, press **CURSOR** \downarrow while the date is flashing. For details, see "Daily/weekly recording" on page 29.

To record from a source connected to the LINE IN jacks, press **CURSOR** \uparrow/\downarrow to display "L" in the "CH" position.

TIMER SET / CHECK			10/16 WE	
DATE	START	STOP	CH	SP
--/--	--:--	--:--	--	--
--/--	--:--	--:--	--	--
--/--	--:--	--:--	--	--
--/--	--:--	--:--	--	--
--/--	--:--	--:--	--	--
--/--	--:--	--:--	--	--
--/--	--:--	--:--	--	--

3 Press **CURSOR** \rightarrow to confirm the setting.

The cursor (\blacktriangleright) appears at the top of the line. To enter another setting, move the cursor to the next line and repeat step 2.

4 **EXECUTE** Press **EXECUTE**.

5 Press **POWER** to turn off the VCR.

The **TIMER** indicator on the VCR lights up and the VCR stands by for recording. When using a cable box, leave it on.

To stop recording

To stop the VCR while recording, press \blacksquare **STOP**.

To use the VCR after setting the timer

To use the VCR before a timer recording begins, just press **POWER**. The **TIMER** indicator turns off and the VCR switches on. Remember to press **POWER** to reset the VCR after using the VCR.

You can also do the following tasks while the VCR is recording:

- Reset the counter.
- Display tape information on the TV screen.
- Check the timer settings.
- Watch another TV program.

Daily/weekly recording

In step 2 above, press **CURSOR** \downarrow to select the recording pattern. Each time you press **CURSOR** \downarrow , the indication changes as shown below.

the current date \rightarrow SU-SA \rightarrow MO-SA \rightarrow MO-FR \rightarrow EVERY SA \rightarrow \rightarrow
EVERY MO \rightarrow EVERY SU \rightarrow 1 month later \rightarrow (cycles backward) \rightarrow the
current date

Tips

- To set the channel, you can also use the CH+/- or number buttons.
- To set the tape speed, you can also use **TAPE SPEED**.

Changing menu options

- 1 Press MENU and select **ADVANCED OPTIONS**.
- 2 Press CURSOR \uparrow/\downarrow to select the option to change, then press CURSOR \leftarrow/\rightarrow to change the setting.
- 3 Press EXECUTE to return to the original screen.

ADVANCED OPTIONS	
▶ AUTO STEREO	• ON OFF
NORMAL AUDIO	• MAIN SAP OFF
APC	• ON OFF


Menu choices

Initial settings are indicated in bold print.

Menu option	Set this option to
AUTO STEREO	ON to receive stereo programs. OFF to reduce noise. The sound changes to monaural.
NORMAL AUDIO	MAIN to record the main sound on both hi-fi and normal audio tracks. SAP to record the SAP (Second Audio Program) sound on the normal audio track. The main sound is recorded on the hi-fi audio track.
APC	ON to switch on the APC (Adaptive Picture Control) function and improve picture quality. OFF to switch off APC.

Editing with another VCR

How to hook up to record on this VCR

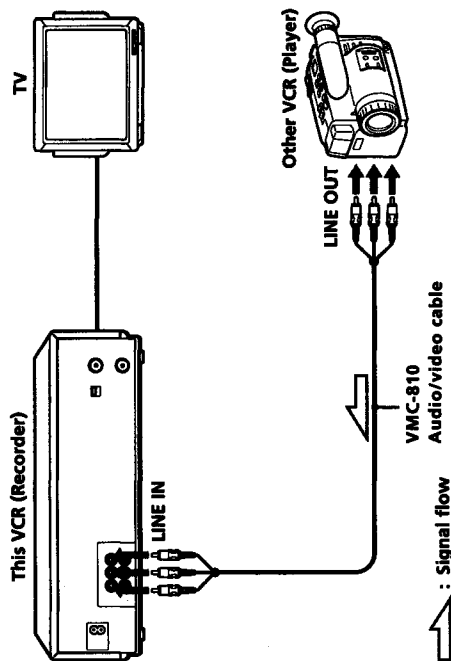

Notes

- Make sure you connect the plugs to jacks of the same color.
- If the other VCR is a monaural type, use a connecting cable like a Sony VMC-910MS.
- If you connected this VCR to both the LINE IN and LINE OUT jacks of the other VCR, select the input correctly to prevent a humming noise.

continued


Editing with another VCR (continued)

Operation

(when recording on this VCR)

Before you start editing

- Turn on your TV and set it to the video channel.
- Press CH +/- to display "L" in the display window.
- Press TAPE SPEED on the remote commander to select the tape speed, SP or EP.

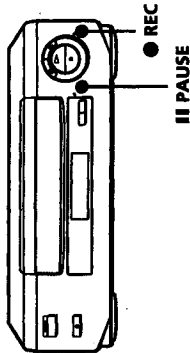

- 1 Insert a source tape with its safety tab removed into the other (playback) VCR. Search for the point to start playback and set it to playback pause.
- 2 Insert a tape with its safety tab in place into this (recording) VCR. Search for the point to start recording and press PAUSE.
- 3 Press REC on this VCR and set it to recording pause.
- 4 To start editing, press the PAUSE buttons on both VCRs at the same time.

To stop editing

Press the STOP buttons on both VCRs.


Note

- If you start recording following the procedure above, the VCR won't start recording with the APC function. To record a tape with the APC function, press REC again during recording pause in step 3 so that the VCR analyzes the tape. Then when you start recording in step 4, press PAUSE immediately after the APC indicator stops flashing. If you press PAUSE before the APC indicator stops flashing, the APC function is canceled.

General setup information

Setting the RF unit

When connecting the VCR to the TV using only the antenna cable, you must set the RF UNIT switch on the rear of the VCR so that the TV can receive the correct signal from the VCR.

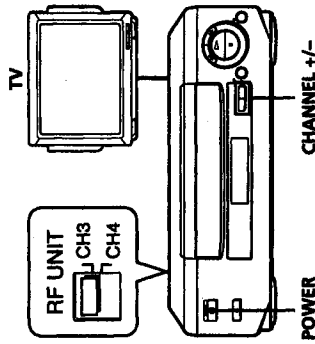

- 1 Set the RF UNIT switch on the rear of the VCR to CH3 or CH4, whichever channel is not used in your area. If both are used, set the switch to either channel.
- 2 Press POWER to turn on the VCR.
- 3 Press TV/VTR on the remote commander to turn on the VTR indicator in the VCR's display window.
- 4 Press CHANNEL +/- to display a channel number in the display window. Select an active channel number in your area.
- 5 Turn on your TV and set it to the channel you selected in step 1 (channel 3 or 4).

The selected TV channel broadcast appears on the TV screen. If the channels change when you press CHANNEL +/-, you have made the correct setting.


Whenever you use the VCR, set the TV to the channel selected in step 1.

continued

Index to parts and controls


Refer to the pages indicated in parentheses () for details.

Front panel

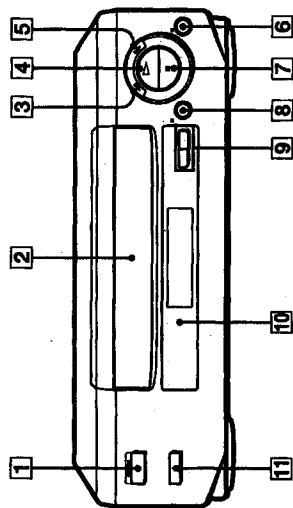


- 1 POWER switch/indicator
- 2 Tape compartment
- 3 ◀◀ REW button (23, 30)
- 4 ▷ PLAY button (23)
- 5 ▶▶ FF button (23, 30)
- 6 ● REC button (25)
- 7 ■ STOP button (23)
- 8 ■ PAUSE button (23)
- 9 CHANNEL +/-/TRACKING ▼/▲ (STILL ADJUST) buttons (24, 35)
- 10 Remote sensor (5)
- 11 ▲ EJECT button (23)

Display window

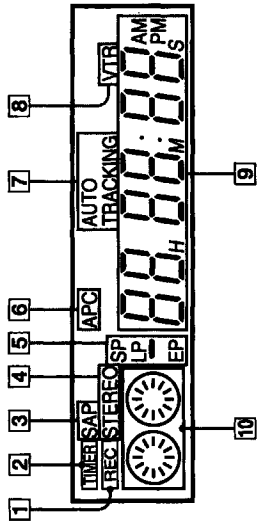

- 1 REC (recording) indicator
- 2 TIMER indicator (28)
- 3 SAP indicator (33)
- 4 STEREO indicator (33)
- 5 Tape speed indicator (25)
- 6 APC indicator (35)
- 7 AUTO TRACKING indicator (35)
- 8 VTR indicator (25)
- 9 Time counter/clock/line/channel indicator (23, 25)
- 10 Tape indicator


Rear panel

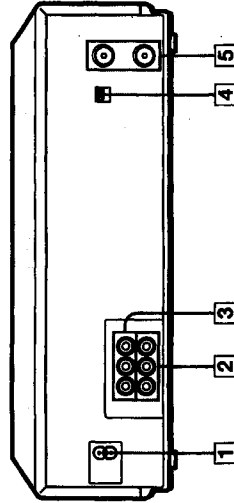

- 1 AC IN connector
- 2 LINE OUT AUDIO L/R/VIDEO jacks (7)
- 3 LINE IN AUDIO L/R/VIDEO jacks (37)
- 4 RF UNIT switch (39)
- 5 VHF/UHF IN/OUT connectors (8, 10, 12, 14)


continued

ARD (3/4) (SEE PAGE 4-16)

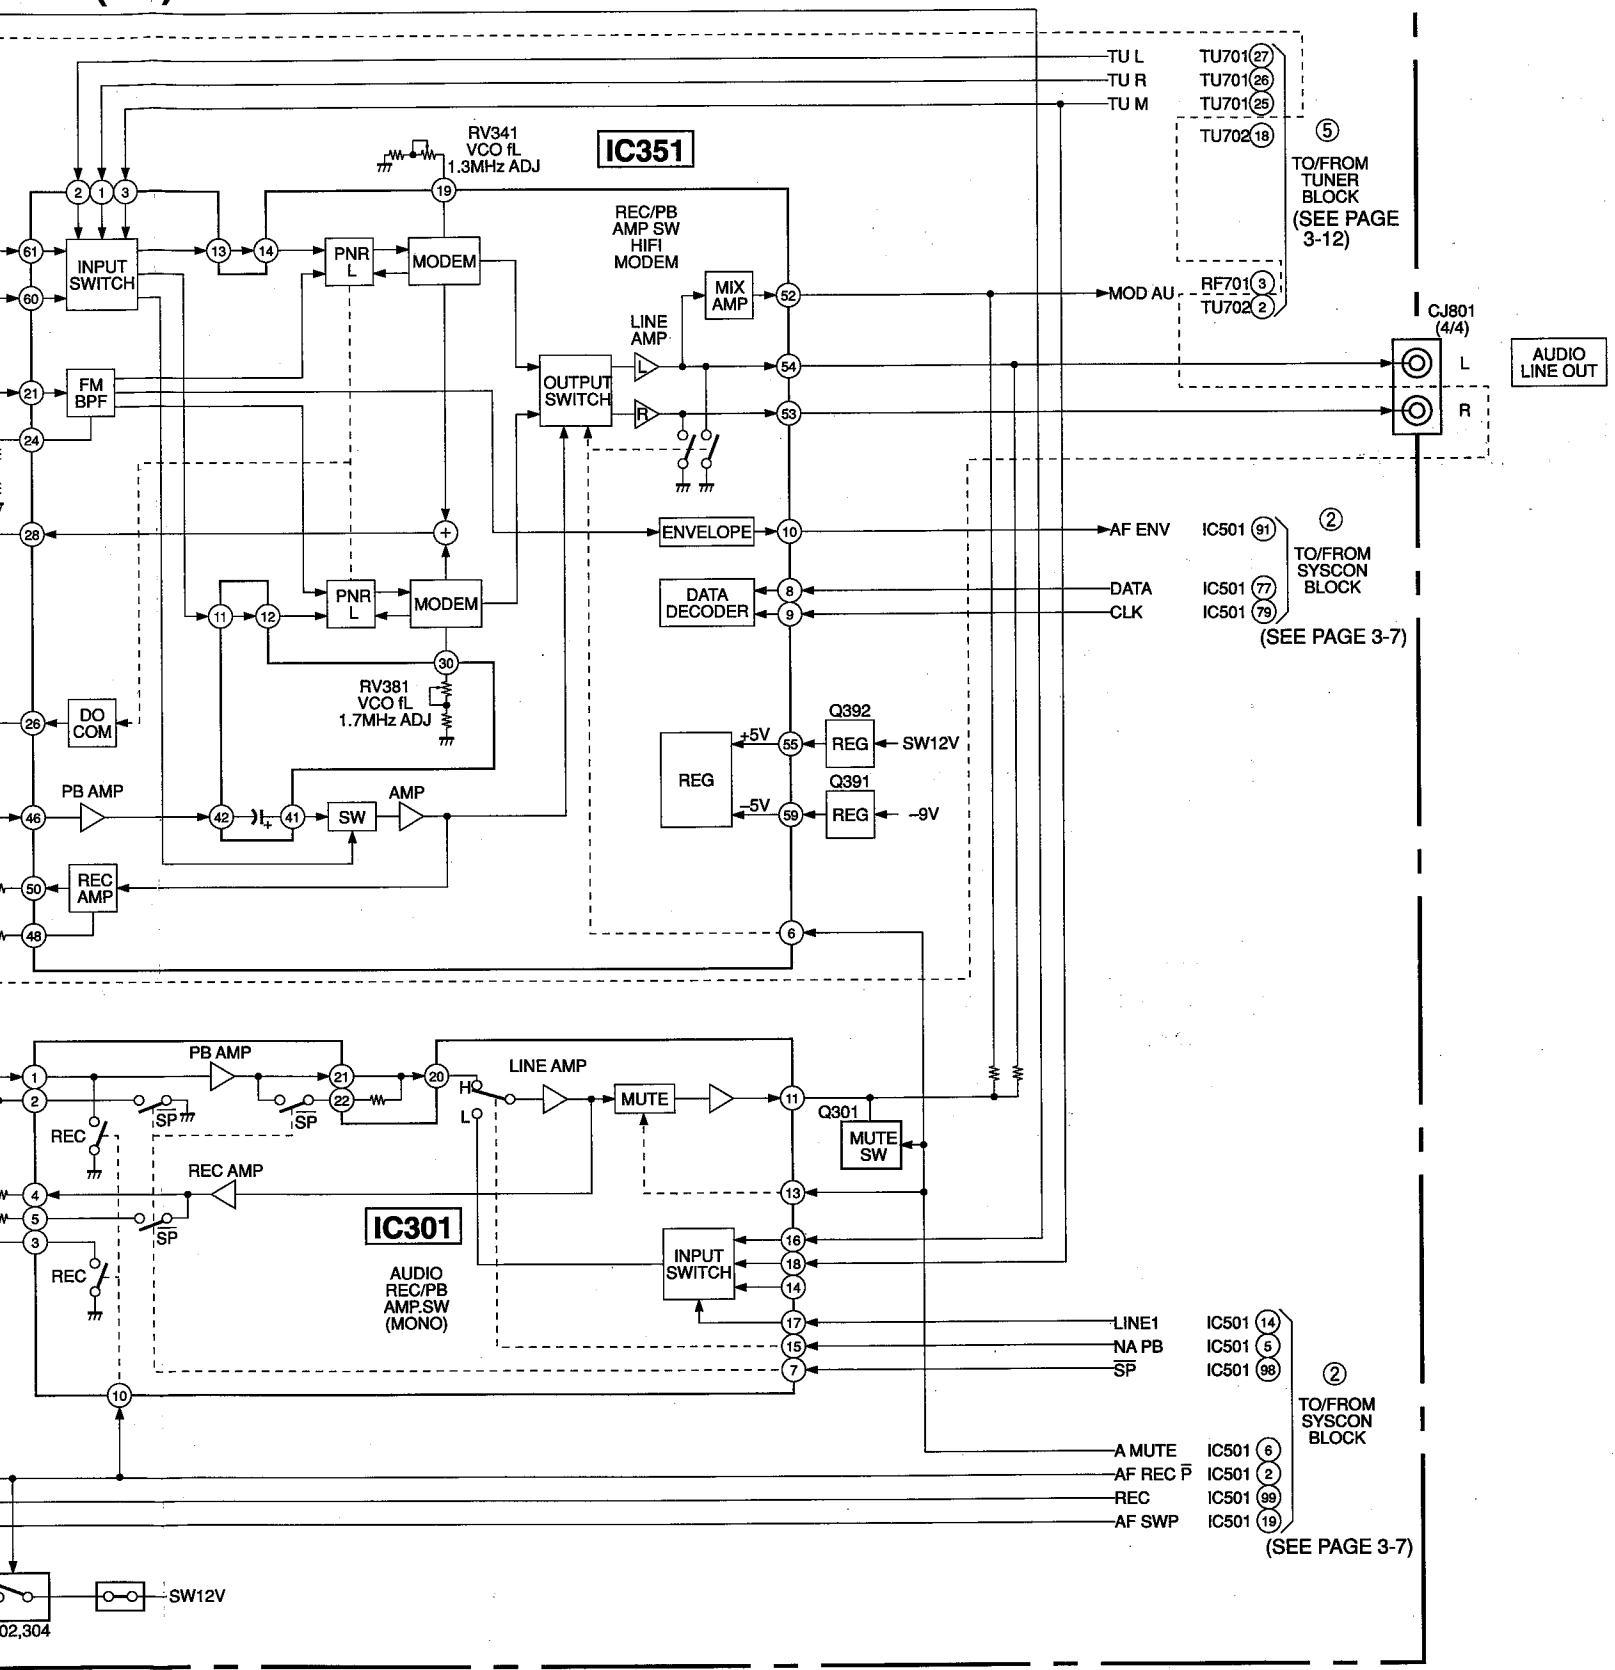


3-5. TUNER BLOCK DIAGRAM

MA-248 BOARD (4/4)

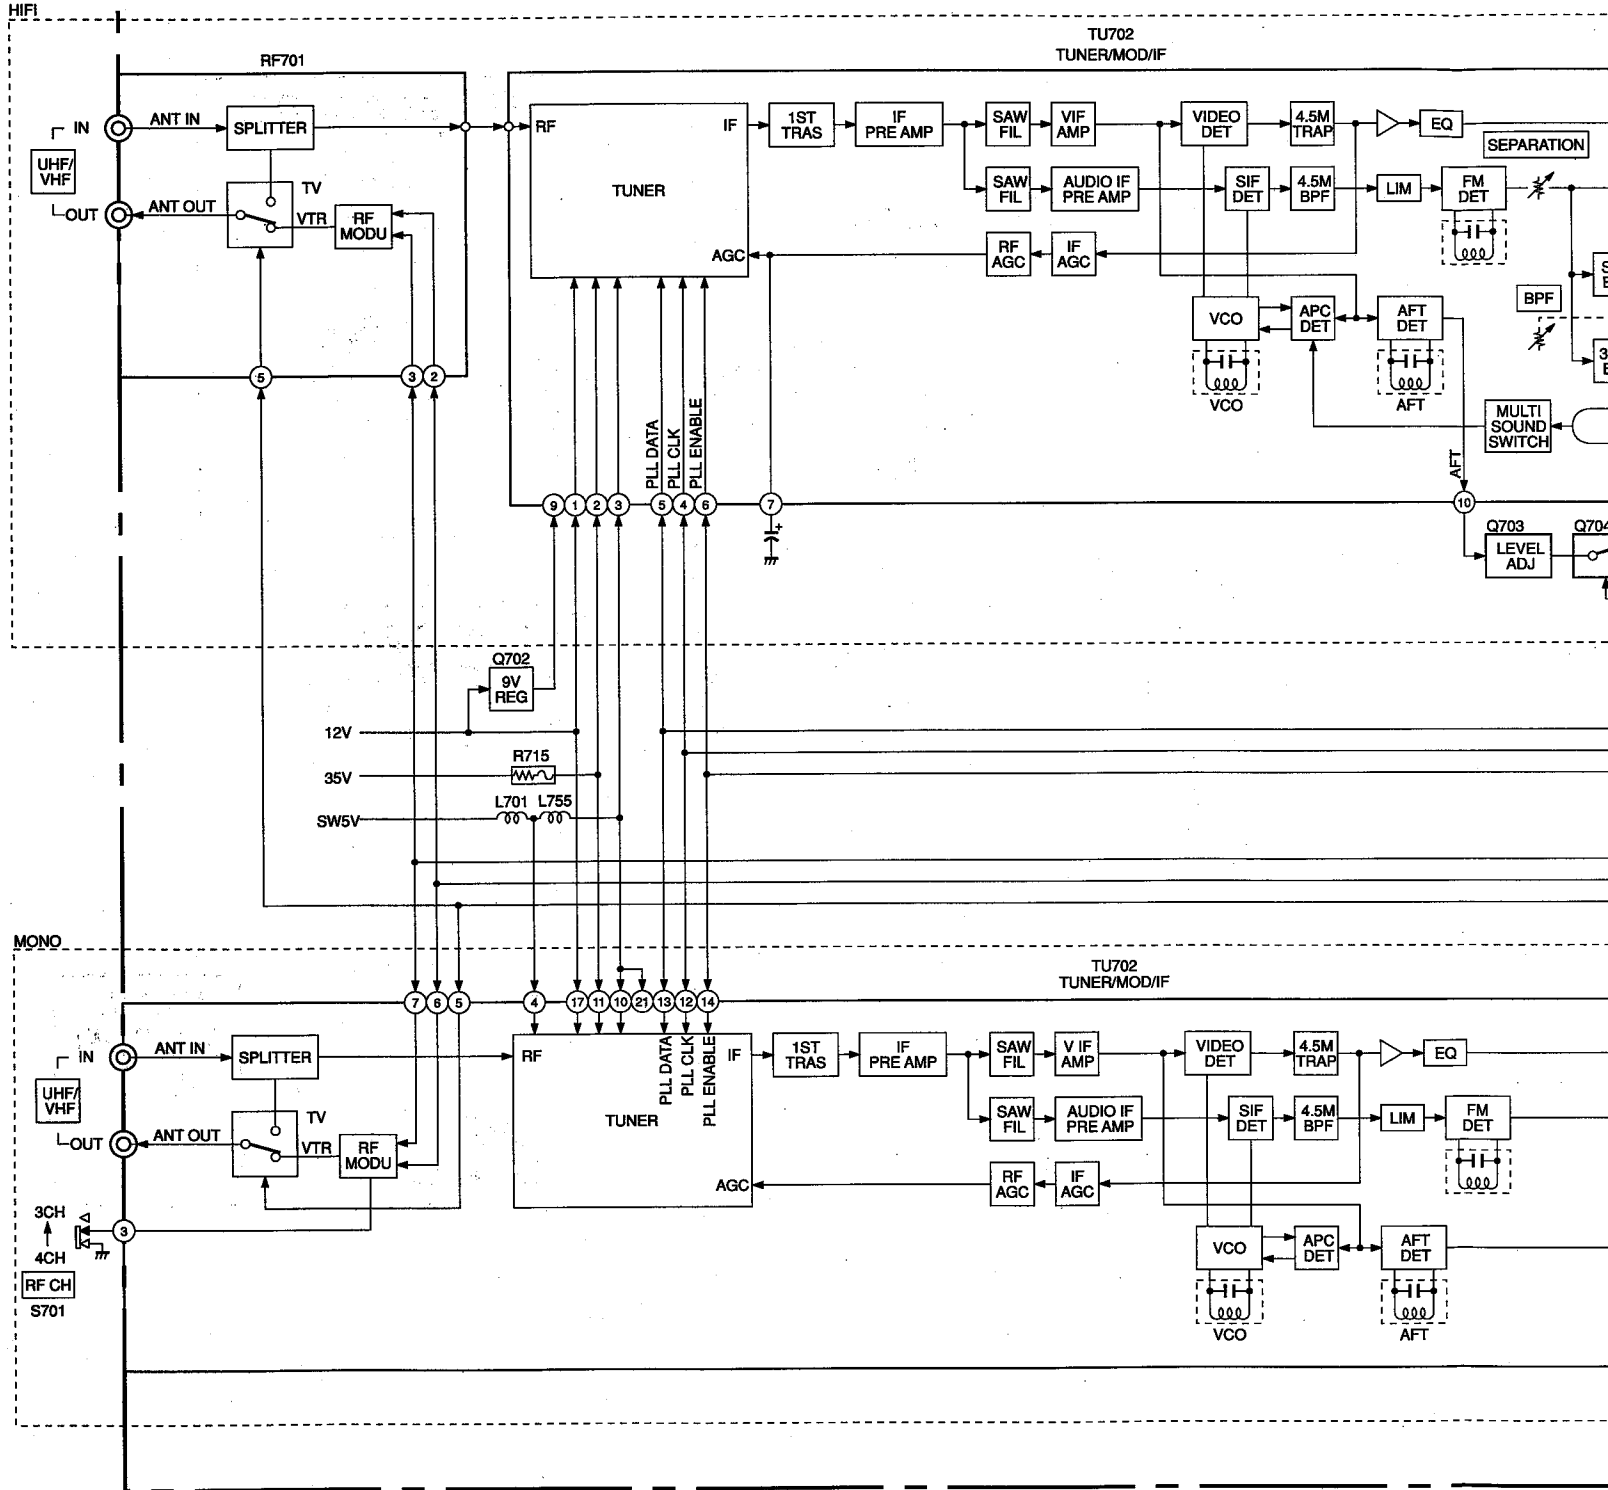

**SLV-360/390/390PX/660HF/690HF/L2MX/L2PA/L2PL/L4CS/
L4MX/L4PA/L4PL/L6HFCS/L6HFMX/L6HFPA/L6HFPL**

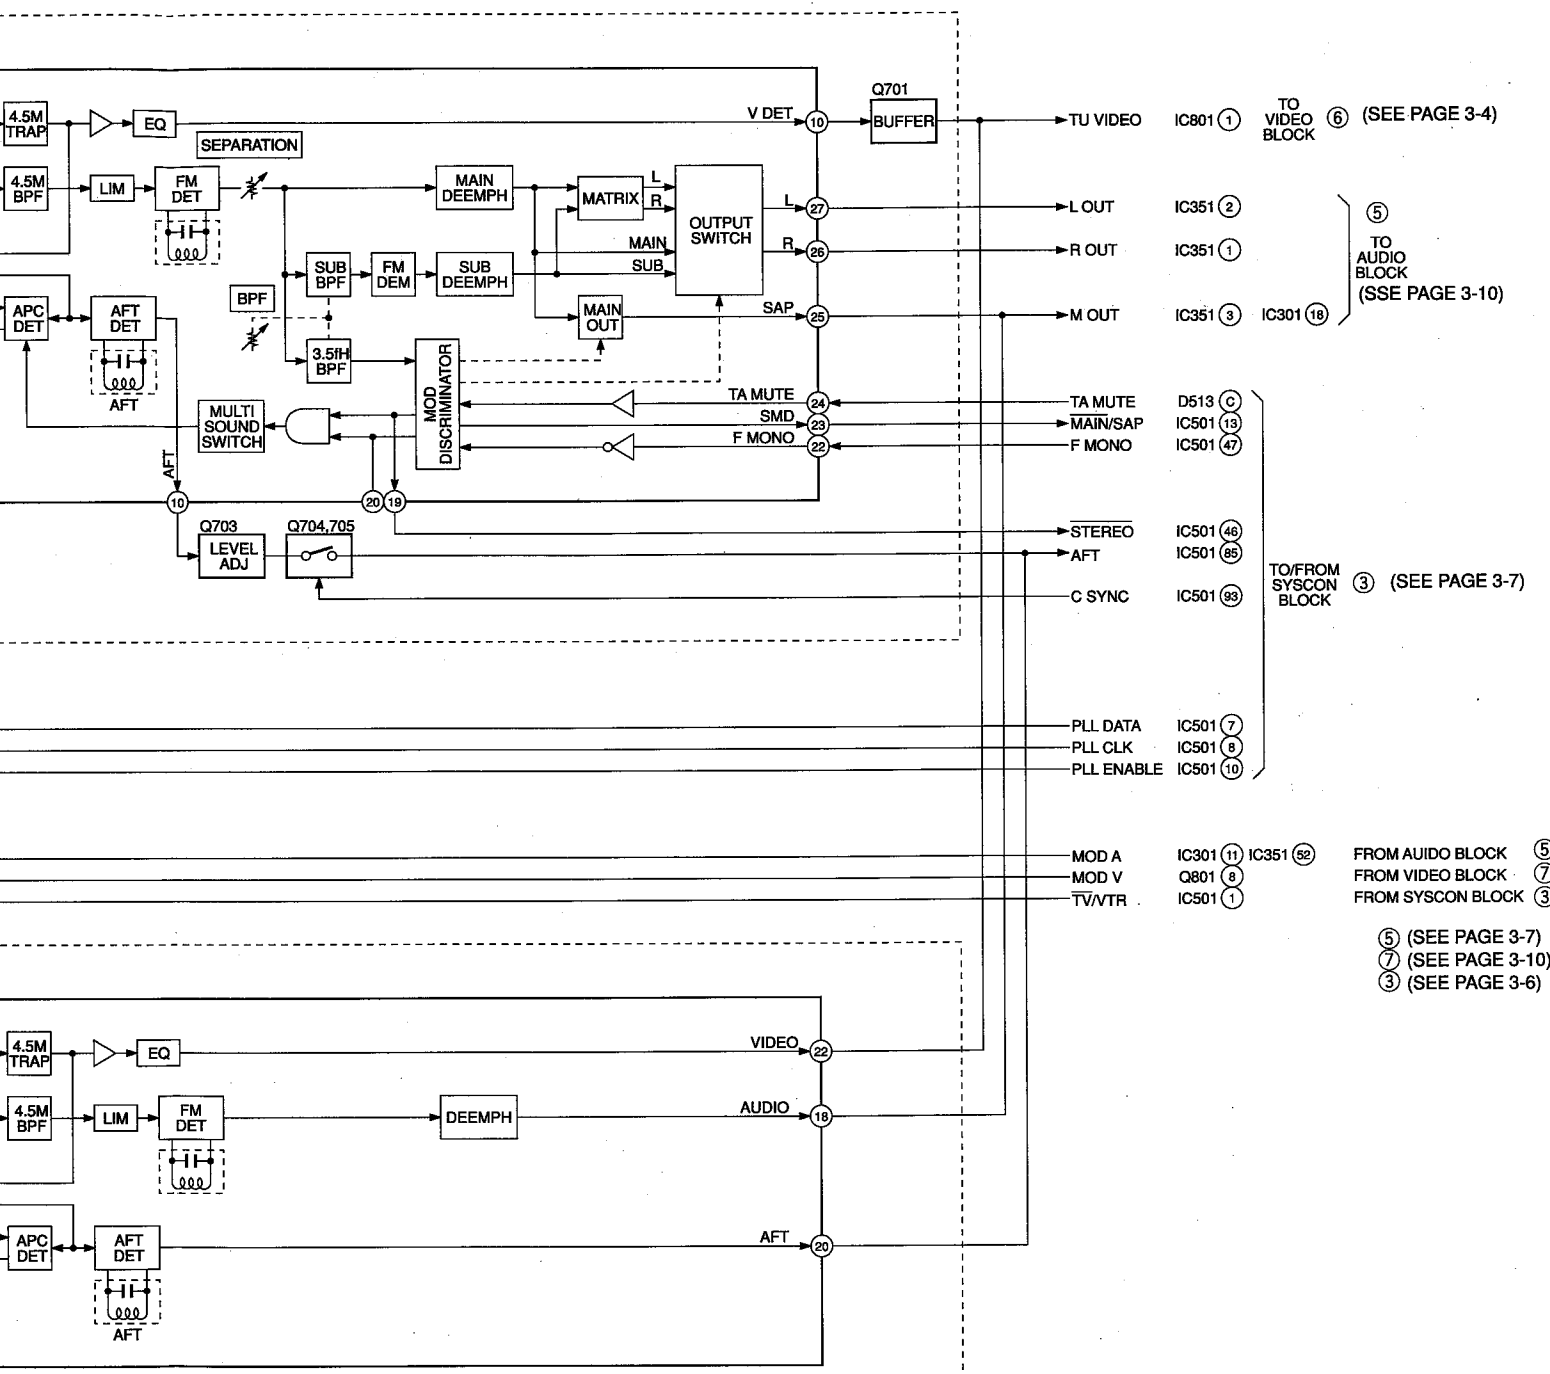


- IC801 (1) TO VIDEO BLOCK (6) (SEE PAGE 3-4)
- IC351 (2) L OUT
- IC351 (1) R OUT
- IC351 (3) IC301 (18) M OUT
- D513 (C) TA MUTE
- IC501 (13) MAIN/SAP
- IC501 (47) F MONO
- IC501 (46) STEREO
- IC501 (65) AFT
- IC501 (93) C SYNC
- IC501 (7) PLL DATA
- IC501 (8) PLL CLK
- IC501 (10) PLL ENABLE
- IC301 (11) IC351 (52) FROM AUDIO BLOCK (5)
- Q801 (8) FROM VIDEO BLOCK (7)
- IC501 (1) FROM SYSCON BLOCK (3)


(5) (SEE PAGE 3-7)
 (7) (SEE PAGE 3-10)
 (3) (SEE PAGE 3-6)

3-6. POWER BLOCK DIAGRAM

US,CANADIAN,MX,PA MODEL

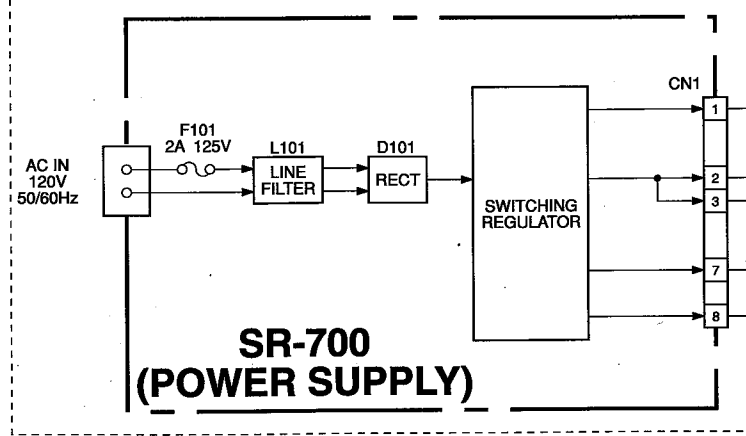


CX,PL,PX MODEL

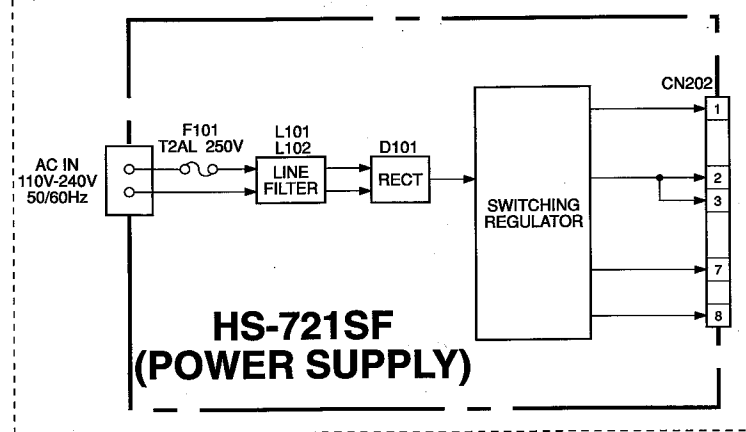


MA-248 BOARD

(SEE PAGE 4-10,13,16,19,21)

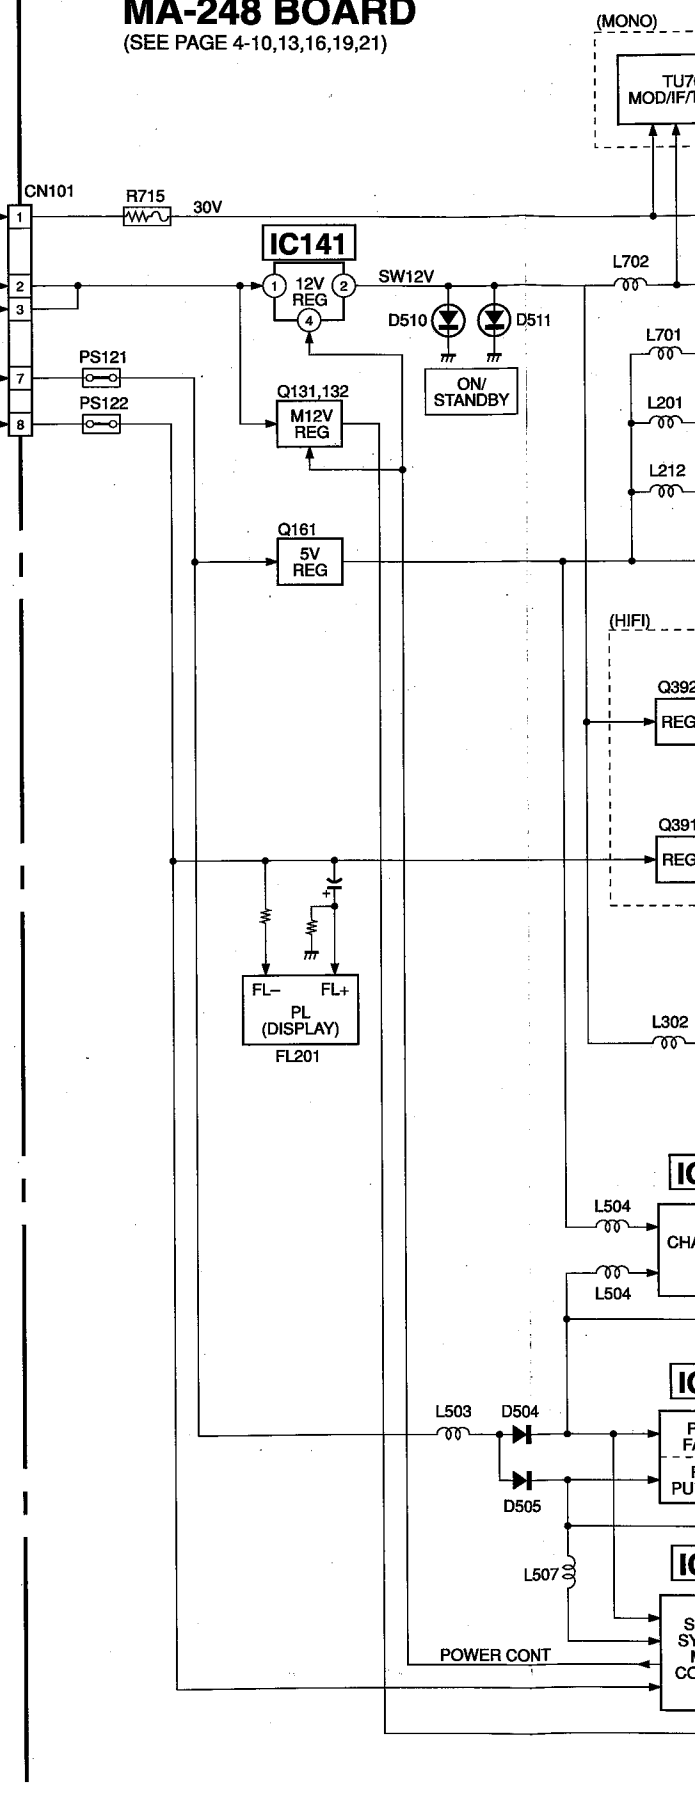

ARD
(19,21)

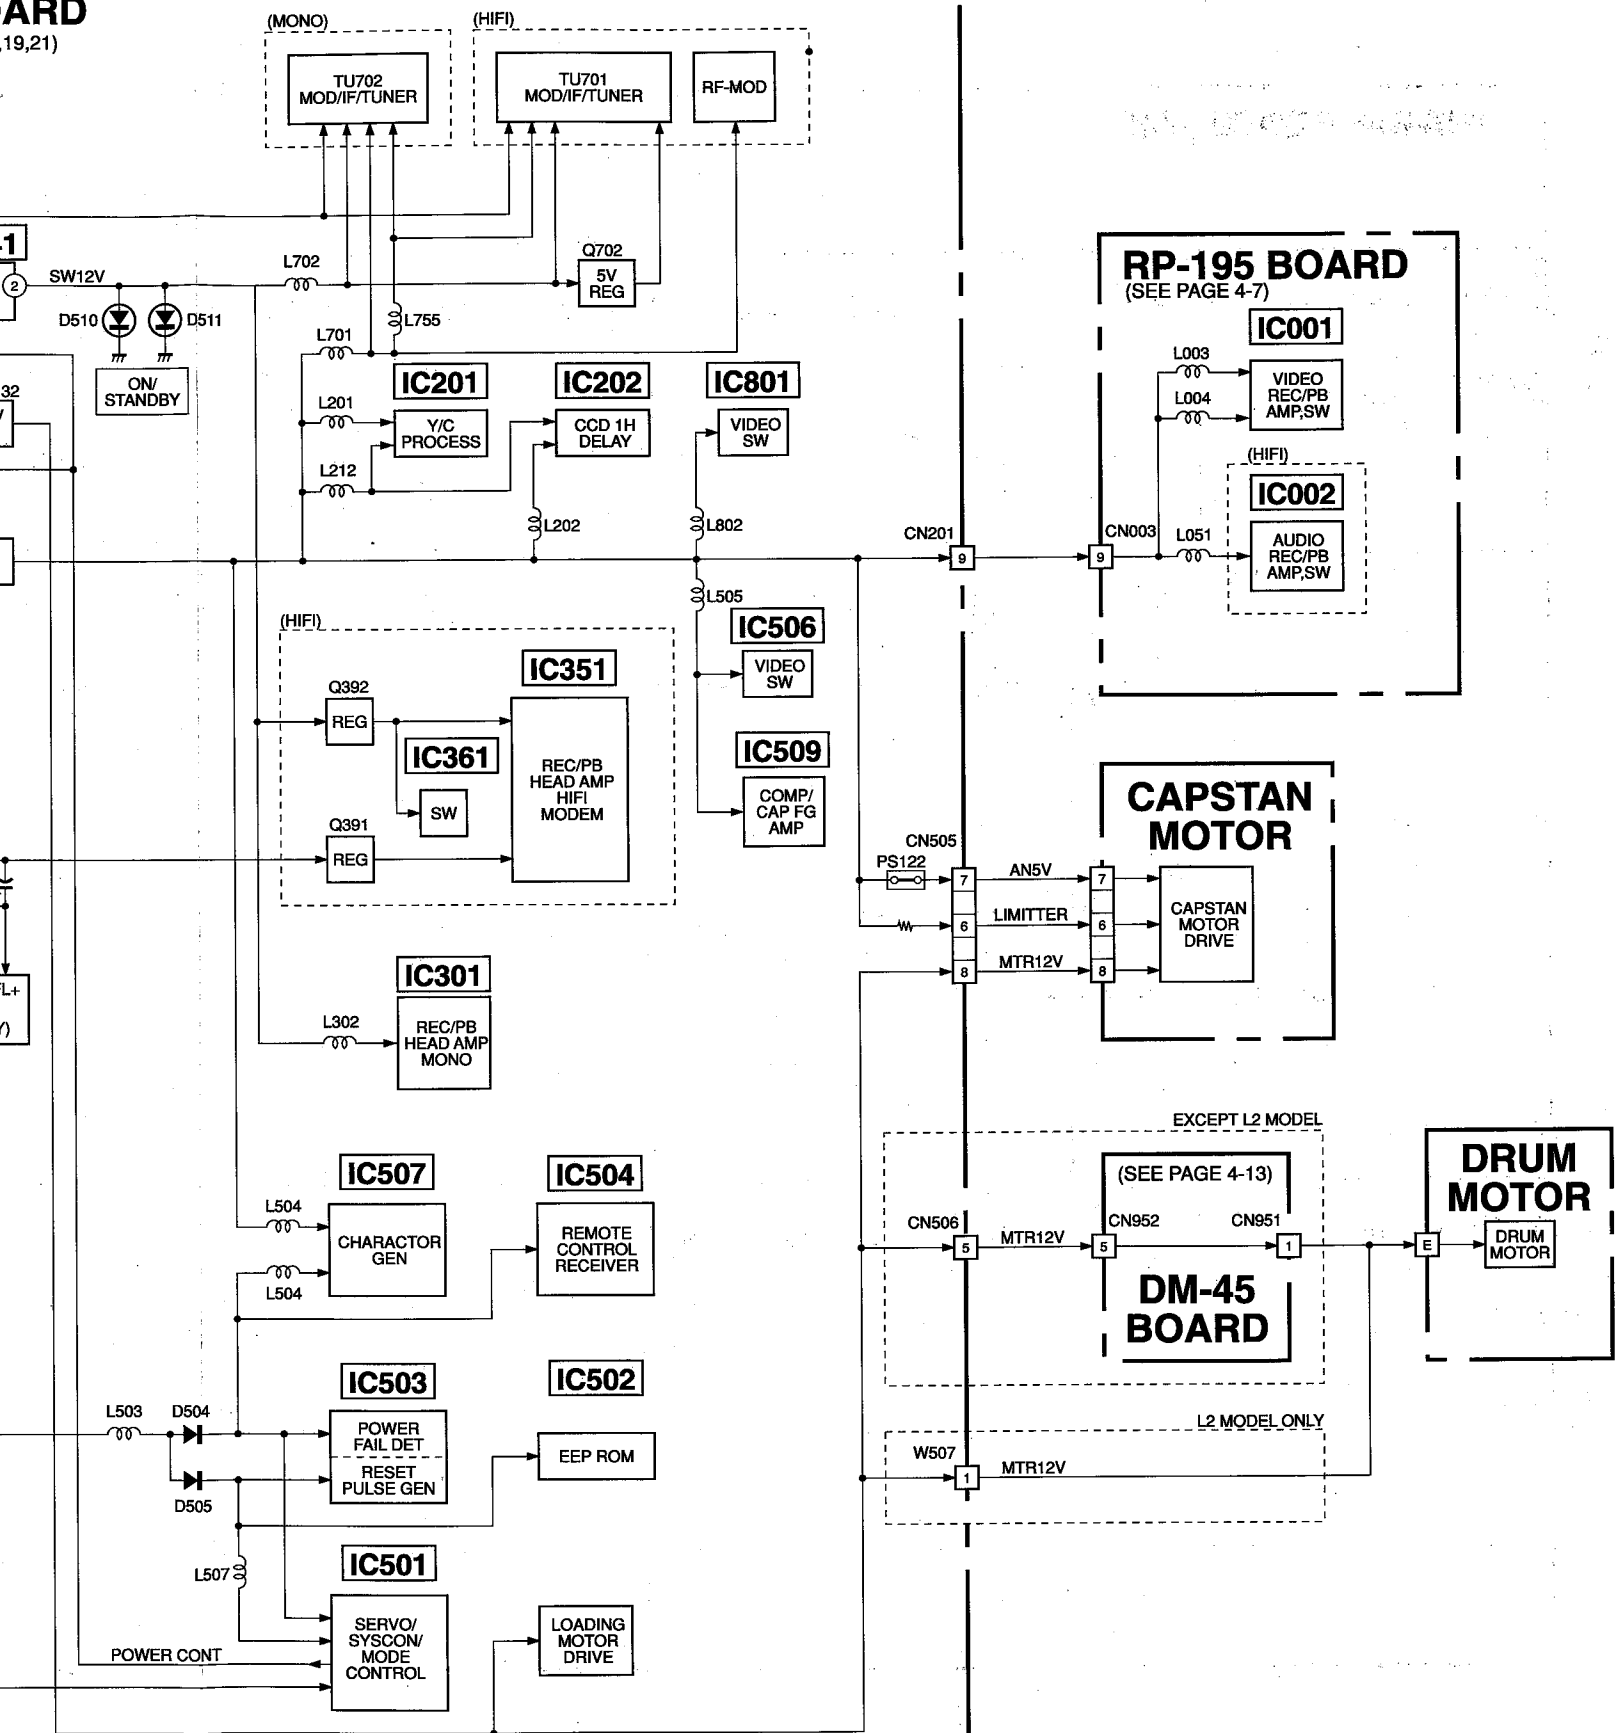


SLV-360/390/390PX/660HF/690HF/L2MX/L2PA/L2PL/L4CS/ L4MX/L4PA/L4PL/L6HFCS/L6HFMX/L6HFPA/L6HFPL


MA-248 (VIDEO) SCHEMATIC DIAGRAM

• See page 4-4 to 4-6 for the printed wiring board.


— Ref. No. : MA-248 Board: 1,000 Series —

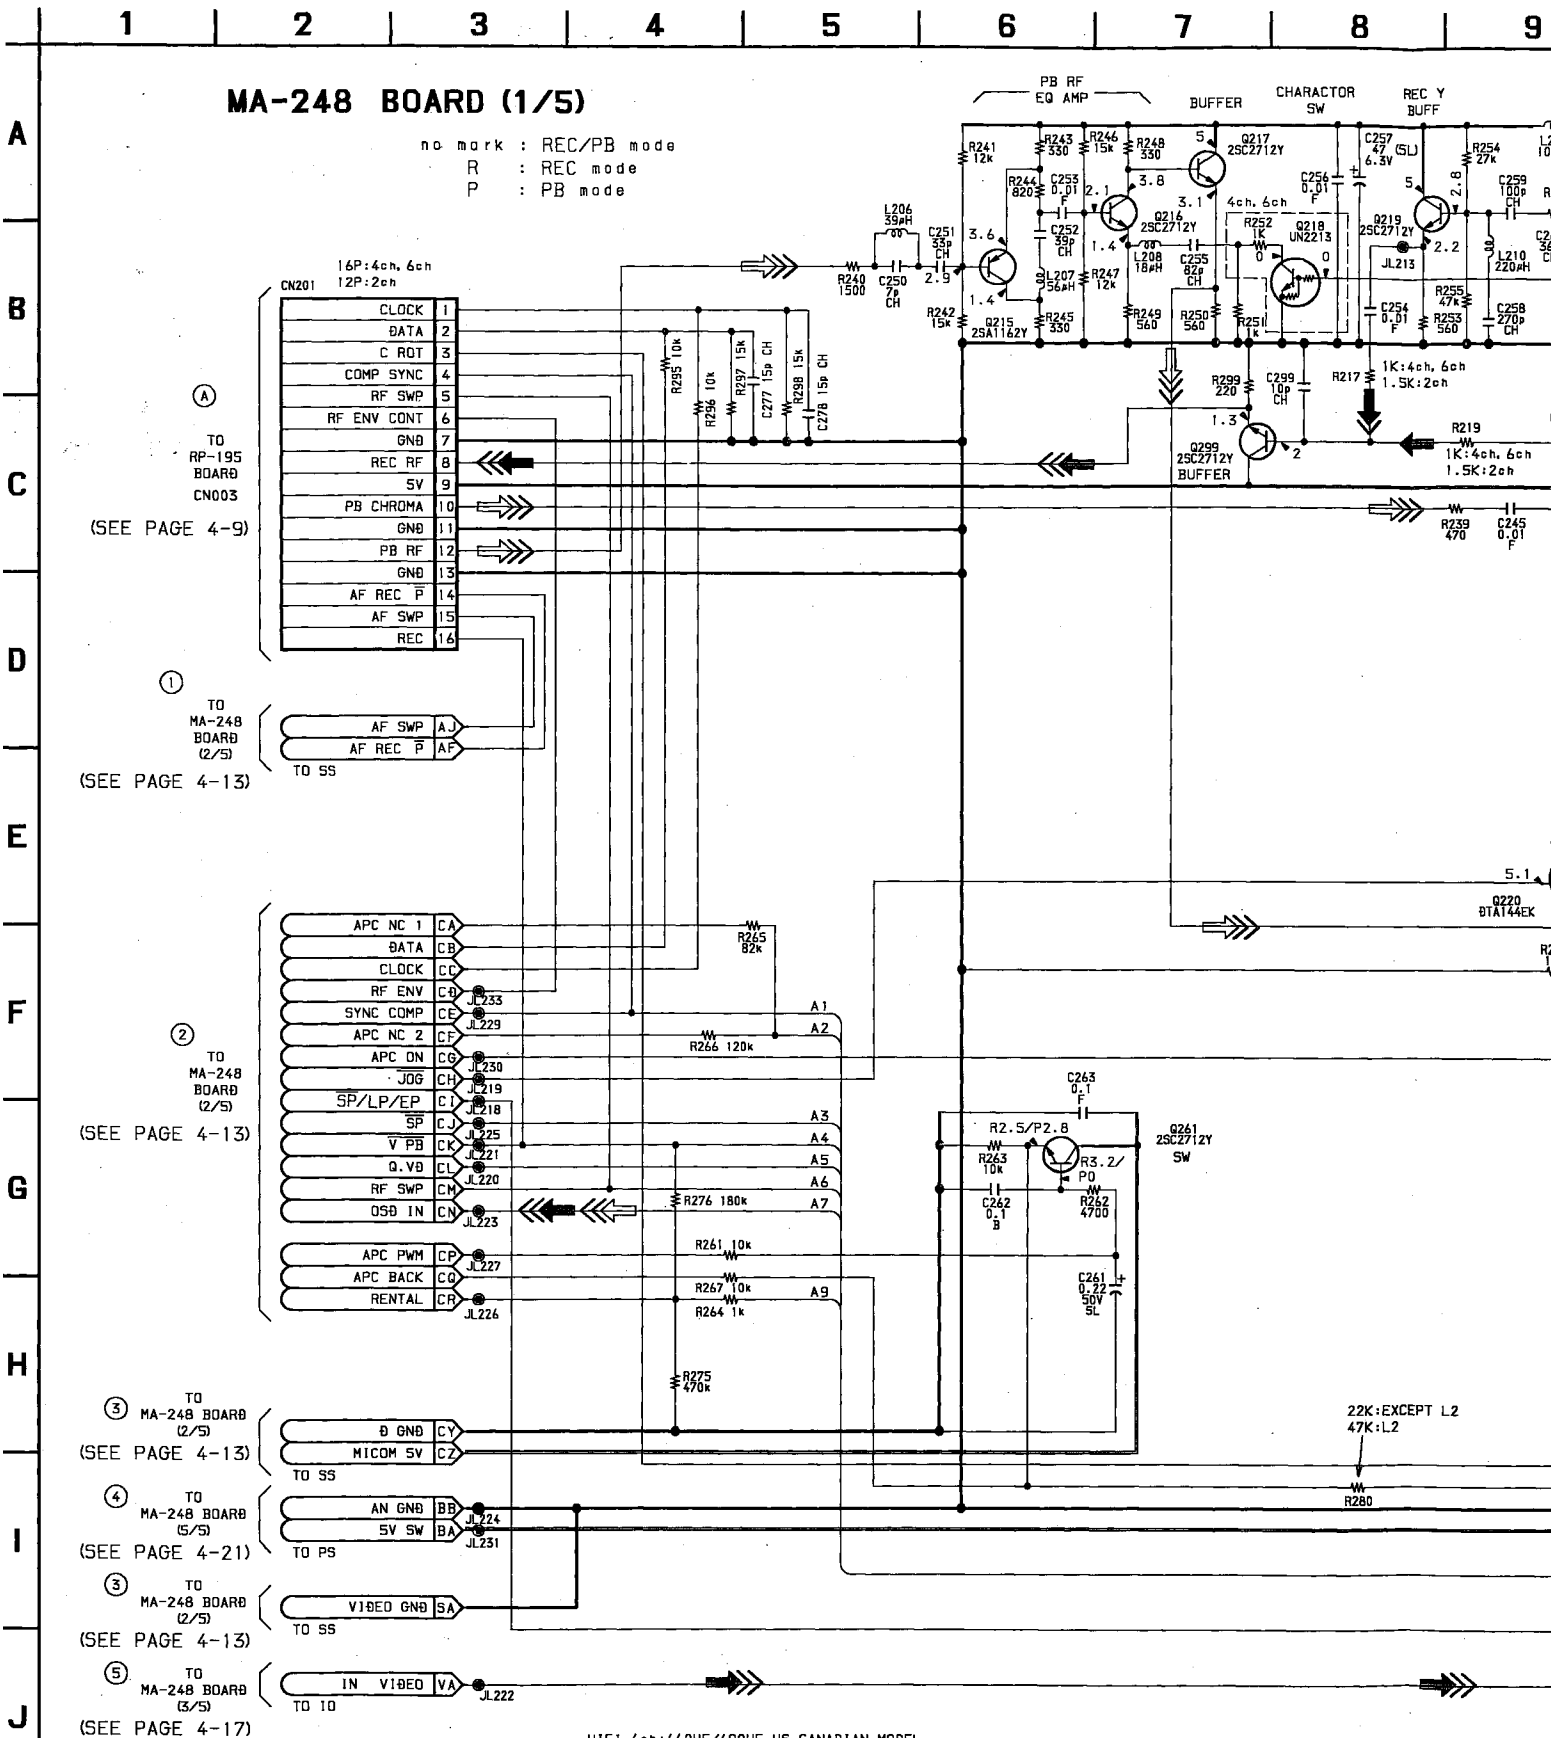

HIF1 6ch:660HF/690HF US, CANADIAN MODEL
HIF1 4ch:L6HF, MX, PA, CS, PL MODEL
MONO 4ch:360 US, CANADIAN/390 US/390PX MODEL
MONO 4ch:L4, MX, PA, CS, PL MODEL
MONO 2ch:L2, MX, PA, PL MODEL

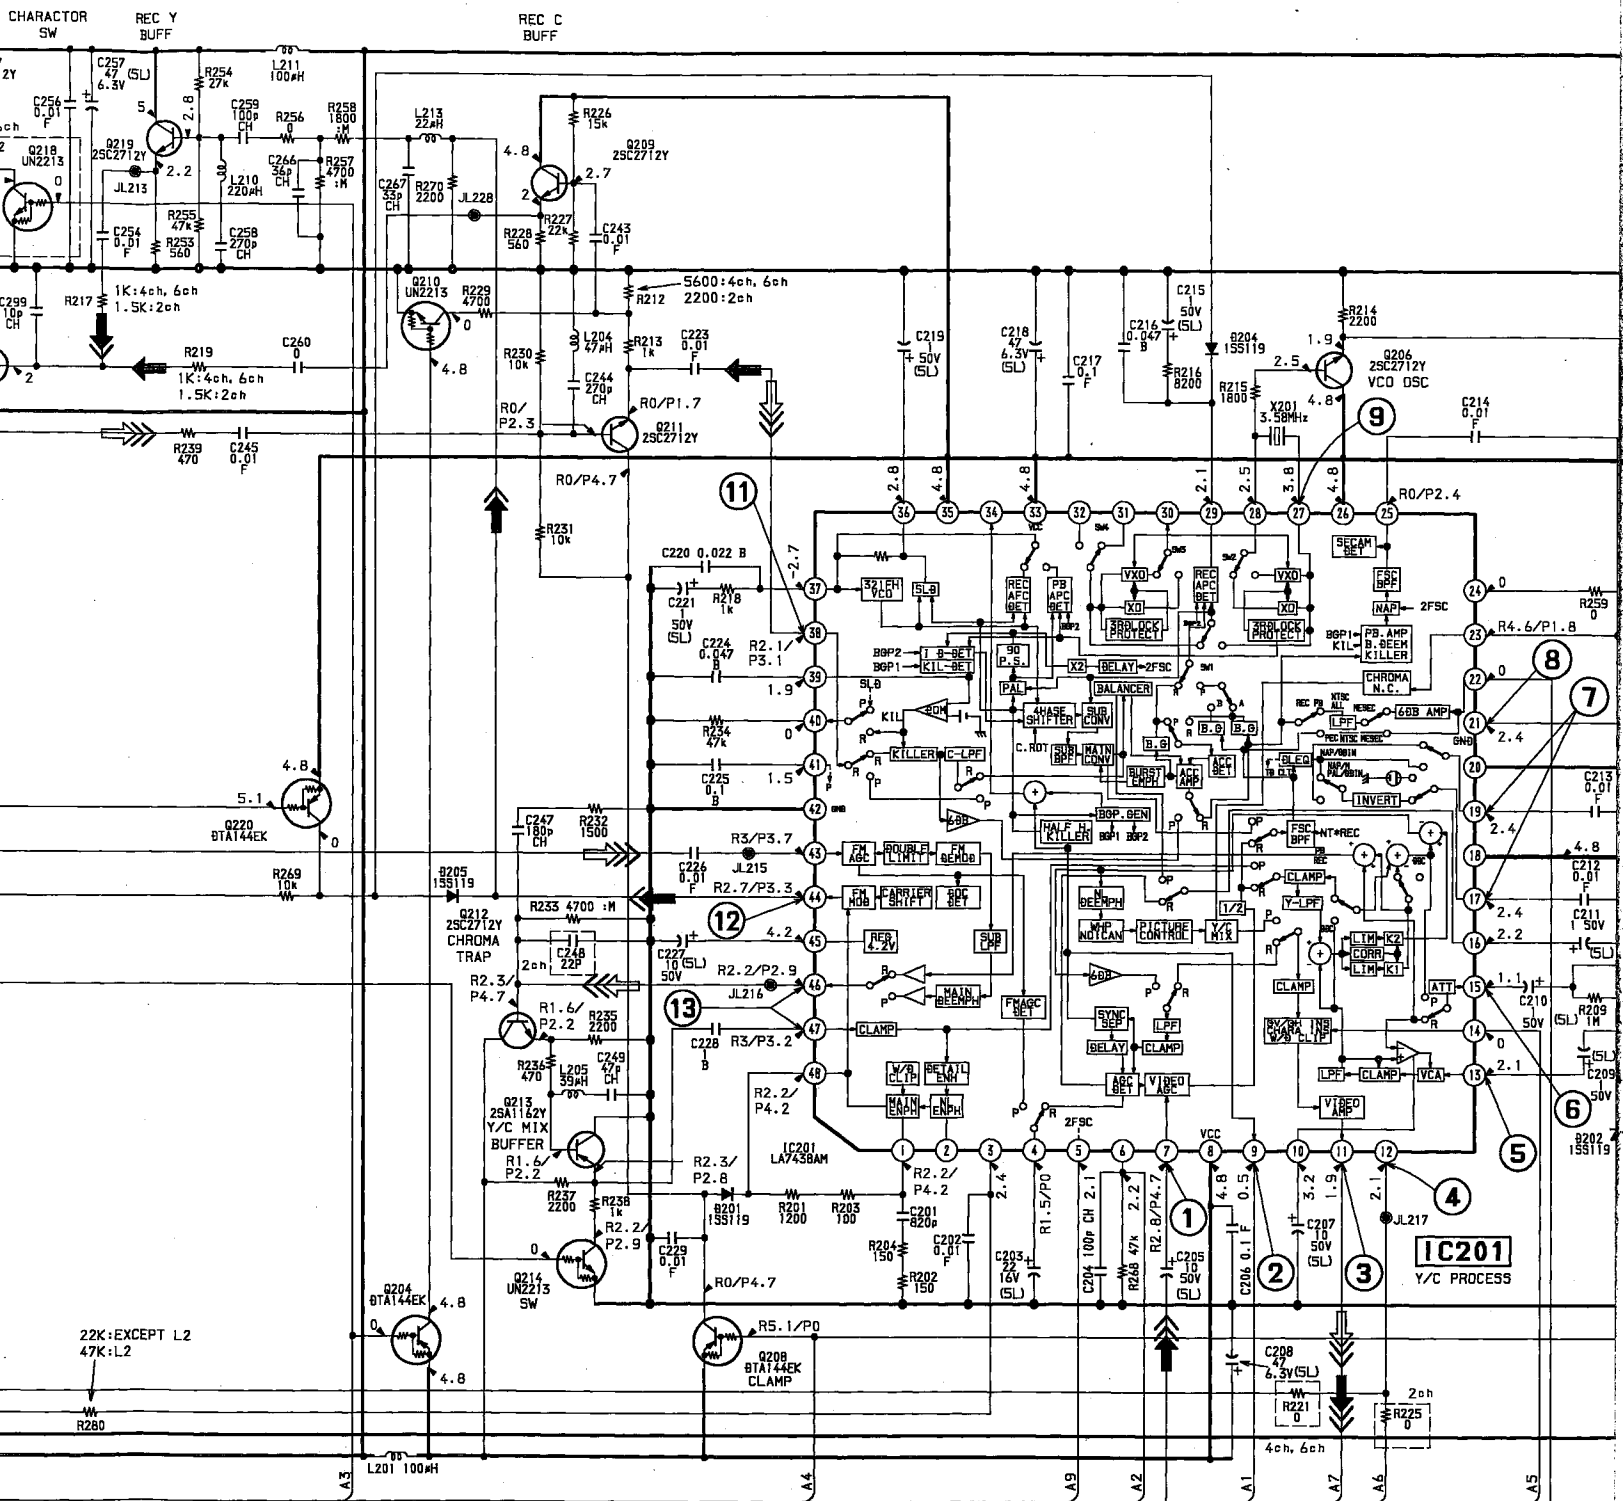


MA-248 BOARD

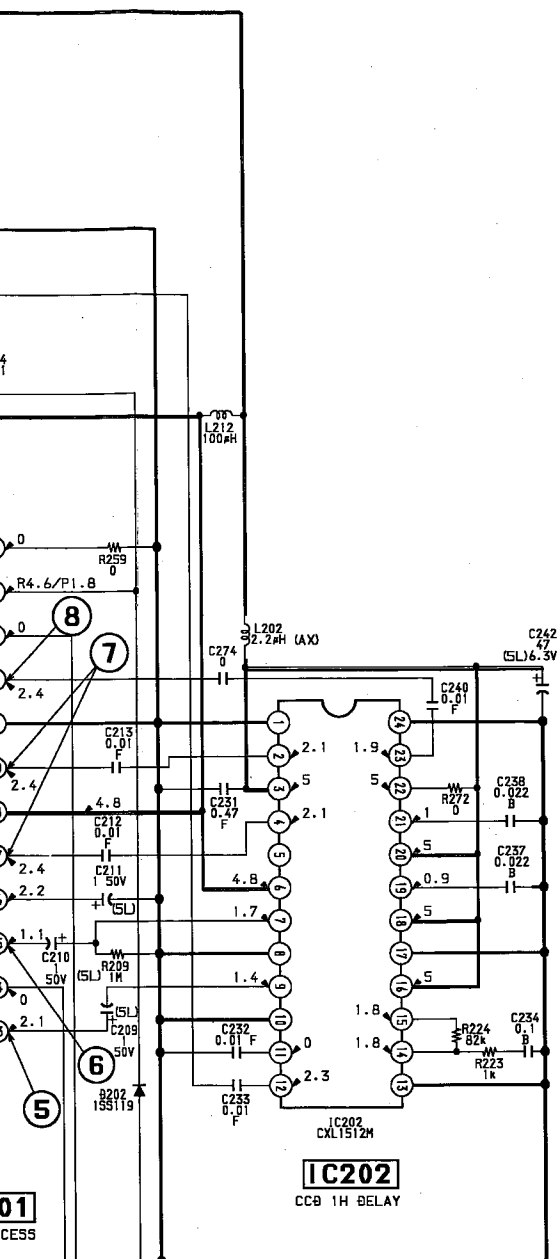

•SIGNAL PATH

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC	→	→→	→→→	
PB			→→→	

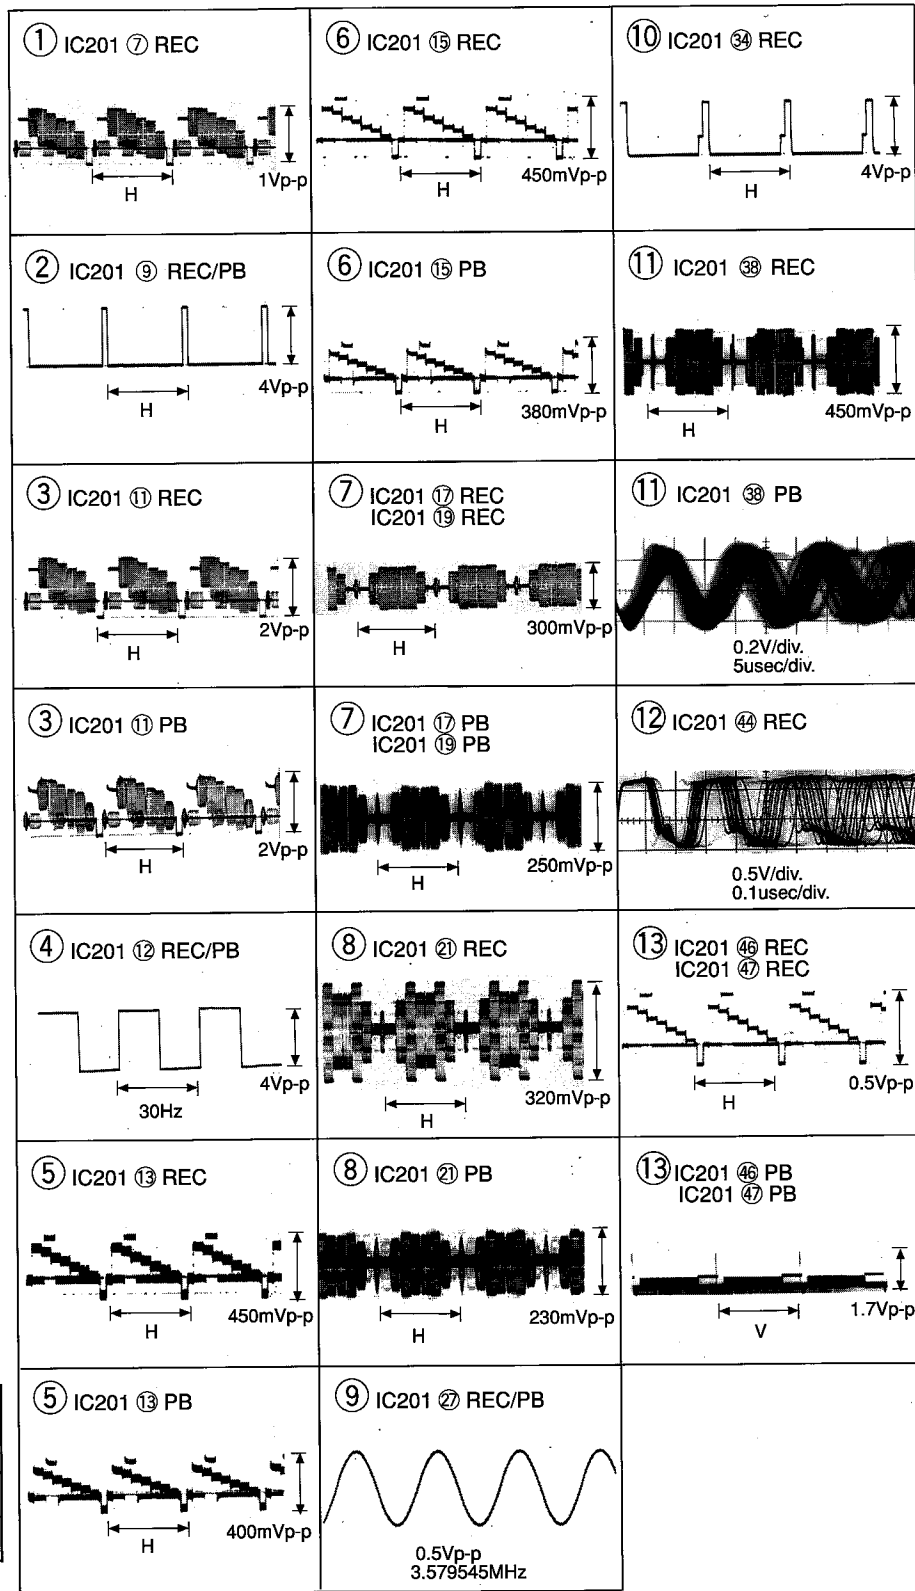


MA-248 (SERVO, SYSTEM CONTROL), SW-268 (SWITCH), DM-45 (TRANSLATION) SCHEMATIC DIAGRAMS

— Ref. No. : MA-248 Board: 1,000 Series, SW-248 Board: 2,000 Series DM-45 Board: 1,000 Series —

1 2 3 4 5 6 7 8 9 10 11 12 13

A
B
C
D
E
F
G
H
I
J
K
L
M
N

MA-248 BOARD

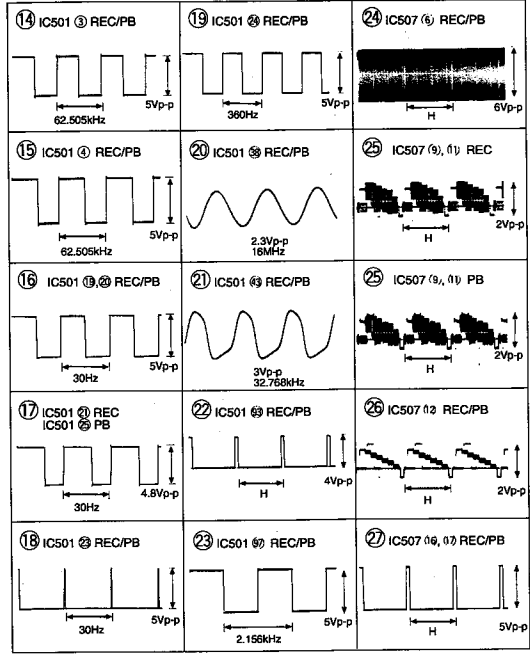

① TO MA-248 BOARD (1/5, 3/5) (SEE PAGE 4-10, 4-17)





② TO MA-248 BOARD (1/5) (SEE PAGE 4-10)


③ TO MA-248 BOARD (1/5) (SEE PAGE 4-10)

④ TO MA-248 BOARD (3/5) (SEE PAGE 4-17)


MA-248 BOARD (2/5)

no mark : REC/PB mode
R : REC mode
P : PB mode

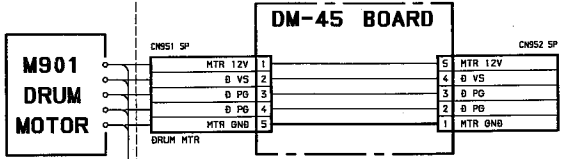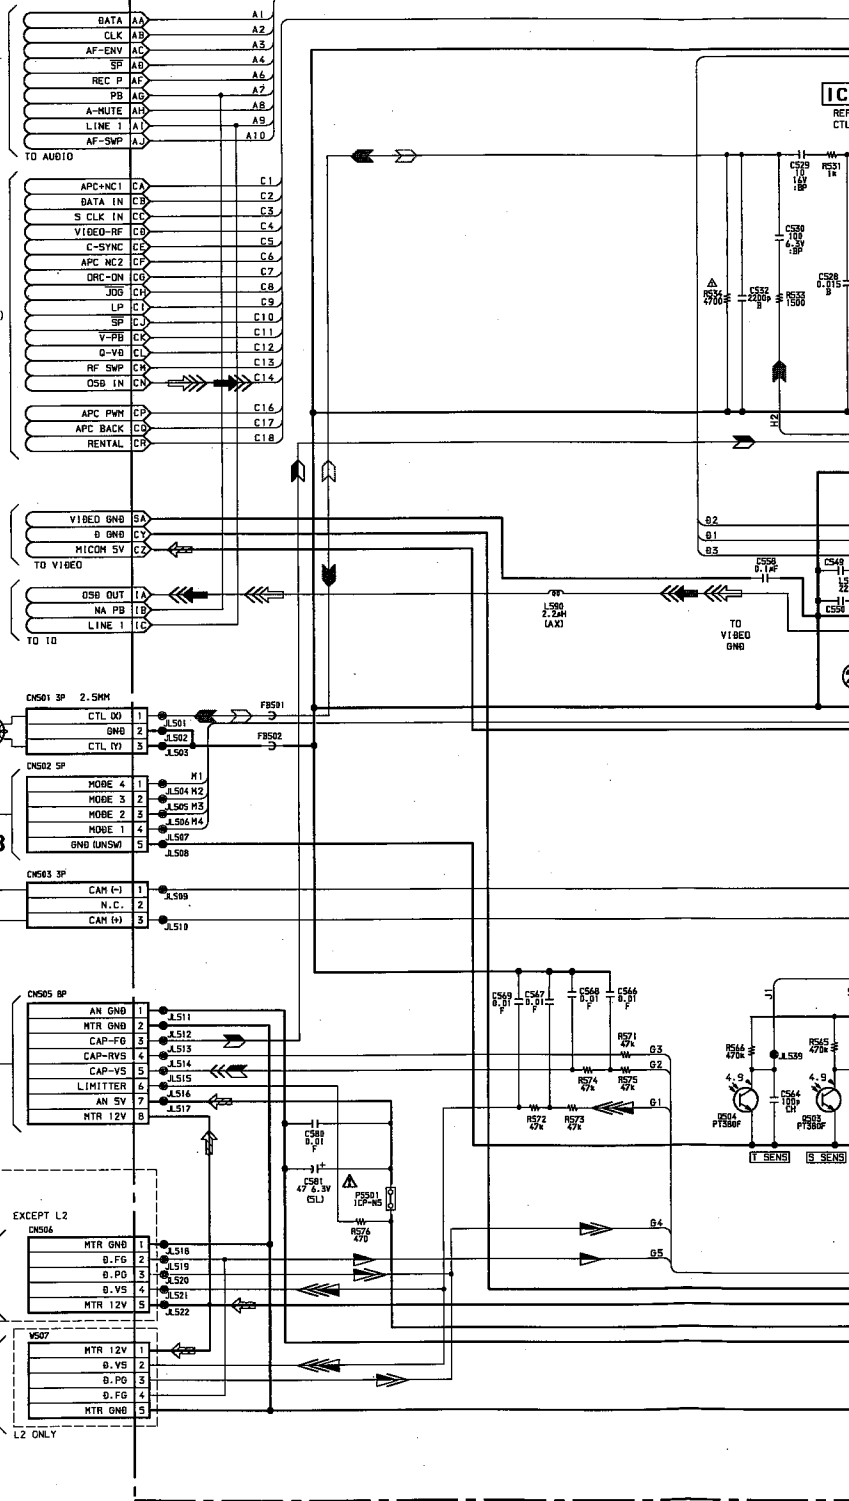

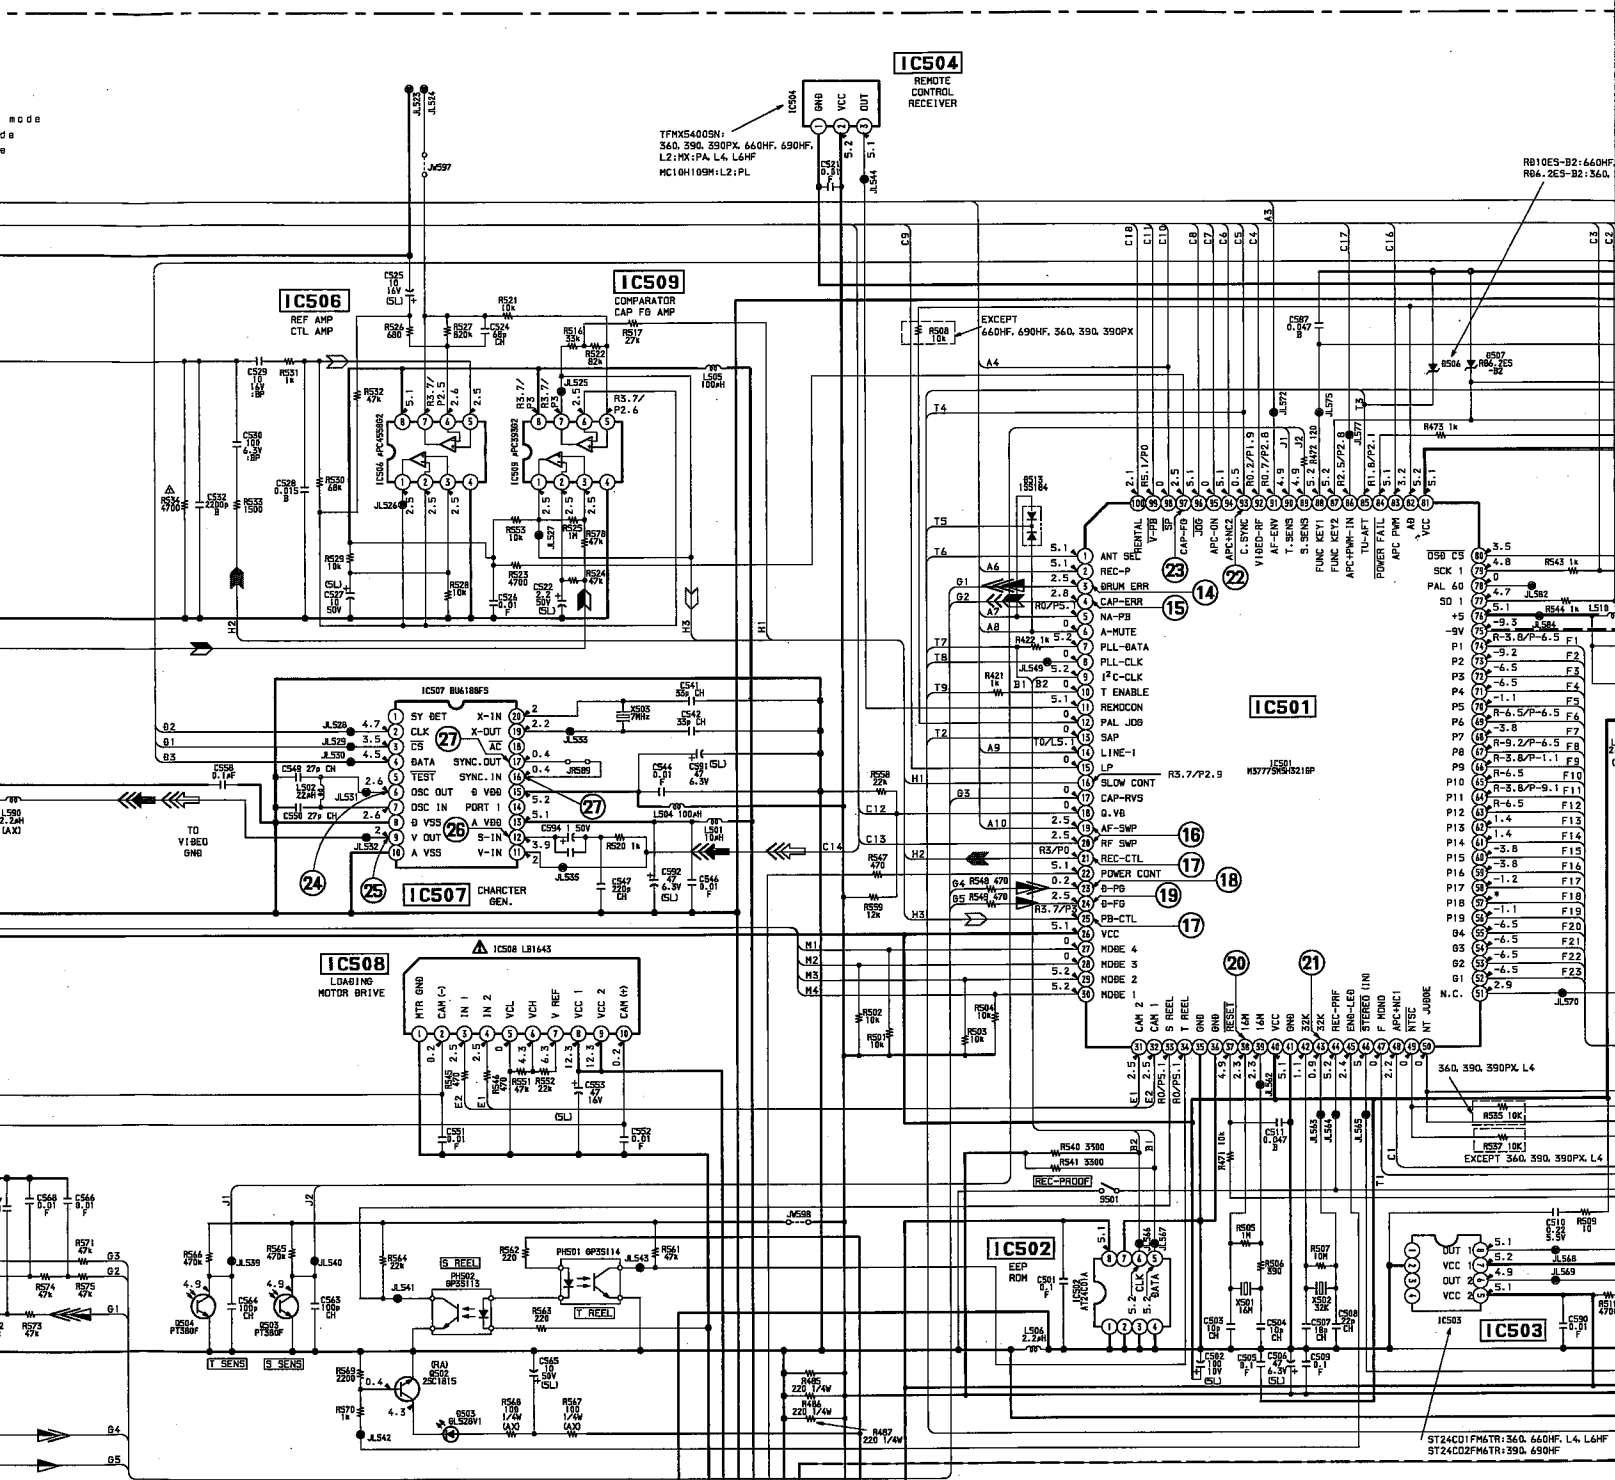


Note:
The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

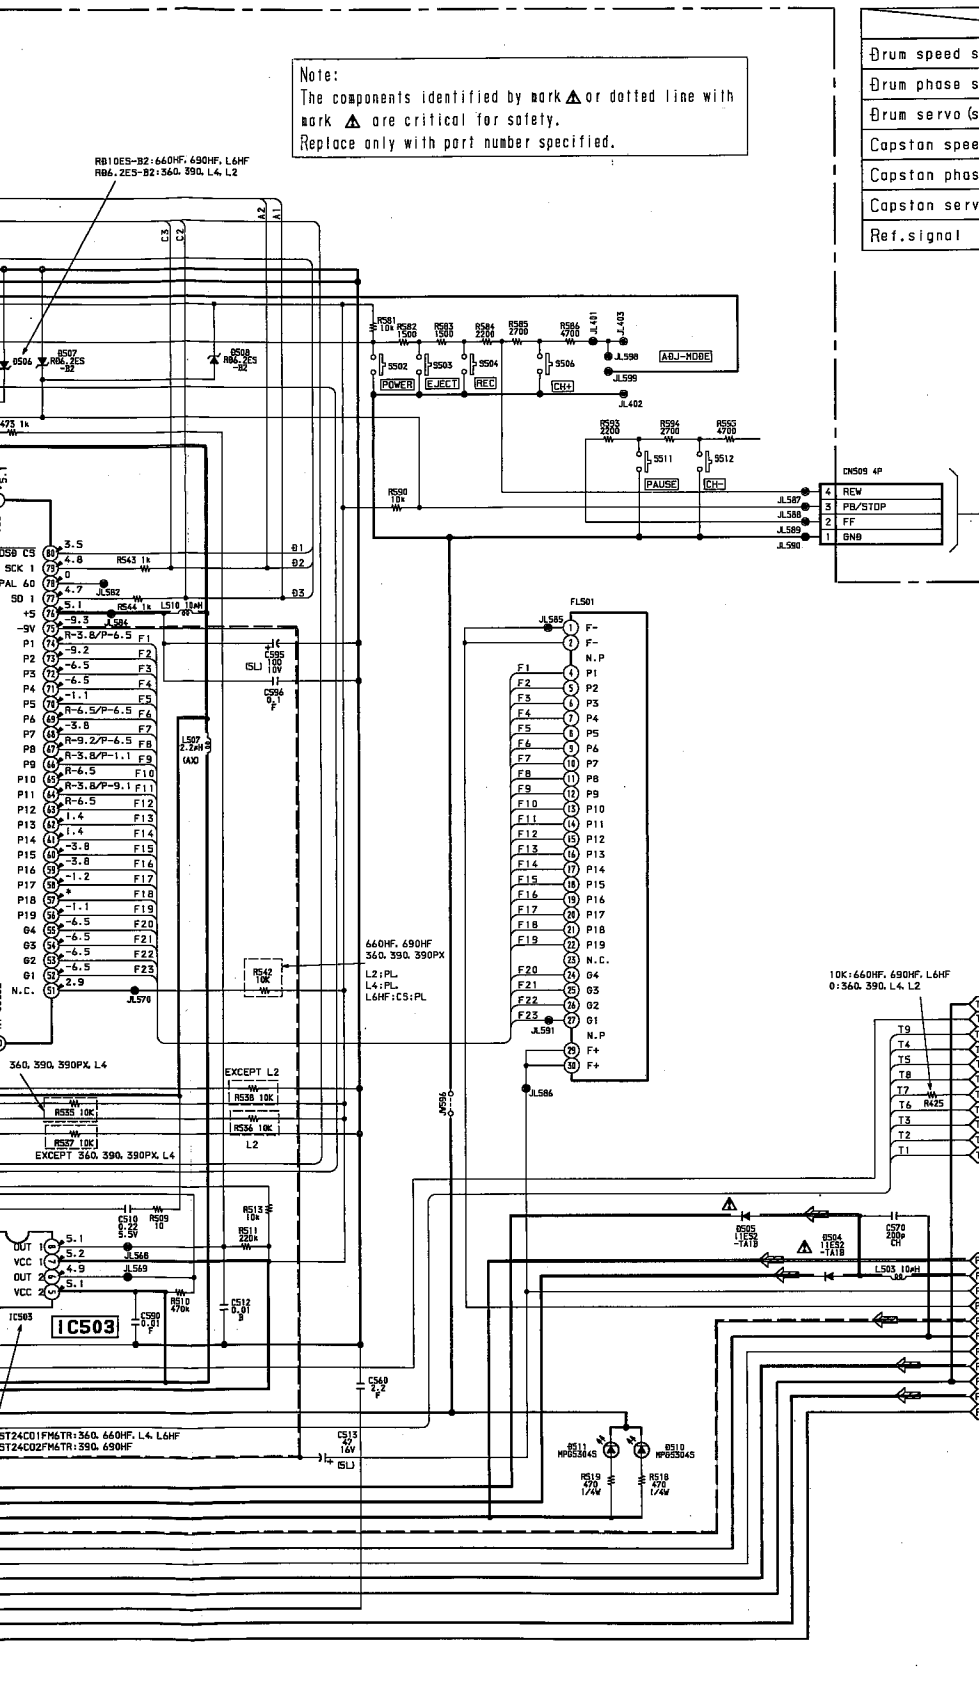

- SIGNAL PATH

	REC	REC/PB	PB
Drum speed servo		▶	
Drum phase servo		▶▶	
Drum servo (speed and phase)		▶▶▶	
Capstan speed servo		▶	
Capstan phase servo			
Capstan servo (speed and phase)		▶▶▶	
Ref. signal	▶		▶

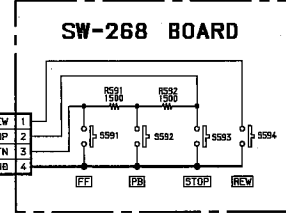

- SIGNAL PATH

	VIDEO SIGNAL		AUDIO SIGNAL
	CHROMA	Y	
REC		▶▶▶▶	
PB		▶▶▶▶	

10K: 660HF, 690HF, L6HF
0: 360, 390, L4, L2

- T9 TK CTL GND
- T4 TJ STEREO
- T1 T ENABLE
- T5 TM C SYNC
- T8 TG A-MUTE
- T7 TE PLL-CLK
- T6 R425 TE PLL-BATA
- T3 TW-VTR
- T2 TC TU-AFT
- T1 TB SAP
- T4 F-MONO

⑦ TO HA-24B BOARD (4/5) (SEE PAGE 4-19)

⑧ TO HA-24B BOARD (5/5) (SEE PAGE 4-21)

- PL SWB 12V
- PJ 5V MICOM
- PI F+
- PH F-
- PG -9V
- PF GND
- PE POWER CONT
- PC AN 5V
- PC AN GND
- PB NTR 12V
- PA NTR GND

**LV-360/390/390PX/660HF/690HF/L2MX/L2PA/L2PL/L4CS/
4MX/L4PA/L4PL/L6HFCS/L6HFMX/L6HFPA/L6HFPL**





MA-248 (AUDIO) SCHEMATIC DIAGRAM

• See page 4-4 to 4-6 for the printed wiring board.


— Ref. No. : MA-248 Board: 1,000 Series —

MA-248 BOARD (3/5)

no mark : REC/PB mode
 R : REC mode
 P : PB mode

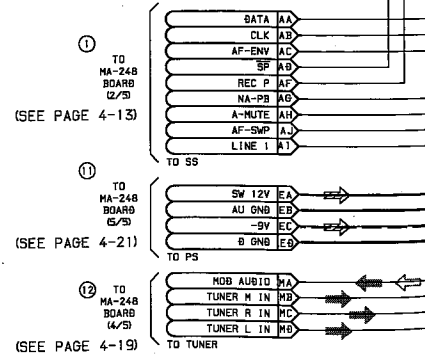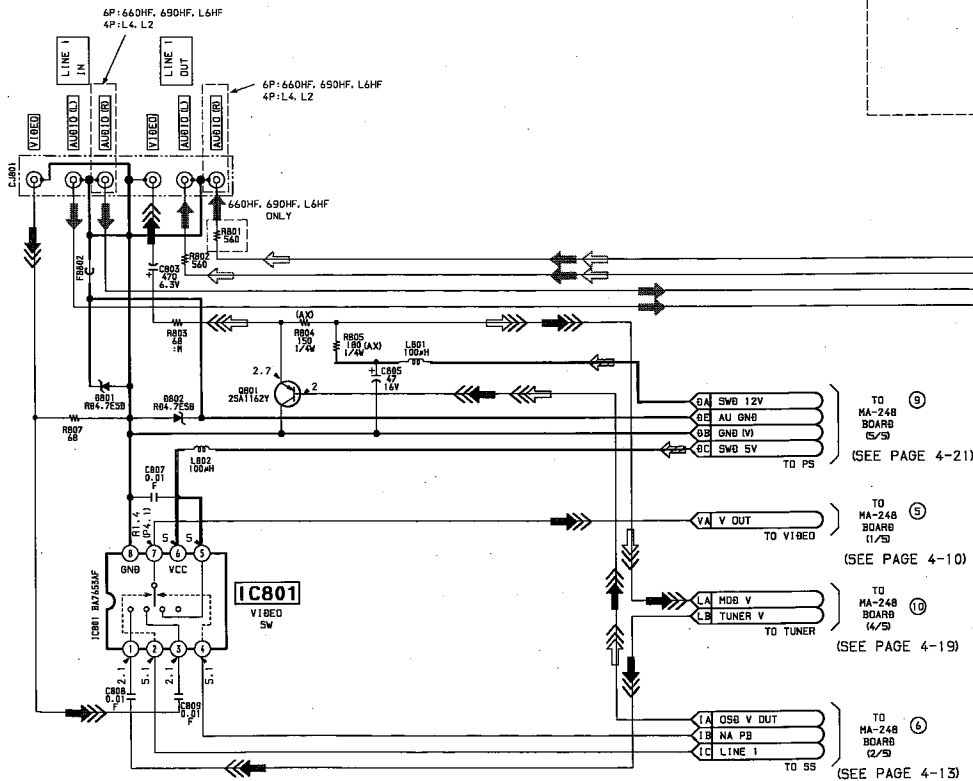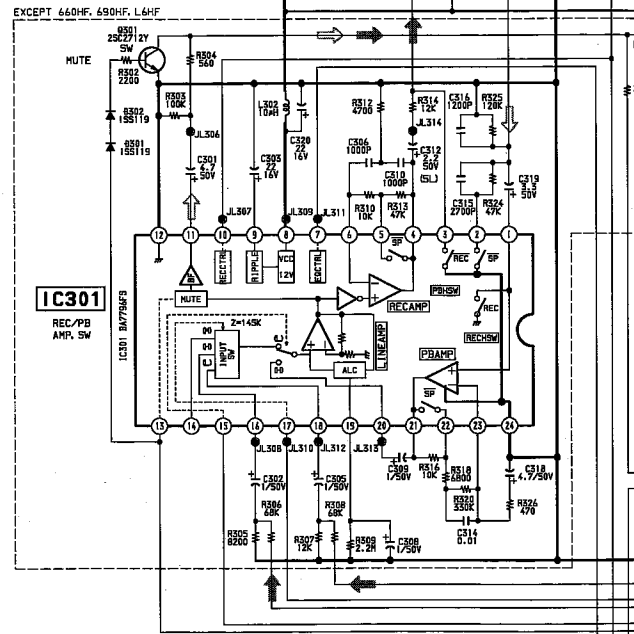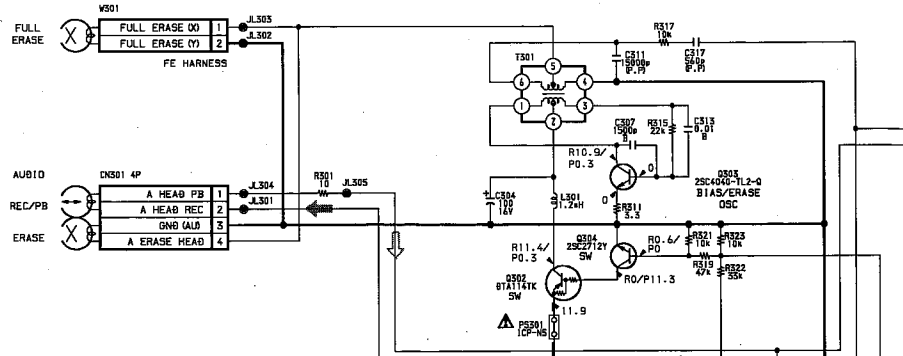

660PF, 650PF, L6HF

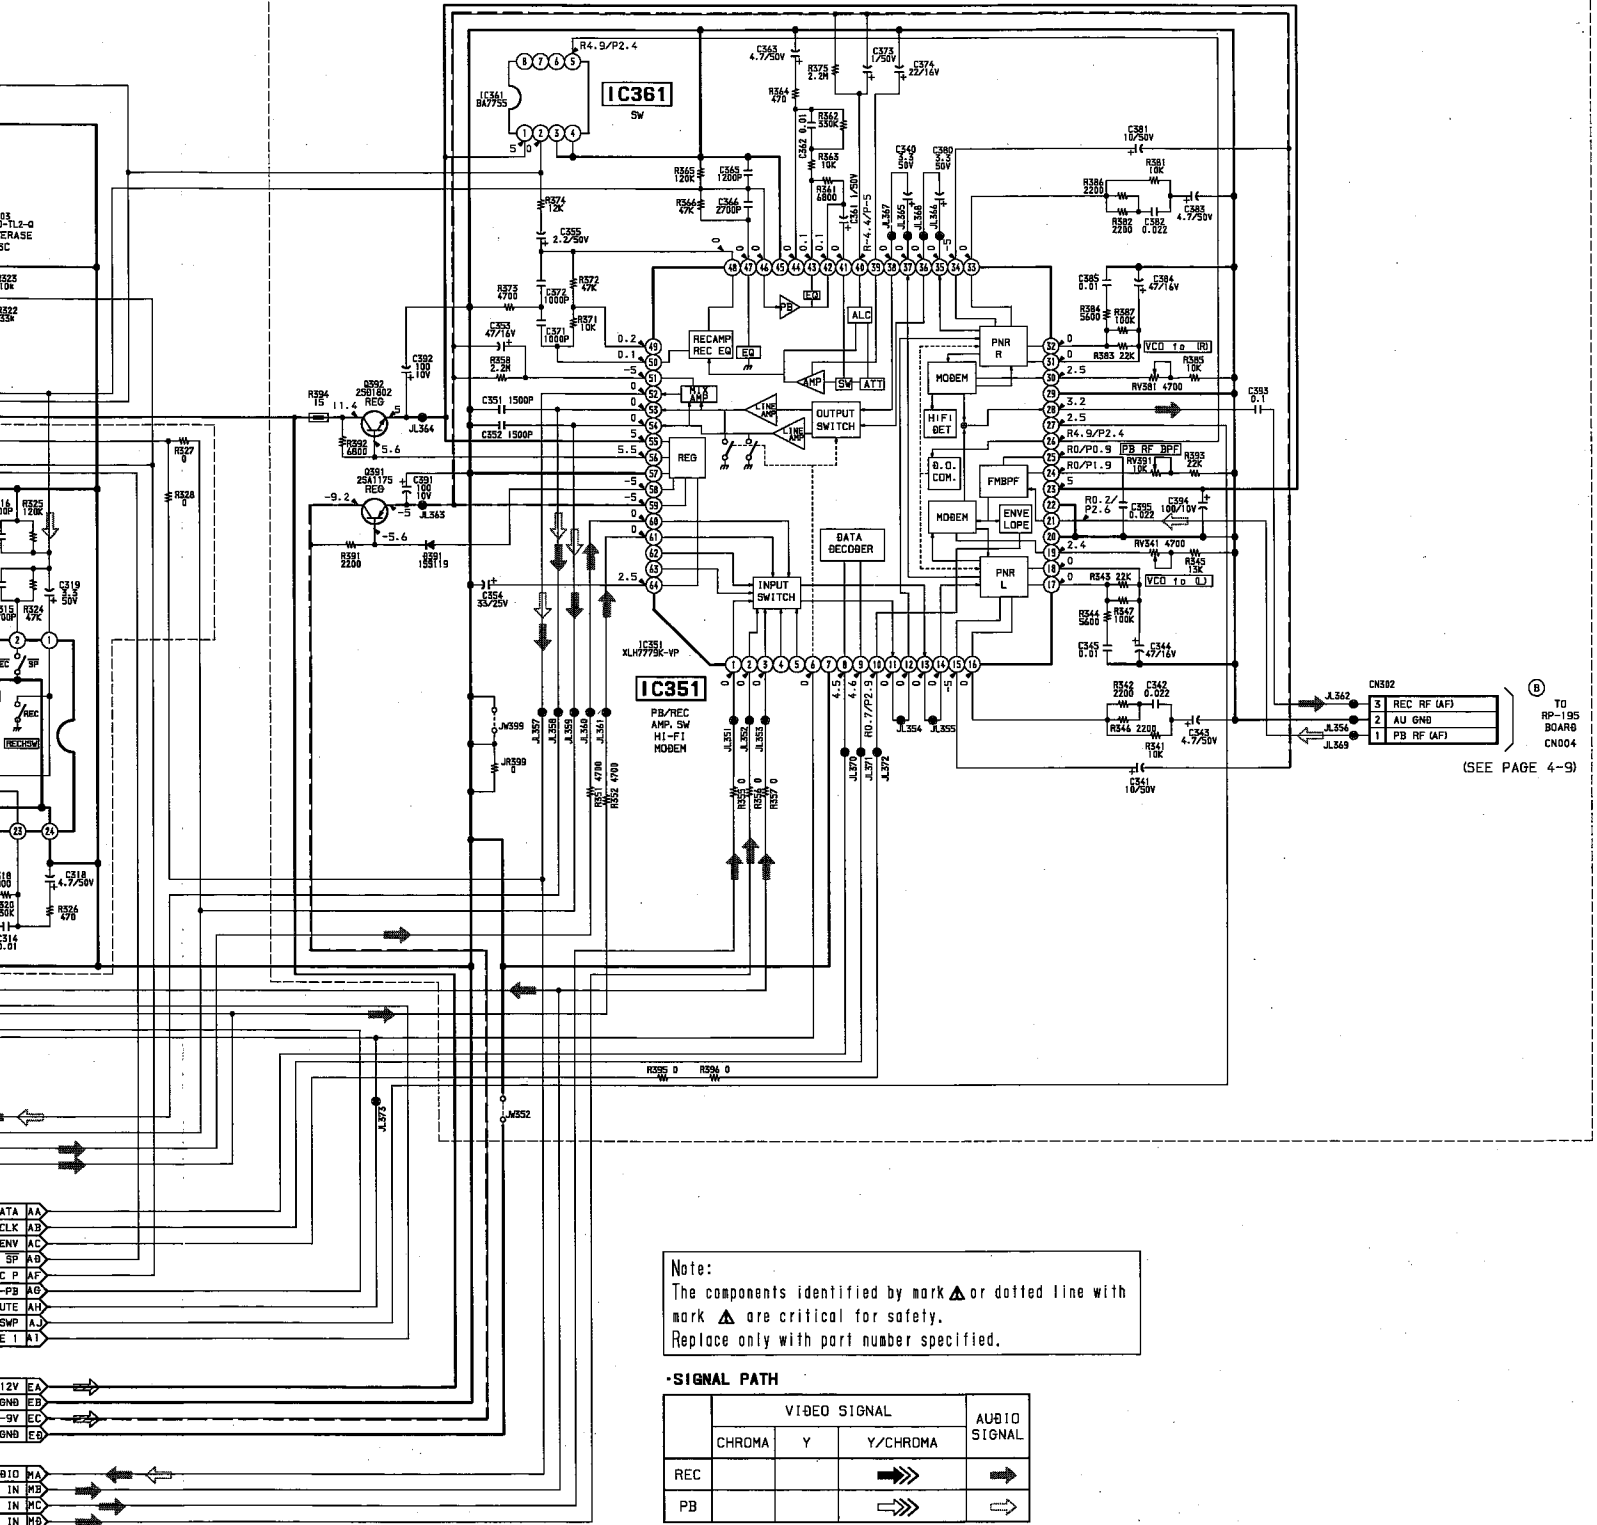

Note:
 The components identified by mark **▲** or dotted line with mark **▲** are critical for safety.
 Replace only with part number specified.

• SIGNAL PATH

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC			➡➡➡	➡
PB			➡➡➡	➡

TO RP-195 BOARD CN004 (SEE PAGE 4-9)

J.360	3	REC RF (AF)
J.359	2	AU GND
J.369	1	PB RF (AF)


MA-248 (TUNER) SCHEMATIC DIAGRAM

• See page 4-4 to 4-6 for the printed wiring board.

— Ref. No. : MA-248 Board: 1,000 Series —


MA-248 BOARD (4/5)

A
B
C
D
E
F
G
H

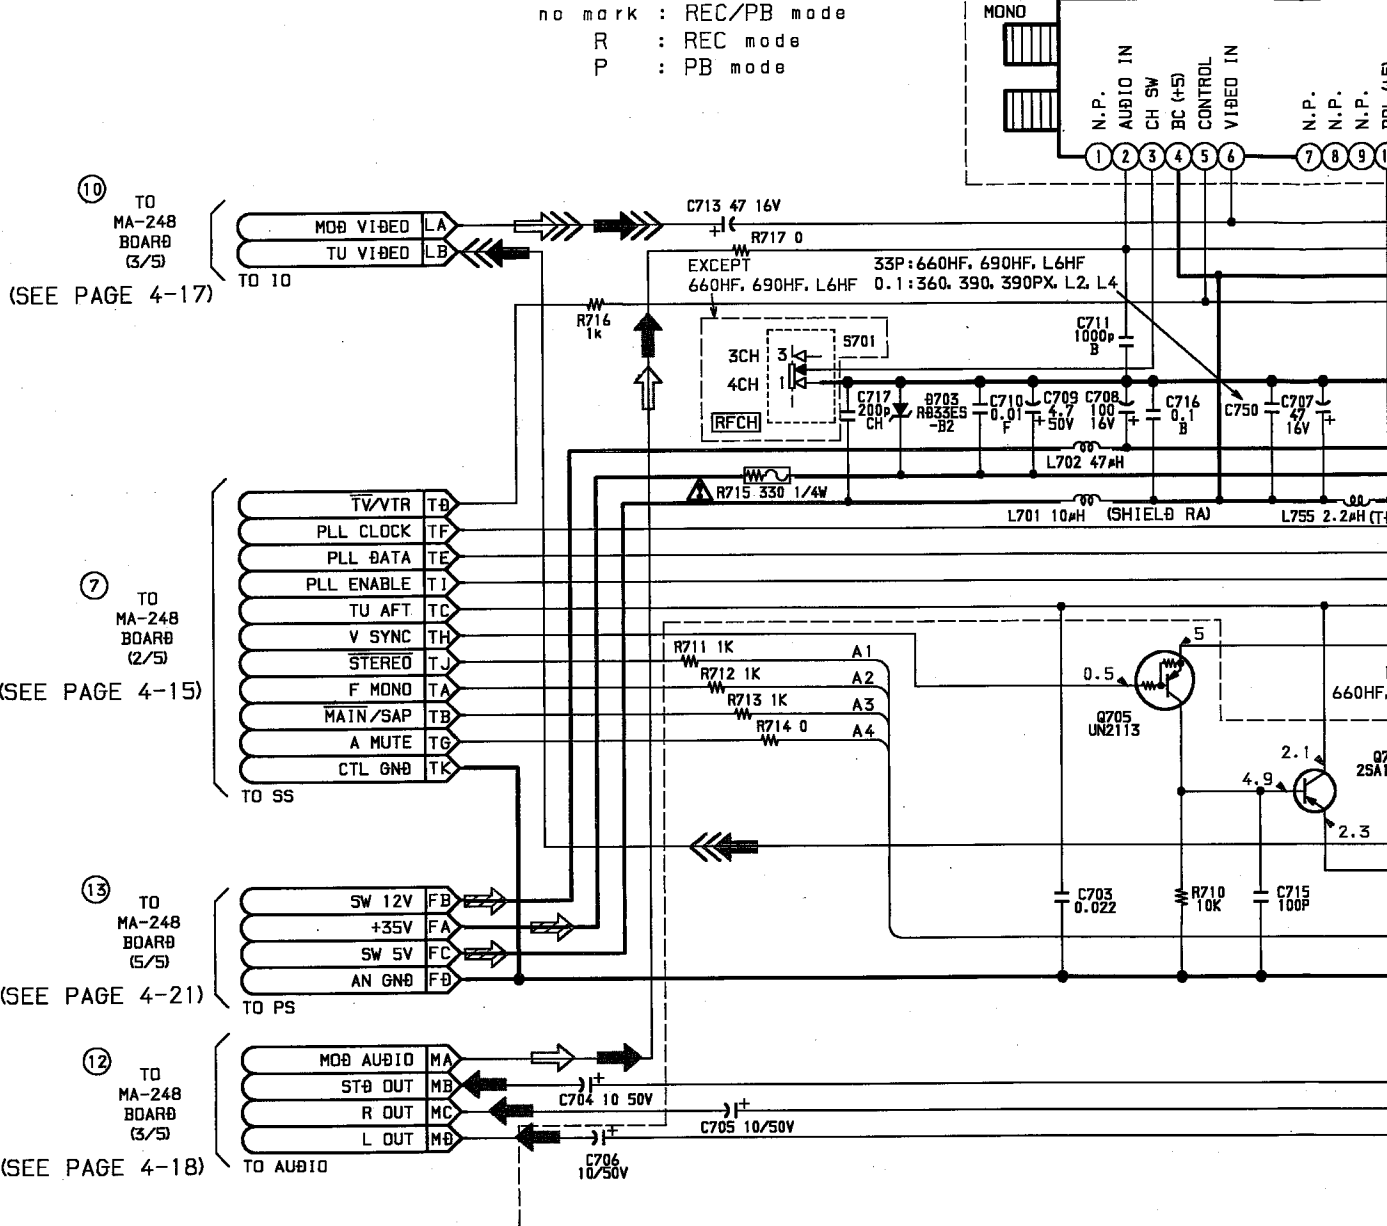

Note:
The component
mark **▲** are
Replace only

SLV-360/390/390PX/660HF/690HF/L2MX/L2PA/L2PL/L4CS/ L4MX/L4PA/L4PL/L6HFCS/L6HFMS/L6HFPA/L6HFPL

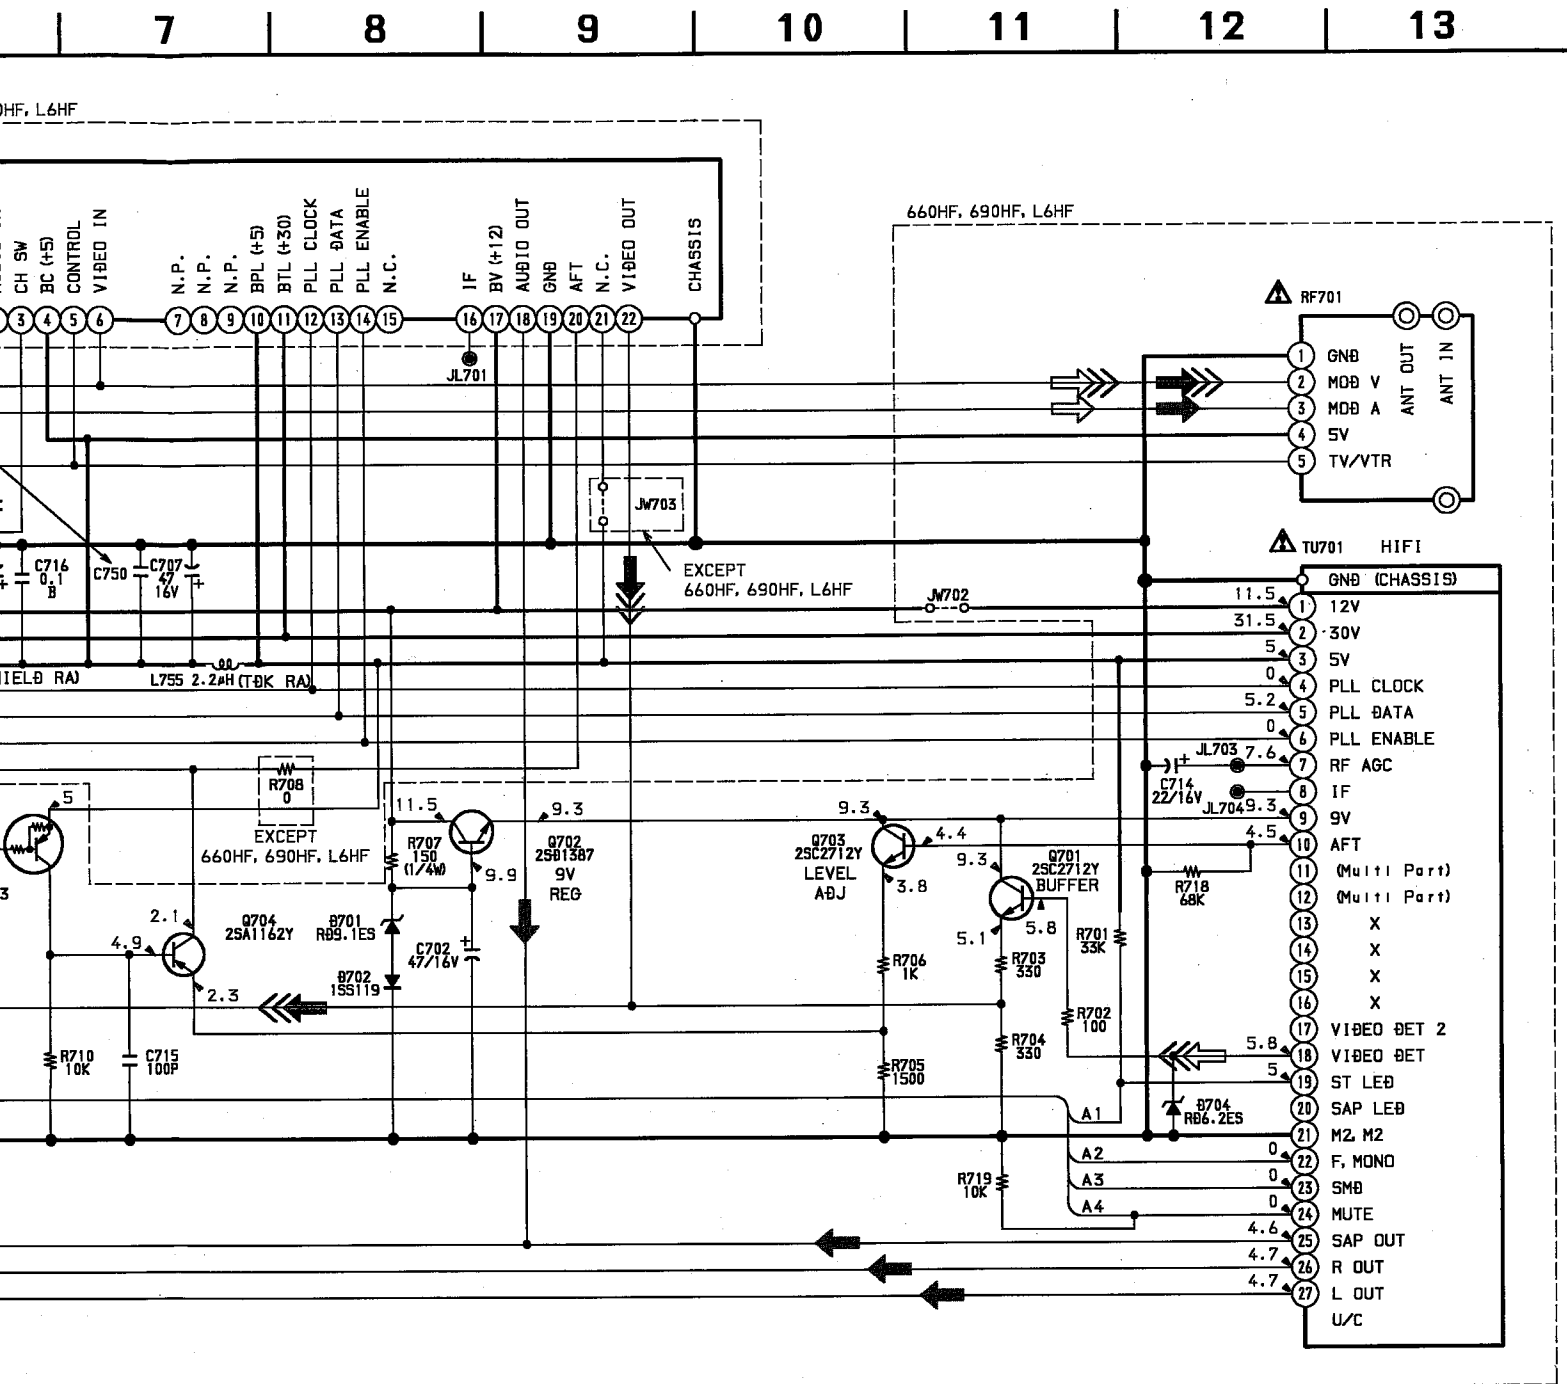

Note:
The components identified by mark **▲** or dotted line with mark **▲** are critical for safety.
Replace only with part number specified.

-SIGNAL PATH


	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC			➤➤➤	➔
PB			➡➡➡	➡

SLV-360/390/390PX/660HF/690HF/L2MX/L2PA/L2PL/L4CS/ L4MX/L4PA/L4PL/L6HFCS/L6HFMX/L6HFPA/L6HFPL


MA-248 (DC POWER) SCHEMATIC DIAGRAM

• See page 4-4 to 4-6 for the printed wiring board.

— Ref. No. : MA-248 Board: 1,000 Series —

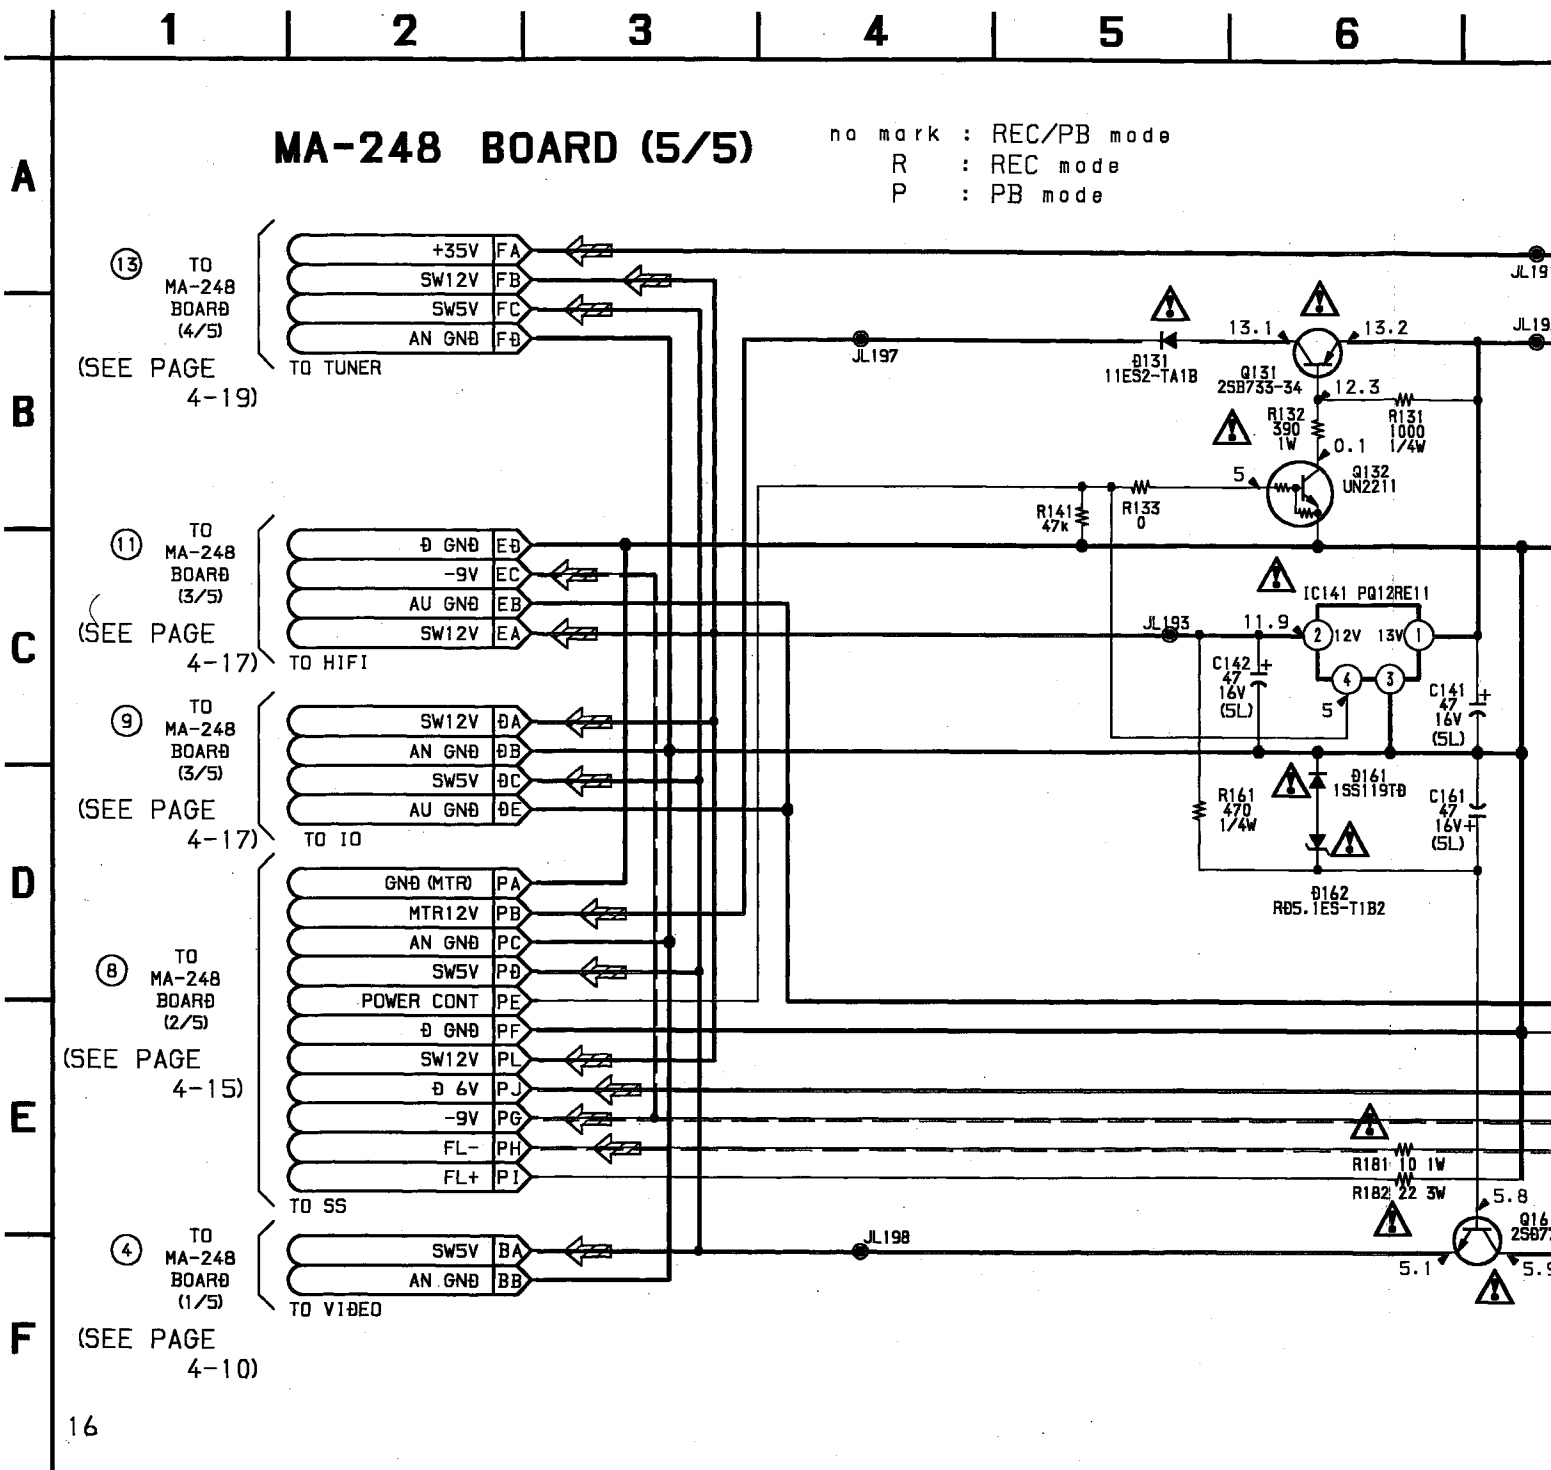


16

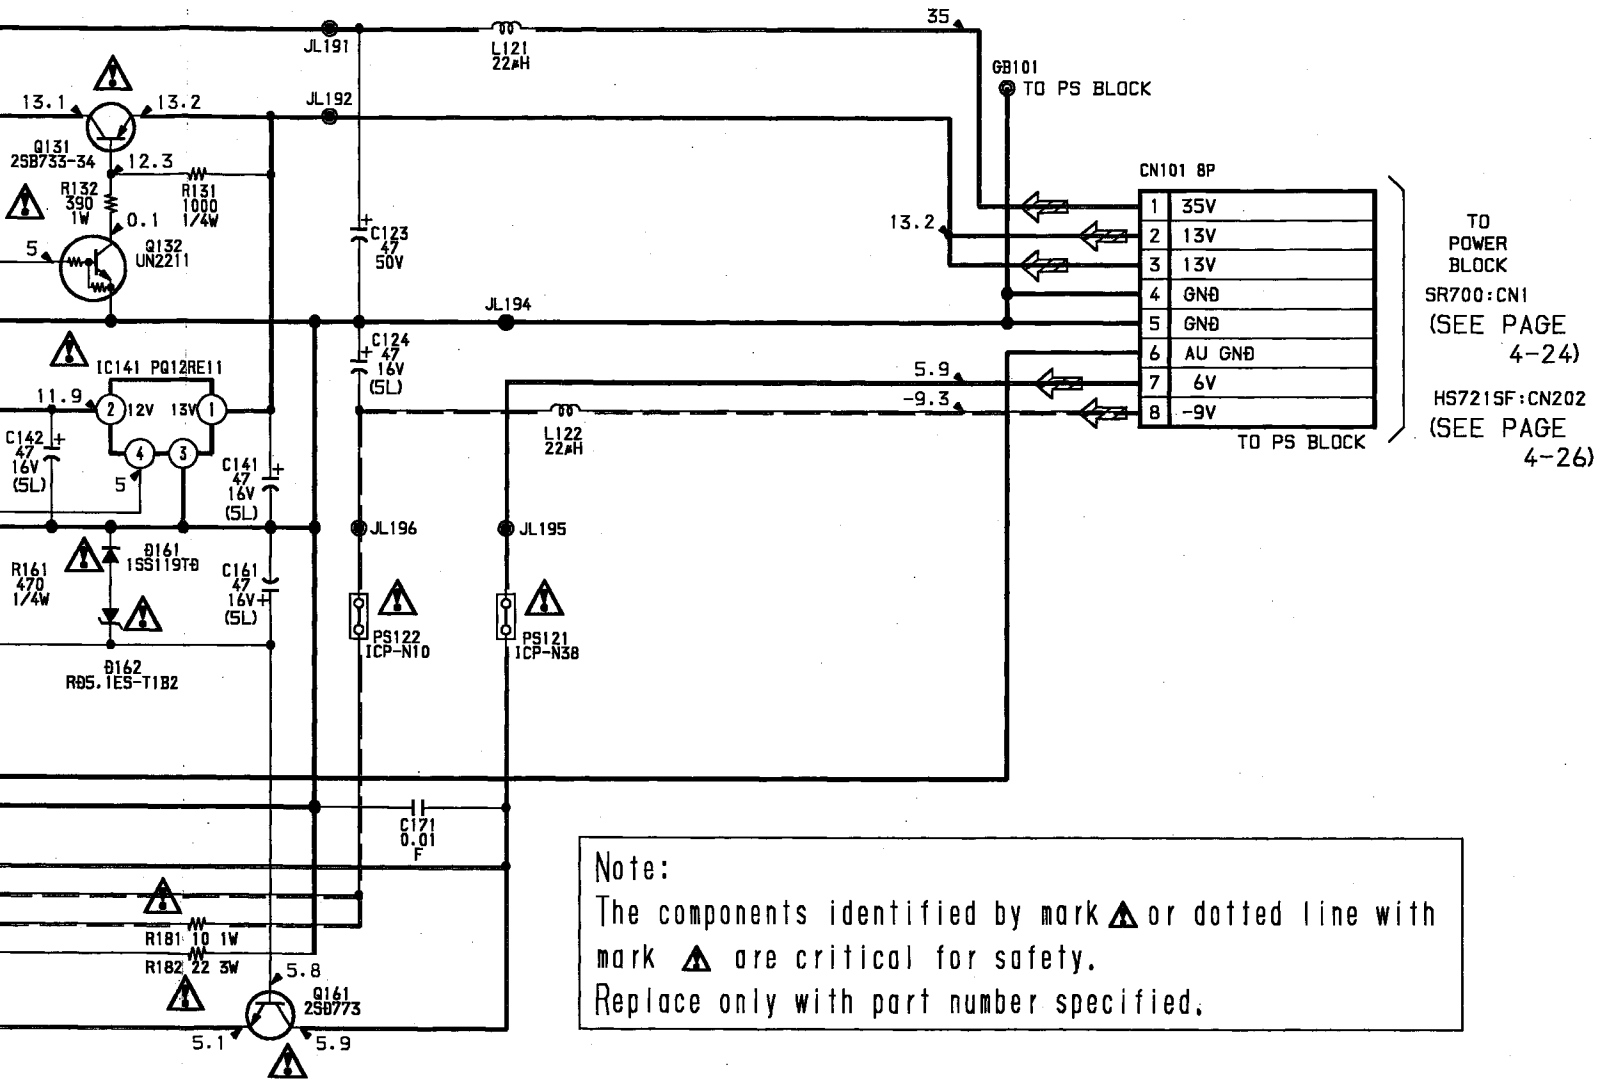


POWER BLOCK (SR700) SCHEMATIC DIAGRAM AND PRINTED WIRING BOARD

— Ref. No. : Power Board: 3,000 Series —



POWER BOARD (SR700)

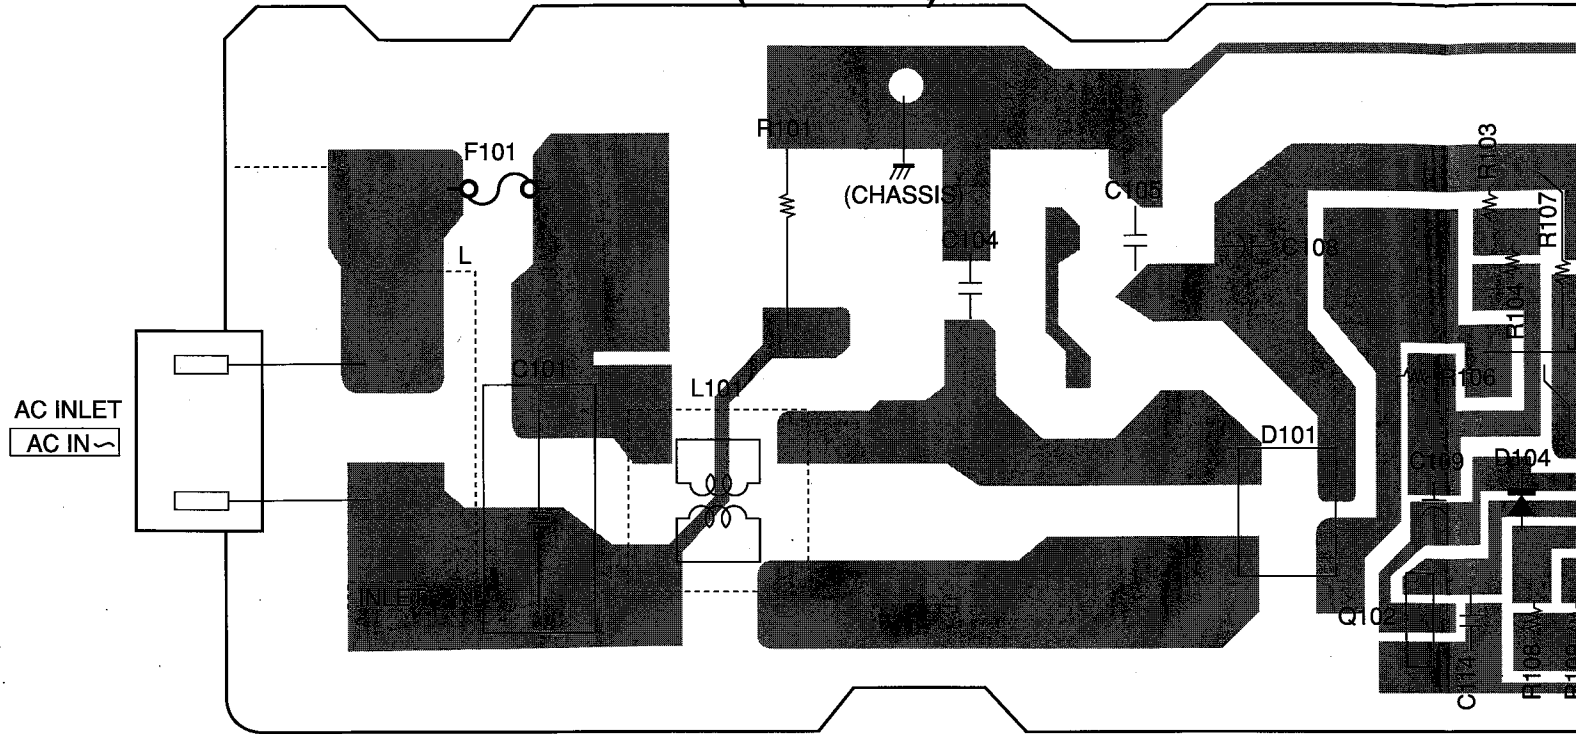

1 POWER BOARD (SR700)

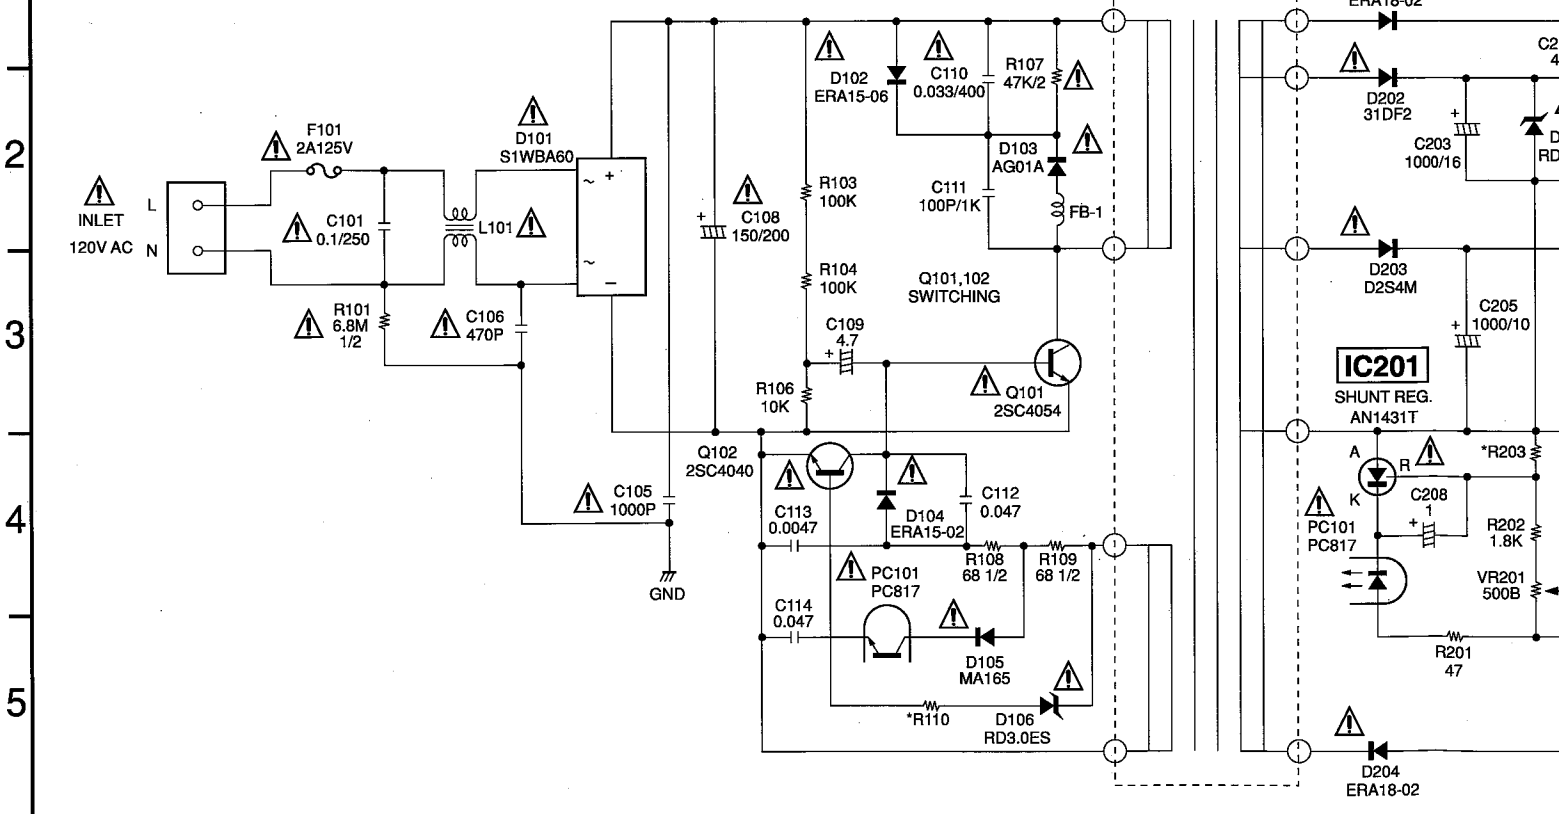

US, Canadian, Mexican, Panamanian Model.

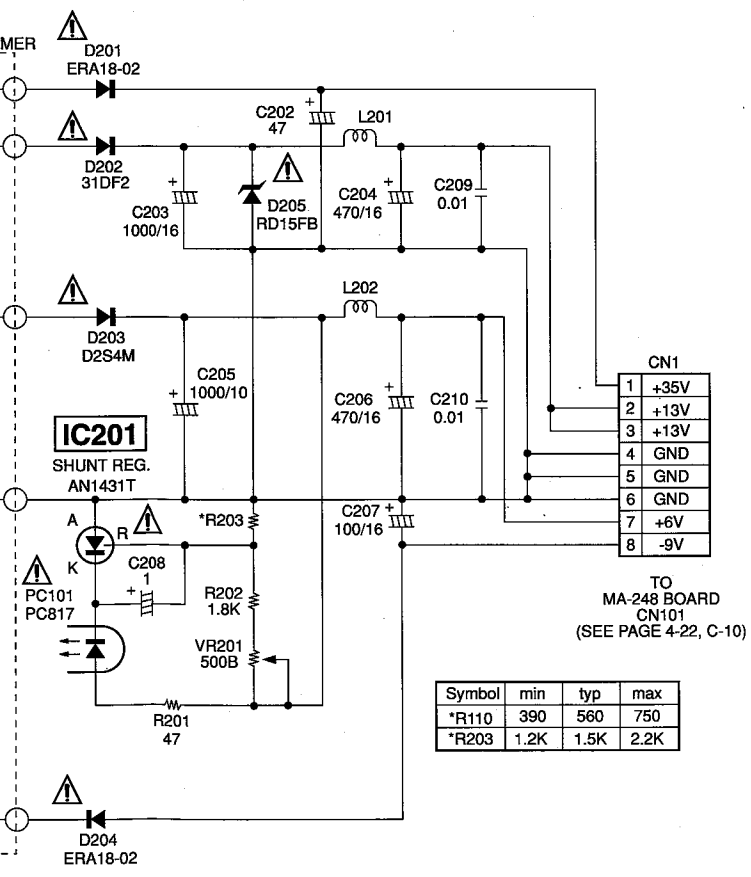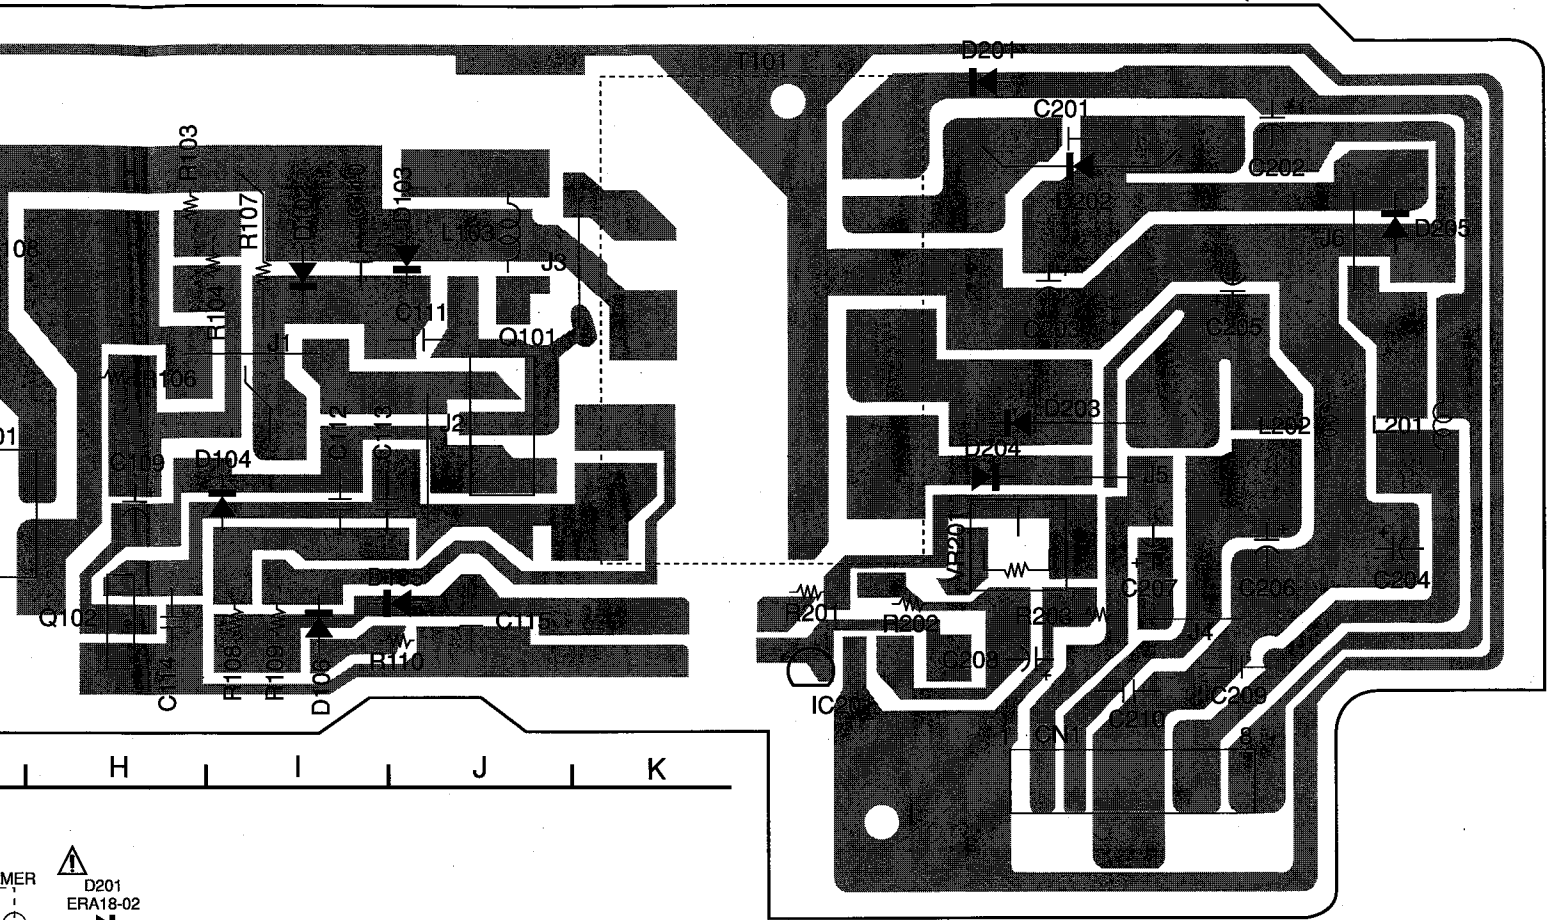

CN1

1	+35V
2	+13V
3	+13V
4	GND
5	GND
6	GND
7	+6V
8	-9V

TO
MA-248 BOARD
CN101
(SEE PAGE 4-22, C-10)



Symbol	min	typ	max
*R110	390	560	750
*R203	1.2K	1.5K	2.2K

SLV-360/390/390PX/660HF/690HF/L2MX/L2PA/L2PL/L4CS/ L4MX/L4PA/L4PL/L6HFCS/L6HFMX/L6HFPA/L6HFPL


POWER BLOCK (HS721SF) SCHEMATIC DIAGRAM AND PRINTED WIRING BOARD

— Ref. No. : Power Board: 4,000 Series —


POWER BOARD (HS721SF)

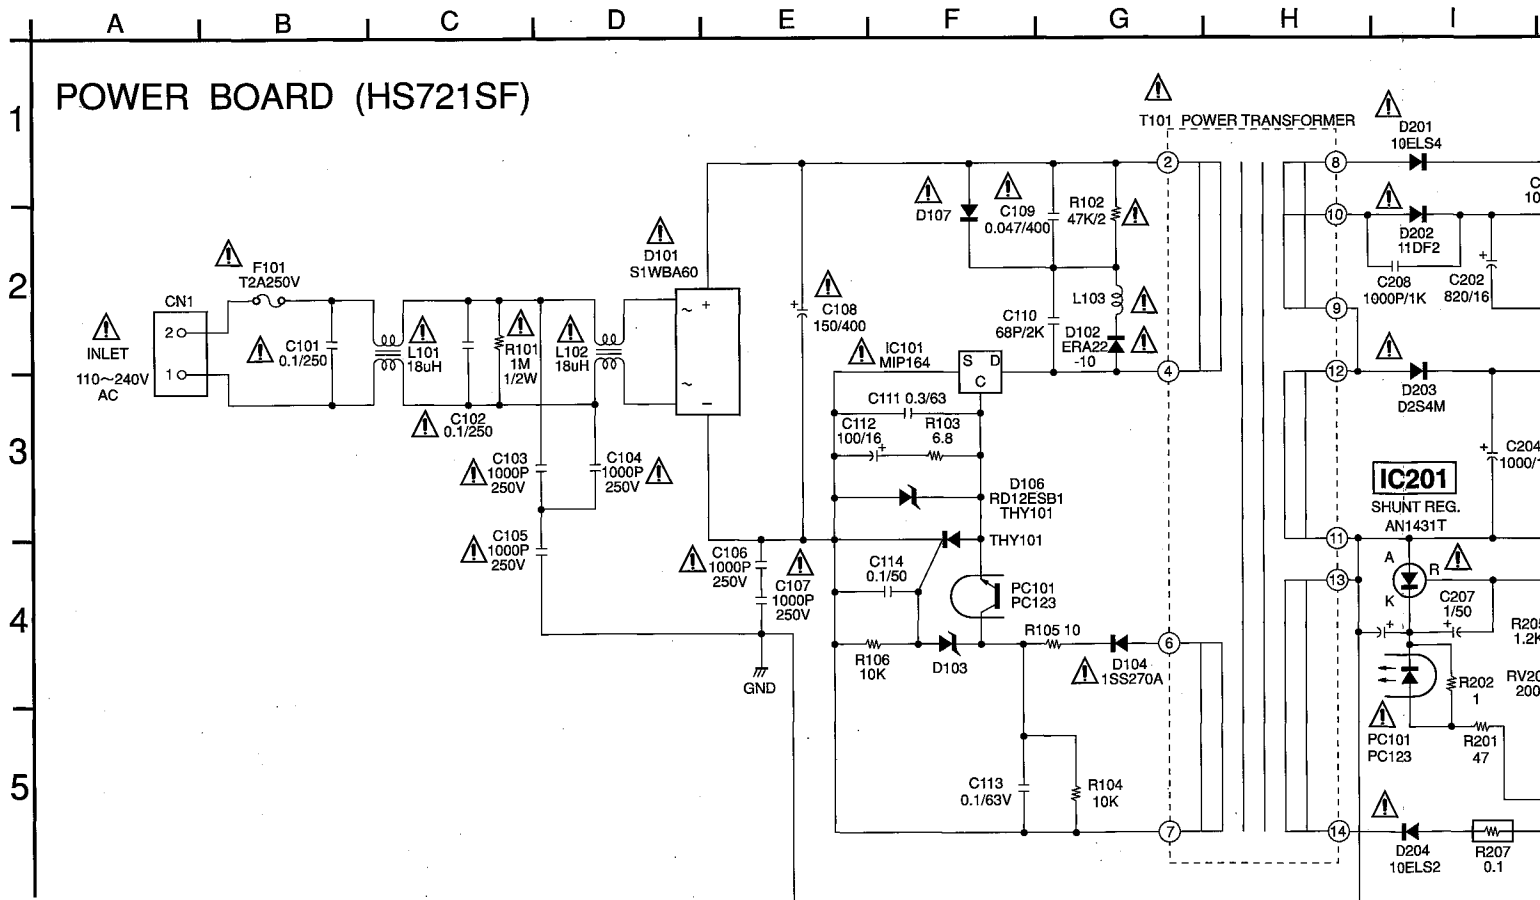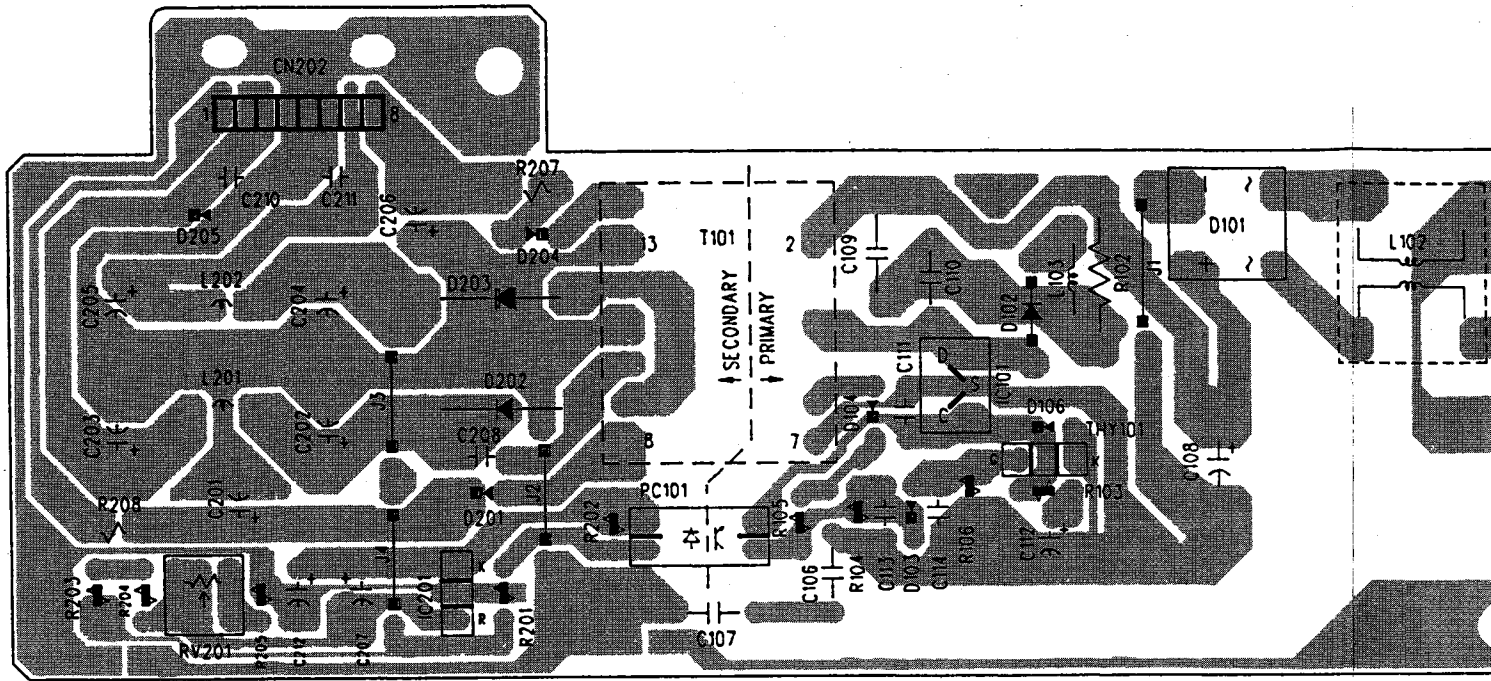

Chilean, Philippine Model.

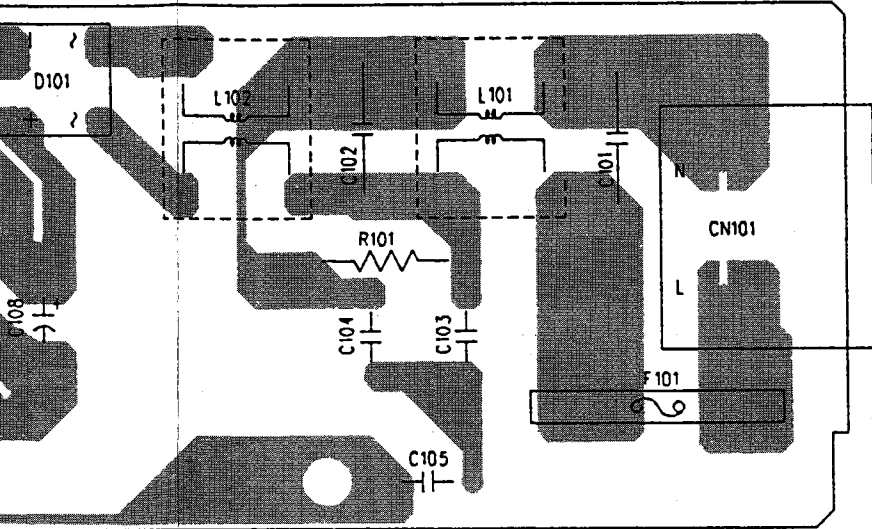

H | I | J | K | L

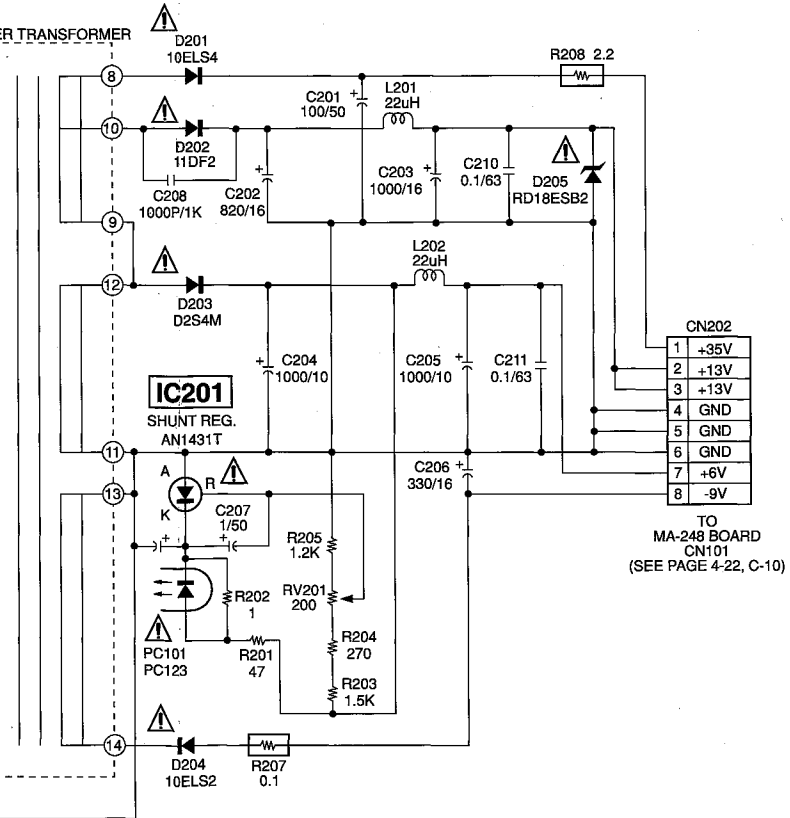

SLV-360/390/390PX/660HF/690HF/L2MX/L2PA/L2PL/L4CS/ L4MX/L4PA/L4PL/L6HFCS/L6HFMX/L6HFPA/L6HFPL RMT-V181/V181A/V182A/V182B/V182D

SONY® SERVICE MANUAL

SUPPLEMENT-2

File this supplement-2 with the Service Manual.


Subject:

- MA-248 Board Modification
- H Mechanism Modification
- Power Block Repair Parts List
- Mechanism Error Code Indication

(SL610279)

- The MA-248 board has been modified and the suffix of its part number is changed to -15.
- This supplement-1 contains the information about the above mentioned modification.
- Before repairing, confirm the part number printed on the MA-248 board as shown below.

MA-248 BOARD (CONDUCTOR SIDE)

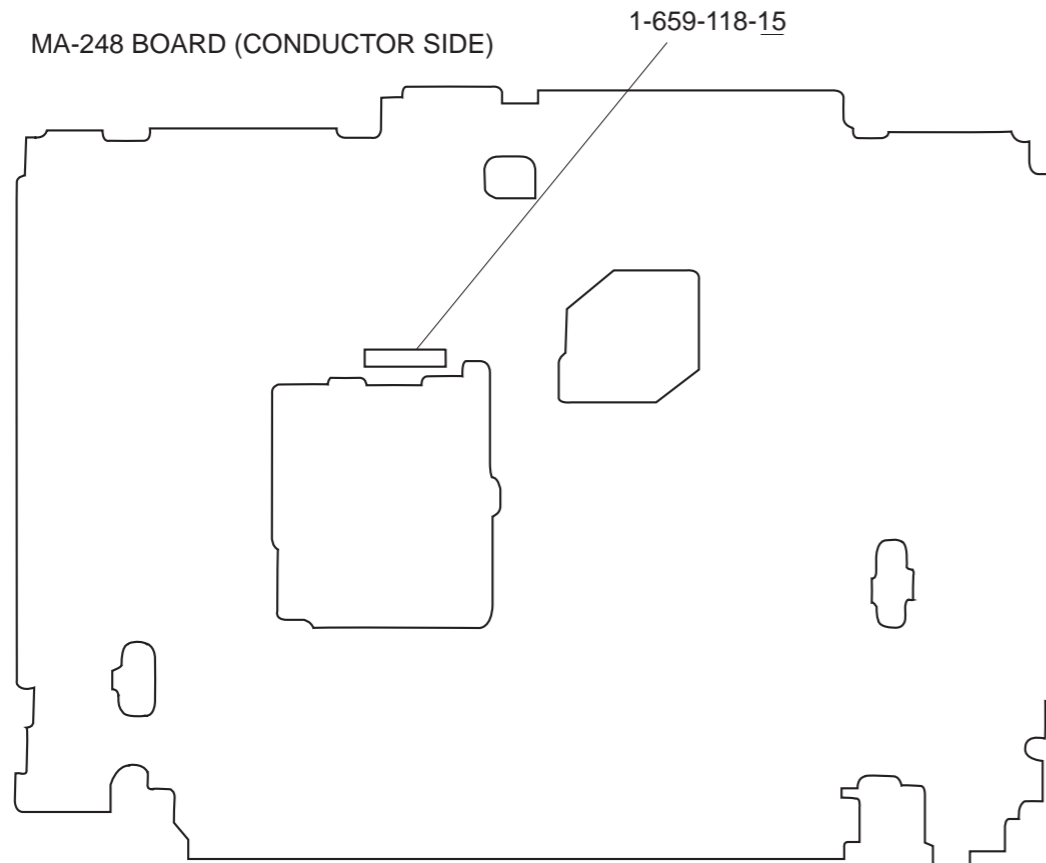

US Model
SLV-360/390/660HF/690HF
Canadian Model
SLV-360/660HF/690HF
MEXICAN Model
SLV-L2MX/L4MX/L6HFMX
PANAMANIAN Model
SLV-L2PA/L4PA/L6HFPA
PHILIPPINE Model
SLV-L2PL/L4PL/L6HFPL
CHILEAN Model
SLV-L4CS/L6HFCS
PX Model
SLV-390PX

1. MA-248 BOARD DIFFERENT PARTS LIST

Board No.	1-659-118-14		1-659-118-15	
Ref.No.	Part No.	Description	Part No.	Description
	*A-6781-951-A	MA-248 BOARD, COMPLETE(690HF)	*A-6782-951-A	MA-248 BOARD, COMPLETE(690HF:US)
	—	—	*A-6791-050-A	MA-248 BOARD, COMPLETE(690HF:Canadian)
	*A-6781-952-A	MA-248 BOARD, COMPLETE(390,390PX)	*A-6782-952-A	MA-248 BOARD, COMPLETE(390)
	—	—	*A-6791-051-A	MA-248 BOARD, COMPLETE(390PX)
	*A-6782-767-A	MA-248 BOARD, COMPLETE(660HF,L6HF:CS,PL)	*A-6782-767-A	MA-248 BOARD, COMPLETE(660HF:US)
	—	—	*A-6791-049-A	MA-248 BOARD, COMPLETE(660HF:Canadian,L6HF:PL)
	*A-6782-768-A	MA-248 BOARD, COMPLETE(L6HF:MX,PA)	*A-6782-768-A	MA-248 BOARD, COMPLETE(L6HF:CS,MX,PA)
C252	1-163-241-11	CERAMIC CHIP 39PF 5% 50V	1-163-243-11	CERAMIC CHIP 47PF 5% 50V
C259	1-163-251-11	CERAMIC CHIP 100PF 5% 50V	1-163-251-11	CERAMIC CHIP 100PF 5% 50V (EXCEPT L2)
C259	—	—	1-163-257-11	CERAMIC CHIP 180PF 5% 50V (L2)
C267	1-163-239-11	CERAMIC CHIP 33PF 5% 50V	1-163-237-11	CERAMIC CHIP 27PF 5% 50V
C500	—	—	1-164-232-11	CERAMIC CHIP 0.01uF 10% 50V
C512	1-164-232-11	CERAMIC CHIP 0.01uF 50V	—	—
C547	1-163-125-00	CERAMIC CHIP 220PF 5% 50V (EXCEPT L6HF:MX,PA)	1-163-125-00	CERAMIC CHIP 220PF 5% 50V (EXCEPT L6HF:CS,MX,PA)
IC501	8-759-391-35	M37775M5H321GP	8-759-437-14	M37775M7H121GP(390,390PX,690HF)
IC501	—	—	8-759-437-18	M37775M5H334GP(360,660HF,L2,L4,L6HF)
JR275	—	—	1-216-296-91	CONDUCTOR CHIP (3216) (EXCEPT L2)
R212	1-208-782-11	METAL GLAZE 2.2K 0.50% 1/10W (L2)	1-208-786-11	METAL GLAZE 1.5K 0.50% 1/10W (360,390,390PX,L2,L4)
R212	1-208-800-11	METAL GLAZE 5.6K 0.50% 1/10W (EXCEPT L2)	1-208-800-11	METAL GLAZE 5.6K 0.50% 1/10W (660HF,690HF,L6HF)
R219	1-216-049-91	METAL GLAZE 1K 5% 1/10W (660HF,690HF,L6HF)	1-216-049-91	METAL GLAZE 1K 5% 1/10W (EXCEPT L2)
R219	1-216-053-00	METAL GLAZE 1.5K 5% 1/10W (360,390,390PX,L2,L4)	1-216-053-00	METAL GLAZE 1.5K 5% 1/10W (L2)
R229	1-216-065-00	METAL CHIP 4.7K 5% 1/10W	1-208-798-11	METAL GLAZE 4.7K 0.50% 1/10W (660HF, 690HF, L6HF)
R229	—	—	1-208-786-11	METAL GLAZE 1.5K 0.50% 1/10W (360, 390, 390PX, L4)
R229	—	—	1-208-790-11	METAL GLAZE 2.2K 0.50% 1/10W (L2)
R240	1-216-053-00	METAL CHIP 1.5K 5% 1/10W	1-208-786-11	METAL GLAZE 1.5K 0.50% 1/10W (EXCEPT L2)
R240	1-216-053-00	METAL CHIP 1.5K 5% 1/10W	1-216-053-00	METAL CHIP 1.5K 5% 1/10W (L2)
R251	1-216-049-91	METAL GLAZE 1K 5% 1/10W	1-216-039-00	METAL GLAZE 390 5% 1/10W
R253	1-216-043-91	METAL GLAZE 560 5% 1/10W	1-216-033-00	METAL GLAZE 220 5% 1/10W
R264	1-216-049-91	METAL GLAZE 1K 5% 1/10W	1-216-073-00	METAL GLAZE 10K 5% 1/10W
R268	1-216-089-91	METAL GLAZE 47K 5% 1/10W	1-216-097-91	METAL GLAZE 100K 5% 1/10W
R276	1-216-103-00	METAL GLAZE 100K 5% 1/10W	1-216-103-00	METAL GLAZE 180K 5% 1/10W
R280	1-216-081-00	METAL CHIP 22K 5% 1/10W (EXCEPT L2)	1-216-081-00	METAL CHIP 22K 5% 1/10W (660HF, 690HF, L2, L6HF)
R280	1-216-089-11	METAL CHIP 47K 5% 1/10W (L2)	1-216-085-00	METAL GLAZE 33K 5% 1/10W (360, 390, 390PX, L4)
R317	1-216-073-00	METAL GLAZE 10K 5% 1/10W	1-216-071-00	METAL GLAZE 8.2K 5% 1/10W
R473	1-216-049-91	METAL GLAZE 1K 5% 1/10W	1-216-073-00	METAL GLAZE 10K 5% 1/10W

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.



2. MA-248 PRINTED WIRING BOARD

— Ref. No. : MA-248 Board; 1,000 Series —

There are few cases that the part printed on this diagram isn't mounted in this model.


MA-248 BOARD

CN101	G-1	IC506	H-12
CN201	A-9	IC507	F-11
CN301	B-6	IC508	H-1
CN302	C-2	IC509	H-12
CN501	I-12	IC801	B-7
CN502	G-3		
CN503	H-3	Q131	E-1
CN505	E-3	Q132	E-2
CN506	G-9	Q161	F-1
CN509	J-1	Q204	B-11
		Q206	D-11
D131	E-2	Q208	B-11
D161	E-1	Q209	A-10
D162	E-1	Q210	B-10
D201	C-10	Q211	A-11
D202	D-11	Q212	B-10
D204	C-11	Q213	C-10
D205	C-12	Q214	C-10
D301	C-5	Q215	B-9
D302	C-5	Q216	B-9
D391	C-2	Q217	B-9
D503	G-7	Q218	C-9
D504	H-3	Q219	B-10
D505	H-3	Q220	C-11
D506	G-10	Q261	E-9
D507	G-8	Q299	B-8
D508	G-9	Q301	C-5
D510	J-12	Q302	B-5
D513	F-9	Q303	B-6
D701	D-12	Q304	B-5
D702	D-12	Q391	C-1
D703	D-13	Q392	C-2
D704	G-13	Q502	H-6
D801	B-3	Q503	F-11
D802	A-3	Q504	F-2
		Q701	G-12
		Q702	D-12
IC141	D-1	Q703	D-13
IC201	E-11	Q704	F-12
IC301	C-6	Q705	F-12
IC351	C-4	Q801	A-7
IC361	C-6		
IC501	G-9	RV341	C-2
IC502	H-10	RV381	D-2
IC503	H-9	RV391	C-2
IC504	J-9		

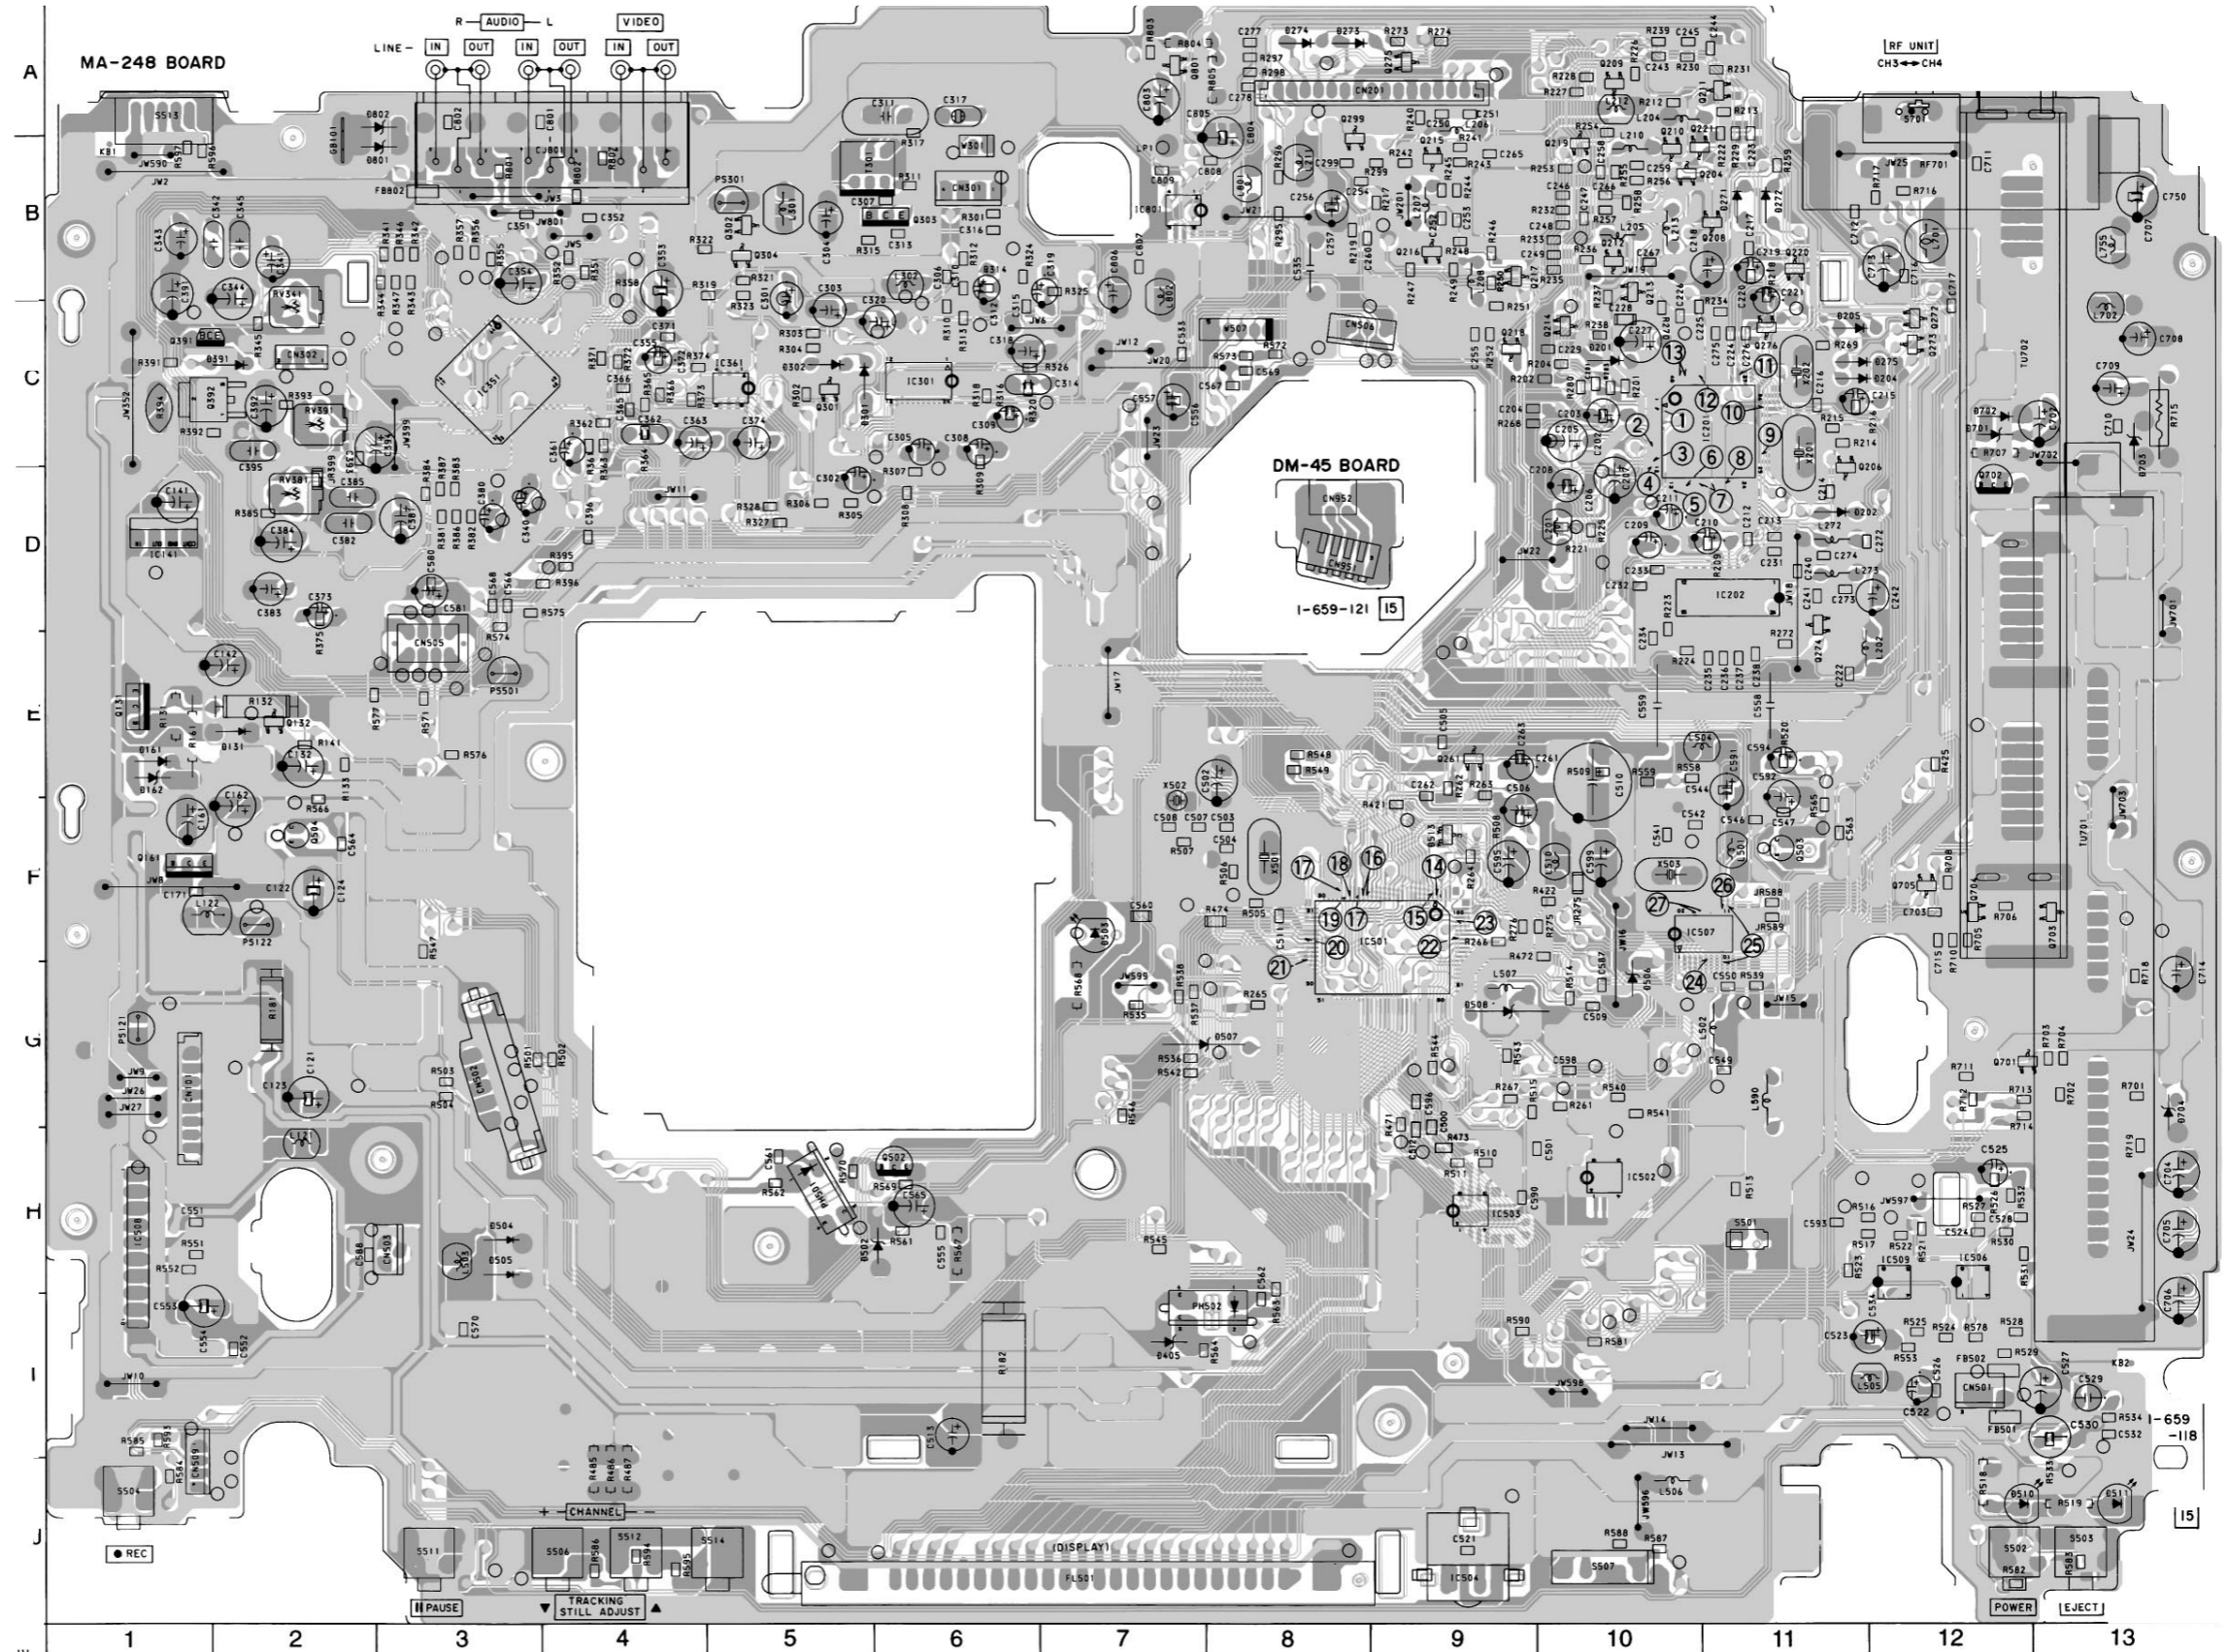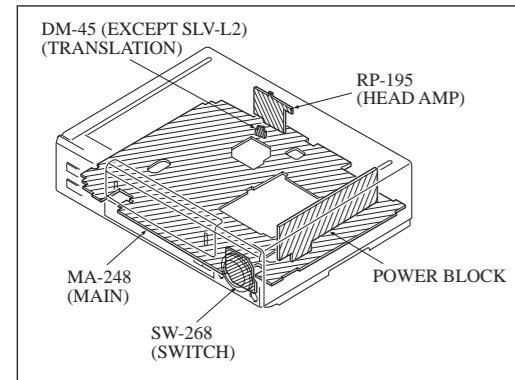


3. SCHEMATIC DIAGRAM


Page 4-10 to 4-11 Location: A-6 to B-12

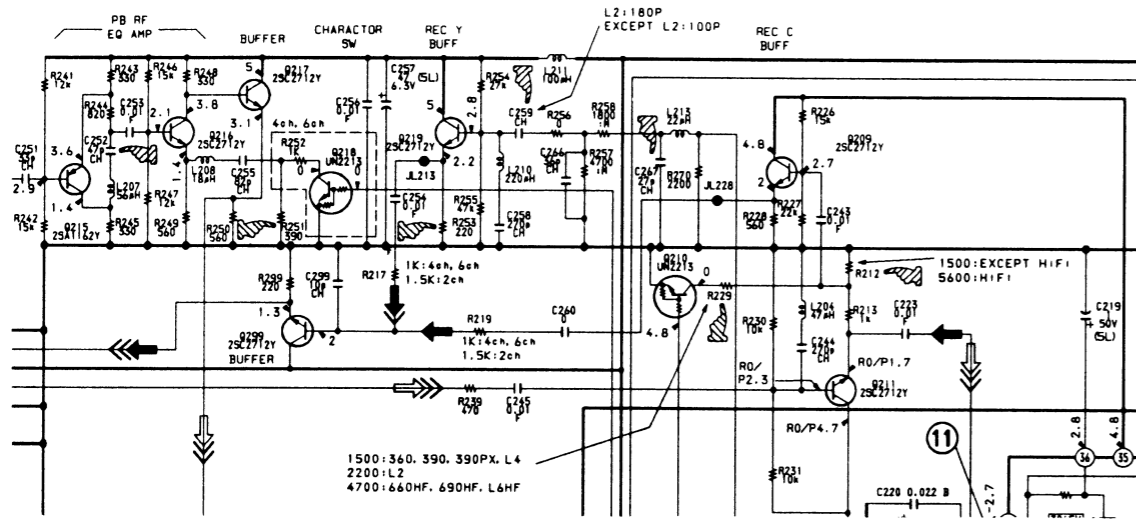

Page 4-10 to 4-11 Location: H-4 to I-8

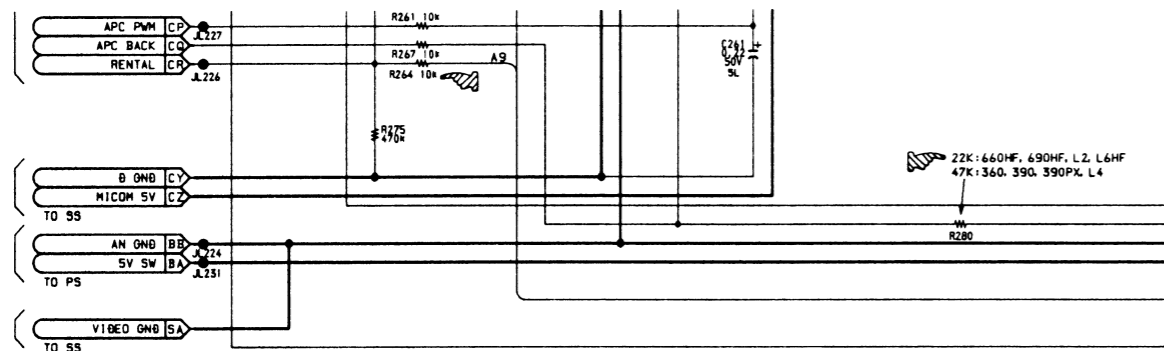


Page 4-11 Location: H-14

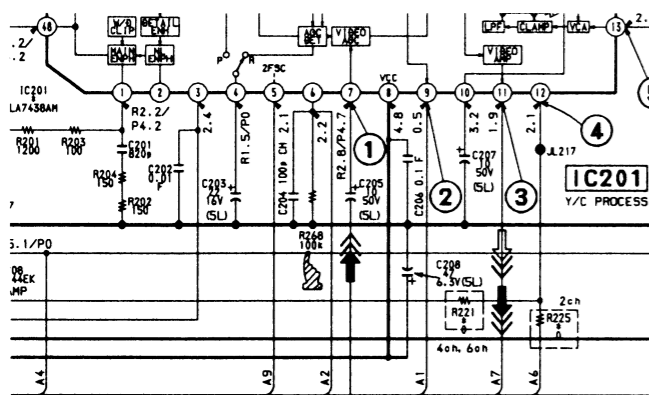


- : Points added parts.
- : Points deleted parts.
- : Points changed parts.


Page 4-14 Location: C-21 to G-24

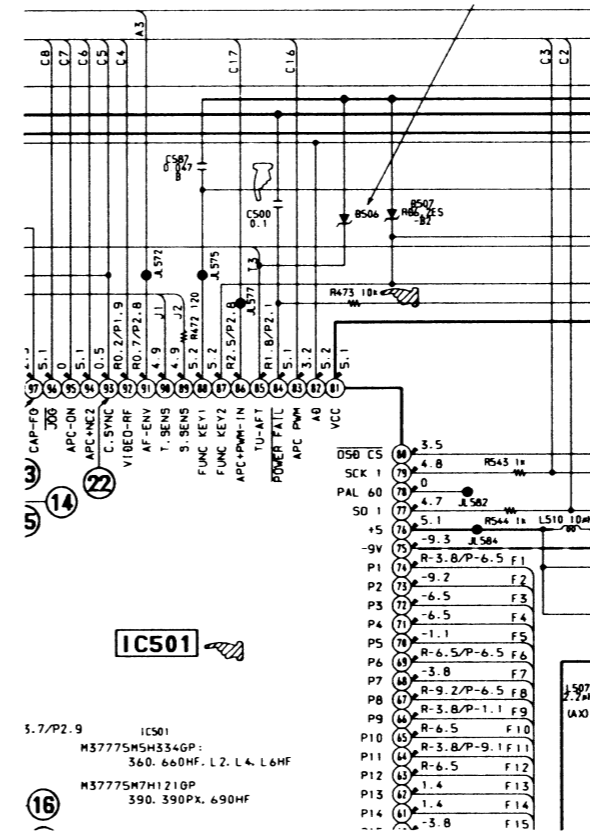


Page 4-14 Location: H-14 to I-17

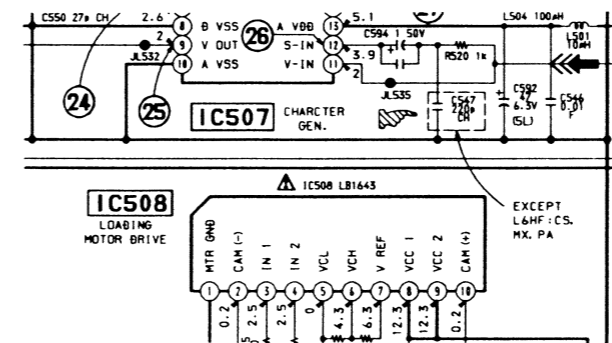

Page 4-15 Location: K-23 to L-26

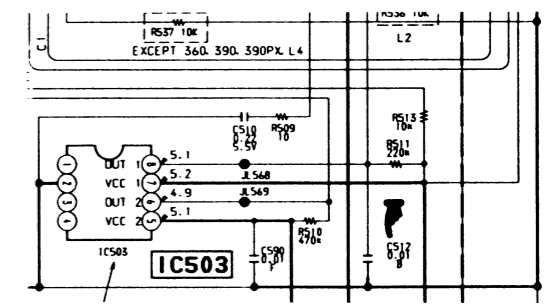


Page 4-17 Location: B-11

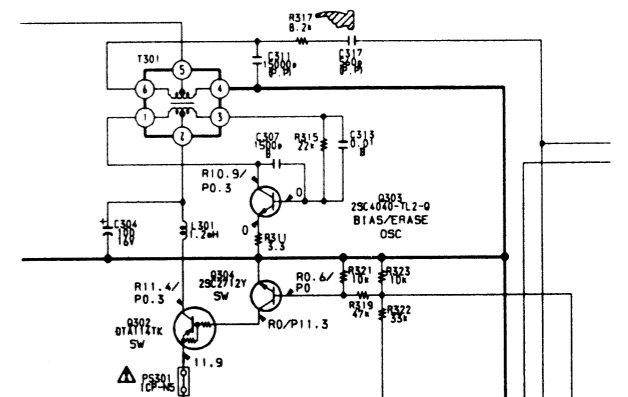

4. H MECHANISM MODIFICATION

Page 5-3

5-1-3. VHS MECHANISM DECK ASSEMBLY-1

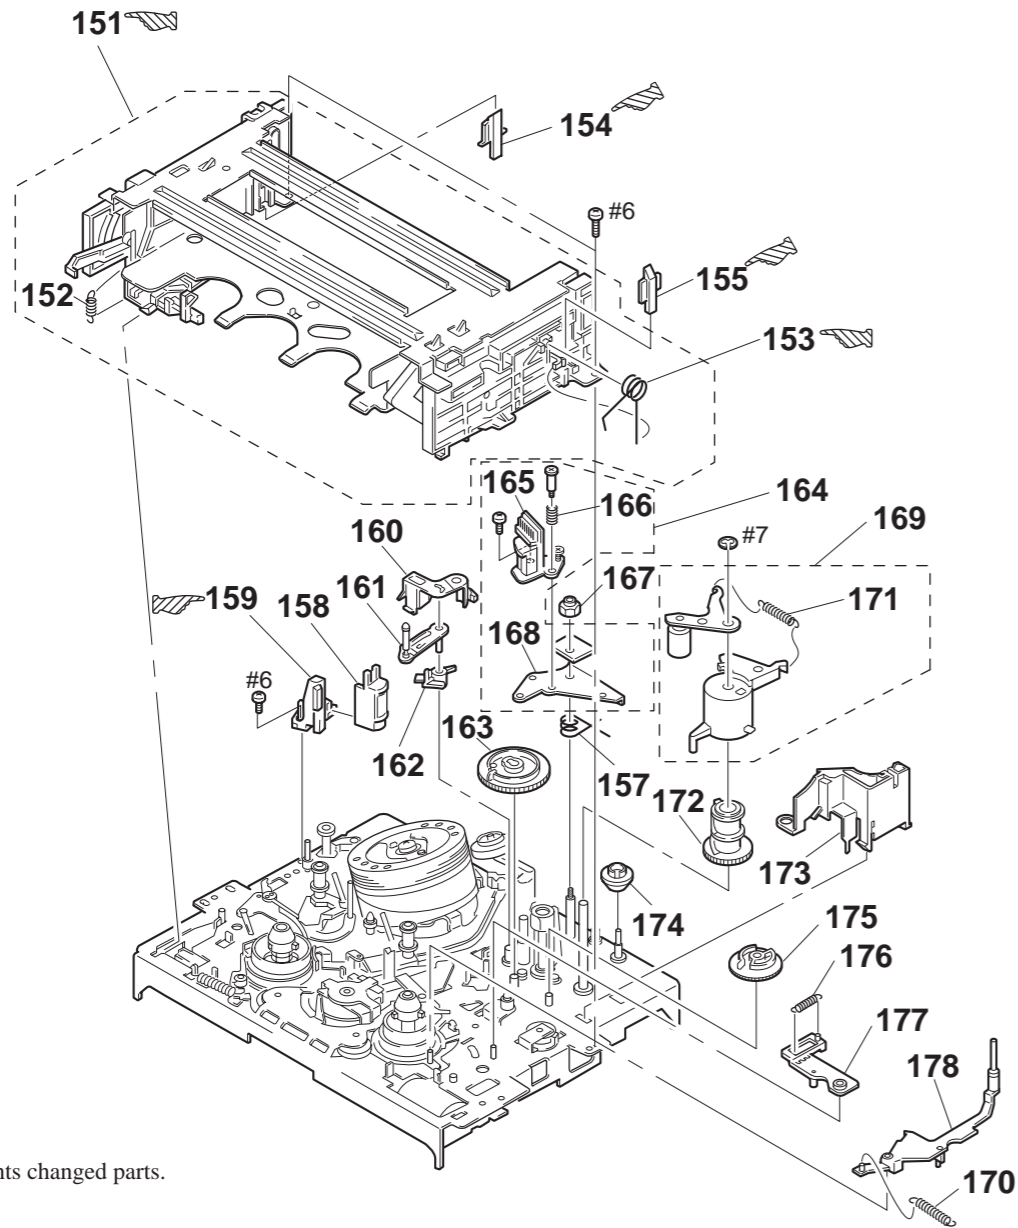

Page 5-4

5-1-4. VHS MECHANISM DECK ASSEMBLY-2


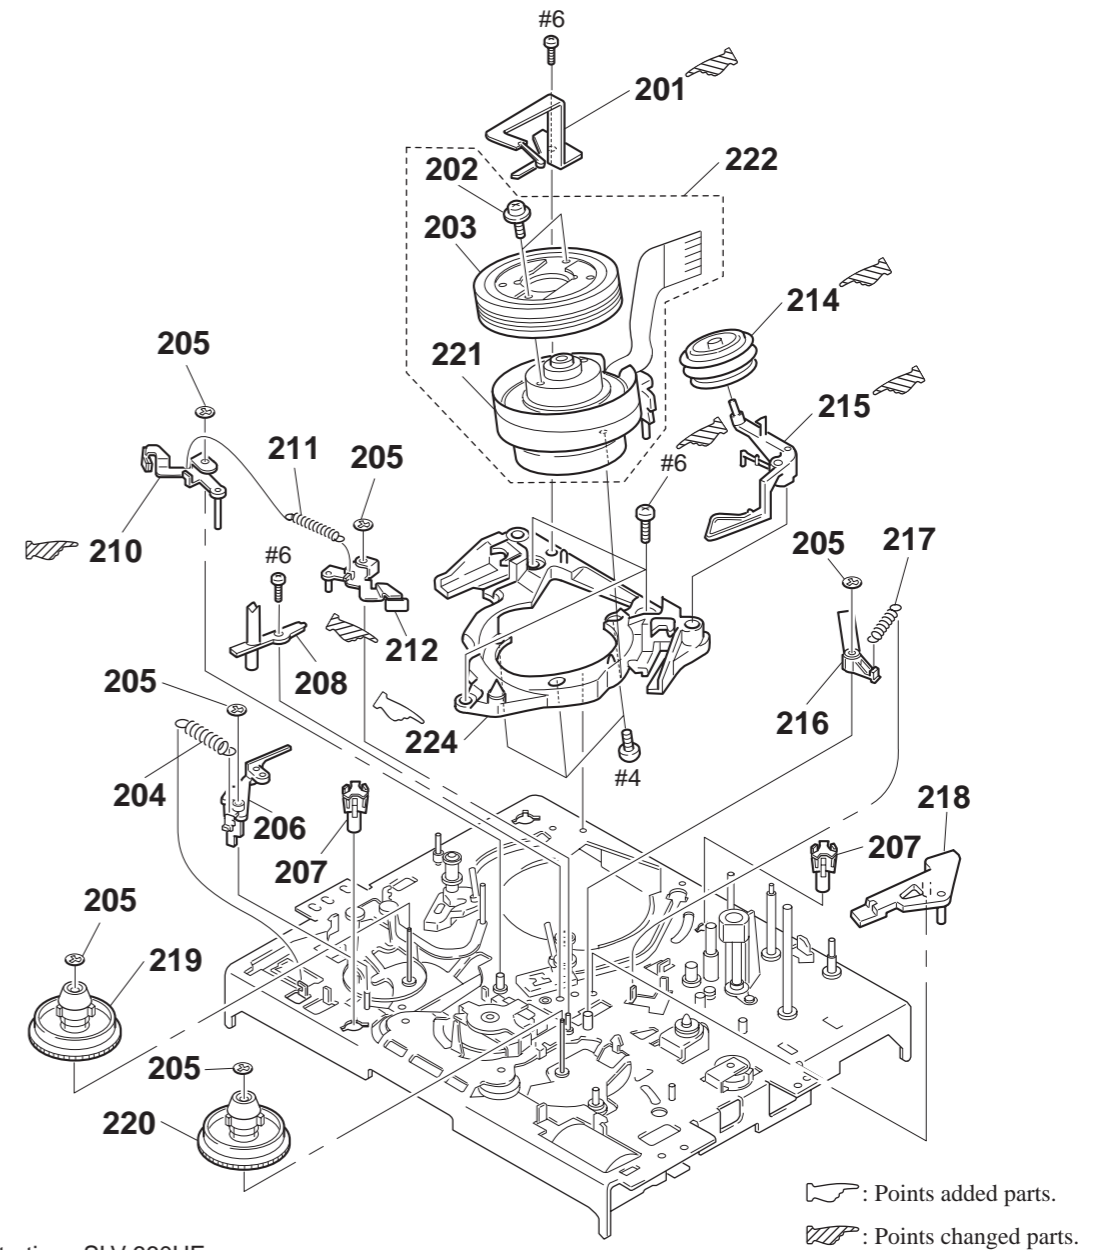


Illustration : SLV-660HF

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
151	A-6759-603-C	FL BLOCK ASSY		166	3-960-439-02	SPRING (ACE), COMPRESSION	
152	3-958-467-01	SPRING, TENSION COIL		167	3-942-867-01	NUT, AC HEIGHT ADJUSTMENT	
153	3-970-471-01	SPRING, TORSION		168	3-958-491-01	BASE, ACE	
154	3-970-472-01	PLATE, LIGHT GUIDE, END SENSOR		169	A-6746-072-A	PRESS BLOCK ASSY, PINCH	
155	3-970-473-01	PLATE, LIGHT GUIDE, TOP SENSOR		170	3-958-505-01	SPRING (SOFT BRAKE T), TENSION	
157	3-958-487-01	SPRING, (ACE) TORSION COIL		171	3-958-455-01	SPRING (PINCH), TENSION	
158	1-500-144-11	HEAD, FE		172	3-958-151-01	GEAR, ELEVATOR	
159	X-3945-348-2	FEH ASSY		173	3-958-454-01	OPNER, LID	
160	3-962-298-01	BRACKET, TG7 TAPE		174	3-958-501-01	SCREW, ACE ADJUSTMENT	
161	X-3944-797-1	TG8 ASSY		175	3-958-153-01	GEAR, PRESS	
162	3-958-421-01	HOLDER, TG8		176	3-958-462-01	SPRING (RVS BRAKE), TENSION	
163	3-958-152-01	GEAR, TG8		177	X-3943-885-1	ARM ASSY, RVS BRAKE	
164	A-6736-103-A	ACE BLOCK ASSY		178	X-3943-882-1	BRAKE (T) ASSY, SOFT	
165	1-506-485-11	PIN, CONNECTOR 6P					

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
201	X-3943-899-7	GROUND ASSY, SHAFT(EXCEPT L2)		215	3-958-508-02	ARM, HC	
202	2-643-205-01	SCREW		216	3-960-139-01	ARM, NEUTRALITY	
203	8-848-576-02	UPPER DRUM ASSY DZR-45-R (M901) (660HF/690HF/L6HF)		217	3-958-535-01	SPRING, TENSION	
204	3-958-443-01	SPRING, STRETCH COIL SPRING		218	3-960-138-01	ARM, PENDULUM COMPULSION	
205	3-669-595-00	WASHER (2), STOPPER		219	X-3943-902-1	TABLE, REEL (S) ASSY	
206	3-958-450-01	BRAKE (S), SOFT		220	X-3943-903-1	TABLE, REEL (T) ASSY	
207	3-958-390-01	SHAFT, PC BOARD		221	8-848-658-11	LOWER DRUM ASSY DZL-45B/J-RP (M901) (660HF/690HF/L6HF)	
208	3-958-391-01	PLATE, LIGHT GUIDE, LED		222	1-759-191-11	DRUM ASSY DZH-71B-R (M901)(L2)	
210	X-3945-443-1	BRAKE (S) ASSY, MAIN		222	8-848-681-11	DRUM ASSY DZH-73B/Q-RP (M901) (360/390/390PX/L4)	
211	3-958-517-01	SPRING, TENSIONCOIL		224	3-969-629-01	DRUM BASE	
212	X-3945-444-1	ARM (T) ASSY, MAIN BRAKE					
214	X-3944-363-4	ROLLER ASSY, HC					

5-1-6. VHS MECHANISM DECK ASSEMBLY-4

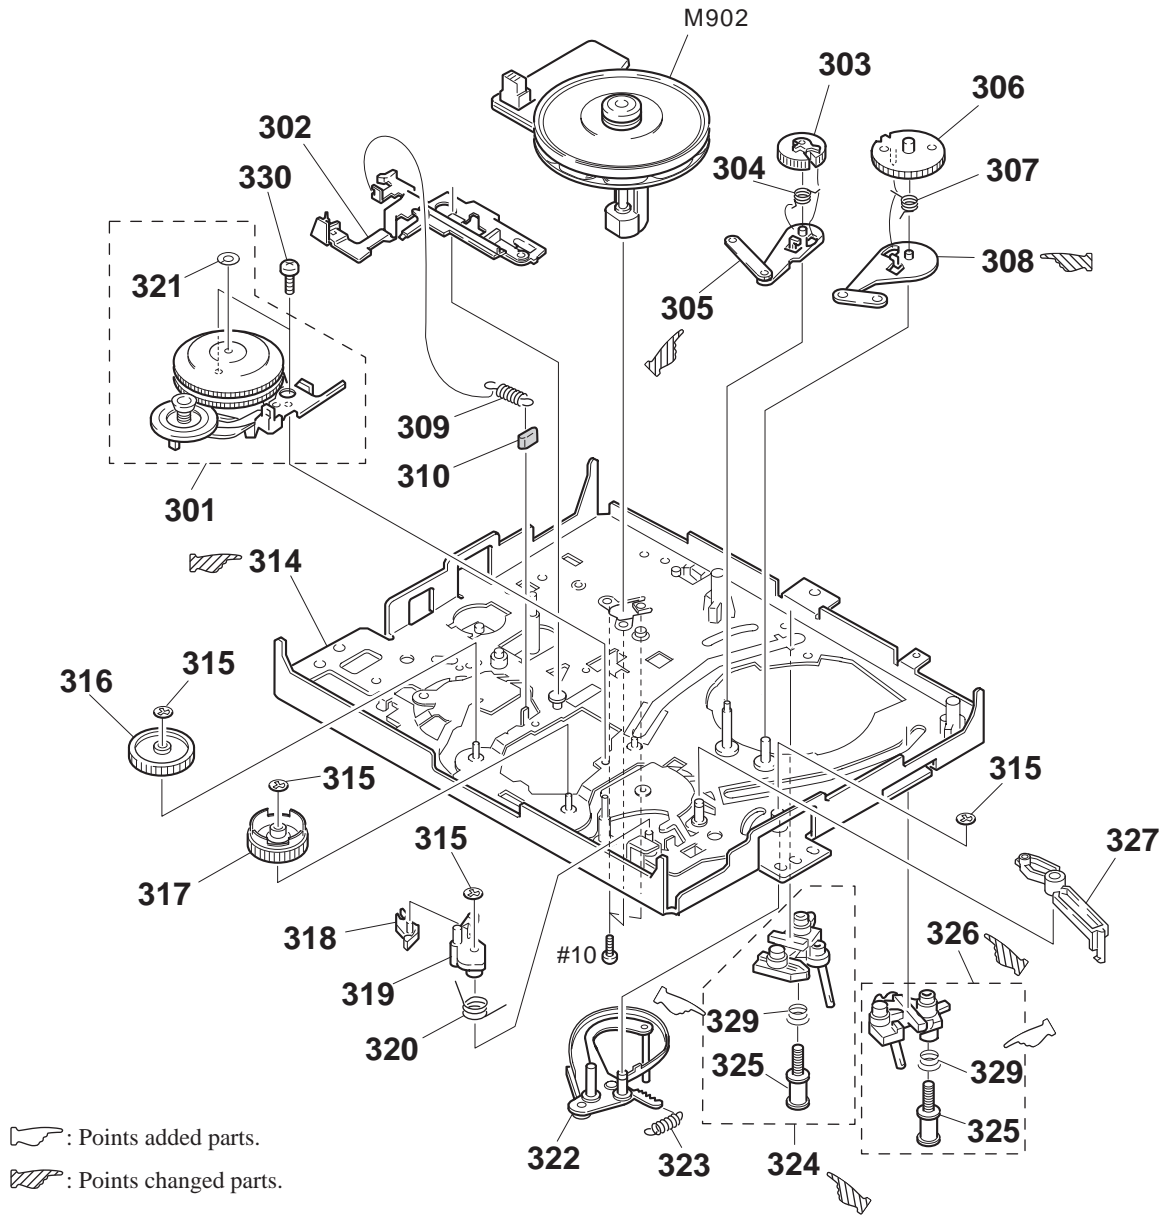

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
301	A-6739-102-A	RKB BLOCK ASSY		317	3-962-959-01	GEAR (S-K), IDLER	
302	X-3943-897-1	LEVER ASSY, TRIGGER		318	3-958-533-01	CLAW, S WINDING	
303	3-958-485-02	GEAR (T), LOADING		319	3-958-532-01	ARM, S WINDING	
304	3-960-449-01	SPRING (T), TORSION COIL		320	3-958-534-01	SPRING, TORSION	
305	X-3943-891-3	LEVER (T) ASSY, LOADING	Points changed parts	321	3-966-092-01	RING, RETAINING, SLIT WASHER	
306	3-958-476-01	GEAR (S), LOADING		322	X-3943-886-1	TG1 ASSY	
307	3-960-448-01	SPRING (S), TORSION COIL		323	3-958-492-01	SPRING (TG1), TENSION COIL	
308	X-3943-890-2	LEVER (S) ASSY, LOADING	Points added parts	324	A-6750-325-A	T BLOCK ASSY, SHUTTLE	Points changed parts
309	3-958-529-01	SPRING (MOMENT), TENSION		325	X-3944-378-1	ROLLER ASSY, GUIDE	
310	3-959-840-11	RUBBER, JOINT		326	A-6750-316-A	SHUTTLE (S) BLOCK ASSY	Points changed parts
314	X-3945-485-4	CHASSIS ASSY, MECHANICAL	Points changed parts	327	3-958-504-01	ARM, FIXED RELEASE	
315	3-669-595-00	WASHER (2), STOPPER		329	3-965-178-01	SPRING	Points added parts
316	3-962-960-01	GEAR (T-K), IDLER		M902	1-698-409-14	MOTOR, DC (CAPSTAN)	

SR700

5. POWER BLOCK REPAIR PARTS LIST

NOTE:

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifique.

When indicating parts by reference number, please include the board name.

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
All resistors are in ohms.
METAL: metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F: nonflammable
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
In each case, u: μ , for example:
uA...: μ A... , uPA... , μ PA... ,
uPB... , *PB... , uPC... , μ PC... ,
uPD... , μ PD...
• CAPACITORS:
uF: μ F
• COILS
uH: μ H

5-1 SR700 (US, Canadian, Mexican, Panamanian Model)

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
	1-468-072-11	POWER BLOCK SR700 *****				< FUSE >	
		< CAPACITOR >				< IC >	
Δ C108	1-107-401-11	ELECT 150uF 200V		Δ F101	1-533-296-11	FUSE	
C109	1-126-963-11	ELECT 4.7uF 50V				< IC >	
C202	1-126-967-11	ELECT 47uF 50V		Δ IC201	8-759-420-19	IC AN1431T	
C203	1-126-183-11	ELECT 1000uF 16V				< PHOTOCOUPLER >	
C204	1-126-935-11	ELECT 470uF @ 16V		Δ PC101	8-719-018-29	PHOTOCOUPLER ON3131	
C205	1-126-797-11	ELECT 1000uF 10V				< TRANSISTOR >	
C206	1-126-935-11	ELECT 470uF 16V		Δ Q101	8-729-904-98	TRANSISTOR 2SC4054	
C207	1-126-933-11	ELECT 100uF 16V		Δ Q102	8-729-012-31	TRANSISTOR 2SC4040Q	
C208	1-126-960-11	ELECT 1uF 50V				< RESISTOR >	
		< DIODE >		R108	1-260-314-51	CARBON 68 1/2W	
Δ D101	8-719-510-06	DIODE S1WBA60		R109	1-260-314-51	CARBON 68 1/2W	
Δ D102	8-719-054-32	DIODE ERA15-06		R110	1-247-825-11	CARBON 560 1/4W	
Δ D103	8-719-058-91	DIODE AG01A					
Δ D104	8-719-920-32	DIODE ERA15-02					
Δ D105	9-900-514-01	DIODE MA165					
Δ D106	8-719-109-61	ZENNER RD3.0ES					
Δ D201	9-900-534-01	DIODE ERA18-02					
Δ D202	8-719-052-52	DIODE 31DF2					
Δ D203	8-719-018-83	DIODE D2S4M					
Δ D204	9-900-534-01	DIODE ERA18-02					
Δ D205	8-719-160-62	DIODE RD15FB					

5-2. HS-721SF (Chilean, Philippine Model)

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
	1-468-073-11	POWER BLOCK HS-721SF *****					
		< CAPACITOR >					
△ C108	1-125-717-11	ELECT	150uF 400V				
C112	1-107-882-11	ELECT	100uF 16V				
C201	1-126-968-11	ELECT	100uF 50V				
C202	1-111-040-11	ELECT	820uF 16V				
C203	1-126-767-11	ELECT	1000uF 16V				
C204	9-980-071-01	ELECT	1000uF 10V				
C205	9-980-071-01	ELECT	1000uF 10V				
C206	1-104-661-11	ELECT	330uF 16V				
C207	1-126-960-11	ELECT	1uF 50V				
C212	1-126-964-11	ELECT	10uF 50V				
		< DIODE >					
△ D101	8-719-510-06	DIODE	S1WBA60				
△ D102	8-719-312-16	DIODE	EG01C				
D103	8-719-110-41	ZENNER	RD15ES				
△ D104	9-980-073-01	DIODE	1SS270A				
D106	8-719-110-30	ZENNER	RD12ES				
		< FUSE >					
△ F101	1-532-388-31	FUSE	2A 250V				
		< IC >					
△ IC101	9-939-634-01	IC	MIP164				
△ IC201	8-759-420-19	IC	AN1431				
		< PHOTOCOUPLER >					
△ PC101	8-749-924-84	PHOTOCOUPLER	PS-2561				
		< THYRISTOR >					
THY1	8-719-046-54	THYRISTOR	03P4M				

Note: The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

6. MECHANISM ERROR CODE INDICATION

Indication on the fluorescent display tube.

E F F
" " "
6-1. 6-2.

6-1. Error State

- 0: No error
- 1: Drum error
- 2: Reel malfunction
- 3: Tape loading error
- 4: Cassette loading error

6-2. Mechanism Mode

- | | |
|---------------------|---|
| 0: Power-on eject | 15: RVS ×1 |
| 1: Power-on initial | 16: RVS ×2 |
| 2: Power-off eject | 17: REV |
| 3: Power-off stop | 18: Power-off initial |
| 4: FF | 19: Mechanism error (power off) |
| 5: REW | 20: REW play |
| 6: REC | 21: Cassette loading |
| 7: REC pause | 22: Tape loading |
| 8: Power-on stop | 23: Power-off loading |
| 9: PB | 24: Mechanism error (power on) |
| 10: FWD ×1 | 25: Power-on eject initial |
| 11: FWD ×2 | 26: Power-off eject initial |
| 12: CUE | 27: APC REC |
| 13: PB pause | 28: Cassette loading (no auto PB check) |
| 14: RVS pause | |

**SLV-360/390/390PX/660HF/690HF/L2MX/L2PA/L2PL/L4CS/
L4MX/L4PA/L4PL/L6HFCS/L6HFMX/L6HFPA/L6HFPL**