


Most - Often - Needed

1939

RADIO
DIAGRAMS
and Servicing Information

Compiled by

M. N. BEITMAN

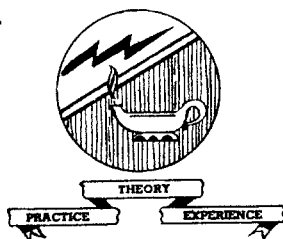

SUPREME PUBLICATIONS
CHICAGO

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

INDEX

Admiral
see Continental

Air-King Prod.
3907 7
4002 7
9822 7
9823 7
9922 7

Airline
see Montgomery

Allied Radio
5-EA 9
E-10845 9
E-10846 9
E-10847 9
E-10848 9
E-12215 8

Amplifier 8

Andrea Radio
25G5 11
43F6 10

Ansley Radio
D-17-A 12
D-18-A 12
D-23-A 12
D-29 12
D-30 12

Arvin
see Noblitt-Sp.

Belmont Radio
403 13
520 12
632 14
665 15

Chevrolet
985425 16
985426 17

Continental
4D 18
5L, 5LL 18
8A 19

Coronado
see Gamble-Sk.

Crosley Corp.
A-158 21
A-168 23-24
A-258 20-22
A-268 23-24
418 25
428 27
548 29-30
568 28
628 26
638 26
828 31-32
1118 33-34
1128 33-34
5548 29-30
5628 26

Delco
see United Mot.

Detrola Radio
Pee-Wee 35
147E 35
165 36
192 37
197 35

Emerson Radio
BA-199 38
BA-201 38
AX-211 40
AX-212 40
AX-217 40
AX-221 39
AX-222 39
AX-235 40

Emerson Radio
AX-237 40
AX-238 40
AX-239 40
AX-240 40
AX-257 40

Fada Radio
354 41
366 42
366-PT 42

Galvin Mfg. Co.
see Motorola

Gamble-Skogmo
A-11 49
476 50
678 52
802 50
803 51
806-A 51
807 50
813 51

General Electric
GD-41 53
GD-41-U 53
GD-60 54
GD-63 55
GD-500 56

Hallicrafters
S-22-R 57-58

Howard Radio
225 59
240 60
250 59
260 59
275, 275C 59
280 59
400, 400A 61-62

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

Howard Radio
 425 61-62
 425A 61-62
 430 63

Knight
 see Allied Radio

Lafayette Radio
 C-16 64
 C-19 64
 259 64
 269 64

Majestic Radio
 C. McCarthy 65
 3C69 67
 3-PW 65
 52 66
 62A 66
 369 67
 419-B 67

Midwest Radio
 8-1939 68
 14-Z-9 69
 17-'39 70-71

Mission Bell
 407 72
 416 72

Montgomery-Ward
 04BR-675A 76
 04BR-676A 76
 62-226 73-74
 62-228 73-74
 62-259 73-74
 62-308 73-74
 62-318 73-74
 62-350 75
 62-351 75
 62-352 75
 62-408 73-74
 62-418 73-74
 62-554 77

Montgomery-Ward
 62-713-A 78
 93WG-602 79
 93WG-603 79
 93WG-800 80-81

Motorola
 9-24 44
 9-24A 44
 9-29 43
 9-39 43
 9-49 45-46
 69K-I 47
 89K-1 48

National Co.
 NC-100A 82

Noblitt-Sparks
 8-A 83
 RE-27 84
 RE-31 86
 RE-37 85
 44-C 83
 RE-45 83
 RE-46 83
 78 85
 89 84
 91 84
 92 86

Oldsmobile
 982126 87
 982127 89
 982153 88

Philco Radio
 L changer 109
 TH-4 91
 39-6 90
 39-7 90
 39-17 92
 39-18 93
 39-25 94
 39-30 95-96
 39-31 95-96

Philco Radio
 39-35 95-96
 39-40 97-98
 39-45 99-100
 39-55 101-102
 39-55 104
 39-70 105-106
 39-71 107
 39-75 105-106
 39-80 105-106
 39-116 102-104
 920 108

Pilot Radio
 T-1451 111
 T-1452 111

RCA Mfg. Co.
 Record Chan. 120
 6Q4 113
 6Q8 115
 6QU 112
 7Q4 113
 7QK4 113
 9TX-21 114
 9TX-22 114
 9TX-23 114
 9TX-31 116
 9TX-32 116
 9TX-33 116
 U-9 117
 U-12 118
 U-25 119-121
 U-26 119-121
 BT-40 122
 40X-30 123
 40X-31 123
 40X-50 123
 45X-5 124
 45X-6 124
 45X-111 124
 45X-112 124
 45X-113 124
 46X-1 125

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

RCA Mfg. Co.

46X-2	125
46X-3	125
46X-11	125
46X-12	125
46X-13	125
46X-21	126
46X-23	126
46X-24	126
K-50	127
M-50	128
U-50	130
BP-55	122
T-55	127
BP-56	122
M-70	129
T-80	131
BP-85	122
96T-4	132
96T-5	132
96T-6	132
96X-1	133
96X-2	133
96X-3	133
96X-11	133
96X-12	133
96X-13	133
96X-14	133
98K-2	135
98T	135
98T-2	134
U-121	136
U-123	136
U-127E	136

Radio Wire Tel.
see Lafayette

Sears, Roebuck

101.505	137
101.510	138
101.511	139
101.526	140
101.546	141
101.555	142

Sears, Roebuck

4632A	137
4633A	137
6003	138
6004	138
6014	137
6015	137
6024	138
6034	138
6036	139
6044	137
6045	137
6058	137
6059	137
6063	137
6064	137
6065	137
6102	140
6103	140
6105	140
6119	141
6120	141
6124	138
6126	141
6127	141
6134	138
6136	139
6144	137
6158	142
6159	142
6164	137
6192	142
6200	141
6250	141

Silvertone
see Sears,

Sparton

219-P	143
409-GL	144
520	145
520-M	145
699	147
1160	146

Spiegels, Inc.

TE	149
5N	148
297	149
620	148
Z-7020	149
Z-7021	149
Z-7126	148
Z-7450	148
Z-7456	149
Z-7458	149

Stewart-Warner

91-61	153
91-81	151
91-111	150
91-648	152
97-56-S	154
97-561 to	
97-569	154
98-61	153
98-81	151
98-111	150
910-61	153
910-81	151
910-111	150

Stromberg-Carlson

335	155
336	155
340	156
341	156
350	157

Truetone

see Western Auto

United Motors

R-675	158
R-678	159-160
R-1134	161
R-1135	161
R-1139	161
R-1142	162
R-1144	163

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

5

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

Wells-Gardner		Zenith Radio		Zenith Radio	
5D2	164	6D-410	184	7S-459	189-190
Western Auto		6D-411	184	7S-460	189-190
D-926	165	6D-413	185-186	7S-461	189-190
D-934	166	6D-414	185-186	7S-462	189-190
D-937	167	6D-425	184	7S-487	191
Westinghouse		6D-426	185-186	7S-488	191
WR-165	168	6D-427	185-186	7S-490	191
WR-256	169	6D-446	185-186	8S-359	178
WR-258	170	6D-455	185-186	5412	175
WR-260	170	6P-416	187	5413	176
WR-264	171-172	6P-417	187	5419	180
Wilcox-Gay Corp.		6P-418	188	5537	181
A-52	173	6P-419	188	5538	183
A-53	174	6P-428	187	5539	182
Zenith Radio		6P-429	188	5657	177
4K-310	175	6P-430	188	5659	184
4K-311	175	6P-447	188	5660	185-186
4K-329	176	6P-448	188	5661	187
4K-355	175	6P-456	188	5662	188
4K-402	180	6P-457	188	5719	189-190
5G-401	181	7S-432	189-190	5721	191
5G-441	182	7S-433	189-190	5807	178
5G-442	182	7S-434	189-190	S-6622	179
5G-461	182	7S-449	189-190	S-7000	192
5G-484	183	7S-450	189-190	S-7001	192
6D-315	177	7S-458	189-190	S-7002	192

ACKNOWLEDGEMENT

To all radio manufacturers represented in this book, due thanks and acknowledgement are given. It is only with the cooperation of these firms that the most-popular diagrams needed by you have been selected and prepared for publication.


M. N. Beitman

Chicago, Ill.


6 COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS


AIR-KING PRODUCTS CO., INC.—BROOKLYN, N. Y.

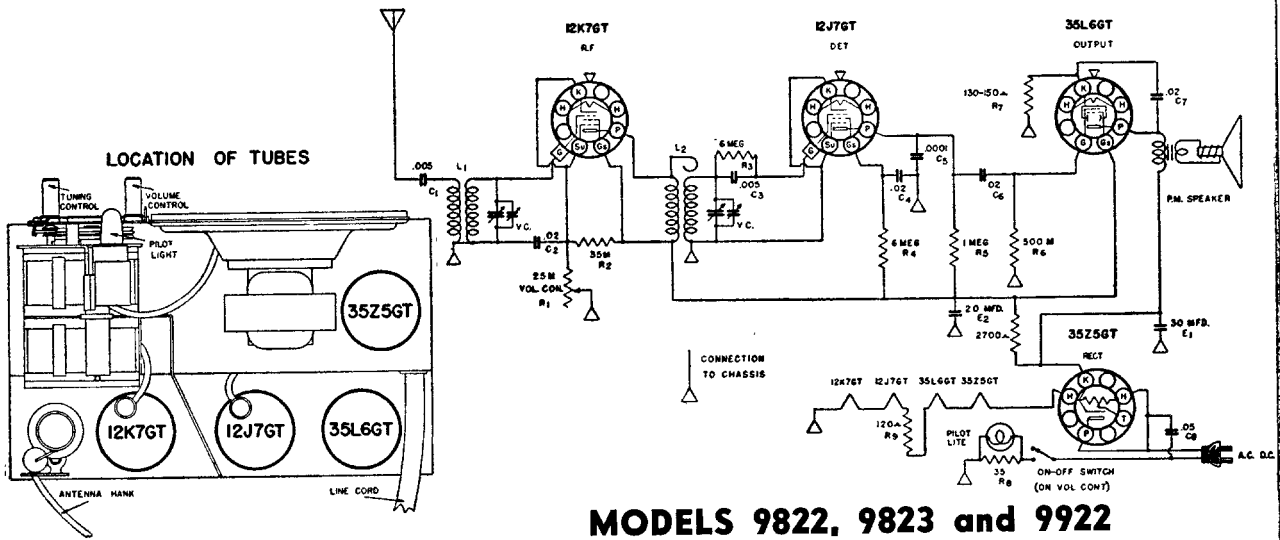

MODELS 9822, 9823 and 9922

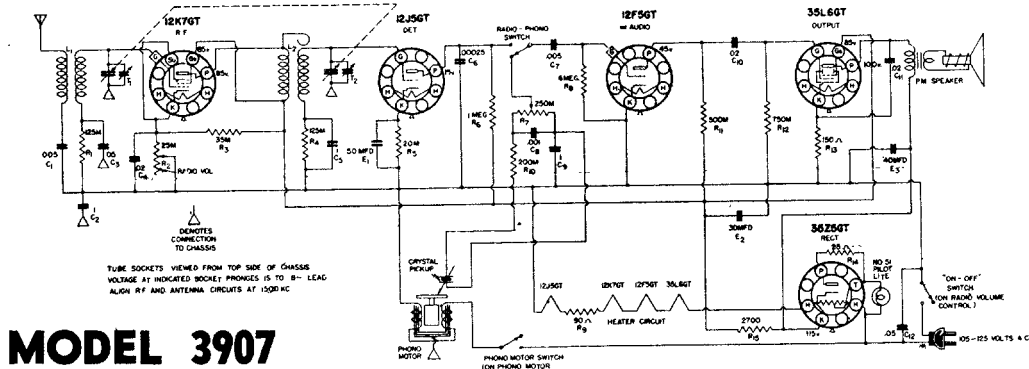

MODEL 3907

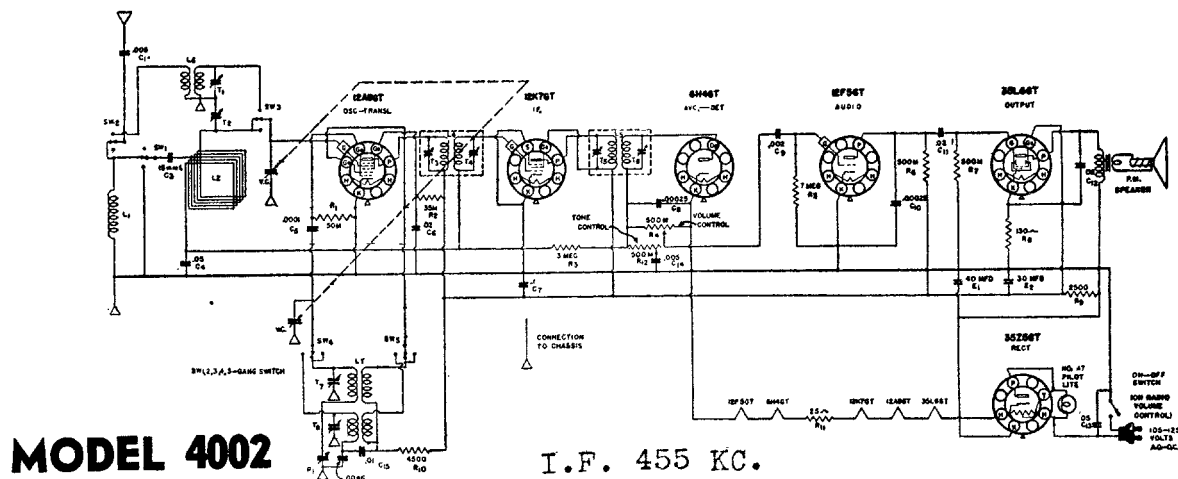

MODEL 4002

I.F. 455 KC.

This receiver comprises a six-tube AC-DC two-band superheterodyne incorporating the ingenious "Noise Minimizer" system. An improved filter circuit, automatic volume control, beam power output tube and oversized dynamic speaker are utilized for improved performance. The tuning range of this instrument accommodates two bands of frequencies from 530 to 1700 kilocycles (standard American broadcast) and 5.7 to 18 megacycles (foreign broadcast).


COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

ALLIED RADIO CORP.

833 W. JACKSON BLVD.

CHICAGO, ILL.

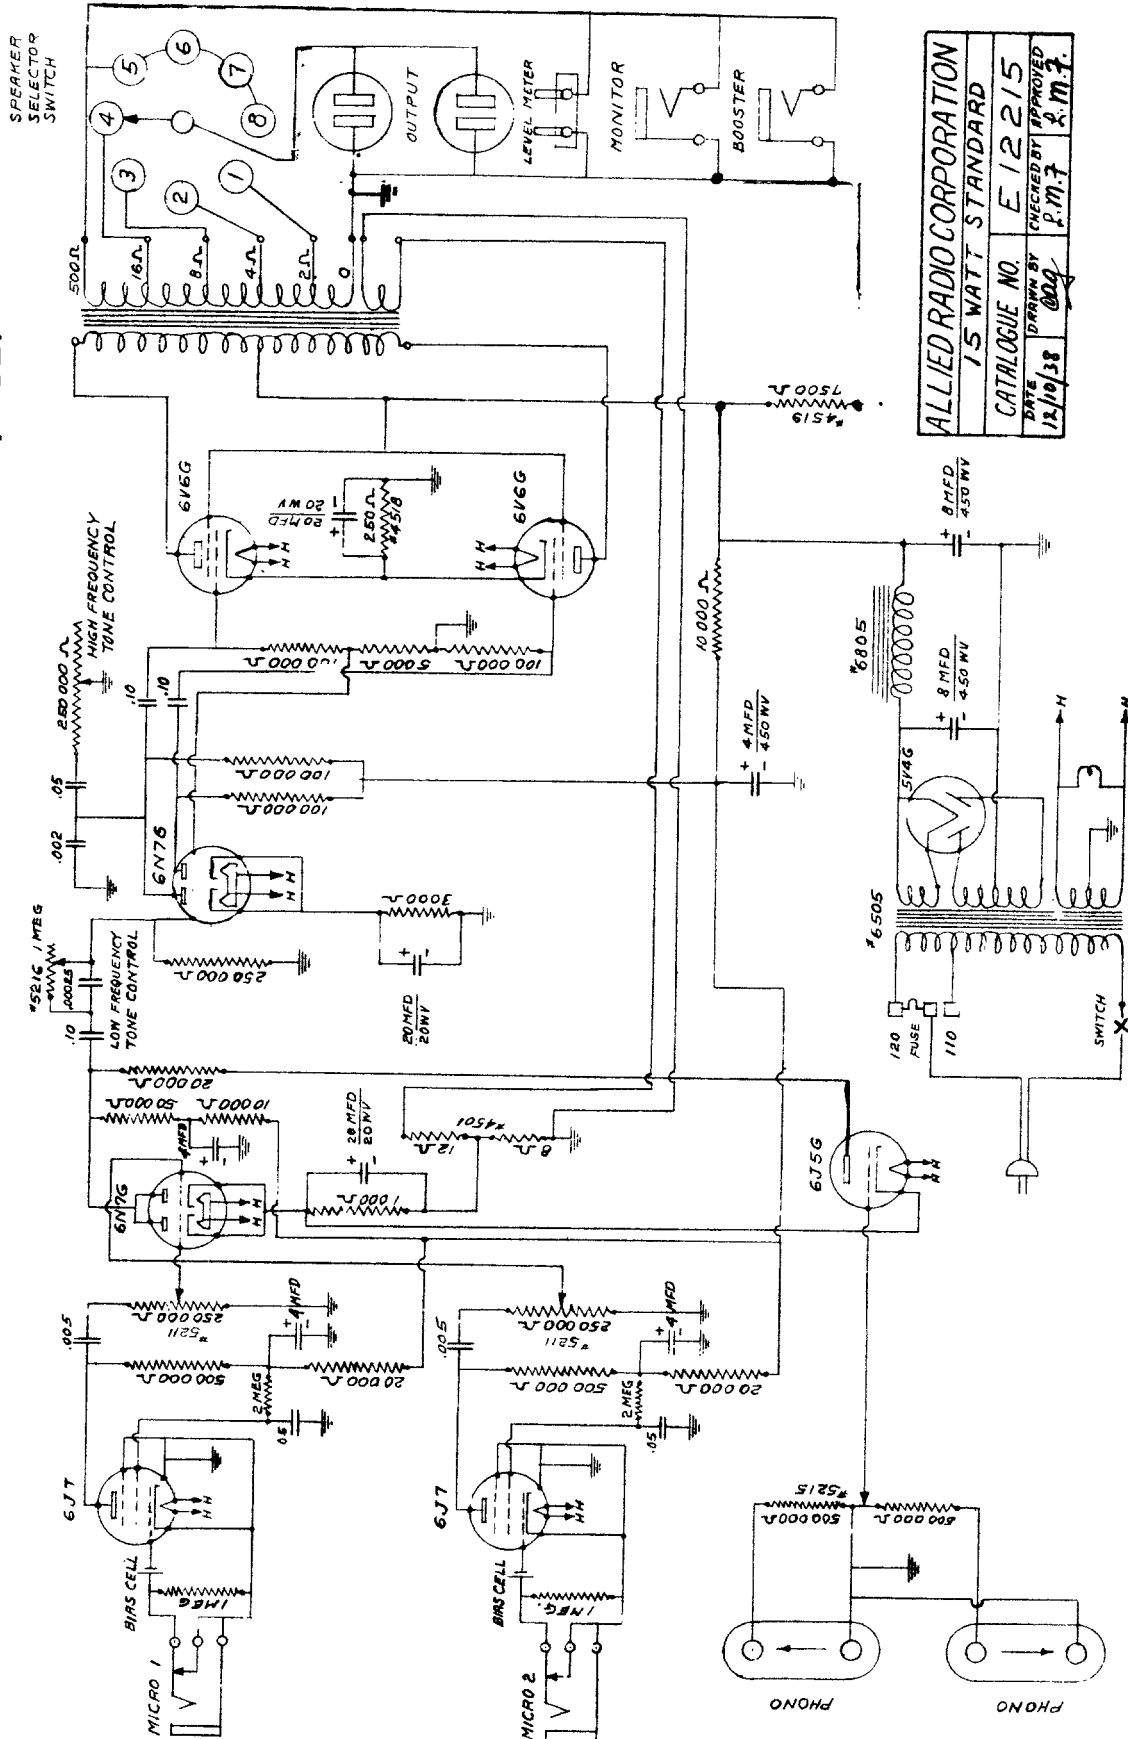


ALLIED RADIO CORPORATION	
1.5 WATT STANDARD	
CATALOGUE NO.	E 12 215
DATE DRAWN BY	009 P.M.T.
DATE CHECKED BY	12/10/38 P.M.T.
APPROVED	

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS



MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

Allied Radio
CORPORATION

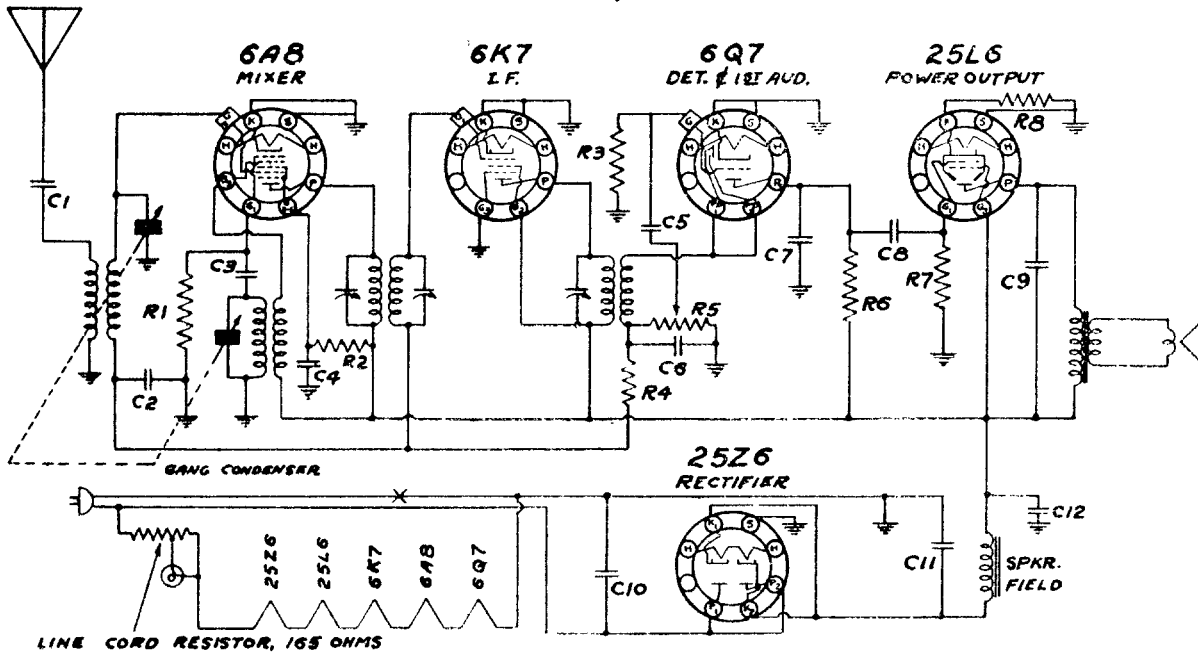

RESISTORS

NO.	OHMS	WATT
R1	50,000	1/4
R2	40,000	1/4
R3	15 MEG	1/4
R4	2 MEG	1/4
R5	500,000	1/4 VOL. CONT.
R6	250,000	1/4
R7	500,000	1/4
R8	110	1/4 *10%

CONDENSERS

NO.	MFD.	TYPE
C1	.005	600V.
C2	.02	400V.
C3	.00025	MICA
C4	.01	400V.
C5	.01	400V.
C6	.00025	MICA
C7	.00025	MICA
C8	.01	400V.
C9	.005	600V.

I.F. - 456 KC

ALIGNMENT DATA

I.F. ALIGNMENT

Adjust the test oscillator to 456 KC and connect the output to the grid of the first detector tube (6A8) through a .05 or .1 mfd. condenser. Connect ground or test oscillator to chassis ground through a .1 mfd. condenser. Align all three I.F. trimmers to peak or maximum reading on the output meter.

BROADCAST BAND ALIGNMENT

Adjust the oscillator to 1730 KC and connect the output to the antenna lead, through a .0001 mfd. mica condenser. Set the gang condenser to minimum capacity and adjust the gang condenser trimmer (oscillator) to receive this signal. After this has been carefully done, the next step is to set the generator to 1400 KC and after tuning in the signal adjust the antenna trimmer to peak. This is all that is necessary for the alignment unless the plates of the gang condenser have been bent out of shape. In case of bent plates, set the test oscillator and the receiver to 600 KC and bend the plates into the position for maximum output.


COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

9

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS


10

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

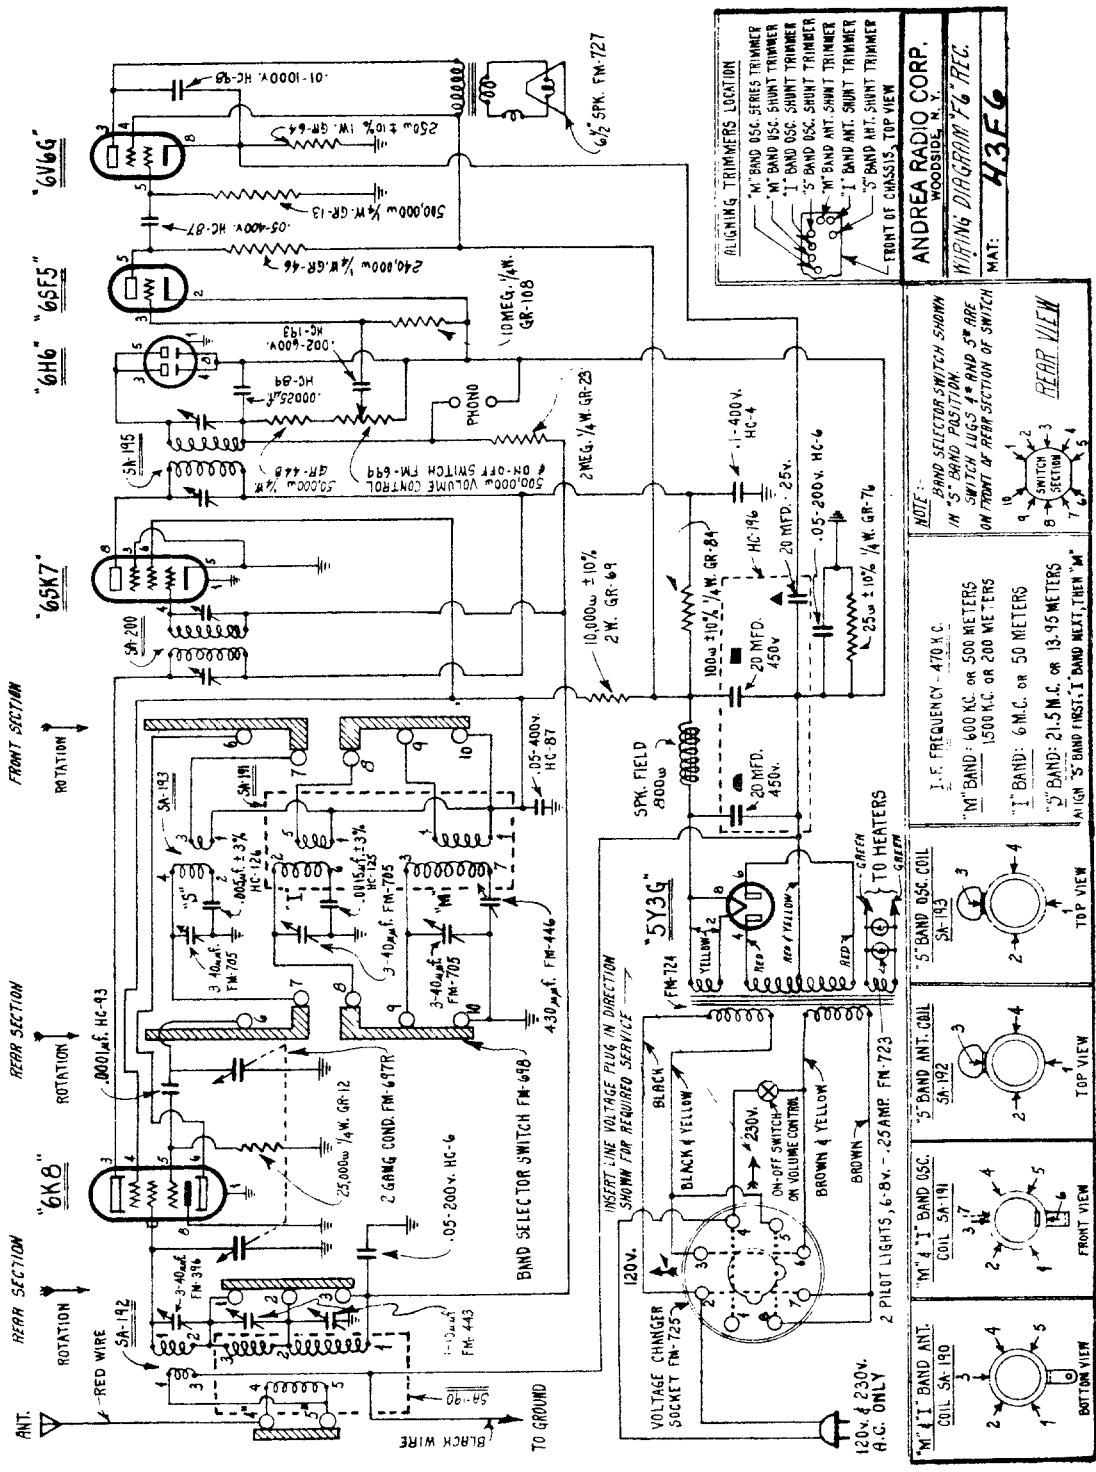

ANDREA RADIO CORP.
48-20 48th Ave., Woodside, L. I., N. Y.

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

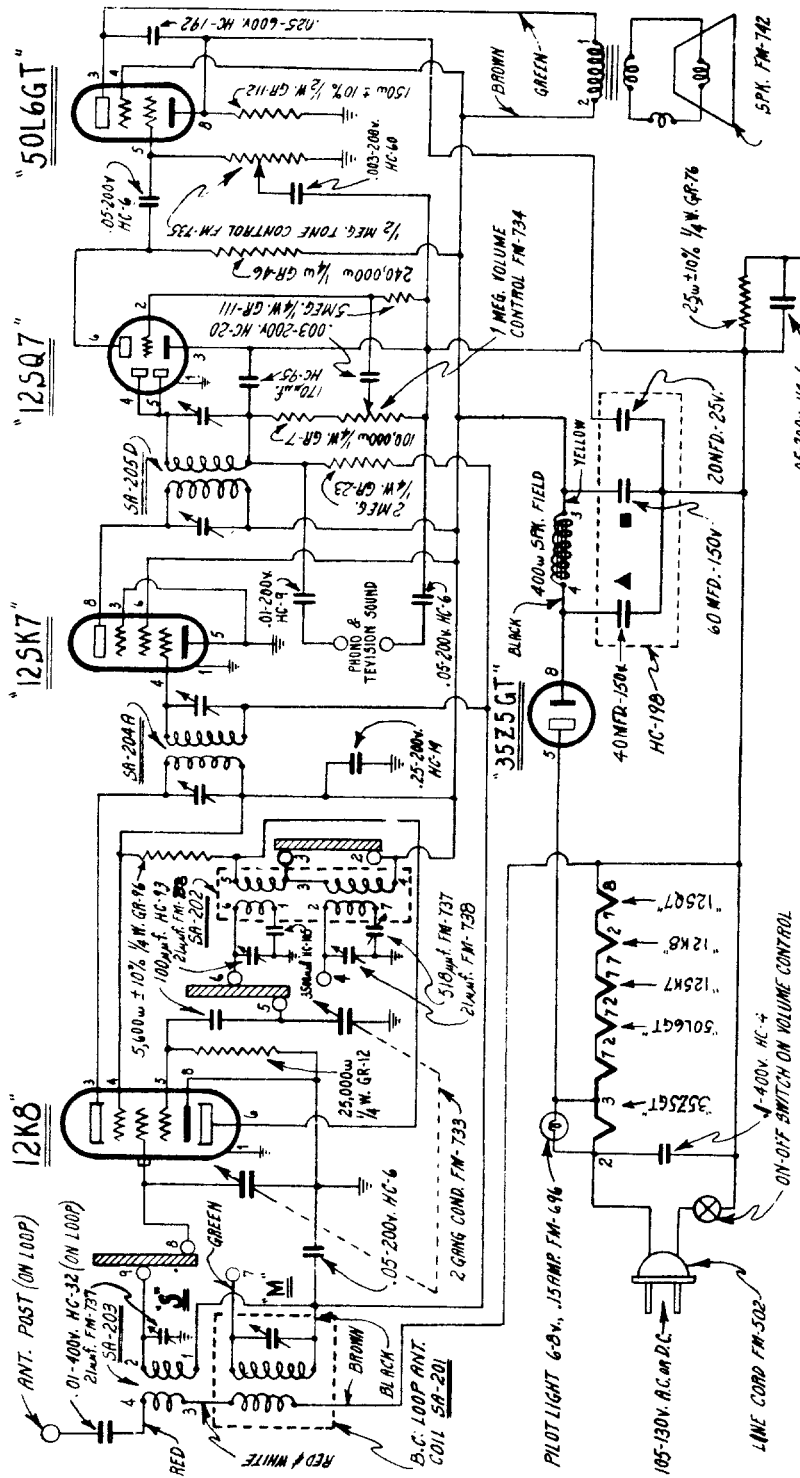

NOTE:
 BRAND SELECTOR SWITCH SHOWN ON 'S' BAND POSITION TO THE EXTREME CLOCKWISE POSITION.
ANDREA RADIO CORP.
 WOODSIDE, N. Y.
MODEL: 2365
 DR. J.R. DATE: 2-2-40
 PARTING

I.F. FREQUENCY = 455 K.C.
 'M' BAND: 600 K.C. OR 500 METERS
 1,500 K.C. OR 200 METERS
 'S' BAND: 18 M.C. OR 16.67 METERS
IMPORTANT: RECEIVER MUST BE ALIGNED WITH LOOP CORRECTLY ASSEMBLED ON CHASSIS

ALIGNING TRIMMERS LOCATION

1500 K.C. ANT. SHUNT TRIMMER	ANT. POST
L.F. ADJUSTING TRIMMERS	
'M' BAND OSC. SHUNT 1500 K.C. TRIMMER	
'S' BAND OSC. SHUNT 18 M.C. TRIMMER	
'S' BAND ANT. SHUNT 18 M.C. TRIMMER	
'M' BAND OSC. SERIES 600 K.C. TRIMMER	

BRAND SELECTOR SWITCH FM-736

REAR VIEW


'S' BAND ANT. COIL SA-203

LUG VIEW


'M' & 'S' BAND OSC. COIL SA-202

LUG VIEW

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

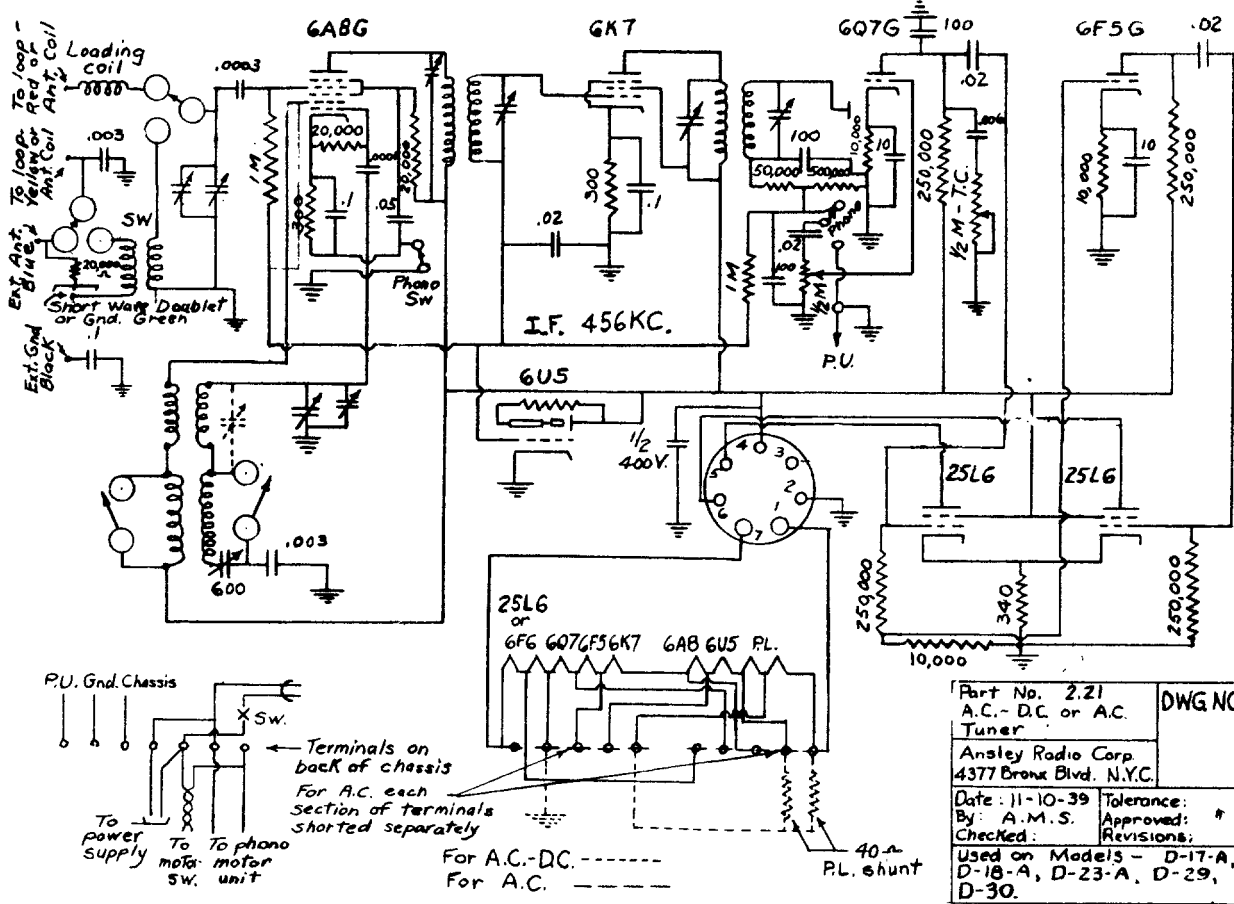


AUTOMATIC TUNER MODEL 520

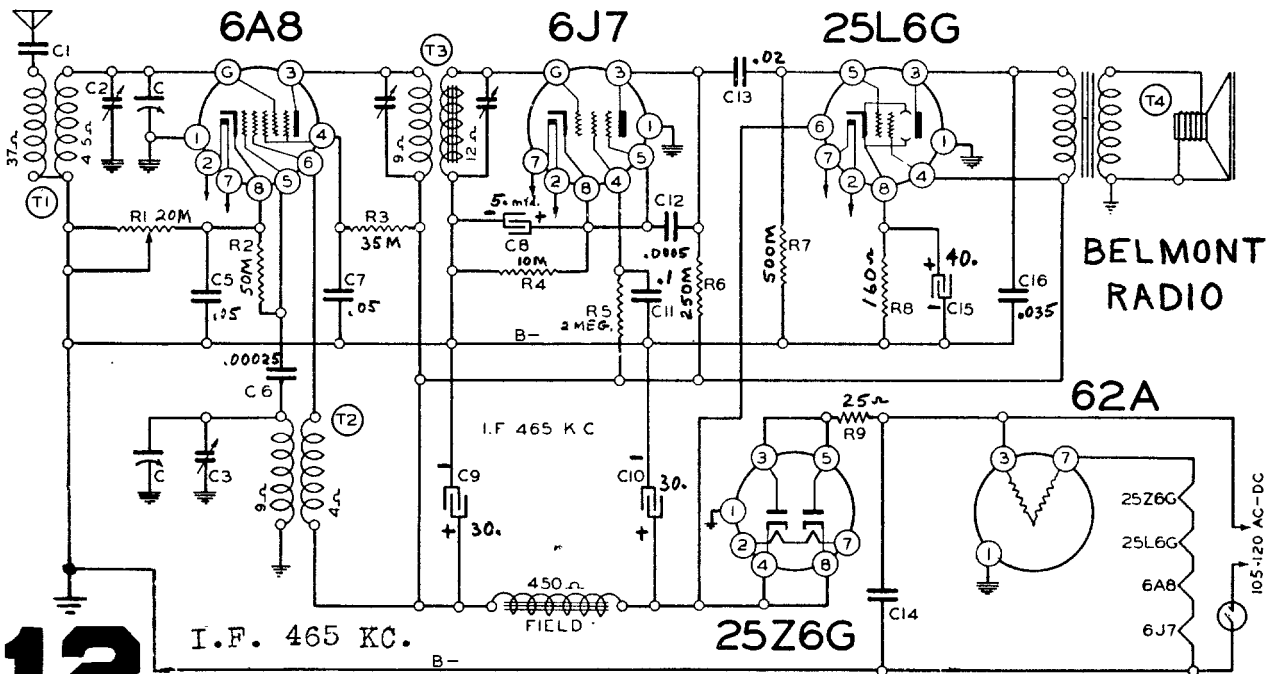

12

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

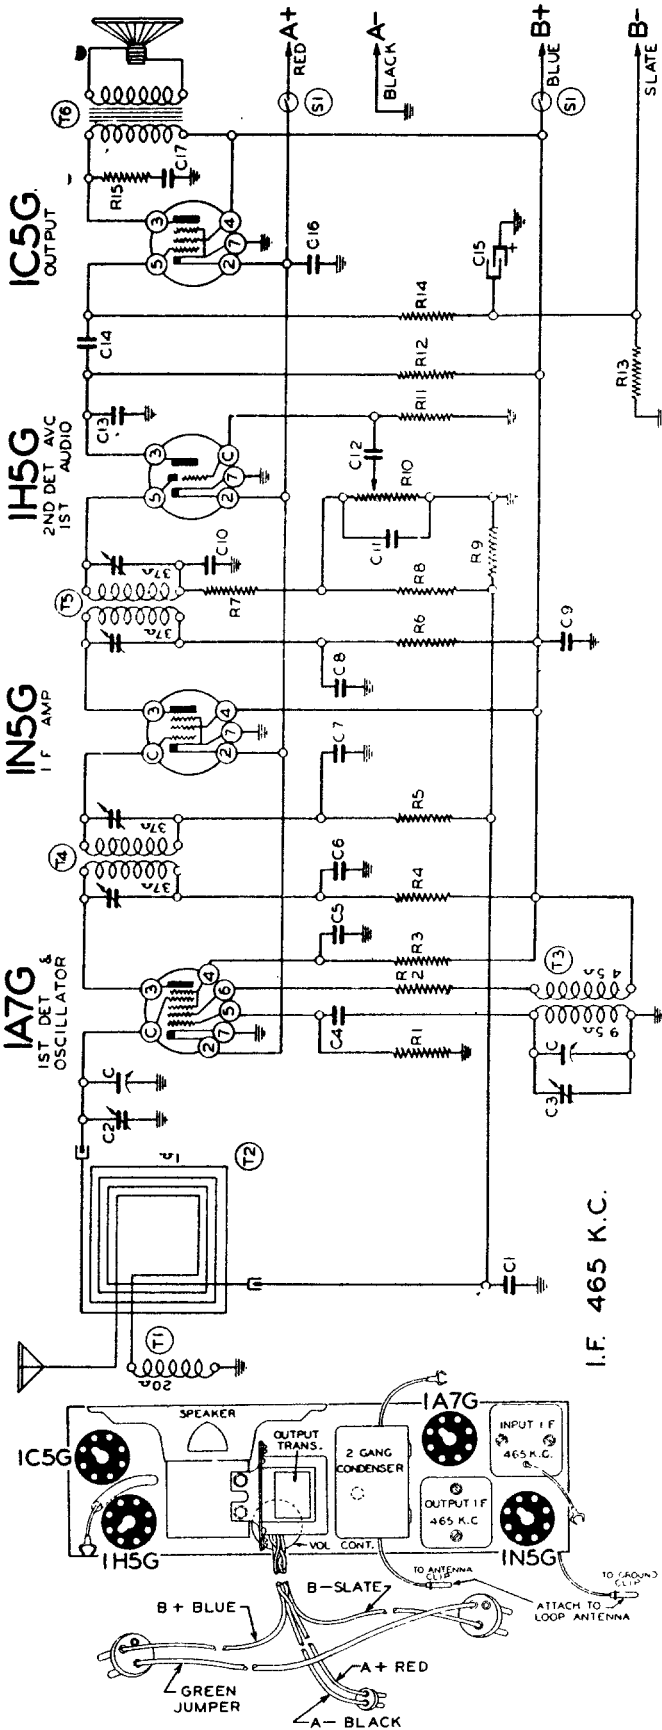

I.F. 465 K.C.


MODEL 403

Belmont Radio Corporation
Chicago, Illinois

- C2** Loop ant. trimmer on gang
C3 Oscillator trimmer on gang
C4 .00025 mica
C5 .05 x 200 v.
C6 .01 x 200 v.
C7 .01 x 200 v.
C8 .01 x 200 v.
C9 .25 x 200 v.
C10 .0001 mica
C11 .001 mica
C12 .01 x 200 v.
C13 .00025 mica
C14 .01 x 200 v.
C15 25 mid. 25 w. v. lytic
C16 5 x 200 v.
C17 .003 x 600 v.



- T1** 1236
T2 120257
T3 101110
T4 108142
T5 108143
T6 114158
S1 Off-on switch D.P.S.T. on vol. control

Circuit Diagram	Ref. No.	Part No.	Description
R1	1309	200M ohm— $\frac{1}{2}$ w.	RESISTORS
R2	13071	4M ohm— $\frac{1}{2}$ w.	
R3	130208	40M ohm— $\frac{1}{2}$ w.	
R4	13026	1000 ohm— $\frac{1}{2}$ w.	
R5	13020	100M ohm— $\frac{1}{2}$ w.	
R6	13026	1000 ohm— $\frac{1}{2}$ w.	
R7	13040	19M ohm— $\frac{1}{2}$ w.	
R8	13038	2 megohm— $\frac{1}{2}$ w.	
R9	13038	2 megohm— $\frac{1}{2}$ w.	
R10	101163	1 megohm volume control	
R11	13019	1 megohm— $\frac{1}{2}$ w.	
R12	1303	500M ohm— $\frac{1}{2}$ w.	
R13	130283	750 ohm— $\frac{1}{2}$ w.	
R14	13038	2 megohm— $\frac{1}{2}$ w.	
R15	130218	5M ohm— $\frac{1}{2}$ w.	
C	102103	2 gang. variable condenser	CONDENSERS
C1	10022	.05 x 200 v.	

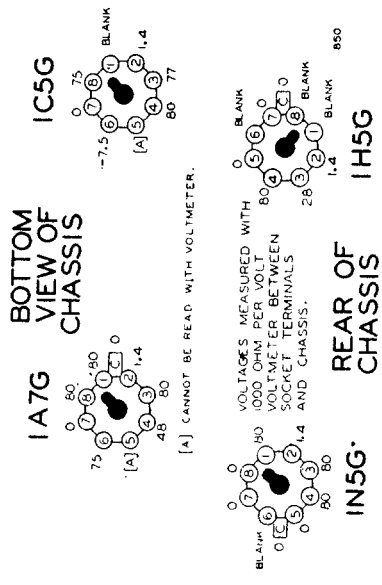

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

AUTOMATIC TUNER MODEL 632

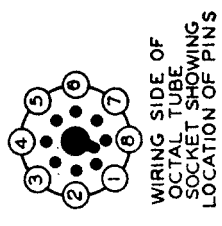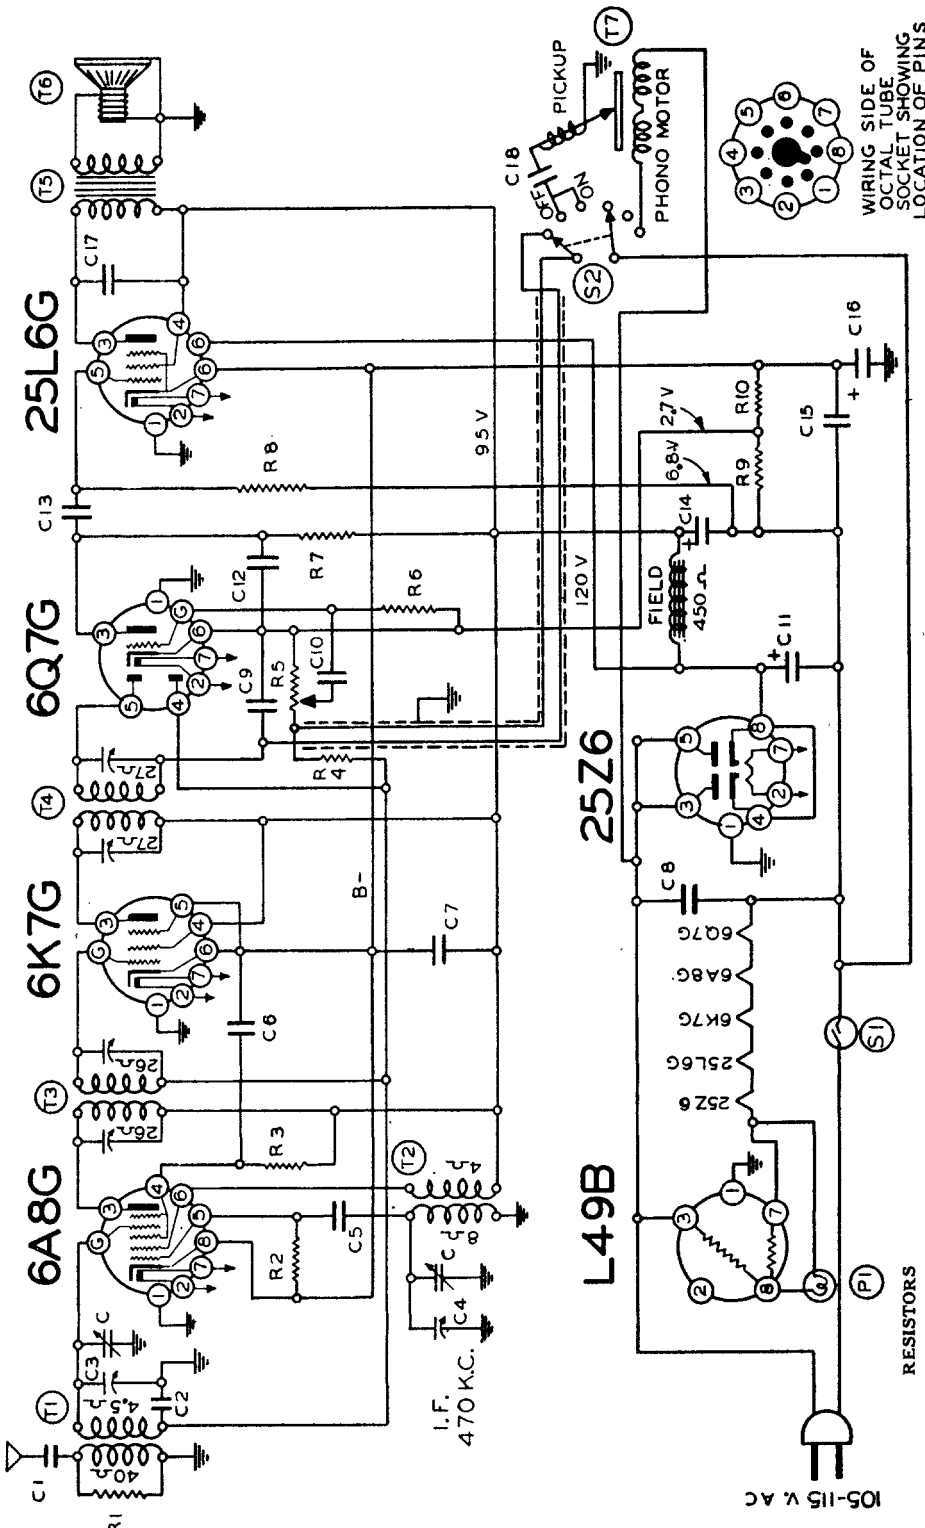

Belmont Radio Corporation
Chicago, Illinois

- RESISTORS**
- 13021
 - 1302
 - 13049
 - 13070
 - 10113
 - 130225
 - 130100
 - 13011
 - 130231
 - 130174
 - 20M ohms— $\frac{1}{2}$ w.
 - 50M ohms— $\frac{1}{2}$ w.
 - 15M ohms— $\frac{1}{2}$ w.
 - 3 megohms— $\frac{1}{2}$ w.
 - 1 megohm volume control
 - 15 megohms— $\frac{1}{2}$ w.
 - 150M ohms— $\frac{1}{2}$ w.
 - 250M ohms— $\frac{1}{2}$ w.
 - 75 ohms— $\frac{1}{2}$ w.
 - 50 ohms— $\frac{1}{2}$ w.
- CONDENSERS**
- 10278
 - 1292
 - 10026
 - 12912
 - 1009
 - 1009
 - 2 gang variable condenser
 - .005 mf. Mica
 - .02 x 400 v.
 - Ant. Trimmer Condenser
 - Oscillator Trimmer Condenser
 - .00025 Mica
 - .05 x 200 v.
 - .05 x 200 v.
- PARTS**
- 11192B
 - 11073
 - 10817
 - 10895D
 - 10560
 - 11416C
 - 104138
 - Antenna Coils complete
 - Oscillator Coils complete
 - Input I.F.—470 kc. complete
 - Output I.F.—470 kc. complete
 - Output Transformer
 - 5" Dynamic Speaker
 - Phono Motor
 - Off-On Switch on Volume Control

MOST POPULAR SERVICE DIAGRAMS


MODEL 665

Belmont Radio

REAR OF CHASSIS

A - CANNOT BE MEASURED WITH
 B - BIAS OF -1.8V READ ACROSS R-12
 C - BIAS OF -2.8V READ ACROSS R-10
 E - 5V AC READ ACROSS TER. 2 & B
 F - 560V AC READ ACROSS TER. 4 & 6

ANTENNA GROUND

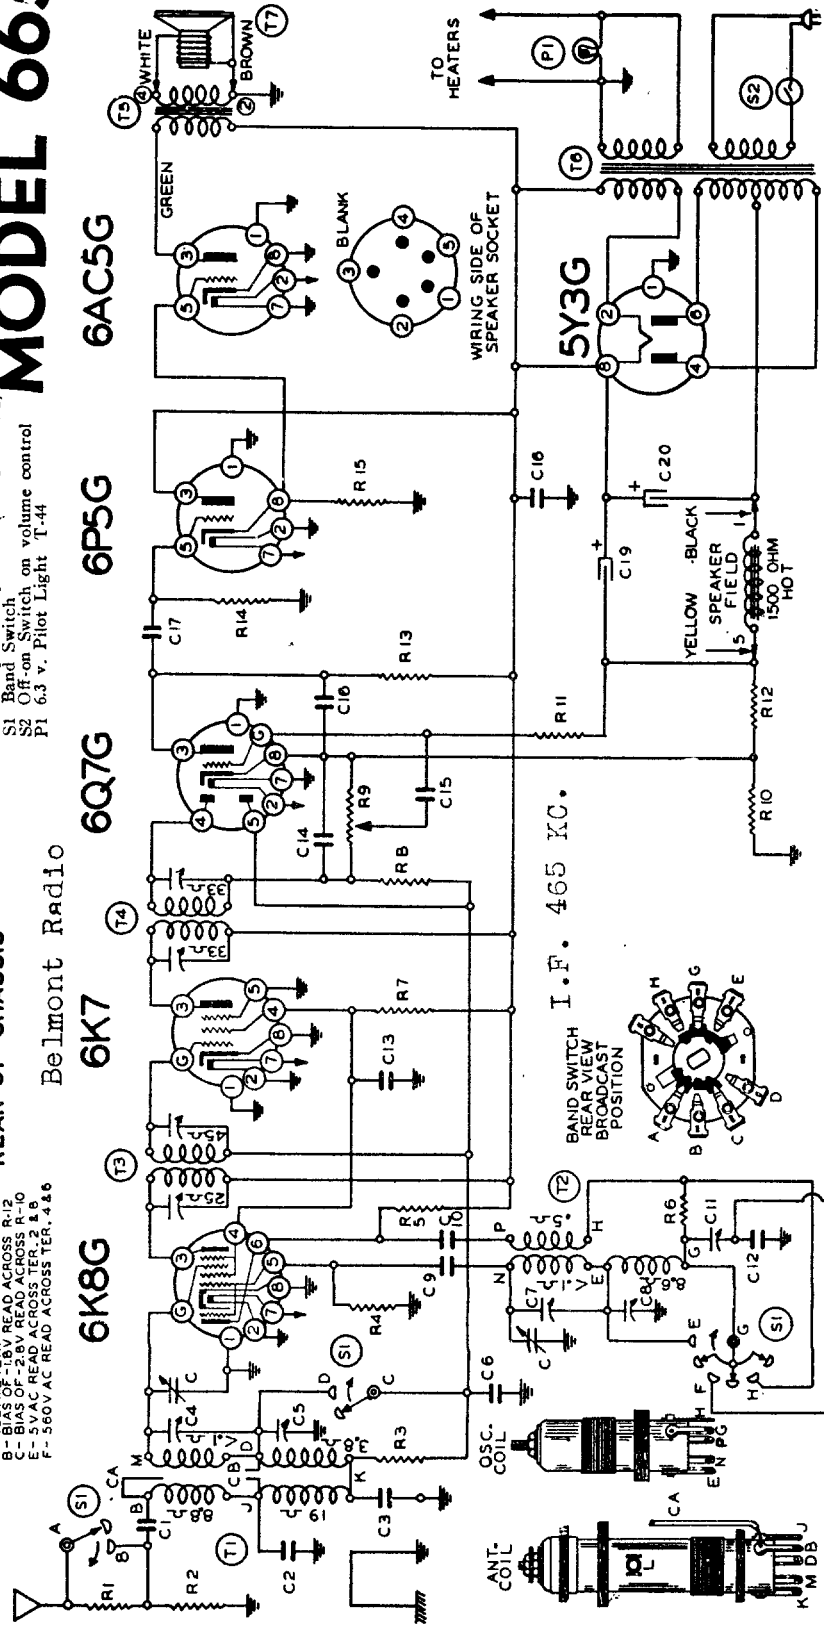

I.F. 465 KC.


BAND SWITCH
 BECAUSE OF
 POSITION

CONDENSERS	
Adjustable Capacitor	10274
Adjustable Capacitor	12987
2 gang variable condenser	12949
.000105 Mica	10037
.003 x 600 v.	12439
SW. Antenna Trimmer 2.25 mmfd.	12453
BC. Antenna Trimmer 1.10 mmfd.	10022
.05 x 400 v.	12439
SW. Oscillator Trimmer 2.25 mmfd.	12453
BC. Oscillator Trimmer 2.25 mmfd.	10022
.05 x 400 v.	12439
.00005 Mica	12938
.002 x 600 v.	10025
350 mmfd. W. C. B. C. Series Pad	12451B
.0041 Compression Type	129112
.25 x 400 v.	10053
.00005 Mica	12939
.01 x 400 v.	10011
.005 Mica	1292
.01 x 400 v.	10011
.05 x 400 v.	10013
8 mid.-350 w. v. lytic	1963B
12 mid.-350 w. v. lytic	1963B


RESISTORS	
800 ohm-1/2 w.	13041
100M ohm-1/2 w.	1307
50M ohm-1/2 w.	13012
10M ohm-1/2 w.	13017
1500 ohm-1/2 w.	13031
20M ohm-1/2 w.	13042
3 megohm-1/2 w.	1304
1 megohm control	101126
60 ohm-1/2 w.	130233
3 megohm-1/2 w.	1304
40 ohm-1/2 w.	130203
200M ohm-1/2 w.	1309
1 megohm-1/2 w.	13019
25M ohm-1/2 w.	130232

PARTS

- T1 SW. B. C. Antenna Coil Complete
- T2 SW. B. C. Oscillator Coil Complete
- S1 Input I. F. -465 kc.
- T3 Output I. F. -465 kc.
- T4 Output Transformer
- T5 6" Speaker Dynamic (1500 ohm field)
- S2 Band Switch
- S1 Off-on Switch on volume control
- P1 6.3 v. Pilot Light T-44

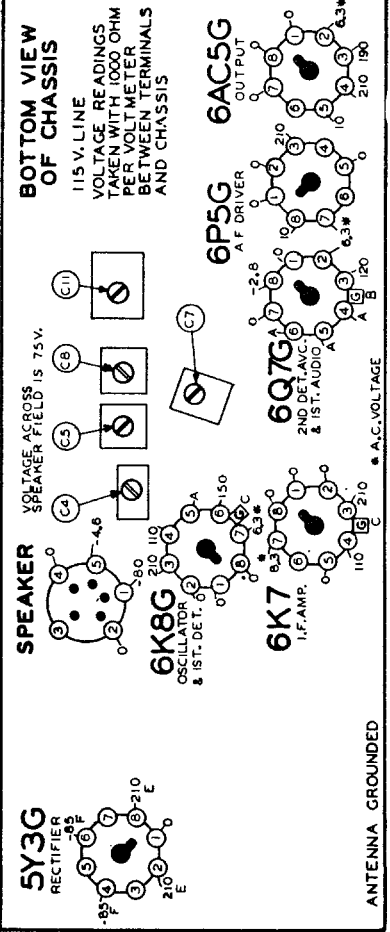



COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

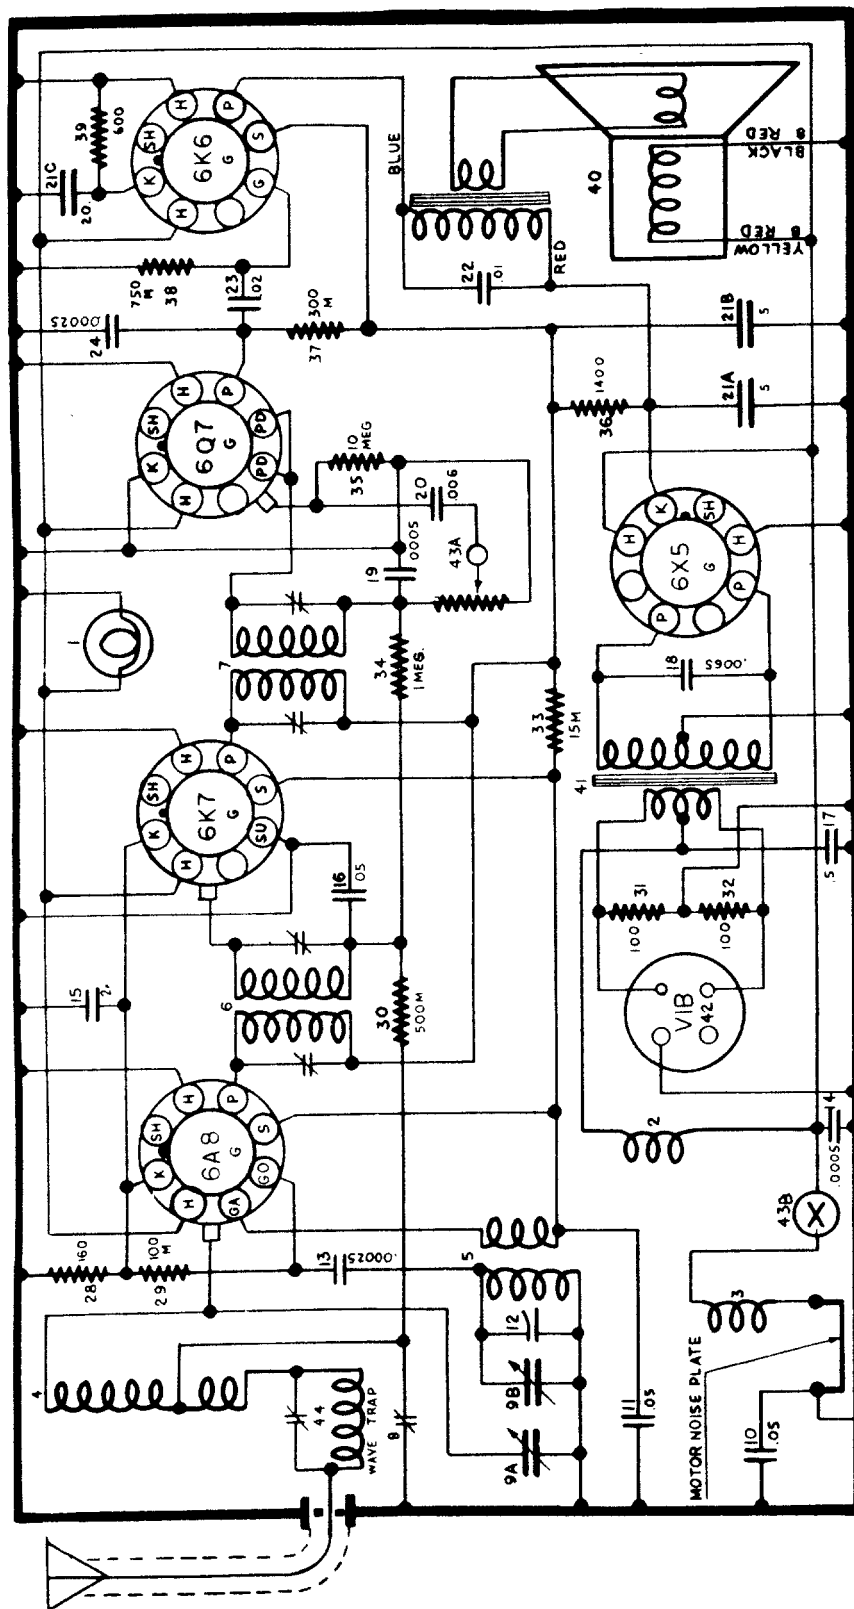

CHEVROLET
M=1,000-N
455 K.C. I.F.

985-425 WIRING DIAGRAM




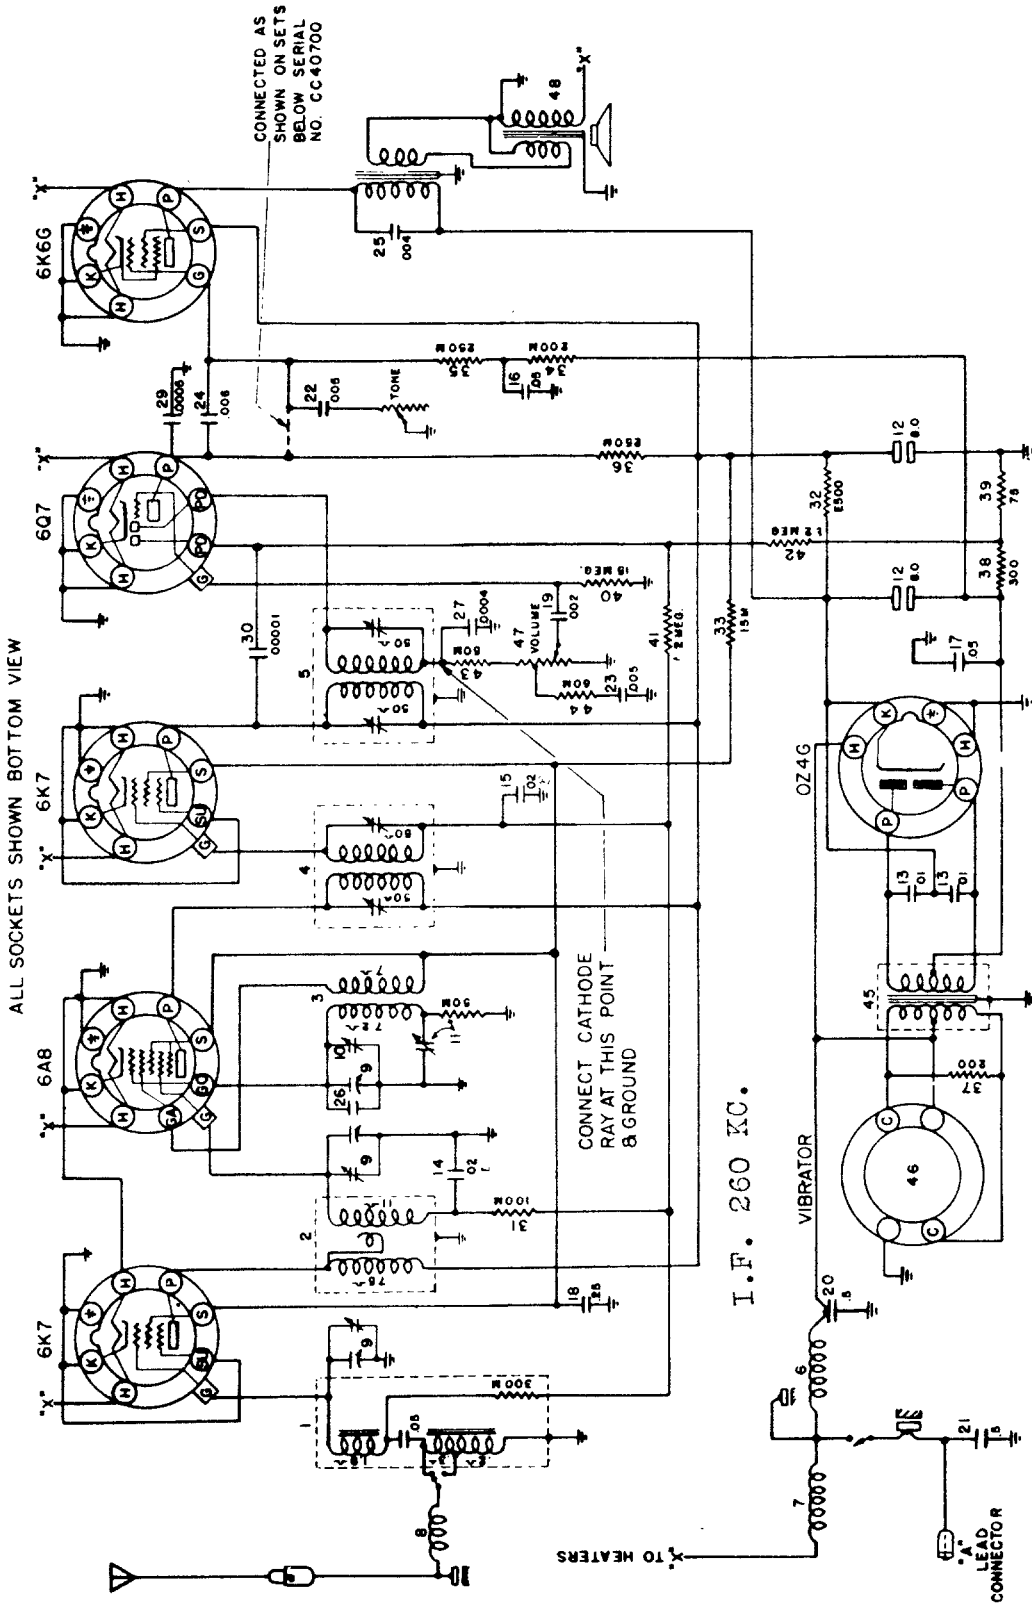

985-426 WIRING DIAGRAM


CHEVROLET

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

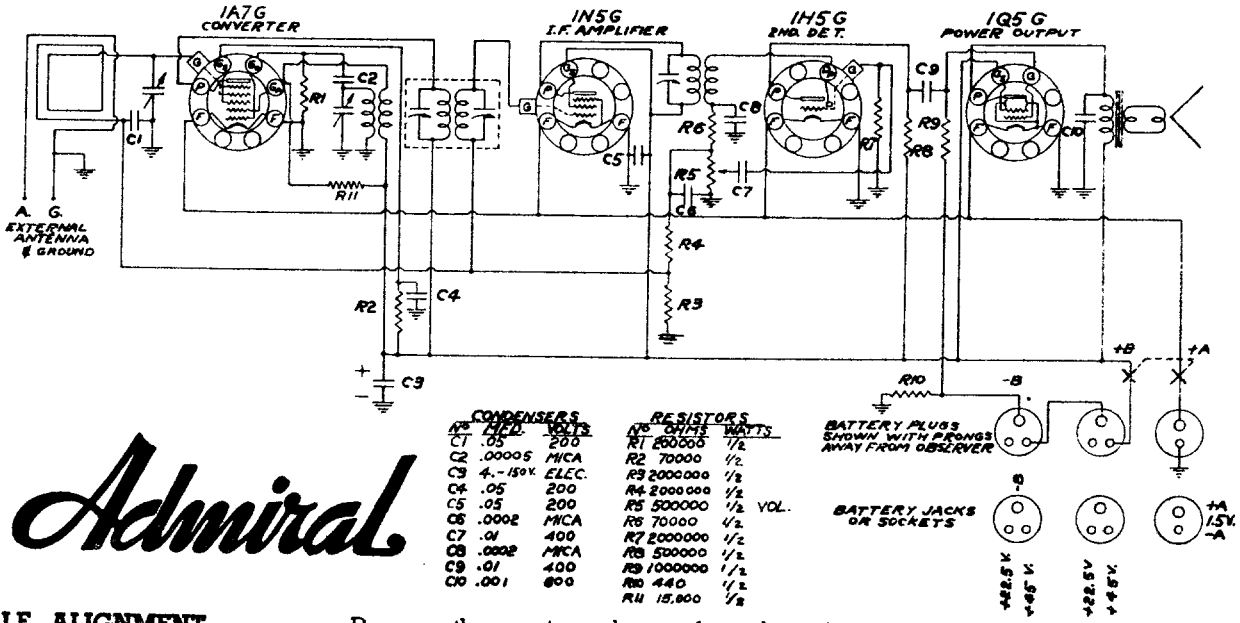

Admiral


CONDENSERS		RESISTORS	
N ^o	MFD. VOLTS	N ^o	OHMS WATTS
C1	.05 200	R1	200000 1/2
C2	.00005 MICA	R2	70000 1/2
C3	4.-150V ELEC.	R3	2000000 1/2
C4	.05 200	R4	2000000 1/2
C5	.05 200	R5	500000 1/2
C6	.0002 MICA	R6	70000 1/2
C7	.01 400	R7	2000000 1/2
C8	.0002 MICA	R8	500000 1/2
C9	.01 400	R9	1000000 1/2
C10	.001 800	R10	440 1/2
		R11	15,000 1/2

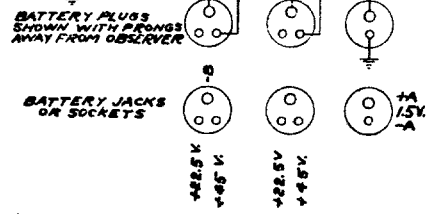

I.F. ALIGNMENT

Remove the receiver chassis from the cabinet and connect a 100,000 ohm resistor to the green and yellow leads in place of the loop antenna to which they were originally connected. Adjust the signal generator to 455 KC and connect the output to the grid of the first detector tube (1A7) through a .05 or .1 mfd. condenser. The ground on the signal generator should be connected to the chassis ground. Align all I.F. trimmers to peak or maximum reading on the output meter.

Admiral Radio
Model 4D

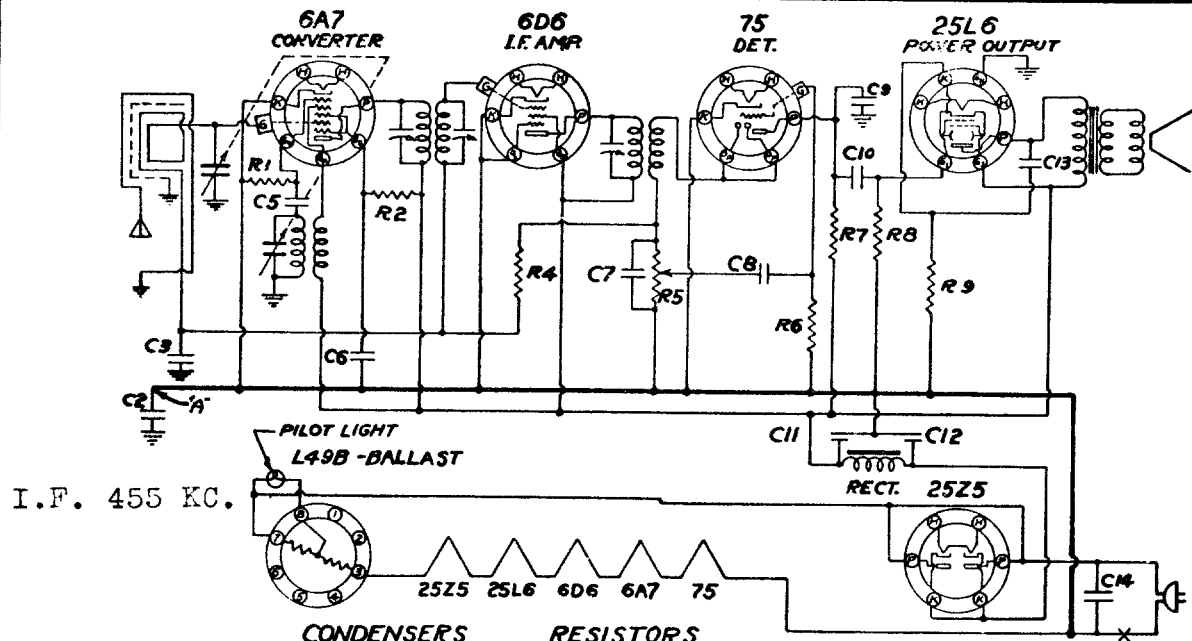


I.F. 455 KC.

CONDENSERS		RESISTORS	
N ^o	MFD. VOLTS	N ^o	OHMS WATTS
C2	.25 200	R1	50000 1/2
C3	.02 400	R2	30000 1/2
C5	.00006 MICA	R4	2,000,000 1/2
C6	.05 400	R5	500,000 VOL CONT
C7	.00025 MICA	R6	500,000 1/2
C8	.01 400	R7	250,000 1/2
C9	.00025 MICA	R8	500,000 1/2
C10	.01 400	R9	150 1/2 ±10%
C11	20. } 150		
C12	20. }		
C13	.005 600		
C14	.05 400		

Admiral Radio
SCHEMATIC DIAGRAM
MODEL 5LL
MODEL 5L

NOTE: C2 USED ON MODEL 5LL ONLY.
ON MODEL 5L POINT 'A' IS CONNECTED TO CHASSIS

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

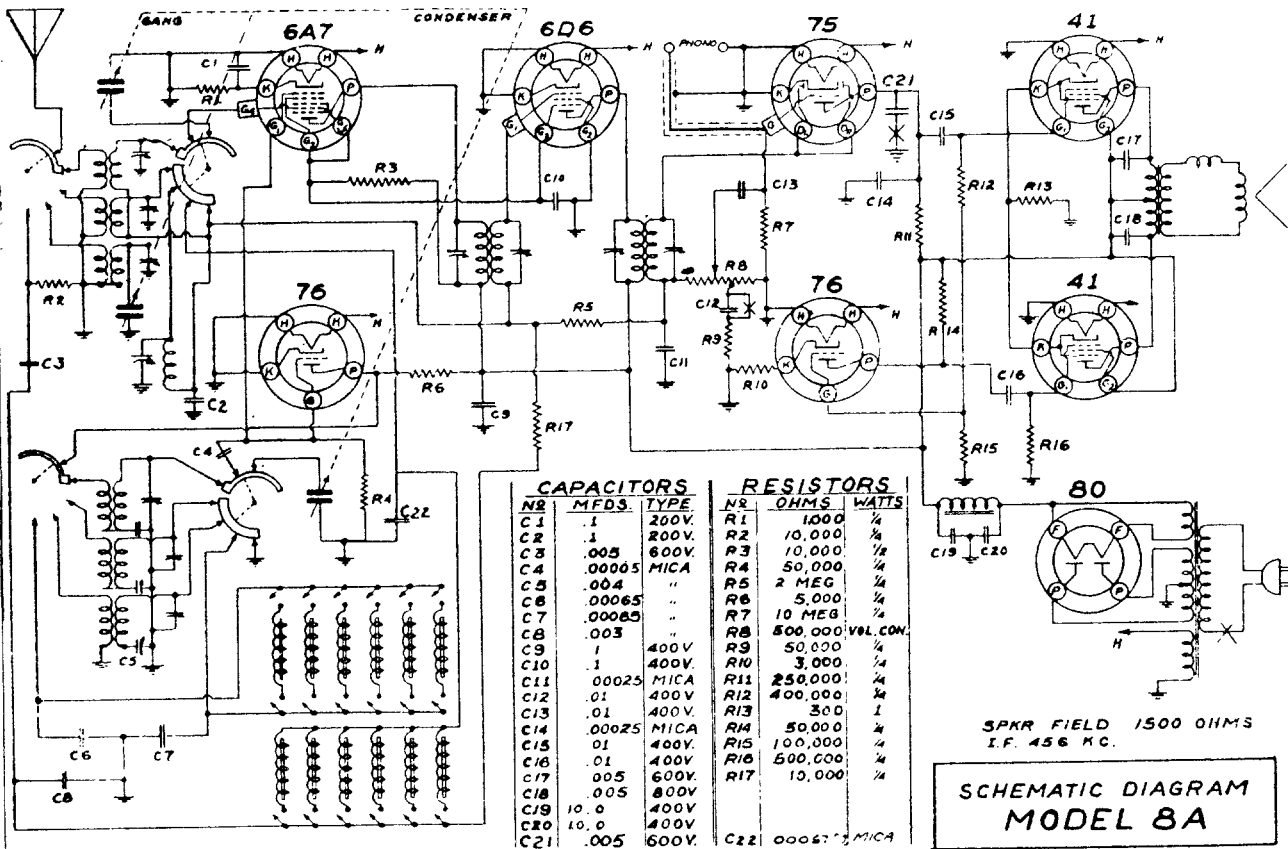

SPKR FIELD 1500 OHMS
I.F. 456 KC.
**SCHEMATIC DIAGRAM
MODEL 8A**

GENERAL DATA

The alignment of this receiver requires the use of a test oscillator that will cover the frequencies of 456, 600, 1400, 1730, 1800, 4000, 5600, 6000, 16,000 and 18,100 KC and an output meter to be connected across the primary or secondary of the output transformers. If possible, all alignments should be made with the volume control on maximum and the test oscillator output as low as possible, to prevent the AVC from operating and giving false readings.

CORRECT ALIGNMENT PROCEDURE

The intermediate frequency (I.F.) stage should be aligned properly as the first step. After the I.F. transformers have been properly adjusted and peaked, the Broadcast Band should always be the next procedure, after which, either or both of the Short Wave Bands may be aligned.

I.F. ALIGNMENT

With the wave switch in the Broadcast Band and the gang condenser set at minimum, adjust the test oscillator to 456 KC and connect the output to the grid of the first detector tube (6A7) through a .05 or .1 mfd. condenser. The ground on the test oscillator can be connected to the chassis ground if the test oscillator is not grounded to one side of the power line. In case one side is connected to ground, connect a large condenser from ground on the test oscillator to ground of the chassis. Align all four I.F. trimmers to peak or maximum reading on the output meter.

BROADCAST BAND ALIGNMENT

Connect the output of the signal generator to the antenna lead (blue) through a .0002 mfd. mica condenser. Set the gang condenser to minimum and the oscillator to 1730 KC and adjust the "oscillator trimmer" to receive this signal. Make no other adjustments at this frequency. Then set the generator to 1400 KC and tune in this signal by rotating the gang to 1400 on the dial. Adjust the "preselector" and "antenna" trimmer to maximum signal. Set the signal generator to 600 KC and tune in the signal on the receiver. **Note:** approximately the same

sensitivity should be noted at this point as was at 1400 KC. The signal strength may sometimes be improved by padding the circuits. This is done by slowly increasing or decreasing the oscillator padding condenser and, at the same time, continuously tuning back and forth across the signal with the receiver until the maximum reading is obtained on the output meter. This adjustment may seem a little complicated but is the easiest way to adjust the oscillator to the preselector of the R.F. section. Return to 1400 KC and again go over the adjustments of this frequency to be certain that they were not put slightly out of alignment when adjustment was made at 600 KC.

POLICE BAND ALIGNMENT

The police band is adjusted by first replacing the .0002 dummy with a 400 ohm resistor and setting the generator to 5600 KC. With the gang set at minimum, adjust the "police oscillator trimmer" to receive this signal, then set the signal generator to 4000 KC and adjust "police antenna trimmer" to give maximum output. Next, set the oscillator to 1800 KC and "pad" the circuit of this frequency as described in the instructions for padding the broadcast circuits.

SHORT WAVE BAND ALIGNMENT



The short wave band is adjusted by setting the generator to 18,100 KC and with the gang at minimum, adjust the "short wave oscillator trimmer" to receive the signal. Set the generator at 16,000 KC, tune in the signal and adjust the "short wave antenna" trimmer to give maximum output. As there is no variable low frequency padding condenser on this band, the sensitivity of the receiver should be checked at 6000 KC to determine whether the circuits are in line at this frequency. Should the receiver lack sensitivity at 6000 KC, the antenna and the oscillator coils, as well as the .004 mica padding condenser, should be tested for defects as sometimes these components become subject to mechanical or electrical injuries, despite their rugged construction and liberal ratings.

Continental Radio & Television Corp., Chicago, Ill.

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS


19

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

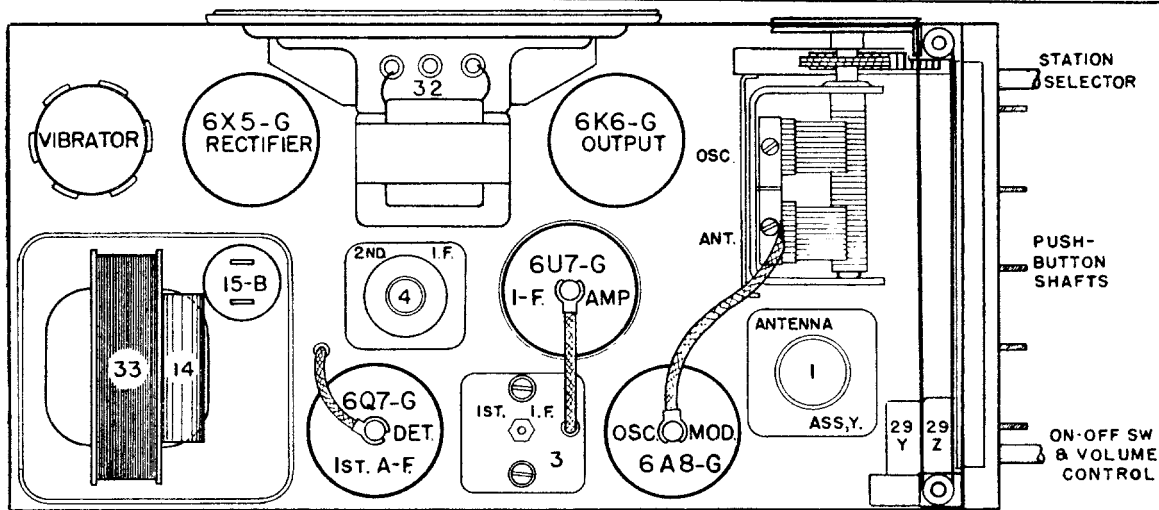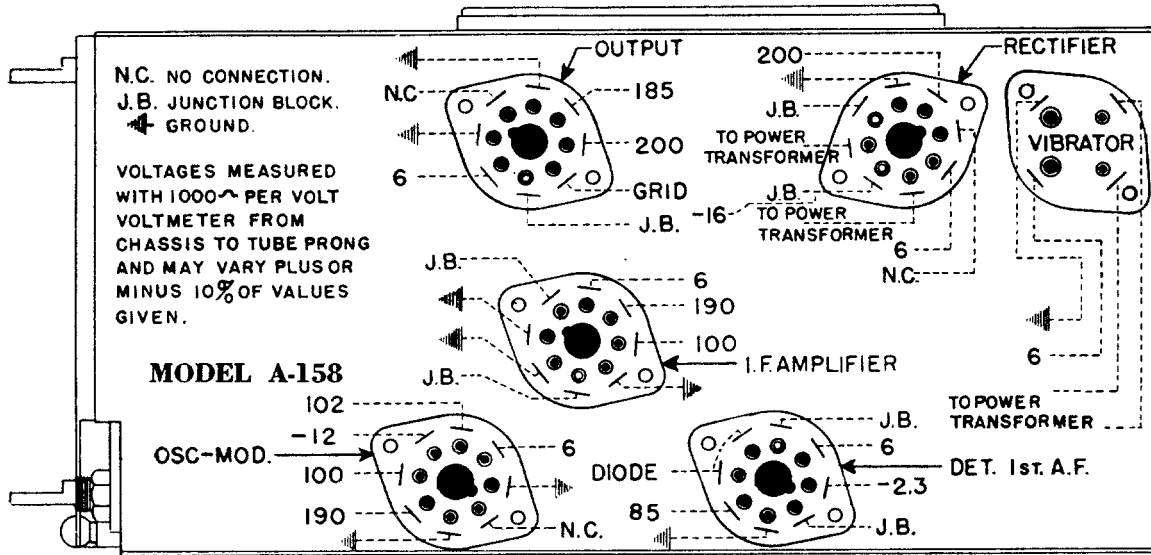

CROSLEY


Top View A-258

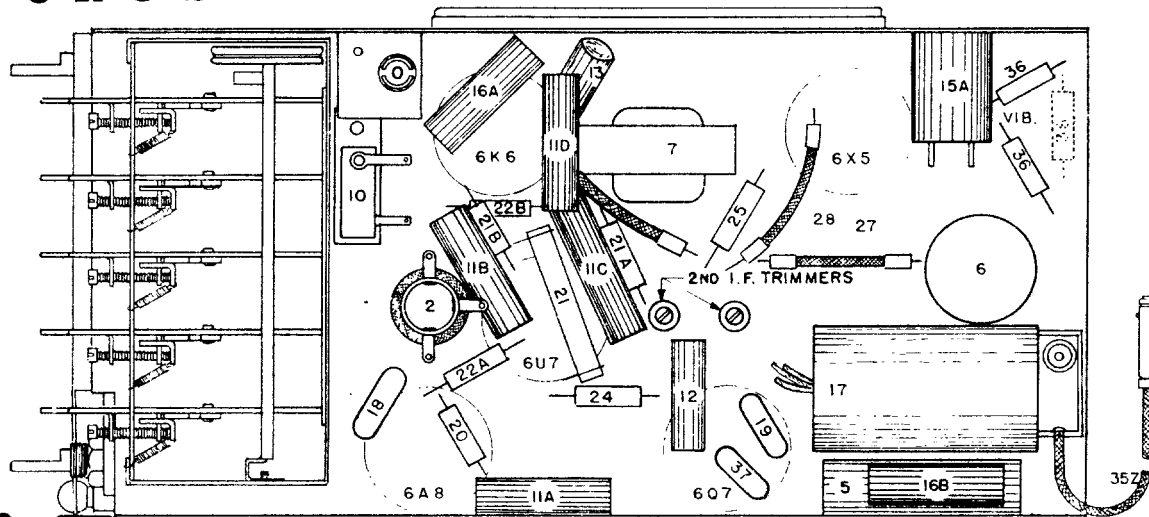

Bottom View A-258

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

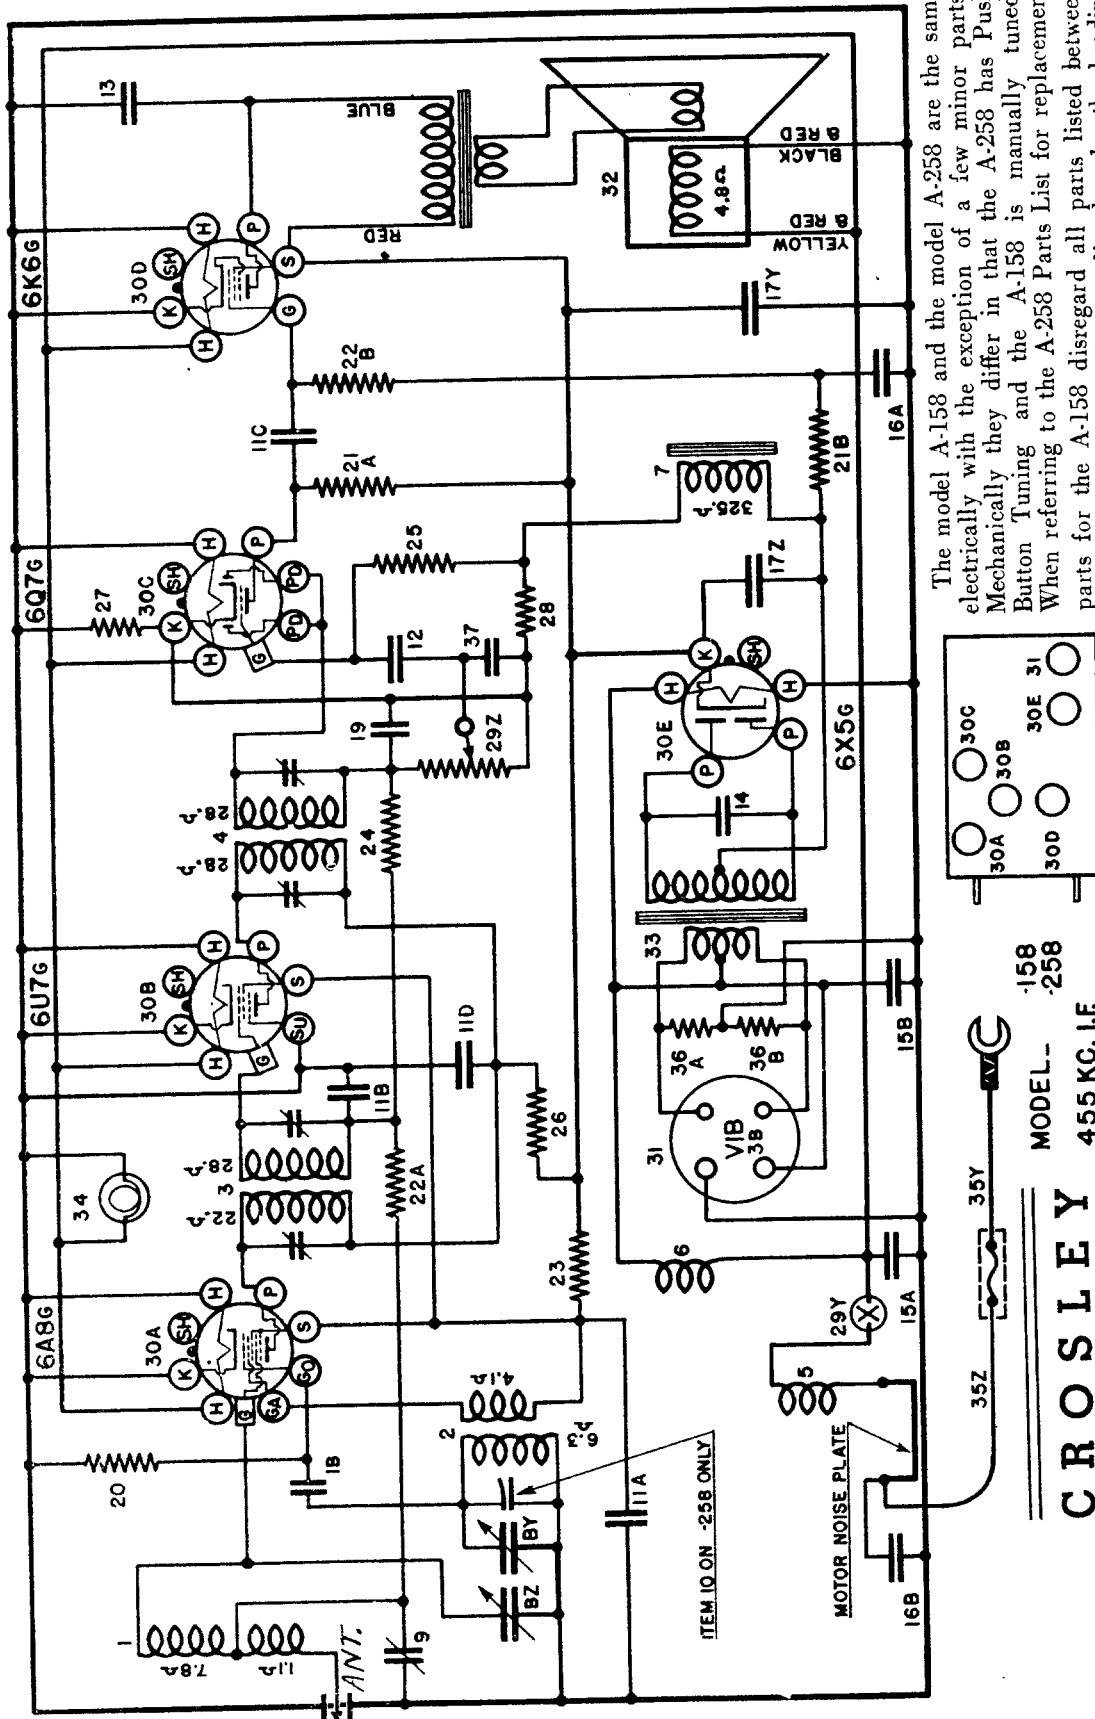


The model A-158 and the model A-258 are the same electrically with the exception of a few minor parts. Mechanically they differ in that the A-258 has Push Button Tuning and the A-158 is manually tuned. When referring to the A-258 Parts List for replacement parts for the A-158 disregard all parts listed between items 7 and 11 and all parts listed under the heading Miscellaneous Mechanical Parts.

WIRING DIAGRAM—MODEL A-258

CROSLY

MODEL A-158 AND A-258 (Roamio)

MODEL -158
MODEL -258
455 KC. I.F.

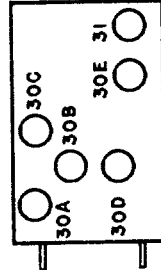

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS


PARTS LIST—MODEL A-258

Figures in first column refer to parts in Diagrams.


Item No.	Part No.	Description	Item No.	Part No.	Description
1	G167-32000	Ant. Coil	30	G178-36400	8 Prong Socket
2	G167-32002	Osc. Coil	W	50176	Tube Shield Half (2 Req.)
3	G185-32004	1st I-F Assy., 455 Kc.	W	31210	Tube Shield Ring
4	G186-32004	2nd I-F Assy., 455 Kc.	31	G105-28807	Vib. Socket
5	G19-32977	Motor Noise Check	W	50123A	Vib. Gnd. Clip
6	G27-28067	"A" Filter Choke	32	278-BL-7"U"	Speaker, Mfg. Spec. 5B-122
7	G16-29535	"B" Filter Choke	W	45889	Output Trans.
8	G50-33001	2 Section Gang Cond.	33	B	Power Trans.
9	50054B	Ant. Compensating Cond.	W	50644	Power Trans. Can
	50623	Glass Dial Face	34	G1	Dial Light Bulb—6-8 V.
	50545	L. H. Dial Mtg. Clip	35Z	G29	"A" Lead—Set to Fuse
	50560	R. H. Dial Mtg. Clip	35Y	G27	"A" Lead—Fuse to Ammeter
	50517B	Dial Mask (Maroon)	36A	38915	Resistor, 100 Ohm 1/2 W. W. W.
	50518	Pointer	36B	38915	Resistor, 100 Ohm 1/2 W. W. W.
	B-78	Screw—Dial Clip Mtg.	37	G2	Condenser, .0001 Mf. Molded
	MG23-50550	Dial Mtg. Bracket Assy. (Riveted to Chassis)	38	G10	Vibrator, Interchangeable
	MG28-50550	Manual Drive Shaft Brkt. Assy.	G13	38000	Vibrator
	G8	Pulley and Hub Assy.	W	32757	Fuse (12 Amp.)
	W	Set Screw—Hub	W	32776	Fuse Insulator
	41582	Drive Cord—40 Inches			
	W	Spring—Cord Tension—Large Pulley	MG27-50550		Miscellaneous Mechanical Parts
	W	Spring—Cord Tension—Small Pulley	MG25-50550		Push Button Unit Assy.
	W	Manual Drive Shaft	W	50542A	Key Assy.
10	G3	Temp. Compensating Cond.	W	50567	Key Clip (Lock Clamp)
11A	W	Condenser, .05 Mf. 200 V.	W	50607	3/8"—6x32 Screw (Clamp)
11B	W	Condenser, .05 Mf. 200 V.	W	50588A	Spring—(Key Return)
11C	W	Condenser, .05 Mf. 200 V.	W	43882	Adjusting Clip (Heart Shaped)
11D	W	Condenser, .05 Mf. 200 V.	W	50547	1/4" No. 8 P. K. Screw (Clip Mtg.)
12	W	Condenser, .02 Mf. 160 V.	MG24-50550		Key Plate (Rear Guide)
13	W	Condenser, .01 Mf. 400 V.	W	50561	Rocker Plate Assy.
14	W	Condenser, .0065 Mf. 1,000 V.	W	45553B	1/8"—6x40—Fil. H. Screw (Rock Plate Bearing)
15A	W	Condenser, .5 Mf. 120 V.	W	50551A	Push Button
15B	W	Condenser, .5 Mf. 120 V.	W	50549	Celluloid Cover
16A	W	Condenser, .1 Mf. 160 V.	W	50503B	Call Letter Sheet
16B	W	Condenser, .1 Mf. 160 V.	D	50554A	Case (Rear Half) FS49
17Z	W	Condenser, 4. Mf. 350 V.	C	50589	Case (Front Half) FS49
17Y	W	Condenser, 4. Mf. 350 V.	W	50505	Felt (Dial Window)
	W	Cond. Clamp	W	50505	Knob (2 Req.)
18	G1	Condenser, .00025 Mf. Molded			
19	G3	Condenser, .0005 Mf. Molded			
20	35600	Resistor, 100,000 Ohm 1/4 W.	W	38038D	Mounting Parts
21A	35601	Resistor, 300,000 Ohm 1/4 W.	W	29754C	Distributor Suppressor
21B	35601	Resistor, 300,000 Ohm 1/4 W.	W	25846	Generator Condenser
22A	36322	Resistor, 500,000 Ohm 1/4 W.	W	6213	3/4" No. 10 P. K. Screw (Set Mtg.)
22B	36322	Resistor, 500,000 Ohm 1/4 W.	W	35065	1 1/2"—20 Hex. Nut (Brkt. Mtg.)
23	23616	Resistor, 15,000 Ohm 1 W.	W	38205	1 1/2"—20 Screw (Brkt. Mtg.)
24	35602	Resistor, 1. Megohm 1/4 W.	W	32783	1/4" Lock Washer (Brkt. Mtg.)
25	35927	Resistor, 2. Megohm 1/4 W.	W	50167	Ant. Cable (Accessory)
26	50641	Resistor, 750 Ohm 1/2 W.	W	50395	Mtg. Bracket (Set)
27	50643	Resistor, 60 Ohm 1/2 W.	W	38935	Ammeter Cond. (Accessory)
28	50642	Resistor, 40 Ohm 1/2 W.			Case Ground Clip
29Z	50526	Volume Control, 1. Meg.			
29Y	50526	On-Off Switch			

The Crosley Corporation
Cincinnati, Ohio

MG27-50550 PUSH BUTTON ASSEMBLY

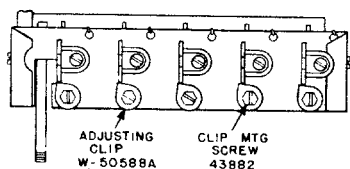


Push Button Assembly

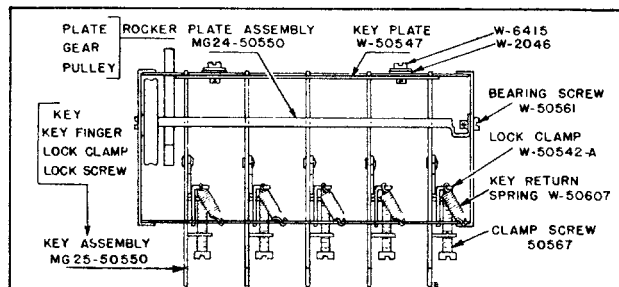

22

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

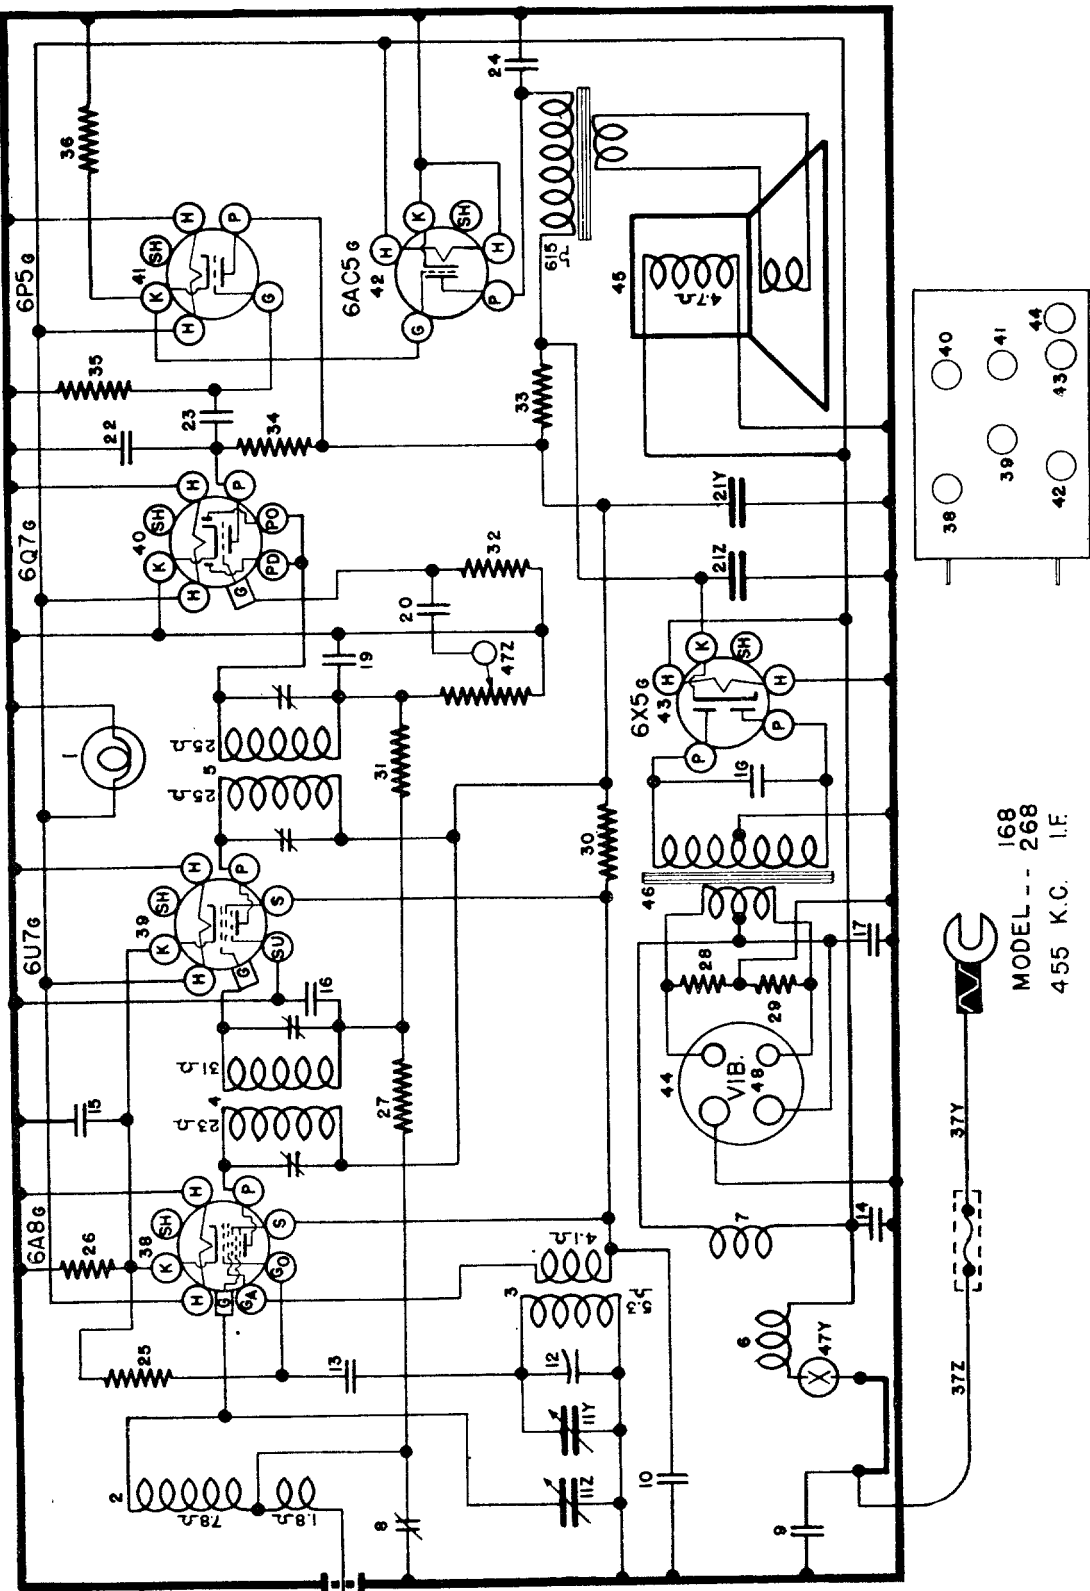

168
MODEL -- 268
455 K.C. I.F.

WIRING DIAGRAM—MODELS A-168 and A-268

The Crosley Corporation
Cincinnati, Ohio

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

PARTS LIST—MODELS A-168 and A-268

Figures in first column refer to parts in Diagrams.

Item No.	Part No.	Description	Item No.	Part No.	Description
1	W —43567	Dial Light Bulb, 6-8 V.	44	G105—28807	Socket Vibrator
2	G175—32000	Antenna Coil	W —50174	Tube Shield Base	
3	G176—32002	Oscillator Coil	W —50176	Tube Shield Half	
4	G191—32004	1st I-F. Trans., 455 Kc.	W —31210	Tube Shield Ring	
5	G196—32004	2nd I-F. Trans., 455 Kc.	45	278BL7"U"	Speaker—Mfg. Spec. No. 5-B-122
6	G19 —32977	Motor Noise Choke	—45889	Output Transformer	
7	G29 —28067	"A" Filter Choke	278BL7"B"	Speaker—Mfg. Spec. No. 55-W-1	
8	—38998B	Ant. Comp. Cond.	—45721	Output Transformer	
	—50049	Nut—Comp. Cond. Mtg.	46	B —50644A	Power Transformer
9	W —35936	Condenser, .05 Mf. 200 V.	W —50680	Shield—P. T.	
10	W —32380	Condenser, .05 Mf. 200 V.	47Z	—50526	Volume Control (1 Meg.)
11	G50 —33001	2 Section Gang Condenser	47Y	—	On-Off Switch
	C —50688	Dial (Glass) A-168 only	48	G10 —38000	Vibrator Interchangeable
	W —50517B	Dial Mask (Maroon) A-168 only	G13 —38000	Vibrator	
	W —50518A	Pointer—A-168 only			
	W —50758	Dial (Glass) A-268 only			
	W —50757	Dial Mask (Blue) A-268 only			
	W —50759	Pointer—A-268 only			
	W —50560	R. H. (Dial Mtg.) Clip			
	W —50545	L. H. (Dial Mtg.) Clip			
	B —78	Screws—Clip Mtg.			
	W —2045	Washers—Clip Mtg.			
	W —50524D	Drive Shaft—Manual			
	W —50325A	Washer—Shaft Retaining			
	MG28—50675	Shaft Brkt. Assm. (Rear Bearing)			
	G8 —43564	Pulley and Hub. Assm.			
	W —50590	Spring (Tension—22" Cord)			
	G6 —41582	Drive Cord—22-Inch			
	W —43561	Spring (Tension—18" Cord)			
	G5 —41582	Drive Cord—18-Inch			
	MG23—50675	Dial Brkt. Assm. Riveted to Chassis			
12	G3 —50369	Temp. Comp. Cond. (Bi-metal)			
13	G1 —34002	Condenser, .00025 Mf. Molded			
14	G3 —34002	Condenser, .0005 Mf. Molded			
15	W —50105	Condenser, .1 Mf. 160 V.			
16	W —32380	Condenser, .05 Mf. 200 V.			
17	W —50682A	Condenser, .5 Mf. 120 V.			
18	W —50203	Condenser, .0065 Mf. 1,000 V.			
19	G3 —34002	Condenser, .0005 Mf. Molded			
20	W —45810B	Condenser, .006 Mf. 160 V.			
21Z	W —50674	Condenser, 10. Mf. 350 V.			
21Y	W —50674	Condenser, 5 Mf. 350 V.			
22	G1 —34002	Condenser, .00025 Mf. Molded			
23	W —37226	Condenser, .02 Mf. 160 V.			
24	W —35758	Condenser, .008 Mf. 400 V.			
25	—35600	Resistor, 100,000 Ohms 1/4 W. Ins.			
26	—50699	Resistor, 200 Ohms 1/2 W. W. W.			
27	—36322	Resistor, 500,000 Ohms 1/4 W. W.			
28	—38915	Resistor, 100 Ohms 1/2 W. W. W.			
29	—38915	Resistor, 100 Ohms 1/2 W. W. W.			
30	—23616	Resistor, 15,000 Ohms 1 W. Carbon			
31	—35602	Resistor, 1 Meg. 1/4 W. Ins.			
32	—50671	Resistor, 15 Meg. 1/4 W. Ins.			
33	—45388	Resistor, 1,400 Ohms 1 1/2 W. W. W.			
34	—35601	Resistor, 300,000 Ohms 1/4 W. Ins.			
35	—38623	Resistor, 750,000 Ohms 1/4 W. Ins.			
36	—40643	Resistor, 25,000 Ohms 1/4 W. Ins.			
37Z	G29 —32750	"A" Lead, Set to Fuse			
37Y	G27 —32750	"A" Lead, Fuse to Ammeter			

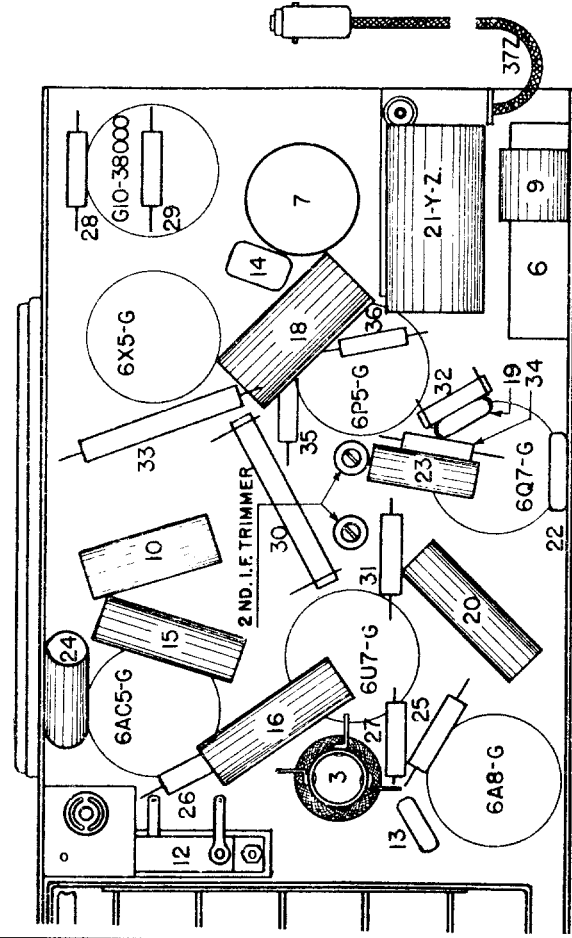



Fig. 3. Bottom View A-168 and A-268

TUBE SOCKET VOLTAGE READINGS

Tube	Function	H	P	S	Su	K	Ga	Go	G
6A8-G	Oscillator-Modulator	6.0	220	100	—	3.5	100	—	—
6U7-G	I-F. Amplifier	6.0	220	100	—	3.5	—	—	—
6Q7-G	Det., A. V. C. 1st A-F. Amplifier	6.0	60	—	—	—	—	—	—
6P5-G.	2nd A-F. Amplifier	6.0	200	—	—	11	—	—	—
6AC5-G	Output	6.0	225	—	—	—	—	—	11
6X5-G	Rectifier	6.0	—	—	—	240	—	—	—

Power Output (max.) 6 Watts—approx.
 Battery Drain 6.5 Amperes—approx.
 It will be noted that certain terminals on the sockets are used as junction blocks.

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

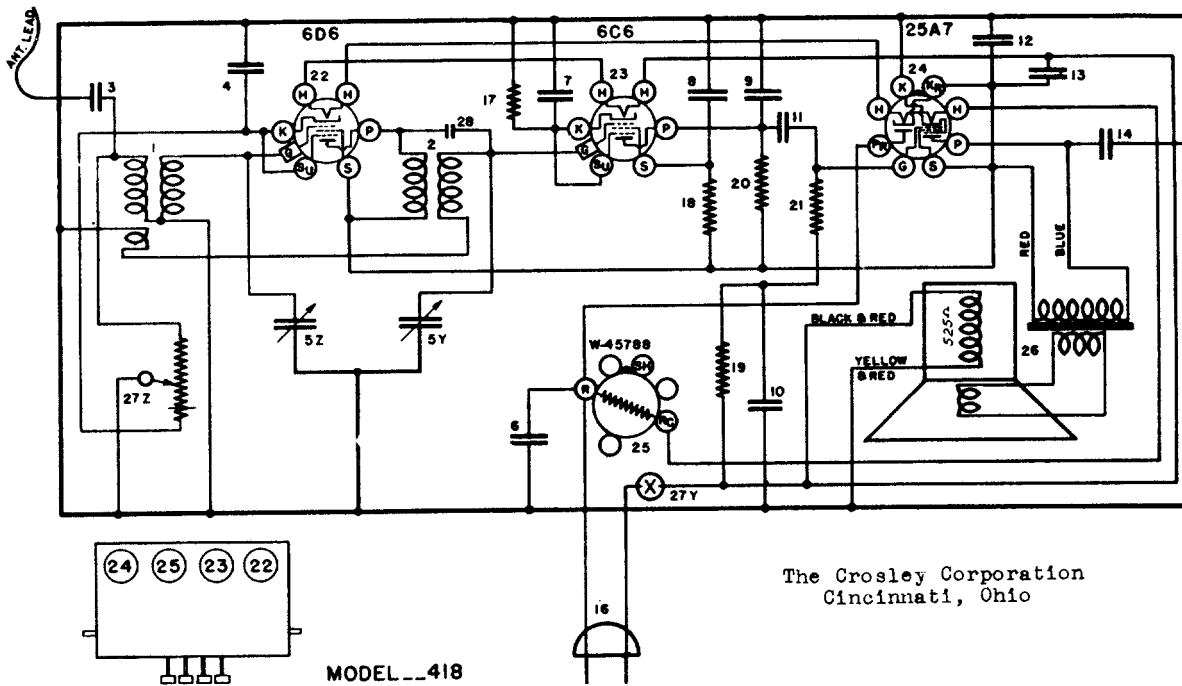

The Crosley Corporation
Cincinnati, Ohio

MODEL 418

WIRING DIAGRAM—MODEL 418


Figures in first column refer to parts in Diagrams.

Item No.	Part No.	Description	Item No.	Part No.	Description
1	G173—32000	Antenna Coil		—46045	Output Transformer
2	G102—32001	Oscillator Coil		W —45900A	Speaker Mtg. Brkt.
3	W —45780B	Condenser, .02 Mf. 160 Volt	27Z	—45786	Volume Control (40,000)
4	W —45780B	Condenser, .02 Mf. 160 Volt	27Y		
5Z	G53 —33001	2 Section Gang Condenser	28	W —45789A	Line Switch
5Y				G3 —50640	V. C. Mtg. Brkt.
6	W —45782B	Condenser, .05 Mf. 400 Volt	G6 —45683	Condenser, 7-10 Mmf.	Push Button Unit
7	W —45781B	Condenser, .25 Mf. 160 Volt	G27 —45683	—45683	Rocker Plate Assy.
8	W —45780B	Condenser, .02 Mf. 160 Volt	G26 —45683	—45683	Key Assy.
9	G2 —34002	Condenser, .0001 Mf. Molded	W —50542C	—50542C	Key Clip (Lock Clamp)
10	W —45781B	Condenser, .25 Mf. 160 Volt	—45717	—45717	Adjusting Screw
11	W —45780B	Condenser, .02 Mf. 160 Volt	W —50607B	—50607B	Spring (Key Return)
12	W —45783	Condenser, 16 Mf. 150 Volt	W —50561	—50561	Bearing Screw (Rocker)
13	W —45783	Condenser, 16 Mf. 150 Volt	W —50547	—50547	Key Plate (Rear Guide)
14	W —45780B	Condenser, .02 Mf. 160 Volt	W —45788	—45788	Ballast Tube
15	—None		W —46259	—46259	Cabinet Assy. 8BB (Brown)
16	B —45784	Power Cord & Plug	W —45828B	—45828B	Back Cabinet 8BB (Brown)
	W —45902	Clamp—Power Cord	W —45930C	—45930C	Rubber Foot (Bottom)
17	—24990	Resistor, 25,000 Ohm 1/3 W.	W —45931	—45931	Rubber Foot (Screw Type)
18	—37583	Resistor, 2.5 Megohm 1/3 W.			(Back)
19	—34018	Resistor, 200,000 Ohm 1/3 W.	W —45852	—45852	Baffle Board
20	—23785	Resistor, 500,000 Ohm 1/3 W.	W —45853	—45853	Grille Cloth
21	—21455	Resistor, 300,000 Ohm 1/3 W.	—45553B	—45553B	Push Button (Brown)
22	G21 —28807	Socket, 6 Prong	—45822	—45822	Dial Knob (Brown)
23	G21 —28807	Socket, 6 Prong	—45825A	—45825A	Vol. Cont. Knob (Brown)
24	G178—36400	Socket, 8 Prong (Octal)	—50549	—50549	Station Call Letter List
25	G178—36400	Socket, 8 Prong (Octal)	W —50551A	—50551A	Celluloid Protector (Cover)
	W —34175	Tube Shield Half (Slotted)			
	W —34174	Tube Shield Half			
	W —31210	Ring—Tube Shield			
26	282-BL-4	Speaker Mfg. Spec.			

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

25

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

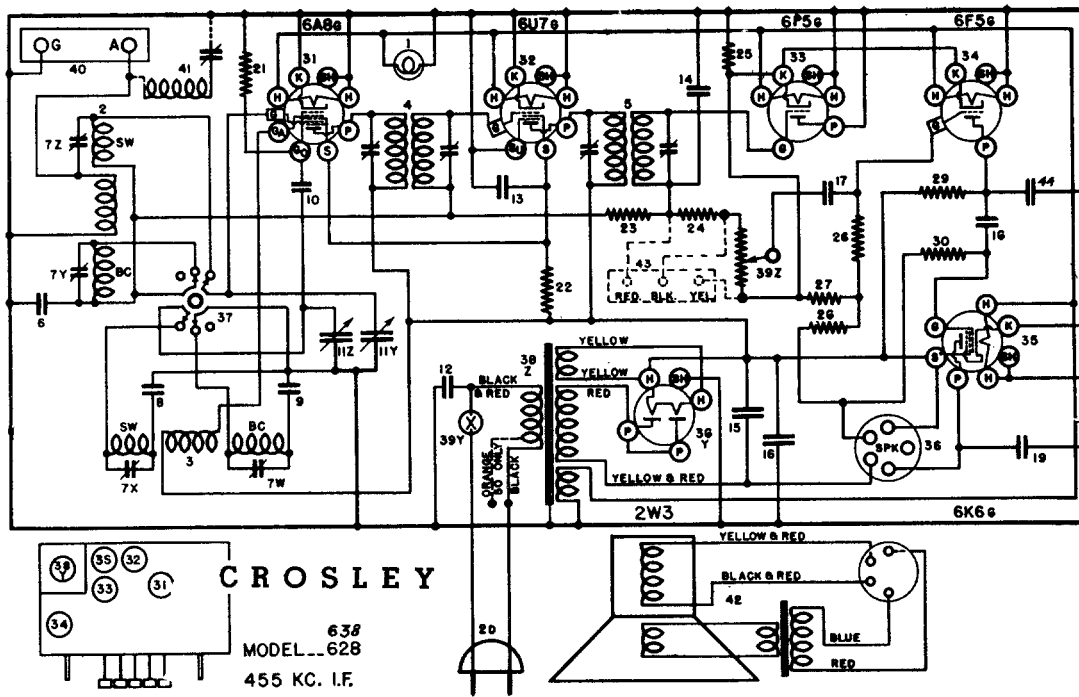


WIRING DIAGRAM—MODEL 628—638—5628

Figures in first column refer to parts in Diagrams.

Item No.	Part No.	Description	Item No.	Part No.	Description
1	W —37922	Dial Light 6-8 Volt		—45940	Power Trans., 50 Cycle, 220 V.
	G12 —45398	Dial Light Socket		—45864	Vol. Cont., 1 Meg. (628-5628)
2	G174 —32000	Antenna Coil, B-C and S-W.	39Z		Line Switch
3	G175 —32002	Oscillator Coil, B-C and S-W.	39Y		Vol. Cont., 1 Meg. (638)
4	G187 —32004	1st I-F Assy., 455 Kc.	39Z		Line Switch
5	G188 —32004	2nd I-F Assy., 455 Kc.	40	G1 —28719	A.-G. Terminal Assy.
6	W —38541	Condenser, .02 Mf., 160 V.	41	G193 —32007	456 Kc. Wave Trap
7	W —41247A	4 Section Trimmer Assy.	42	279-BP-12"U"	Speaker
8	G13 —34005	Condenser, .0014 Mf., Molded		—46121	Output Transformer
9	G18 —34002	Condenser, .0004 Mf., Molded	G41 —28719		Phono. Terminal Assy.
10	G5 —34002	Condenser, .00005 Mf., Molded	G7 —34002		Condenser, .0004 Mf., Molded
11	G55 —33001	2 Section Gang Condenser	G3 —45683		Push Button Unit (628-5628)
	C —45747	Glass Dial Face (628-638)	G11 —45683		Push Button Unit (638)
	W —45872	Dial Hand Face (5628)	G32 —45683		Riveted Key & Toggle (628-5628)
	W —46397	Dial Hand (Pointer)	G26 —45683		Riveted Key & Toggle (638)
	B —45743B	Dial Support Bracket	W —50542C		Key Lock Clamp
	W —45984	L. H. Dial Mtg. Clip	—45717		1 7/16 6x32 Lock Clamp Screw
	W —45985	R. H. Dial Mtg. Clip	W —50607B		Spring, Key Return
	W —46037A	Dial Hand Guide	G22 —45683		Rocker & Gear Segment Assy.
	W —45789C	Felt Strip	W —50561		1/8 6x40 Screw (Rocker Plate Bearing)
	—45865	Manual Drive Shaft (628-5628)	W —50588B		Adjusting Clip
	W —48056	Manual Drive Shaft (638)	—45242		Rubber Foot (628-5628)
	W —43542B	Mounting Bracket Drive Shaft			Model 628
	G12 —43564	Pulley & Hub Assy.	—8AA		Cabinet (Brown)
	G2 —41682	Drive Cord	W —43552		Clamp, Speaker Plug
	W —50607B	Cord Tension Spring	—45957		Knob, Band Switch
	W —46290	Drive Cord Clamp	—45771		Knob, V. C. & Tuning
12	W —30805	Condenser, .01 Mf., 400 V.	—50841		Station Call List
13	W —28821	Condenser, .02 Mf., 200 V.	—45553B		Push Button
14	G1 —34002	Condenser, .00025 Mf., Molded	W —80551A		Celluloid Call Letter Cover
15	W —4401Z	Condenser 16 Mf., 250 V., Elec.			Model 638
16	W —45968	Condenser 16 Mf., 250 V., Elec.	—8G		Cabinet (Wood Has Inlays)
17	W —28819	Condenser, .006 Mf., 200 V.	—8K		Cabinet (Wood)
18	W —28821	Condenser, .02 Mf., 200 V.	—46399C		Escutcheon
19	W —34847	Condenser, .006 Mf., 400 V.	D-30		Screws, Escutcheon Mtg.
20	B —45769	Power Cord and Plug	—46407		Knob, Band Switch
21	—38761	Resistor, 40,000 Ohm, 1/4 W.	—45408		Knob, V. C. & Tuning
22	—33390	Resistor, 30,000 Ohm, 1/3 W.	—50641		Station Call List
23	—26577	Resistor, 3 Megohm, 1/3 W.	W —50551A		Celluloid Cover
24	—21875	Resistor 100,000 Ohm, 1/3 W.	—46417		Push Button
25	WAS-A	1/2 W. Resistor from 6P5 Cath- ode to Gnd. (Deleted)			Model 5628
26	WAS-A	Resistor, 11 Megohm, 1/3 W.	—8AB		Cabinet (Red)
27	WAS-A	1/2 W. Resistor from 6P5 Cath- ode to Junction of Items 26 and 28 (Deleted)	—8AC		Cabinet (Ivory)
28	W —21965	Resistor, 375 Ohm, 1 W (was 275 Ohm)	—44552		Knob, V. C. & Tuning
29	—21455	Resistor, 300,000 Ohm, 1/3 W.	—44934		Knob, Band Switch
30	—23785	Resistor, 500,000 Ohm, 1/3 W.	—46887		Station Call List
31	G178 —38400	Socket, 8 Prong	W —50551A		Call Letter Cover
32	G178 —38400	Socket, 8 Prong	—50617		Push Button
33	G178 —38400	Socket, 8 Prong			—45910
34	G178 —38400	Socket, 8 Prong			Instructions (628)
35	G178 —38400	Socket, 8 Prong			—46326
	W —40911	Tube Shield			Instructions (638)
36	G103 —28807	Socket, Speaker Plug			—46897
37	—45901	Band Switch			Instructions (5628)

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

WIRING DIAGRAM—MODEL 428

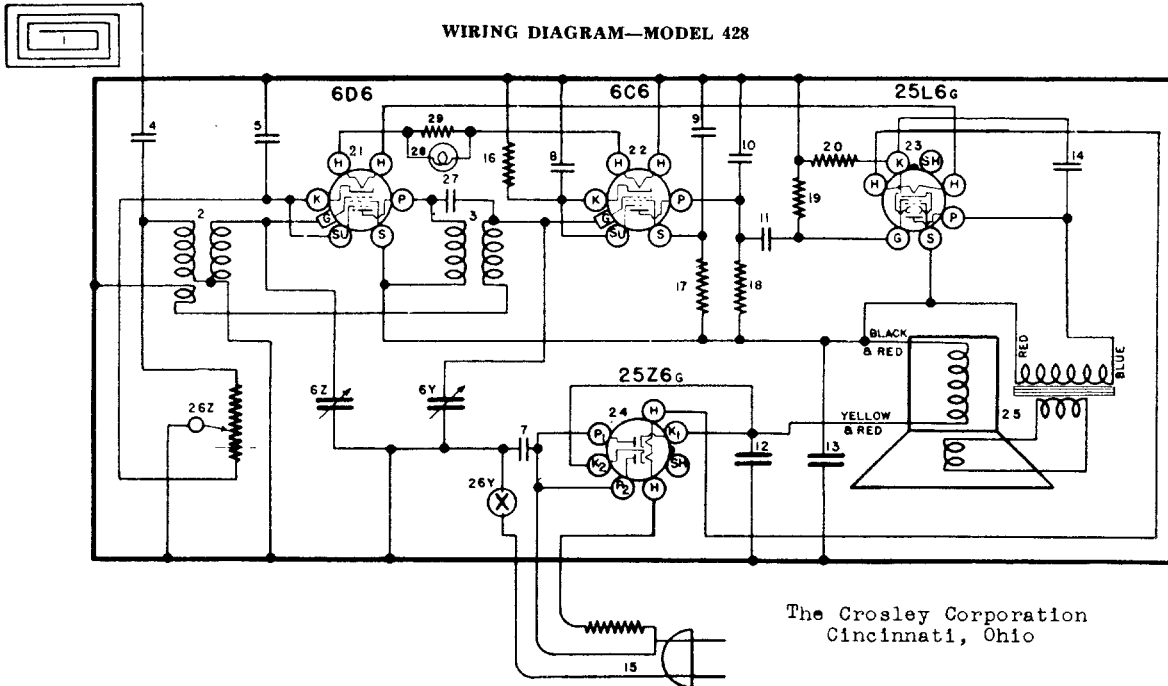

Figures in first column refer to parts in Diagrams.

Item No.	Part No.	Description
1	W —45577	Antenna Roll
2	G180—32000	Antenna Coil
3	G104—32001	R. F. Coil
4	W —45780B	Condenser, .02 Mf. 160 V.
5	W —45780B	Condenser, .02 Mf. 160 V.
6Z	G53 —33001	2 Section Gang Condenser
6Y	G53 —33001	2 Section Gang Condenser
7	W —45782B	Condenser, .05 Mf. 400 V.
8	W —45781B	Condenser, .25 Mf. 160 V.
9	W —45780B	Condenser, .02 Mf. 160 V.
10	G2 —34002	Condenser, .0001 Molded
11	W —45780B	Condenser, .02 Mf. 160 V.
12	W —45783	Condenser, 16 Mf. 150 V. Elect.
13	W —45783	Condenser, 16 Mf. 150 V. Elect.
14	W —45817A	Condenser, .05 Mf. 160 V.
15	B —46114	Power Cord (165 Ohm 15W Lead)
	W —45902	Cord Clamp
16	—24990	Resistor, 25,000 Ohms 1/3W.
17	—37583	Resistor, 2.5 Meg Ohms 1/3W.
18	—23785	Resistor, 500,000 Ohms 1/3W.
19	—23785	Resistor, 500,000 Ohms 1/3W.
20	W —45965	Resistor, 110 Ohms 1/2W. Flex.
21	G21 —28807	6 Prong Socket
22	G21 —28807	6 Prong Socket
23	G178—36400	8 Prong Socket
24	G178—36400	8 Prong Socket
	W —34175	Tube Shield Half (Slotted)
	W —34174	Tube Shield Half (Plain)
	W —31210	Tube Shield Ring
25	281-BL-5-U	Speaker Spec. 5-B-130
	W —45900A	Speaker Mtg. Bracket
26Z	—45786	Volume Control, 40,000 Ohms
26Y	—45786	On-Off Switch


Item No.	Part No.	Description
27	G3 —50640	Condenser Assembly
28	W —44337	Dial Light, 6-8 Volt
	W —40570	Dial Light Shield
	G6 —27134	Dial Light Socket
29	W —44396	Resistor, 40 Ohms 3 1/2W. Flex.

TUBE SOCKET VOLTAGE READINGS

Tube	H	P	S	K	Su
6D6	6.3*	97	98	2.5-25	as
6C6	6.3*	20	10	7	
25L6	25*	85	98	6	
25Z6	25*	117*		126	


Readings taken with a 1000 ohm per volt meter. Volume full on. Readings between terminals indicated and chassis. Values marked with a * are A.C.

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

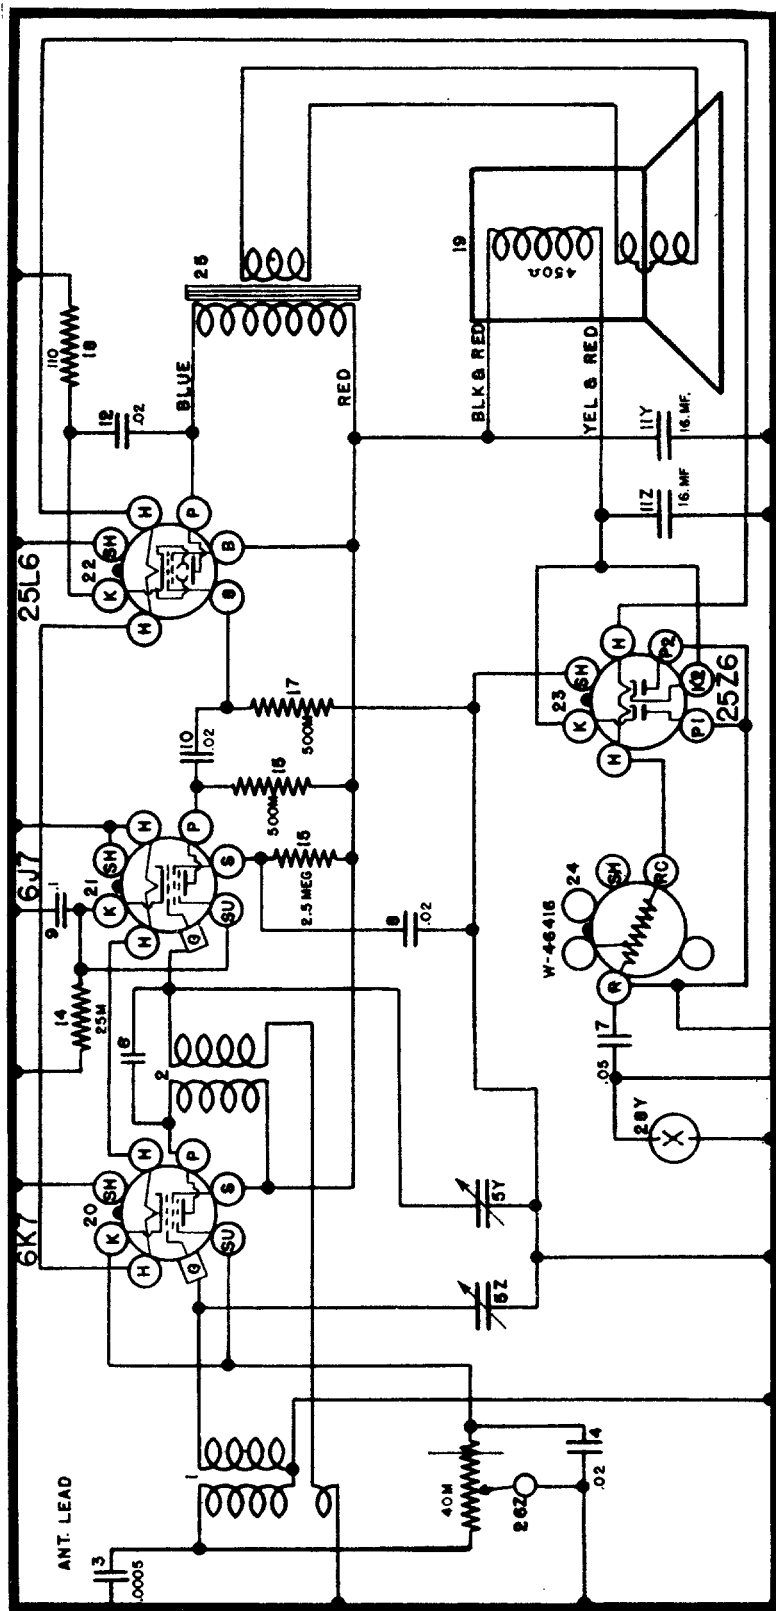

Item No.	Part No.	Description
1	G182-32000	Antenna Coil
2	G102-32001	R-F. Coil
3	G3	Condenser, .0005 Mf. Molded
4	W	Condenser, .02 Mf. 160 V.
5	G60-33001	2 Section Gang Condenser
6	G3	Twisted Lead—Cap. Coupling
7	W	Condenser, .05 Mf. 120 V.
8	W	Condenser, .02 Mf. 160 V.
9	W	Condenser, .1 Mf. 160 V.
10	W	Condenser, .02 Mf. 160 V.
11Z	W	Condenser, 16 Mf. 125 V.
11Y	W	Condenser, 16 Mf. 125 V.
12	W	Condenser, 16 Mf. 125 V.
13	B	Power Cord and Plug
14	24990	Resistor, 25,000 Ohm $\frac{3}{8}$ W.
15	37583	Resistor, 2.5 Megohm $\frac{3}{8}$ W.
16	23785	Resistor, 500,000 Ohm $\frac{3}{8}$ W.
17	23785	Resistor, 500,000 Ohm $\frac{3}{8}$ W.
18	45965	Resistor, 110 Ohm $\frac{1}{2}$ W.


19	284-BL-4"B"	Speaker—Spec.
	—46691	Field Coil—450 Ohm
	284-BL-4"H"	Speaker—Spec.
	—46901	Field Coil—450 Ohm
20 to 24	G178-36400	Socket—8 Prong Octal
	W	Tube Shield
25	G25-29535	Output Transformer
26Z	—46411	Volume Control—
26Y		Line Switch—

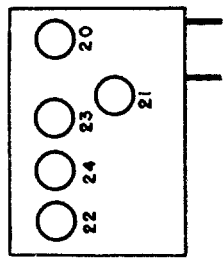


WIRING DIAGRAM—

MODEL 568

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

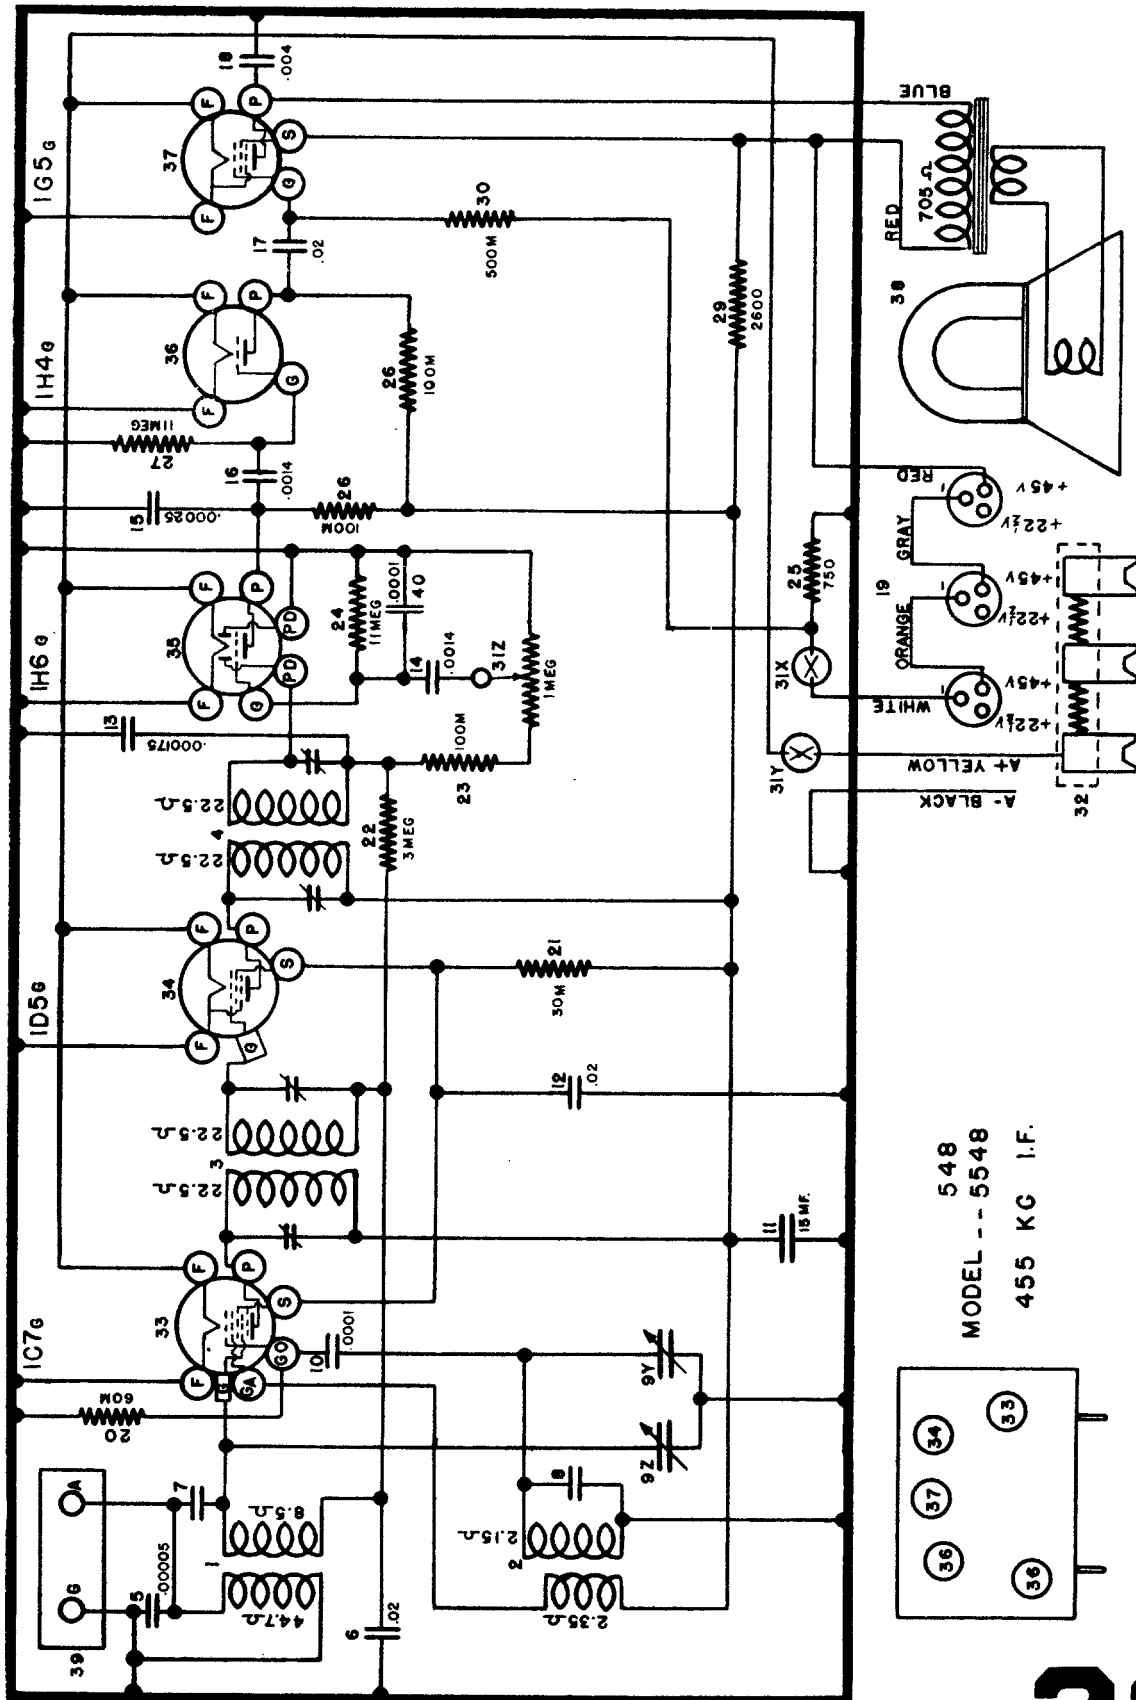

548
MODEL -- 5548
455 KC I.F.

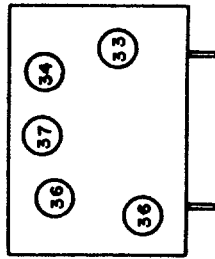

WIRING DIAGRAM MODELS 548, 5548

The Crosley Corporation
Cincinnati, Ohio


COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

PARTS LIST—MODELS 548 & 5548

Figures in first column refer to parts in Diagrams.

Item No.	Part No.	Description	Item No.	Part No.	Description
1	G176—32000	Antenna Coils		W —40911	Tube Shield
2	G177—32002	Oscillator Coil	38	274PL18"H"	Speaker, Spec. S-4504 AMD5
3	G194—32004	1st I. F. Transformer		—46800	Speaker Cone Assembly
4	G195—32004	2nd I. F. Transformer		—46802	Output Transformer
5	G5 —34002	Condenser, .00005 Mf. Molded		—46803	Cardboard Ring
6	W —28621	Condenser, .02 Mf. 200 V. Paper	39	G1 —26719	Terminal (A-G)
7	G5 —50640	Condenser (Capacity Coupling) Ant.	40	G2 —34002	Condenser, .0001 Mf. Molded
8	G3 —50640	Condenser (Capacity Coupling) Osc.			
9Z	G52 —33001	2 Sect. Condenser			
9Y					
	W —23877	Set Screw (For Pulley-Hub Assembly)			
	G12 —43564	Pulley and Hub Assembly			
	MG14—45894	Riveted Dial Support Bracket, R. H.			
	MG16—46000	Riveted Dial Support Bracket, L. H.			
	C —46042	Dial Glass			
	W —45984	Dial Glass Clip, L. H.			
	W —45985	Dial Glass Clip, R. H.			
	W —46397	Dial Pointer (White)			
	W —46037	Dial Hand Guide			
	W —45742B	Dial Glass Cushion			
	B —45743B	Dial Support			
	—46056	Drive Shaft (5548)			
	—45865	Drive Shaft (548)			
	W —43542B	Drive Shaft Bracket			
	G2 —41582	Drive Cord (44 Inches)			
	W —46290	Cord Clamp			
	W —46087	Drive Cord Spring			
10	G2 —34002	Condenser, .0001 Mf. Molded			
11	W —45968	Condenser, 15 Mf. 250 V. Elect.			
12	W —28621	Condenser, .02 Mf. 200 V. Paper			
13	G11—34002	Condenser, .000175 Mf. Molded			
14	W —41461	Condenser, .0014 Mf. 200 V. Paper			
15	G1 —34002	Condenser, .00025 Mf. Molded			
16	W —41461	Condenser, .0014 Mf. 200 V. Paper			
17	W —28621	Condenser, .02 Mf. 200 V. Paper			
18	W —28904	Condenser, .004 Mf. 200 V. Paper			
19	C —46014	Battery Cable, Model 548			
19	C —46072A	Battery Cable, Model 5548			
20	—21237A	Resistor, 60,000 Ohms $\frac{1}{4}$ W. Carbon			
21	—33390	Resistor, 30,000 Ohms $\frac{1}{4}$ W. Carbon			
22	—26577	Resistor, 3 Megohms $\frac{1}{4}$ W. Carbon			
23	—21875	Resistor, 100,000 Ohms $\frac{1}{4}$ W. Carbon			
24	—37584	Resistor, 11 Megohms $\frac{1}{4}$ W. Carbon			
25	W —22514	Resistor, 750 Ohms $\frac{1}{2}$ W. Flex.			
26	—21875	Resistor, 100,000 Ohms $\frac{1}{4}$ W. Carbon			
27	—37584	Resistor, 11 Megohms $\frac{1}{4}$ W. Carbon			
28	—21875	Resistor, 100,000 Ohms $\frac{1}{4}$ W. Carbon			
29	W —30960	Resistor, 2,600 Ohms $1\frac{1}{2}$ W. Flex.			
30	—23785	Resistor, 500,000 Ohms $\frac{1}{4}$ W. Carbon			
31Z	—45996A	Volume Control			
31Y			Switch "A" Supply Model 548		
31X	—46057A	Volume Control			
31Z			Switch "B" Supply Model 5548		
31Y	—46057A	Volume Control			
31X			Switch "A" Supply Model 5548		
31X	—41995A	Switch "B" Supply			
32			Resistance Strip, 1.83 Ohms Tap at 1.1 Ohms		

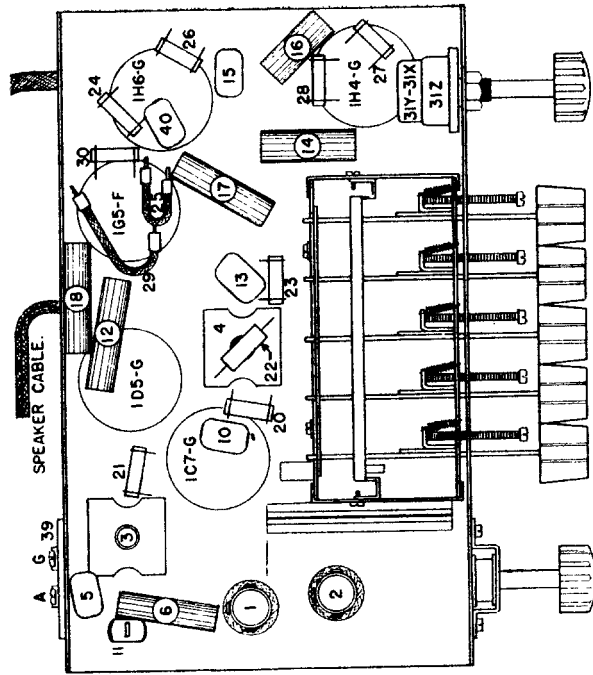

Bottom View Model 548

TUBE SOCKET VOLTAGE READINGS

Tube	Function	H	P	S	G	Ga	Go
1C7-G	Oscillator-Modulator	2.0	120	40	0	120	-3
1D5-G	I-F Amplifier	2.0	120	40	0	—	—
1H6-G	Detector & 1st A-F Amp.	2.0	50	—	0	—	—
1H4-G	2nd A-F Amplifier	2.0	50	—	0	—	—
1G5-G	Output	2.0	123	129	-6	—	—

Power Output approximately .750 Watt.


"A" Battery Drain approximately .42 Ampere at 2 Volts.

"B" Battery Drain approximately 18 Milliampere at 135 Volts.

30

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

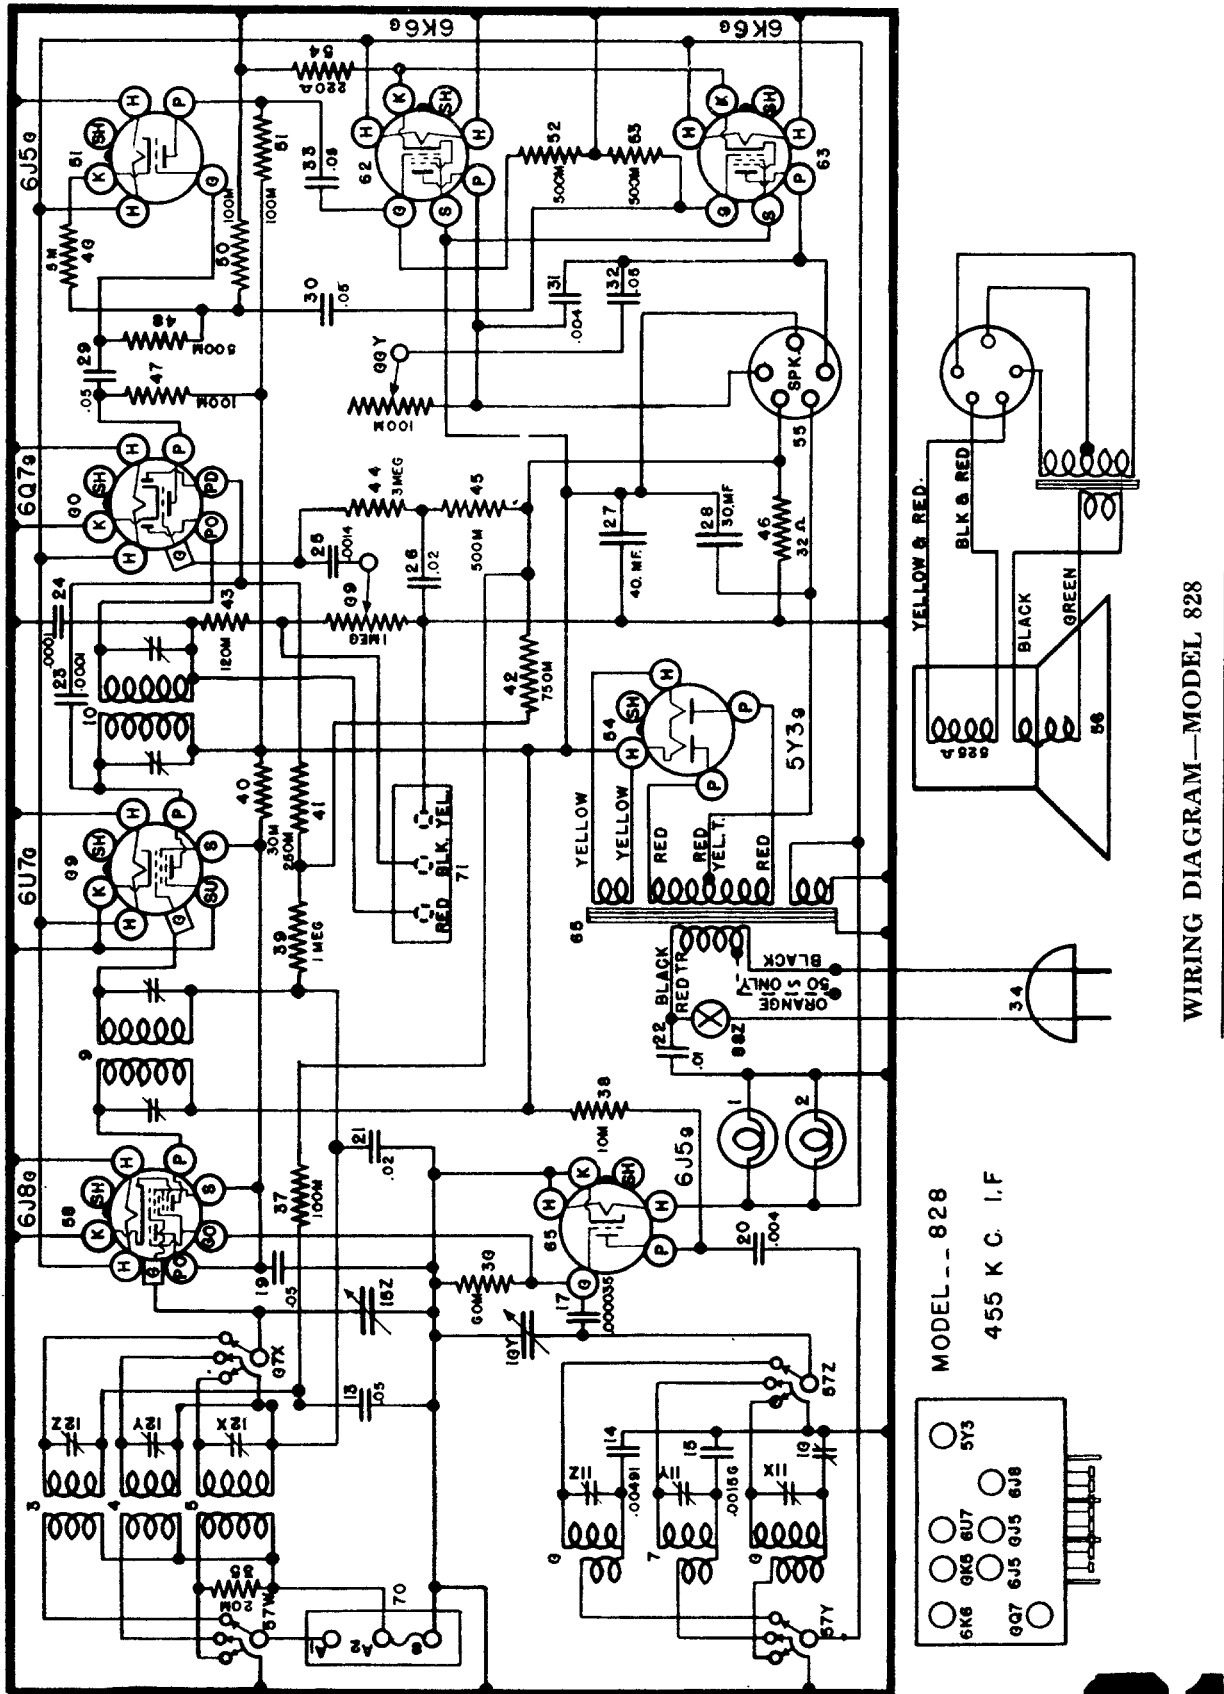


WIRING DIAGRAM—MODEL 828

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

31

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

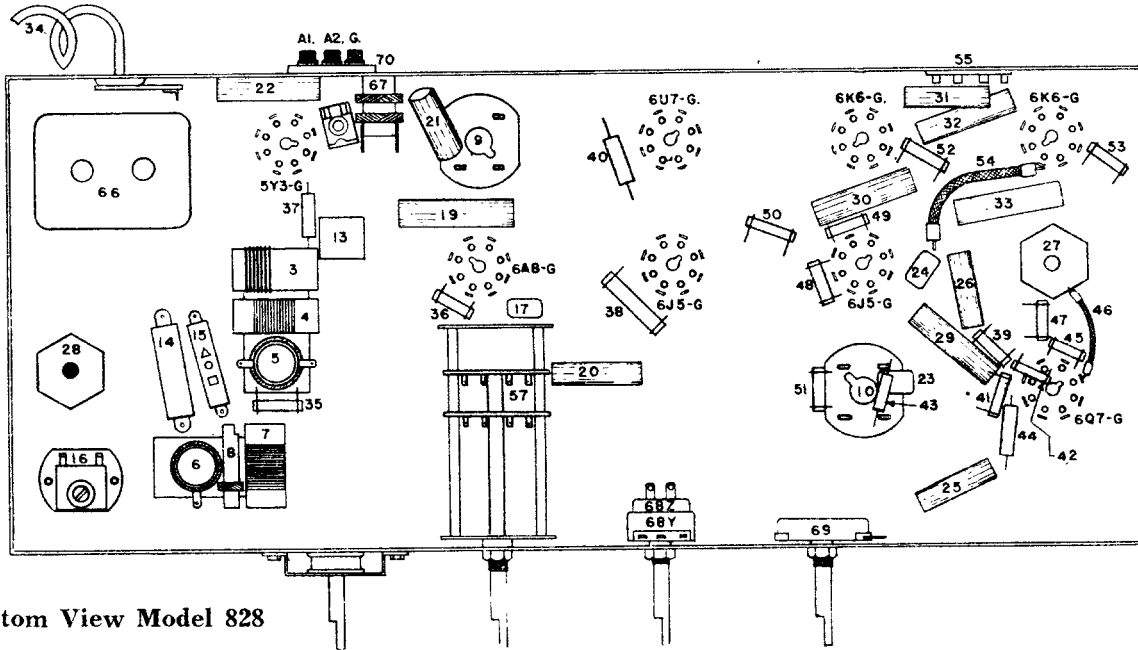

Bottom View Model 828


PARTS LIST — MODEL 828

Figures in first column refer to parts in Diagrams.

Item No.	Part No.	Description	Item No.	Part No.	Description
1	W —37922	Dial Light—6-8 Volt	48	—23785	Resistor, 500,000 Ohm 1/4 W.
2	W —37922	Dial Light—6-8 Volt	49	—27121	Resistor, 5,000 Ohm 1/4 W.
	G16 —45398	Socket and Brkt. Assy., Dial Light	50	—21875	Resistor, 100,000 Ohm 1/4 W.
3	G170—32000	Antenna Coil—H-F.	51	—21875	Resistor, 100,000 Ohm 1/4 W.
4	G168—32000	Antenna Coil—Pol.	52	—23785	Resistor, 500,000 Ohm 1/4 W.
5	G169—32000	Antenna Coil—B-C.	53	—23785	Resistor, 500,000 Ohm 1/4 W.
6	G170—32002	Oscillator Coil—H-F.	54	W —22873	Resistor, 220 Ohm 2 1/2 W.
7	G168—32002	Oscillator Coil—Pol.	55	G103—28807	Socket—(5 Prong Spkr.)
8	G169—32002	Oscillator Coil—B-C.		W —43532	Spkr. Plug Clamp
9	G175—32004	1st I-F. Assy., 455 Kc.	56	583-CP-18"K"	Speaker, Spec. No.
10	G176—32004	2nd I-F. Assy., 455 Kc.			V. C. and Cone Assy.
11	W —45713	3 Section Trimmer (Osc. Shunt)			Field Coil—(525 Ohm)
12	W —35951A	3 Section Trimmer (Ant. Shunt)			Output Transformer
13	W —35936	Condenser, .05 Mf. 200 V.			Cardboard Ring
14	G20 —34000	Condenser, .004910 Mf. Mica		583-CP-18"H"	Speaker, Spec. No. S-4893N3
15	G23 —34000	Condenser, .001560 Mf. Mica		—46786	V. C. and Cone Assy.
16	—40769	B-C. Osc. Series Trimmer		—46787	Field Coil (525 Ohm)
17	G13 —34002	Condenser, .000035 Mf. Molded		—46788	Output Transformer
18	G59 —33001	2 Section Gang Condenser		—46789	Cardboard Ring
19	W —23615	Condenser, .05 Mf. 400 V.		583-CP-18"Z"	Speaker, Spec. No. E10K326
20	W —35139	Condenser, .004 Mf. 400 V.		—46758	V. C. and Cone Assy.
21	W —28621	Condenser, .02 Mf. 200 V.		—46759	Field Coil (525 Ohm)
22	W —30805	Condenser, .01 Mf. 400 V.		—46760	Output Transformer
23	G2 —34002	Condenser, .0001 Mf. Molded		—46761	Cardboard Ring
24	G2 —34002	Condenser, .0001 Mf. Molded	57	B —46276	Band Selector Switch
25	W —41461	Condenser, .0014 Mf. 200 V.	58 to 65	G178—36400	8 Prong Socket
26	W —28621	Condenser, .02 Mf. 200 V.		—46318	Power Transformer, 60 Cy.—110 V.
27	W —36057B	Condenser, 40 Mf. 300 V.		—46307	Power Transformer, 50 Cy.—110 V.
28	W —44054	Condenser, 30 Mf. 350 V.		—46308	Power Transformer, 50 Cy.—220 V.
29	W —23615	Condenser, .05 Mf. 400 V.		—46309	Power Transformer, 25 Cy.—110 V.
30	W —23615	Condenser, .05 Mf. 400 V.		—46310	Power Transformer, 25 Cy.—220 V.
31	W —35139	Condenser, .004 Mf. 400 V.		—46311	Power Transformer, 40-100 Cy.—95-267 V
32	W —23615	Condenser, .05 Mf. 400 V.	67	MG41—46287	Wave Trap—455 Kc.
33	W —23615	Condenser, .05 Mf. 400 V.		G188—32000	Coil—Only—Wave Trap
34	B —33906A	Power Cord and Plug	68Y	—44024B	Tone Control
35	—22196	Resistor, 20,000 Ohm 1/4 W.	68Z		Line Switch
36	—21237A	Resistor, 60,000 Ohm 1/4 W.	69	—44773	Volume Control
37	—35600	Resistor, 100,000 Ohm 1/4 W.	70	G27 —26719	Ant. and Gnd. Terminal Assy.
38	—4921C	Resistor, 10,000 Ohm 1 W.	71	G41 —26719	Phono Terminal Assy.
39	—21454	Resistor, 1 Megohm 1/4 W.		G10 —45683	Push Button Unit Assy.
40	—36952	Resistor, 30,000 Ohm 1 W.		G29 —45683	Key and Toggle Assy.
41	—34020	Resistor, 250,000 Ohm 1/4 W.		—45717	Screw—Key Adjusting
42	—37590	Resistor, 750,000 Ohm 1/4 W.	W —50607C	Spring—Key Return	
43	—36320	Resistor, 120,000 Ohm 1/4 W.	W —50542C	Clamp—Toggle Lock	
44	—36688	Resistor, 3 Megohm 1/4 W.	W —50588B	Adjusting Clip—(Heart Shaped)	
45	—23785	Resistor, 500,000 Ohm 1/4 W.	W —45646B	Adjusting Clip—(Hooked)	
46	W —37631	Resistor, 32 Ohm 1/2 W.	W —46278	Guide Plate—Key	
47	—21875	Resistor, 100,000 Ohm 1/4 W.	G18 —45683	Rocker Plate and Gear Sector Assy.	
			W —50561	Screw—Rocker Plate Bearing	
			W —45976	Bronze Spring—Bearing Thrust	
			W —50273	Rubber Band—Used on Keys	
			8R	Cabinet	
			—46360A	Knob—4 Req.	
			8T	Cabinet (Lowboy Style)	
			—46360A	Knob—Tuning—Volume	
			—46784A	Knob—Tone Control—Band Sw.	
			C —46228C	Escutcheon	
			—46417	Push Button	
			—50841	Station Call List	
			W —50551A	Celluloid Call Letter Cover	
			—46329	Instruction Booklet	

The Crosley Corporation
Cincinnati, Ohio

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

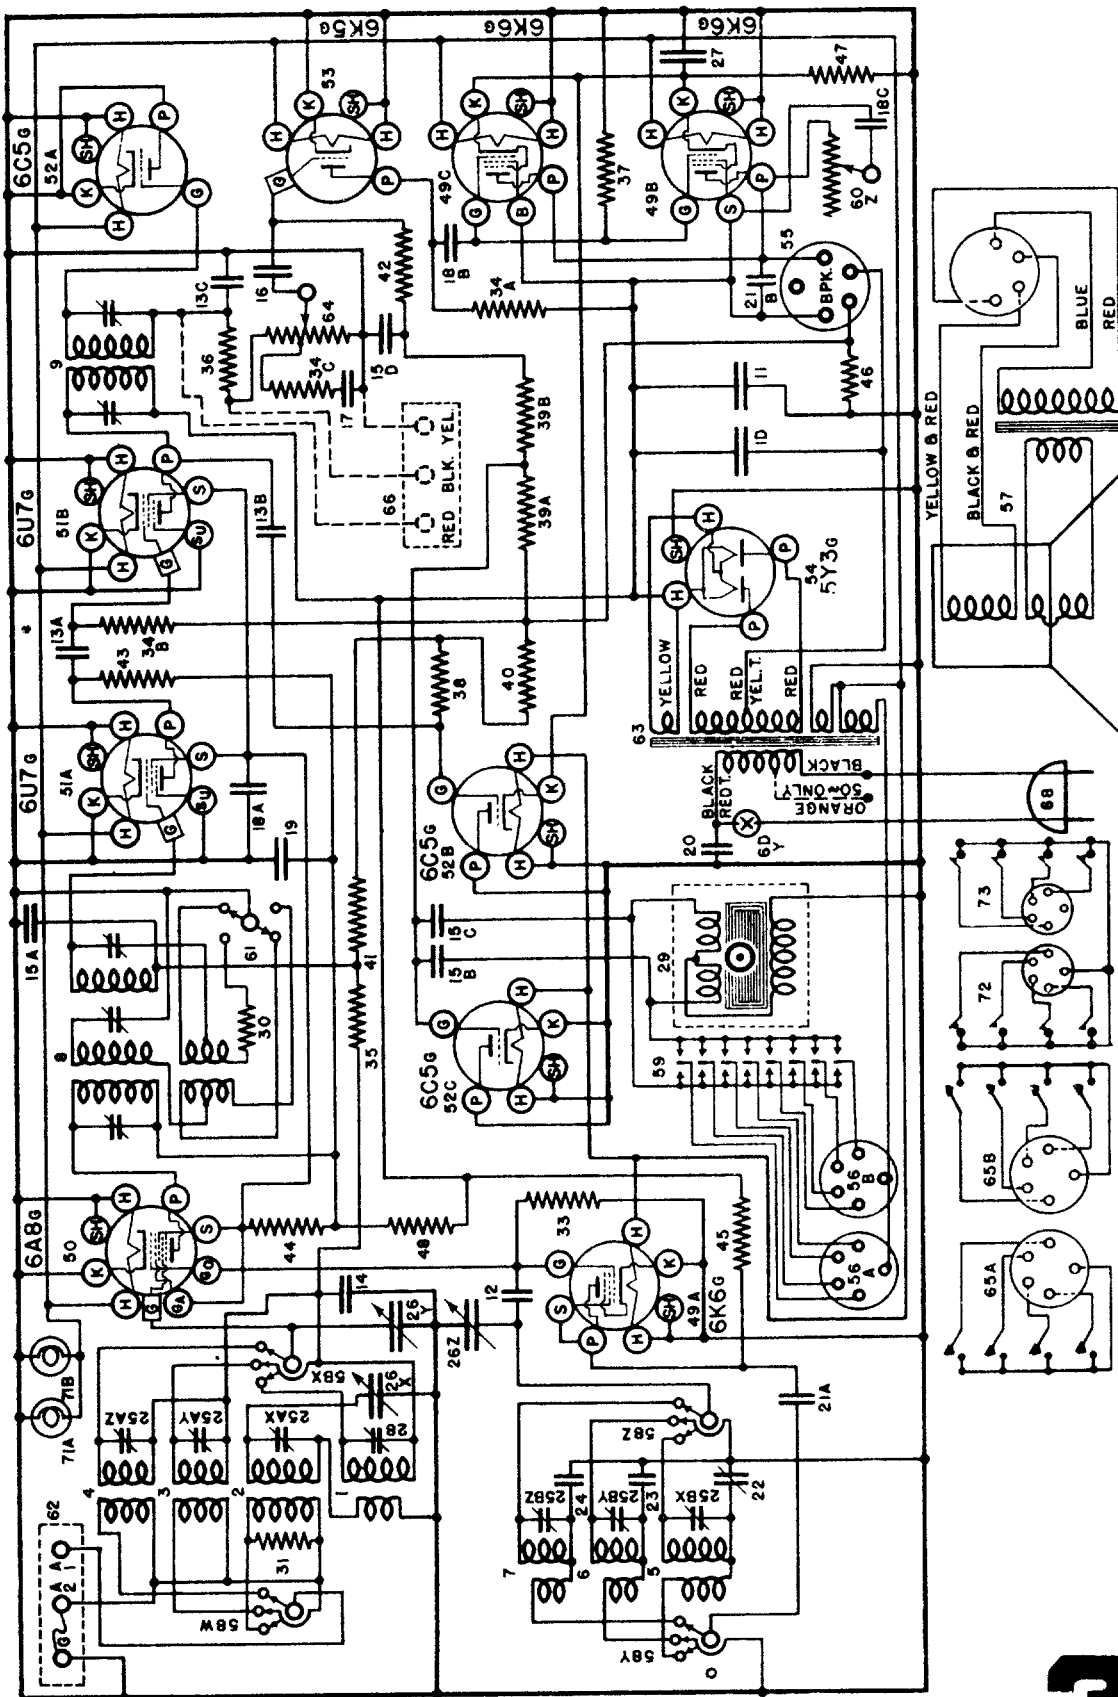

455 Kc. I.F.

WIRING DIAGRAM—MODEL 1118 AND 1128

CROSLLEY

33

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS


PARTS LIST — MODEL 1118

Figures in first column refer to parts in Diagrams.

Item	Part No.	Description	Item	Part No.	Description
1	G97—32001	Pre-Selector Coil, B.C.	35	—35600	Resistor, 100,000 Ohm $\frac{1}{4}$ W. Carb.
2	G138—32000	Antenna Coil, B.C.	36	—36320	Resistor, 120,000 Ohm $\frac{1}{4}$ W. Carb.
3	G151—32000	Antenna Coil, Police	37	—34018	Resistor, 200,000 Ohm $\frac{1}{3}$ W. Carb.
4	G150—32000	Antenna Coil, H.F.	38	—34020	Resistor, 250,000 Ohm $\frac{1}{3}$ W. Carb.
5	G139—32002	Oscillator Coil, B.C.	39A	—23785	Resistor, 500,000 Ohm $\frac{1}{3}$ W. Carb.
6	G154—32002	Oscillator Coil, Police	39B	—23785	Resistor, 500,000 Ohm $\frac{1}{3}$ W. Carb.
7	G153—32002	Oscillator Coil, H.F.	40	—37590	Resistor, 750,000 Ohm $\frac{1}{3}$ W. Carb.
8	G161—32004	1st I-F., 455 Kc. Assy.	41	—21454	Resistor, 1 Megohm $\frac{1}{2}$ W. Carb.
9	G154—32004	2nd I-F., 455 Kc. Assy.	42	—26577	Resistor, 3 Megohm $\frac{1}{2}$ W. Carb.
10	W —44054	Condenser, 30 Mf. 350 V.	43	—44165	Resistor, 5,000 Ohm $\frac{1}{2}$ W. Carb.
11	W —36057B	Condenser, 40 Mf. 300 V.	44	—4921C	Resistor, 10,000 Ohm 2W. Carb.
12	G1 —44886	Condenser, Bimetal Temp. Control	45	—44008	Resistor, 10,000 Ohm 2W. Carb.
13A	G2 —34002	Condenser, .0001 Mf. Molded	46	W —37631	Resistor, 32 Ohm $\frac{1}{2}$ W. Flex.
13B	G2 —34002	Condenser, .0001 Mf. Molded	47	W —45381	Resistor, 300 Ohm 2W. Flex.
13C	G2 —34002	Condenser, .0001 Mf. Molded	48	W —23013	Resistor, 2,000 Ohm $\frac{1}{4}$ W. Flex.
14	W —35936	Condenser, .05 Mf. 200 V.	49		
15A	W —28621	Condenser, .02 Mf. 200 V.	50	G178—36400	Socket, 8 Prong Octal.
15B	W —28621	Condenser, .02 Mf. 200 V.	51		
15C	W —28621	Condenser, .02 Mf. 200 V.	54		
15D	W —28621	Condenser, .02 Mf. 200 V.	55	G103—28807	Socket, Speaker
16	W —41461	Condenser, .0014 Mf. 200 V.	56	G16 —28807	Socket, Push Button Cable
17	W —28619	Condenser, .006 Mf. 200 V.		W —41007	Cable Clamp, P. B. Cable
18A	W —22688	Condenser, .1 Mf. 400 V.	57	W —40911	Tube Shield
18B	W —22688	Condenser, .1 Mf. 400 V.		671BP-18-"M"	Speaker, Spec. No. 1-D-1180
18C	W —22688	Condenser, .1 Mf. 400 V.		—45184	V. C. and Cone Assembly
19	W —23615	Condenser, .05 Mf. 400 V.		—45185	Field Coil (515 Ohm)
20	W —30805	Condenser, .01 Mf. 400 V.		—44678	Output Transformer
21A	W —35139	Condenser, .004 Mf. 400 V.		—43680	Cone Mounting Ring
21B	W —35139	Condenser, .004 Mf. 400 V.		W —24715	Elastic Mounting Nuts
22	—40769	Condenser, B.C. Osc. Series Trimmer		W —22985	Rubber Washer
23	G23 —34000	Condenser, .001560 Mf. Pol. Osc. Fixed Trimmer		W —46804	Spacer
24	G20 —34000	Condenser	58	W —24865	Steel Washer
25	W —35951A	3 Section Shunt Trimmer Assy.	59	—44049	Band Selector Switch
26	G60 —33002	3 Section Var. Tuning Cond. (1118)		G1 —44628	Switch, Discriminator, Assy.
26	G62 —33002	3 Section Var. Tuning Cond. (1128)	60	G2 —44628	Flexible Coupling
	W —44907A	Idler Pulley (1118)	61	—44024B	Tone Control (300,000 Ohm) and Switch
	W —44908	Idler Mtg. Stud (1118)	61	—46086	Switch, Local Distance (1128)
	D —46239	Dial Face (Glass) (1128)	61	—44665A	Switch, Local Distance (1118)
	C —46094	Dial Glass Support (1128)	62	G27 —26719	Ant. and Gnd. Terminal Assy.
	W —46099	Dial Glass Clip (2) (1128)	63	—44910	Power Transformer, 110 V. 60 C
	W —46096	Dial Glass Clip, R.H. (1128)		—44915	Power Transformer, 110 V. 50 C
	W —46095	Dial Glass Clip, L.H. (1128)		—44916	Power Transformer, 220 V. 50 C
	—46203	Dial Pointer (1128)		—45527	Power Transformer, Universal
	W —46097	Dial Pointer Guide (1128)	64	—44702	Volume Control, 1 Megohm
	G —41582	Drive Cord (50-Inch) (1128)	65A	G8 —45228	Push Button—Cable and Plug (R.H.) (1118)
	W —46941	Dial Glass Cushion (1128)	65B	G9 —45228	Push Button—Cable and Plug (L.H.) (1118)
	G13 —43564	Pulley and Hub Assy. (1128)		W —45478	Trip Bar and Connecting Link Switch (1118)
	MG44—46080	Idler Pulley and Brkt. Assy. (1128)	66	G37 —26719	Phono Terminal Assy.
	W —44989	Cord Tension Spring (1128)	68	B —33960A	Line Cord and Plug
	W —46477	Tubing—Drive Shaft (1128)	71	W —43567	Dial Light Bulb, 6-8 Volt (1118)
	W —45448	Drive Belt (1128)	71	W —37922	Dial Light Bulb, 6-8 Volt (1128)
	W —44907B	Idler Pulley (Dual) (1128)	72	G9 —44363	Dial Light Socket Assy.
	W —44908	Idler Stud (1128)	72	MG45—46081	Push Button—Cable and Plug (1128)
	D —46949	Dial Glass (Foreign Only) (1128)	73		
	W —46290	Drive Cord Clamp (1128)			
27	W —41598	Condenser, 50 Mf. 25 V.			
28	—44516	Condenser, Pre-Select Shunt			
29	MG105—44879	Motor Assembly (50-60 Cycle)			
	—45168	Motor		7P	Cabinet (1118)
	W —45165	Motor Foot	B	—45652A	Escutcheon (Dial) (1118)
	W —45164	Motor Mounting Bracket		—45667	Escutcheon (Push Button) L.H.
	W —20800	Shakeproof Washer		—45666	Escutcheon (Push Button) R.H.
	—6875	W. H. Machine Screw, $\frac{3}{16}$ " Long	W	—44380B	Knob, Vol. Cont. and Tuning (2)
	—6876	W. H. Machine Screw, $\frac{1}{4}$ " Long	W	—44426A	Knob, T. C.—L. D. Sw. and B. C. (3) (1118)
	—44497	Headed Bushing—Brkt. Mtg.	W	—44871A	Push Button (Bakelite) (1118)
	W —36180	Rubber Sleeve—Brkt. Mtg.	B	—44876A	Switch (Push Button) Only
	—42401A	Resistor, 99 Ohm $\frac{1}{4}$ W. Ins.		8Q	Cabinet (1128)
30	—22196	Resistor, 20,000 Ohm $\frac{1}{8}$ W. Carb.		8QA	Cabinet (1128)
33	—21237A	Resistor, 60,000 Ohm $\frac{1}{8}$ W. Carb.	C	—46228C	Escutcheon (1128)
34A	—21875	Resistor, 100,000 Ohm $\frac{1}{8}$ W. Carb.		—46360A	Knob, Vol. Cont. and Tuning (2)
34B	—21875	Resistor, 100,000 Ohm $\frac{1}{8}$ W. Carb.		—46362A	Knob, T. C.—L. D. Sw. and B. C. (3) (1128)
34C	—21875	Resistor, 100,000 Ohm $\frac{1}{8}$ W. Carb.	W	—45171	Push Button (Bakelite) (1128)
			B	—46221	Switch (Push Button) Only (1128)
			W	—44876A	Celluloid Cover (Button)



MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

Super Pee-Wee Model


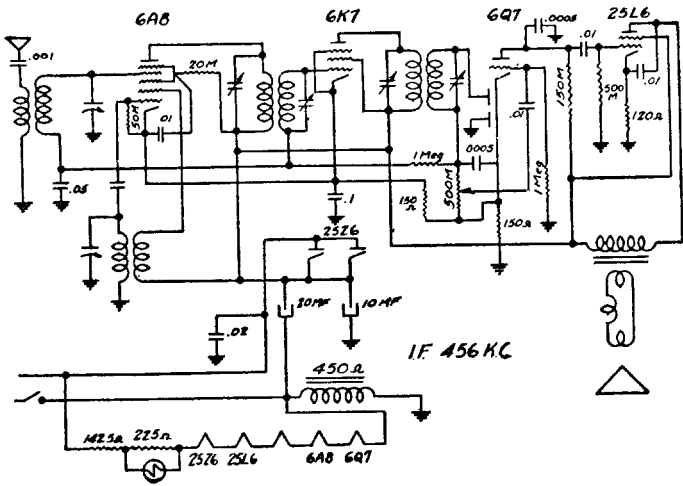


DETROLA CORPORATION

Model 197, Pee-Wee

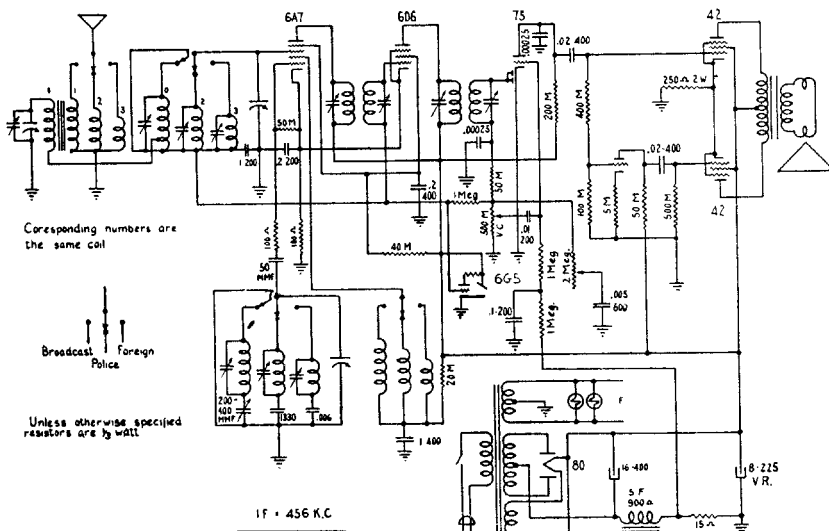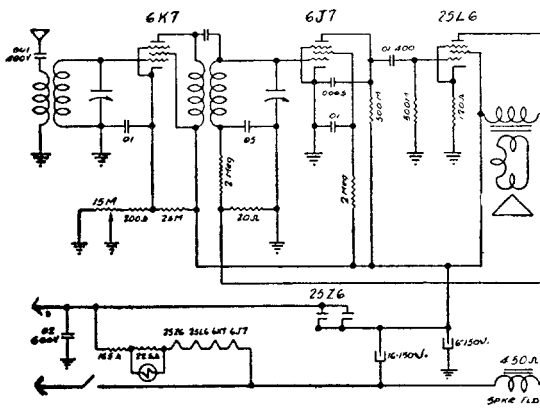

MODEL 147E

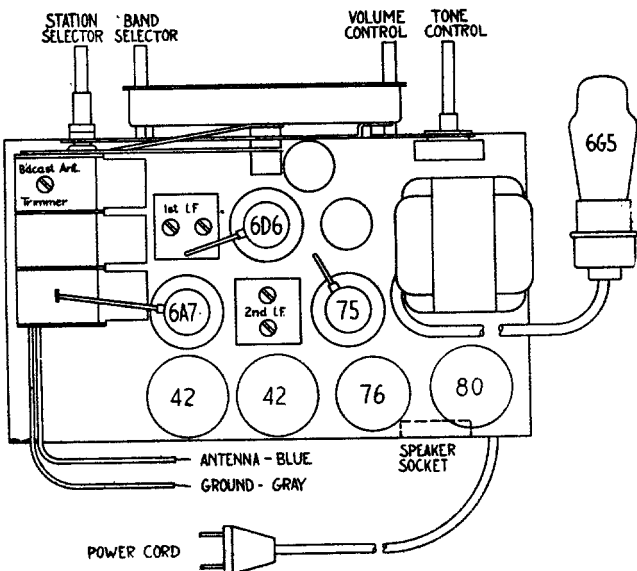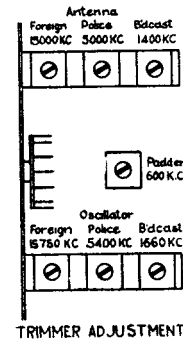


For alignment use a signal generator. Couple through .1 mfd. condenser to grid of 6A7, and chassis. Set for 456 KC. Adjust 2nd I.F. and then 1st. Recheck. For R.F. alignment, feed 1660 KC. to antenna thru a 200 mmfd. condenser. Adjust Broadcast osc. trimmer. Set for 1400 KC. and adjust the two antenna trimmers. Set for 600 KC. and adjust padder while rocking tuning condenser. For short wave alignment see next page.

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

DETROLA RADIO AND TELEVISION CORPORATION

DETROIT, MICHIGAN

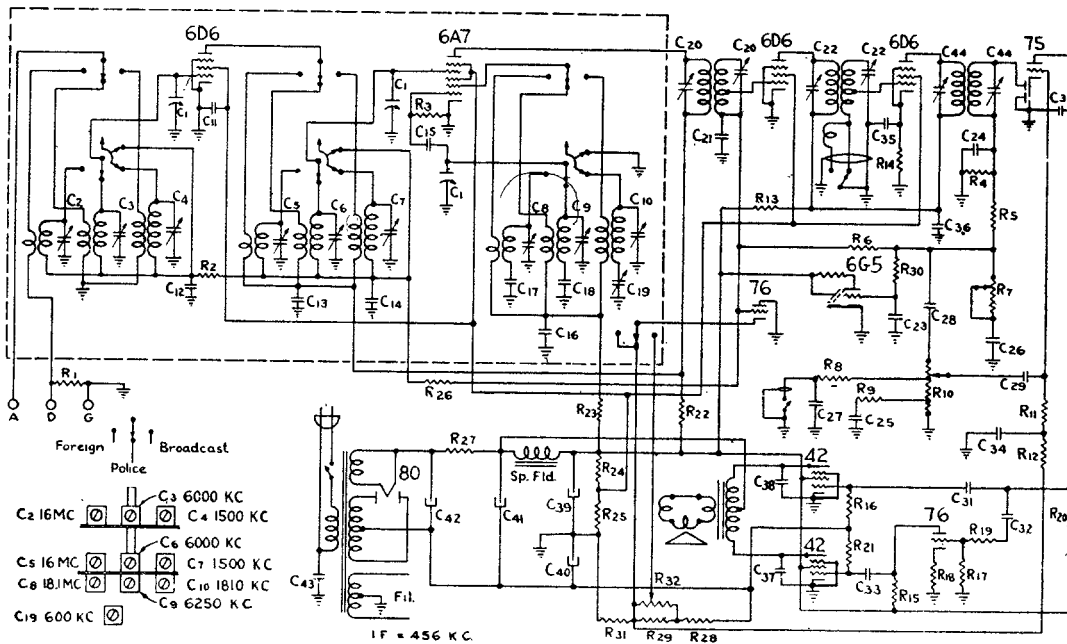

MODEL 165

Symbol Part No. Description

C1	3814	9-400 mmf Variable
C2,3,4	3822	2-35 triple trimmer
C5,6,7	3822	2-35 triple trimmer
C8,9,10	3822	2-35 triple trimmer
C11,21,34	572	.1-200 V.
C12,14,23	580	.05-200 V.
C13	575	.1-400 V.
C15,24	2780	50 mmf mica
C16,35	568	.01-400 V.
C17	2694	.005 5% tolerance
C18	2741	1330 mmf 5% tolerance
C19	2560	350 mmf variable padder
C20,22,44		IF Trimmer
C25	4072	.03-200 V.
C26	2695	.003-600 V.
C27	824	.002-600 V.
C28,29	576	.02-400 V.
C30	1286	250 mmf mica
C31,33	2600	.02-600 V.
C32,36	563	.05-400 V.
C37,38	3138	.001-800 V.
C39	3113	16 MF regulating
C40	3136	20 MF 25 V.
C41	3112	16 MF 450 V.

C42	3111	16 MF 500 V.
C43	3135	.003-800 V.
R1,5,15,26	603	100 M 1/3 W.
R2,3	631	50 M 1/3 W.
R4,16,21	615	500 M 1/3 W.
R6	2693	2 meg 1/3 W.
R7	3799	2 meg tone control
R8	2568	300 M 1/3 W.
R9,23	617	20 M 1/3 W.
R10	3800	3 meg volume control
R11,12	624	1 meg 1/3 W.
R13,14,22	2421	1 M 1/3 W.
R17	2880	100 M 1/3 W. 10 %
R18	614	5 M 1/3 W.
R19	2731	500 M 1/3 W. 10 %
R20	598	200 M 1/3 W.
R24	3805	7 M 3.5 W.
R25	3805	8 M 1.5 W.
R27	3809	100 ohms 2 W. 10 %
R28	3806	120 ohms 1.5 W. 10 %
R29	4111	85 ohms 1.0 W. 10 %
R30	2106	3 meg 1/3 W.
R31	3870	15 ohms .5 W. 10 %
R32	3801	2 M variable


Using 400 ohm resistor in series with generator, set band selector in center position, set generator to 5400 kc and adjust oscillator trimmer for top frequency. Set generator to 5000 kc, tune receiver to signal and adjust antenna trimmer.

Turn band selector to extreme clockwise position. Using 400 ohm resistor in series with generator, set oscillator top frequency for 15,750 kc—screw trimmer down tight, then unscrew to *second* peak. Set generator to 15,000 kc, tune receiver to signal and adjust antenna trimmer—Screw trimmer down tight, then unscrew to *first* peak, rocking the tuning condenser back and forth through the signal while the adjustment is being made. Above procedure for alignment at 15,000 kc must be followed exactly to insure proper tracking. A dead spot at about 12,000 kc will result if antenna and oscillator circuits are not set in proper relation to each other.






COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS


DETROLA RADIO AND TELEVISION CORPORATION

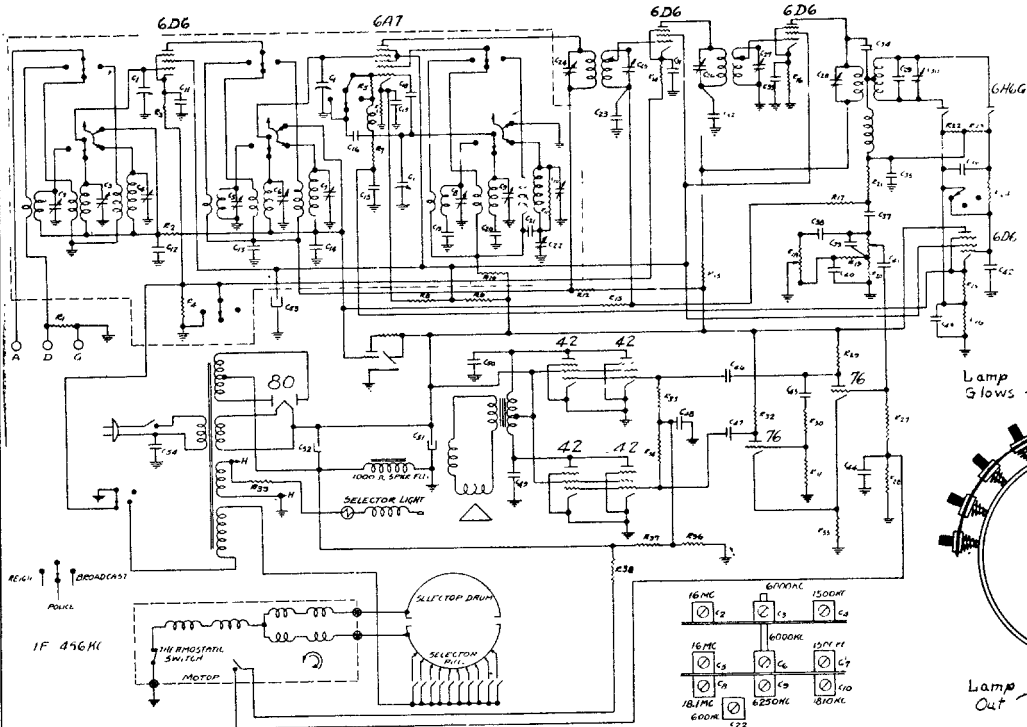

192 Series

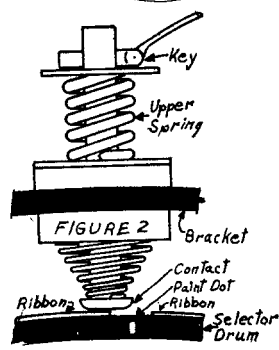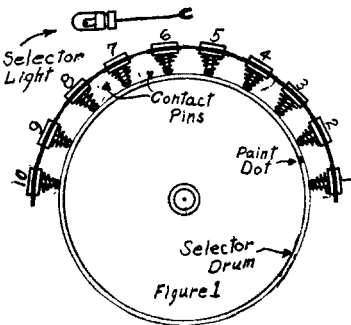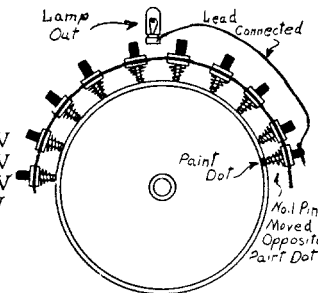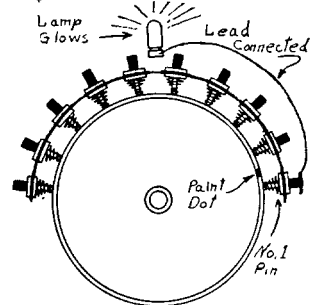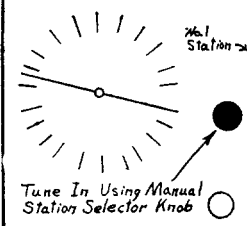

Master Selector Set Up For Station No. 1. Repeat Similar Operations For Station No. 2 Using No. 2 Pin, Etc

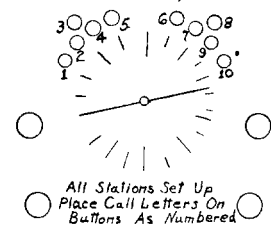


Symbol	Part No.	Description
R1,13,29,32	2880	100 M 1/3W 10%
R2,7,21	631	50 M 1/3W
R3,12,14,15,16	2421	1000 ohm 1/3W
R4	2421	1000 ohm 1/3W
R5	2783	2500 ohm 1/3W 10%
R6	3937	500 ohm 1/2 W Wire-wound ± 10%
R8	3805	7000 ohm 3 1/2 W Wirewound
R9	3805	8000 ohm 1 1/2 W Wirewound
R10	600	10M 1/3W
R11	3581	3M 1/3W ± 10%
R17,22,23,24, 28,27,30	2599	1 meg 1/3W 10%
R18	2737	2 meg tone control
R20	3800	3 meg volume control
R25	2572	400 ohm 1/3W 10%
R26	2691	500 ohm 1/3W 10%
R33,34,19	2730	200 M 1/3W 10%
R36		150 M 1/3W 10%
R38,37	2731	500 M 1/3W 10%
R39		20 ohm 1 W
C1		400 mmf variable
C2,3,4	3822	2-35 mmf triple trimmer
C5,6,7	3822	2-35 mmf triple trimmer
C8,9,10	3822	2-35 mmf triple trimmer
C11,12,14,17, 31,33	580	.05—200 V
C13,32	575	.1—400 V
C15,23,42,43,44	572	.1—200 V
C16	2925	25 mmf mica
C18	4676	8 mmf
C19	2694	.005—600 5%
C20	2741	1330 mmf 5%
C21		.01—400 V
C22	2560	350 mmf variable padder
C34,35	1285	100 mmf mica
C36,48	2792	.2—200 V
C37,41	576	.02—400 V
C38,40	824	.002—600 V
C39	2780	50 mmf. mica


C45,46,47	2600	.02—600 V
C49,50	2601	.01—600 V
C51	4062	30 MF 275 V
C52	4649	24 MF 450 V
C53	3079	8 MF 150 V
C54	3135	.003—800 V

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

Emerson Radio

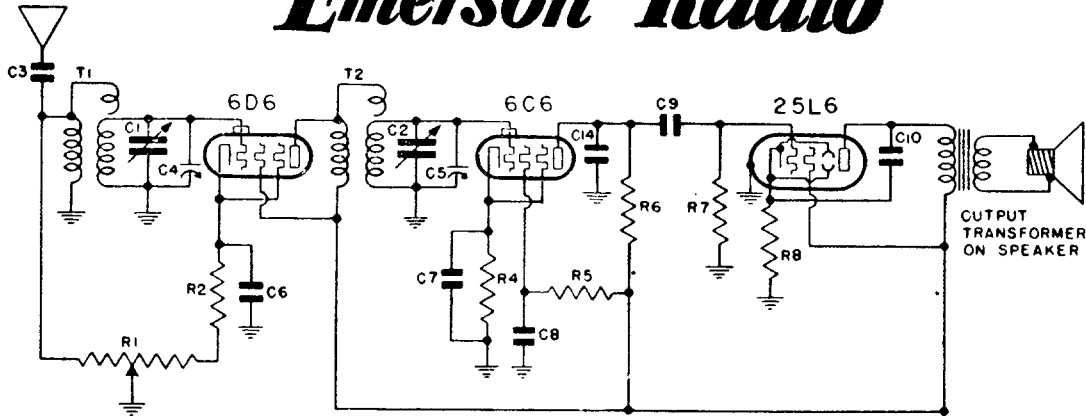

MODELS BA-199 and BA-201

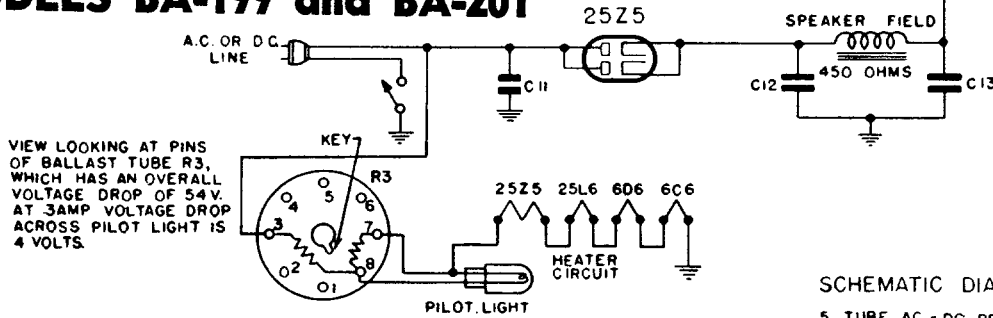

SCHEMATIC DIAGRAM
5 TUBE AC - DC RECEIVER

VIEW LOOKING AT PINS OF BALLAST TUBE R3, WHICH HAS AN OVERALL VOLTAGE DROP OF 54 V. AT 3AMP VOLTAGE DROP ACROSS PILOT LIGHT IS 4 VOLTS.

- *Item number locates the article on the schematic diagram.
- †These condensers cannot be supplied separately.
- ‡Note: In replacing the dual 16 mf electrolytic condenser, the green lead should be connected to the rectifier.

PRODUCTION CHANGES


1. Receivers bearing serial numbers below 1496300, C14 was a 0.0001 mf condenser instead of 0.0002.
2. Receivers bearing serial numbers below 1585100, C10 was a 0.03 mf condenser instead of 0.05.

*Item	Part No.	DESCRIPTION
T1	5AT-422	Broadcast antenna coil
T2	5AT-423	Broadcast detector coil
R1	2VR-219D	Volume control—75,000 ohms, with line switch
R2	3CR-294	240 ohm, 1/2 watt wire-wound resistor
R3	L55-BG	Plug-in ballast tube (Interchangeable with L55-B)
R4	OR-73U	25,000 ohm, 1/4 watt carbon resistor
R5	HR-42U	2 megohm, 1/4 watt carbon resistor
R6, R7	KR-56U	500,000 ohm, 1/4 watt carbon resistor
R8	3QR-297	110 ohm, 1/2 watt wire-wound resistor
C1, C2	5AC-376	Two-gang variable condenser
C3	NNC-199	.001 mf, 600 volt tubular condenser
†C4, C5		Trimmers, part of variable condenser.
C6, C8	AC-6	.1 mf, 200 volt tubular condenser
C7	5AC-388	.25 mf, 100 volt tubular condenser
C9	LC-65	.02 mf, 400 volt tubular condenser
C10	LC-64	.05 mf, 400 volt tubular condenser. (See production change No. 2)
C11	EEC-132	.1 mf, 400 volt tubular condenser
†C12, C13	4DC-345A	Dual 16 mf, 100 volt dry electrolytic condenser. (See note below.)
C14	5AC-384	.0002 mf, 600 volt tubular condenser. (See production change No. 1)
	3TS-312	5" dynamic speaker
	XL-9	Pilot light, 6.3 volt, .25 amp., Mazda No. 46
	5AZ-745	Condenser pulley
	5AZ-746	Pointer pulley
	5AZ-747	Dial pointer
	4YZ-772	Drive cord
	3RZ-519	Drive cord spring
	5AZ-792	Dial face
	5AZ-779A	Dial crystal for Model BA-199
	5AZ-794	Dial crystal for Model BA-201


MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

Emerson Radio and Phonograph Corp.

- L1, T1 Antenna coil with adjustable 455 kc wave-trap
 T2 Double-tuned 455 kc first i-f transformer
 T3 Double-tuned 455 kc second i-f transformer
 T4 Oscillator coil
 R1 30,000 ohm 1/2 watt carbon resistor
 R2 50,000 ohm 1/4 watt carbon resistor
 R3 140 ohm 1/2 watt wire-wound resistor
 R4, R17 1 megohm 1/4 watt carbon resistor
 R5 Volume control .25 megohm with line switch
 R6 15 megohm 1/4 watt carbon resistor
 R7 250,000 ohm 1/4 watt carbon resistor
 R8 500,000 ohm 1/4 watt carbon resistor
 R9 Resistance line cord with pilot light ballast section.
 R10 Tone control .5 megohm with motor line switch
 R13 2,500 ohm 1 watt carbon resistor
 R14 175 ohm 1 watt carbon resistor
 R15 100,000 ohm 1/4 watt carbon resistor
 R16 Tone control .5 megohm
 R18 Two-gang variable condenser (for 219 and 221)
 C1, C2 0.00055 mf mica condenser
 C3 Trimmer, part of wave-trap assembly.
 C4 Trimmers, part of variable condenser.
 C5, C11 Trimmers, part of i-f transformers.
 C6, C7, C8, C9 0.05 mf, 200 volt tubular condenser
 C10 0.00006 mf mica condenser
 C12 0.1 mf, 200 volt tubular condenser
 C18 0.1 mf, 400 volt tubular condenser
 C14 0.1 mf, 400 volt tubular condenser
 C15, C16 0.00022 mf mica condenser
 C17 0.002 mf, 600 volt tubular condenser
 C19 0.02 mf, 400 volt tubular condenser
 C20, C21 0.025 mf, 400 volt tubular condenser
 C20, C21 Dual 20 mf, 150 volt dry electrolytic condenser
 C22 0.0005 mf mica condenser
 C23 20 mf, 135 volt dry electrolytic condenser
 C24 0.01 mf, 400 volt tubular condenser
 C25 0.006 mf, 600 volt tubular condenser
 C26 0.0008 mf mica condenser
 Pilot light, 6.3 volt, .25 amp, Mazda No. 44
 Drive cord
 Drive cord spring
 Drive shaft
 Dial face fasteners
 Needle cup (for 219 and 221)
 Needle cup (for 222)
 Dial pointer (for 221, 222 and 232)
 Dial crystal (for 221, 222 and 232)
 Dial face (for 221, 222 and 232)
 6 1/2" permanent magnet dynamic speaker
 ADDITIONAL PARTS USED ON AX-219
 500,000 ohm 1/4 watt carbon resistor
 ADDITIONAL PARTS USED ON AX-221 and AX-222
 1 megohm 1/4 watt carbon resistor
 110 volt, a.c. motor (for 221-AC)
 AC-DC motor (for 221AC-DC and 222)

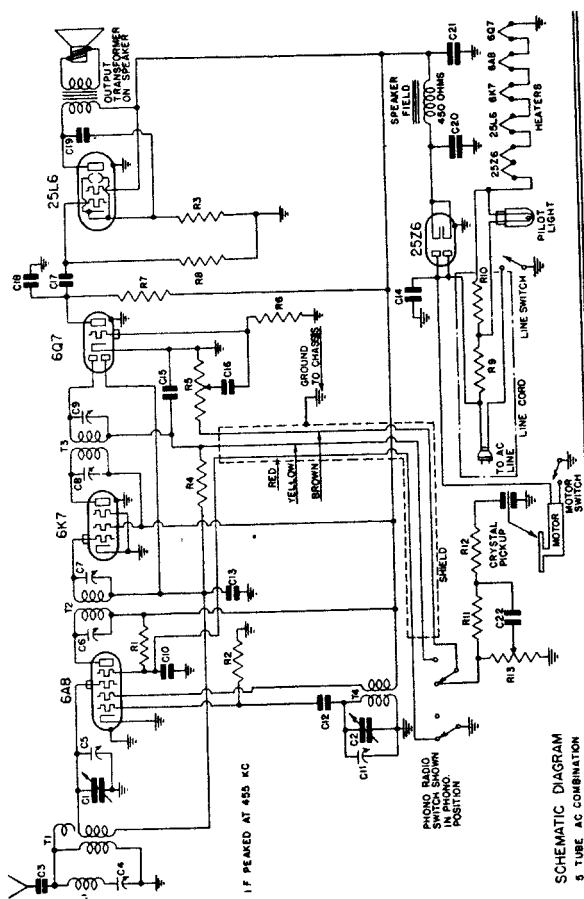

MODEL AX-219

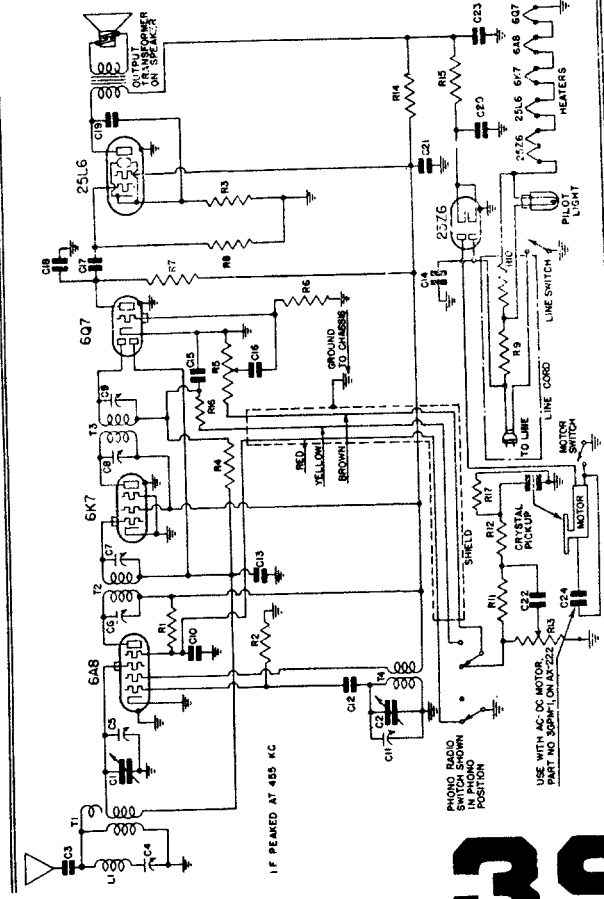


MODELS AX-221 AC, AX-222 AC-DC and AX-222

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

Emerson Radio and Phonograph Corp.

Models AX-211, AX-212, AX-217, AX-235, AX-237, AX-238, AX-239, AX-240 and AX-257

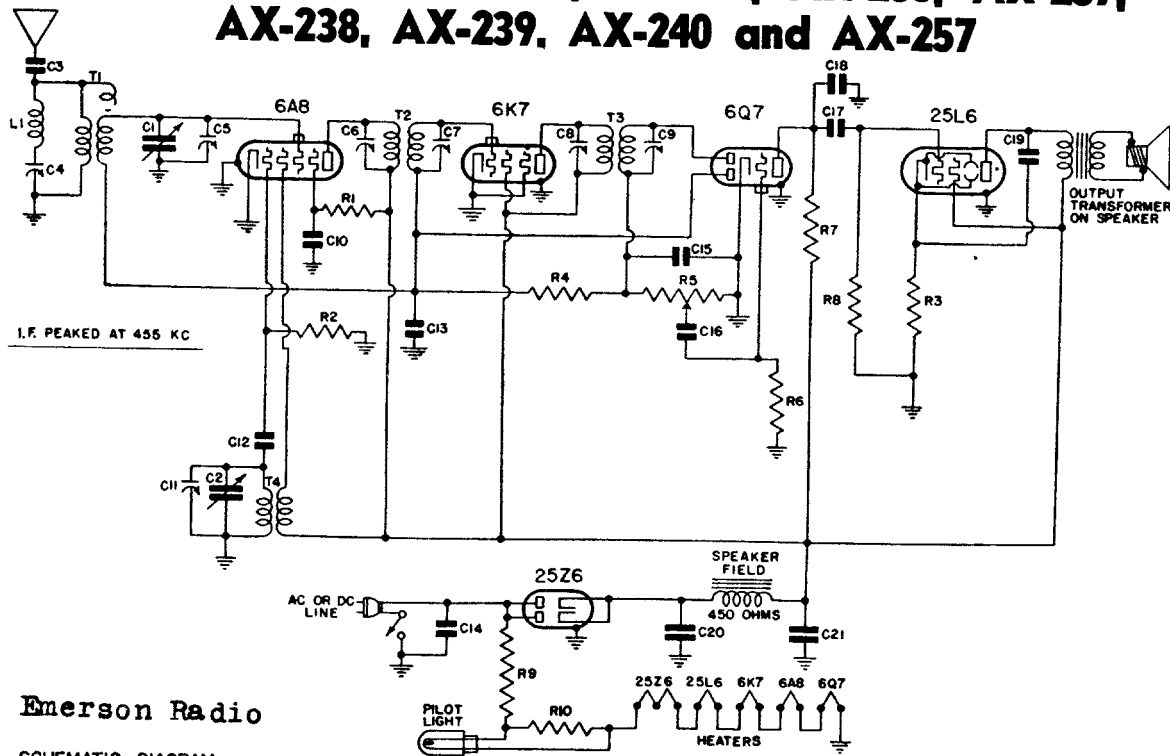

Emerson Radio

SCHEMATIC DIAGRAM

5 TUBE AC-DC RECEIVER



SCHEMATIC DIAGRAM FOR MODELS AX-211, 212, 217, 235, 237, 238, 239 and 257

*Item	Part No.	DESCRIPTION
L1, T1	4XT-432	Antenna coil with adjustable 455 kc wave-trap
T4	4XT-458	Oscillator coil (see production change no. 2)
T2	4XT-434	Double-tuned 455 kc first i-f transformer
T3	4XT-435	Double-tuned 455 kc second i-f transformer
R1	2CR-193	30,000 ohm 1/2 watt carbon resistor
R2	KR-53	50,000 ohm 1/4 watt carbon resistor
R3	3FR-293	140 ohm 1/2 watt wire-wound resistor
R4	KR-57	1 megohm 1/4 watt carbon resistor
R5	4XR-335	Volume control .25 megohm with line switch
R6	4XR-327	15 megohm 1/4 watt carbon resistor
R7	KR-55	250,000 ohm 1/4 watt carbon resistor
R8	KR-56	500,000 ohm 1/4 watt carbon resistor
R9, R10	4XW-112	Resistance line cord with pilot light ballast section. R9—150 ohms; R10—40 ohms
R14	4XR-334	2,500 ohm 1 watt carbon resistor
R15	4ZR-325	175 ohm 1 watt metallized resistor
C1, C2	4XC-391A	Two-gang variable condenser
C3	4XC-401	0.00055 mf mica condenser
†C4		Trimmer, part of wave-trap assembly.
†C5, C11		Trimmers, part of variable condenser.
†C6, C7, C8, C9		Trimmers, part of i-f transformers.
C10	BC-12	0.05 mf, 200 volt tubular condenser
C12	4XC-393A	0.00006 mf mica condenser
C13	AC-6	0.1 mf, 200 volt tubular condenser
C14	LC-64	0.05 mf, 400 volt tubular condenser
C15, C18	4XC-394A	0.00022 mf mica condenser
C16	3HC-274	0.002 mf, 600 volt tubular condenser
C17	LC-65	0.02 mf, 400 volt tubular condenser
C19	3FC-336	0.025 mf, 400 volt tubular condenser
C20, C21	4HC-348B	Dual 20 mf, 150 volt dry electrolytic condenser
C23	4XC-404	20 mf, 125 volt dry electrolytic condenser
	4XS-324	4" dynamic speaker (for 211, 212, 217, 235, 237, 238, 239 and 257)
	4PS-303A	6" permanent magnet dynamic speaker (for 240 cabinet)
	4BL-94	Pilot light, 6.3 volt, .25 amp., Mazda No. 44

40

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

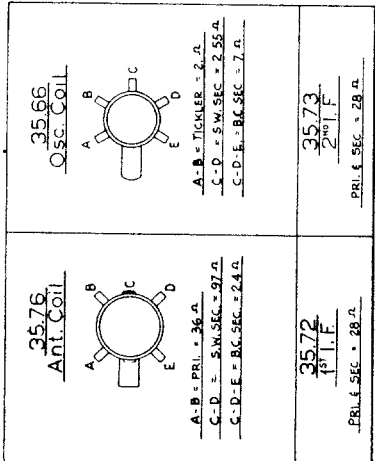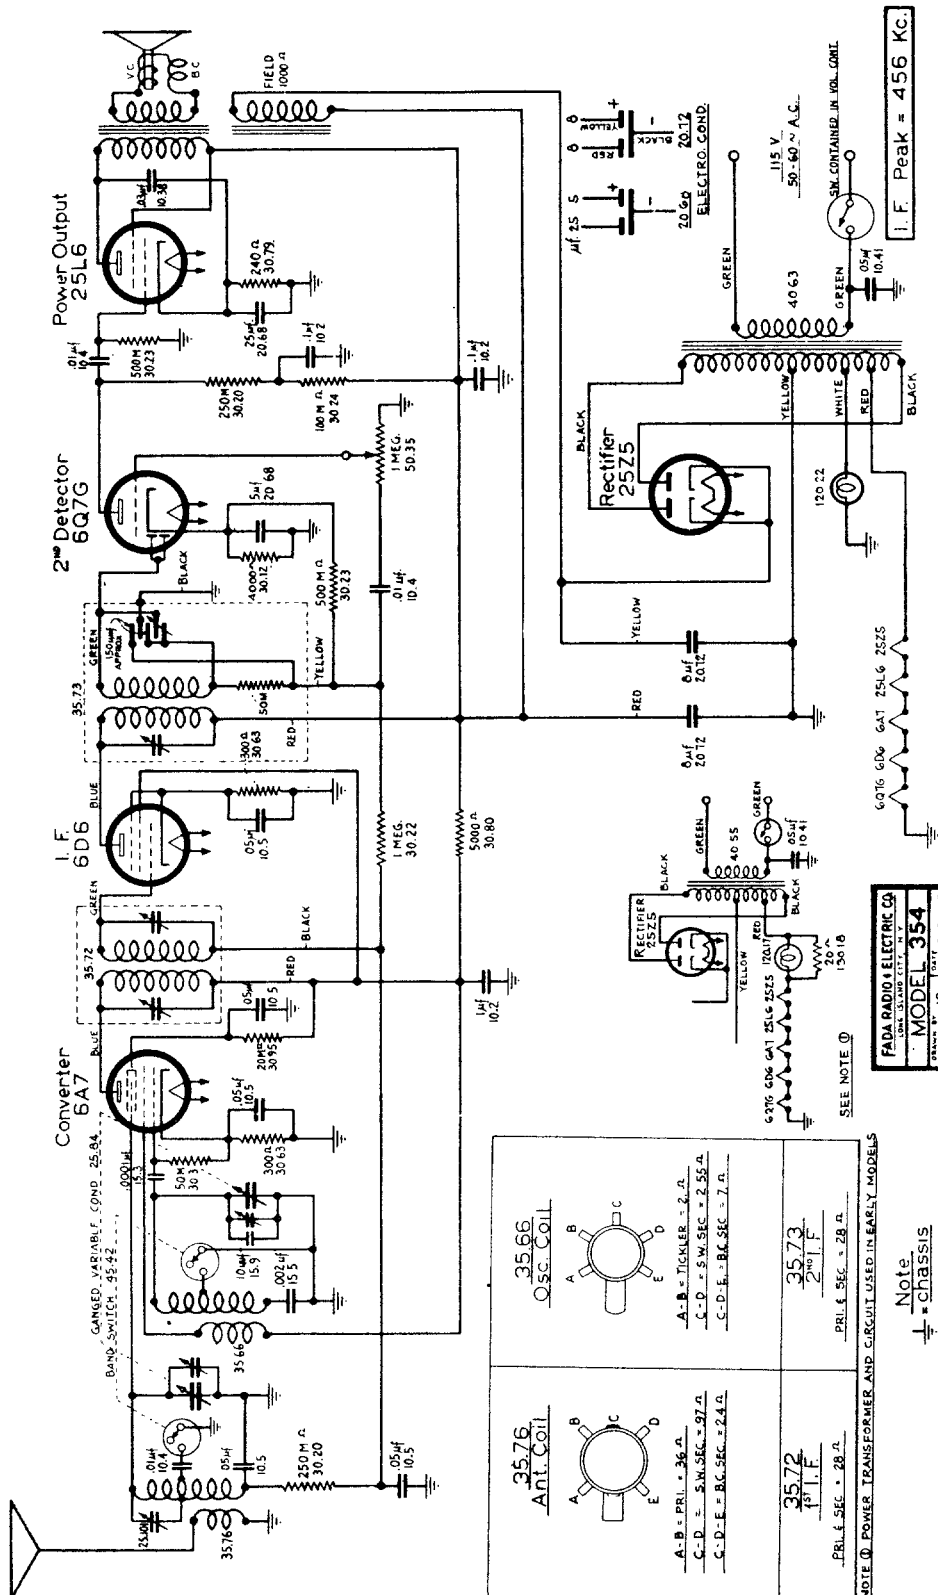

NOTE: POWER TRANSFORMER AND CIRCUIT USED IN EARLY MODELS


FADA RADIO ELECTRIC CO.
 LONG ISLAND CITY, N. Y.
MODEL 354
 MADE BY MODEL 8-31-37
 PATENTED BY F.H.F. 1934

SEE NOTE ①
 Note
 ⊕ = chassis
 Band sw. shown in B.C. pos.
 M = thousand

30-20 Thomson Ave.
 Long Island City
 New York

FADA Radio

1939 MOST POPULAR SERVICE DIAGRAMS

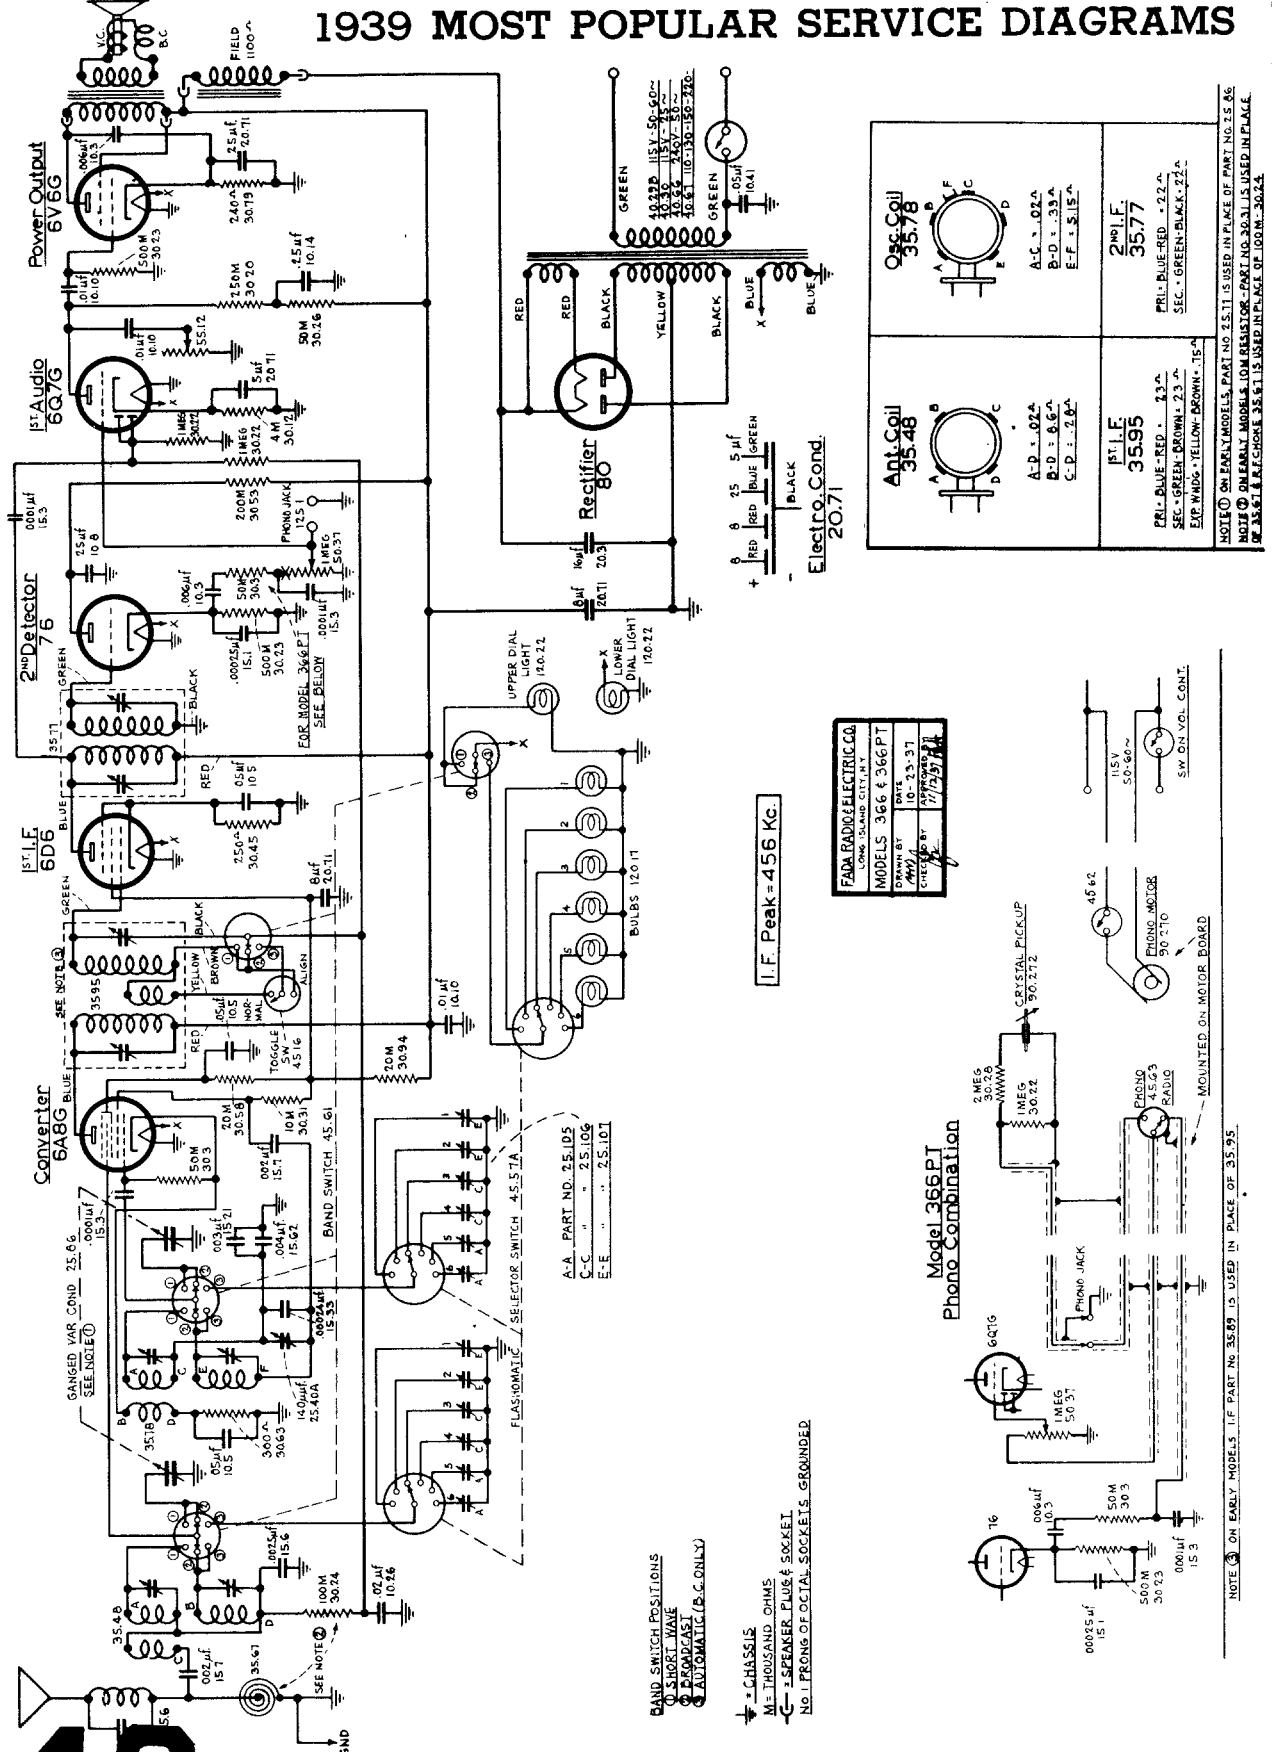


Anti-Coil 35.78	
A-C = .02 μ	A-C = .02 μ
B-D = 0.6 μ	B-D = 0.6 μ
C-D = .20 μ	C-D = .20 μ
1st I.F. 35.77	
PR. BLUE-RED = .22 μ	PR. BLUE-RED = .22 μ
SEC. GREEN-BROWN = 2.3 μ	SEC. GREEN-BROWN = 2.3 μ
EXP. WOODS-YELLOW-BROWN = .15 μ	EXP. WOODS-YELLOW-BROWN = .15 μ

FADA RADIO ELECTRIC CO. LONG ISLAND CITY, N.Y.
MODELS 366 & 366PT
DESIGNED BY 10-23-37
CHECKED BY 11/23/37

I.F. Peak = 456 Kc.

Model 366PT Phono Combination

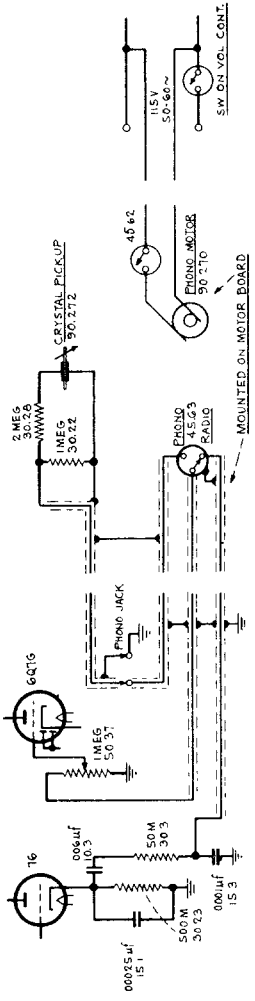


NOTE: ON EARLY MODELS, I.F. PART NO. 35.69 IS USED IN PLACE OF 35.75.

BAND SWITCH POSITIONS
 ○ SHORT WAVE
 ○ BROADCAST
 ○ AUTOMATIC (B.C. ONLY)

⊕ = CHASSIS
 M = THOUSAND OHMS
 ← = SPEAKER PLUS & SOCKET
 NO. 1 FRONT OF OCTAL SOCKETS GROUNDED

NOTE: ON EARLY MODELS, PART NO. 25.11 IS USED IN PLACE OF PART NO. 25.45.
 NOTE: ON EARLY MODELS, PART NO. 30.31 IS USED IN PLACE OF PART NO. 30.22.
 NOTE: ON EARLY MODELS, PART NO. 35.61 IS USED IN PLACE OF PART NO. 35.62.


MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

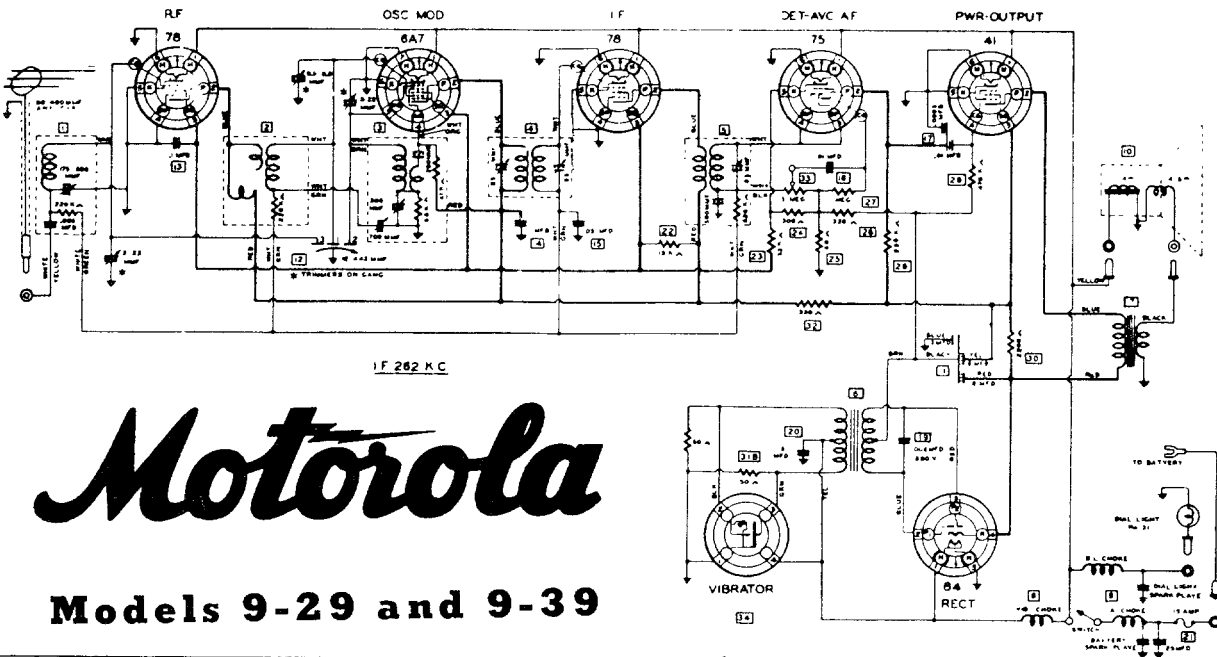

Motorola

Models 9-29 and 9-39

Average Microvolt Input *	Generator Set at	Generator Feeder Connected to	Dummy Antenna Capacity	Leak Resistance	Output Meter Reading **
.25 Volts	400 Cycles	75 Grid	.1 MF	.5 Meg	2.2 Volts
25,000	262 K.C.	78 Grid (I.F.)	.1 MF	.5 Meg	2.2 Volts
700	262 K.C.	6A7 Grid	.1 MF	.5 Meg	2.2 Volts
800	600 K.C.	6A7 Grid	.1 MF	.5 Meg	2.2 Volts
45	600 K.C.	78 Grid (R.F.)	.1 MF	.5 Meg	2.2 Volts
3	600 K.C.	Ant. Lead	40 MMF	None	2.2 Volts

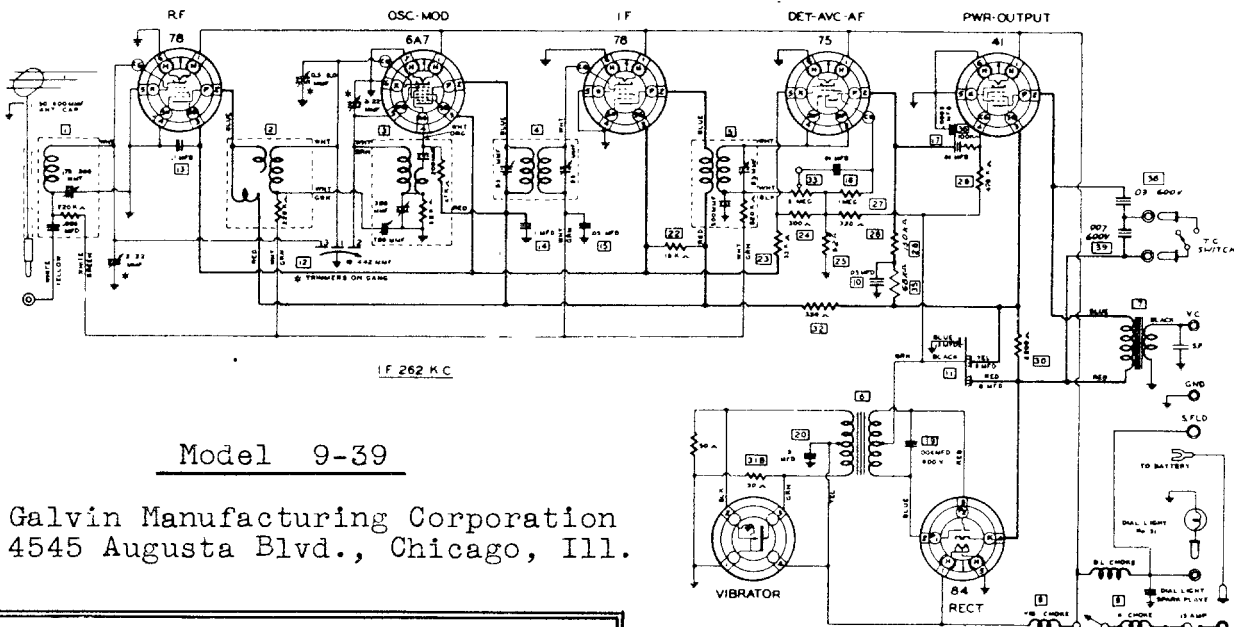

Model 9-39

Galvin Manufacturing Corporation
4545 Augusta Blvd., Chicago, Ill.

* For one watt output.



** Meter connected across voice coil.

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

43

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

GALVIN MANUFACTURING CORPORATION

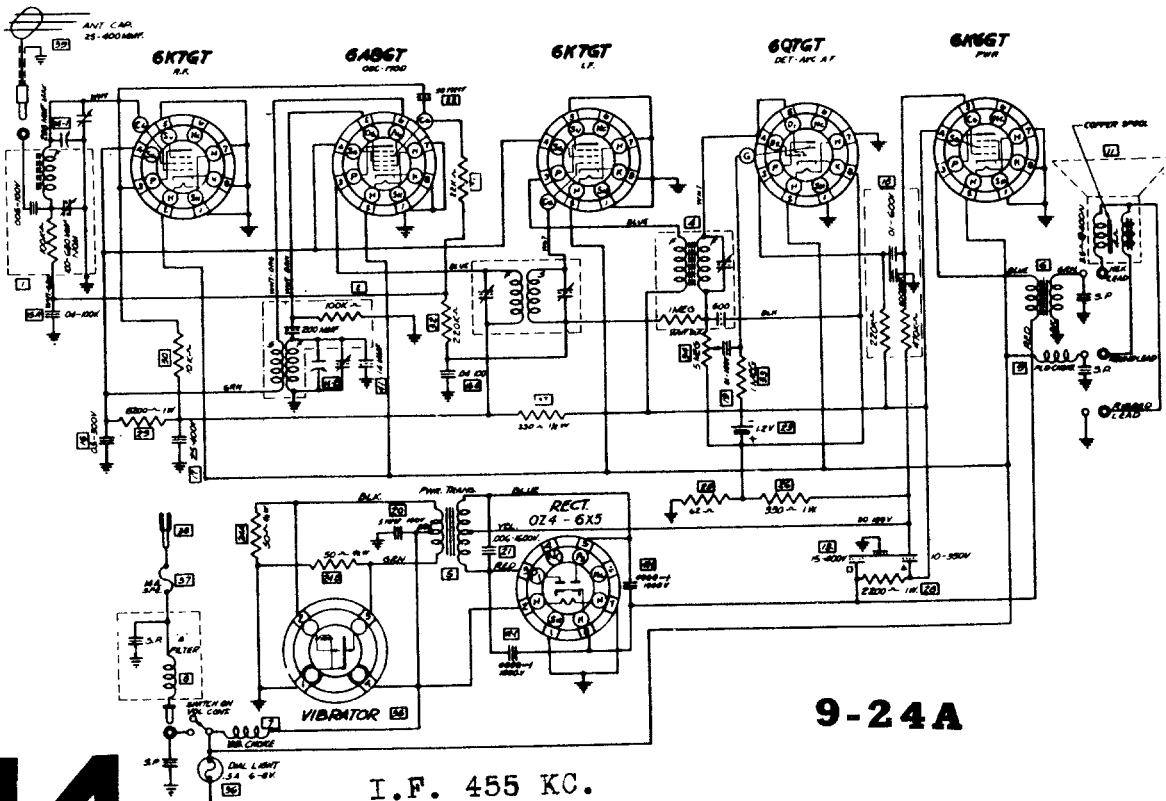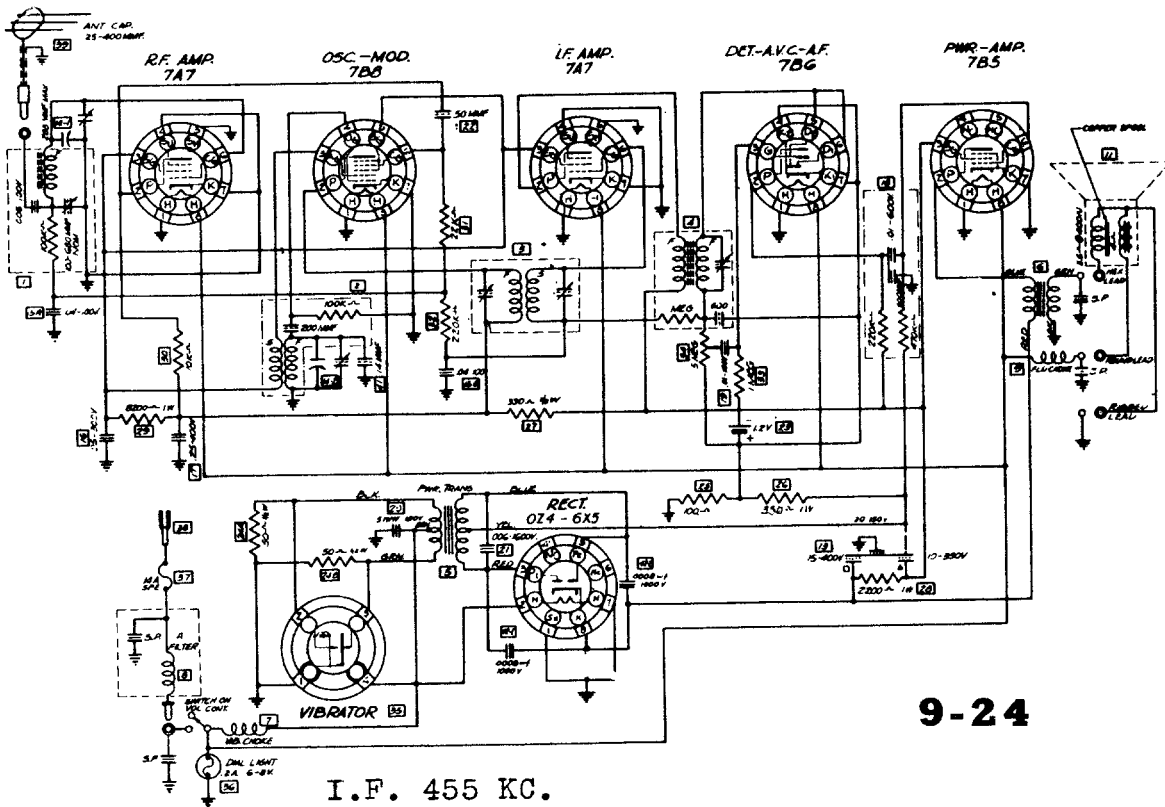

44

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

ALIGNMENT PROCEDURE

Place the radio on the service bench with the front cover removed, but with the speaker and battery connected to it.

Turn the volume control to maximum position and leave it there throughout the alignment, reducing the signal generator output if necessary.

NOTE: Do not adjust the trimmer in the R.F. coil can that is covered with Scotch Tape. The original adjustment, made in the factory, should not be tampered with. (Fig. 1 below, shows all trimmer locations.)

I.F. ALIGNMENT

1. Connect the signal generator to the control grid (Terminal No. 6) of the Osc.-Mod. tube (7B8). Turn the condenser gang completely out of mesh. Connect an output meter across speaker voice coil.

2. Set the signal generator at 262 K.C. and carefully adjust the single trimmer in the Diode coil can to the point showing the highest reading on the output meter.

3. Adjust the two trimmers in the I.F. coil can to the point showing the highest output reading.

4. Repeat the I.F. and Diode adjustment several times for maximum accuracy.

SETTING THE RANGE

1. Connect the signal generator to the con-

trol grid (Terminal No. 6) of the R.F. tube (7A7) using the same .1 MF condenser.

2. Set the signal generator at 1550 K.C. and with the condenser gang completely out of mesh, adjust the 1550 K.C. trimmer in the oscillator coil can to the point showing the highest output reading.

3. Set the signal generator at 535 K.C. Turn the condenser gang completely in mesh and adjust the 600 K.C. trimmer in the Oscillator coil can for the highest output reading.

NOTE: The adjustments above set the range so the receiver will track with the calibrations in the control head.

R.F. AND ANTENNA ALIGNMENT

1. Connect the signal generator to the antenna lead through a 40 MTF condenser and to chassis ground. Set the signal generator at 600 K.C. and turn the condenser gang until the signal is heard. Adjust the 600 K.C. trimmer on the antenna coil can for the maximum output reading.

2. Set the signal generator at 1400 K.C. Turn the condenser gang until the signal is heard. Adjust the 1400 K.C. trimmer in the antenna coil can for maximum output reading.

3. Adjust the 1400 K.C. trimmer in the R.F. coil can for maximum output reading.

4. Recheck steps 1, 2, and 3, for accuracy.

SENSITIVITY AND STAGE GAIN MEASUREMENTS

These stage gain measurements will, if properly used, enable you to localize trouble quickly. They are intended for use with a signal generator that is accurately calibrated in microvolts.

Starting with the I.F., and working back step by step to Osc.-Mod., R.F. and finally to the antenna terminal, the circuit in which the trouble exists will quickly be determined by evidence of low gain, when signal generator attenuation readings are compared to the normal values as shown in the table.

All stage-gain measurements must be made with the volume control set for full volume. The shielded lead from the signal generator is connected to the grid terminal of the tube through a .1 MF condenser, with a 500M ohm resistor connected as a leak resistance between the grid of the tube and the grid lead which has been removed.

When measuring over-all sensitivity at the antenna terminal, use a 40 MTF condenser in place of the .1 MF. It must be remembered that the figures in the table are average and allowance must be made for variations between two sets of the same general type, due to difference of tube characteristics, etc.

Average Microvolt Input *	Generator Set at	Generator Feeder Connected to	Dummy Antenna Capacity	Leak Resistance	Output Meter Reading **
25,000	262 K.C.	Grid(I.F.)	.1 MF	.5 Meg.	1.74 Volts
700	262 K.C.	Grid(Mod.)	.1 MF	.5 Meg	1.74 Volts
800	600 K.C.	Grid(Mod.)	.1 MF	.5 Meg	1.74 Volts
45	600 K.C.	Grid(R.F.)	.1 MF	.5 Meg	1.74 Volts
2	600 K.C.	Ant. Lead	40 MTF	None	1.74 Volts

* For one watt output.

** Meter connected across voice coil.


V.C. Impedance - 3 ohms at 400 cycles.

46

Model 9-49

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

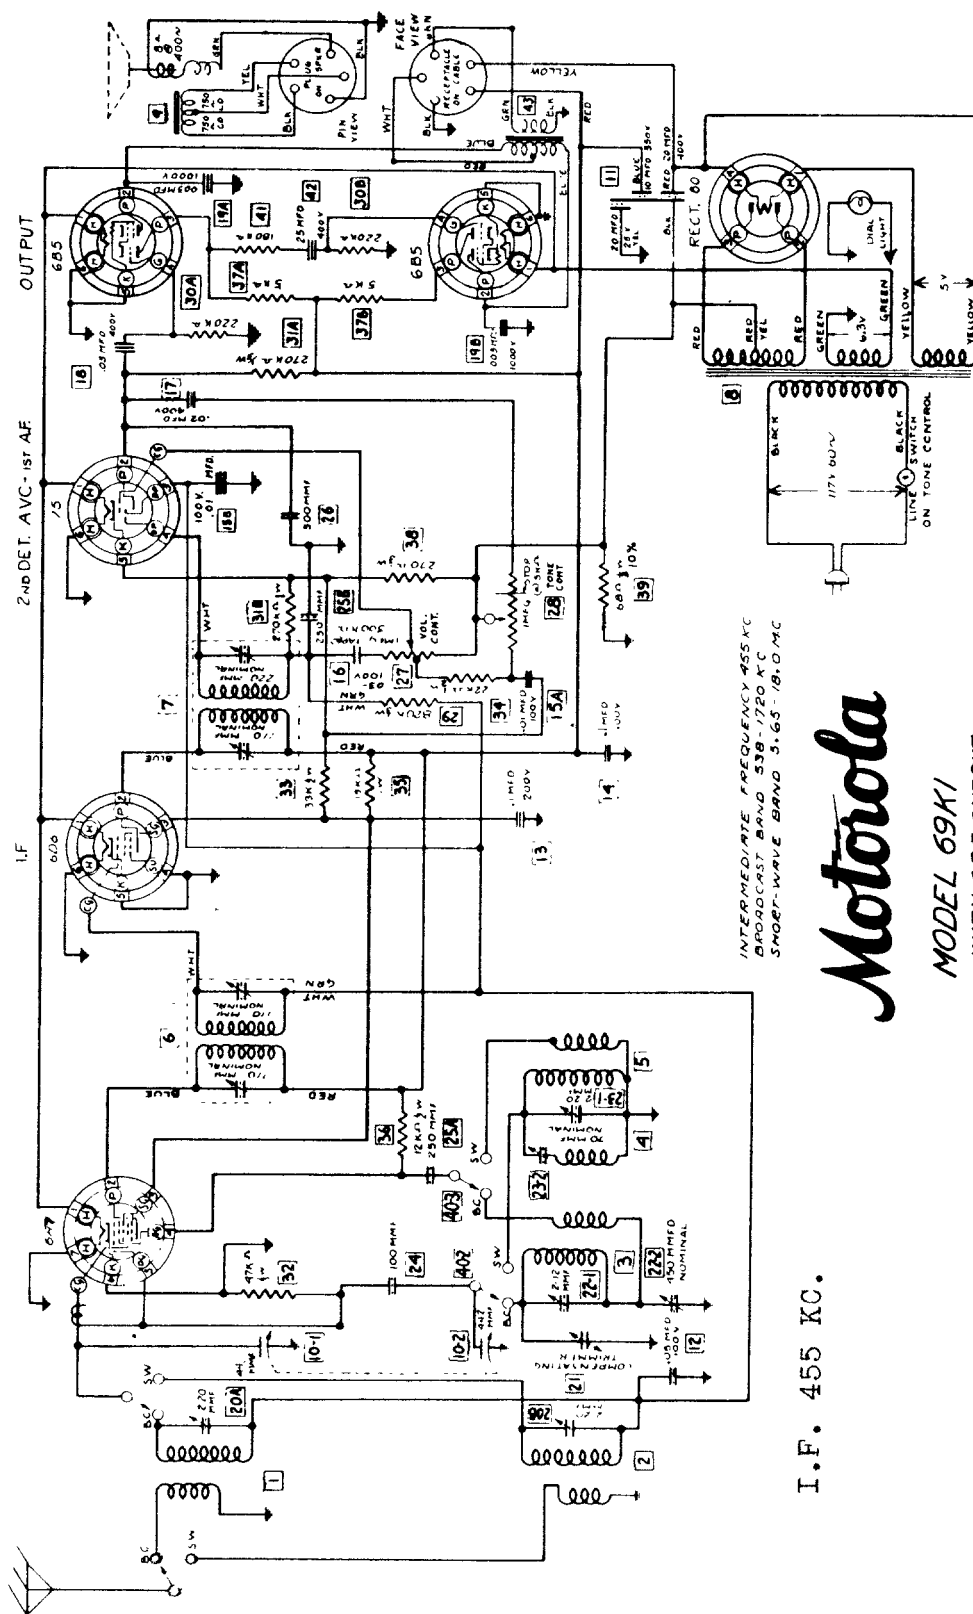


INTERMEDIATE FREQUENCY 455 KC
 BROADCAST BAND 538-1720 KC
 SHORT-WAVE BAND 3.65-18.0 MC


I.F. 455 KC.

Motorola

MODEL 69K1
 WITH 6B5 OUTPUT

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

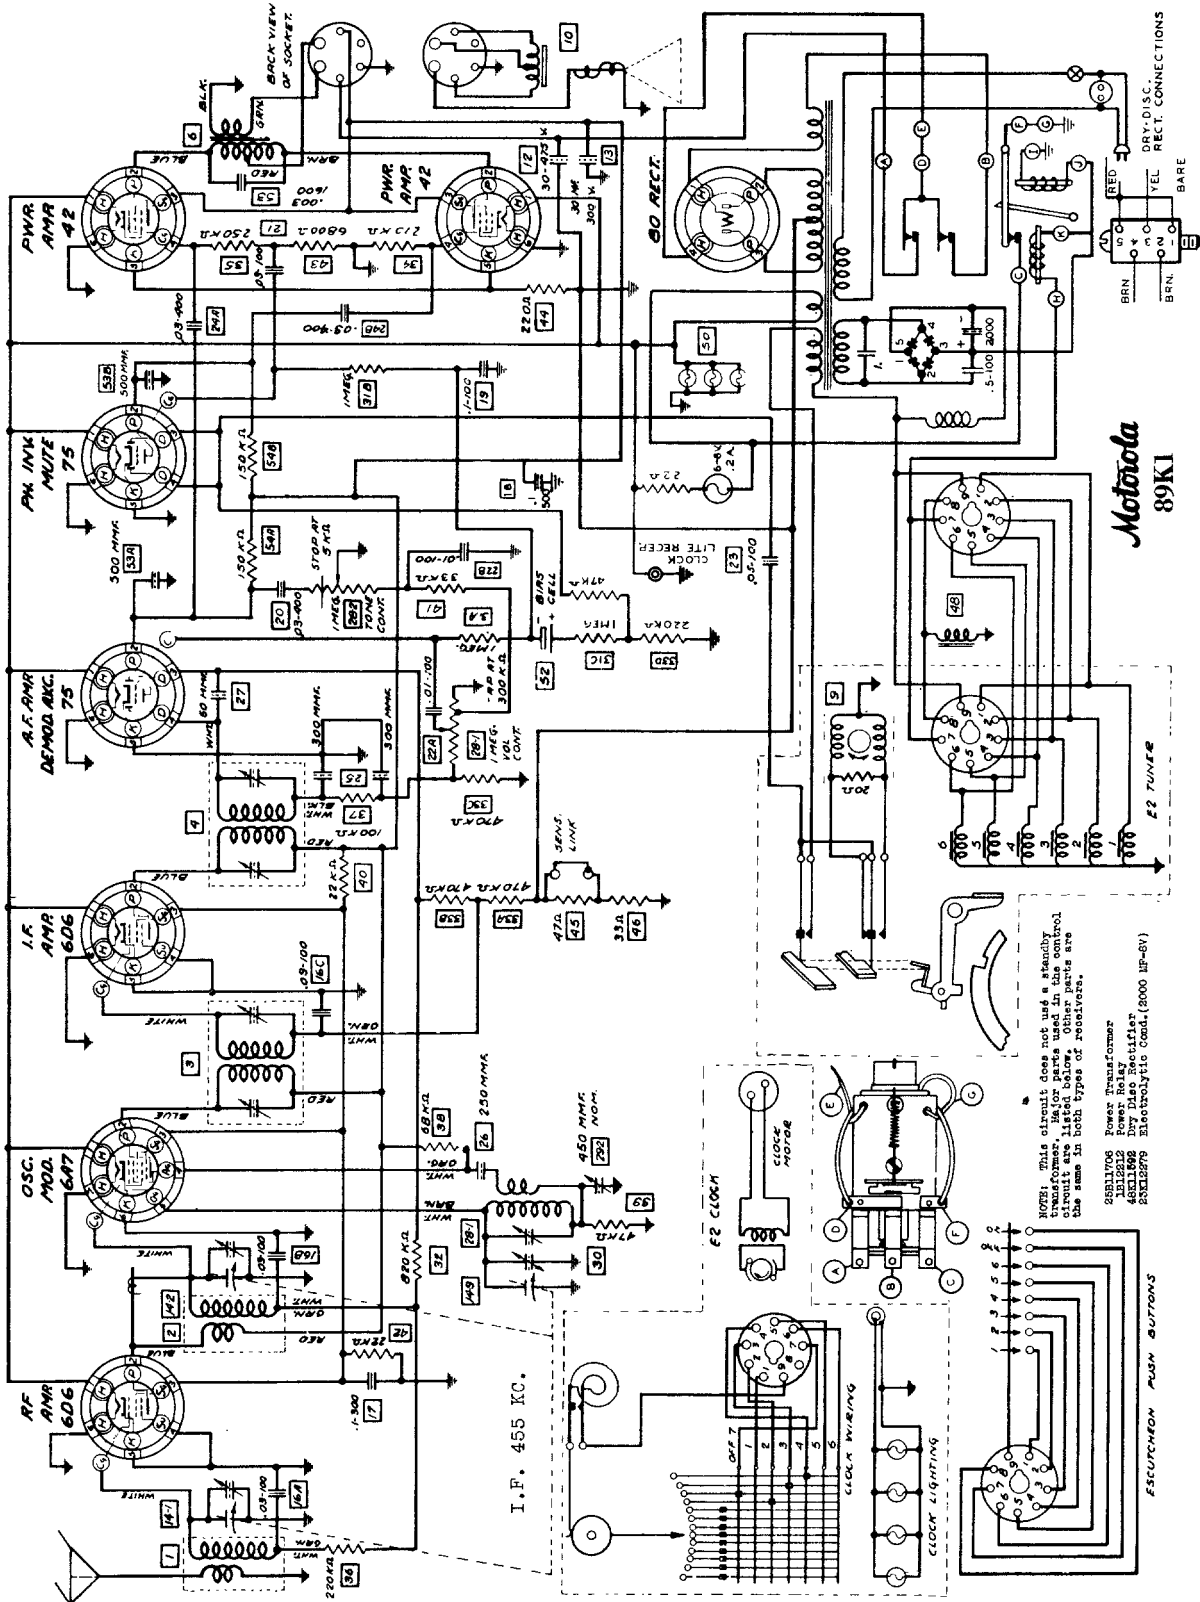

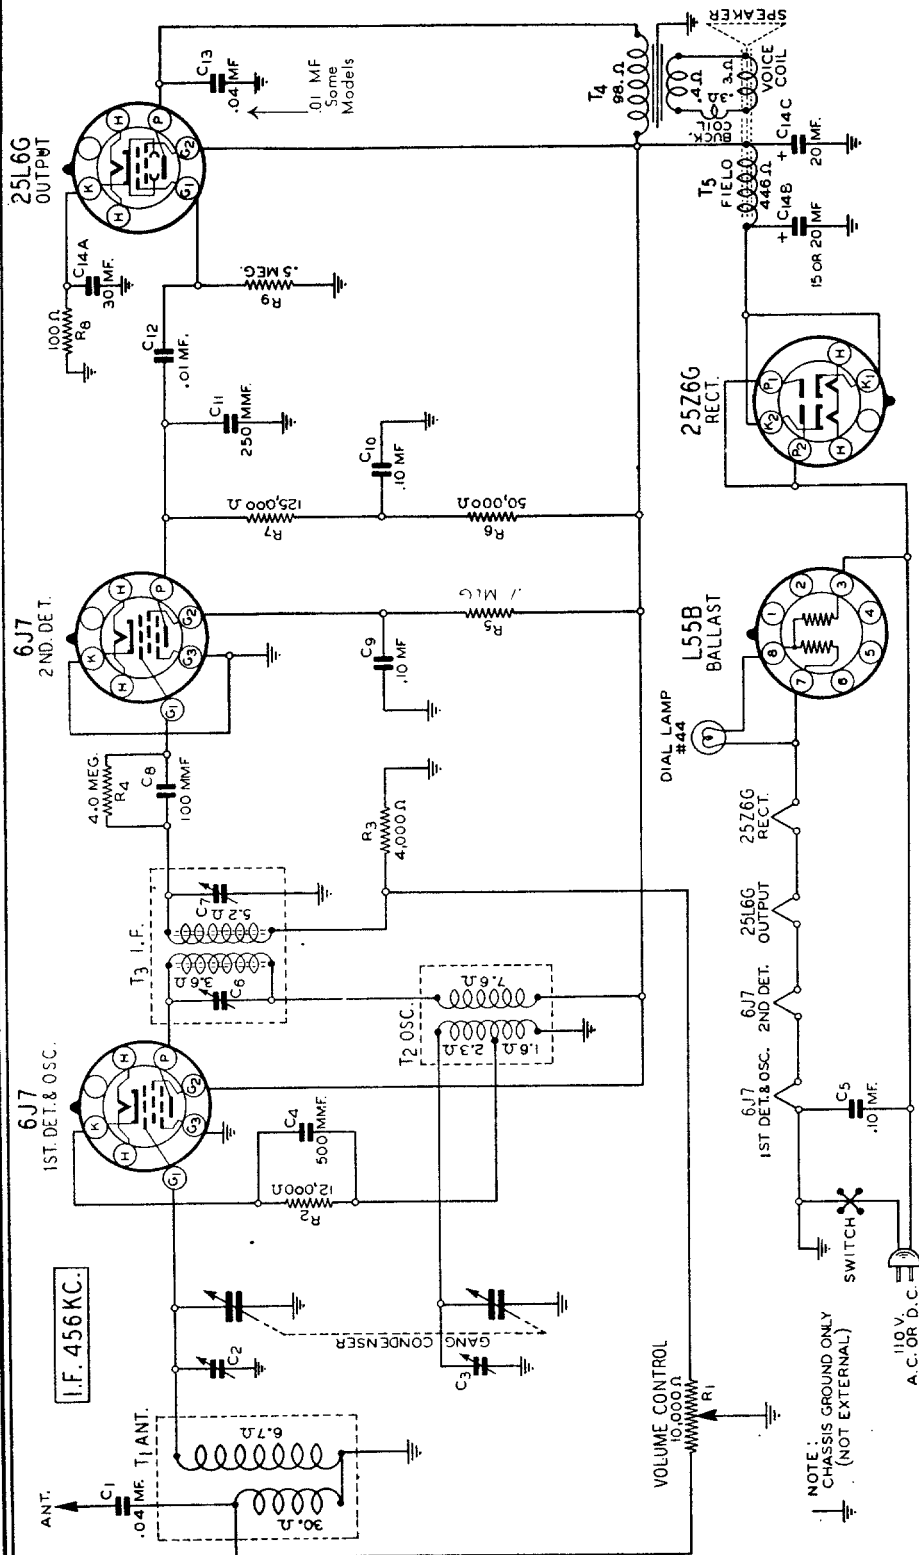


ALIGNMENT PROCEDURE

Volume Control—Maximum All Adjustments. Allow Chassis and Signal Generator to "Heat Up" for Several Minutes.

SIGNAL GENERATOR FREQUENCY SETTING	CONNECTION AT RADIO	DUMMY ANTENNA	CONDENSER SETTING	ADJUST TRIMMERS TO MAXIMUM (See Illustration)
456 KC	Grid of 1st Det.	.1 mf.	Turn rotor to full open	I.F. (C6) & (C7)
1730 KC	Antenna Lead	200 mmf.	Turn rotor to full open	Oscillator (C3)
1500 KC	Antenna Lead	200 mmf.	Turn rotor to max. output	Antenna (C2)


NOTE—To obtain dial scale calibration, tune in an 800 KC signal. The pointer should be at the 800 KC mark on the dial. If it is not, loosen the pointer screw, set the pointer at the 800 KC mark and retighten the pointer screw.

The following equipment is required for aligning:
Signal Generator which will provide an accurately calibrated signal at the test frequencies as listed,
Output Indicating Meter; Non-Metallic Screwdriver,
Dummy Antennas — .1 mf. and 200 mmf.

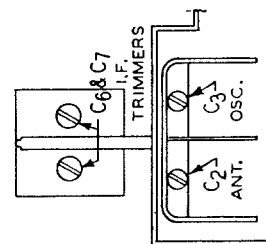


MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

Coronado Model 802-A

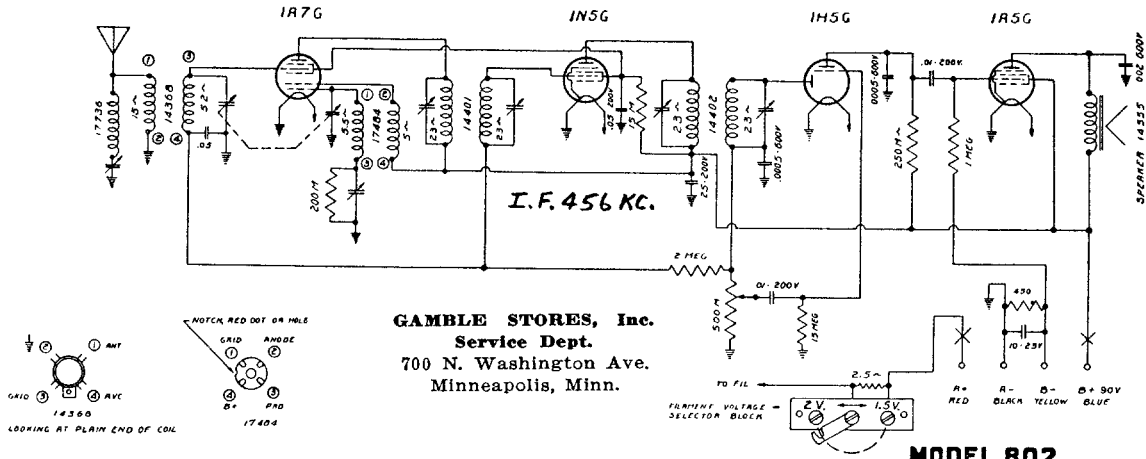


MODEL 476


Gamble-Skogmo, Inc.

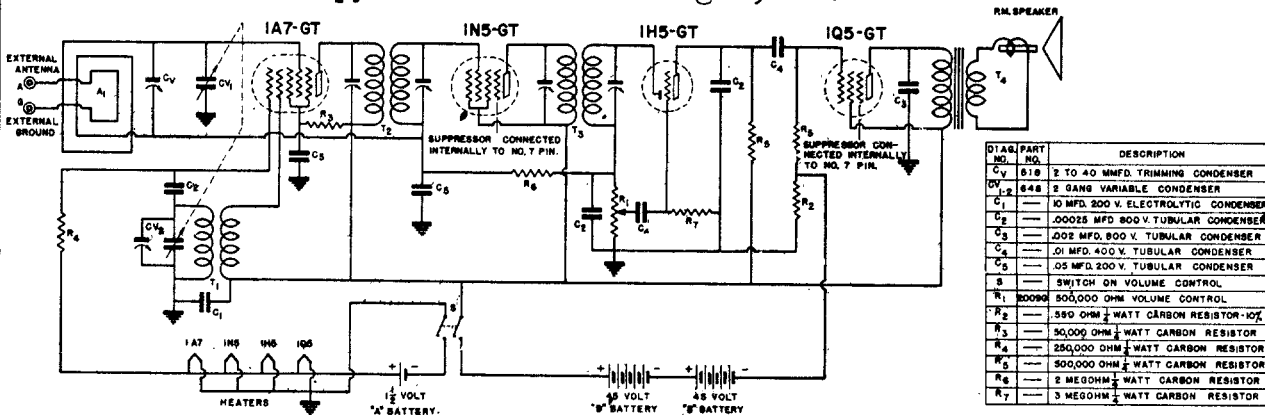

MODEL 807


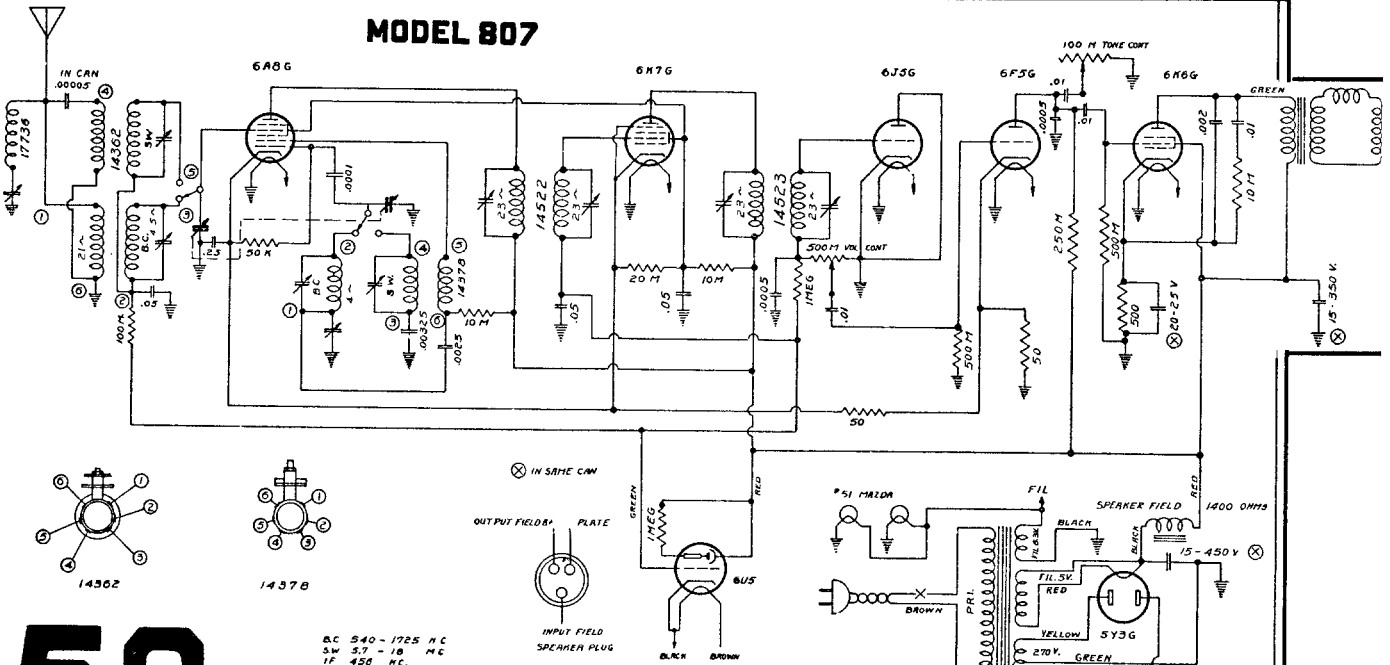


MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

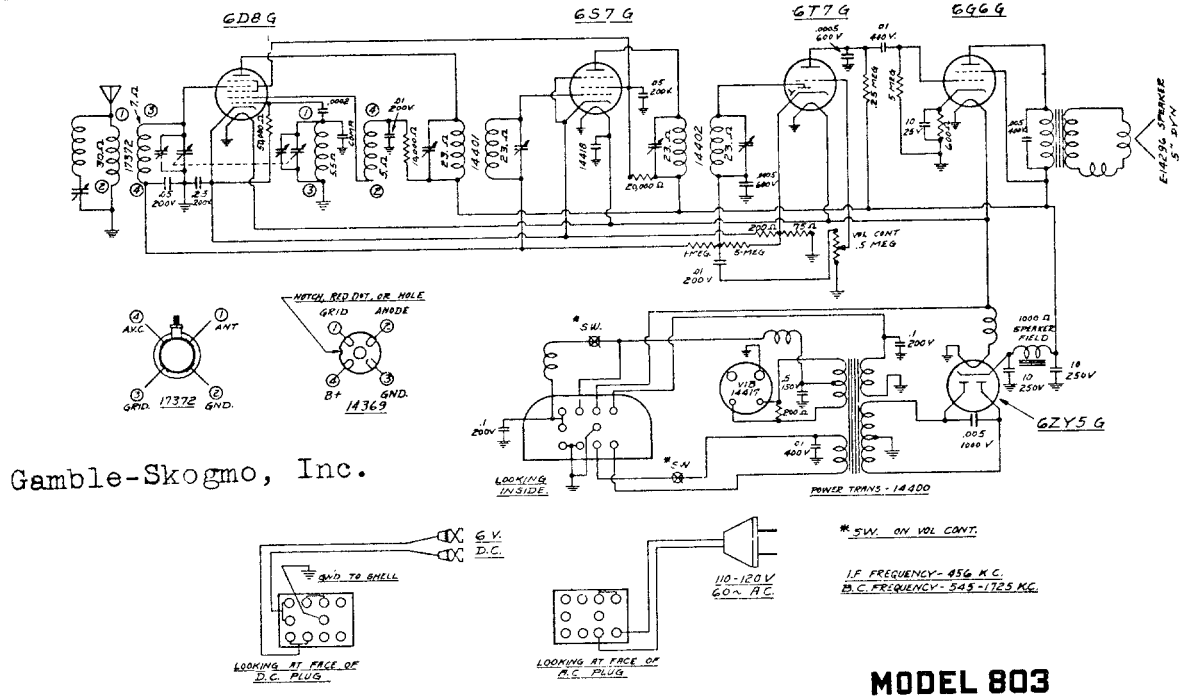


Gamble-Skogmo, Inc.

Gamble-Skogmo, Inc.

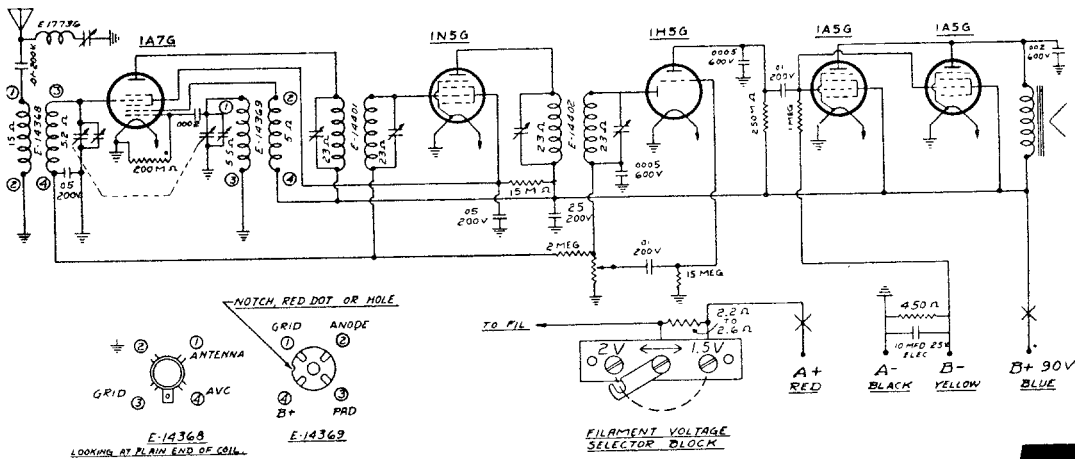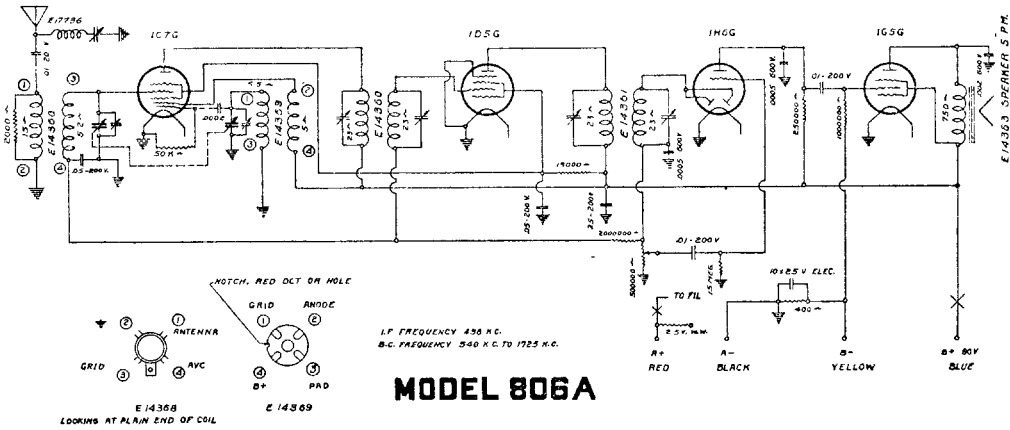

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

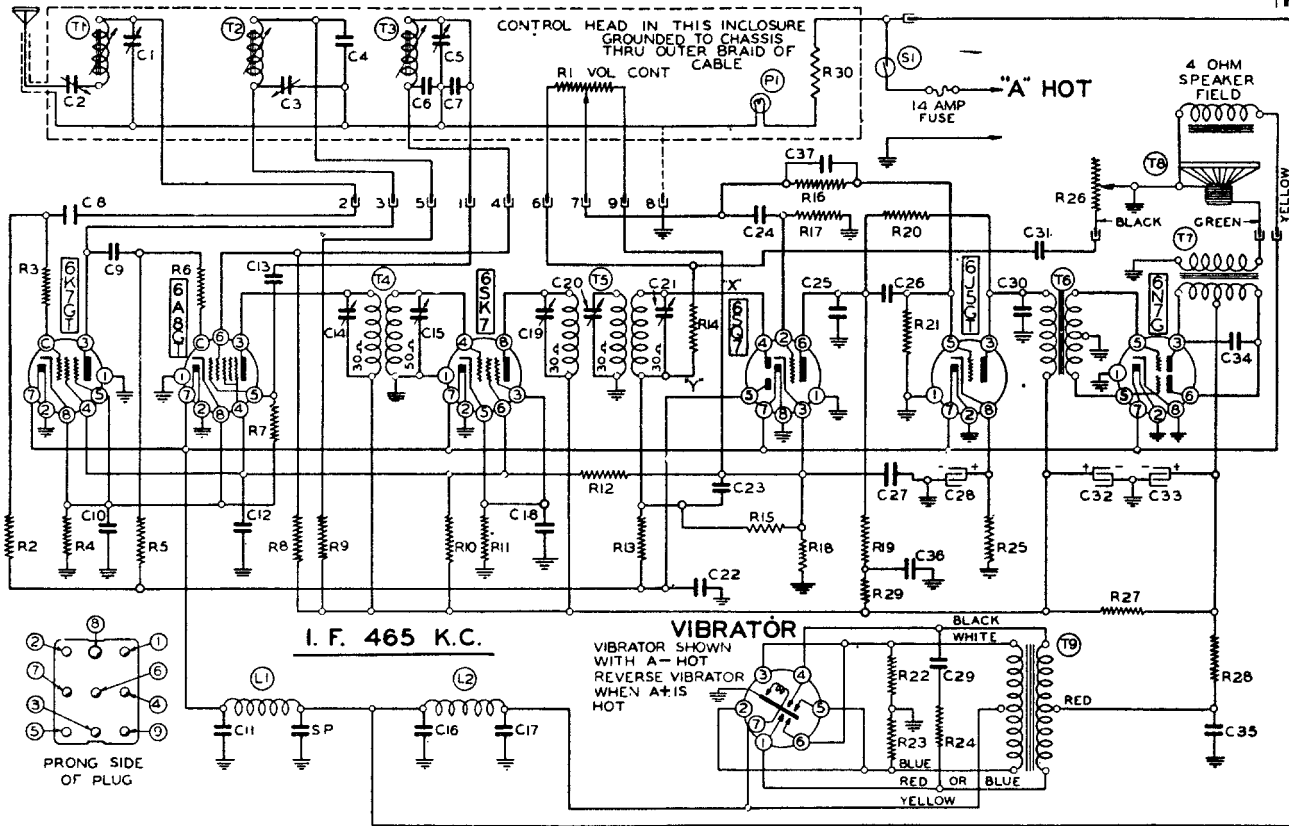

MODEL 678

R1 101161	1.2 megohm volume	C11 1296	.002 Mica
R2 13019	1 megohm— $\frac{1}{2}$ w.	C12 11625	.25 x 400 v.
R3 130275	500 ohm— $\frac{1}{2}$ w.	C13 12912	.00025 Mica
R4 13079	400 ohm— $\frac{1}{2}$ w.	C14	Plate Trimmer on Input I.F.
R5 13019	1 megohm— $\frac{1}{2}$ w.	C15	Grid Trimmer on Input I.F.
R6 130275	500 ohm— $\frac{1}{2}$ w.	C16 10031	.5 x 120 v.
R7 13012	50M ohm— $\frac{1}{2}$ w.	C17 10031	.5 x 120 v.
R8 13012	50M ohm— $\frac{1}{2}$ w.	C18 1009	.05 x 200 v.
R9 13021	20M ohm— $\frac{1}{2}$ w.	C19	Plate Trimmer on Output I.F.
R10 130196	30M ohm—1 watt	C20	Tertiary Trimmer on Output I.F.
R11 130235	1500 ohm— $\frac{1}{2}$ w.	C21	Grid Trimmer on Output I.F.
R12 1307	40M ohm— $\frac{1}{2}$ w.	C22 11625	.05 x 200 v.
R13 13019	1 megohm— $\frac{1}{2}$ w.	C23 1295	.0001 Mica
R14 13020	100M ohm— $\frac{1}{2}$ w.	C24 10011	.01 x 400 v.
R15 130118	600M ohm— $\frac{1}{2}$ w.	C25 1295	.0001 Mica
R16 130257	5 megohm— $\frac{1}{2}$ w.	C26 10011	.01 x 400 v.
R17 13019	1 megohm— $\frac{1}{2}$ w.	C27 10026	.02 x 400 v.
R18 130101	600 ohm— $\frac{1}{2}$ w.	C28 11988	20 mfd.—25 w. v. lytic
R19 13011	250M ohm— $\frac{1}{2}$ w.	C29 100101	.0055 x 1600
R20 13038	2 megohm— $\frac{1}{2}$ w.	C30 129114	.0003 Mica
R21 1303	500M ohm— $\frac{1}{2}$ w.	C31 10047	.002 x 600 v.
R22 130269	100 ohm— $\frac{1}{2}$ w.	C32 11988	15 mfd.—450 w. v. lytic
R23 130269	100 ohm— $\frac{1}{2}$ w.	C33 11988	15 mfd.—450 w. v. lytic
R24 13071	4M ohm— $\frac{1}{2}$ w.	C34 100103	.004 x 800 v.
R25 13092	1M ohm— $\frac{1}{2}$ w.	C35 1001	.1 x 400 volt
R26 101162	1 megohm tone control	C36 10013	.05 x 400 v.
R27 130199	1500 ohm Resistor—1 w	C37 12967	.00004 Mica
R28 130231	75 ohm— $\frac{1}{2}$ w.		
R29 13020	100M ohm— $\frac{1}{2}$ w.		
R30 130299	10 ohm— $\frac{1}{2}$ w.		



CONDENSERS

C1 12483	Antenna Shunt Trimmer
C2 12481	Antenna Series Trimmer
C3 12480	R. F. Shunt Trimmer
C4 100102	.15 x 400 v.
C5 12480	Oscillator Shunt Trimmer
C6 129137	.0005 Mica
C7 129136	.00017 Mica
C8 12997	.00005 Ceramicon—5%
C9 1292	.0005 Mica
C10 11625	.05 x 200 v.

PARTS

T1 11118	P. B. Antenna Coil Assembly
T2 10949	P. B. R. F. Coil Assembly
T3 110109	P. B. Oscillator Coil
T4 108120B	Input I.F. Coil—465 kc.
T5 108115B	Output I.F. Coil—465 kc.
T6 10584	Audio Driver Transformer
T7 10583	Output Transformer
T8 114155	8" Dynamic Speaker
T9 104158	Power Transformer
L1 10566	"A" Choke
L2 10519	"A" Choke
P1 10797	6-8 v. Pilot Light T51
S1	Off-on Switch on volume control

BOTTOM VIEW OF CHASSIS

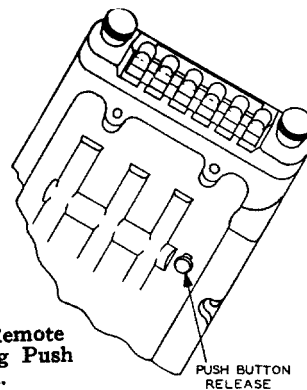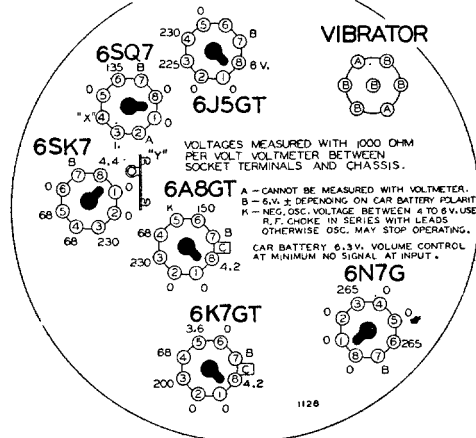

Bottom View of Remote Tuner Unit Showing Push Button Release Pin.

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

ALIGNMENT

General Electric

MODELS GD-41 AND GD-41-U

Electrical Power Output

Undistorted.....1.0 watt
Maximum.....2.0 watts


Loud-speaker—Electrodynamic

Outside Cone Diameter.....5 inches
Voice Coil Impedance.....3.5 ohms at 400 cycles
Field Coil Resistance.....420 ohms (cold)

Connect the high side of the signal generator through a 250 mmf. condenser to the antenna lead. The low side of the signal generator output should be connected to the receiver chassis through a .05 mfd. condenser. Connect a suitable output meter across the voice coil leads; then proceed as follows:

1. With gang condenser plates completely closed, the dial pointer should coincide with the horizontal dial line.
2. Tune receiver to the 1500 kc. point on the dial; then align trimmers (C-3 and C-5) on the gang condenser at 1500 kc. for a maximum output meter reading.

Precaution—One side of the power supply is connected to the chassis—Do not connect chassis to any external ground.

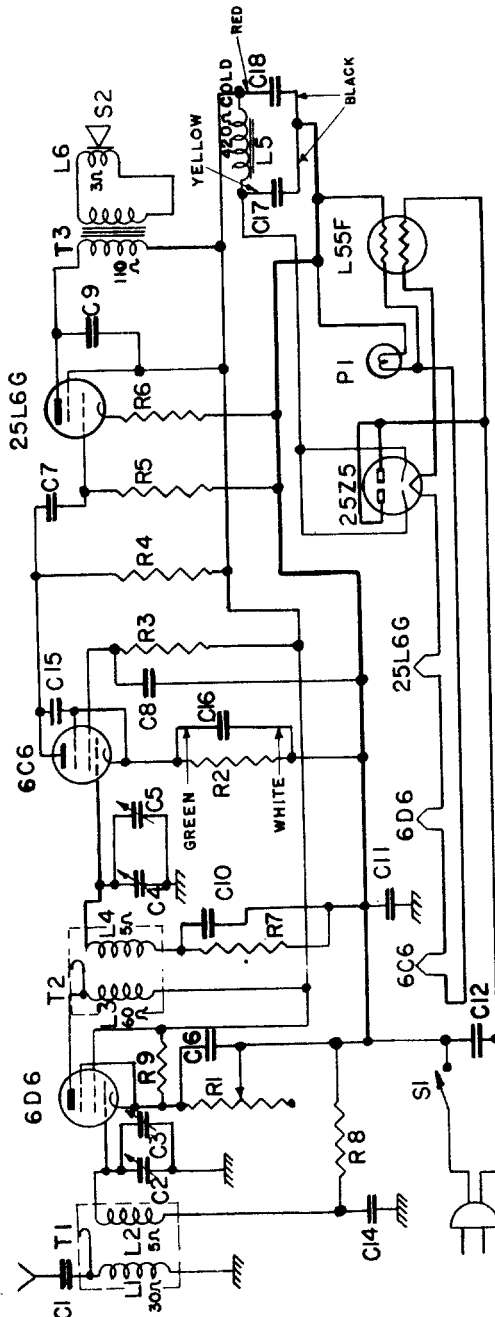

Symbol	Description	Symbol	Description	Symbol	Description
C-1	Capacitor—.01 Mfd. (GD-41)	C-11	Capacitor—Paper .1 Mfd.	R-5	Resistor—1 Megohm
C-2	Capacitor—Paper .001 Mfd. (GD-41-U)	C-12	Capacitor—Paper .05 Mfd.	R-6	Resistor—150 Ohms
C-3	Capacitor—Variable	C-13	Capacitor—Paper .01 Mfd.	R-7	Resistor—1/2 Megohm
C-4	Capacitor—Trimmer on gang	C-14	Capacitor—Mica 100 Mmf.	R-8	Resistor—1/4 Megohm
C-5	Capacitor—Variable on gang	C-15	Capacitor—Elect. 5 Mfd. 25 V.	T-1	Antenna Transformer
C-6	Capacitor—Trimmer on gang	C-16	Capacitor—Elect. 5 Mfd. 25 V.	T-2	R. F. Transformer
C-7	Capacitor—Paper .05 Mfd.	C-17	Capacitor—Elect. 16 Mfd. 150 V.	T-3	Output Transformer (on speaker)
C-8	Capacitor—Paper .01 Mfd.	C-18	Resistor—25,000 Ohms Volume Control	R-9	Resistor—50,000 Ohms
C-9	Capacitor—Paper .02 Mfd.	R-1	Resistor—35,000 Ohms	S-1	Power Switch (Comb. with R-1)
C-10	Capacitor—Paper .01 Mfd.	R-2	Resistor—3 Megohms	S-2	Loud-speaker—3-inch
		R-3	Resistor—1 Megohm		

Note—The schematic shown is for the Model GD-41-U. Model GD-41-A omits items C-10, C-11, C-14, R-7, R-8, R-9; also X-X bus is grounded to chassis, coils L-2 and L-4 return to chassis, C-15 to chassis ground instead of to 6C6 cathode, low end of volume control is connected between C-1 and L-1.

Tube No.	Plate to -B Volts D.C.		Screen to -B Volts D.C.		Cathode to -B Volts D.C.		Cathode Current M.A. D-C		Heater Volts	
	AC	DC	AC	DC	AC	DC	AC	DC	AC	DC
6D6	113	90	113	90	9.0	7.4	0.7	0.6	6.35	6.06
6C6	20 *	16.4 *	45	37	3.1	2.5	0.1	0.08	6.35	6.06
25L6G	108	88	113	90	7.6	6.2	40.5	33.1	25.0	23.5
25Z5	133	108	43.0	35.0	26.0	24.0


Line voltage 115 AC or DC—No signal input—1000 ohms per volt meter.
Dial pointer at 540 kc. Volume control at minimum.
* Measured on 250 volt scale.

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

53

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

General Electric Model GD-60

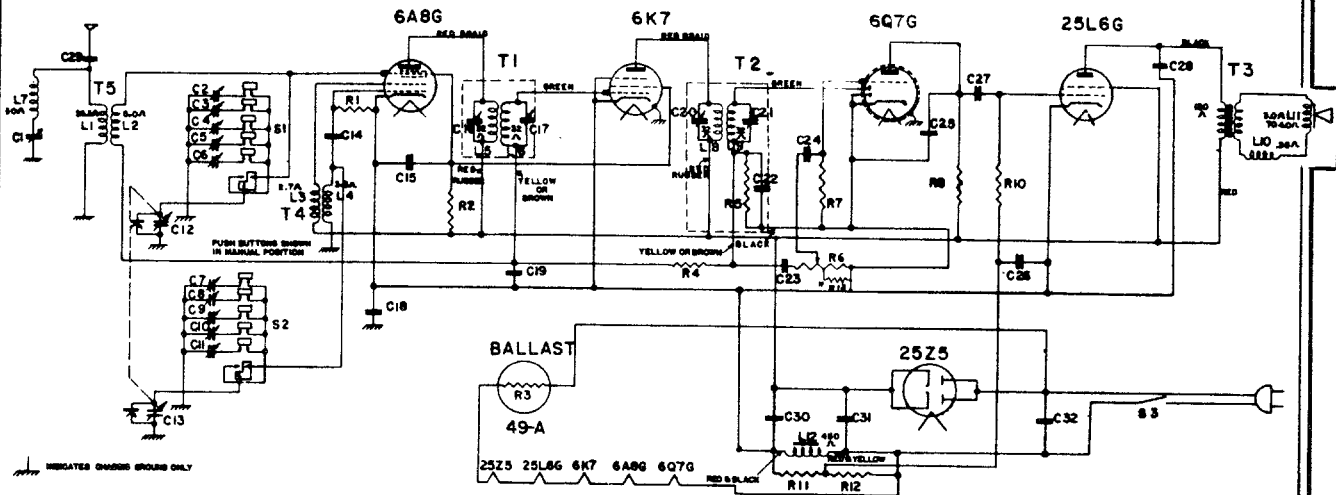

Symbol	Description	Symbol	Description	Symbol	Description
C-1	Wave Trap Trimmer, 45-145 Mmf.	C-20	Trimmer Capacitor, 50-135 Mmf.	R-7	Carbon Resistor, 15 Megohms
C-2	Selector Trimmer, 100-510 Mmf.	C-21	Trimmer Capacitor, 50-135 Mmf.	R-8	Carbon Resistor, 220,000 Ohms
C-3	Selector Trimmer, 75-410 Mmf.	C-22	Mica Capacitor, 470 Mmf.	R-10	Carbon Resistor, 470,000 Ohms
C-4	Selector Trimmer, 50-300 Mmf.	C-23	Paper Capacitor, .002 Mfd.	R-11	Carbon Resistor, 270,000 Ohms
C-5	Selector Trimmer, 50-300 Mmf.	C-24	Paper Capacitor, .002 Mfd.	R-12	Carbon Resistor, 68,000 Ohms
C-6	Selector Trimmer, 20-200 Mmf.	C-25	Mica Capacitor, 330 Mmf.	R-13	Carbon Resistor, 68,000 Ohms
C-7	Selector Trimmer, 50-300 Mmf.	C-26	Paper Capacitor, .15 Mfd.	S-1	Antenna Switch
C-8	Selector Trimmer, 50-300 Mmf.	C-27	Paper Capacitor, .005 Mfd.	S-2	Oscillator Switch
C-9	Selector Trimmer, 20-200 Mmf.	C-28	Paper Capacitor, .03 Mfd.	S-3	Power Switch combined with R-6
C-10	Selector Trimmer, 20-200 Mmf.	C-29	Paper Capacitor, .001 Mfd.	T-1	1st I. F. Transformer
C-11	Selector Trimmer, 10-100 Mmf.	C-30	Dry Electrolytic Cap., 12 Mfd.	T-2	2nd I. F. Transformer
C-12	Tuning Condenser Ant.	C-31	Dry Electrolytic Cap., 20 Mfd.	T-3	Output Transformer
C-13	Tuning Condenser Osc.	C-32	Paper Capacitor, .02 Mfd.	T-4	Oscillator Transformer
C-14	Mica Capacitor, 47 Mmf.	R-1	Carbon Resistor, 47,000 Ohms	T-5	Antenna Transformer
C-15	Paper Capacitor, .25 Mfd.	R-2	Carbon Resistor, 10,000 Ohms	L-10	Hum Buck Coil
C-16	Trimmer Capacitor, 50-135 Mmf.	R-3	Ballast Tube 49-A, 170 Ohms	L-11	Voice Coil
C-17	Trimmer Capacitor, 50-135 Mmf.	R-4	Carbon Resistor, 2.2 Megohms	L-12	Field Coil—450 Ohms (cold)
C-18	Paper Capacitor, .25 Mfd.	R-5	Carbon Resistor, 470,000 Ohms		
C-19	Paper Capacitor, 0.5 Mfd.	R-6	Volume Control, 2 Megohms		

NOTE—In some receivers a 150,000 to 390,000 ohm resistor is connected across C-18.

GENERAL INFORMATION

Model GD-60 is a compact, six-tube AC-DC superheterodyne receiver, employing six General Electric Pre-tested Tubes as described above, in a superheterodyne circuit. It incorporates a simplified trimmer tuned "Touch-Tuning" system, allowing a set up of five stations for automatic tuning. Other features of design include I.F. wave trap, automatic volume control and an improved dustproof speaker.

I.F. Alignment

Connect an output meter across the voice coil. Set the volume control for maximum.

Set test oscillator to 455 and apply signal to the control grid of the 6A8G tube through a .05 mfd. capacitor. Do not remove the grid lead from the 6A8G and keep the test oscillator output as low as possible to give a readable output. Adjust all four I.F. trimmers for maximum output.


Wave Trap Alignment

Leave the test oscillator set to 455 K.C. and connect one output lead to the receiver chassis and the other through a 250 mmf. capacitor in series with 200 ohms to the receiver antenna lead. Adjust (C-1) for minimum output.

R.F. Alignment

Use the same dummy antenna (250 mmf. and 200 ohms) with 1500 K.C. input, adjust the oscillator trimmer (C-13) and antenna trimmer (C-12) for a maximum output.

Precaution—One side of the power supply is connected to the chassis through a .25 mfd. capacitor. If signal generator is AC operated, connect a .05 mfd. capacitor in the ground side before connecting it to the receiver chassis.

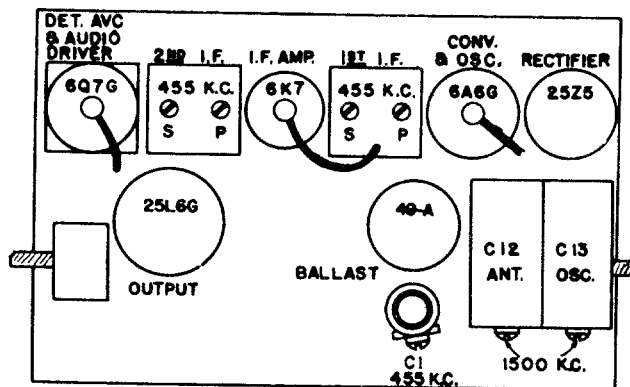

Tuning Frequency Range..... 540-1750 K.C.

Intermediate Frequency..... 455 K.C.

Electrical Power Output (120—line volts)

	AC	DC
Undistorted.....	1.2	1.0
Maximum.....	2.0	1.7


Loudspeaker—Electrodynamic

Outside Cone Diameter..... 5-inch
Voice Coil Impedance..... 3.5 ohms at 400 cycles
Field Coil Resistance..... 450 ohms (cold)

54

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

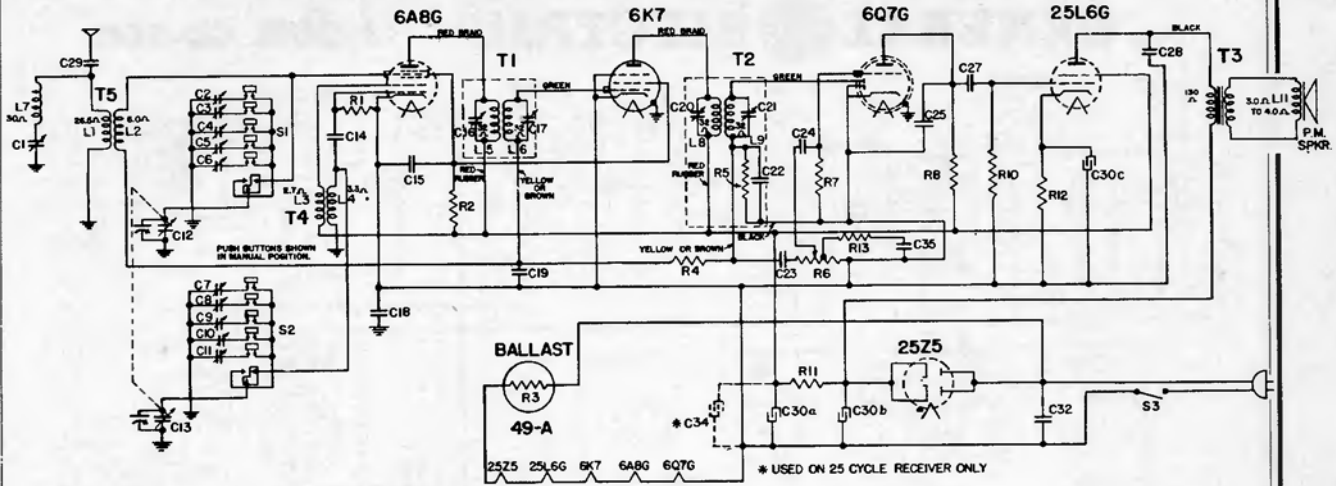

Set test oscillator to 455 and apply signal to the control grid of the 6A8G tube through a .05 mfd. capacitor. Do not remove the grid lead from the 6A8G. Keep the test oscillator output as low as possible to give a readable output. Adjust all four I.F. trimmers for maximum output.

Wave Trap Alignment



Leave the test oscillator set to 455 K.C. and connect one output lead to the receiver chassis and the other through a 250 mmf. capacitor in series with 200 ohms to the receiver antenna lead. Adjust (C-1) for minimum output.

R.F. Alignment

Use the same dummy antenna (250 mmf. and 200 ohms) with 1500 K.C. input, adjust the oscillator trimmer (C-13) and antenna trimmer (C-12) for a maximum output.

Precaution—One side of the power supply is connected to the chassis through a .25 mfd. capacitor. If signal generator is AC operated, connect a .05 mfd. capacitor in the ground side before connecting it to the receiver chassis.

General Electric MODEL GD-63

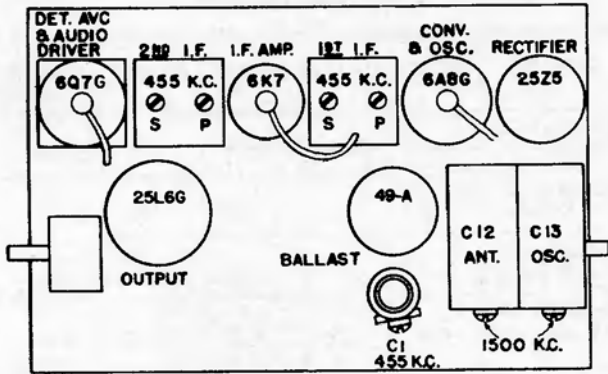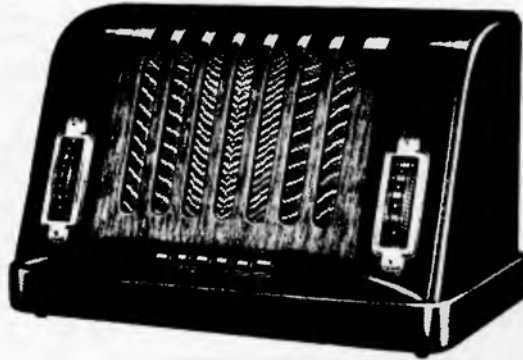

VOLTAGE CHART

Tube No.	6A8G	6K7	6Q7G	25L6G	25Z5
Plate to -B volts	112	112	55*	130	..
Screen to -B volts	75	75	..	115	..
Cathode to -B volts	0	0	0	7.5	136
Cathode Current MA	6.6	1.4	0.5	40	50
Filament Volts	6.0	6.0	6.1	24.5	24.0

Line Voltage—120 AC. No signal input

* Measured on 250-volt scale.

On DC, voltages are about 15 per cent lower.

Symbol	Description
C1	Wave trap trimmer
C2-C6	Antenna trimmer strip
C7-C11	Oscillator trimmer strip
C12, C13	Tuning condenser
C14	47 mmf., mica capacitor
C15	.25 mfd., paper capacitor
C18	.25 mfd., paper capacitor
C19	.05 mfd., paper capacitor
C22	470 mmf., mica capacitor
C23, 24	.002 mfd., paper capacitor
C25	330 mmf., mica capacitor
C27	.005 mfd., paper capacitor
C28	.01 mfd., paper capacitor
C29	.001 mfd., paper capacitor
C30a	20 mfd., dry electrolytic
C30b	40 mfd., dry electrolytic
C30c	20 mfd., dry electrolytic
C32	.02 mfd., molded capacitor
C34	15 mfd., dry electrolytic
C35	.005 mfd., paper capacitor
R1	47,000 ohm, carbon resistor
R2	10,000 ohm, carbon resistor
R3	Ballast resistance, 49A
R4	2.2 megohm, carbon resistor
R5	470,000 ohm, carbon resistor
R6	2.2 megohm, volume control
R7	15.0 megohm, carbon resistor
R8	220,000 ohm, carbon resistor
R10	1.0 megohm, carbon resistor
R11	2200 ohm, carbon resistor
R12	180 ohm, carbon resistor
R13	68,000 ohm, carbon resistor
T1	1st I.F. transformer
T2	2nd I.F. transformer
T3	Output transformer*
T4	Osc. transformer
T5	Antenna transformer


COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

55

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

GENERAL ELECTRIC

MODEL GD-500

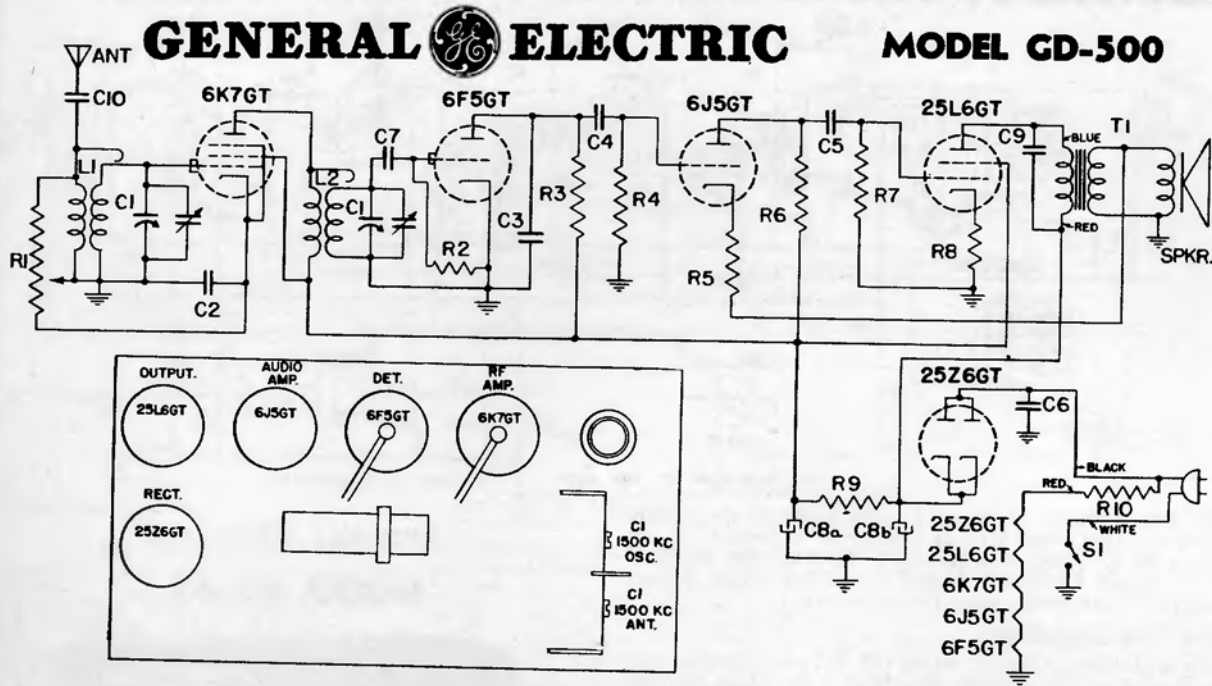

Symbol	Description	Symbol	Description	Symbol	Description
C-1	Tuning Condenser	C-9	.02 mfd., Paper Capacitor	R-7	470,000 ohm, Carbon Resistor
C-2	.05 mfd., Paper Capacitor	C-10	.002 mfd., Paper Capacitor	R-8	150 ohm, Carbon Resistor
C-3	.001 mfd., Paper Capacitor	R-1	30,000 ohm, Volume Control	R-9	4,700 ohm, Carbon Resistor
C-4, -5	.005 mfd., Paper Capacitor	R-2	15 megohm, Carbon Resistor	R-10	162 ohm, Power Cord Resistor
C-6, -7	.01 mfd., Paper Capacitor	R-3, -4	470,000 ohm, Carbon Resistor	L-1	Antenna Coil
C-8a	15 mfd., Dry Electrolytic	R-5	3,300 ohm, Carbon Resistor	L-2	RF Coil
C-8b	30 mfd., Dry Electrolytic	R-6	100,000 ohm, Carbon Resistor	T-1	Output Transformer

VOLTAGE CHART

Tube No.	6K7GT	6J5GT	6F5GT	25L6GT	25Z6GT
Plate to -B Volts	88	30 *	35 *	132	120. AC
Screen to -B Volts	88	88
Cathode to -B Volts	0	1.3	0	5.5	140
Filament Volts	6.4	6.3	6.2	25.0	25.0


Voltage measured when volume control is set to maximum.
Line Voltage—120 AC. No signal input.
* Measured on 500-volt scale.
On DC, voltages should read approximately 10% lower.

ALIGNMENT

Connect the high side of the signal generator through a 250 mmf. condenser to the antenna lead. The low side of the signal generator output should be connected to the receiver chassis through a .05 mfd. condenser. Connect a suitable output meter across the voice coil leads; then proceed as follows:

1. With gang condenser plates completely closed, the tuning mark should be over the last mark on the dial.
2. Tune receiver to the 1500 KC point on the dial; then align trimmers on the gang condenser at 1500 KC for a maximum output meter reading.

Precaution—One side of the power supply is connected to the chassis. Do not connect chassis to any external ground.

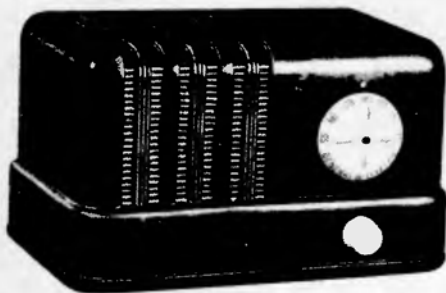

Electrical Power Output


Undistorted.....1.4 watts
Maximum.....2.0 watts

Loudspeaker—Permanent Magnet

Outside Cone Diameter.....4½ inches
Voice Coil Impedance (400 cycles).....3.5 ohms

56

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

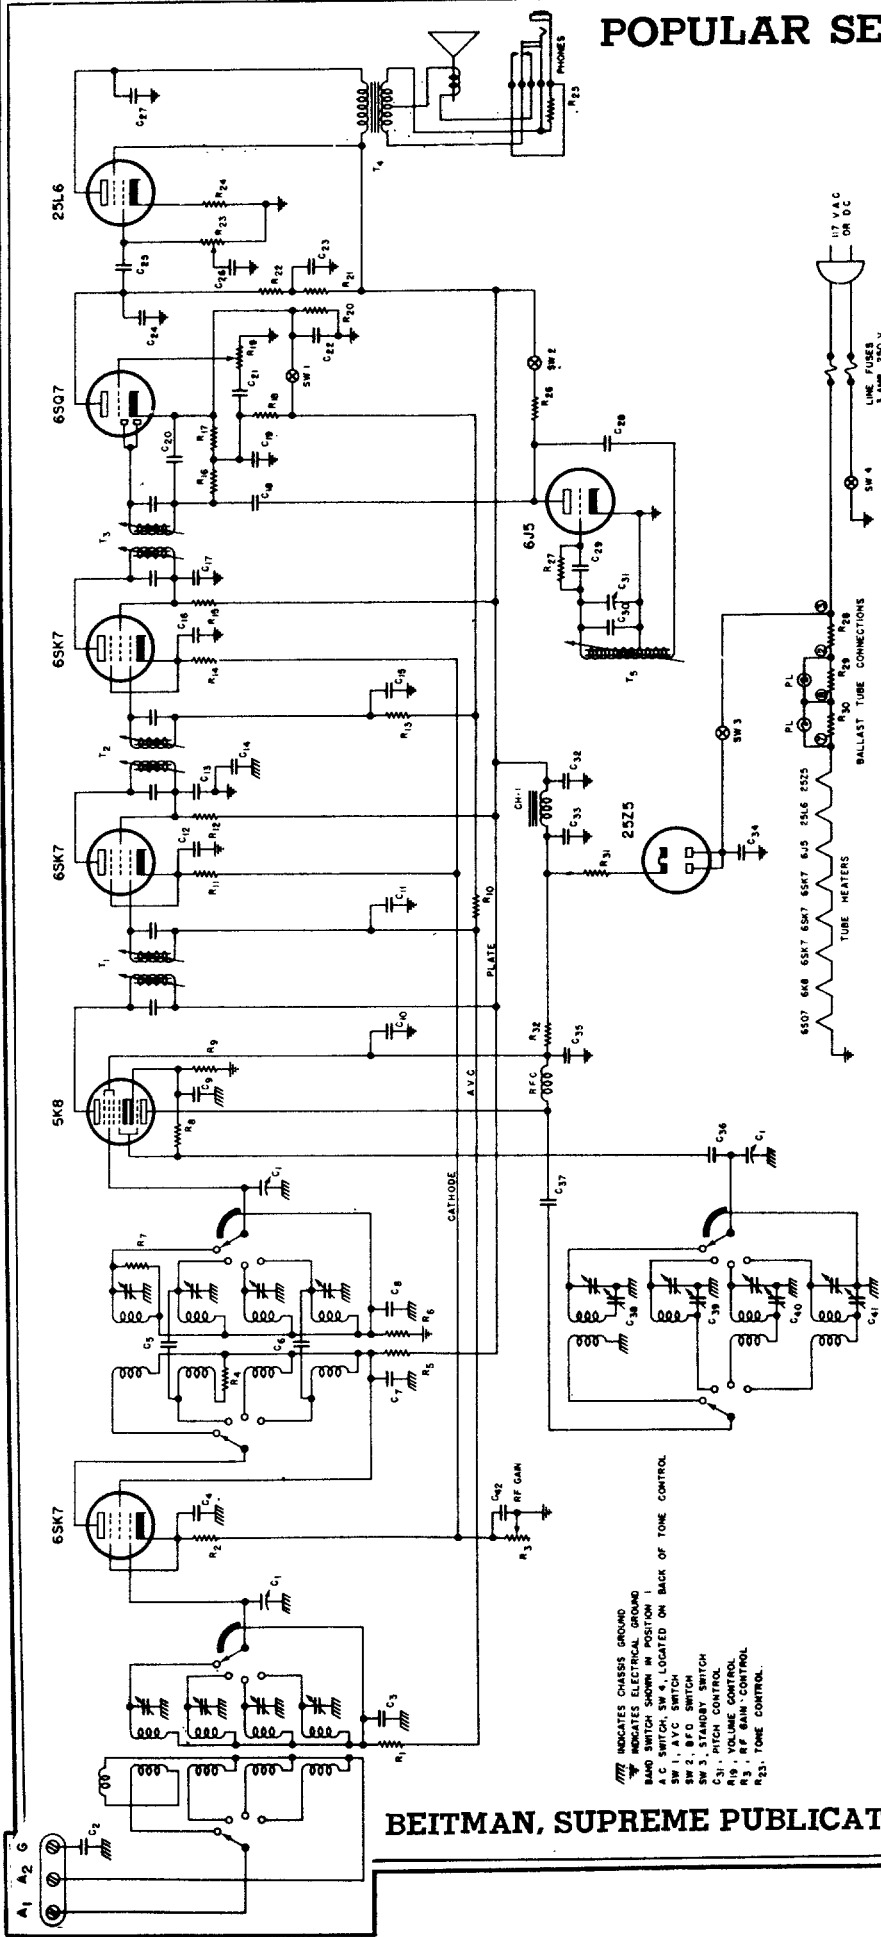

the hallicrafters co.

SETTING OF CONTROLS PRIOR TO ALIGNMENT -
IF AND RF.

- 1 - Tone control at maximum high frequency position.
- 2 - AVC switch OFF.
- 3 - BFO switch OFF.
- 4 - RF Gain at maximum.
- 5 - AF gain at maximum.

MODEL S-22-R

Equipment needed for aligning:

- 1 - An all wave signal generator which will provide an accurately calibrated signal at the test frequencies indicated.
- 2 - Output indicating meter connected to a headphone plug, and inserted in the headphone jack.
- 3 - Non-metallic screw driver.
- 4 - Dummy antenna of .002 mfd. condenser and 400 ohm resistor.

▨▨▨ INDICATES CHASSIS GROUND
 ▨▨▨ INDICATES ELECTRICAL GROUND
 BAND SWITCH SHOWN IN POSITION 1
 A.C. SWITCH, SW 4, LOCATED ON BACK OF TONE CONTROL
 SW 1, P.F.O. SWITCH
 SW 2, P.F.O. SWITCH
 SW 3, STANDBY SWITCH
 C31, PITCH CONTROL
 R19, VOLUME CONTROL
 R3, RF GAIN CONTROL
 R23, TONE CONTROL

BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

NO.	VALUE	VOLTAGE OR PURPOSE	NO.	VALUE	VOLTAGE OR PURPOSE	NO.	VALUE IN OHMS	
C ₁	Tuning Condenser		C ₂₆	.01 mfd	400 V.	R ₇	100,000	
C ₂	.01 mfd	400 V.	C ₂₇	.005 mfd	600 V.	R ₈	50,000	
C ₃	.05 mfd	400 V.	C ₂₈	.01 mfd	400 V.	R ₉	400	
C ₄	.05 mfd	400 V.	C ₂₉	250 mmfd		R ₁₀	100,000	
C ₅	5 mmf		C ₃₀	200 mmfd		R ₁₁	500	
C ₆	5 mmf		C ₃₁	5 mmf	BFO Pitch Con.	R ₁₂	1,000	
C ₇	.25 mfd	400 V.	C ₃₂	40 mfd	150 V.	R ₁₃	100,000	
C ₈	.05 mfd	400 V.	C ₃₃	40 mfd	150 V.	R ₁₄	400	
C ₉	.05 mfd	400 V.	C ₃₄	.05 mfd	400 V.	R ₁₅	1,000	
C ₁₀	.1 mfd	400 V.	C ₃₅	30 mfd	150 V.	R ₁₆	100,000	
C ₁₁	.02 mfd	400 V.	C ₃₆	100 mmfd		R ₁₇	250,000	
C ₁₂	.02 mfd	400 V.	C ₃₇	2000 mmfd		R ₁₈	1 Meg.	
C ₁₃	.01 mfd	400 V.	C ₃₈	32 mmfd	Band 1 Pad	R ₁₉	500,000	
C ₁₄	.25 mfd	400 V.	C ₃₉	110 mmfd	Band 2 Pad	R ₂₀	7,500	
C ₁₅	.02 mfd	400 V.	C ₄₀	480 mfd	Band 3 Pad	R ₂₁	100,000	
C ₁₆	.02 mfd	400 V.	C ₄₁	1300 mfd	Band 4 Pad	R ₂₂	250,000	
C ₁₇	.01 mfd	400 V.	C ₄₂	.1 mfd	200 V.	R ₂₃	500,000	
C ₁₈	10 mmf		NO. VALUE IN OHMS				R ₂₄	140
C ₁₉	100 mmf		R ₁	100,000		R ₂₅	100	
C ₂₀	100 mmf		R ₂	300		R ₂₆	5,000	
C ₂₁	.02 mfd	400 V.	R ₃	25,000		R ₂₇	250,000	
C ₂₂	10 mf	25 V.	R ₄	400		R ₂₈	Plug-in Ballast	
C ₂₃	.05 mfd	400 V.	R ₅	1,000		R ₂₉	Plug-in Ballast	
C ₂₄	250 mfd		R ₆	100,000		R ₃₀	Plug-in Ballast	
C ₂₅	.05 mfd	400 V.				R ₃₁	25	
						R ₃₂	4,000	

SKYRIDER MARINE - MODEL S-22 R

Connect hot Lead of Signal Generator to A₁ through dummy Antenna shown in Table. Leave Jumper connected between A₂ and G. Ground of Generator to Chassis.

BAND	REC. DIAL SETTING	SIG. GEN. FREQ.	DUMMY ANTENNA	HIGH FREQUENCY END		LOW FREQUENCY END
				ADJUST OSC WITH	ADJUST TRIMMERS WITH	ADJUST OSCILLATOR WITH
1	125 Kc	125 Kc	.002 mfd	-----	-----	P ₁
	350 Kc	350 Kc	.002 mfd	C _C	C _A -C _B	-----
2	450 Kc	450 Kc	.002 mfd	-----	-----	P ₂
	1400 Kc	1400 Kc	.002 mfd	C _F	C _E -C _D	-----
3	2 Mc	2 Mc	400 Ohm	-----	-----	P ₃
	4.5 Mc	4.5 Mc	400 Ohm	C _J	C _G -C _H	-----
4	7 Mc	7 Mc	400 Ohm	-----	-----	P ₄
	15 Mc	15 Mc	400 Ohm	C _M	C _L -C _K	-----


58

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

Howard Radio Company, 1731 Belmont Avenue, Chicago, Illinois

Models: 225, S-225, 250, S-250, 260, S-260, 275, 275-C, 280.

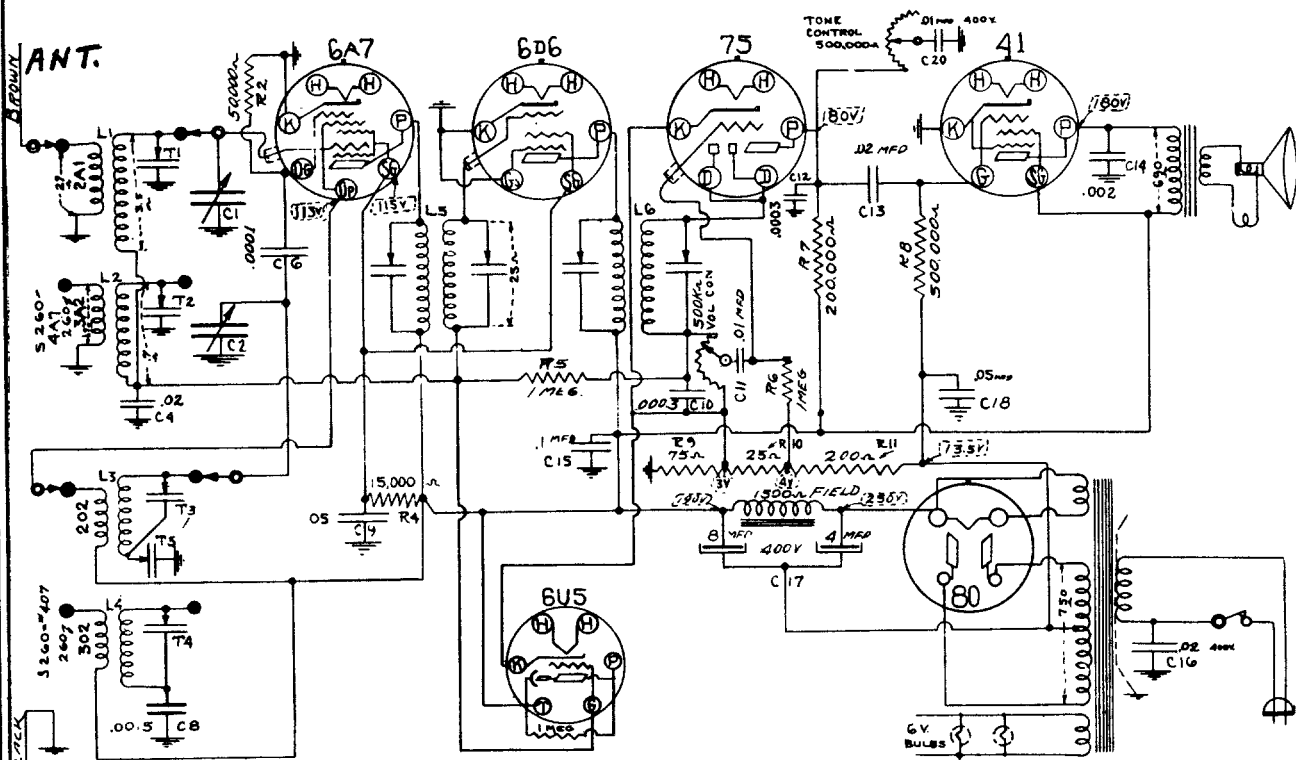

VOLTAGES AS SHOWN [] TAKEN FROM GROUND, LINE VOLTAGE 117 V AC

TWO BANDS -

- ① - 540 TO 1700 KC BROADCAST.
- ② - 2 TO 6.5 MC. POLICE BAND MODEL 260
- ③ - 6 TO 17 MC. S. WAVE BAND 1700 TO 5.260

The models 225 and 250 are electrically the same chassis; the only difference being the cabinets in which they are mounted. These models have two band circuits covering the Broadcast Band 550 to 1700 KC and the so-called Police Band from 2 to 6.5 megacycles, having separate Antenna and Oscillator coils for each band.

The models S225 and S250 cover the Broadcast Band 550 to 1700 KC and the short wave band 5.5 to 18 MC.

The models 260 and S260 have the same circuit as the 225, S225 respectively with the addition of the tuning eye tube to indicate resonance.

The models 275, 275C and 280 are the same electrically, covering 3 bands, 550 to 1700 KC, 1.7 to 5.5 MC, and 5.5 to 18 MC.

The I. F.'s are aligned by the usual system of feeding the intermediate frequency of 465 KC into the grid of the 6A7 tube.

The two trimmers in each of the I. F. cans should be very carefully peaked to resonance as they are very critical and will greatly affect the performance of the set. These are trimmers number T8, T9, T10, T11.


The Sensitivity of the I. F. stages will be 25 to 50 microvolts or better for a 50 milliwatt output.

Always use as low an output as possible from the test oscillator in making the various adjustments.

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS



59

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

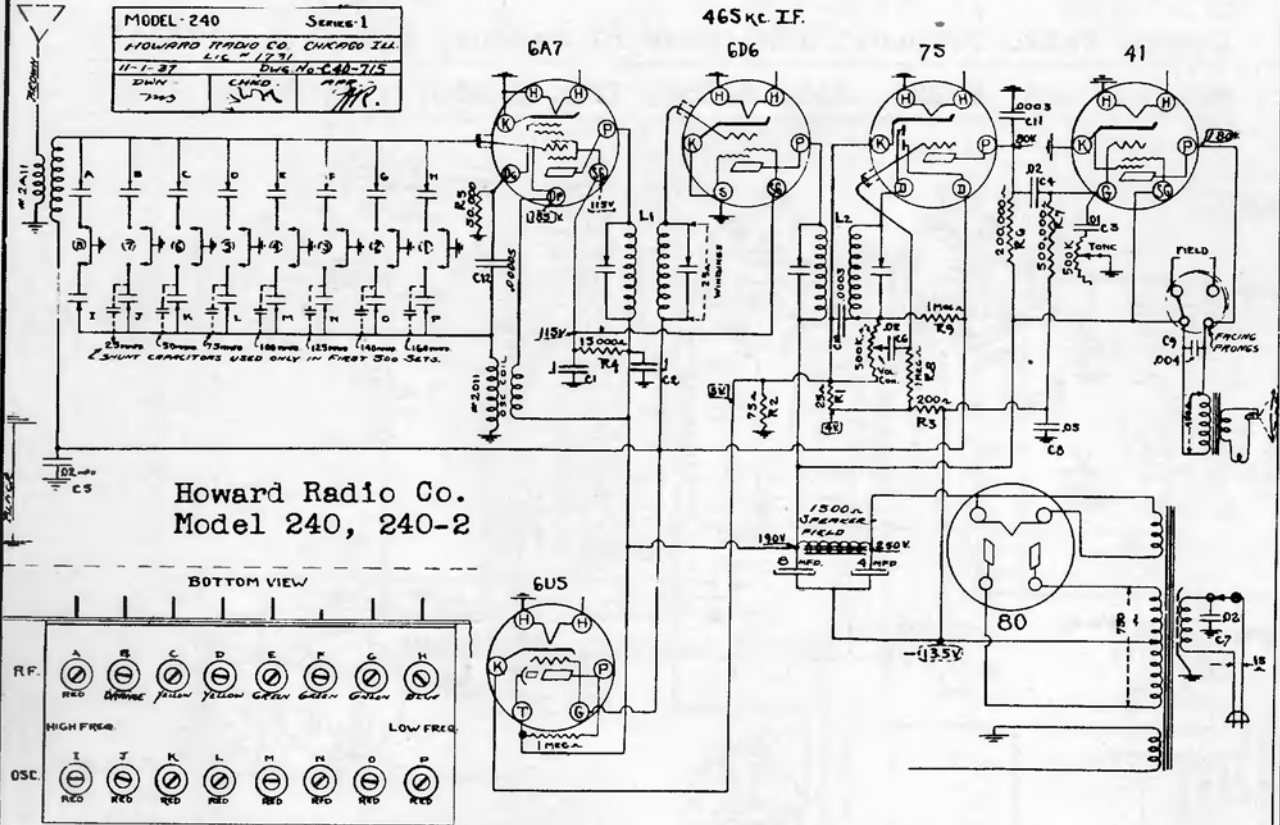

THE MODEL 240 series 1 and 2 is strictly a push-button tuner having no gang condenser. The eight push-button station selectors complete the ground circuit of the oscillator and R. F. tuned condensers previously set to whatever frequency desired. The eight circuits cover the complete range of the broadcast band from 540 to 1750 KC. The instructions for the set-up are shown.

The model 240-1 used the 80 tube for a rectifier and the model 240-2 uses the 1V type tube.

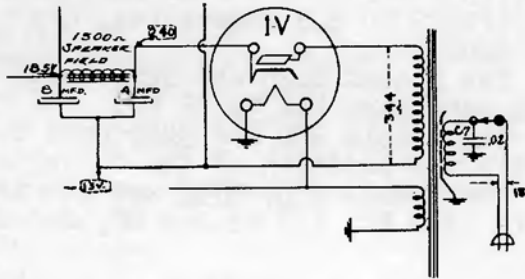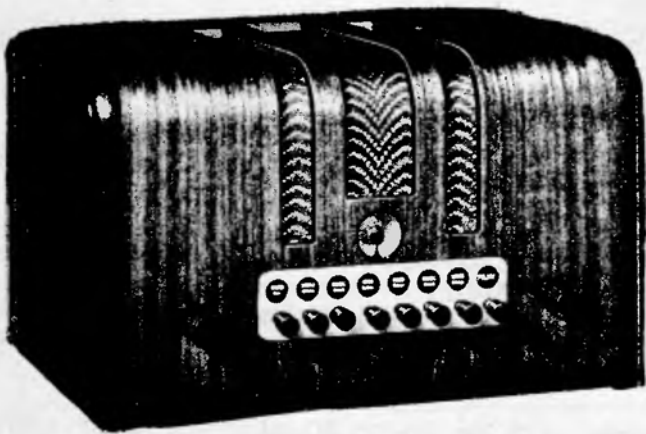

These sets can be easily aligned. The I.F. is set in the regular way. Then one station is tuned-in at a time and adjusted for maximum response. No other adjustments are needed.

60

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

Howard Radio Co.

Models: 400, 400-A, 425, 425-A.


Model 400 is a 12 tube, 3 band receiver with all coils shielded. See Fig. 4, for coil location and information on trimmers and padding condensers for each band. The 6F5 is a bass boost stage. The 6J5G is a phase inverter with push-pull 6V6G's in the output. The schematic of the model 425 illustrated is the same for the RF and IF stages. A single type 80 rectifier is used.

Model 425 is a 14 tube set having 6L6G's in the output.


Models 400-A and 425-A have the same electrical circuits as the 400 and 425. These models employ the Howard motor automatic tuning feature by use of the reversible motor controlled by the commutator disc near the back of the set.

ADJUSTMENT OF HOWARD MOTOR AUTOMATIC

FIRST - Select and depress the push-button by number that will include the desired station according to frequency chart listing below:-

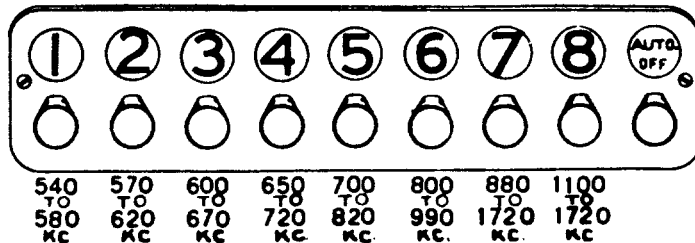

See next page-

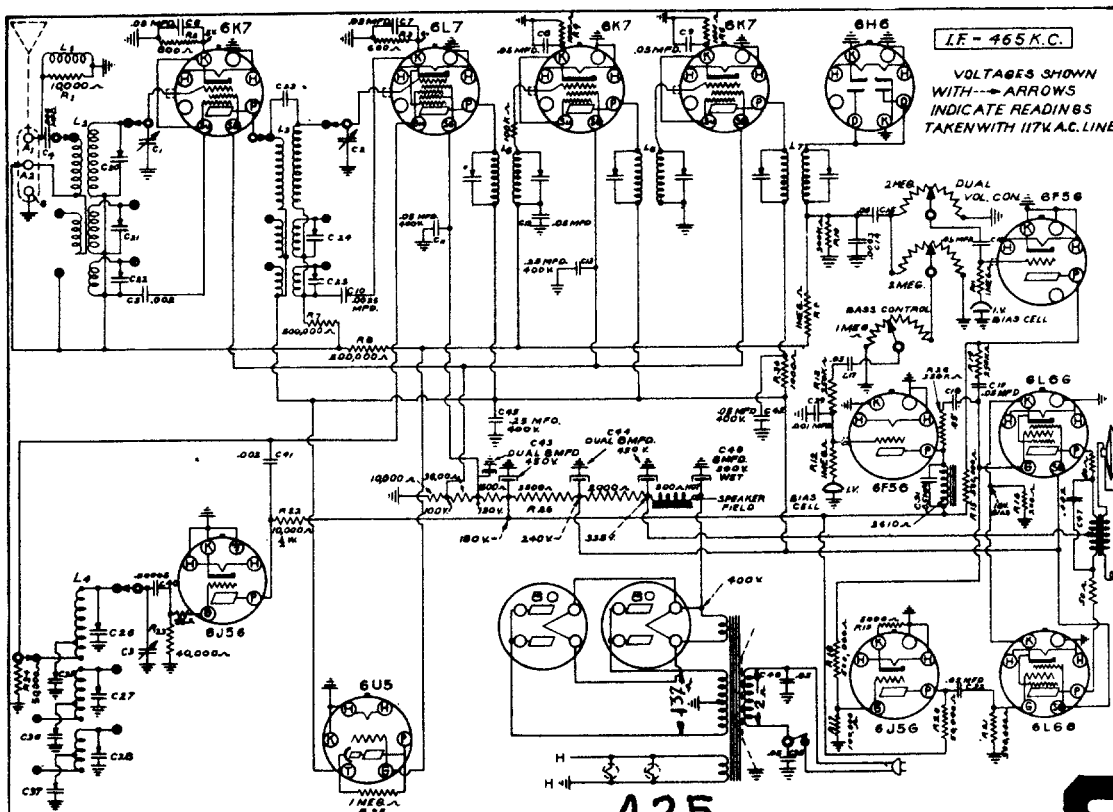


425

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

61

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

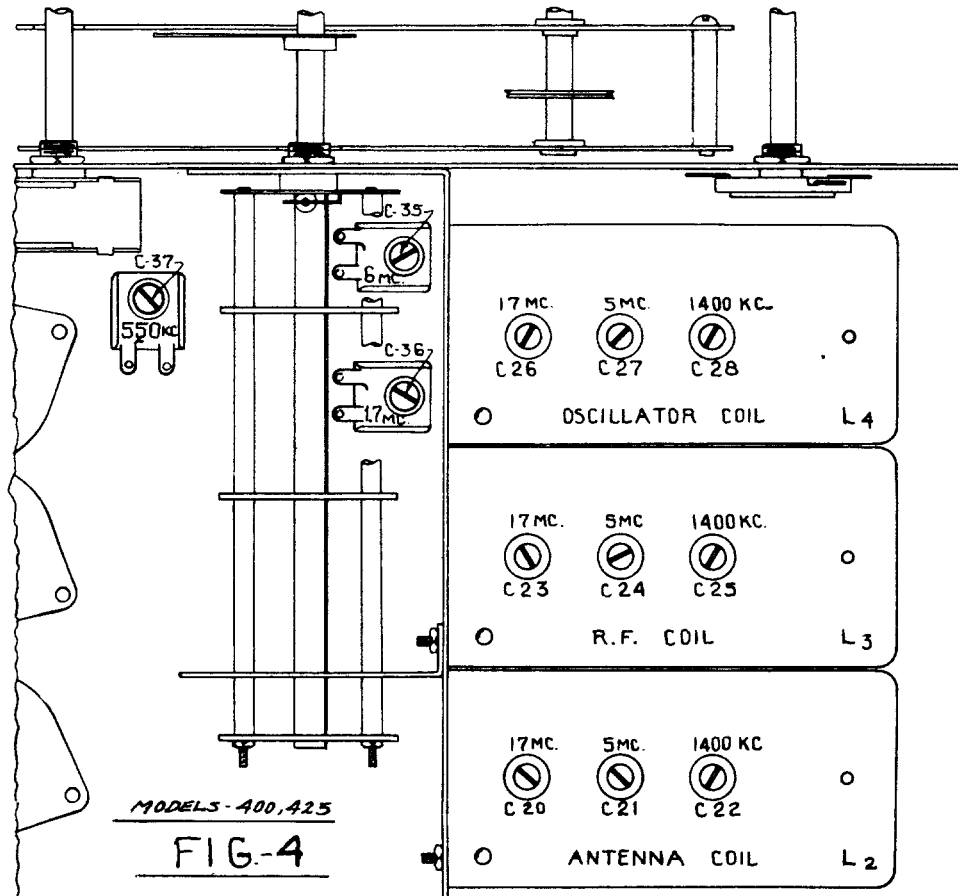



SECOND - Reach to back of chassis and turn muting switch to OFF position.

LOCATE THE SAME NUMBERED STATIONS CONTACTOR ON BACK OF TUNING CONDENSER THAT CORRESPONDS TO THE BUTTON DEPRESSED IN FIRST PARAGRAPH, AND SLIDE UNTIL THE DESIRED STATION IS TUNED IN.




With the muting switch in the OFF position the stations will be heard while moving the slide contactor. For silent tuning after all adjustments are made, turn switch to ON position.

THIRD - Remove station call letter tab from tab sheet and insert in place with finger tip in front of escutcheon plate over the number that was selected. Repeat above procedure for each of remaining buttons.

NOTE - When tuning the set by hand or if a remote cable is used the selector button **AUTO-OFF** must be depressed.

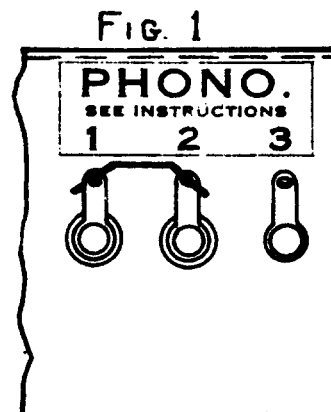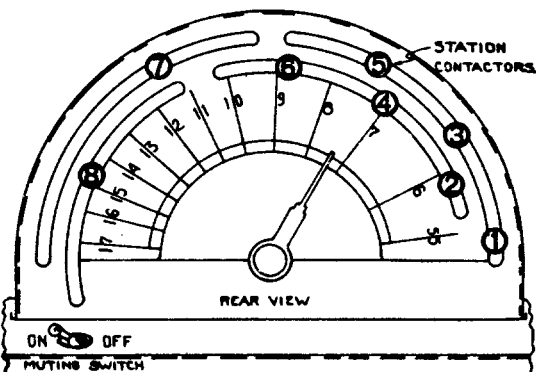

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

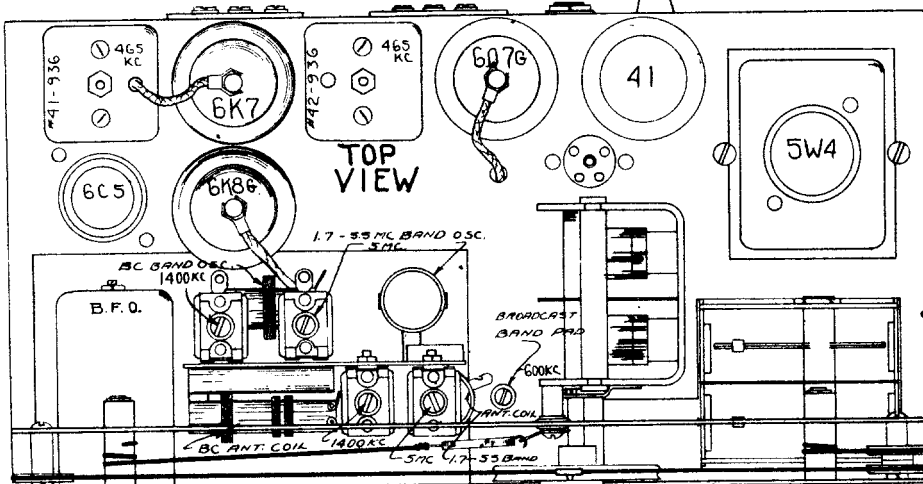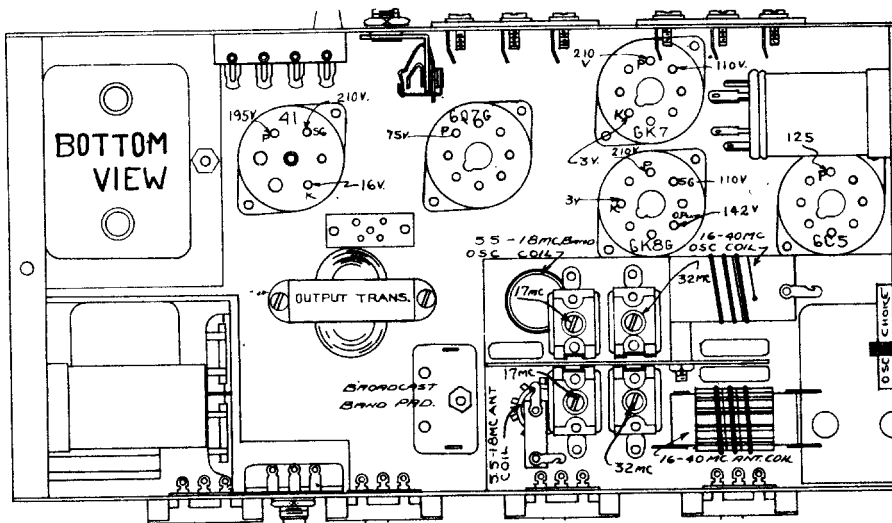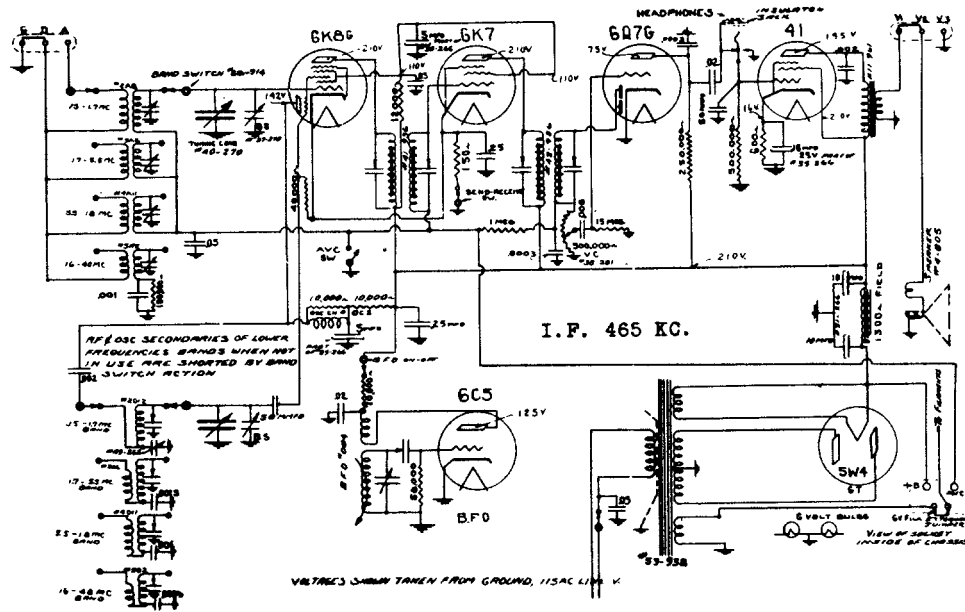

HOWARD

430

NOTE 1: When aligning the I.F. channel, a condenser of .05 MFD may be used in series with the generator lead.

NOTE 2: When aligning the broadcast band, a 250 MMFD condenser may be used in series with the signal generator.

NOTE 3: When aligning the short wave bands, a 400 ohm resistor may be used in series with the signal generator.


NOTE 4: After the chassis has been removed from the cabinet, be sure when it is again assembled that the speaker plug is in place in the socket on top of the chassis and that the speaker cable wires do not lay back near the RF circuit, thus causing howling.

NOTE 5: Check for an image signal about .9 mc. lower in frequency. For example:- If a peak has been made at 6 mc. an image should be heard at about 5.1 mc. Otherwise the original setting was not correct.

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

63

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

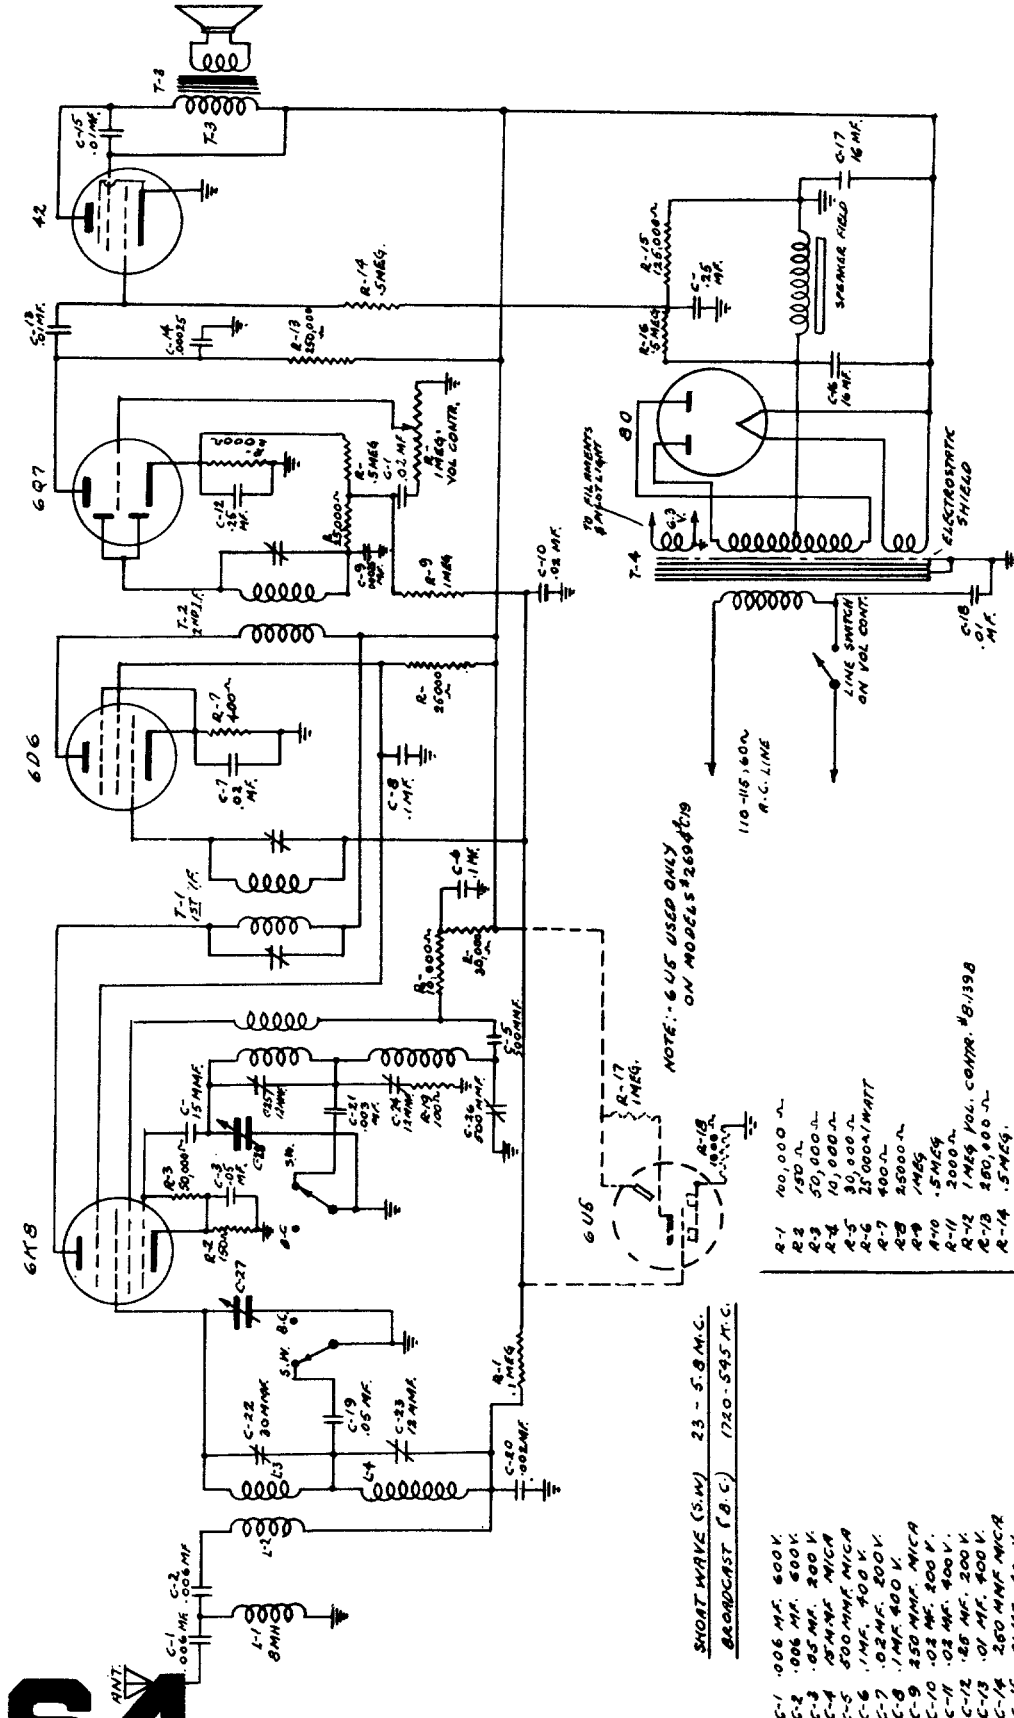

64

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

IF 456 KC.


NOTE: 6U6 USED ONLY ON MODELS 269 & 279

- C-1 .006 MF. 500 V.
- C-2 .006 MF. 500 V.
- C-3 .05 MF. 200 V.
- C-4 .05 MF. MICA
- C-5 500 MMF. MICA
- C-6 .1 MF. 400 V.
- C-7 .02 MF. 200 V.
- C-8 .1 MF. 400 V.
- C-9 250 MMF. MICA
- C-10 .03 MF. 200 V.
- C-11 .03 MF. 400 V.
- C-12 .05 MF. 200 V.
- C-13 .01 MF. 400 V.
- C-14 250 MMF. MICA
- C-15 .01 MF. 400 V.
- C-16 .16 MF. 450 W. V.
- C-17 .16 MF. 450 W. V.
- C-18 .01 MF. 400 V.
- C-19 .05 MF. 200 V.
- C-20 .002 MF. 15% MICA
- C-21 .003 MF. 15% MICA
- C-22 30 MMF. TRIMMER
- C-23 DUAL 12 MMF. TRIMMER COND.
- C-24 12 MMF. TRIMMER COND.
- C-25 500 MMF. PARADOX COND.
- C-26 500 MMF. PARADOX COND.
- C-27 2 GANG 450 MMF. VAR. COND. # 2.136
- C-28
- R-1 100,000 Ω
- R-2 750 Ω
- R-3 50,000 Ω
- R-4 10,000 Ω
- R-5 30,000 Ω
- R-6 25,000 Ω/WATT
- R-7 400 Ω
- R-8 2500 Ω
- R-9 1MΩ
- R-10 5MΩ
- R-11 2000 Ω
- R-12 1MΩ 5% VOL. CONTR. #B/139
- R-13 200,000 Ω
- R-14 5MΩ
- R-15 125,000 Ω
- R-16 5MΩ
- R-17 1MΩ. IN BUS SOCKET
- R-18 1000 Ω (OPTIONAL)
- R-19 100 Ω
- L-1 8 MH. CHOKE
- L-2 2 BAND ANT. COIL #1.217
- L-3 2 BAND ANT. COIL #1.217
- L-4
- L-5 2 BAND OSC. COIL #1.218
- L-6
- L-7 2 BAND OSC. COIL #1.218
- L-8 SPEAKER FIELD
- T-1 6T. I.F. INPUT #1.215-A
- T-2 5T. I.F. OUTPUT #1.200
- T-3 OUTPUT TRANS. ON SPEAKER
- T-4 POWER TRANS. #1.152
- 6U6
- 6M8
- 6D6
- 6Q7
- 7-3
- 7-4
- 7-5
- 7-6
- 7-7
- 7-8
- 7-9
- 7-10
- 7-11
- 7-12
- 7-13
- 7-14
- 7-15
- 7-16
- 7-17
- 7-18
- 7-19
- 7-20
- 7-21
- 7-22
- 7-23
- 7-24
- 7-25
- 7-26
- 7-27
- 7-28
- 7-29
- 7-30
- 7-31
- 7-32
- 7-33
- 7-34
- 7-35
- 7-36
- 7-37
- 7-38
- 7-39
- 7-40
- 7-41
- 7-42
- 7-43
- 7-44
- 7-45
- 7-46
- 7-47
- 7-48
- 7-49
- 7-50
- 7-51
- 7-52
- 7-53
- 7-54
- 7-55
- 7-56
- 7-57
- 7-58
- 7-59
- 7-60
- 7-61
- 7-62
- 7-63
- 7-64
- 7-65
- 7-66
- 7-67
- 7-68
- 7-69
- 7-70
- 7-71
- 7-72
- 7-73
- 7-74
- 7-75
- 7-76
- 7-77
- 7-78
- 7-79
- 7-80
- 7-81
- 7-82
- 7-83
- 7-84
- 7-85
- 7-86
- 7-87
- 7-88
- 7-89
- 7-90
- 7-91
- 7-92
- 7-93
- 7-94
- 7-95
- 7-96
- 7-97
- 7-98
- 7-99
- 7-100

Lafayette Radio Corp.
Radio Wire Television, Inc.
Models C-16, C-19, 259, 269

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

CHARLIE MCCARTHY NO. 2

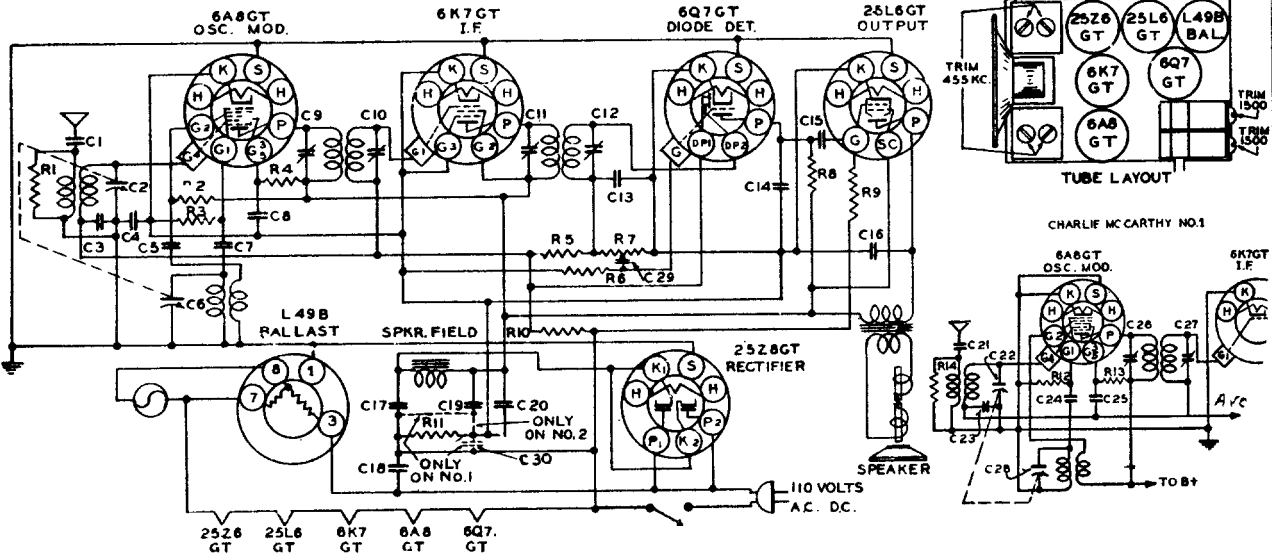

CHARLIE MCCARTHY No. 2—PARTS LIST


Schematic Location	Part No.	Description	Schematic Location	Part No.	Description
C15, C29	C-15754	Tubular cond. .01 mfd. 400 V	C17	CE-39	Electr. cond. 40 mfd. 200 V
C3	C-15752	Tubular cond. .05 mfd. 200 V	C19	CE-40	Electr. cond. 16 mfd. 150 V
C1	C18	Tubular cond. .01 mfd. 400 V Paper mold case	C9, C10	Y-CT-18	Trimmer cond. 1st I. F.
C8, C20	C19	Tubular cond. .05 mfd. 400 V Paper mold case	C11, C12	Y-CT-18	Trimmer cond. 2nd I. F.
C4	C20	Tubular cond. .25 mfd. 200 V Paper mold case	C2, C6	Y-CV-18	2 gang variable cond.
C5	C21	Tubular cond. .005 mfd. 400 V Paper mold case	R11	R-67	Wire wound res. 100 ohms 1W 10%
C16	C22	Tubular cond. .02 mfd. 600 V Paper mold case	R3	R-54	Carbon resistor 50K 1/4W 20%
C18	C24	Tubular cond. .1 mfd. 300 V Paper mold case	R4	R-53	Carbon resistor 15K 1/4W 20%
C7	CM-15929	Mica cond. .50 mmf. 20%	R5	R-51	Carbon resistor 500K 1/4W 20%
C13	CM-15928	Mica cond. 250 mmf. 20%	R8	R-52	Carbon resistor 400K 1/4W 20%
C14	CM-15918	Mica cond. 100 mmf. 20%	R9	R-55	Carbon resistor 2 meg. 1/4W 20%
			R5	R-50	Carbon resistor 5 meg. 1/4W 20%
			R10	R-49	Carbon resistor 15 meg. 1/4W 20%
			R6	R-65	Carbon resistor 10K 1/4W 20%
			R2	R-68	Carbon res. 7500 ohms 1/4W 20%
			R7	Y-VC-15	Volume control .5 meg.

C21	.01 mfd.
C23	.05 mfd.
C24	50 mmfd.
C25	.05 mfd.
R12	50K 1/4W.
R13	15K 1/4W.



Majestic Radio & Television Corp. Wireless Record Player 3-PW

REPLACEMENT PARTS LIST FOR MODEL 3-PW

Schematic Location	Part No.	Description
R4, R5	R-2	Carbon resistor 5K 1/4W 20%
R1	R-65	Carbon resistor 10K 1/4W 20%
R3	R-15542	Carbon resistor 1K 1/4W 20%
R6	R-15512	Carbon resistor 250K 1/4W 20%
R2	R-15515	Carbon resistor 100K 1/4W 20%
C5, C6	CE-47	Elect. cond. 8.16 mfd. 150V
C4	Y-CT-6	Adj. padding cond.
C7	C-15757	Paper cond. .1 mfd. 400V
C2, C3	C-15761	Paper cond. .1 mfd. 200V
C1	CM-15929	Mica cond. 80 mmf. 20%

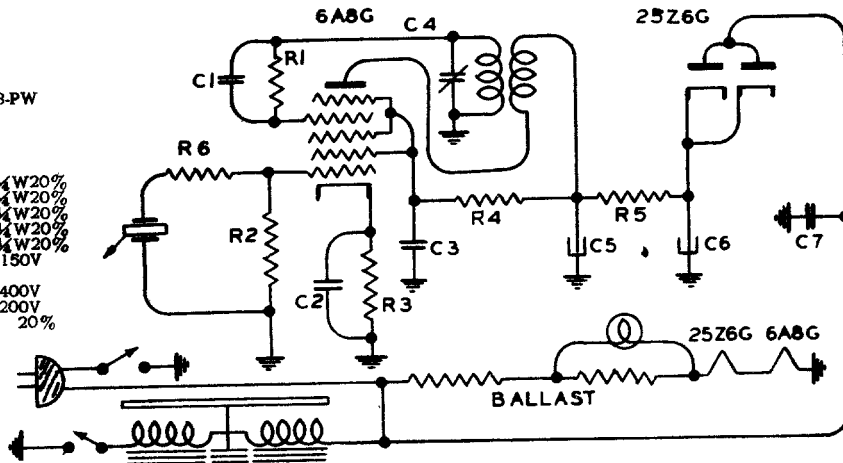

TUBE LOCATION CHART

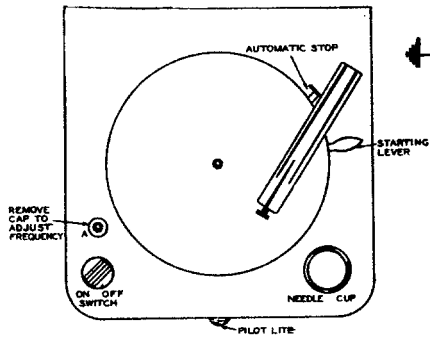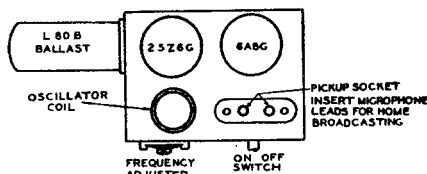


COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

65

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS


SCHEMATIC DIAGRAM MODEL 62A

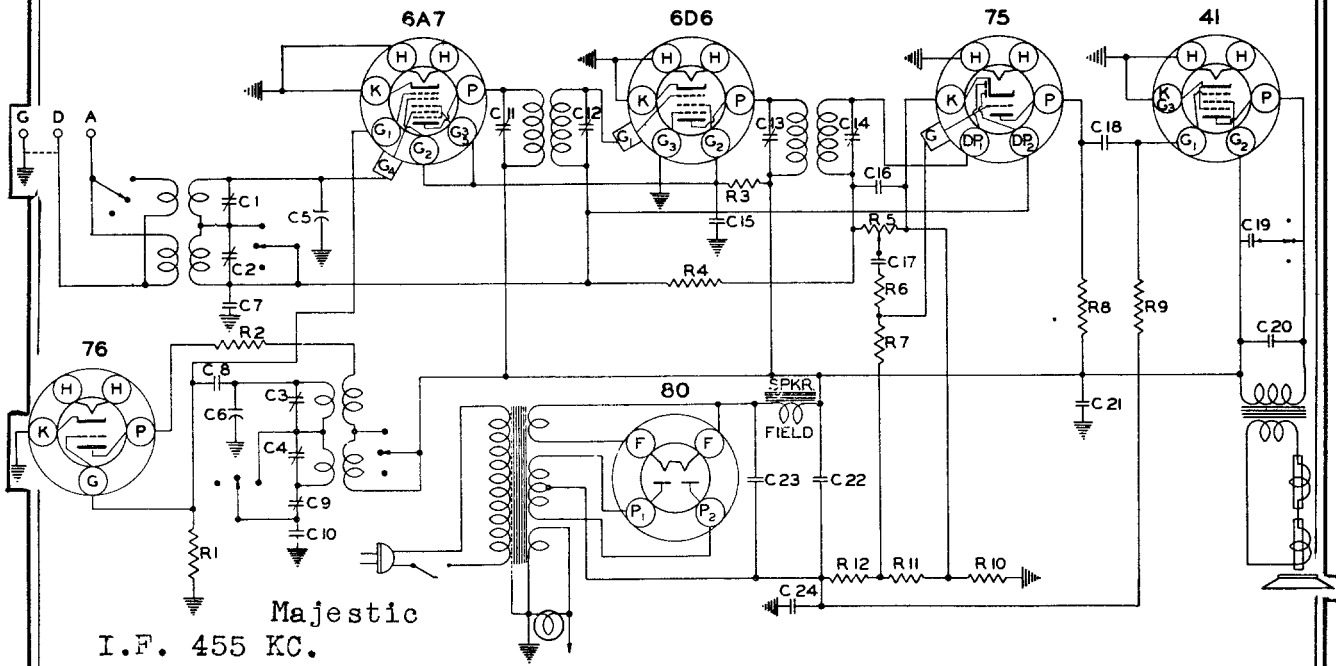


Schematic Location	Description
R1	50K 1/4W 20%
R2	100K 1/4W 20%
R3	7.5K 2W 1/4W 20%
R4	2 Meg. 1/4W 20%
R5	Volume control 1 meg.
R6, R8	250K 1/4W 20%
R7	1 Meg.
R9	500K 1/4W 20%

Schematic Location	Part No.	Description
R10	61 Ohms	E-C-6 Candohm
R11	33 Ohms	
R12	150 Ohms	
C11, C12, C13, C14, C15, C16, C17, C18, C19, C20, C21, C22, C23, C24	Y-CP-2	Trimmer cond.
C8, C9, C10	Y-CV19	Variable gang condenser
C2	C-15752	Tubular cond. .05 mfd. 200 V
C3	CM-15929	Mica cond. 50 mmf. 20%
C4	C-16472	Padder cond.
C5	CM-17	Mica cond. 4330

Schematic Location	Description
C11, C12	Trimmer cond.
C13, C14	Trimmer cond.
C15, C21	Tubular cond. .05 mfd. 400V
C16	Mica cond. 250 mmf. 20%
C17, C18, C19	Tubular cond. .01 mfd. 400 V
C20	Tubular cond. .006 m.f. 400V
C22	8,300 V
C23	12,300 V
C24	20,25 V

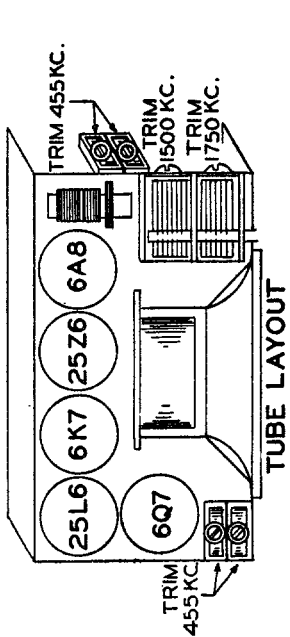

Majestic Radio Model 52

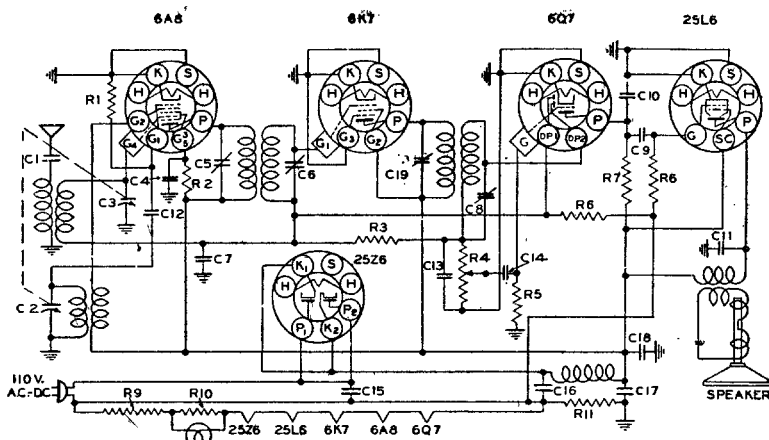

REPLACEMENT PARTS LIST


Schematic Location	Part No.	Description	Schematic Location	Part No.	Description
C2, C3	Y-CV 14	Variable Gang Condenser	R1	R-54	Carbon resistor 50K 1/4W 20%
C7, C18	C-15761	Tubular cond. .1 mfd. 200 V	R2	R-53	Carbon resistor 15K 1/4W 20%
C4	C-15752	Tubular cond. .05 mfd. 200 V	R3	R-55	Carbon resistor 2meg 1/4W 20%
C9, C1	C-15754	Tubular cond. .01 mfd. 400 V	R5	R-49	Carbon resistor 1.5meg 1/4W 20%
C15	C-15757	Tubular cond. .1 mfd. 400 V	R6	R-50	Carbon resistor 5meg 1/4W 20%
C11	C-15772	Tubular cond. .02 mfd. 400 V	R7	R-51	Carbon resistor 500K 1/4W 20%
C14	C-15754	Tubular cond. .01 mfd. 400 V	R8	R-52	Carbon resistor 300K 1/4W 20%
C16	CE-32	Tub. dry elec. cond. 40 mfd.	R11	R-56	Carbon res. 100 ohm 1/2W 10%
C17	CE-35	Tub. dry elec. cond. 16 mfd.	R10	R-57	Carbon res. 100 ohm 1/2W 10%
C5, C6	Y-CT-16	Trimmer cond. 1st I. F.	R9	LC-8	Wire wound flex. res. 40 ohms
C8, C19	Y-CT-17	Trimmer cond. 2nd I. F.	R4	Y-VC-15	.5 meg Volume control
C10, C13	CM-15928	Mica cond. 250 mmf. 20%			
C12	CM-15919	Mica cond. 50 mmf. 20%			

66


COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

Majestic Radio & Television Corporation

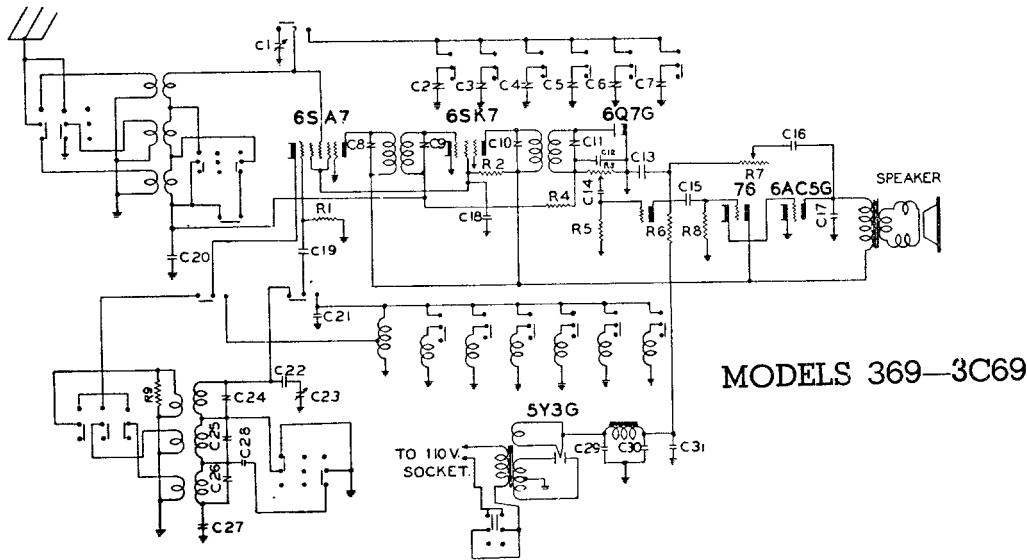

Schematic Location	Description	Schematic Location	Part No.	Description	Schematic Location	Description
R3	Volume and tone control	C27	Y-CT-4	Padding Condenser	C12, C13, C19	Mica cond. 100 mmf. 30%
R7	Carbon res. 20K ohm $\frac{1}{2}$ W 20%	C29, C30	OE-52	Electrolytic	C16	Mica cond. 250 mmf. 30%
R2	Carbon res. 10K ohm $\frac{1}{2}$ W 20%	C15	C-15757	Tubular cond. .05 mfd. 200V	C22	Mica cond. 4330 mmf. 5%
R4, R8	Carbon res. 1 meg. $\frac{1}{2}$ W 20%	C17	C-15754	Tubular cond. .01 mfd. 400 V	C28	Mica cond. 2770 mmf. 5%
R5	Carbon res. 15 meg. $\frac{1}{2}$ W 20%	C31	C-15759	Tubular cond. .006 mfd. 600V	C21	Mica cond. 100 mmf. 5%
R6	Carbon res. 250K ohm $\frac{1}{2}$ W 20%	C14	C-15757	Tubular cond. .1 mfd. 400V	C2, C3, C4, C5, C6, C7	Push-Button Switch
R9	Carbon res. 400 ohm $\frac{1}{2}$ W 20%	C18	C-15774	Tubular cond. .002 mfd. 400V		
			C-15756	Tubular cond. .05 mfd. 400V		

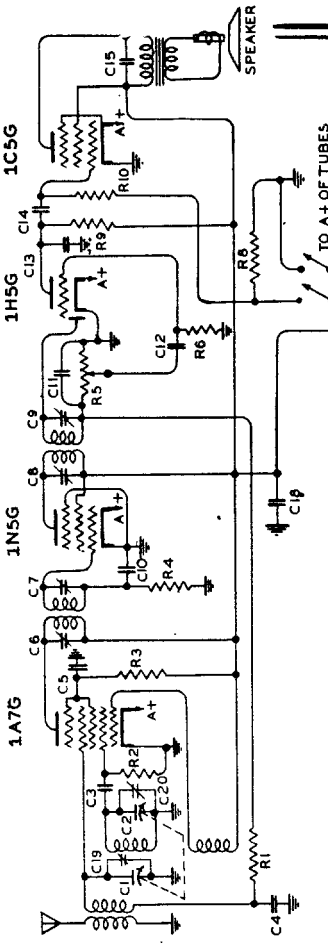


REPLACEMENT PARTS LIST

Schematic Location	Part No.	Description
R9	R-15520	500K $\frac{1}{4}$ W 20%
R10	R-15517	1 meg. $\frac{1}{4}$ W 20%
R8	R-72	600 ohms $\frac{1}{4}$ W 20%
R7	R-15523	200K $\frac{1}{4}$ W 20%
R6	R-15559	3 meg. $\frac{1}{4}$ W 20%
k3	R-44	.70K $\frac{1}{4}$ W 10%
R1, R4	R-15500	2 meg $\frac{1}{4}$ W 20%
R5	Y-VC-26	Volume Control
C19	C-15752	.05 mfd. 200V
C10, C12, C14	C-15763	.01 mfd. 200V
C15	C25	.006 mfd. 400V
C3, C11, C13	CM-15918	100 mmf. Type 'O' Mica
C1, C2	Y-GV-26	Variable Condenser
C6, C7, C8, C9	Y-CT-2	I. F. Trimmer condenser
C18	CE-35	8 n.f.d. 150V Electrolytic

MAJESTIC RADIO Model 419-B

TUBE LOCATION CHART

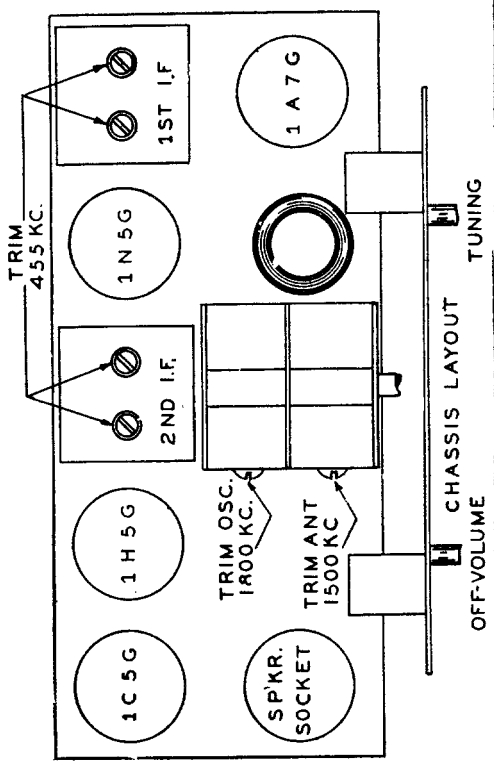

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS





The Midwest Radio Corp.
Model 8 AC - 1939

68

<p>C56 Power Cord C21 3 Gang Trimmer C226 I.F. Pad C232 Osc. Pad C240 Dual Dry-20-20 C280 100 mfd 100 V. C283 20000 " " " C287 500 " " " C289 200 " " " C290 60 " " " C291 250 " dual C301 .01 mfd. 200 V. C302 .05 " " " C303 .25 " " " C311 10 " 4.00 V C314 .05 " " " C343 2 Gang Variable C379 Tuning Shaft C401 Cord Belt D5 Dial Disk E6 Escutcheon E16 Eye Escutcheon E33 Eye Bracket</p>	<p>E34 Eye Clamp E35 Eye Socket K4 P. Button Key K24 1 Inch Knob P46 Pilot Light 6-8 R12 500 Ohm $\frac{1}{2}$ W. R15 1000 " " " R17 250 M. " " " R18 500 M. " " " R19 100 M. " " " R21 500 M. " " " R22 1 Meg. " " " R72 15 M. " 1 W. S302 Speaker 6" S319 Tonion Spring S333 Pointer Assembly S407 Band Switch S445 Tone Switch T66 Power Transformer T164 121 F. " " T163 211 F. " " C202 300 Mfd. Nice C231 Osc. Pad</p>
---	--


No Signal, Volume Control Turned Off.
Line Voltage - 117 Volts, 60 Cycles.
Meter Used - 20,000 Ohms per Volt.

TUBE	PLATE	SCREEN	SUPR.	GRID	HEATS
6AG Converter	234	75	182	3	6.3
6K7 I.F. Ampl.	237	75	0	0	6.3
6M6 Deflector	0	0	0	0	6.3
6R5 1A4 F.	21			11.5	6.3
6R5 Driver	242			0	6.3
6AC3 Output	252			0	6.3
6G5 Eye Tube	242			0	6.3
60 Rectifier	300	AC.	282	DC.	5.0

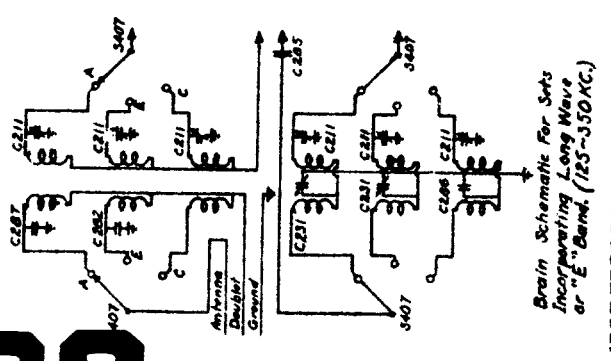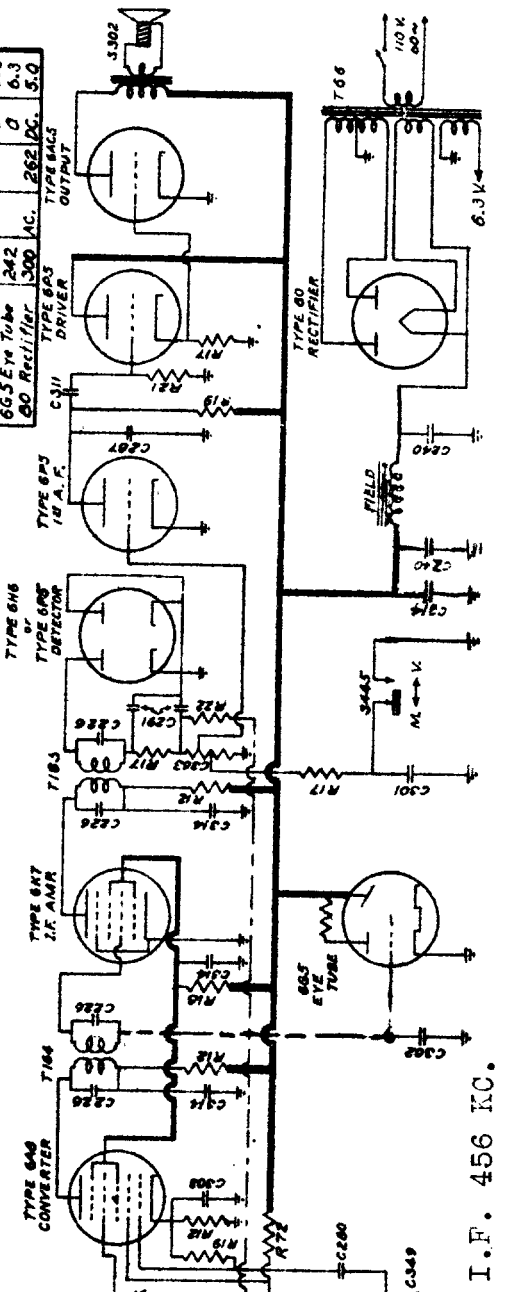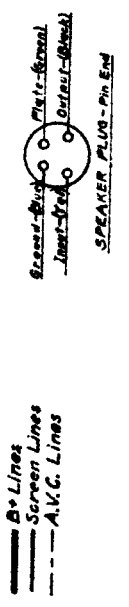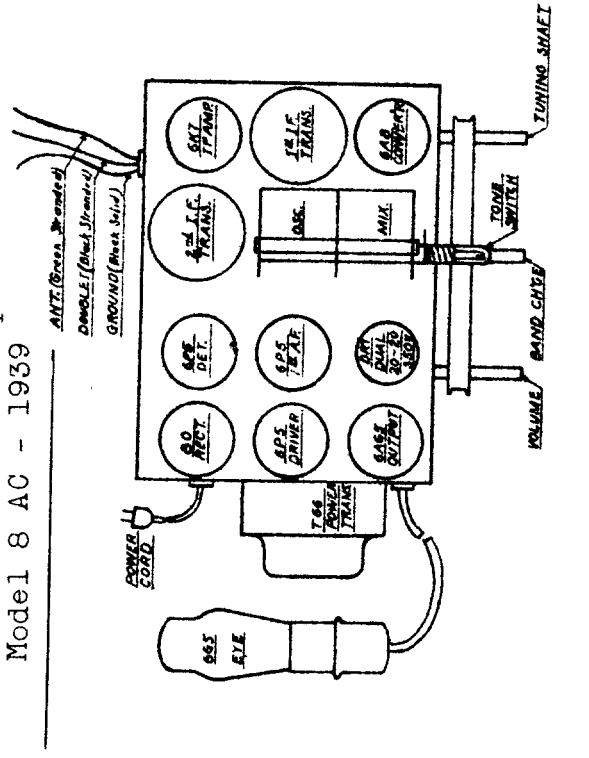

Standard Brain Below Incorporates Puller Band, 1.7-3.5 MC.

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

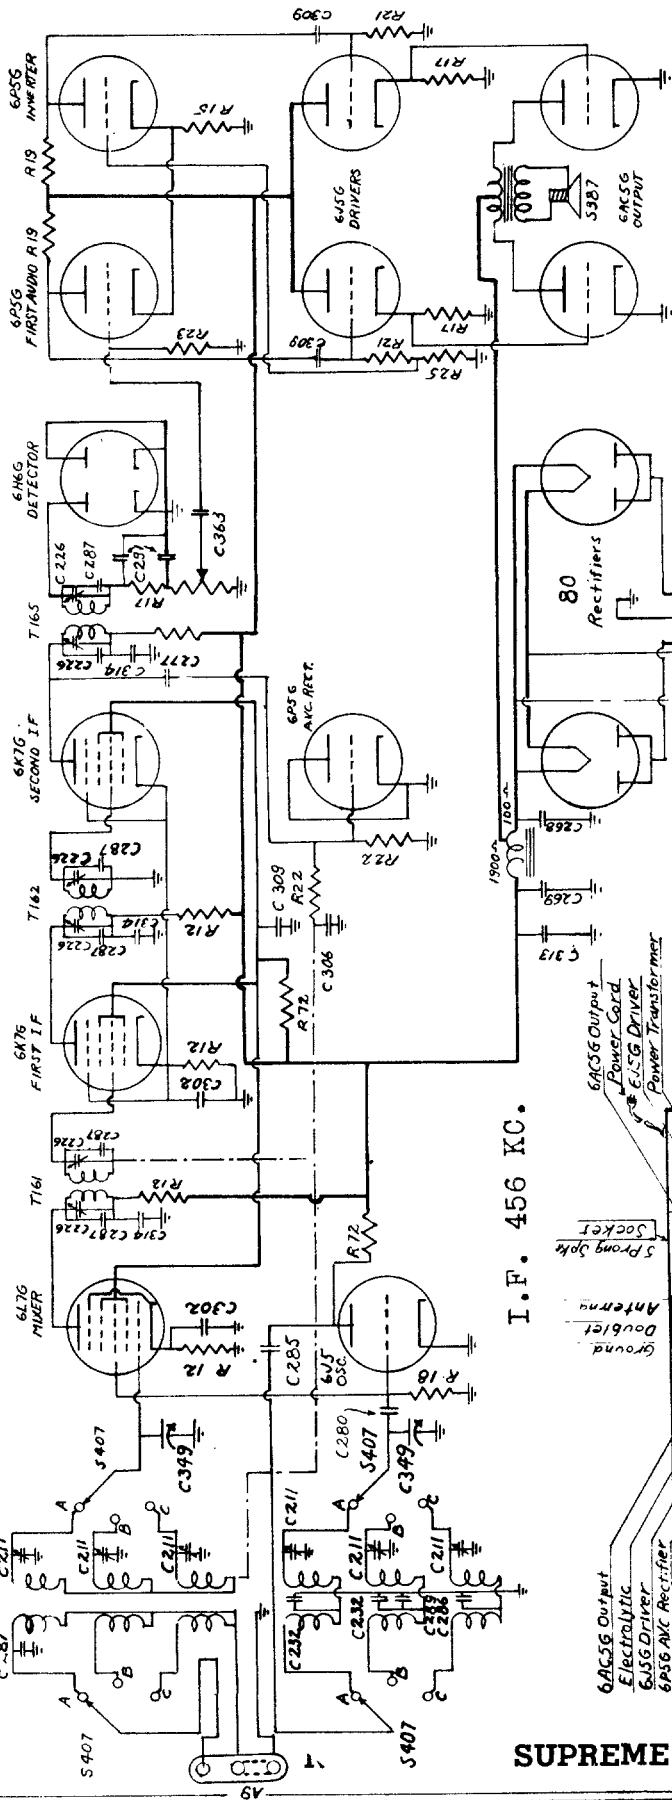

I. F. 456 KC.

R12	5000 Ohm 1/2 Watt
R19	100M
R21	300M
R22	1 Meg Ohm
R23	3
R25	40M Ohm 1/2 W
R27	15M
R28	15M
R29	Spring Bolt 1/4"
R30	Speaker B
R31	Pointer
R32	Coil Switch
R33	Power Trans.
R34	1/2 I.F. Trans.
R35	25
R36	25
R37	2000MMFD
R38	100


A9	Antenna Strip
C26	Cable Plug (M)
C211	36 Gang Trimmer
C226	I.F. Padder
C232	Osc. Padder
C265	24-MFD 350V
C269	40-MFD 350V
C291	250Mica Dual
C277	25MMFD Mica
C284	3000
C287	200
C389	1200
C302	0.05MFD 200V
C309	0.02MFD 400V
C313	25
C314	0.5
C399	2 Gang Variable
C363	Control Volume NS
C401	Fish Line Cord
K29	Knob 1 inch
P46	Pilot Light 6.3V
R11	200 Ohm 1/2 Watt
R12	500
R15	5000
R17	25000

OPERATING VOLTAGES

No Signal, Volume Control Turned Off

Line Voltage 117 Volts 60 Cycles
Meter Used 2000 Ohms per Volt

TUBE	PLATE	SCREEN SUP.	CATH. HEATER
6L7 Mixer	245	85	2.4 6.0
6V5 Osc.	140	0	6.0
6K7 1st IF	245	85	4.4 6.0
6K7 2nd IF	245	85	4.4 6.0
6P5 AVC Rect.	0	0	6.0
6H6 2nd DET.	0	0	6.0
6P5 1st AF	150	0	9.2 6.0
6V5 Drivers	245	1C	6.0
6P5 Inverter	150	0	9.2 6.0
6AC5 Drivers	335	0	6.0
80 Rectifiers	340 (AC)	0	350 4.8

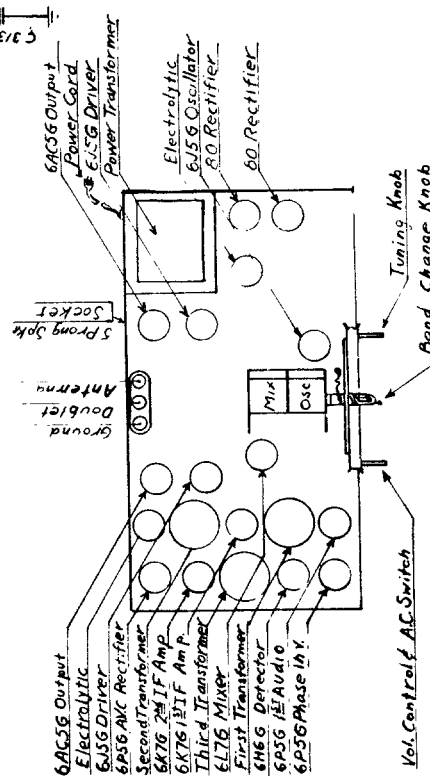

In long wave sets,
the coverage of B
Band is from 125 to
350 KC.

Model 14-Z-9
Midwest Radio Corp.
909 Broadway
Cincinnati, Ohio

SUPREME PUBLICATIONS



MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

The Midwest Radio Corp.

Model 17-'39


R23	20M Ohms, 1/2W.
R24	25M Ohms, 1/2W.
R25	50M Ohms, 1/2W.
R26	100M Ohms, 1/2W.
R27	200M Ohms, 1/2W.
R28	500M Ohms, 1/2W.
R29	1000M Ohms, 1/2W.
R30	1M Ohms, 1/2W.
R31	2M Ohms, 1/2W.
R32	5M Ohms, 1/2W.
R33	10M Ohms, 1/2W.
R34	20M Ohms, 1/2W.
R35	50M Ohms, 1/2W.
R36	100M Ohms, 1/2W.
R37	200M Ohms, 1/2W.
R38	500M Ohms, 1/2W.
R39	1000M Ohms, 1/2W.
R40	1M Ohms, 1/2W.
R41	2M Ohms, 1/2W.
R42	5M Ohms, 1/2W.
R43	10M Ohms, 1/2W.
R44	20M Ohms, 1/2W.
R45	50M Ohms, 1/2W.
R46	100M Ohms, 1/2W.
R47	200M Ohms, 1/2W.
R48	500M Ohms, 1/2W.
R49	1000M Ohms, 1/2W.
R50	1M Ohms, 1/2W.
R51	2M Ohms, 1/2W.
R52	5M Ohms, 1/2W.
R53	10M Ohms, 1/2W.
R54	20M Ohms, 1/2W.
R55	50M Ohms, 1/2W.
R56	100M Ohms, 1/2W.
R57	200M Ohms, 1/2W.
R58	500M Ohms, 1/2W.
R59	1000M Ohms, 1/2W.
R60	1M Ohms, 1/2W.
R61	2M Ohms, 1/2W.
R62	5M Ohms, 1/2W.
R63	10M Ohms, 1/2W.
R64	20M Ohms, 1/2W.
R65	50M Ohms, 1/2W.
R66	100M Ohms, 1/2W.
R67	200M Ohms, 1/2W.
R68	500M Ohms, 1/2W.
R69	1000M Ohms, 1/2W.
R70	1M Ohms, 1/2W.

C33	33MFD 400V.
C34	33MFD 250V.
C35	33MFD 150V.
C36	33MFD 100V.
C37	33MFD 50V.
C38	33MFD 25V.
C39	33MFD 12.5V.
C40	33MFD 6.25V.
C41	33MFD 3.125V.
C42	33MFD 1.5625V.
C43	33MFD .78125V.
C44	33MFD .390625V.
C45	33MFD .1953125V.
C46	33MFD .09765625V.
C47	33MFD .048828125V.
C48	33MFD .0244140625V.
C49	33MFD .01220703125V.
C50	33MFD .006103515625V.
C51	33MFD .0030517578125V.
C52	33MFD .00152587890625V.
C53	33MFD .000762939453125V.
C54	33MFD .0003814697265625V.
C55	33MFD .00019073486328125V.
C56	33MFD .000095367431640625V.
C57	33MFD .0000476837158203125V.
C58	33MFD .00002384185791015625V.
C59	33MFD .000011920928955078125V.
C60	33MFD .0000059604644775390625V.
C61	33MFD .00000298023223876953125V.
C62	33MFD .000001490116119384765625V.
C63	33MFD .0000007450580596923828125V.
C64	33MFD .00000037252902984619140625V.
C65	33MFD .000000186264514923070703125V.
C66	33MFD .0000000931322574611535390625V.
C67	33MFD .000000046566128730576953125V.
C68	33MFD .0000000232830643652897765625V.
C69	33MFD .00000001164153218264488815625V.
C70	33MFD .000000005820766091312244440625V.

A9	Antenna Strip
B26	Brush Holder
B27	Brush Clip
B28	Brush Contact
C26	Cable Plug, A.C.
F16	Tone-1/4" Trans.
G15	Diode
G16	Diode
G17	Diode
G18	Diode
G19	Diode
G20	Diode
G21	Diode
G22	Diode
G23	Diode
G24	Diode
G25	Diode
G26	Diode
G27	Diode
G28	Diode
G29	Diode
G30	Diode
G31	Diode
G32	Diode
G33	Diode
G34	Diode
G35	Diode
G36	Diode
G37	Diode
G38	Diode
G39	Diode
G40	Diode
G41	Diode
G42	Diode
G43	Diode
G44	Diode
G45	Diode
G46	Diode
G47	Diode
G48	Diode
G49	Diode
G50	Diode
G51	Diode
G52	Diode
G53	Diode
G54	Diode
G55	Diode
G56	Diode
G57	Diode
G58	Diode
G59	Diode
G60	Diode


Tube	Plate	Screen	Control	Grid	Beam
6K7 R.F.	245	85	2.4	2.4	6.0
6L7 Mixer	245	85	2.4	2.4	6.0
6V5 Osc.	140	0	0	0	0
6J7 Control	200	85	4.4	4.4	6.0
6K7 2nd I.F.	245	85	4.4	4.4	6.0
6V5 A.C. Rect.	0	0	0	0	0
6V6 1st A.F.	150	0	0	0	6.0
6P5 Inverter	150	0	0	0	3.2
6V3 Driver	245	0	0	0	10
6X3 Outputs	335	0	0	0	6.0
60 Rectifiers	340	0	0	0	3.50
6P5 Lifetime	340	0	0	0	6.0

OPERATING VOLTAGES	
No Signal	Volume Control Turned Off.
Meter Switch In Off Position.	Line Voltage 117Volts, 60 Cycles.
Meter Used - 20000 Ohms per Volt.	

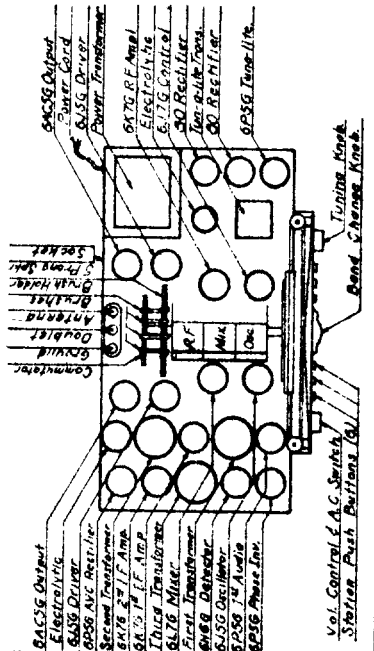

70


COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

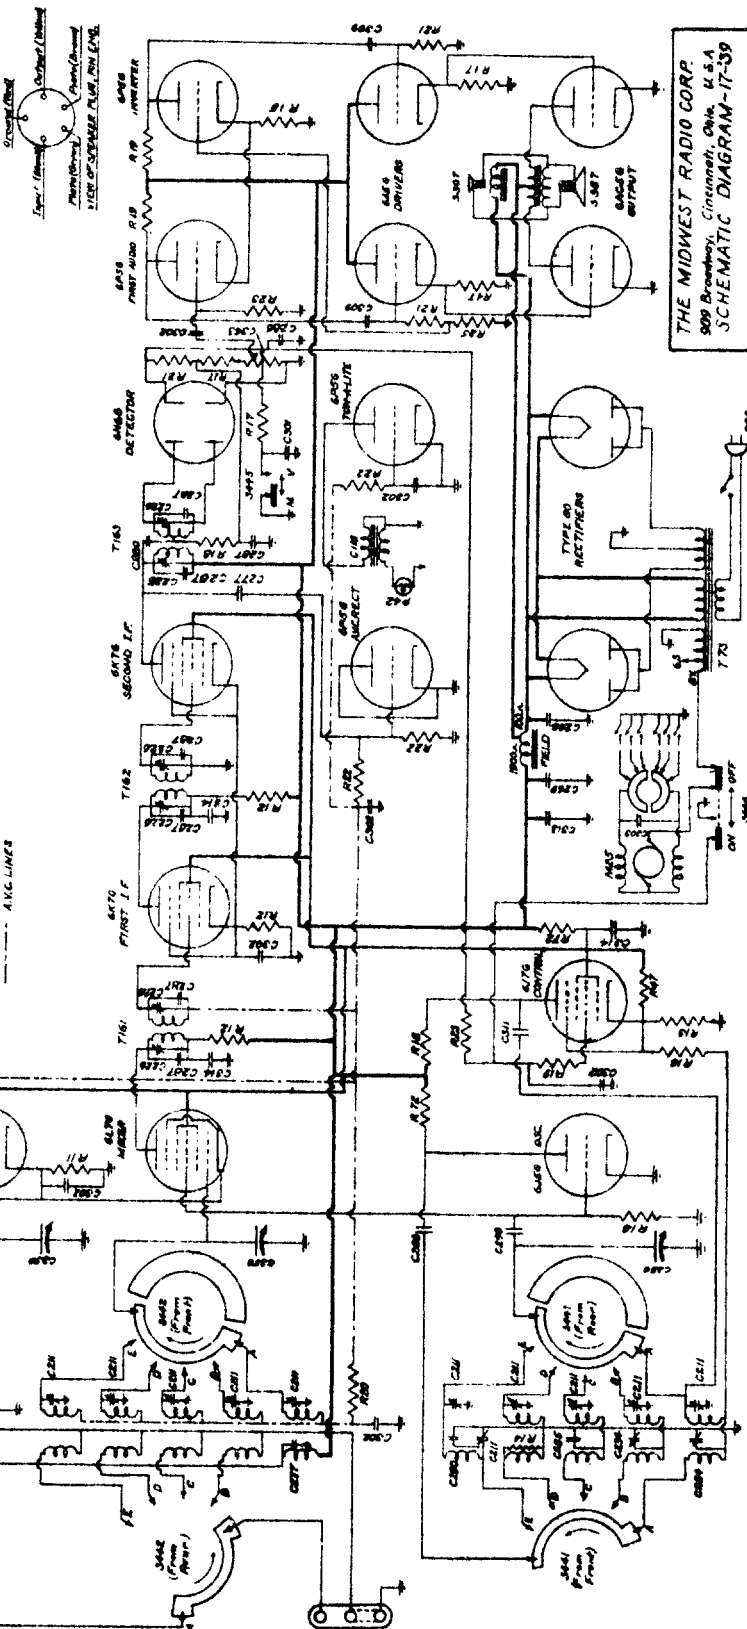

THE MIDWEST RADIO CORP.
909 Broadway, Cincinnati, Ohio, U.S.A.
SCHEMATIC DIAGRAM-17-'39

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

The Midwest Radio Corp. Models 12 & 17 1939 Trimmers and Padders

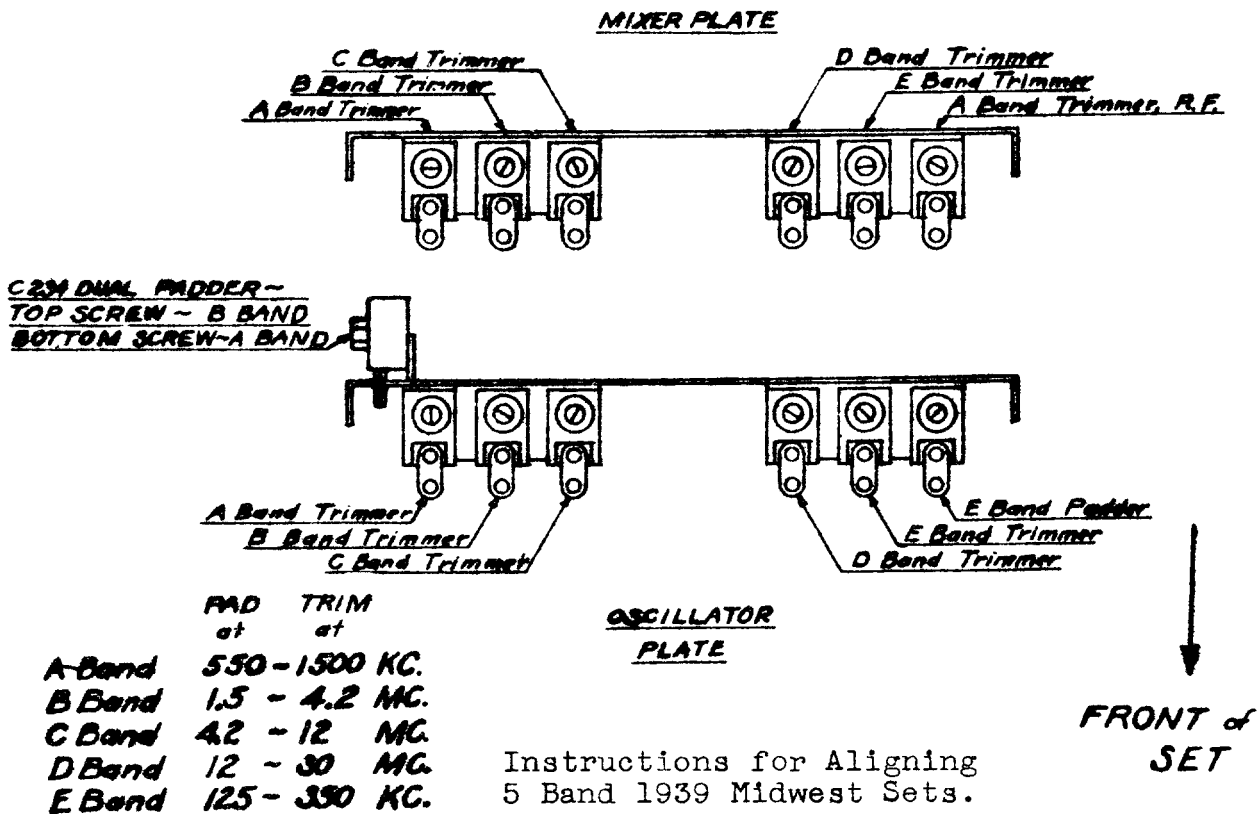

Instructions for Aligning
5 Band 1939 Midwest Sets.

Remove the oscillator tube. Peak I.F.'s at 456 KC. for maximum gain, while AFC is off. Receive a signal from generator, turn on AFC. If tuning is disturbed, realign secondary side of AFC transformer. Re-adjust trimmer across the primary of the AFC transformer until maximum AFC voltage is developed. May be measured with voltmeter from cathode of 6J7 AFC control tube to ground.

Band "A" 550 to 1500 KC. Padded at 550 KC. and trimmed at 1400 KC. R.F. and mixer trimmers should be adjusted at 1400 KC.

Band "B" 1.5 to 4.2 MC. This band should be padded at 1.7 MC., and trimmed at 4.0 MC.

Band "C" 4.2 to 12.0 MC. This band has a fixed padder and should be trimmed 11.0 MC.

Band "D" covers from 12 MC to 30 MC. This band has a fixed padder and should be trimmed at 29 MC. Adjust R.F. and mixer trimmers for maximum gain at 29 MC.

Band "E" covers from 125 to 350 KC. (long wave). This band should be padded at 135 KC. and trimmed at 340 KC.


A dummy antenna, consisting of a 200 ohm resistor and 10 mmfd. condenser in parallel, should be connected in series with output of signal generator.

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS


71

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

Mission Bell Radio Mfg Co., 831 Venice Blvd., Los Angeles, Calif.

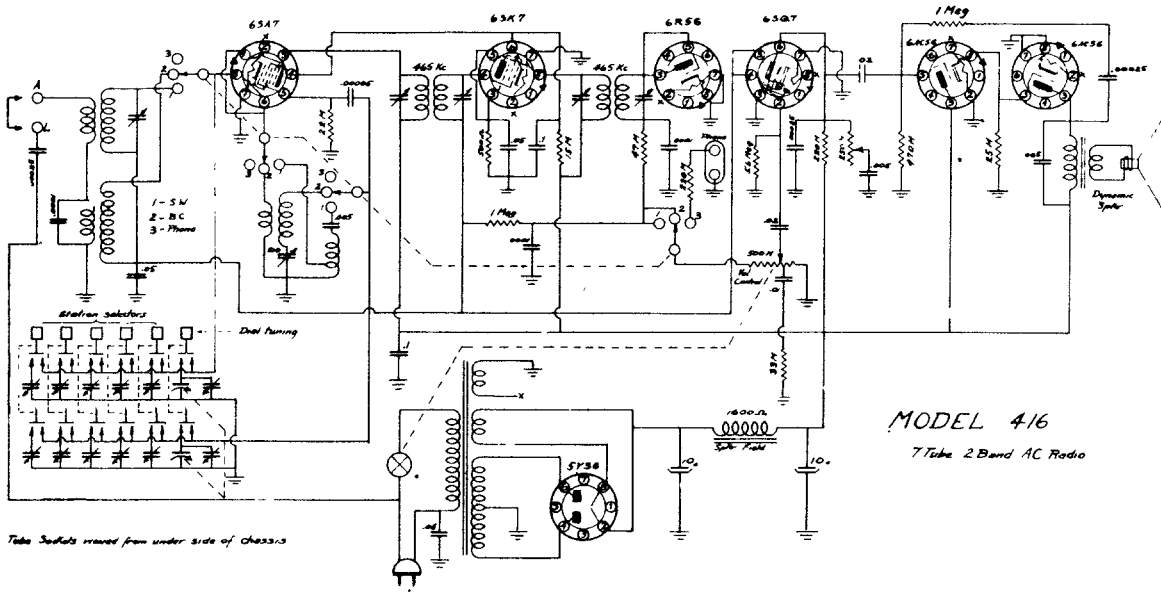


MODEL 416
7 Tube 2 Band AC Radio

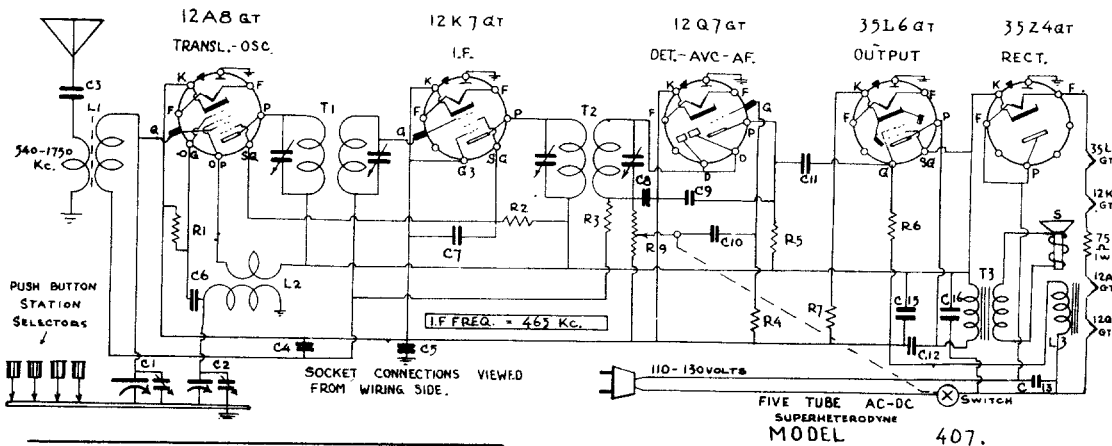

FIVE TUBE AC-DC SUPERHETERODYNE
MODEL 407.


IDENTIFICATION NO. 113-407

PARTS LIST		PARTS LIST	
SCHEMATIC LOCATION	PART NUMBER DESCRIPTION	SCHEMATIC LOCATION	PART NUMBER DESCRIPTION
T1	113394071 Coil-Input I.F.	C1	Cond. .005 MFD 500V
T2	113394072 Coil-Output I.F.	C2	" .25 " 200V
L1	113384073 Coil-Antenna	C4	" .0001 " MFD
L2	113384074 Coil-Oscillator	C5, C9	" .0005 " "
R9	113244079 Control Volume	R1	Resistor 57M Ohm 1/2W
	SOME One with Switch	R2	" 2M " 1/2W
T3	113584072A Speaker 5" Dynamic	R3	" 2.2 Meg 1/2W
L3	113124072B Transformer	R4	" 5.6 " 1/2W
	Field Coil	R5	" 220M Ohm 1/2W
	1.50	R6	" 150 " 1/2
	1.00	R7	" 150 " 1/2
	2.00	R8	" 150 " 1/2
	1.25		
C1, C2	113244075 Cond. - Variable	113184078	Socket-4 Prong
	Grid-Cap	113394076	Push Button Selector
	2.00	Assmbly	
C3	113244073 Cond. - Electrolytic	113454073	Dial Drive Assembly
	20 MFD. 150 Volt	113994075	Dial-Calibrated Knob
	1.50	113444072	Switchman (Push Button)
C6	113244074 Cond. - Electrolytic	113394074	Indicator Tabs for Push Button
	40 MFD. 150 Volt		
	1.45		
C1, C7	Cond. - .05 MFD 500V	113394077	Knob-Volume Control
	.15		
C13	" .05 " 200V		
C14	" .02 " 600V		
C10, C11	" .01 " 200V		

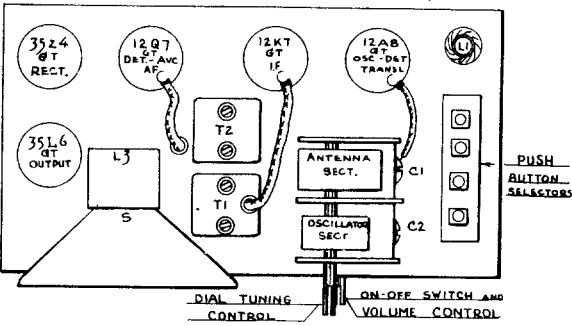


ARROWS INDICATE CONNECTIONS PRESENT IN BAND SWITCH WHEN IN POSITION SHOWN.

POSITION 1	POSITION 2	POSITION 3
STANDARD WAVE	B	SHORT WAVE C
BACK SECT. 1	1	1
FRONT SECT. 1	2	2
BACK SECT. 2	3	3
FRONT SECT. 2	4	4
BACK SECT. 2	5	5
FRONT SECT. 2	6	6
BACK SECT. 2	7	7
FRONT SECT. 2	8	8
BACK SECT. 2	9	9
FRONT SECT. 2	10	10
BACK SECT. 2	11	11
FRONT SECT. 2	12	12

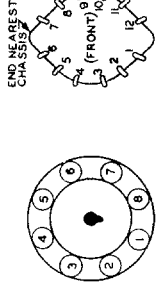


- TUBE ELEMENT LEGEND**
- G2 - SCREEN GRID
 - G3 - SUPPRESSOR GRID
 - DP - DIODE PLATE
 - T.A. - TARGET
 - HK - HEATER AND CATHODE
 - SH - SHELL
 - H - HEATER
 - K - CATHODE
 - P - PLATE
 - G1 - CONTROL GRID

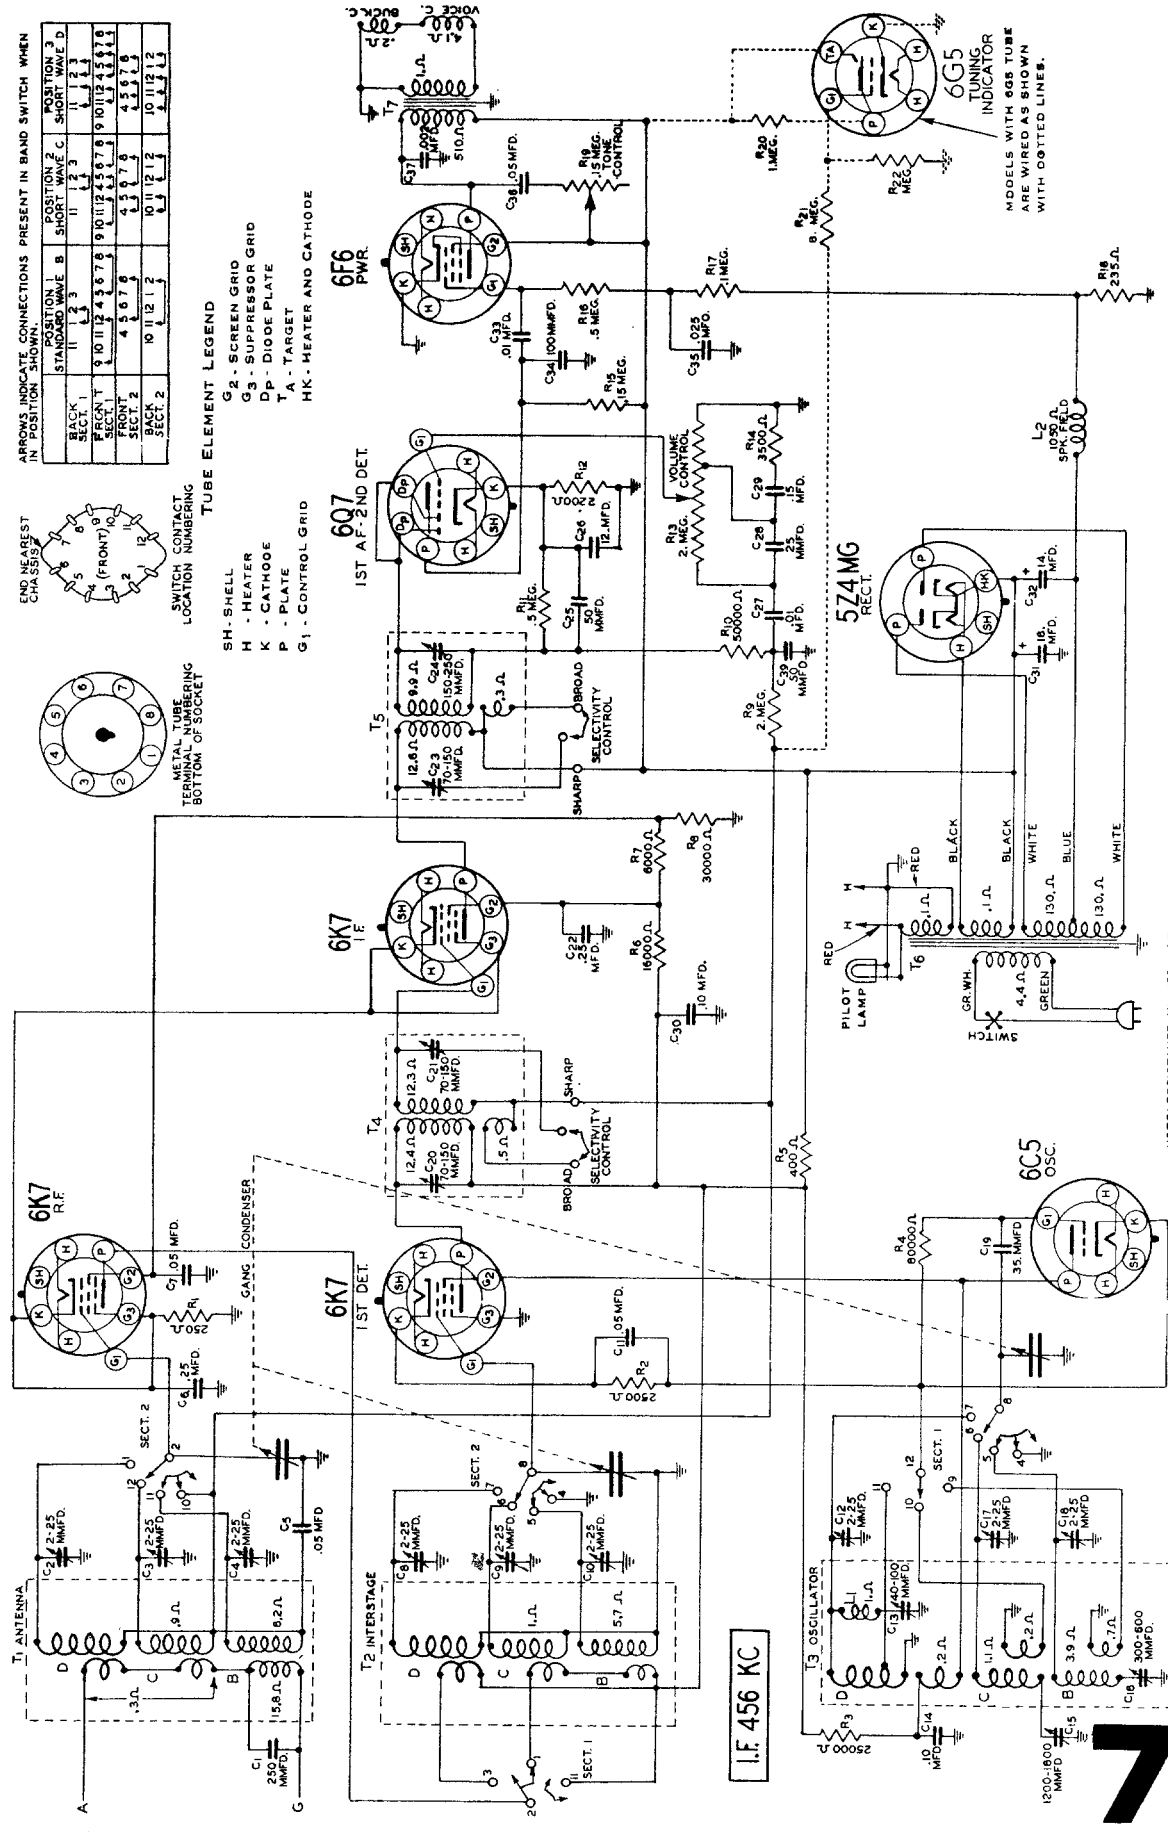

Montgomery Ward Models 62-226, 62-228, 62-259, 62-308, 62-318, 62-408, 62-418

73

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

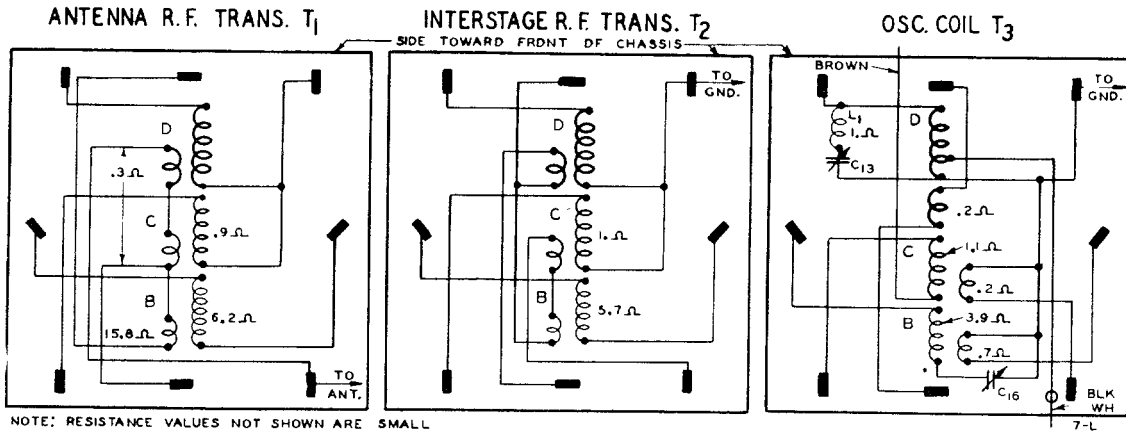

R. F. and Oscillator Coil Base Terminal Arrangement and D. C. Resistance of Windings

Line Voltage: 115
Volume Control: Maximum

Antenna Shorted to Ground
Position of Band Switch: Standard Wave

TUBE	FUNCTION	VOLTAGE BETWEEN SOCKET PRONGS AND GROUND (Unless otherwise indicated)							
		Prong No. 1	Prong No. 2	Prong No. 3	Prong No. 4	Prong No. 5	Prong No. 6	Prong No. 7	Prong No. 8
6K7	RF	0	6.1 ⁽¹⁾	260	100	4.0	6.1 ⁽¹⁾	4.0
6K7	1st Det.	0	6.1 ⁽¹⁾	260	118	0	6.1 ⁽¹⁾	9.0
6C5	Osc.	0	6.1 ⁽¹⁾	120	...	0	6.1 ⁽¹⁾	0
6K7	I F.	0	6.1 ⁽¹⁾	260	138	4.0	6.1 ⁽¹⁾	4.0
6Q7	1st A.F.—2nd Det.	0	6.1 ⁽¹⁾	105	0	0	6.1 ⁽¹⁾	1.4
6F6	Power Amp.	0	6.1 ⁽¹⁾	238	260	18	6.1 ⁽¹⁾	0
5Z4MG	Rect.	0	4.9 ⁽²⁾	...	680 ⁽³⁾	...	680 ⁽³⁾	4.9 ⁽²⁾
6E5	Tuning Indicator	Plate to Ground 30 ⁽⁴⁾		Target to Ground 270		Cathode to Ground 0		Across Heater 6.1 A.C.	

(1) A.C. voltage as read across heater terminals 2 and 7.
(2) A.C. voltage as read across heater terminals 2 and 8.


(3) A.C. voltage as read across terminals 4 and 6.
(4) As read with 500,000 ohm meter.

The voltage readings are taken with a voltmeter having a resistance of 1000 ohms per volt.

The standard metal tube socket terminal numbering system (bottom of socket) is shown in Fig. 5



MONTGOMERY WARD

62-226, 62-228, 62-259, 62-308,
62-318, 62-408, 62-418

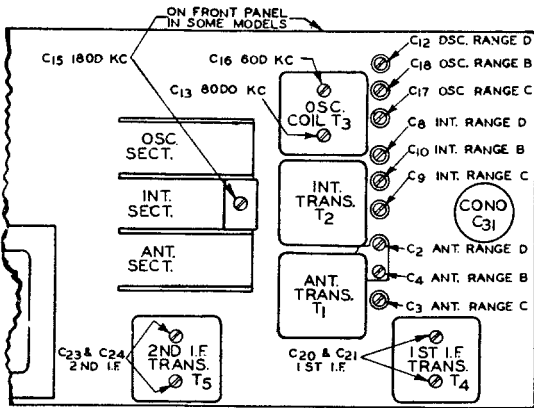


Location of Trimmers

Fig. 5—Metal tube terminal numbering (bottom of socket)

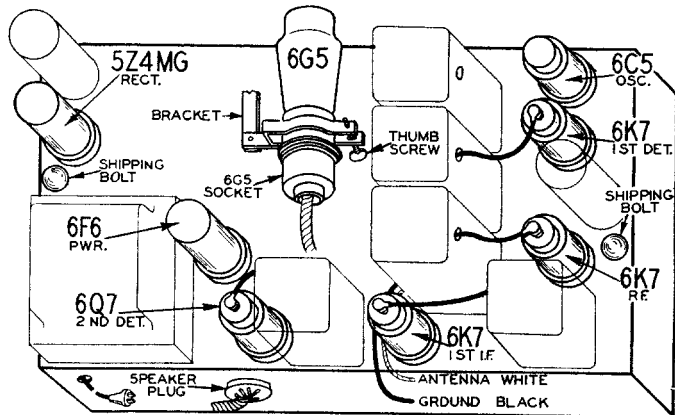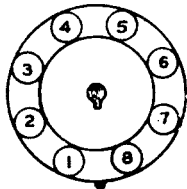

WARDS AIRLINE RADIO

MODELS 62-350, 62-351 and 62-352

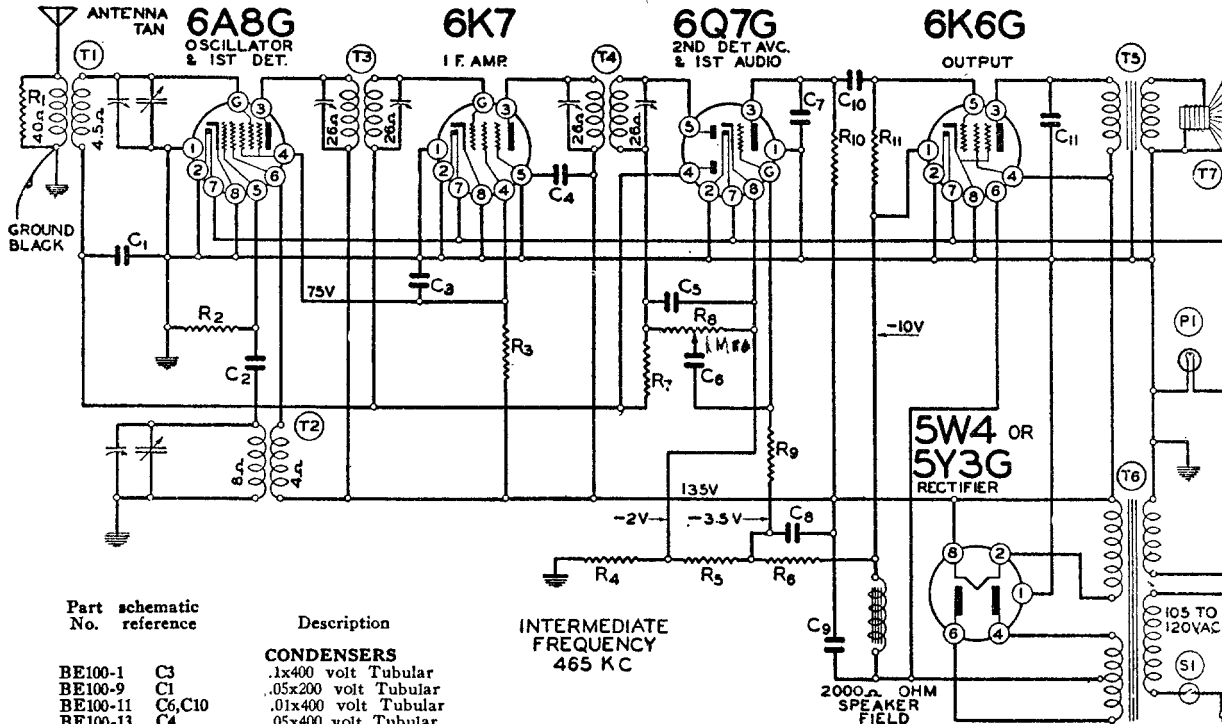



Part schematic
No. reference

Description


INTERMEDIATE
FREQUENCY
465 KC

- CONDENSERS**
- BE100-1 C3 .1x400 volt Tubular
 - BE100-9 C1 .05x200 volt Tubular
 - BE100-11 C6,C10 .01x400 volt Tubular
 - BE100-13 C4 .05x400 volt Tubular
 - BE100-19 C11 .006x600 volt Tubular
 - BE119-47C C8,C9 Dual 5 Mfd x 250 w. v. Filter Condenser
 - BE129-2 C7 .0005 Mica Type 20%
 - BE129-5 C5 .0001 Mica Type 20%
 - BE129-12 C2 .00025 Mica Type 20%
- RESISTORS**
- BE106-35 R4,R5,R6 65 Ohm, 45 Ohm, 220 Ohm Metal Clad Strip
 - BE130-9 R10 200M Ohm-1/3 watt-20% Carbon
 - BE130-12 R2 50M Ohm-1/3 watt-20% Carbon
 - BE130-21 R1 20M Ohm-1/3 watt-20% Carbon
 - BE130-118 R11 600M Ohm-1/3 watt-20% Carbon
 - BE130-149 R3 15M Ohm-1/3 watt-20% Carbon
 - BE130-170 R7,R9 3 Megohm-1/3 watt-20% Carbon
- COILS**
- BE108-82E T3 Input I.F. Coil Assembly Complete with can
 - BE108-83E T4 Output I.F. Coil Assembly Complete with can
 - BE110-73 T2 Oscillator Coil Assembly Complete
 - BE111-92 T1 Antenna Coil Assembly Complete

- TRANSFORMERS**
- BE104-100E T6 Power Transformer 50/60 Cycle 105-120 volt
 - BE104-108E Power Transformer 25 cycle 105-120 volt
 - BE104-104E Universal Transformer 25 cycle primary
 - BE104-99E Universal Transformer 40 cycle primary
- SPEAKER**
- BE114-108A & B T7 Five inch Dynamic (2000 ohm field) Output Transformer for Speaker
- MISCELLANEOUS**
- BE101-106 R8,S1 Volume Control and Switch (1 megohm)
 - BE102-67 C Two Gang Variable Condenser

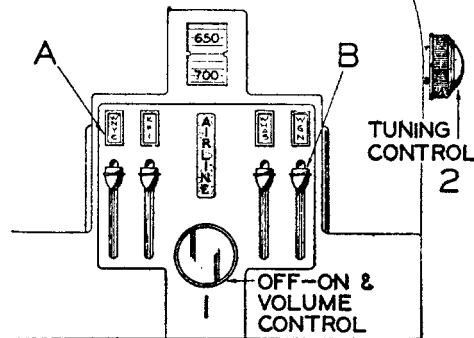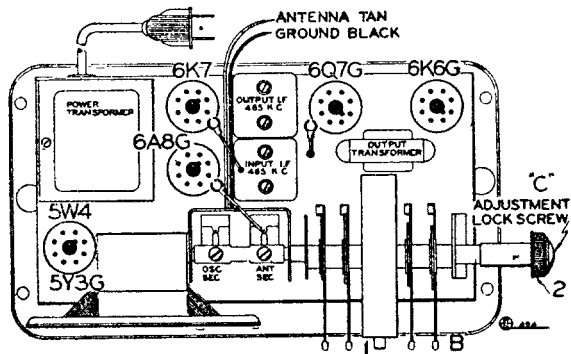

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

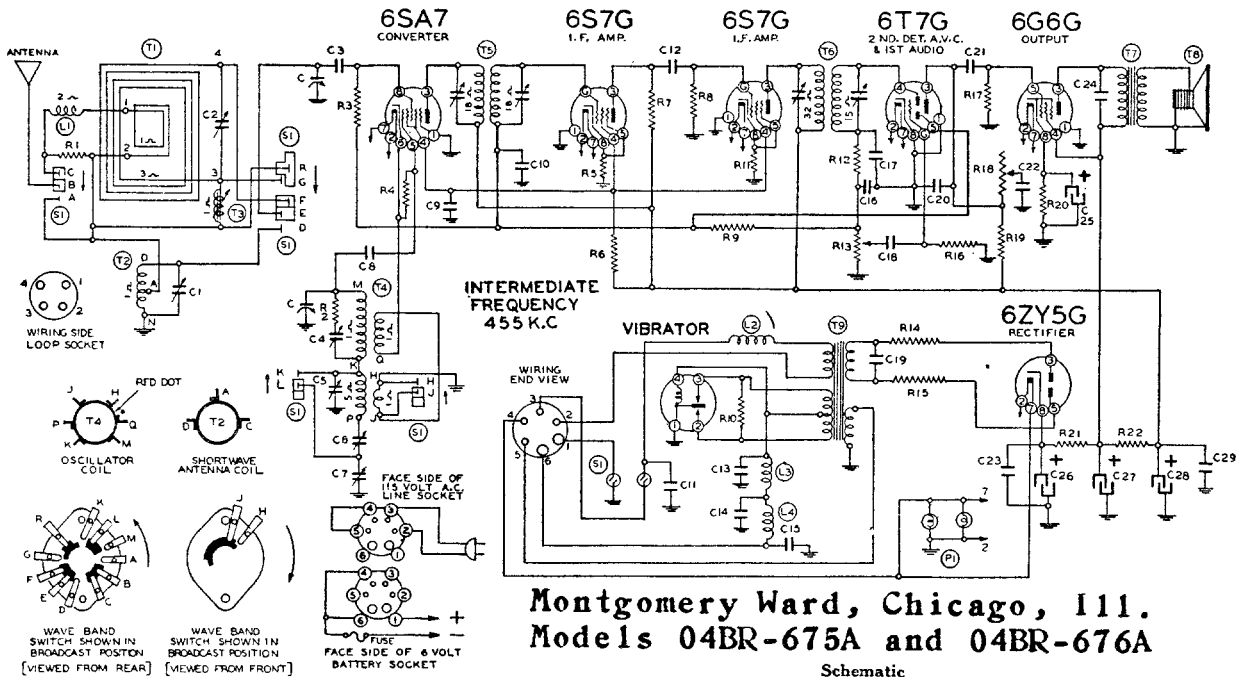

Montgomery Ward, Chicago, Ill.
Models 04BR-675A and 04BR-676A

Schematic
Diagram Part
Ref. No. No.

Description


RESISTORS

R1	BE130193	3M ohm— $\frac{1}{2}$ w.
R2	BE130276	10 ohm— $\frac{1}{2}$ w.
R3	BE13019	1 megohm— $\frac{1}{2}$ w.
R4	BE130236	30M ohm— $\frac{1}{2}$ w.
R5	BE13070	500 ohm— $\frac{1}{2}$ w.
R6	BE13067	9M ohm— $\frac{1}{2}$ w.
R7	BE130157	12M ohm— $\frac{1}{2}$ w.
R8	BE13019	1 megohm— $\frac{1}{2}$ w.
R9	BE130170	3 megohm— $\frac{1}{2}$ w.
R10	BE13084	200 ohm— $\frac{1}{2}$ w.
R11	BE130192	2M ohm— $\frac{1}{2}$ w.
R12	BE13020	100M ohm— $\frac{1}{2}$ w.
R13	BE101227	Volume Control
R14	BE130233	60 ohm— $\frac{1}{2}$ w.
R15	BE130233	60 ohm— $\frac{1}{2}$ w.
R16	BE130223	10 megohm— $\frac{1}{2}$ w.
R17	BE1303	500M ohm— $\frac{1}{2}$ w.
R18	BE101228	2 megohm Tone Control
R19	BE130266	200M ohm— $\frac{1}{2}$ w.
R20	BE13079	400 ohm— $\frac{1}{2}$ w.
R21	BE130222	350 ohm— $\frac{1}{2}$ w.
R22	BE130235	1500 ohm— $\frac{1}{2}$ w.

CONDENSERS

C	BE102133	2 Gang Variable Condenser
C1	BE124116	S.W. Antenna Trimmer
C2	BE124141	B.C. Antenna Trimmer
C3	BE12921	.0002 mica
C4	BE124142	S.W. Oscillator Trimmer
C5	BE124142	B.C. Oscillator Trimmer
C6	BE124140	B.C. Pad Trimmer
C7	BE124140	S.W. Pad Trimmer
C8	BE12938	.00005 mica
C9	BE10048	.25 x 200 v.
C10	BE1009	.05 x 200 v.
C11	BE10013	.05 x 400 v.
C12	BE1292	.0005 mica
C13	BE10031	.5 x 120 v.
C14	BE10031	.5 x 120 v.
C15	BE10031	.5 x 120 v.
C16	BE129161	.0001 mica
C17	BE129161	.0001 mica
C18	BE10025	.02 x 600 v.
C19	BE10073	.008 x 1200 v.
C20	BE1292	.0005 mica
C21	BE10026	.02 x 400 v.
C22	BE100106	.004 x 600 v.
C23	BE10020	.1 x 200 v.
C24	BE100106	.004 x 600 v.
C25	BE119111	20 Mid. Lytic x 20 w.v.
C26	BE119111	40 Mid. Lytic x 200 w.v.
C27	BE119111	20 Mid. Lytic x 200 w.v.
C28	BE119111	20 Mid. Lytic x 200 w.v.
C29	BE10020	.1 x 200 v.


C4 and C5 in one unit.
C16 and C17 in one unit.
C6 and C7 in one unit.
C25, C26, C27 and C28 in one unit

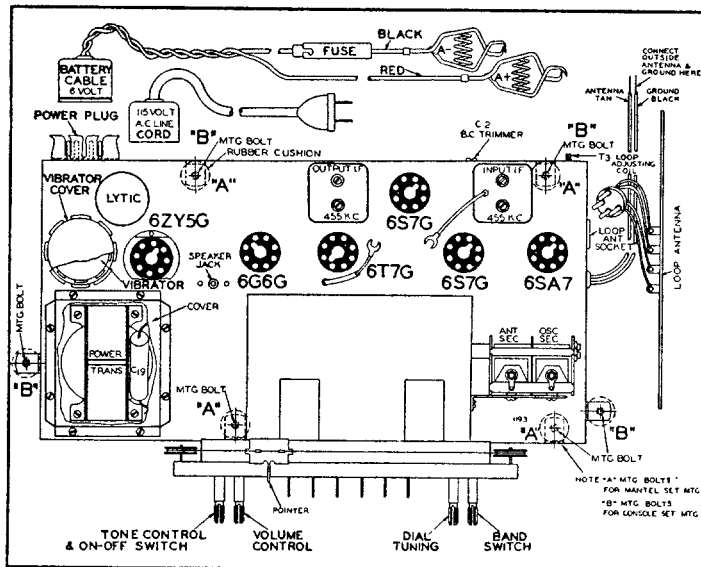

BOTTOM VIEW OF CHASSIS


VOLTAGES MEASURED WITH 1000 OHM PER VOLT VOLTMETER BETWEEN SOCKET TERMINALS AND CHASSIS LOOP PLUGGED INTO CHASSIS AND SET TUNED OFF SIGNAL SET OPERATING ON 6.3 VOLT STORAGE BATTERY

[A] CANNOT BE MEASURED WITH VOLTMETER.
[B] OSCILLATOR VOLTAGE MEASURED WITH R.F. CHOKE IN SERIES WITH VOLTMETER LEAD

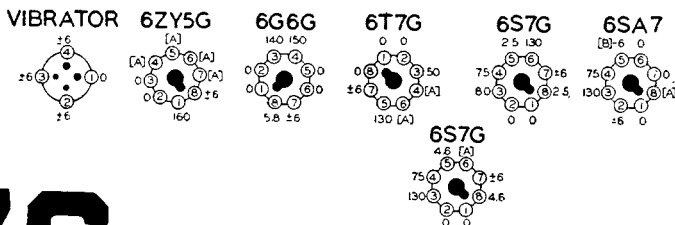

REAR OF CHASSIS

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

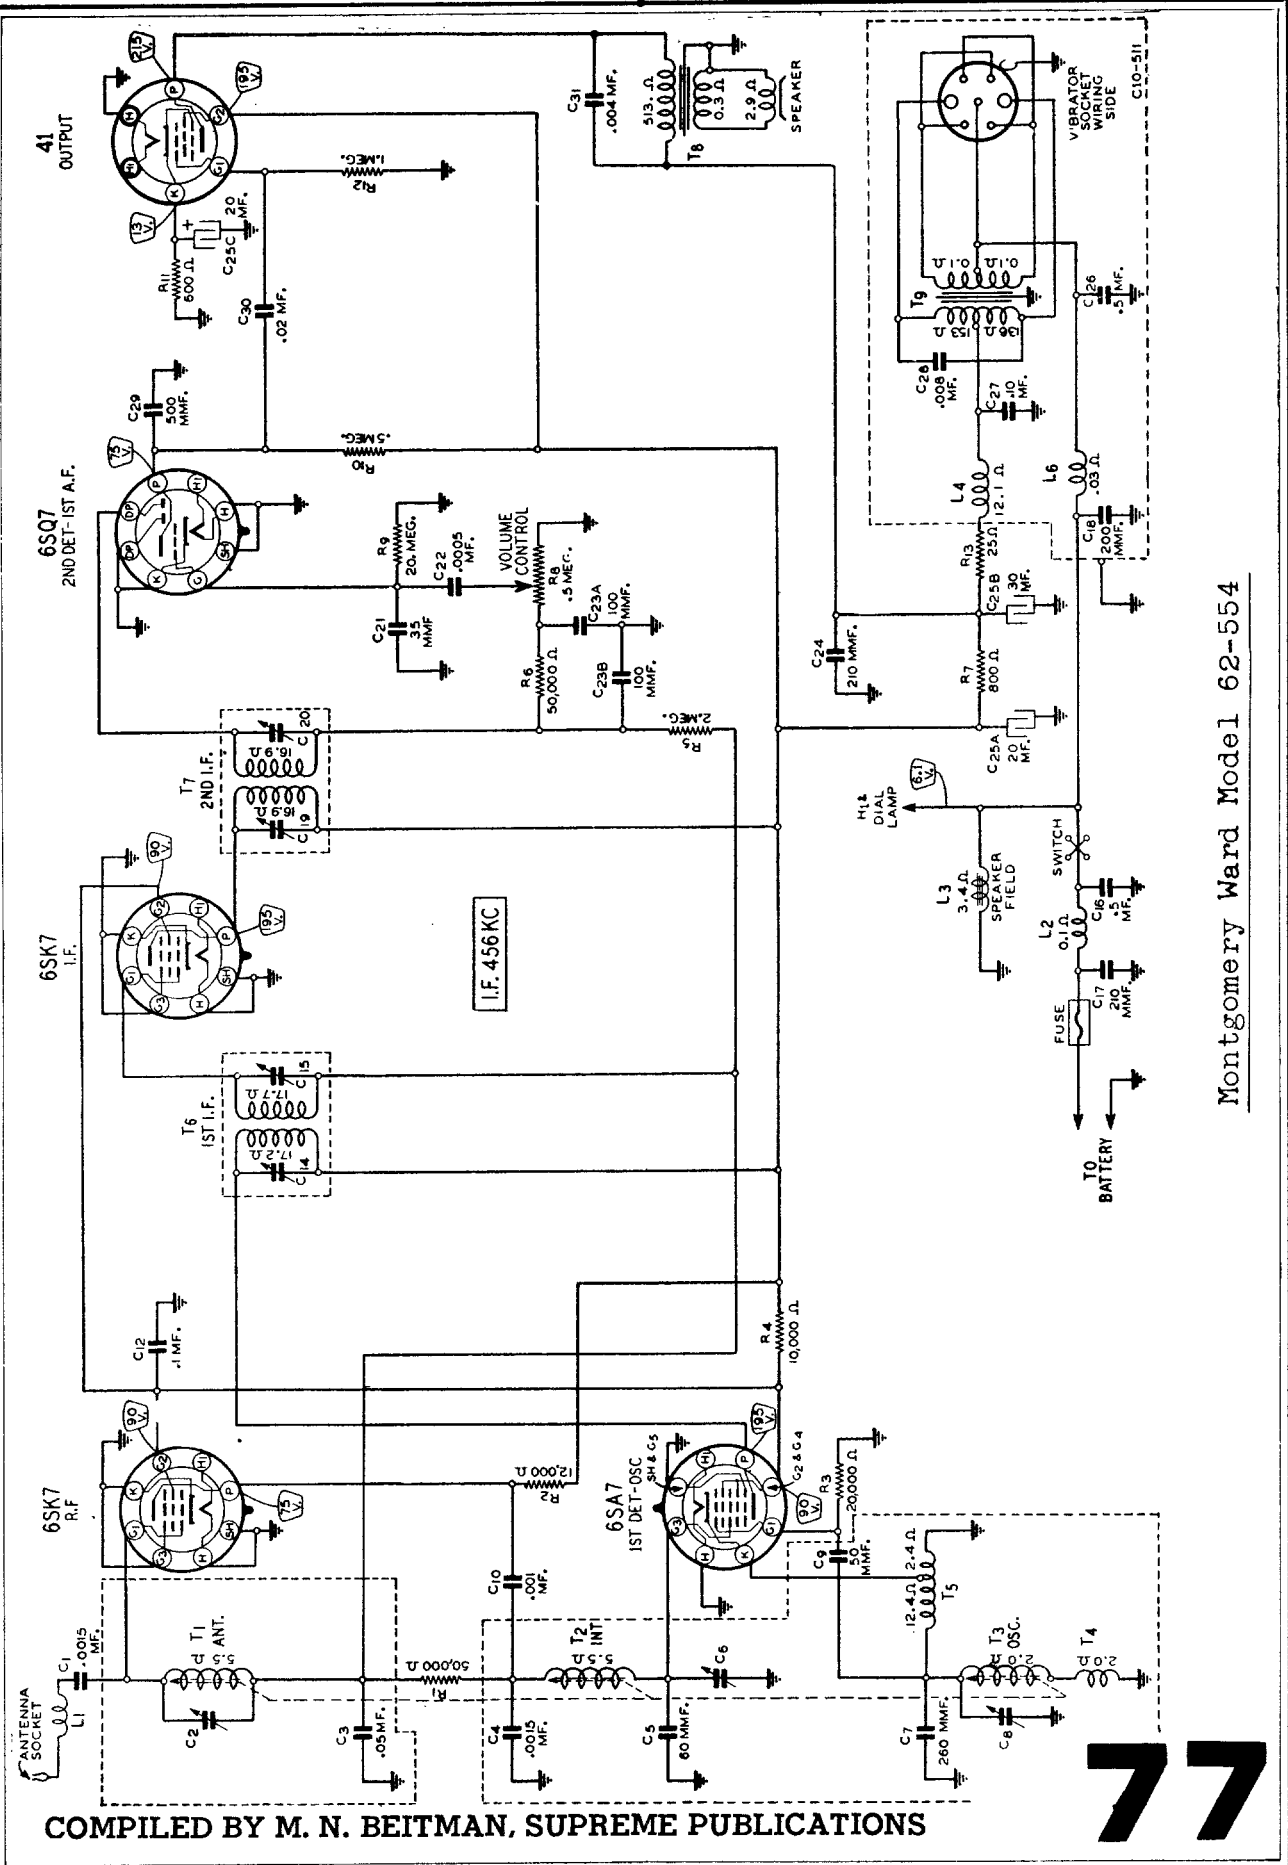

Montgomery Ward Model 62-554



COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS



MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

Montgomery Ward Models
93BR713A and 62-713-A.

78

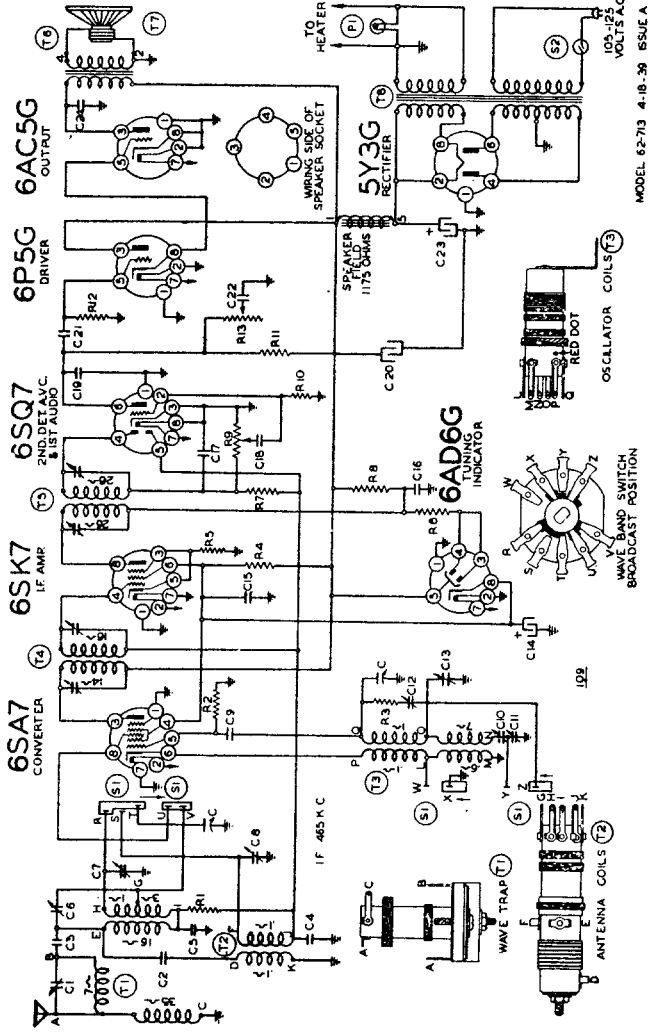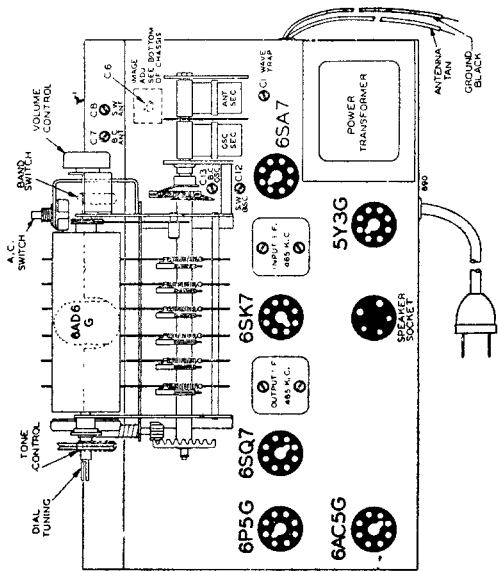

MODEL 62-713 4-18-39 ISSUE A

Schematic Ref. No. Part No.

Schematic Ref. No.	Part No.	Description
R1	BE13011	250M ohm—20%—1/2 w.
R2	BE13021	20M ohm—20%—1/2 w.
R3	BE130197	20 ohm—10%—1/2 w.
R4	BE130144	15M ohm—20%—1/2 w.
R5	BE130168	100 ohm—10%—1/2 w.
R6	BE130110	1 megohm—10%—1/10 w.
R7	BE13004	3 megohm—20%—1/2 w.
R8	BE13055	12M ohm—20%—1/2 w.
R9	BE10166	1 megohm—volume control
R10	BE130225	15 megohm—50—30%—1/2 w.
R11	BE1303	500M ohm—20%—1/2 w.
R12	BE13019	1 megohm—20%—1/2 w.
R13	BE10167	1 megohm—tone control

RESISTORS

Schematic Ref. No.	Part No.	Description
C1	BE12487	B. C. Series Pad
C2	BE12487	S. W. Series Pad
C3	BE12476	S. W. Oscillator Trimmer
C4	BE11984	5. mfd. x 300 v. lytic
C5	BE1001	1. x 400 v. 30-10%
C6	BE1295	.001 mica—20%
C7	BE10071	.0005 mica—20%
C8	BE1292	15 mid. x 350 v. lytic
C9	BE11984	.02 x 400 v.—25%
C10	BE10026	.004 x 600 v.—25%
C11	BE10071	10 mfd. x 450 v. lytic
C12	BE11984	.006 x 600 v.—25%
C13	BE10019	.006 x 600 v.—25%
C14	BE10019	C7 and C8 in one unit.
C15	BE10019	C10 and C11 in one unit.
C16	BE10019	C12 and C13 in one unit.

CONDENSERS

Schematic Ref. No.	Part No.	Description
C1	BE102106B	2 gang variable condenser
C2	BE12467	Wave Trap Trimmer
C3	BE129140	.0016 mica—5%
C4	BE10011	.01 x 400 volt—25%
C5	BE10009	.05 x 200 volt—25%
C6	BE129131	.00275 mica—3%
C7	BE12468	Image Trimmer
C8	BE12475	B. C. Antenna Trimmer
C9	BE12475	S. W. Antenna Trimmer
C10	BE12960	.00015 Mica—20%


WAVE TRAP

Schematic Ref. No.	Part No.	Description
T1	BE108146	Wave Trap
T2	BE11122	Antenna Coil
T3	BE10115	Oscillator Coil
T4	BE108111H	Output I. F. Coil—465 kc.
T5	BE108132B	Output I. F. Coil—465 kc.
T6	BE10590	Output Transformer
T7	BE11151	6" Dynamic Speaker (1175 Ohm Field)
T8	BE104139D	Power Transformer
P1	BE10774	6-8 volt pilot light T14
S1	BE13576	Band Switch
S2	BE12577	AC Switch

PARTS

Schematic Ref. No.	Part No.	Description
C10	BE12487	B. C. Series Pad
C11	BE12487	S. W. Series Pad
C12	BE12476	S. W. Oscillator Trimmer
C13	BE11984	5. mfd. x 300 v. lytic
C14	BE1001	1. x 400 v. 30-10%
C15	BE1295	.001 mica—20%
C16	BE10071	.0005 mica—20%
C17	BE1292	15 mid. x 350 v. lytic
C18	BE11984	.02 x 400 v.—25%
C19	BE10026	.004 x 600 v.—25%
C20	BE10071	10 mfd. x 450 v. lytic
C21	BE11984	.006 x 600 v.—25%
C22	BE10019	.006 x 600 v.—25%
C23	BE10019	C7 and C8 in one unit.
C24	BE10019	C10 and C11 in one unit.
C25	BE10019	C12 and C13 in one unit.


BOTTOM VIEW OF CHASSIS

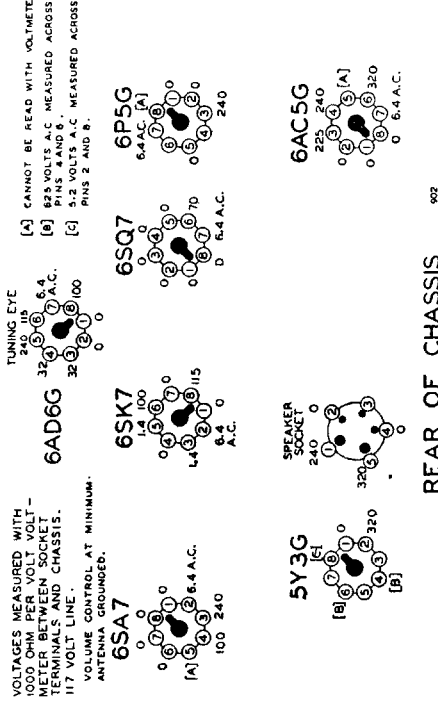

REAR OF CHASSIS



MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

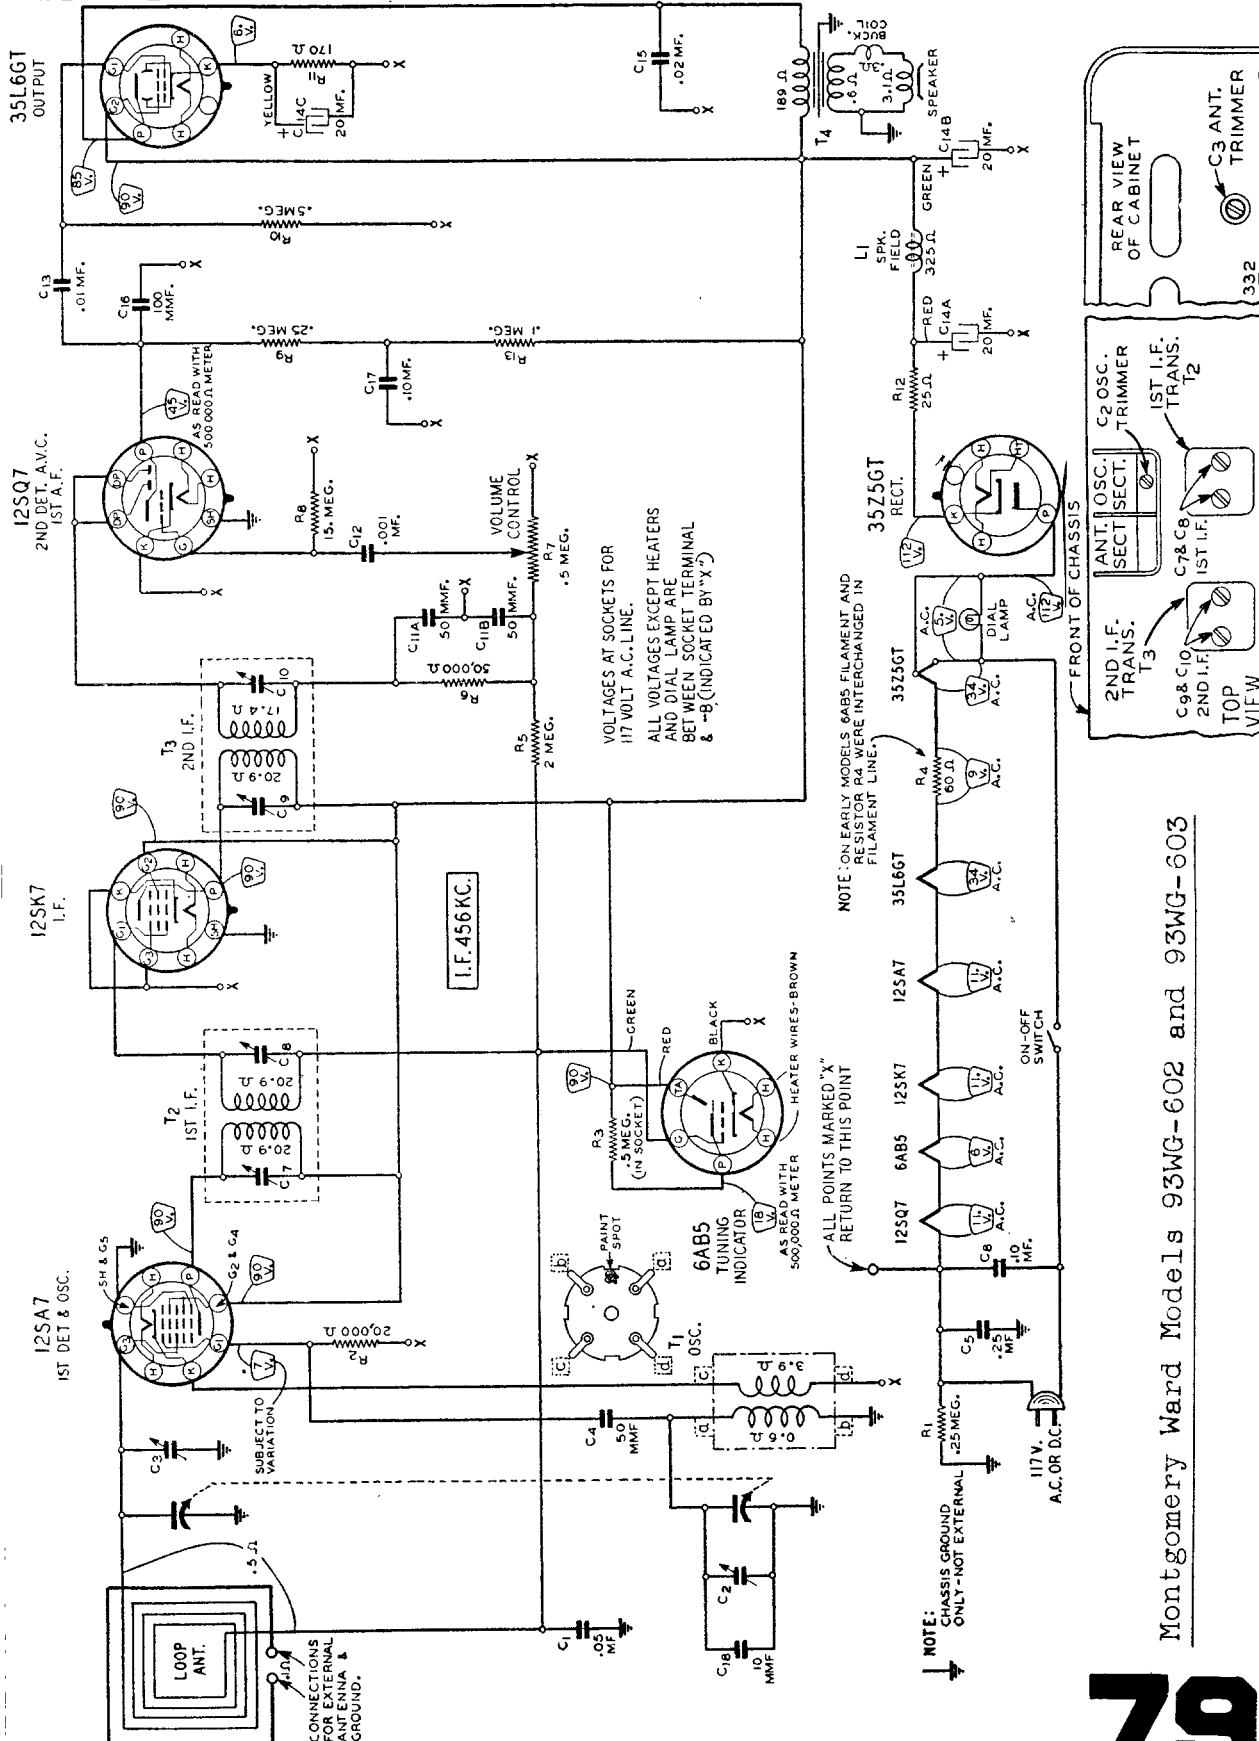

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

Montgomery Ward Models 93WG-602 and 93WG-603

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

Montgomery Ward Model 93WG-800

ALIGNMENT PROCEDURE

Volume Control—Maximum All Adjustments.

Connect Radio Chassis to Ground Post of Signal Generator with a Short Heavy Lead.

Allow Chassis and Signal Generator to "Heat Up" for several minutes.

The following equipment is required for aligning:


An All Wave Signal Generator which will provide an accurately calibrated signal at the test frequencies as listed.

Output Indicating Meter—Non-Metallic Screwdriver.


Dummy Antennas—.1 mf., 200 mmf., and 400 ohms.

SIGNAL GENERATOR		DUMMY ANTENNA	BAND SWITCH SETTING	CONDENSER SETTING	ADJUST TRIMMERS TO MAXIMUM
FREQUENCY SETTING	CONNECTION AT RADIO				
I. F.					
456 KC	Grid of 1st Det.	.1 mf.	B Range	Turn Rotor to Full Open	1st I.F. (C17) & (C18) 2nd I.F. (C19) & (C20)
RANGE B					
1730 KC	Antenna Lead	200 mmf.	B Range Ext. Ant.	Turn Rotor to Full Open	Oscillator Range B (C12)
1500 KC	Antenna Lead	200 mmf.	B Range Ext. Ant.	Turn Rotor to Max. Output	Ant. Range B (C3) Int. Range B (C7)
600 KC	Antenna Lead	200 mmf.	B Range Ext. Ant.	Turn Rotor to Max. Output	600 KC (C13) Rock Rotor—See Note A
RANGE D					
18,300 KC	Antenna Lead	400 Ohm	D Range	Turn Rotor to Full Open	Oscillator Range D (C10)
18,300 KC	Antenna Lead	400 Ohm	D Range	Keep Rotor at Full Open Position	Ant. Range D (C2) Int. Range D (C6) Rock Rotor—See Note A
LOOP RANGE B					
1500 KC See Note B	None See Note B		Loop	Turn Rotor to Max. Output	See Note C Loop Trimmer (C36)

CAUTION—When aligning the short wave band, be sure NOT to adjust at the image frequency. This can be checked as follows: Let us say the signal generator is set for 15,000 KC. The signal will then be heard at 15,000 on the dial of the radio. The image signal, which is much weaker, will be heard at 15,000 less 912 KC, or 14,088 KC on the dial. It may be necessary to increase the input signal to hear the image.

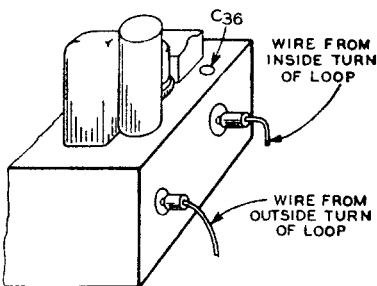


LOOP CONNECTIONS

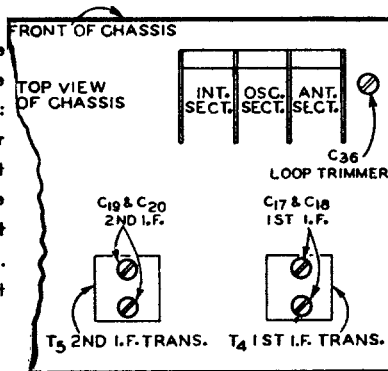

Attenuate the signal from the signal generator to prevent the leveling-off action of the AVC. After each range is completed, repeat the procedure as a final check.

NOTE A—Turn the rotor back and forth and adjust the trimmer until the peak of greatest intensity is obtained.

NOTE B—Reinstall set in cabinet. Connect a loop approximately one foot in diameter across the antenna and ground posts of the signal generator. Place signal generator so that this loop is between 3 and 10 feet from loop in cabinet.

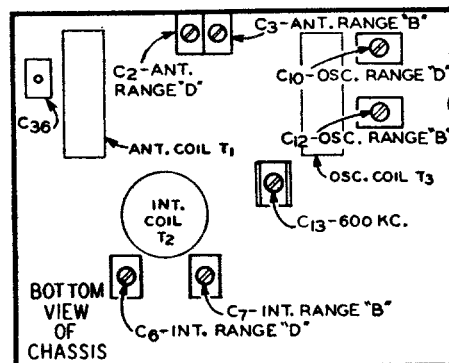

NOTE C (CONSOLE MODELS)—Turn knob of loop until output is maximum.


CALIBRATION—Chassis should be in cabinet. If it is necessary to recalibrate the radio, loosen the set screw on the dial hub near the volume control drum. Tune in a signal of known frequency. Hold the tuning control drum stationary and at the same time turn the dial drum the necessary amount in the required direction. If the radio detunes as the dial drum is turned, loosen the set screw a slight additional amount and recalibrate. Retighten the set screw.

80



COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS


Montgomery Ward Model 93WG-800

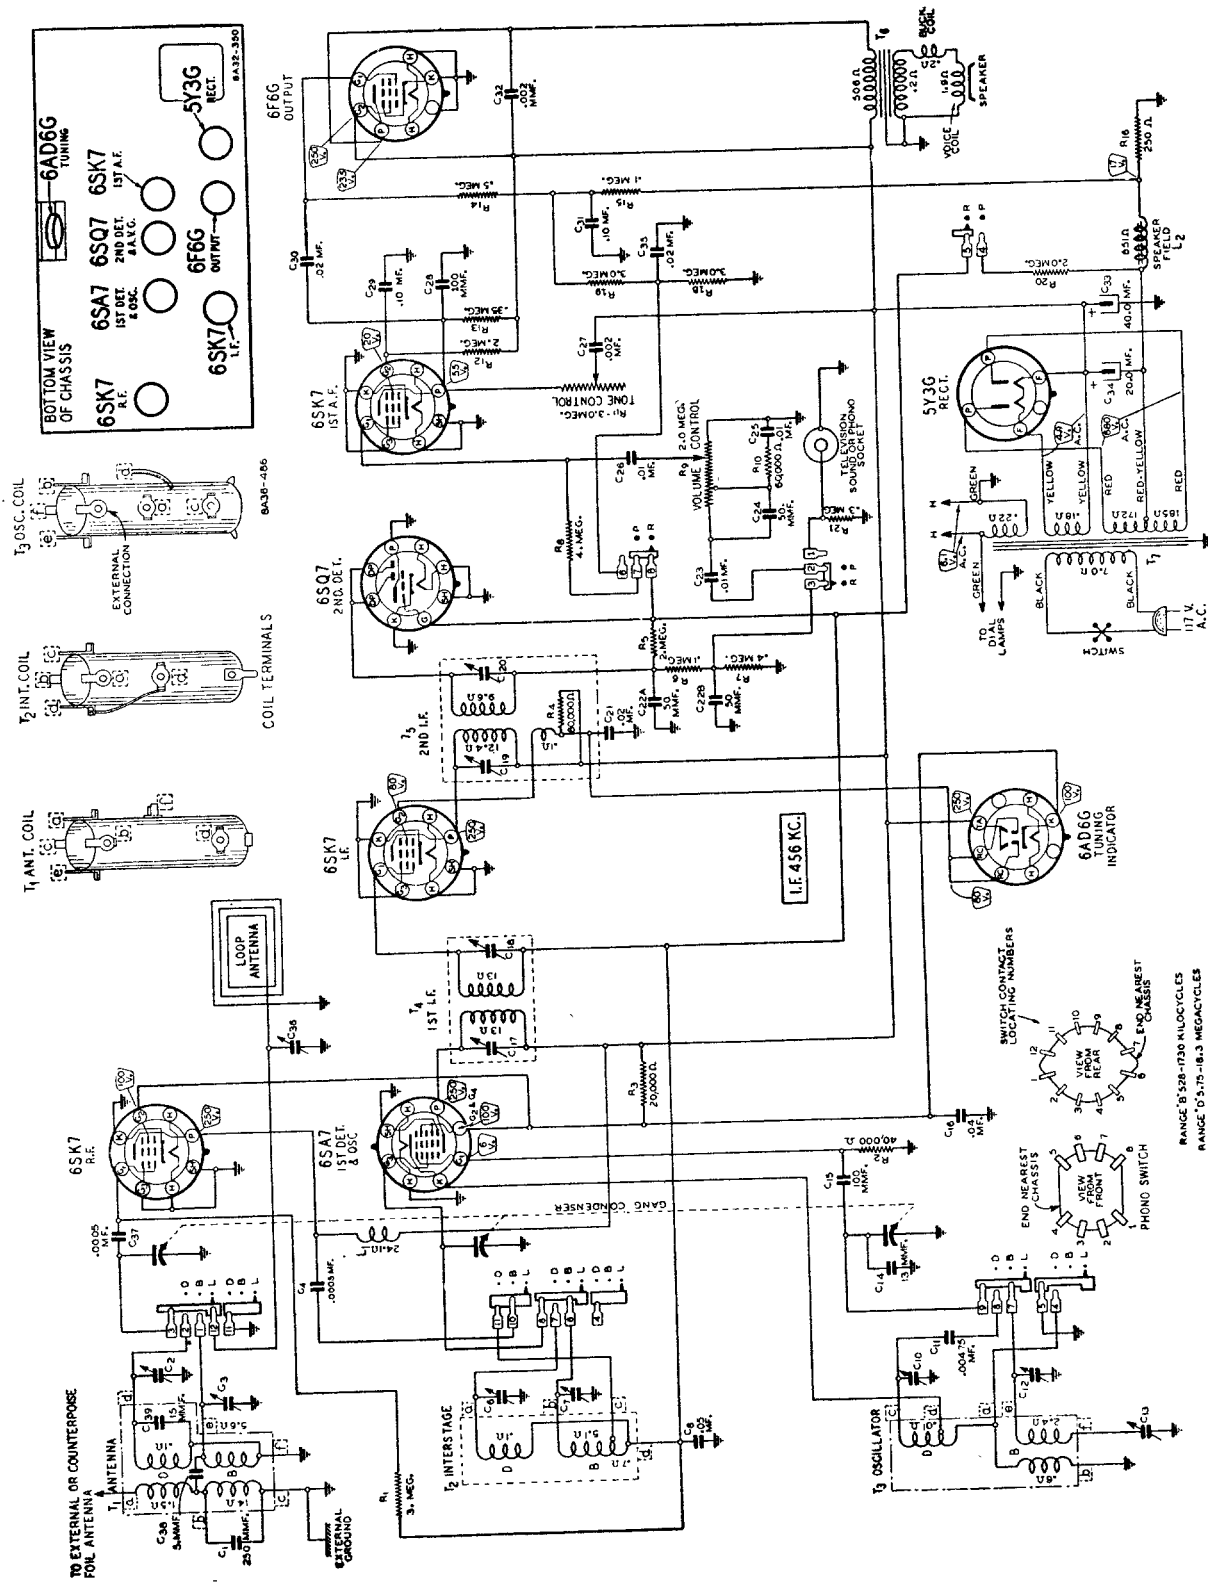

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

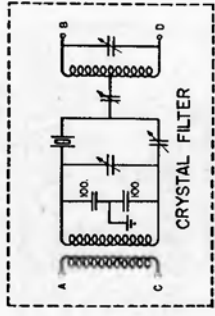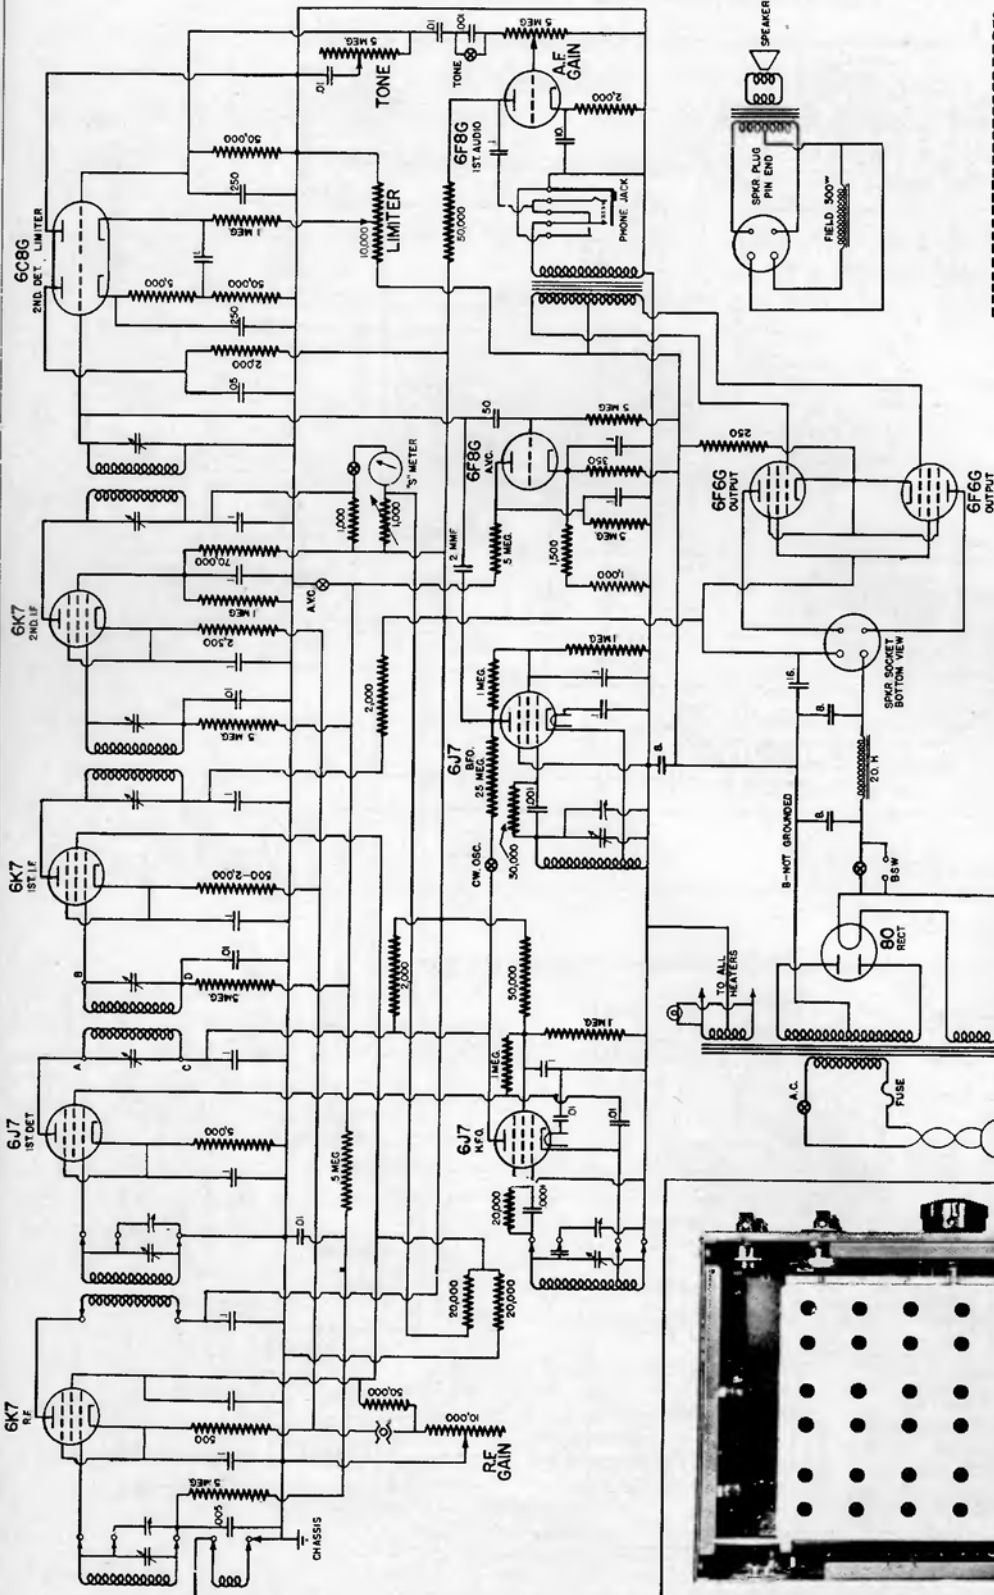


NATIONAL COMPANY, INC.
THE NC-100A RECEIVER

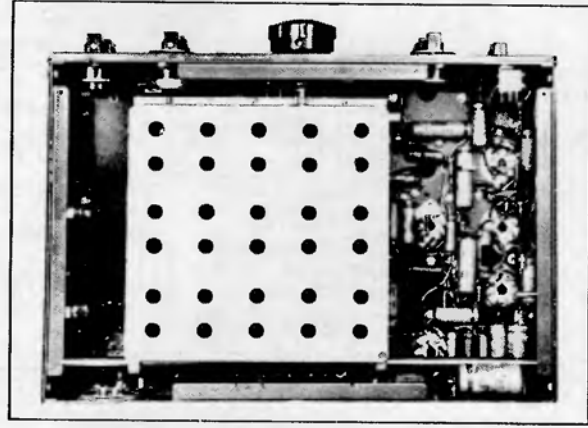

BOTTOM VIEW
The coil assembly is shown midway between the 1.3-2.8 mc. and 2.7-6.4 mc. ranges.

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

ARVIN CAR RADIO CHASSIS RE45

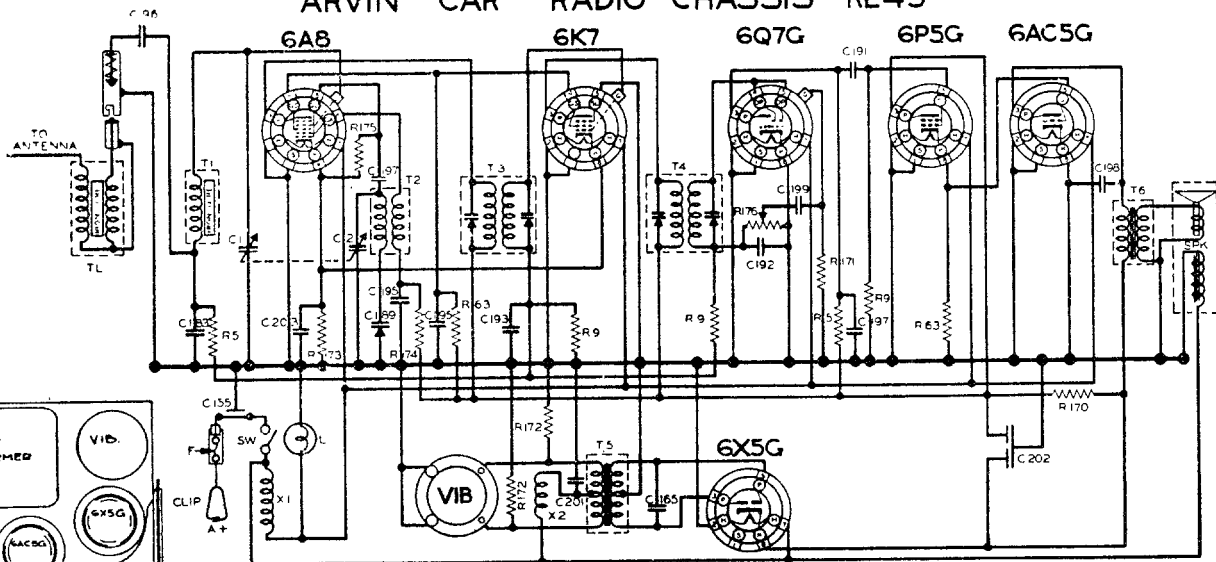


RESISTORS		CONDENSERS		CHOKES & TRANSFORMERS		MISCELLANEOUS UNITS	
SYMBOL	PART NO.	CAPACITY	PART NO.	TYPE	PART NO.	SYMBOL	DESCRIPTION
R1	500K	1	28-1827	1	00-1818	F	FUSE - 20 AMP
R2	100K	1	17-1201	2	00-1820	L	DIAL LIGHT BULB - MAZDA NO. 5
R3	500K	1	17-1201	3	00-1821	S	SPEAKER ASSEMBLY
R4	100K	1	17-1201	4	00-1822	SW	POWER SWITCH
R5	100K	1	17-1201	5	00-1823	TL	TRANSMISSION LINE
R6	100K	1	17-1201	6	00-1824	VIB	VIBRATOR
R7	100K	1	17-1201				
R8	100K	1	17-1201				
R9	100K	1	17-1201				
R10	100K	1	17-1201				
R11	100K	1	17-1201				
R12	100K	1	17-1201				
R13	100K	1	17-1201				
R14	100K	1	17-1201				
R15	100K	1	17-1201				
R16	100K	1	17-1201				
R17	100K	1	17-1201				

IF PEAK 455 K.C.
FREQUENCY RANGE 1575 TO 540 K.C.
NOBLITT-SPARKS INDUSTRIES, INC.,
COLUMBUS, INDIANA

Arvin Models 8-A and RE-45

Arvin Models 44-C and RE-46 ARVIN CAR RADIO CHASSIS RE46

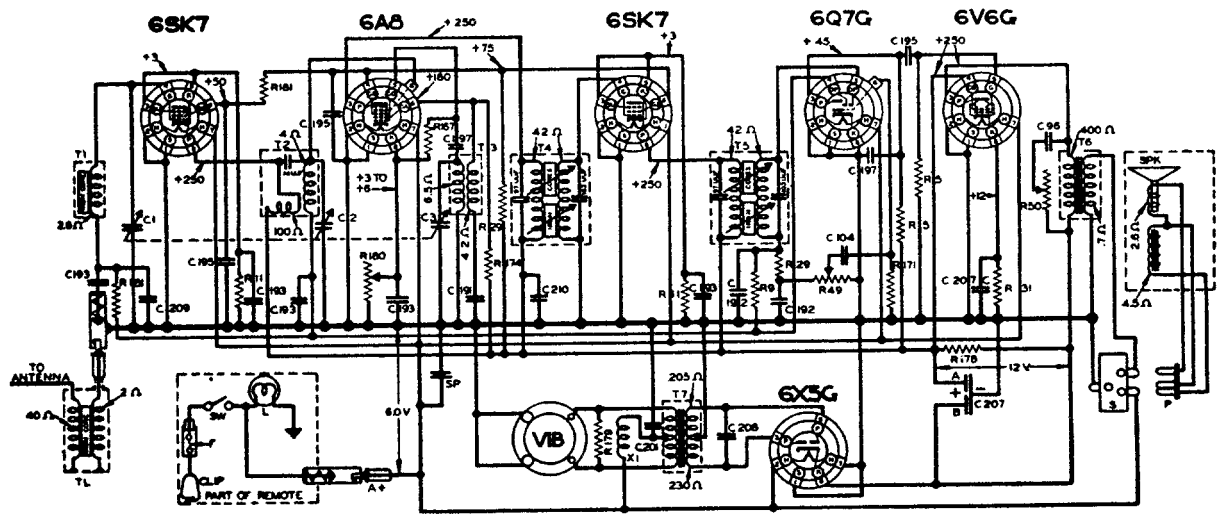

RESISTORS		CONDENSERS		CHOKES & TRANSFORMERS		MISCELLANEOUS UNITS	
SYMBOL	PART NO.	CAPACITY	PART NO.	TYPE	PART NO.	SYMBOL	DESCRIPTION
R1	500K	1	28-1827	1	00-1818	F	FUSE - 20 AMP
R2	100K	1	17-1201	2	00-1820	L	DIAL LIGHT BULB - MAZDA NO. 5
R3	500K	1	17-1201	3	00-1821	S	SPEAKER ASSEMBLY
R4	100K	1	17-1201	4	00-1822	SW	POWER SWITCH
R5	100K	1	17-1201	5	00-1823	TL	TRANSMISSION LINE
R6	100K	1	17-1201	6	00-1824	VIB	VIBRATOR
R7	100K	1	17-1201				
R8	100K	1	17-1201				
R9	100K	1	17-1201				
R10	100K	1	17-1201				
R11	100K	1	17-1201				
R12	100K	1	17-1201				
R13	100K	1	17-1201				
R14	100K	1	17-1201				
R15	100K	1	17-1201				
R16	100K	1	17-1201				
R17	100K	1	17-1201				


INTERMEDIATE FREQUENCY 170 K.C.
FREQUENCY RANGE 1570 TO 540 K.C.
NOBLITT-SPARKS INDUSTRIES, INC.,
COLUMBUS, INDIANA

NOTE - ALL VOLTAGES GIVEN FOR 12V INPUT OF 8 VOLTS. ALLOWS 10% ON ALL VOLTAGES & RESISTANCES OF WINDING.

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS


RESISTORS		CONDENSERS		TRANSFORMERS		MISCELLANEOUS UNITS	
R	Ω	C	VOLTS	T	TYPE	SYMBOL	DESCRIPTION
1/4	100K	1	175A	1	ANTENNA COIL	L	DIAL LIGHT BULB
1/2	100K	2	175B	2	OSCILLATOR COIL	P1	SPEAKER PLUG
3/4	100K	3	175C	3	FIRST I.F. COIL	P2	AC LINE CORD & PLUG ASSEMBLY
1	100K	4	175D	4	SECOND I.F. COIL	S1	SPEAKER SOCKET
2	100K	5	175E	5	OUTPUT TRANS.	SW1	SPEAKER (SEE MODEL)
3	100K	6	175F	6	POWER TRANS.	SW2	AC LINE SWITCH
4	100K	7	175G	7	BAND SWITCH
5	100K
6	100K
7	100K
8	100K
9	100K
10	100K
11	100K
12	100K
13	100K
14	100K
15	100K
16	100K
17	100K
18	100K
19	100K
20	100K
21	100K
22	100K
23	100K
24	100K
25	100K
26	100K
27	100K
28	100K
29	100K
30	100K
31	100K
32	100K
33	100K

ARVIN RADIO CHASSIS RE 27

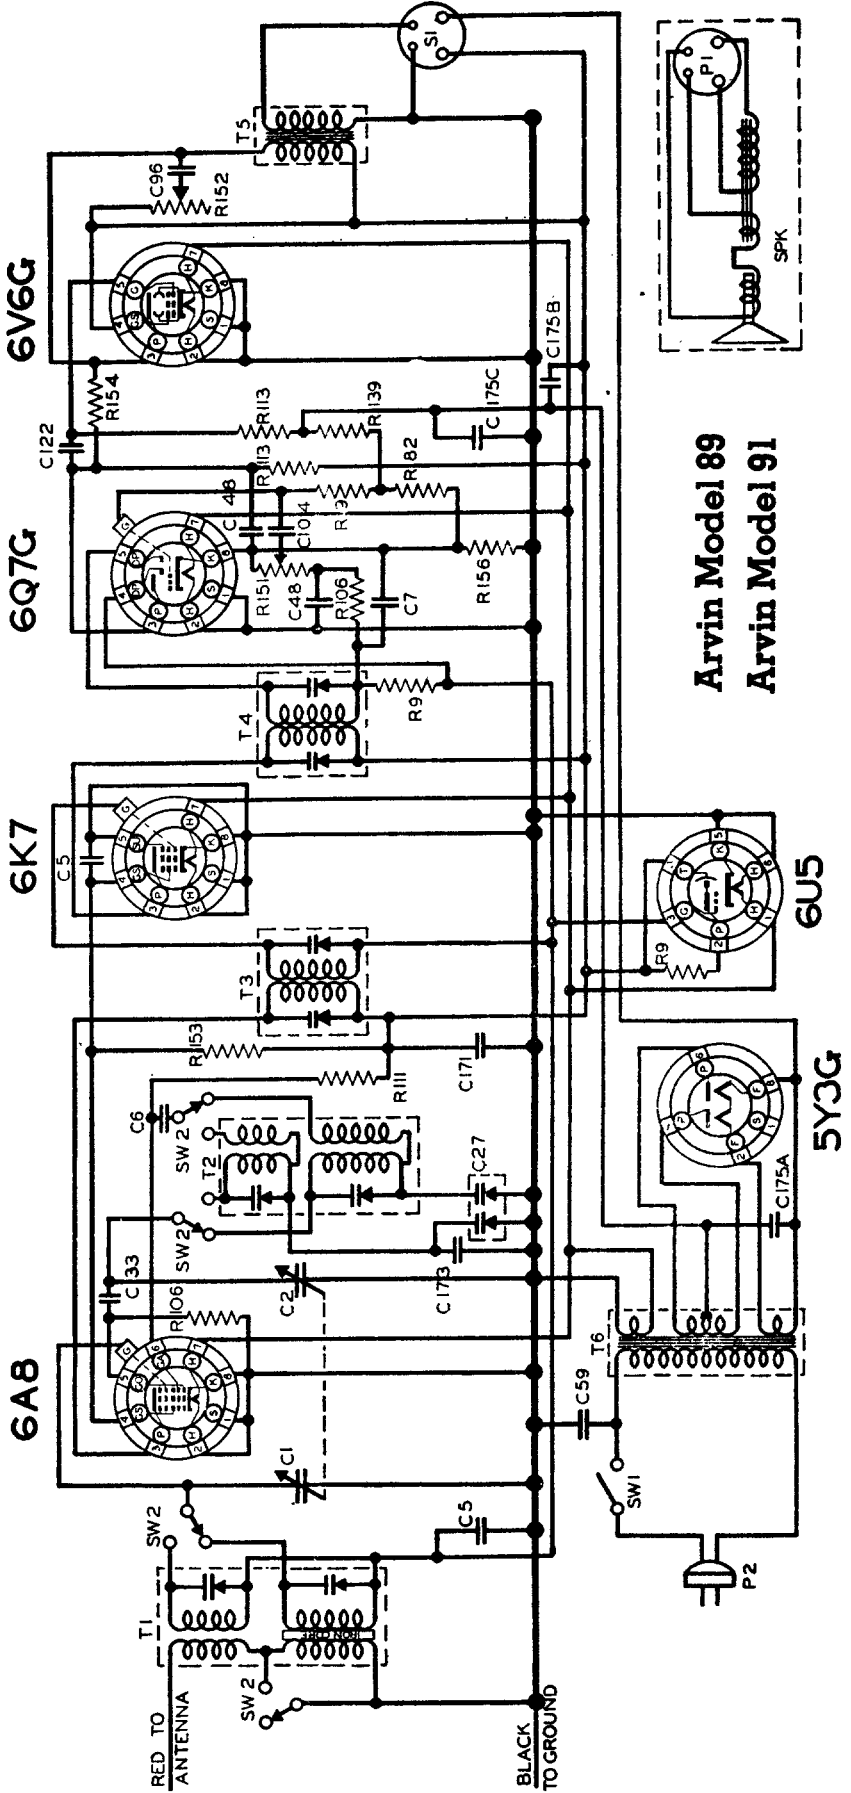

Arvin Model 89
Arvin Model 91

ARVIN HOME RADIO CHASSIS RE 37.
6K8 6K7 6Q7G 6K6G

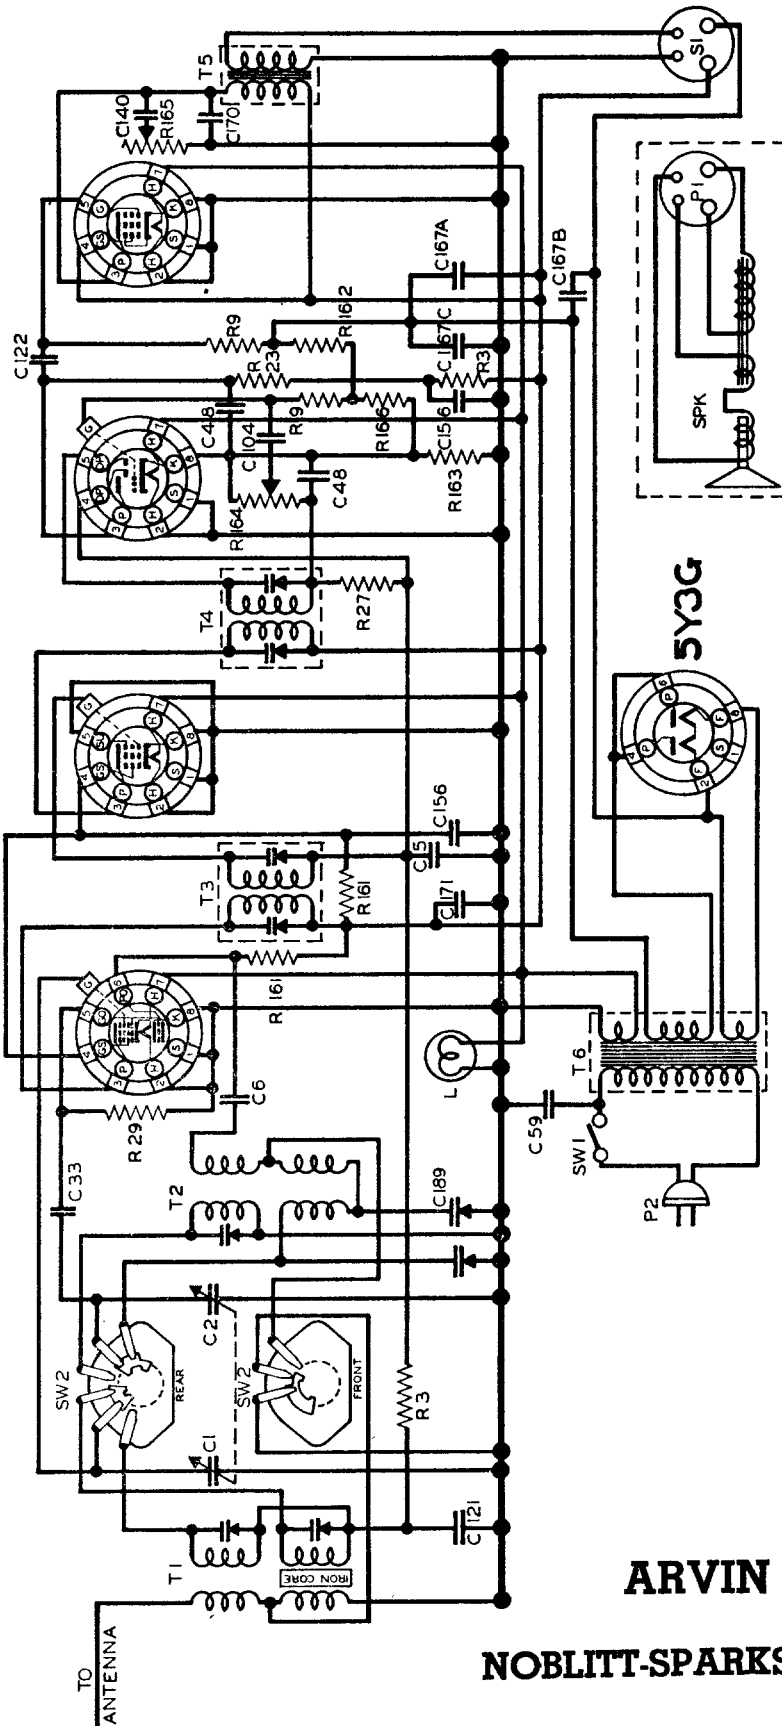

RESISTORS		CONDENSERS		TRANSFORMERS		MISCELLANEOUS UNITS					
R	OHMS	W	PART NO.	C	CAPACITY	VOLT	PART NO.	T	TYPE	DESCRIPTION	PART NO.
3	100K	1/4	17-2068	1	TWO-GANG		17-19990	1	ANTENNA COILS	DIAL LIGHT BULB - MAZDA 4.4	17-13905
9	1M	1/4	17-2060	2	VARIABLE			2	OSCILLATOR COILS	SPEAKER PLUG (PART OF SPEAKER)	
23	250K	1/4	17-3011	5	.05	200	17-14015	3	FIRST I.F. COIL	LINE CORD & PLUG ASSEMBLY	17-15781E
27	21K	1/4	17-4788	6	.002	800	17-2083	4	SECOND I.F. COIL	SPEAKER SOCKET	17-13249
33	50K	1/4	17-2060	33	.00005	800	17-14047	5	OUTPUT TRANS.	SPEAKER	17-15940
81	15K	1/2	17-14387	48	.00025	800	17-4207	6	POWER TRANS.	A.C. LINE SWITCH (PART OF NO.17-16029)	17-16028
82	20K	1/2	17-14388	59	.01	400	17-12815			BAND SWITCH	
83	30K	1/2	17-14389	104	.01	200	17-4208				
84	500K	1/2	17-16037	121	.02	200	17-14237				
85	100K	1/2	17-16038	122	.02	400	17-2214				
86	40	1/4	17-14270	143	.05	400	17-2214				
				158	.05	450	17-4397				
				159	10MFD.	450					
				167B	10MFD.	450	17-14233				
				170	20MFD	25					
				171	.1	400	17-14237				
				189	1000K-1000K	PAD.					

ARVIN MODEL 78


NOBLITT-SPARKS INDUSTRIES, INC.

85

I.F. PEAK 455K.C.
BROADCAST PAD AT 600K.C.
SHORT WAVE BALANCE AT 15M.C.
CHECK AT 7M.C.
NOBLITT-SPARKS INDUSTRIES, INC.,
COLUMBUS, INDIANA.

Arvin Model 92 Radio Chassis RE31

SWITCH SHOWN IN PUSH-BUTTON TUNING POSITION.
SEQUENCE OF POSITIONS:
1. PUSH-BUTTON - BROADCAST BAND - BROAD TUNING.
2. MANUAL - BROADCAST BAND - SHARP TUNING.
3. MANUAL - MID BAND - SHARP TUNING.
4. MANUAL - SHORT WAVE BAND - SHARP TUNING.

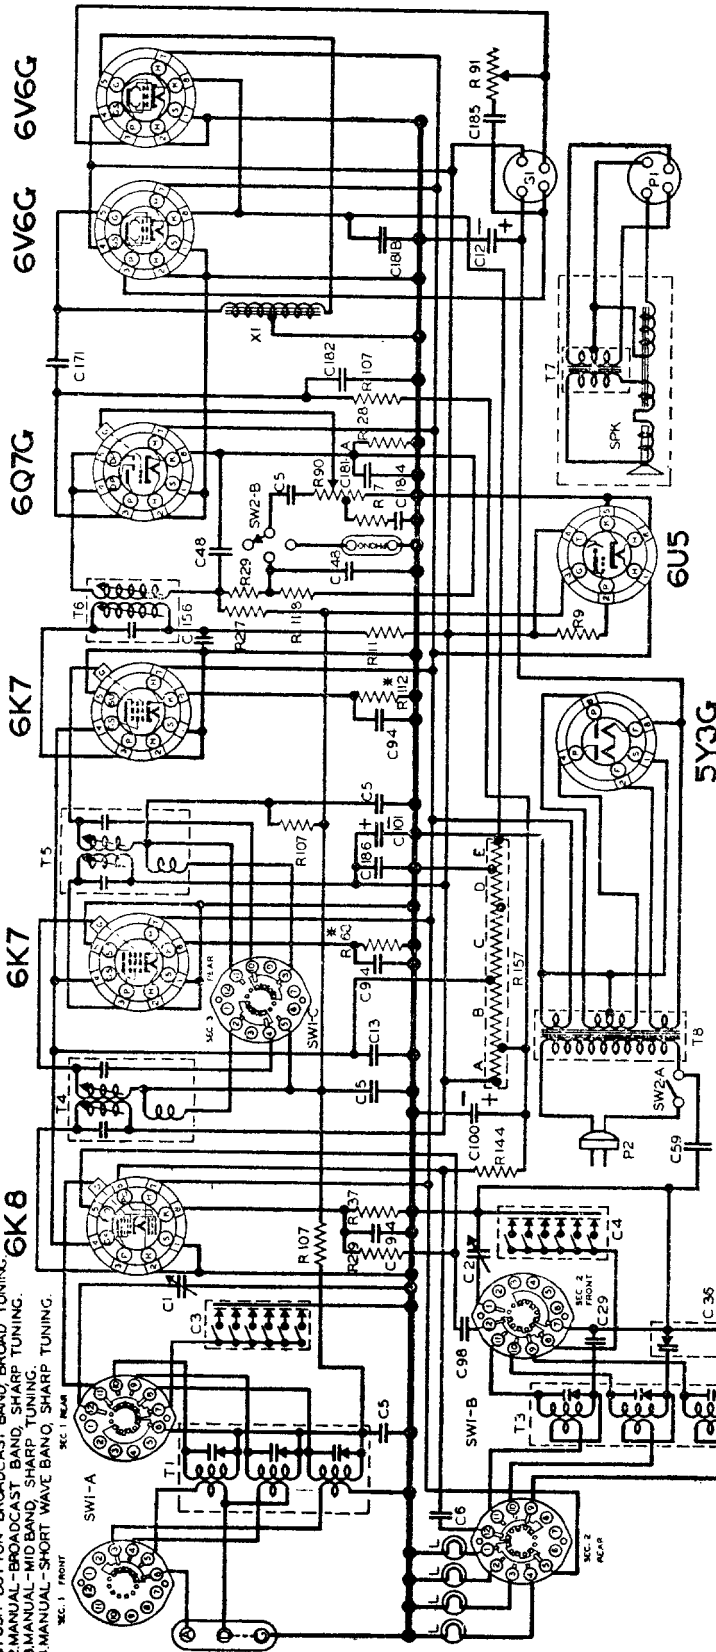

PUSH BUTTON RANGES:
READING FROM LEFT TO RIGHT:
1. 540 TO 1000 K.C.
2. 550 TO 1050 K.C.
3. 565 TO 1050 K.C.
4. 725 TO 1360 K.C.
5. 750 TO 1440 K.C.
6. 1000 TO 1600 K.C.


1. F. PEAK 455 K.C.
3 BANDS { BALANCE 1.4 MC. PAO 60 MC.
BALANCE 5.0 MC. CHECK 2.0 MC.
BALANCE 15.0 MC. CHECK 6.0 MC.

NOBLITT-SPARKS INDUSTRIES, Inc.
Columbus, Indiana

* NOTE: MAY BE VARIED 400 TO 600 OHMS TO CONTROL SENSITIVITY

RESISTORS		CONDENSERS		TRANSFORMERS & CHOKES		MISCELLANEOUS UNITS	
TYPE	RESISTANCE	TYPE	CAPACITY	PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
1	20K	1	100-00000	1	ANTENNA COIL	1	SWITCH
2	50K	2	100-00005	2	OSCILLATOR COIL	2	SWITCH
3	100K	3	100-00010	3	IF TRANSFORMER	3	SWITCH
4	200K	4	100-00020	4	POWER TRANSFORMER	4	SWITCH
5	500K	5	100-00030	5	CHOKES	5	SWITCH
6	1M	6	100-00040	6	INPUT CHOKES	6	SWITCH
7	2M	7	100-00050	7	...	7	...
8	5M	8	100-00060	8	...	8	...
9	10M	9	100-00070	9	...	9	...
10	20M	10	100-00080	10	...	10	...
11	50M	11	100-00090	11	...	11	...
12	100M	12	100-00100	12	...	12	...
13	200M	13	100-00110	13	...	13	...
14	500M	14	100-00120	14	...	14	...
15	1000M	15	100-00130	15	...	15	...
16	...	16	...	16	...	16	...
17	...	17	...	17	...	17	...
18	...	18	...	18	...	18	...
19	...	19	...	19	...	19	...
20	...	20	...	20	...	20	...


MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

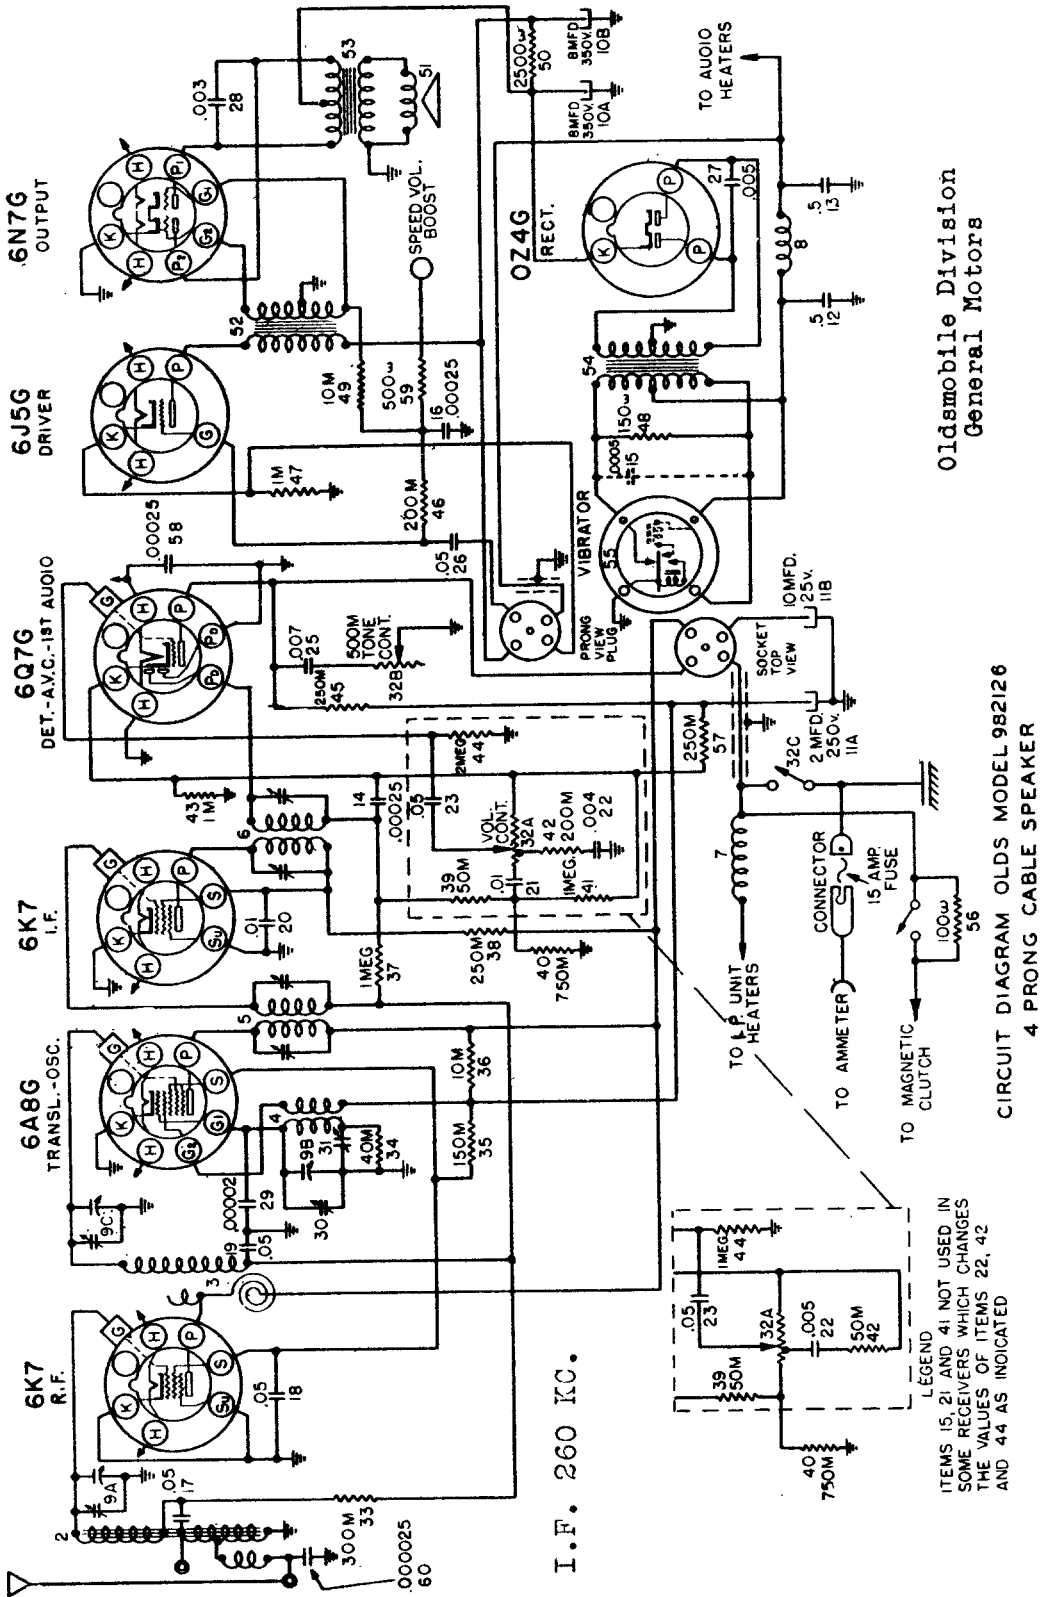

Oldsmobile Division
General Motors

CIRCUIT DIAGRAM OLDS MODEL 982126
4 PRONG CABLE SPEAKER

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

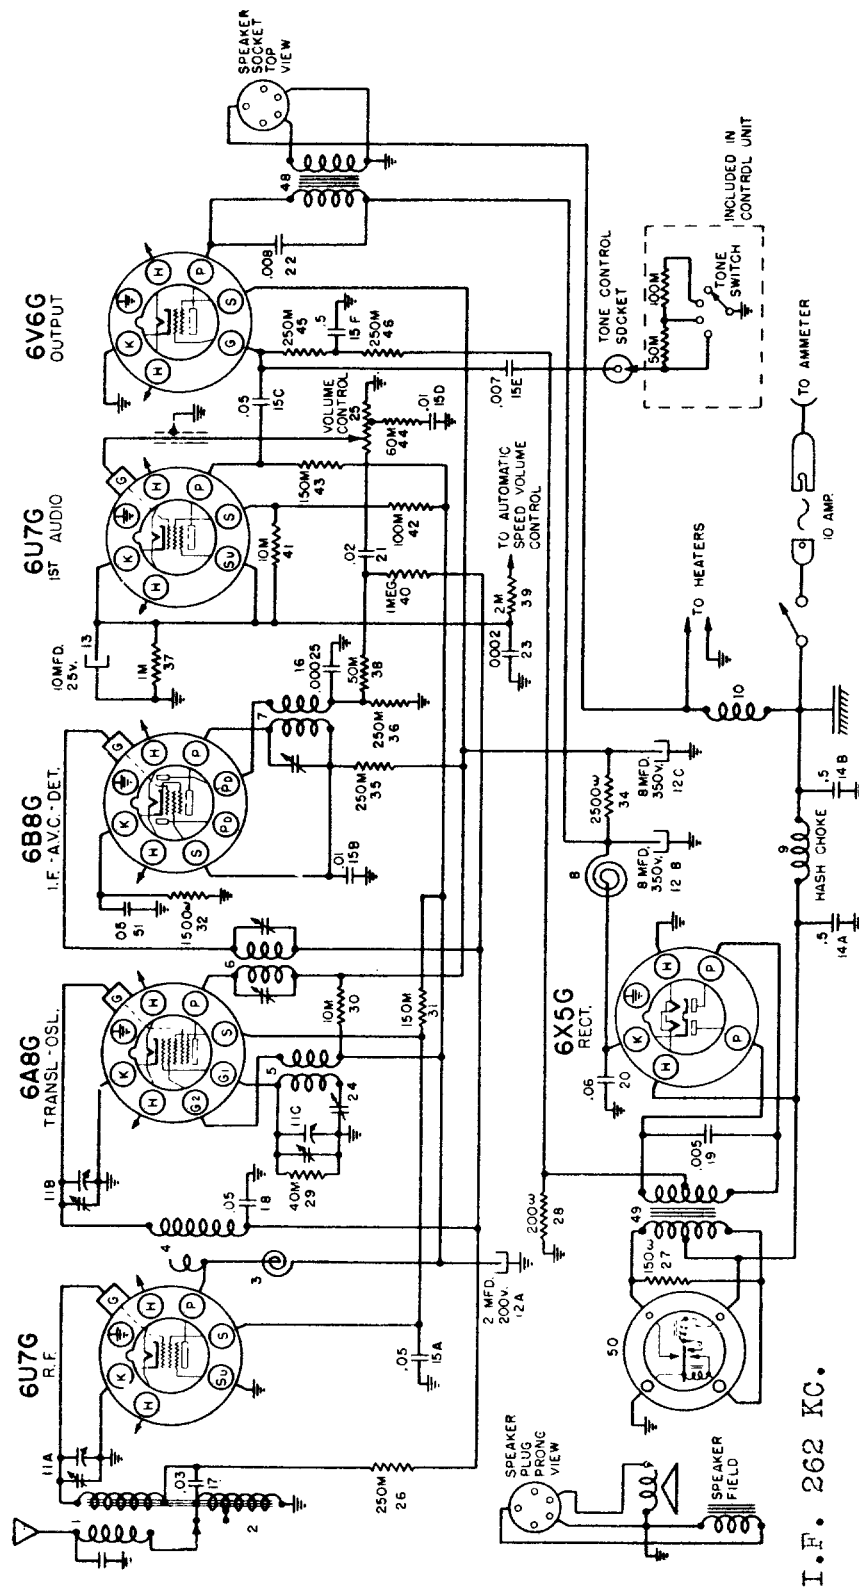


Oldsmobile Division, General Motors, Model 982153

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

Philco Radio & Television Corporation

Models 39-6, 39-7.

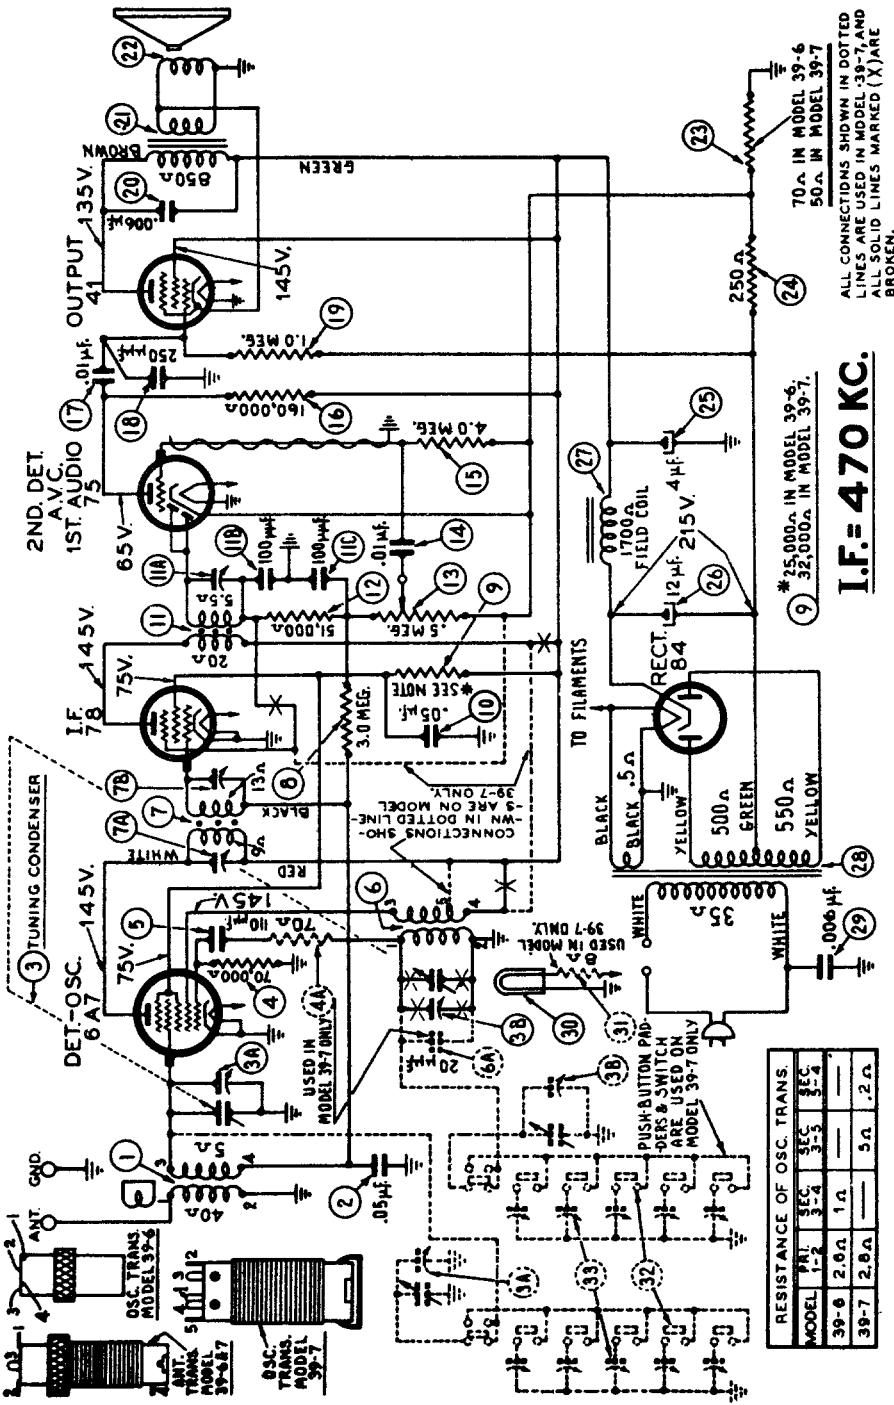

Opera- tion in Order	SIGNAL GENERATOR			RECEIVER			Special Instruc- tions
	Output Connections to Receiver	Dummy Antenna Note A	Dial Setting	Dial Setting	Control Setting	Adjust Compensators in Order	
1	6A7	.1 mf.	470 K.C.	580 K.C.	Vol. Cont. Max.	11A, 7B, 7A	Adjust for max. output
2	Ant. Lead	100 mf.	1550 K.C.	1550 K.C.	Vol. Cont. Max.	3B, 3A	Adjust for max. output Note A, B

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

Setting Push-Buttons on Models: -- 39-25 39-30 39-31 39-35 39-40 39-45

Circuits

- 1 and 2
- 3 and 4
- 5 and 6
- 7 and 8

Frequency Range

- 540 to 1030 kilocycles
- 670 to 1160 kilocycles
- 900 to 1470 kilocycles
- 1170 to 1600 kilocycles

(C) Turn the receiver Tuning Range Selector to position two ("Manual Tuning") and tune the receiver to the station to be set on the first button.

(D) Plug the output leads of the Station Setter into the "High" and "Gnd" jacks, and turn the output controls to maximum. Turn the modulation control to "Modulation Off." Connect the output lead of the Station Setter to the "ANT" and "GND" terminals of the receiver and tune to the frequency of the station being received. As the indicator is slowly tuned through the frequency of the station there will be two points at which a high pitched swish will be heard, one above and one below the frequency of the station. When the indicator is on the frequency of the station, minimum high pitched swish will be heard.

(E) Set the modulation control of the Station Setter for "Modulation On." The modulated signal of the Station Setter will then be heard through the receiver.

(F) Turn the receiver Tuning Range Selector to position one (Automatic Tuning) and push in the first button. Using the Part No. 45-2610 Insulated Screw Driver, turn the number 1 "OSC" screw until the modulated signal of the Station Setter is tuned in to maximum volume. Then adjust the number 1 "ANT" screw for maximum signal.


(G) Remove the output lead of the Philco Station Setter from the "ANT" terminal of the receiver and turn its indicator off the frequency of the station. The program of the desired station will then be heard on the receiver.

(H) With the volume of the receiver low, slowly turn the number 1 "OSC" back and forth until maximum output is received. Repeat the same procedure for the number 1 "ANT" screw.

After setting up the first station, the same procedure given under (C) to (H) is used for the other stations.

PHILCO MODEL TH-4




- | | | | |
|----|--------------------------------------|----|------------------------------------|
| 1 | Antenna Transformer..... | 17 | Resistor (4 meg., 1/3 watt)..... |
| 2 | Tubular Condenser (.0015 mf., 200V.) | 18 | Resistor (250,000 ohms, 1/3 watt) |
| 3 | Tubular Condenser..... | 19 | Tubular Condenser (.01 mf., 400V) |
| 4 | Tubular Condenser (.05 mf., 400V.) | 20 | Resistor (500,000 ohms, 1/3 watt) |
| 5 | Tubular Condenser (.15 mf., 400V.) | 21 | Resistor (150 ohms, 1/3 watt)..... |
| 6 | Resistor (50,000 ohms, 1/3 watt). | 22 | Tubular Condenser (.02 mf., 400V) |
| 7 | Mica Condenser (110 mmf.)..... | 23 | Output Transformer |
| 8 | Oscillator Transformer..... | 24 | For Speaker 36-1469-1..... |
| 9 | Tubular Condenser (.05 mf., 400V.) | 25 | For Speaker 36-1469-9..... |
| 10 | 1st I.F. Transformer..... | 26 | Speaker..... |
| 11 | 2nd I.F. Transformer..... | 27 | Tubular Condenser (.03 mf., 400V) |
| 12 | Resistor (2 meg., 1/3 watt)..... | 28 | Electrolytic Capacitor (20-20mf.) |
| 13 | Mica Condenser (250 mmf.)..... | 29 | Field Coil -- Part of Speaker |
| 14 | Resistor (20,000 ohms, 1/3 watt). | 30 | Pilot Lamp..... |
| 15 | Volume Control (500,000 ohms)..... | 31 | Line Resistor..... |
| 16 | Tubular Condenser (.01 mf., 200V.) | | |

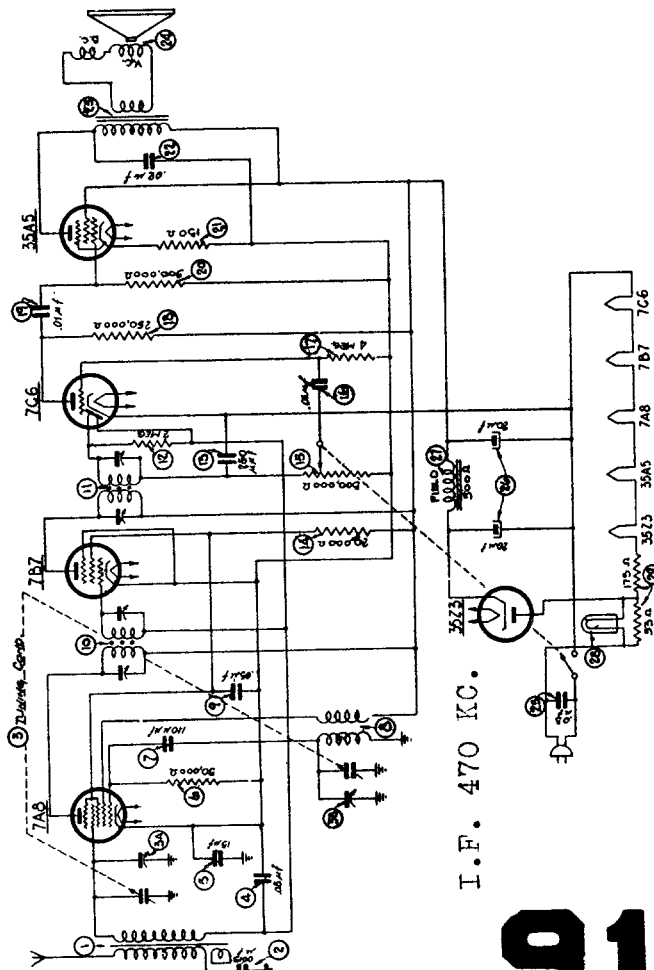

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

PHILCO

Model 39-17, Codes 121-122

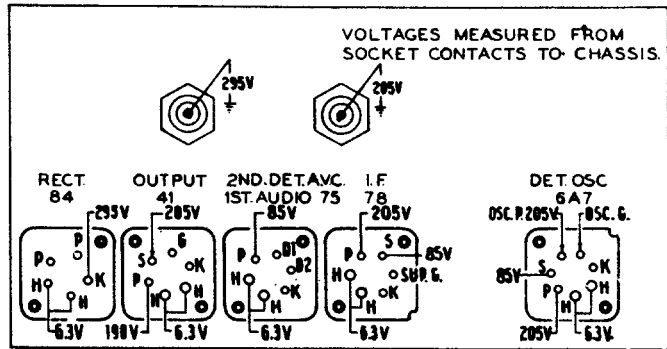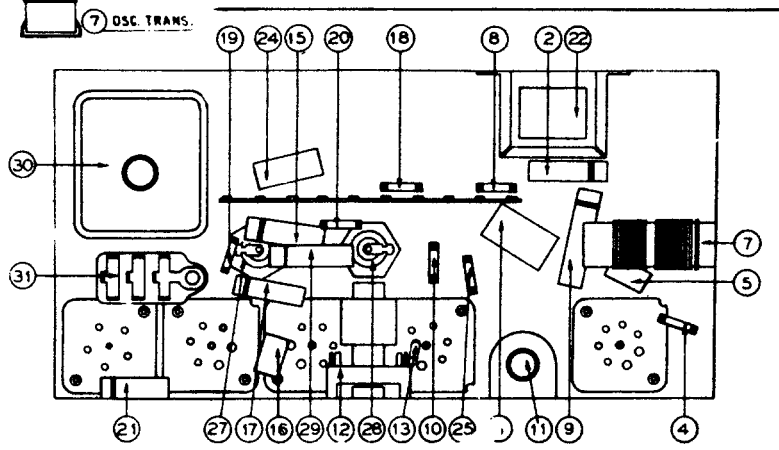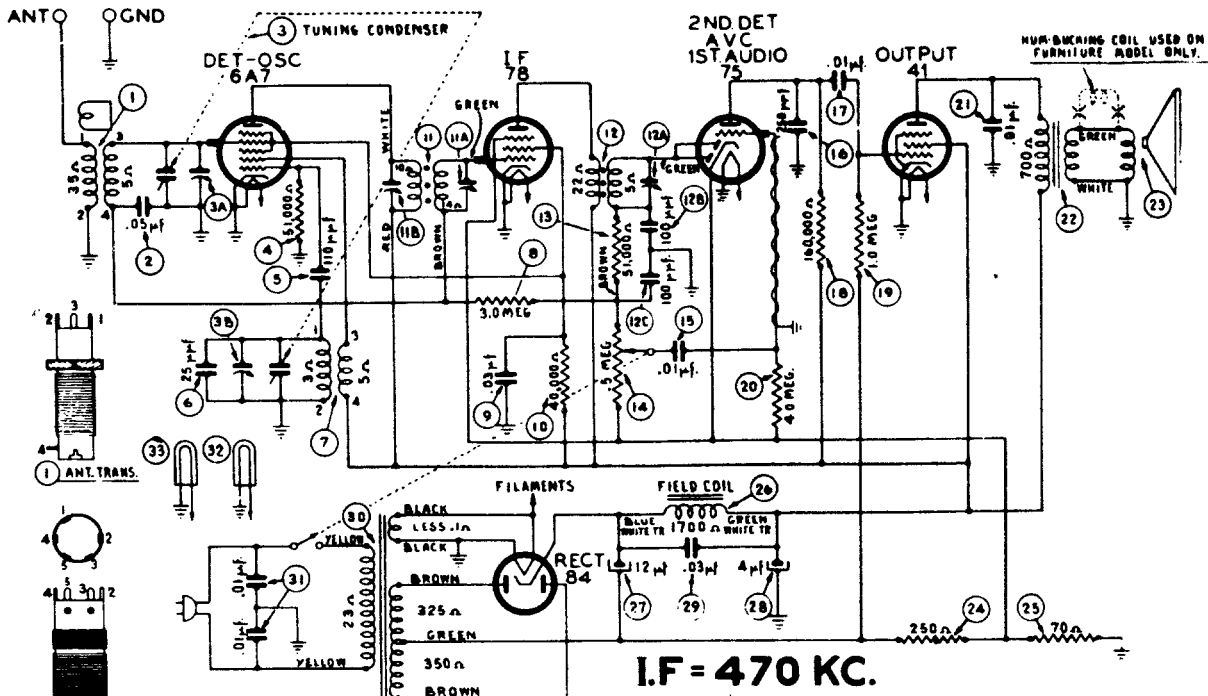

Schem. No.	Description	Part No.
1	Antenna Transformer	32-3039
2	Condenser (.05 mf. tubular)	30-4519
3	Tuning Condenser Assembly	31-2265
4	Resistor (51,000 ohms, 1/2 watt)	33-351339
5	Condenser (110 mmf. mica)	30-1031
6	Condenser (25 mmf., silver plated mica)	30-1112
7	Oscillator Transformer	32-3040
8	Resistor (3.0 megohm)	33-530339
9	Condenser (.03 mf. tubular)	30-4449
10	Resistor (40,000 ohms, 1/2 watt)	33-340339
11	1st I. F. Transformer Assembly	32-3075
12	2nd I. F. Transformer Assembly	32-2944
13	Resistor (51,000 ohms, 1/2 watt)	33-351339
14	Volume Control and On-Off Switch	33-5276
15	Condenser (.01 mf. tubular)	30-4479
16	Condenser (mica, 250 mmf.)	30-1032
17	Condenser (.01 mf. tubular)	30-4572
18	Resistor (16,000 ohms, 1/2 watt)	33-316339
19	Resistor (1.0 megohm, 1/2 watt)	33-510339
20	Resistor (4.0 megohm, 1/2 watt)	33-540339
21	Condenser (.01 mf. tubular)	30-4572
22	Output Transformer	32-7980
23	Cone and Voice Coil Assembly for Speaker (Part No. 36-1426-1) ... 36-4083 (Part No. 36-1426-3) ... 36-4085	
	Cone and Voice Coil Assembly for Speaker (Part No. 36-1440) ... 36-4086	
24	Resistor (250 ohms, wire wound)	33-125431
25	Resistor (70 ohms, 1/2 watt)	33-070339
26	†Field Coil for Speaker (Pt. No. 36-1426)	
	†Field Coil for Speaker (Pt. No. 36-1440)	
27	Condenser (12 mf. electrolytic)	30-2319
28	Condenser (4 mf. electrolytic)	30-2236
29	Condenser (.03 mf. tubular)	30-4449
30	Power Transformer (115 volts, 50-60 cycles)	32-7974
31	Condenser (.01 mf., bakelite)	3903DQ


Volume minimum,
no signal, line
voltage 115 v.

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS



MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

PHILCO

Model 39-18, Codes 121 & 122

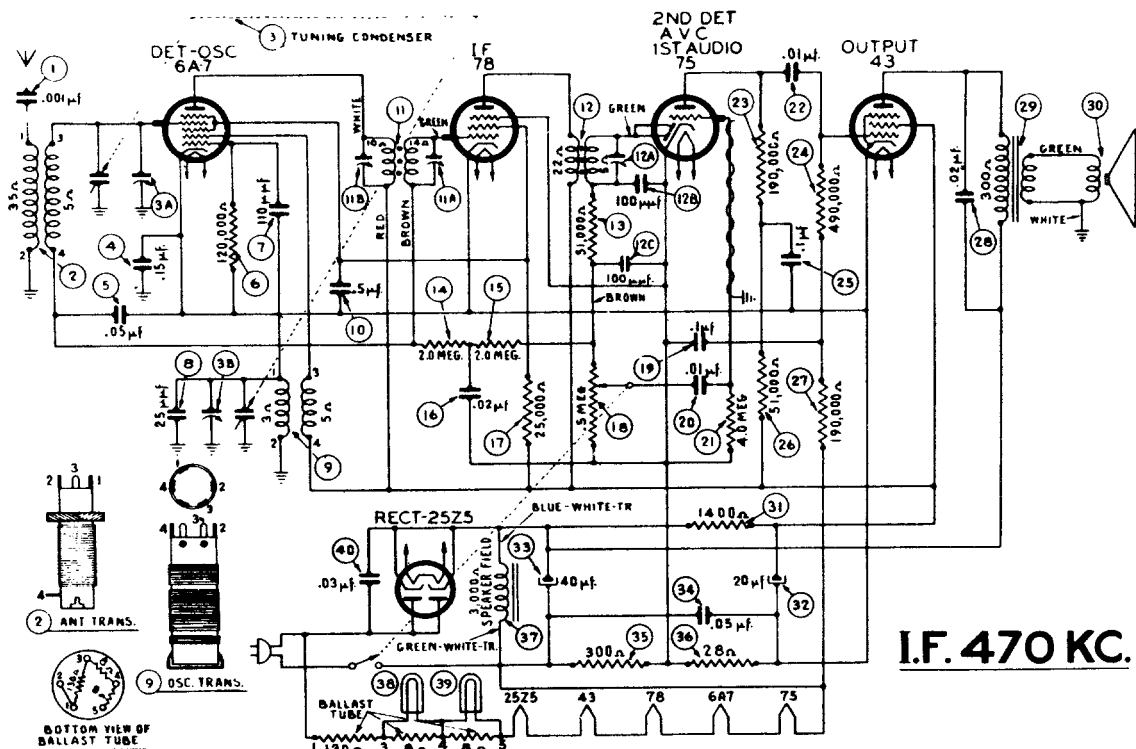


Schem. No.	Description	Part No.
1	Condenser (.001 mfd. tubular)	30-4453
2	Antenna Transformer	32-3039
3	Tuning Condenser Assembly	31-2265
4	Condenser (.15 mfd. tubular)	30-4505
5	Condenser (.05 mfd. tubular)	30-4519
6	Resistor (120,000 ohms, 1/2 watt)	33-412339
7	Condenser (110 mmf., mica)	30-1031
8	Condenser (25 mmf., silver plated mica)	30-1112
9	Oscillator Transformer	32-3040
10	Condenser (.5 mf., tubular)	30-4551
11	1st I. F. Transformer Assembly	32-3075
12	2nd I. F. Transformer Assembly	32-2944
13	Resistor (51,000 ohms, 1/2 watt)	33-351339
14	Resistor (2.0 megohms, 1/2 watt)	33-520339
15	Resistor (2.0 megohms, 1/2 watt)	33-520339
16	Condenser (.02 mf., tubular)	30-4516
17	Resistor (25,000 ohms, 1/2 watt)	33-325339
18	Volume Control and On-Off Switch	33-5276
19	Condenser (.1 mf., tubular)	30-4499
20	Condenser (.01 mf., tubular)	30-4572
21	Resistor (4.0 megohms, 1/2 watt)	33-540339
22	Condenser (.01 mf., tubular)	30-4572
23	Resistor (190,000 ohms, 1/2 watt)	33-419339
24	Resistor (490,000 ohms, 1/2 watt)	33-449339
25	Condenser (.1 mf., tubular)	30-4499
26	Resistor (51,000 ohms, 1/2 watt)	33-351339
27	Resistor (190,000 ohms, 1/2 watt)	33-419339
28	Condenser (.02 mf., tubular)	30-4215
31	Resistor (1400 ohms, 1/2 watt)	33-214339
32	Condenser (20 mf., electrolytic)	30-2245
33	Condenser (40 mf., electrolytic)	30-2332
34	Condenser (.05 mf., tubular)	30-4444
35	Resistor (300 ohms, wire wound)	33-130431
36	Resistor (28 ohms, 1/2 watt)	33-028339

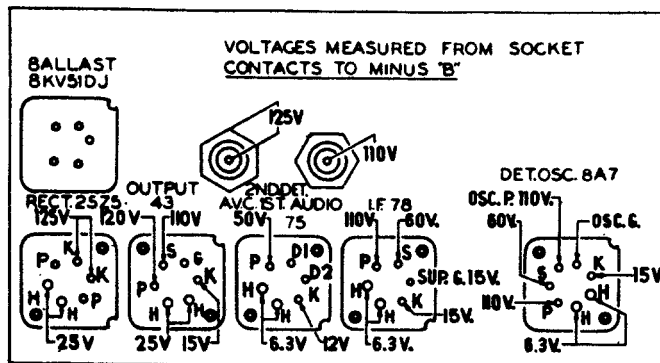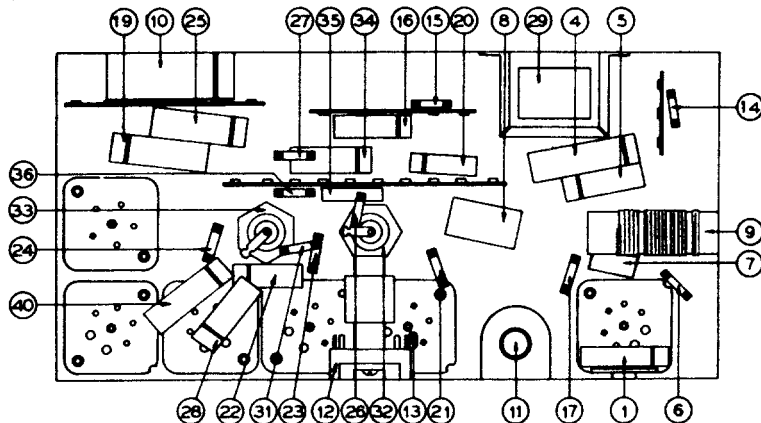

93

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

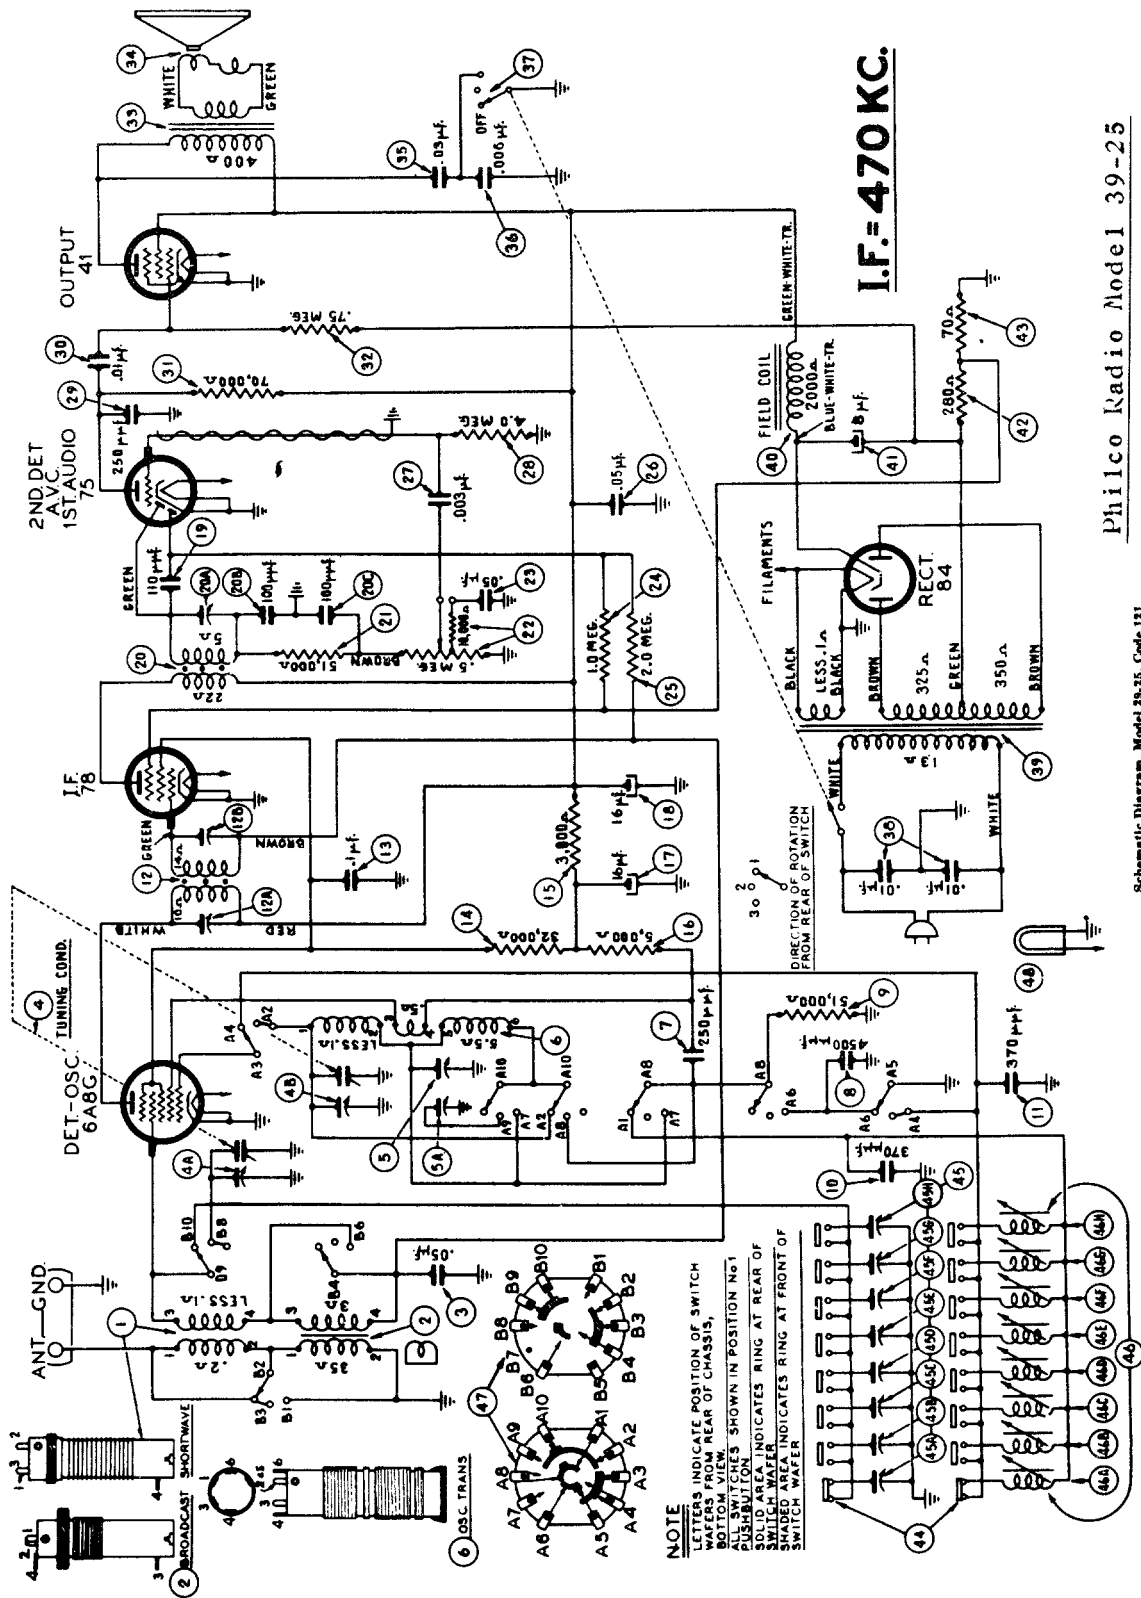

I.F. = 470 KC.

Philco Radio Model 39-25

Schematic Diagram, Model 25-25, Code 131

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

Models 39-30, 31 and 39-35, Code 121

PHILCO

TYPE OF CIRCUIT:

Models 39-30 and 39-35 code 121 are similar with the exception of the type of Cabinets, Speakers and Power Transformers. These differences are shown on the Replacement Parts list and circuit diagram.

Models 39-31XF and 39-31XK are identical to Model 39-35, Code 121 with the exception of cabinets.

The Model 39-35, code 121 specifications, diagram and replacement parts listed below and on the following pages apply to Models 39-31XF and XK.

A.C. operated; superheterodyne circuit with two tuning ranges, covering standard broadcast (540 K.C. to 1720 K.C.) and short-wave (4.9 M.C. to 18.0 M.C.) frequencies; Automatic Volume Control; and pentode output.

POWER SUPPLY:



Voltage, 115 volts. Frequency, 50-60 cycles. Power consumption 45 watts.

INTERMEDIATE FREQUENCY:

470 K.C.

TUNING RANGES:

540 K.C. to 1720 K.C.; 4.9 M.C. to 18.0 M.C.

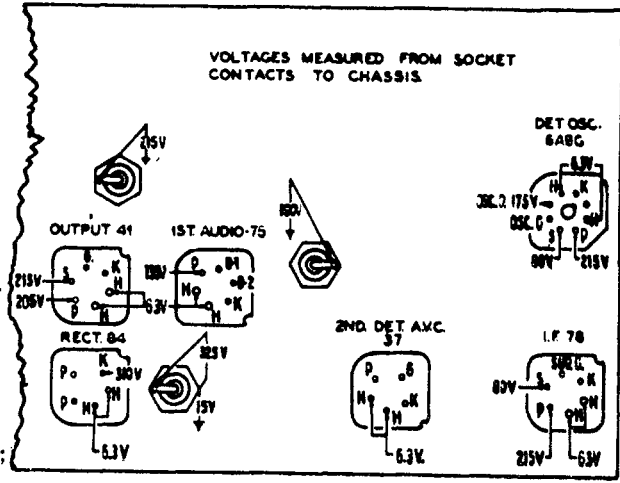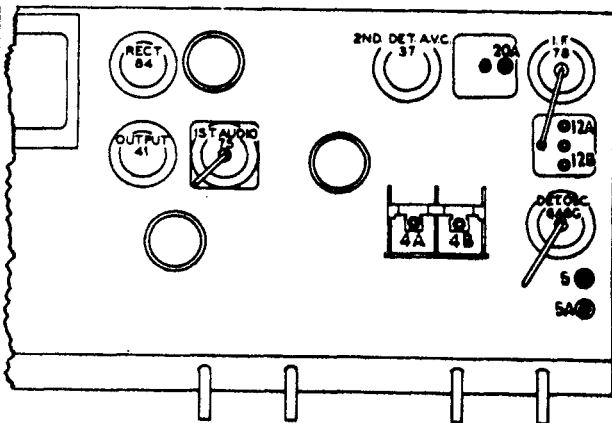

Alignment of Compensators

EQUIPMENT REQUIRED:

- (1) Signal Generator: philco Model 077 Signal Generator which has a fundamental frequency range from 115 to 36,000 K.C. is the correct instrument for this purpose.
- (2) Output meter, Philco Model 027 Circuit Tester, incorporates a sensitive output meter and is recommended.
- (3) Philco Fiber Handle Screw Driver, Part No. 27-7059, and Fiber Wrench, Part No. 3184.

OUTPUT METER:

Two indicating devices for aligning of the receiver can be used; either an audio output meter or a vacuum tube voltmeter. The method of connecting the audio output meter is given in the next paragraph. The procedure for connecting the vacuum tube voltmeter as an aligning indicator will be found on Page 4. Where greater accuracy of the various tuned circuits is desired, the vacuum tube voltmeter is recommended as an aligning device.

The Philco 027 Output Meter is connected to the plate and cathode terminals of the type 41 tube. After connecting the Output Meter, adjust compensators in the order as given below.


Operations	Signal Generator			Receiver		
	Output Connections To Receiver	Dummy Antenna (Note A)	Dial Setting	Dial Setting	Control Settings	Adjust Compensators In Order
1	6AB6 Grid	.1 mf.	470 K.C.	580 K.C.	Vol. Cont. Max.	(20A) (12B) (12A)
2	Ant. Ter.	100 muf.	18.0 M.C.	18.0 M.C.	Vol. Cont. Max.	(4B)
3	Ant. Ter.	100 muf.	1550 K.C.	1550 K.C.	Vol. Cont. Max.	(5) (4A)
4	Ant. Ter.	100 muf.	580 K.C.	580 K.C.	Vol. Cont. Max.	(5A)
5	Ant. Ter.	100 muf.	1550 K.C.	1550 K.C.	Vol. Cont. Max.	(5)

A--The "Dummy Antenna" consists of a condenser connected in series with the signal generator output lead (high side). Use the capacity as specified in each step of the above procedure.

receiver correctly the dial pointer must be aligned to track properly with the tuning condenser. To adjust the dial proceed as follows: With the tuning condenser closed, set the dial pointer on the extreme left index line at the low frequency end of the scale.

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1939 MOST POPULAR Philco Radio Models 39-30, 39-31, 39-35

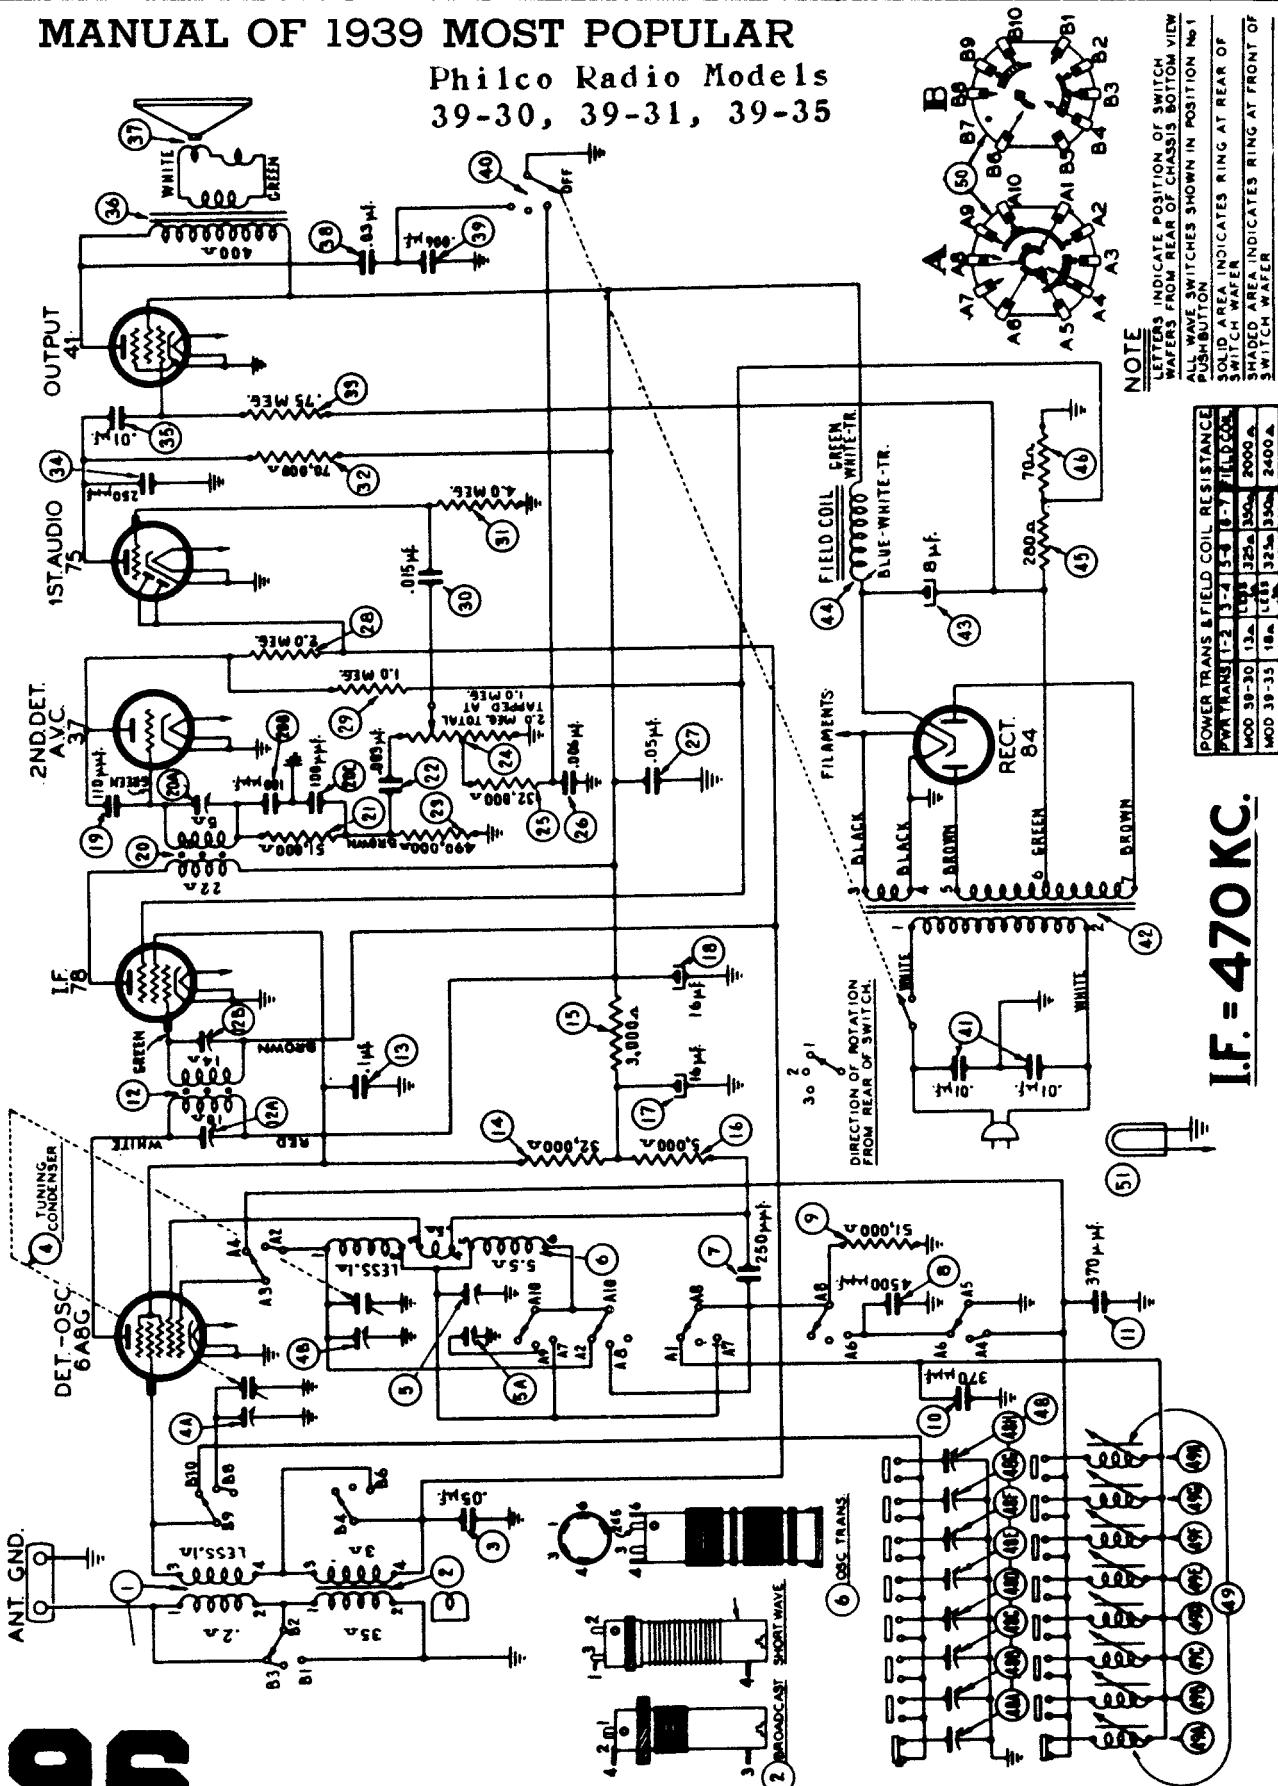

NOTE
LETTERS INDICATE POSITION OF SWITCH WAFERS FROM REAR OF CHASSIS BOTTOM VIEW
ALL WAVE SWITCHES SHOWN IN POSITION No 1 PUSH-BUTTON
SOLID AREA INDICATES RING AT REAR OF SWITCH WAFER
SHADED AREA INDICATES RING AT FRONT OF SWITCH WAFER

POWER TRANS	1-2	3-4	5-6	7-8	FIELD COIL
MOD 39-30	12Ω	12Ω	12Ω	12Ω	2000Ω
MOD 39-35	18Ω	18Ω	18Ω	18Ω	2400Ω


I.F. = 470 KC.

96

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MOST POPULAR SERVICE DIAGRAMS


Model 39-40, Code 121

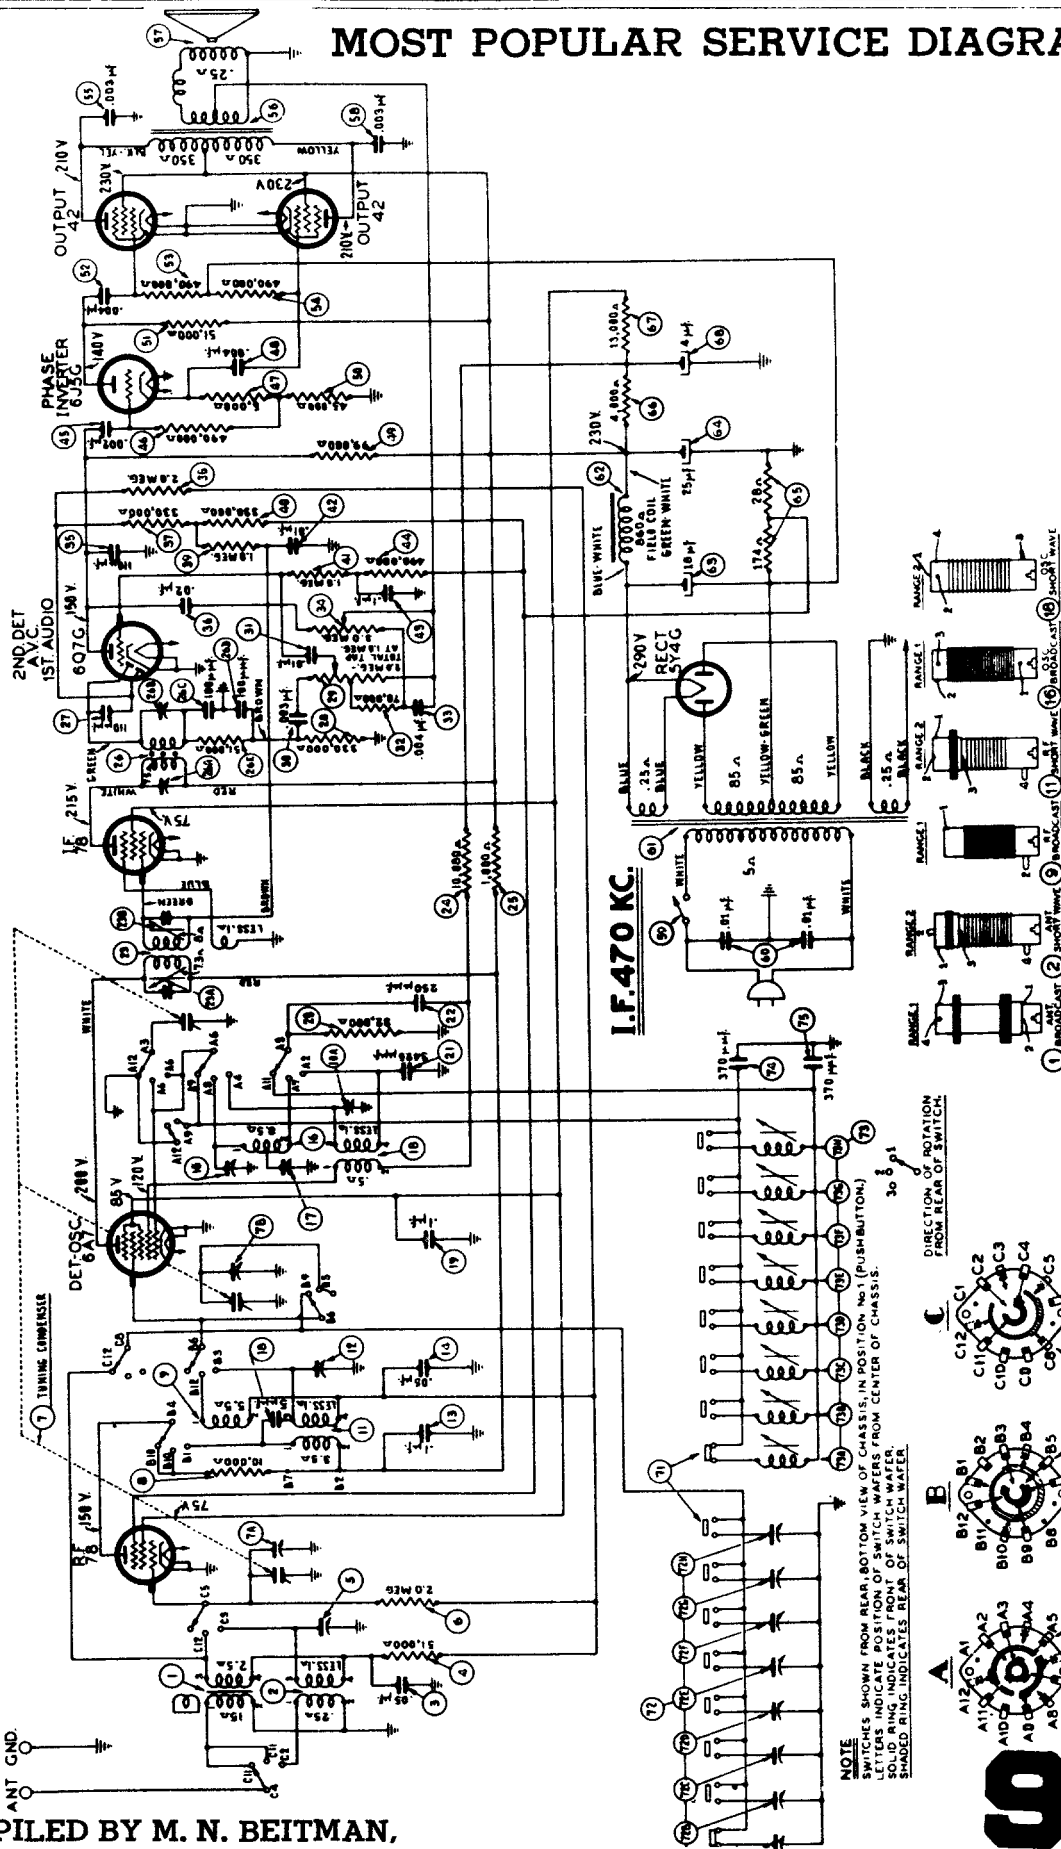

Philco Radio & Television Corp.

COMPILED BY M. N. BEITMAN,

DRIVE COND SHOWN IN
DOTTED LINES MUST BE
FIRST USING SLOTS ON
INNER SIDE OF DRUM.
GANG CLOSED

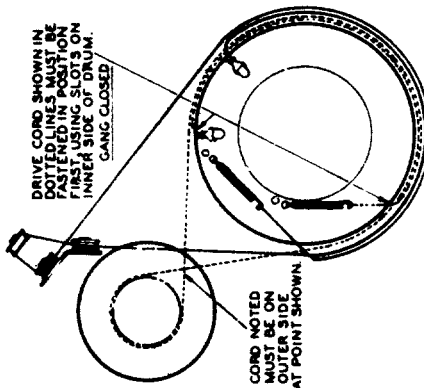

CORDS NOTED
ON OUTER SIDE
OF DRUM
AT POINT SHOWN

METHOD OF INSTALLING DRIVE CORDS ON TUNING CONDENSER DRUM


Opera- tions	SIGNAL GENERATOR			RECEIVER		
	Output Connections to Receiver	Dummy Antenna (Note A)	Dial Setting	Dial Setting	Control Setting	Adjust Compensators to Max. Reading
1	6A7	.1 mf	470 KC.	580 KC.	Vol. Max. Range Switch Broadcast	26B, 26A, 23B, 23A
2	Ant. Ter.	150 mmf	1550 KC.	1550 KC.	"	15, 7B, 7A
3	Ant. Ter.	150 mmf	580 KC.	580 KC.	"	17
4	Ant. Ter.	150 mmf	1550 KC.	1550 KC.	"	15
5	Ant. Ter.	400 ohms	18.0 MC.	18.0 MC.	Range Switch S. W.	15A, 12, 5

NOTE A—The "Dummy Antenna" consists of a condenser connected in series with the signal generator output lead (high side). Use the capacity as specified in each step of the above procedure.


NOTE B—Dial Calibration. In order to adjust the receiver correctly, the dial must be aligned to track properly with the tuning condenser. To adjust

the dial, proceed as follows: With the tuning condenser closed (maximum capacity), set the dial pointer on the extreme left index line at the low frequency end of the broadcast scale. The arrangement of the drive cable is shown on page 3.

NOTE C—Compensators (7A) and (7B) are located on top of the tuning condenser. Compensator (7A) is the first one from the tuning drum side.

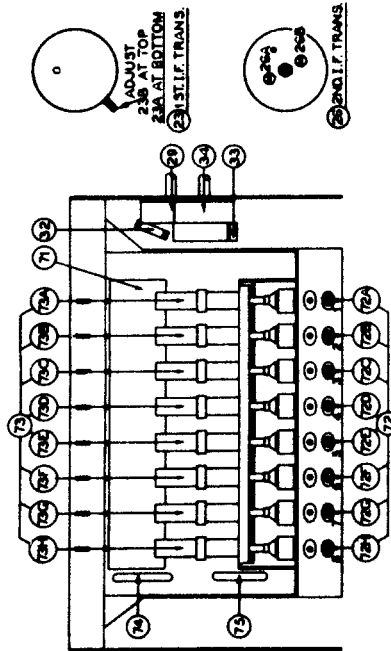



ELECTRIC AUTOMATIC PUSH BUTTON UNIT

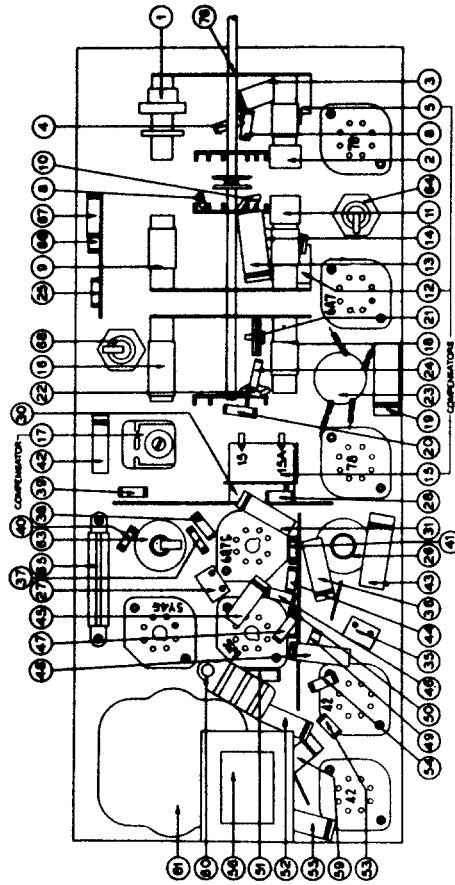


PART LOCATIONS UNDERSIDE OF CHASSIS MODEL 39-40

MOST POPULAR SERVICE DIAGRAMS

Model 39-45, Code 121

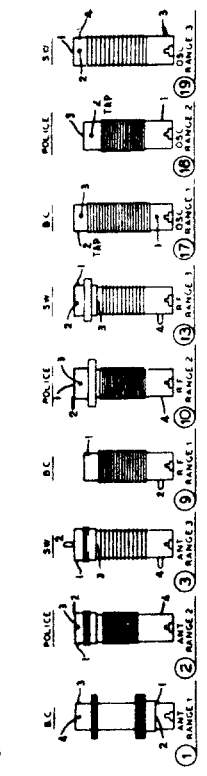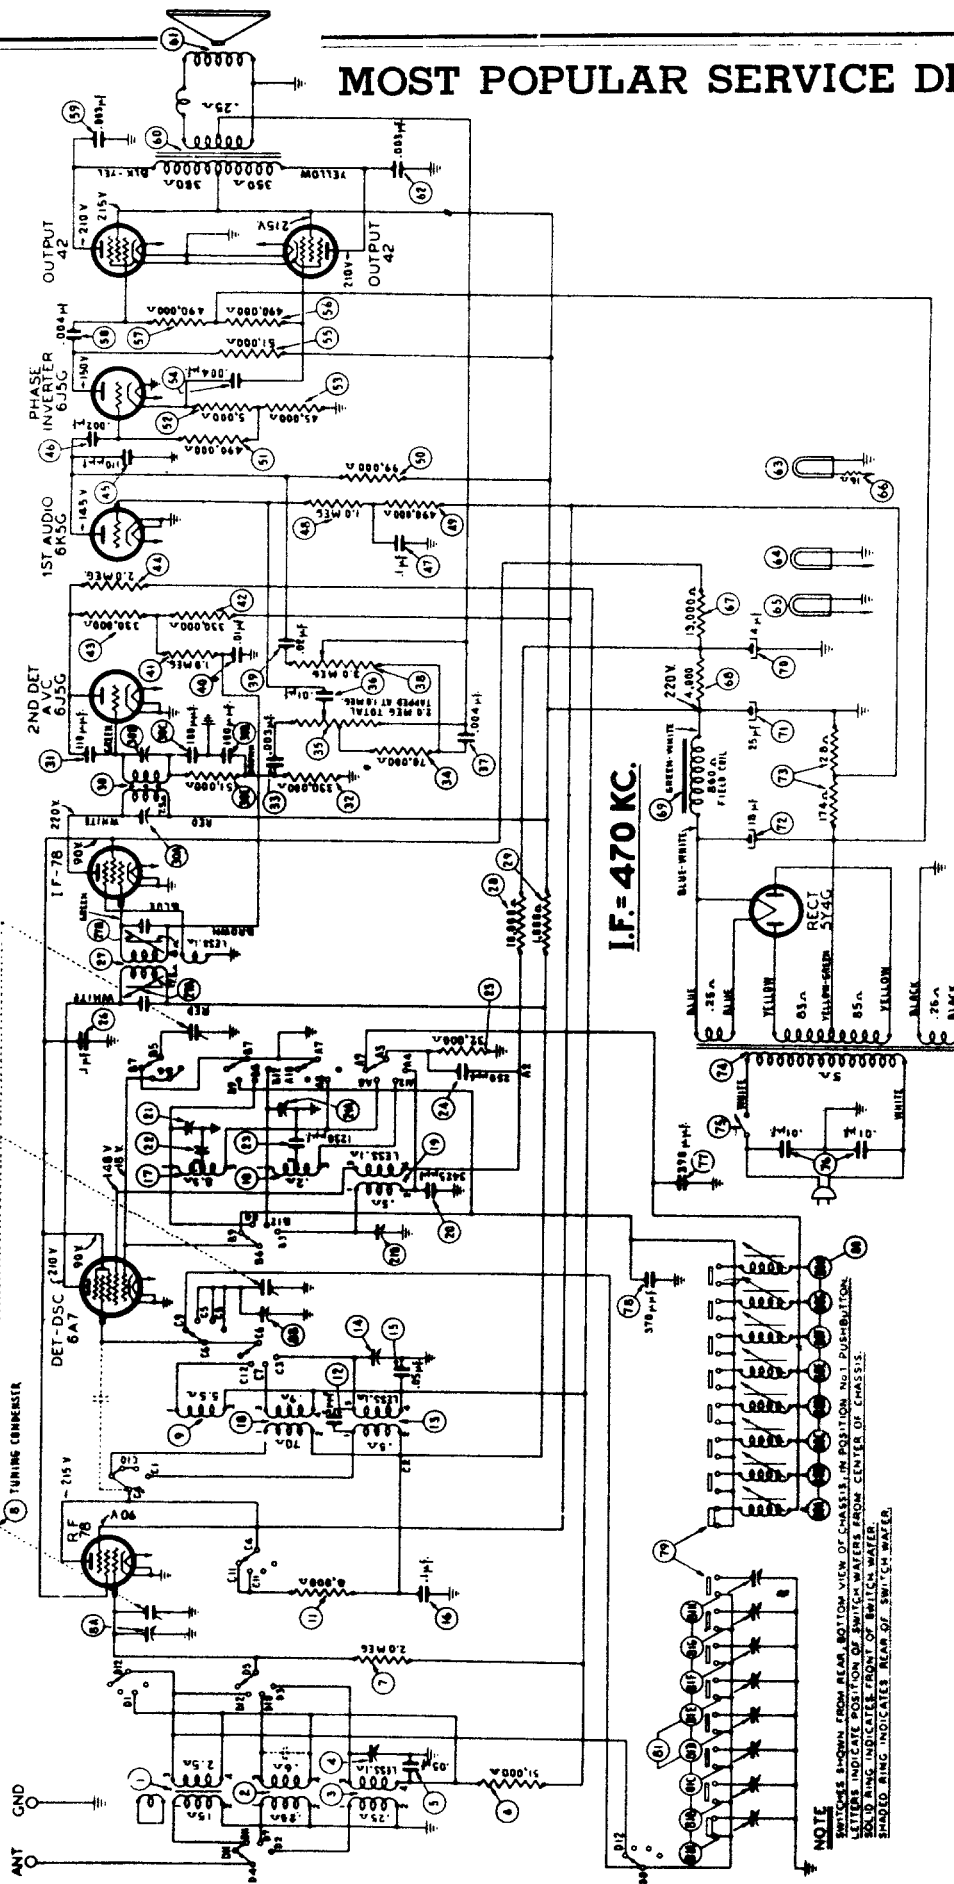

3 2 1
4 0 1
DIRECTION OF ROTATION
FROM REAR OF SWITCH

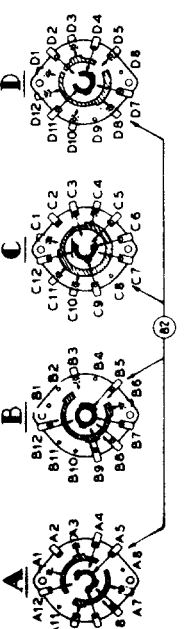

99

PHILCO

Model 39-45, Code 121


Operation	SIGNAL GENERATOR			RECEIVER			Special Instructions
	Output Connections to Receiver	Dummy Antenna (Note A)	Dial Setting	Dial Setting	Control Setting	Adjust Compensators to Max. Reading	
1	6A7	.1 mf	470 KC.	470 KC.	Vol. Max. Range Switch Broadcast	30B, 30A, 27B, 27A	
2	Antenna	150 mmf	1550 KC.	1550 KC.	"	21, 8B, 8A	See Note B and C
3	Antenna	150 mmf	580 KC.	580 KC.	"	22	Roll Tuning Condenser
4	Antenna	150 mmf	1550 KC.	1550 KC.	"	21	
5	Antenna	400 ohms	5.0 MC.	5.0 MC.	Range Switch Police	21A	
6	Antenna	400 ohms	18.0 MC.	18.0 MC.	Range Switch S. W.	21B, 14, 4	

NOTE A—The "Dummy Antenna" consists of a condenser connected in series with the signal generator output lead (high side). Use the capacity as specified in each step of the above procedure.

NOTE B—Dial Calibration: In order to adjust the receiver correctly the dial must be aligned to track properly with the tuning condenser. To adjust the dial, proceed as follows: With the tuning condenser closed (maximum

capacity), set the dial pointer on the extreme left index line at the low frequency end of the broadcast scale. The arrangement of the drive cable is shown on page 3.

NOTE C—Compensators (8A) and (8B) are located on top of the tuning condenser. Compensator (8A) is the first one from the tuning drum side.

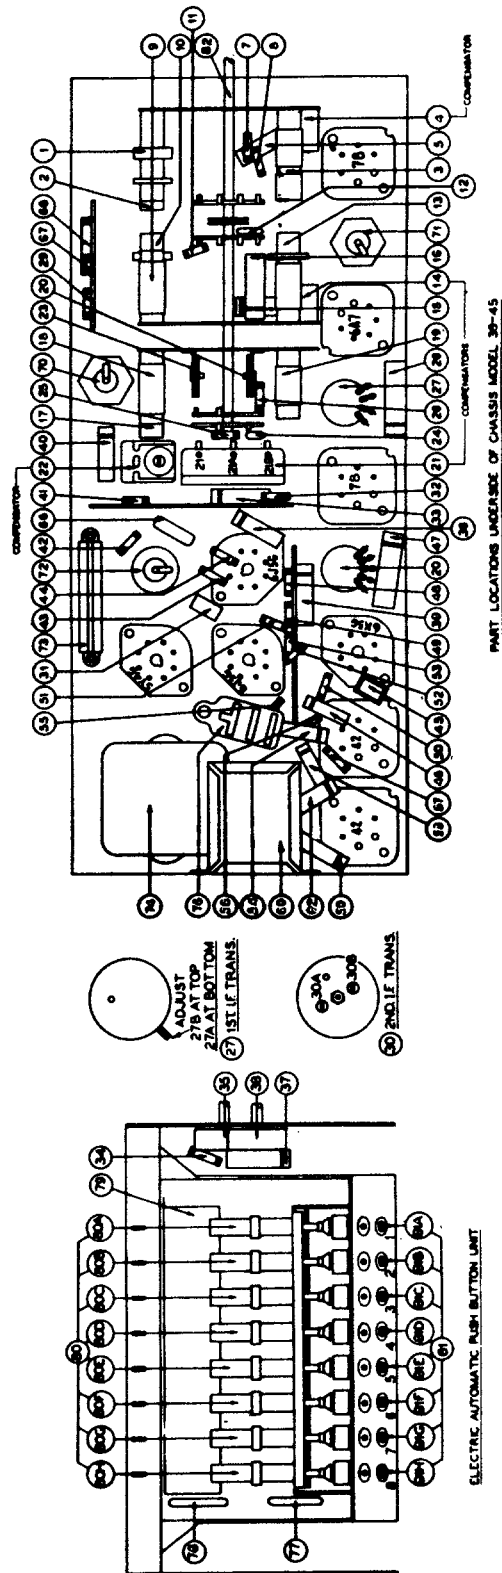

PHILCO Models 39-55, 39-116

ADJUSTING MYSTERY CONTROL FREQUENCY AMPLIFIER

The Mystery Control receivers are shipped with five (5) different control frequencies which range from 350 to 400 K.C. These are identified by code numbers appearing on the serial number ticket and on the rear of the chassis. These code numbers and frequencies are as follows:

- Code 5—355 K.C.
- Code 6—367 K.C.
- Code 7—375 K.C.
- Code 8—383 K.C.
- Code 9—395 K.C.

The purpose of the different control frequencies is to prevent interaction between two Mystery Control receivers which are on the same floor or are exceptionally close together. When several Mystery Control receivers are to be located close together, it will be necessary to use different control frequencies to avoid interaction between the receivers. In order to prevent interaction between receivers, there should be a difference of 20 K.C. between their control frequencies.

If three receivers are to be operated at the same time and are closely situated, it will be advisable to adjust the control frequency of the first set to 355 K.C., the second set to 375 K.C. and the third to 395 K.C.

When realigning or changing the control frequency of the Mystery Control circuit, a Philco Model 077 Signal Generator with a coil of wire (about 4 or 5 turns—12" in diameter) attached to the output terminals is required. The leads between the coil of wire and Signal Generator should be long enough so that the coil of wire can be placed near the large secondary inductor in the bottom of the receiver cabinet.


With this apparatus, the Control Frequency is adjusted as follows:

1. With the temporary coil of wire in the center of (or near) the secondary inductor, the control frequency to which the Mystery Control Amplifier is tuned can be determined by tuning the Signal Generator between 350 and 400 K.C. When the Signal Generator is tuned to the control frequency, the Thyatron (2A4G) tube will glow (blue haze). If this frequency is to be used, leave the Signal Generator indicator at this point or turn the indicator to any other frequency desired between 350 and 400 K.C.
2. When the control frequency is selected, turn the sensitivity control (117) in Model 116 and (89) Model 55,

located on the left rear of the chassis—towards the position marked "extreme." Using the 2A4G Thyatron tube as a resonance indicator, adjust padders (103), (115), (119) in Model 116 and (74), (85), (90) in Model 55 for maximum signal. This will be indicated by the brilliance of the glow in the 2A4G Thyatron tube. As the padders are adjusted, gradually turn the sensitivity control to the "near" position or reduce the output from the Signal Generator. When the padders are correctly adjusted to maximum, the Thyatron will glow with the sensitivity control (117) at the "near" position and with a very weak signal from the Signal Generator.

3. Next, adjust the padding condenser (121) in Model 116 and (92) in Model 55 on the secondary inductor located in the bottom of the receiver. The padding condenser is located in one corner of the secondary inductor and is encased in a cardboard container. This padding condenser should be carefully adjusted for maximum glow in the 2A4G tube. Use the weakest signal possible from the Signal Generator that will cause the 2A4G to glow. Also, have the sensitivity control as close as possible to the "near" position. Extreme care should be used in adjusting the padder to the exact point of resonance, as the secondary inductor is a very sharply tuned circuit. After adjusting the circuit, remove the Signal Generator and loop from the receiver.
4. The Mystery Control unit is now adjusted as follows:
 - A. Dial any one of the stations indicated on the remote unit by pulling the selector to the "Stop" position. Then, as the dial is released at the "Stop," press the "Stop" down and hold it in this position.
 - B. Holding the "Stop" in this position, bring the Mystery Control unit close to the receiver. Using the padding wrench, tune the padding screw (126) located on the bottom of the unit until the 2A4G Thyatron in the receiver glows at full brilliance.


Now, turn the sensitivity control on the receiver towards the "near" position until a point is reached where the 2A4G tube almost stops glowing. Then, readjust the padder (126) of the unit again for maximum brilliance in the 2A4G tube. The Mystery Control unit should now be adjusted to the same frequency as the control frequency in the receiver.

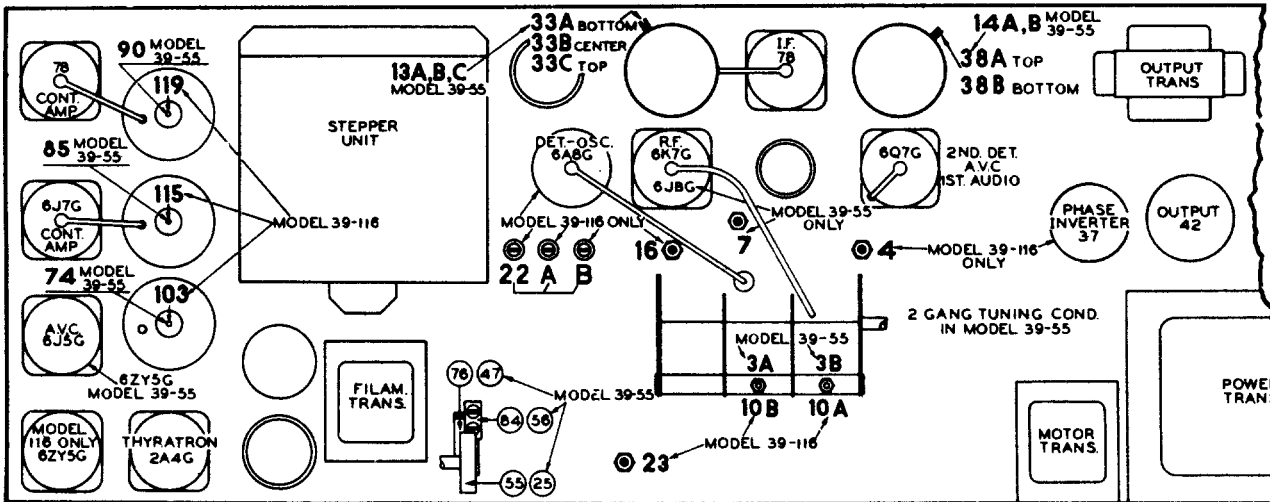

Locations of Compensators—Model 39-55 and 39-116

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

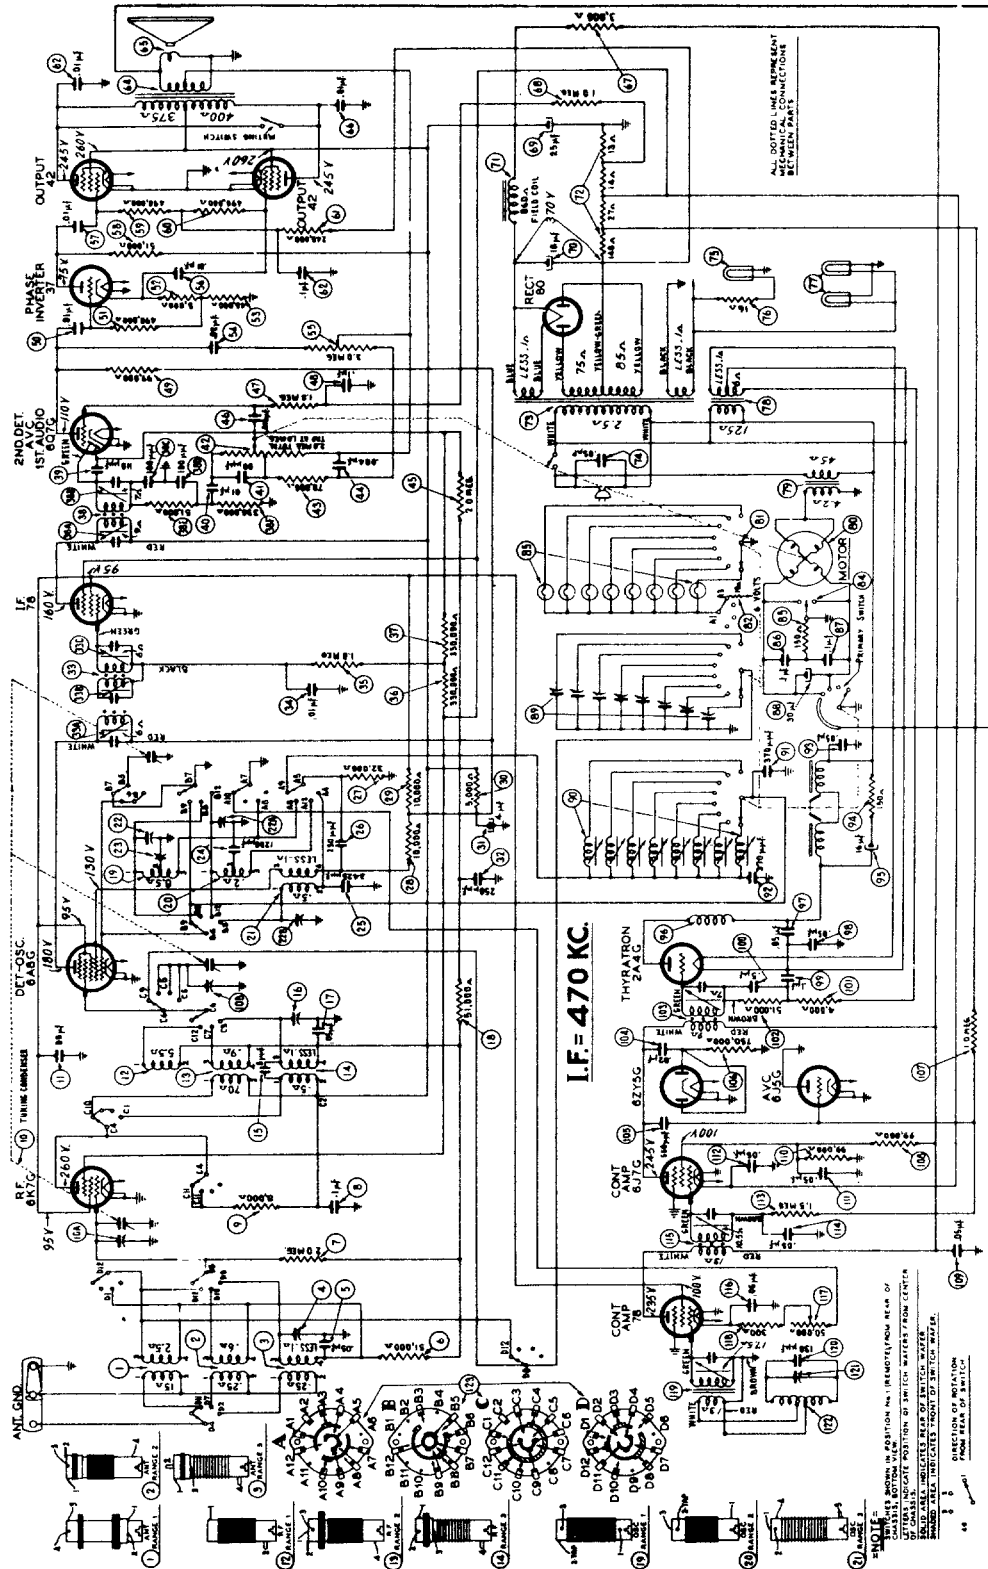

PHILCO **Model 39-116**
 Socket Voltage Measured for Socket Contacts to Chassis. Line Voltage 115 V.A.C. Volume Minimum, Raster Selector. (Broadcast)


MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

RADIO RECEIVER CIRCUIT ADJUSTMENTS Model 39-116


Operation	SIGNAL GENERATOR				RECEIVER			Special Instructions
	Output Connections to Receiver	Dummy Antenna (Note A)	Dial Setting	Dial Setting	Dial Setting	Control Setting	Adjust Compensators	
1	78 Grid	.1 mfd.	470 K.C.	580 K.C.	Vol. Max. Range Switch Brdset.	38A, 38B	Turn Out 33B Full	
2	6A8 Grid	.1 mfd.	470 K.C.	580 K.C.	Vol. Max. Range Switch Brdset.	33C, 33A, 33B, 38B	Note B	
3	Antenna and Ground	150 mmfd.	1550 K.C.	1550 K.C.	Vol. Max. Range Switch Brdset.	22, 10B, 10A		
4	Antenna and Ground	150 mmfd.	580 K.C.	580 K.C.	Vol. Max. Range Switch Brdset.	23	Rollgang	
5	Antenna and Ground	150 mmfd.	1550 K.C.	1550 K.C.	Vol. Max. Range Switch Brdset.	22		
6	Antenna and Ground	400 ohms	5.0 M.C.	5.0 M.C.	Vol. Max. Range Switch Police	22A		
7	Antenna and Ground	400 ohms	18.0 M.C.	18.0 M.C.	Vol. Max. Range Switch Short Wave	22B, 16, 4	Note C	

RADIO RECEIVER CIRCUIT ADJUSTMENTS Model 39-55

Operation	SIGNAL GENERATOR				RECEIVER			Special Instructions
	Output Connections to Receiver	Dummy Antenna (Note A)	Dial Setting	Dial Setting	Dial Setting	Control Setting	Adjust Compensators	
1	78 Grid	.1 mfd.	470 K.C.	580 K.C.	Vol. Max. Range Switch Brdset.	14A, 14B	Turn Out 13B Full	
2	6J8G Grid	.1 mfd.	470 K.C.	580 K.C.	Vol. Max. Range Switch Brdset.	13C, 13A, 13B, 14B	Note B	
3	Antenna and Ground	150 mmfd.	1550 K.C.	1550 K.C.	Vol. Max. Range Switch Brdset.	3B, 3A		
4	Antenna and Ground	150 mmfd.	580 K.C.	580 K.C.	Vol. Max. Range Switch Brdset.	7	Rollgang	
5	Antenna and Ground	150 mmfd.	1550 K.C.	1550 K.C.	Vol. Max. Range Switch Brdset.	3B, 3A	Note C	


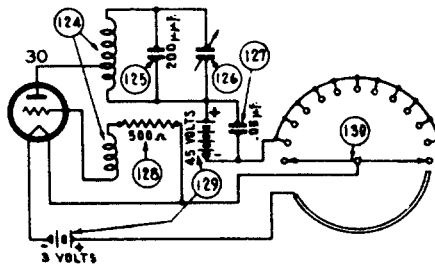


Mystery Control Unit Diagram

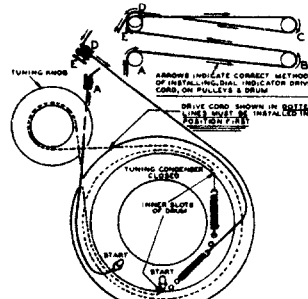

ARRANGEMENT OF DRIVE CORDS ON TUNING CONDENSER DRUM & PULLEYS

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

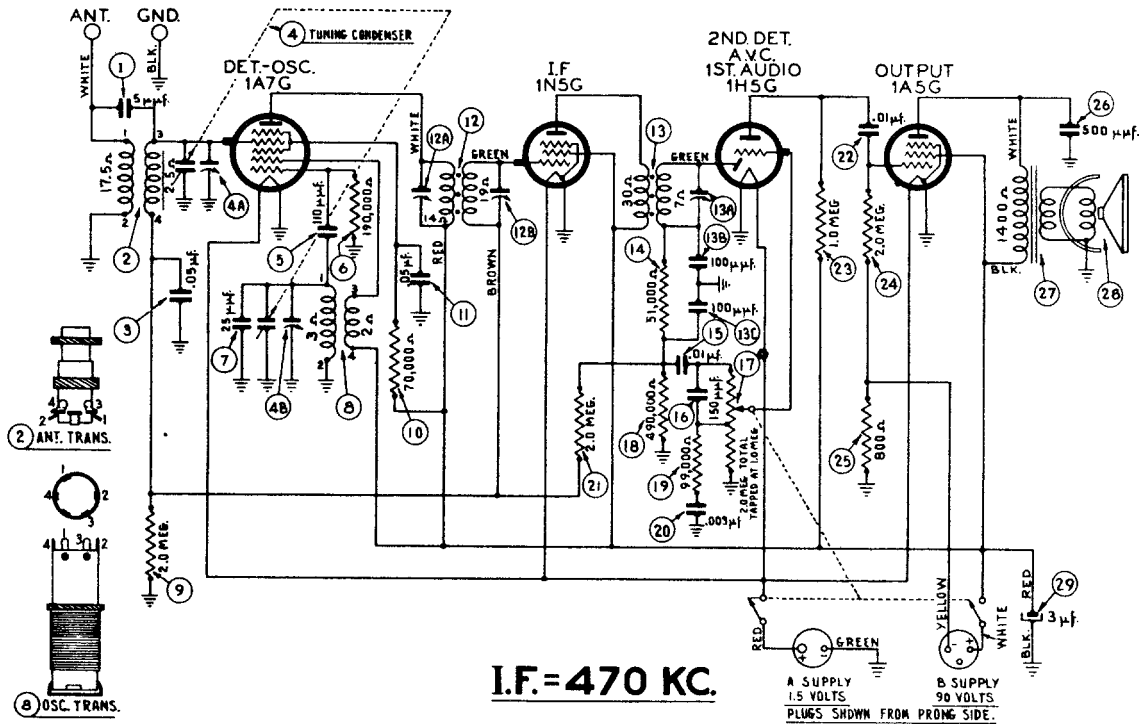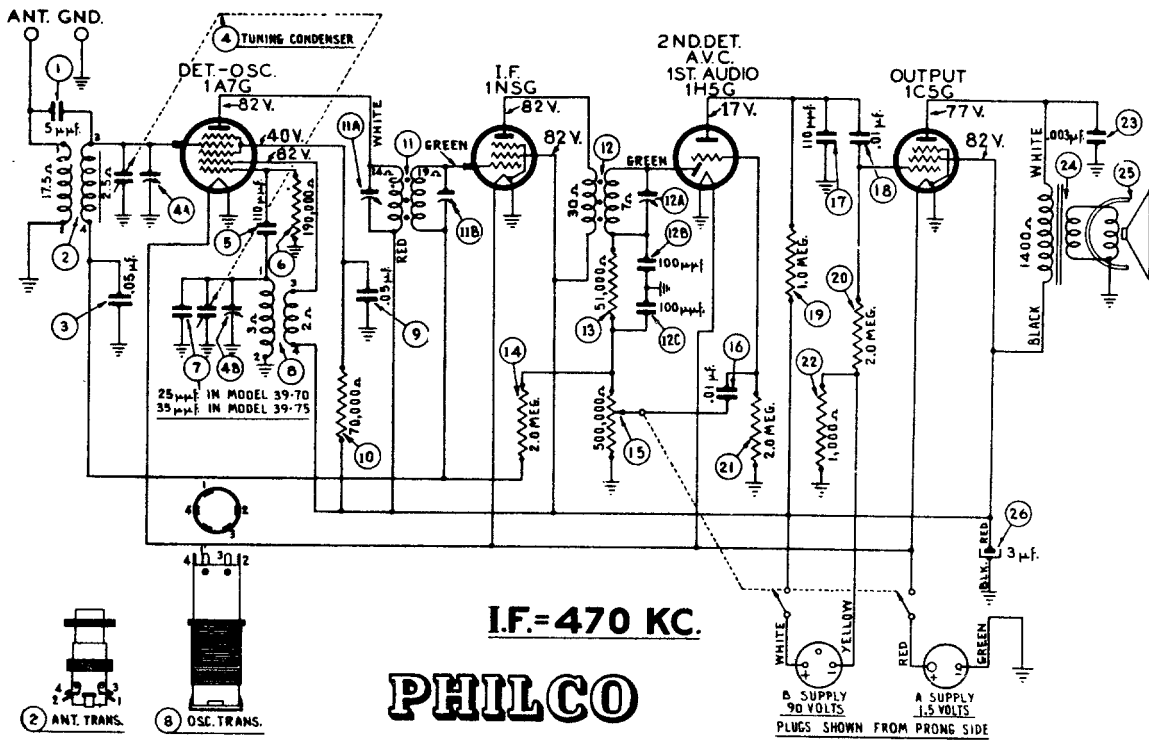

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

PROCEDURE FOR MODELS 39-70 AND 39-75

Operations in Order	SIGNAL GENERATOR			RECEIVER		
	Output Connections to Receiver	Dummy Antenna Note A	Dial Setting	Dial Setting	Control Setting	Adjust Compensators
1	1A7G Grid	.1 mfd.	470 K. C.	580 K. C.	Vol. Max.	12A, 11B, 11A
2	Ant. (White)	225 mfd.	1550 K. C.	1550 K. C.	Vol. Max.	4B, 4A

PROCEDURE FOR MODEL 39-80

Operations in Order	SIGNAL GENERATOR			RECEIVER		
	Output Connections to Receiver	Dummy Antenna Note A	Dial Setting	Dial Setting	Control Setting	Adjust Compensators
1	1A7G Grid	.1 mfd.	470 K. C.	580 K. C.	Vol. Max.	13A, 12B, 12A
2	Ant. (White)	225 mfd.	1550 K. C.	1550 K. C.	Vol. Max.	4B, 4A

A—The "Dummy Antenna" consists of a condenser or resistor connected in series with the signal generator output lead (high side). Use the capacity or resistance as specified in each step of the above procedure.


B—DIAL CALIBRATION: In order to adjust the receiver correctly, the dial must be aligned to track properly with the tuning condenser.

Model 39-70 and 39-80—To adjust the dial proceed as follows: Turn the tuning condenser to maximum capacity (plates fully meshed). With the tuning condenser in this position, set the pointer horizontally across the dial.

Model 39-75—With the tuning condenser in the maximum capacity position (plates fully meshed), loosen the coupling screws connecting the push-button unit to the condenser. The pointer is then set on the extreme left edge of the index line (low frequency end of the scale) with the tuning condenser fully closed. The gang is then opened until the pointer is at the right edge of the index line. The push-button shaft is then turned counter-clockwise to its "stop." With the tuning condenser and push-button shaft in these positions tighten the coupling set screws.

C—The locations of the compensators in Models 39-70, 39-75 and 39-80 are shown in Figs. (1), (2) and (3) respectively.

Fig. 3. Compensator and Part Locations
Model 39-80, Code 121
Underside of Chassis

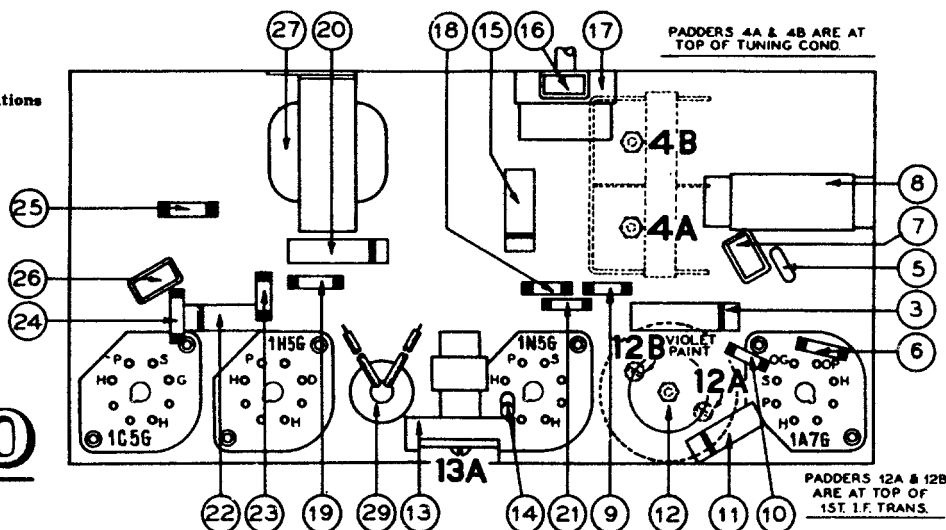

PHILCO

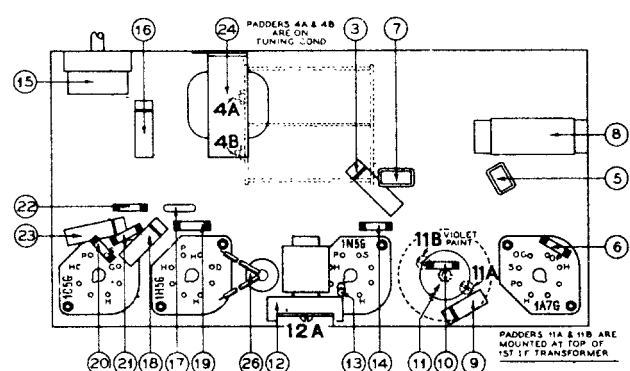


Fig. 1. Compensator and Part Locations
Model 39-70, Code 121

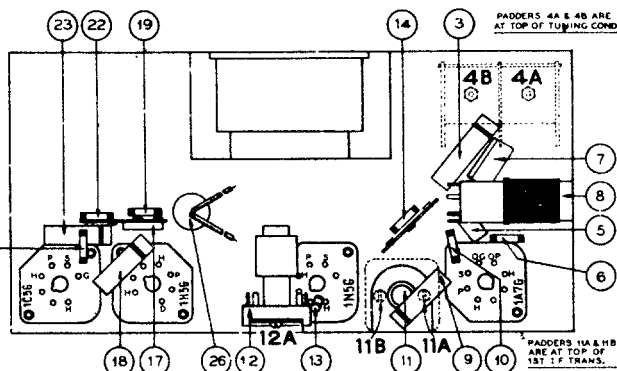



Fig. 2. Compensator and Part Locations
Model 39-75, Code 121-122
Underside of Chassis

106

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

PHILCO Model 39-71, Codes 121, 122

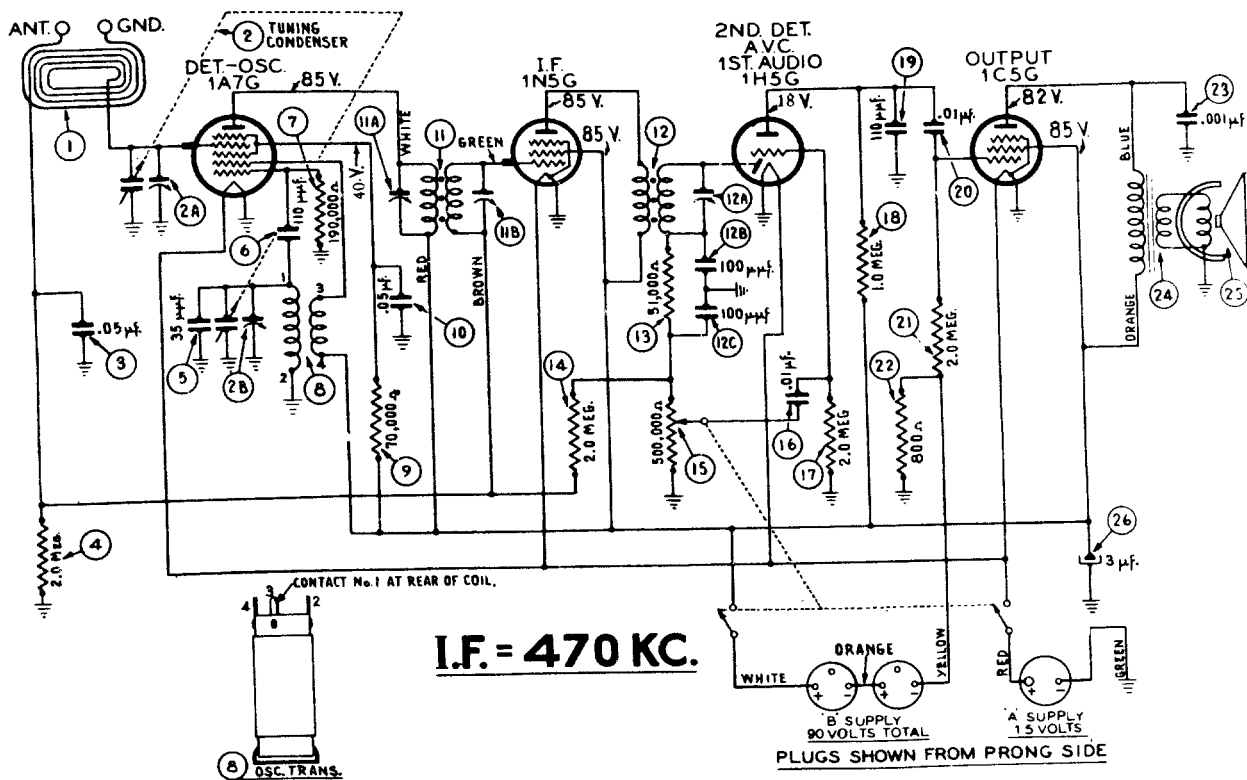

Operations in Order	SIGNAL GENERATOR			RECEIVER		
	Output Connections to Receiver	Dummy Antenna (Note A)	Dial Setting	Dial Setting	Control Settings	Adjust Compensators in Order
1	1A7G Grid	.1 mfd.	470 K. C.	580 K. C.	Vol. Cont. Max.	12A, 11B, 11A
2	Ant. & Grd. Terminals	400 ohms	1550 K. C.	1550 K. C.	Vol. Cont. Max.	2B, 2A

A — The "Dummy Antenna" consists of a condenser or resistor connected in series with the signal generator output lead (high side). Use the capacity or resistance as specified in each step of the above procedure.

B — **DIAL CALIBRATION:** In order to adjust the receiver correctly, the dial must be aligned to track properly with the tuning condenser. To adjust the dial proceed as follows: Turn the tuning condenser to maximum capacity (plates fully meshed). With tuning condenser in this position set the pointer to the small "black dot" at the low frequency end of the dial scale.

C — To adjust the I. F. compensators, remove the back from the cabinet, which is held in place by four screws. The chassis is then taken out by removing the four screws and two corks underneath the cabinet, and the Tuning and Volume knobs. The I. F. compensators are located on top of the I. F. transformers.

When adjusting the Antenna (2A) and Oscillator (2B) compensators, the chassis must be assembled in the cabinet with the batteries and loop in place. The Signal Generator output lead with the "Dummy Antenna" is then connected to the terminals marked "Ant" and "Grd" underneath the cabinet. The antenna and oscillator compensators are then adjusted through the holes in the bottom of the cabinet.

Replacement Parts


Code No.	Description	Part No.	Code No.	Description	Part No.	Code No.	Description	Part No.
1	Loop Assy.	40-6421	14	Resistor (2 megohms)	33-520339	26	Electrolytic Cond. (3 mf.)	30-2359
2	Tuning Cond. (.05 mf.)	31-2322	15	Volume Control & Switch	33-5301		Bezel Window	27-5434
3	Tubular Cond. (.05 mf.)	30-4519	16	Tubular Cond. (.01 mf.)	30-4572		Dial	31-2321
4	Resistor (2 megohm)	33-520339	17	Resistor (2 megohm)	33-520339		Dial Pointer	28-5185
5	Mica Cond. (35 mmf.)—mounted on top of tuning condenser	30-1095	18	Resistor (1 megohm)	33-510339		Dial Drive Cord Assy.	31-2323
6	Mica Cond. (110 mmf.)	30-1031	19	Mica Cond. (110 mmf.)	30-1031		Dial Tuning Shaft & Brkt. Assy.	56-1252
7	Resistor (190,000 ohms)	33-419339	20	Tubular Cond. (.01 mf.)	30-4572		Escutcheon (knobs)	W-2129
8	Oscillator Trans.	32-3118	21	Resistor (2 megohm)	33-520339		Escutcheon (screws)	27-4331
9	Resistor (70,000 ohms)	33-370339	22	Resistor (800 ohms)	33-180339		Knob (Tuning, Volume)	40-6421
10	Tubular Cond. (.05 mf.)	30-4444	23	Tubular Cond. (.001 mf.)	30-4201		Loop Antenna	28-6662
11	1st I. F. Trans. Assy.	32-3103	24	Output Trans. for Speaker No. 36-1451-3	32-8036		Pulley (Tuning Condenser)	
12	2nd I. F. Trans. Assy.	32-3081	25	Voice Coil Assy. for Speaker No. 36-1451-3	36-4090			
13	Resistor (51,000 ohms)	33-351339						

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

107

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

PHILCO AUTO RADIO Model 920

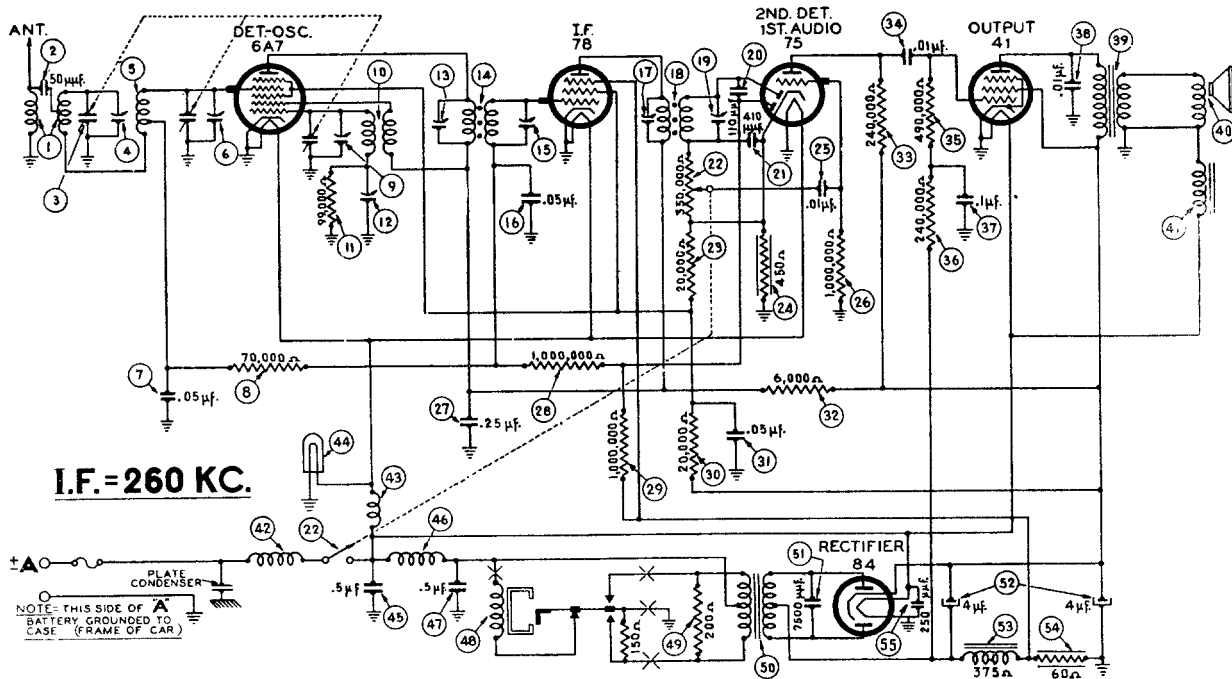


SIGNAL GENERATOR		DUMMY CAPACITY	SPECIAL INSTRUCTIONS	ADJUST PADDER
FREQUENCY	CONNECTION			
1	260 K. C. To grid of 6A7 Tube	.1 Mfd. Condenser in Series with Generator Lead	No Antenna Connection	(17) (19) (13) (15) (17)
2	1550 K. C. To Antenna Receptacle on Radio	50 Mmfd. See Note 1	Turn Tuning Condenser Plates Out of Mesh as Far as They Will Go.	(9) (6) (6)
3	580 K. C. To Antenna Receptacle on Radio	50 Mmfd. See Note 1	Set Tuning Condenser at 580 K. C.	Note 2 (12)
4	1550 K. C. To Antenna Receptacle on Radio	50 Mmfd. See Note 1	Turn Tuning Condenser Plates Out of Mesh as Far as They Will Go.	(9)
5	1400 K. C. To Antenna Receptacle on Radio	50 Mmfd. See Note 1	Set Tuning Condenser at 1400 K. C.	(6) (6) Note 3

Make all adjustments for maximum reading on the output meter.

- 1 — Connect the antenna lead, Part No. 41-3191, to the antenna receptacle in the radio. Connect a 50 Mmfd. Condenser in series between the signal generator and the antenna lead.
- 2 — Rock the tuning condenser while adjusting the low frequency padder. Tune the condenser to the signal and adjust the padder for maximum output. Rotate the tuning condenser back and forth slightly for maximum output. Then re-adjust the padder for maximum output. Repeat this procedure until no further improvement is noticed.
- 3 — When the antenna stage adjustment is made with the Radio installed in the car, the Radio antenna lead must be connected to the car antenna in the usual manner. Connect the signal generator output lead to a wire placed near the car antenna but not connected to it.

I. F. TRANSFORMERS



108

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

PHILCO Model "L" RECORD CHANGER

OPERATING INSTRUCTIONS

The Model "L" Record Changer plays seven 12" or eight 10" Records automatically. The last record remains on the turntable and repeats as long as the Record Changer is in operation.

Records may be repeated as often as desired by raising the record removing arm at A Fig. 1 to the upright position.

To reject a record and play the next record below it, pull the latch lever at L Fig. 1 forward.

To adjust the record removing arm to handle 10" records set the record removing arm change lever at D Fig. 1 opposite the number 10 stamped on the base plate. For 12" records set the lever opposite the number 12.

To adjust the pickup to play 10" records, push the pickup stop at K Fig. 1 back. (Away from the pickup needle). For 12" records pull the stop forward (toward the needle) as far as it will go.

Some units are equipped with two speed motors, and others with 78 RPM motors. When the two speed motor is used change from one speed to the other by simply moving lever at F Fig. 1 to position desired.

To start motor, throw switch at N Fig. 1 on the "on" position.

clamps the lever to the motor shaft. This shaft is provided with a screw-driver slot in the end. Next, using a screw driver, turn this shaft in a clockwise direction until you feel it strike the stop. The motor is now in the 33-1/3 RPM position. Now set the lever against the lug provided in the base plate and opposite the legend 33-1/3 and tighten the clamp screw. This places the lever in the correct position on the motor shaft. The final step is the adjustment of the eccentric bushing at G Fig. 1 which limits the throw of the lever. First loosen the screw which holds the eccentric bushing. Next, throw the speed changer lever to its farthest 78 RPM position, (using care that the lever does not slip on the motor shaft). Then turn the eccentric bushing around until it touches the side of the lever, and tighten it in place with the screw provided.

TRIP MECHANISM

The trip mechanism is the trigger that sets the Record Changer in motion. This is done by allowing the latch bar at O Fig. 1 to drop in front of, and be actuated by the cam at P Fig. 1. This cam is driven by the motor and is in motion as long as the motor is running. If this mechanism does not operate smoothly, the precautions outlined in succeeding paragraphs should be observed.

First of all, make sure that the square pin in the latch lever at U Fig. 1 latches properly in the notch in the lift lever at I Fig. 1. When latched, the notch should be engaged approximately one-half of its depth. The depth of engagement is adjusted by means of the eccentric washer and locking screw at J Fig. 1. Now run the Record Changer through its cycle. If the square pin fails to engage the notch in the lift lever, first check the tension of the latch spring at H Fig. 1 to insure that the notch can engage the pin. Next check the tension of the reset spring at E Fig. 1. This reset spring should not be under tension when the latch bar is latched but should have enough tension when the latch bar drops back off of the cam to cause the square pin to over travel the notch in the lift lever.

IMPORTANT— Before attempting to change the tension of any spring, be sure that the parts involved work freely without any tendency to bind, as of course any binding condition would preclude proper operation.

The Record Changer is adjusted at the factory to trip on a spiral trip groove record when the phonograph needle is 1/4" from the edge of the hole in the center of the record.

MOTOR LUBRICATION

The motor installed in the Record Changer is governor controlled, with all gearing enclosed, and leaves the factory lubricated for proper operation. For maximum satisfaction, lubricate the motor at regular intervals with SAE No. 10 oil. Please do not use any other grade of oil.

The governor disc engages with a ring of hard felt. This felt is impregnated with a lubricating solution sufficient for proper operation for approximately a year under normal conditions.

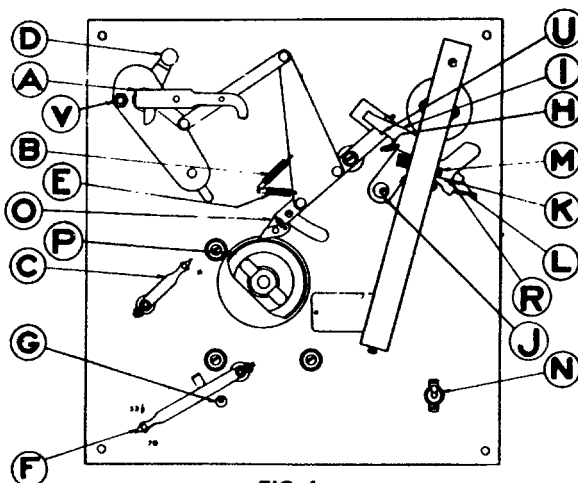


FIG. 1.

MOTOR SPEED

The motor speed is adjusted by means of a lever at C Fig. 1 which is mounted under the turntable. The direction of swing to fast or slow is indicated by the legends F and S on the base plate.

33-1/3 RPM — 78 RPM SHIFT (Two-speed motors only)

Move the speed change lever at F Fig. 1 as far as it will go in the direction of swing indicated by the legends 33-1/3 and 78 on the base plate.

If adjustment of the speed change lever is required for any reason, proceed as follows: First loosen the screw which

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

When eccentric or oscillating trip groove records are used, tripping is effected by means of the hardened steel pin in the end of tone arm lift crank at S Fig. 2 engaging the serrated block on the trip lever at T Fig. 2. There must be a minimum of $1/32$ "

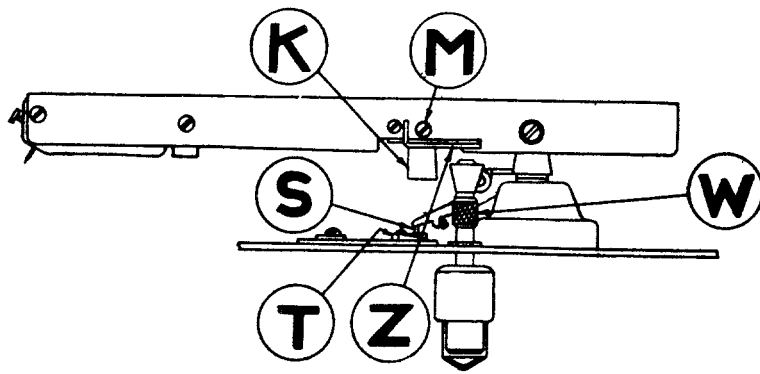


FIG. NO. 2

engaging the serrated block on the play between the end of the pin and the block, when, with a short needle, ($5/8$ " Minimum Length) the pickup is resting on one record on the turntable. If the pressure of the pin on the block is not sufficient to insure operation, then check the pressure spring which is located up under the pickup.

The oval head pivot screw at R Fig. 1 serves as a pivot for the lift lever at I Fig. 1. This screw should allow the lift lever to be raised by the latch bar to its maximum height without binding but also without any additional play.

If the Record Changer fails to trip, see if the phonograph needle is jump-

ing out of a worn record trip groove. Next make certain that all parts of the mechanism work freely and smoothly. If it is found that the latch bar at O Fig. 1 is not dropping in far enough to engage the cam at P Fig. 1, then check the tension of the trip spring at B Fig. 1.

In case the Record Removing Mechanism fails to operate smoothly, proceed as follows: First

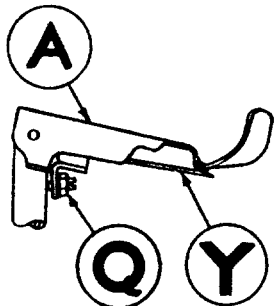


FIG. NO. 3

make certain that all parts work freely with no binding in pivots or bearings, and that the record removing arm assembly rests on the stop screw at Q Fig. 3. Next stop the motor in such a position that the latch bar at O Fig. 1 can swing by and clear the cam at P Fig. 1. Place just one record on the turntable and measure from the top of this record down to the base plate. This distance should be one inch. Now by pulling the reject lever at L Fig. 1 first, it will be found possible to swing the record removing finger at Y Fig. 3 over to where it just touches the edge of the record. If the adjustment is correct, the record removing finger should just barely rise over the edge of the first record. If adjustment is required it can be made by means of the stop screw at Q Fig. 3. In the event the record removing arm raises the record from the turntable and drops it back in place without removing it, check the lift adjustment at V Fig. 1. This adjustment consists of an eccentric stud which is provided with a lock nut, and is made by loosening the lock nut and turning the eccentric stud. The lift adjustment should be set so that the hole in the center of the record just clears turntable spindle when the Record Changer is in operation.

The pickup lowering mechanism has two functions. First, it lowers the phonograph needle gently to the surface of the record. Second, it feeds the needle toward the center of the record so that it will enter the playing groove.



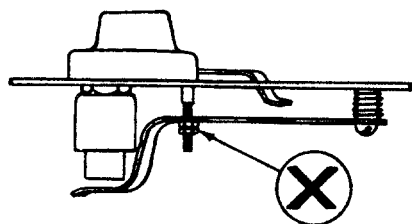


FIG. NO. 4

If the pickup descends too fast or too slow, adjust the speed of descent by turning the knurled thumb nut on the dashpot sleeve at W Fig. 2.

The unit is adjusted at the factory so that the needle will be set down approximately $3/32$ " in from the edge of the record. An adjusting screw is provided on the side of the pickup at M Fig. 2. If the needle is being lowered onto the playing surface of the record, and the adjusting screw at M Fig. 2 fails to correct the condition proceed as follows: First stop the record changer, with the pickup in the maximum raised position and check the clearance between the underside of the pickup shelf at Z Fig. 2 and the tip of the dashpot. This clearance should be very small as otherwise the pickup will tend to bounce as it is lowered. There must be sufficient clearance however to prevent the pickup shelf from rubbing on the tip of the dash pot, or the pickup will not swing out far enough to allow the adjustable stop at K Fig. 2 to come to rest against the dashpot. Check this clearance in both 10" and 12" record positions. If adjustment is required, the height of the dashpot may be regulated by loosening the nuts on the bottom of the lift lever stud at X Fig. 4 and changing their position on the stud. To raise the dashpot turn the nuts clockwise, to lower the dashpot turn the nuts counter-clockwise.

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

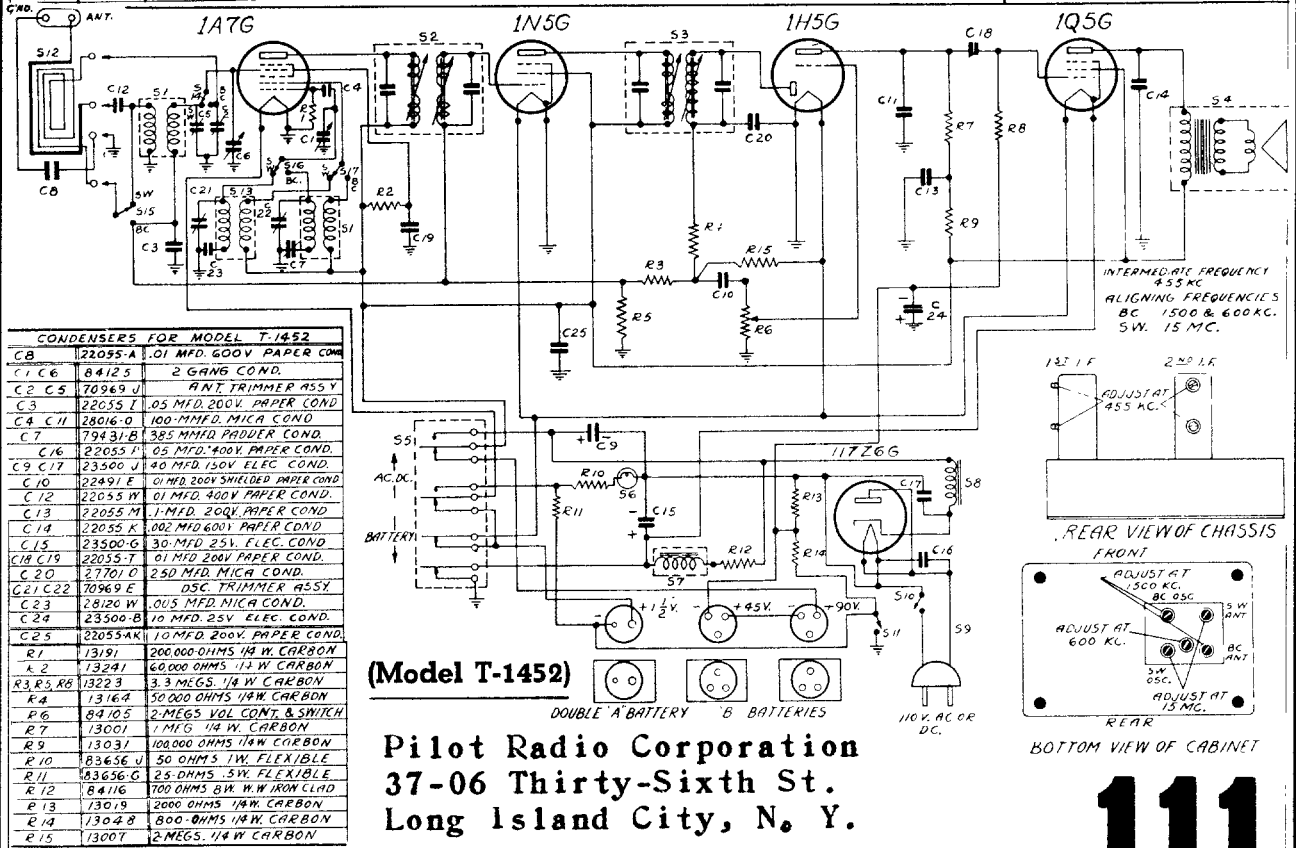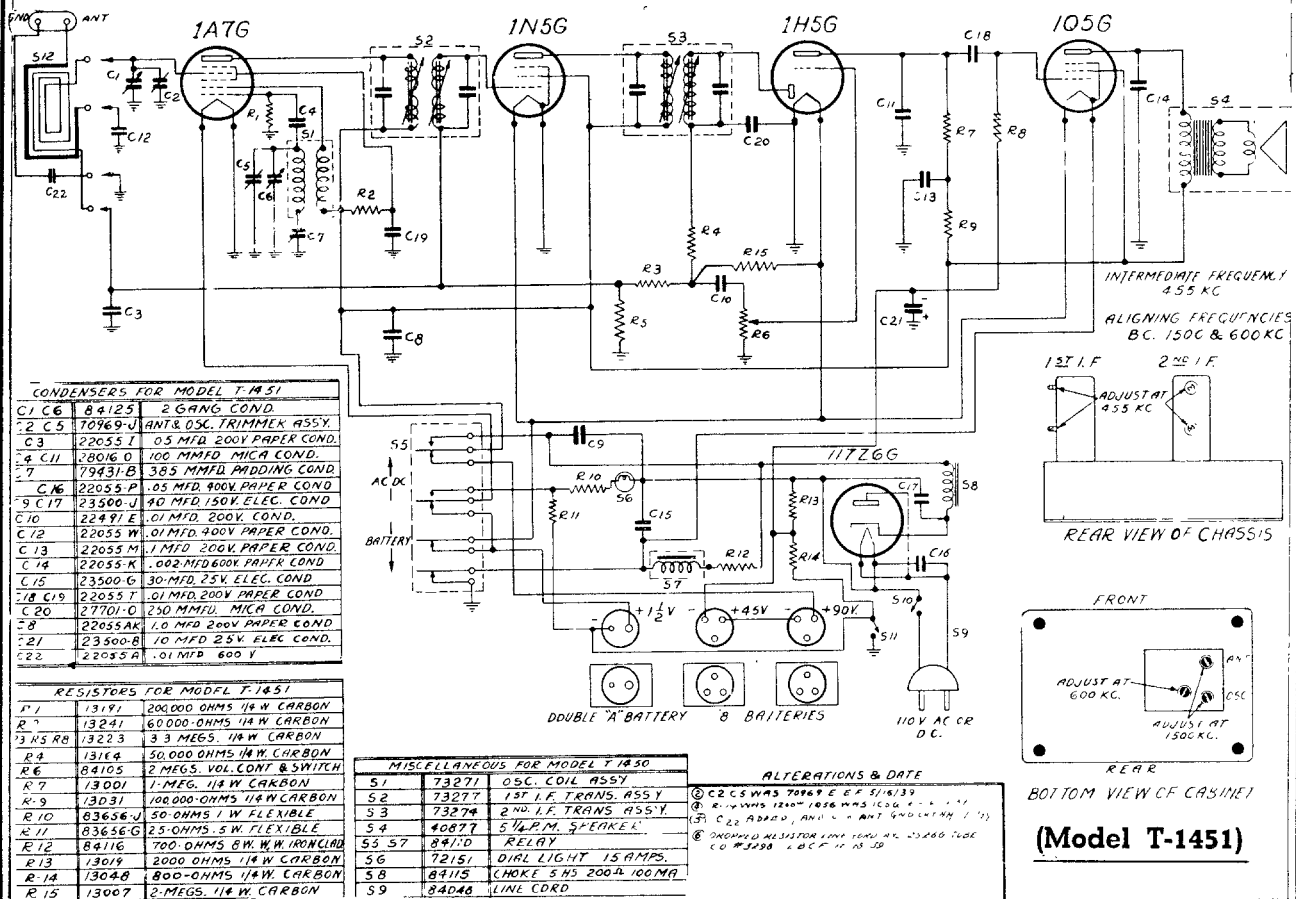


Pilot Radio Corporation
 37-06 Thirty-Sixth St.
 Long Island City, N. Y.

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS


RCA Victor

MODEL 6QU

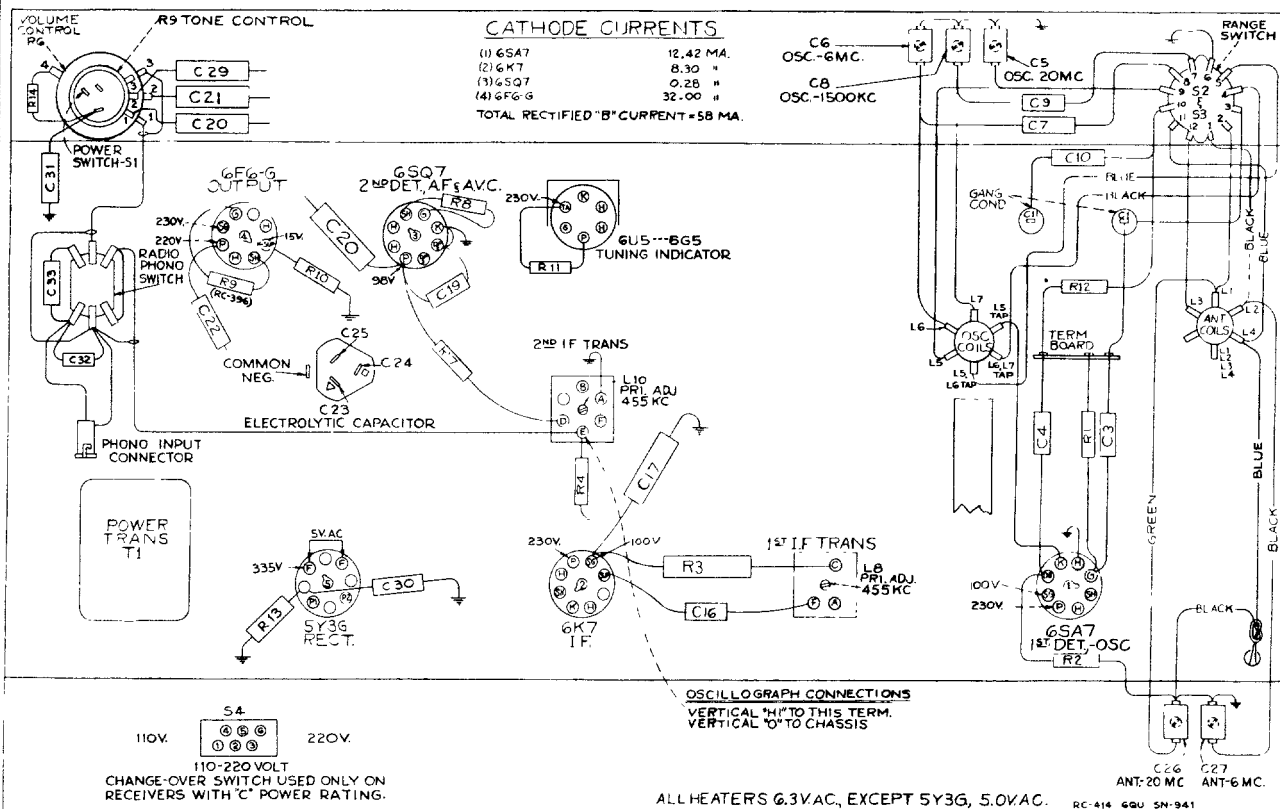


Measurements made to chassis unless otherwise indicated, with set tuned to quiet point and volume control at minimum. Values should hold within $\pm 20\%$ with 117-volt a-c supply.

NOTE: Values with star () are operating voltages in circuits with high series resistance. The actual measured voltages will be lower, depending on the voltmeter loading.

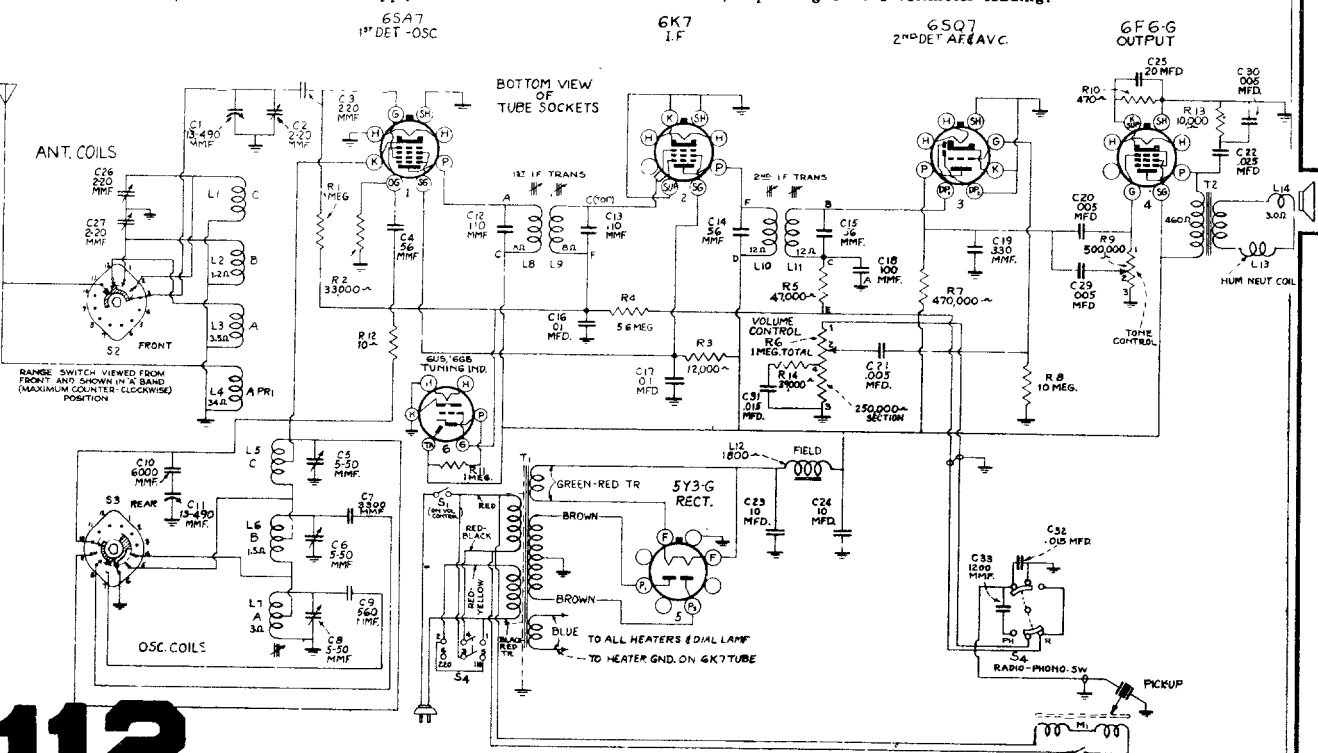

RCA Victor MODEL 6Q4

MODELS 7Q4 and 7QK4

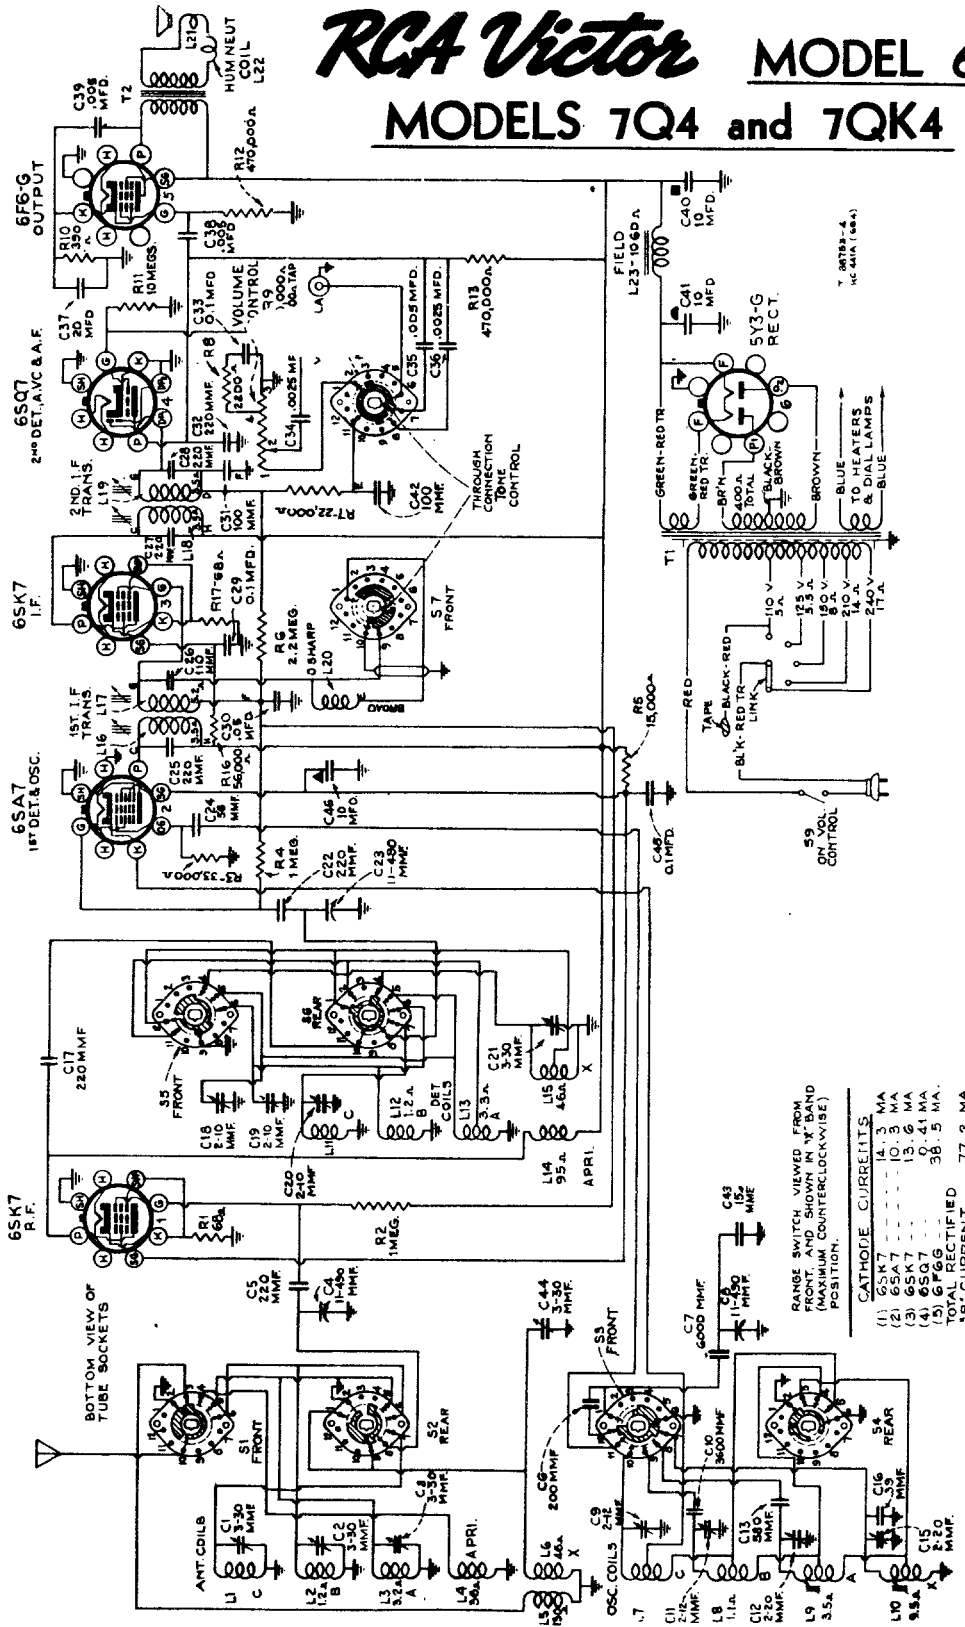

Models 7Q4 and 7QK4 are similar to Model 6Q4 except for the addition of a tuning indicator (RCA-6U15/6G5). The 7QK4 chassis uses an RCA-6F6 output tube, whereas the 7Q4 uses an RCA-6F6-G output tube.

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

RCA Victor

Models 9TX-21, -22, and -23

Chassis No. RC-403

RC-403


RC-403A

Five-Tube, Single-Band, AC-DC Superheterodyne Receivers

Alignment Procedure

Output Meter Alignment.—Connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—Connect the low side of the test-oscillator to the receiver chassis, through a .01 mfd. capacitor, and keep the output as low as possible. The antenna should be rolled up and kept at least one foot from chassis during alignment.

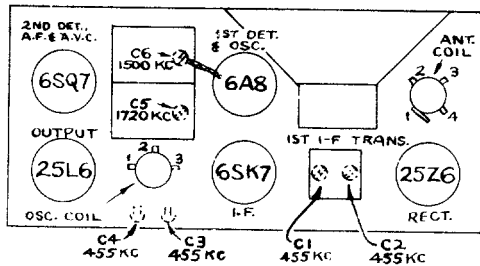

Trimmer Locations

Steps	Connect the high side of test-oscillator to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output—
1	6A8 1st-Det. grid cap. in series with .01 mfd.	455 kc	Quiet point at 1,600 kc end of dial	C1, C2, C3, C4 (1st and 2nd I-F transformers)
2	Antenna term. of ant. trans. in series with 100 mmfd.	1,720 kc	Full clockwise (out of mesh)	C5 (oscillator)
3		1,500 kc	Resonance on 1,500 kc signal.	C6 (antenna)

INTERMEDIATE FREQUENCY..... 455 kc

POWER OUTPUT (125 volt, 60 cycle supply)

Undistorted..... 1.5 watts
Maximum..... 2.0 watts


LOUDSPEAKER (39105-1)

Type..... 4-inch Electrodynamic

Power-Supply Polarity.—For operation on d-c, the power plug must be inserted in the outlet for correct polarity. If the set does not function, reverse the plug. On a-c, reversal of the plug may reduce hum.

Resistor in Power Cord.—The power cord contains a resistor which becomes warm during operation.

Antenna.—The set is equipped with length of antenna wire. Do not connect the antenna to ground. If an outdoor antenna is used, it should not be longer than 100 feet, including lead-in. If it is longer, connect a 100 to 200 mmf. capacitor in series with the lead-in.

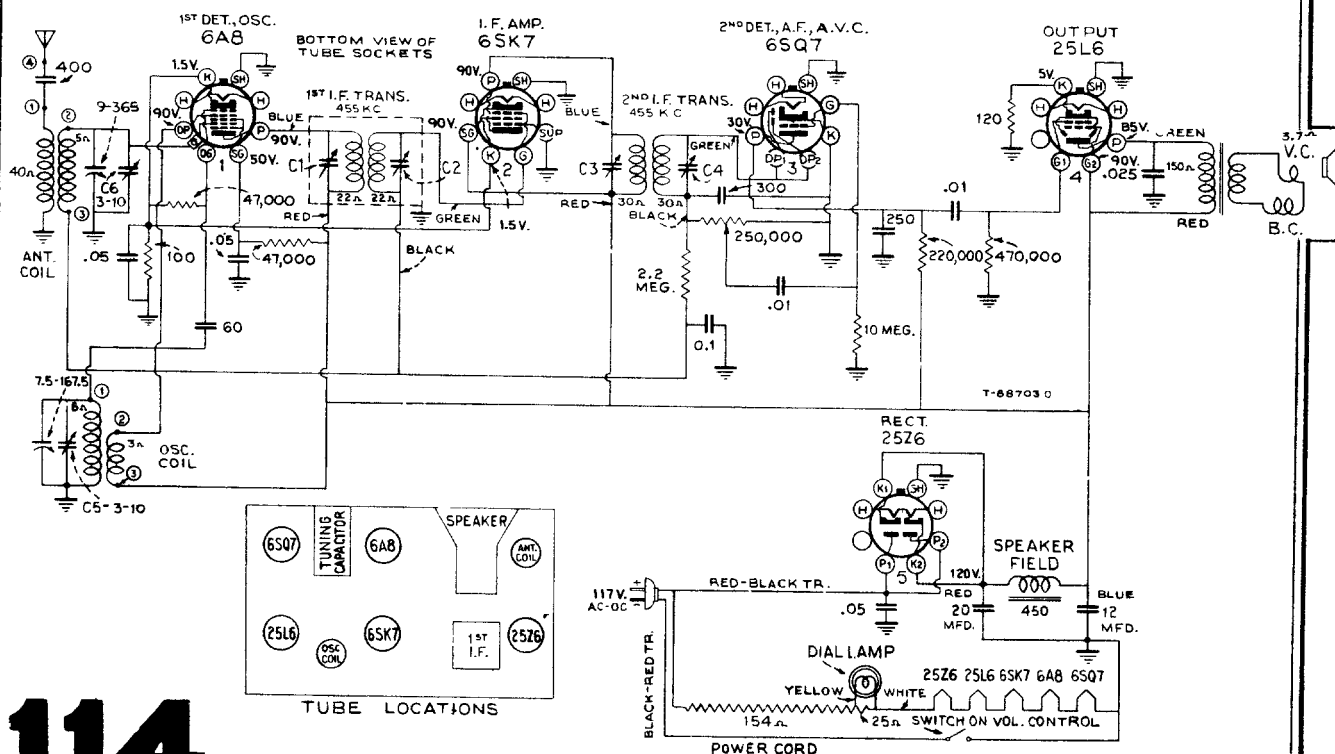

114

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS


RCA Victor

MODEL 6Q8

Chassis No. RC-414B

Steps	Connect the high side of the test-osc. to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output
1	6K7 I-F grid cap in series with .01 mfd.	455 kc	"A" Band Quiet Point between 550-750 kc	L12 and L13 (2nd I-F Trans.)
2	6SA7 det. grid in series with .01 mfd.	455 kc		L10 and L11 (1st I-F Trans.)
3	Ant. terminal in series with 200 mmf.	1,500 kc	1,500 kc (152.4°) "A" Band	C8 (osc.) C2 (ant.)
4	Ant. terminal in series with 200 mmf.	600 kc	600 kc (33°) "A" Band	L8 (osc.) Rock Gang
5	Repeat steps 3 and 4			
6	Ant. terminal in series with 200 mmf.	360 kc	360 kc (151.5°) "X" Band	C8 (osc.) C26 (ant.)
7	Ant. terminal in series with 200 mmf.	175 kc	175 kc (53.3°) "X" Band	L9 (osc.) Rock Gang
8	Repeat steps 6 and 7			
9	Ant. terminal in series with 300 ohms	15.2 mc	15.2 mc (147.2°) "C" Band	C5 (osc.)* C27 (ant.)
10	Ant. terminal in series with 200 mmf.	360 kc	360 kc (151.5°) "X" Band	C8 (osc.)
11	Ant. terminal in series with 200 mmf.	1,500 kc	1,500 kc (152.4°) "A" Band	C8 (osc.)

*Use minimum capacity peak if two can be obtained. Check to determine that C5 is adjusted to correct peak by tuning receiver to approximately 14.29 mc where a weaker signal should be received.

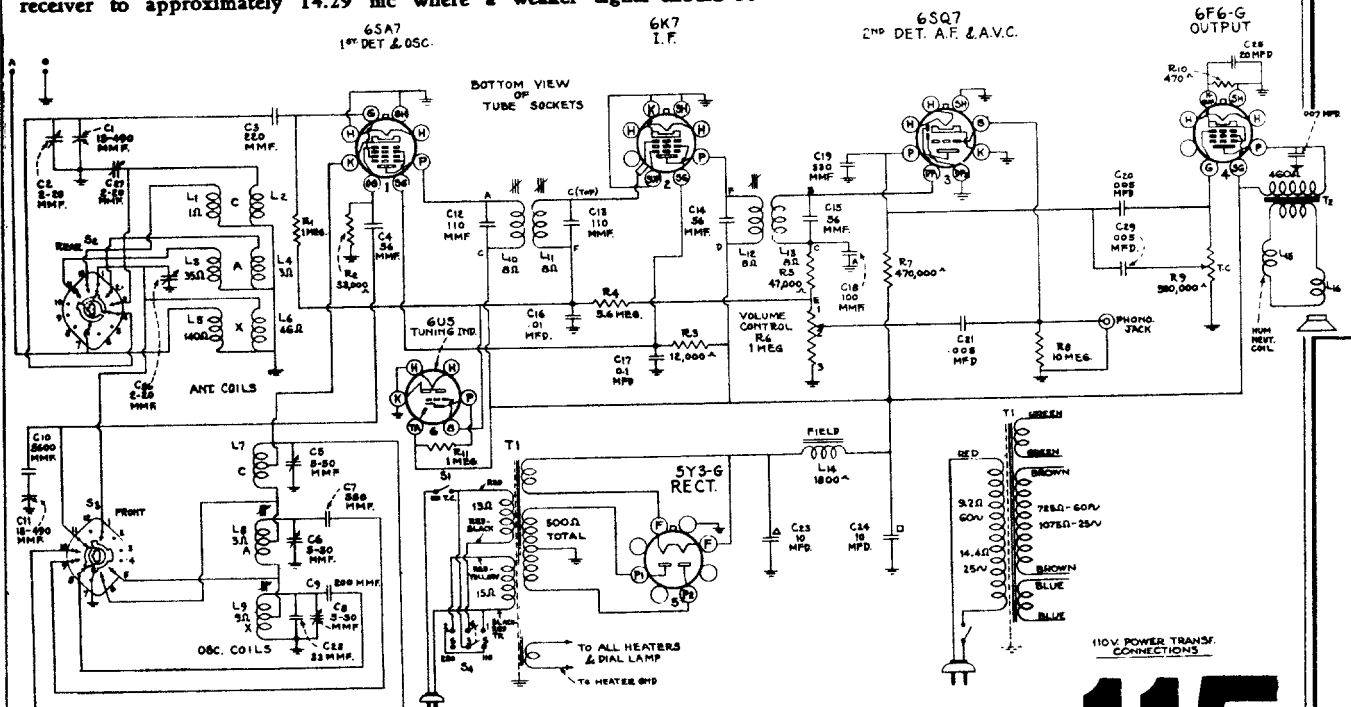

RANGE SWITCH VIEWED FROM FRONT AND SHOWN IN "A" BAND (MAX. COUNTER CLOCKWISE) POSITION.

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS



RCA Victor

MODELS 9TX-31, 9TX-32, 9TX-33

Chassis No. RC-405, RC-405A, RC-405B

Five-Tube, Single-Band, AC-DC Superheterodyne Receivers

Alignment Procedure

Output Meter Alignment.—Connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—Connect the low side of the test-oscillator to the receiver chassis, through a .01 mfd. capacitor, and keep the output as low as possible.

Steps	Connect the high side of test-oscillator to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output—
1	Tuning condenser stator (osc.) in series with .01 mfd.	455 kc	Quiet point at 1,600 kc end of dial	C1, C2, C3, C4 (1st and 2nd I-F transformers)
2	Antenna term. of ant. trans. in series with 100 mmfd.	1,720 kc	Full clockwise (out of mesh)	C5 (oscillator)
3		1,500 kc	Resonance on 1,500 kc signal	C6 (antenna)


Precautionary Lead Dress

1. Dress 1st I-F plate and grid leads against chassis and away from each other. Dress plate lead from 12SK7 close to chassis.
2. Dress electrolytic capacitor against rear apron.

Power-Supply Polarity.—For operation on d-c, the power plug must be inserted in the outlet for correct polarity. If the set does not function, reverse the plug. On a-c, reversal of the plug may reduce hum.


Antenna.—The set is equipped with length of antenna wire. Do not connect the antenna to ground. If an outdoor antenna is used, it should not be longer than 100 feet, including lead-in. If it is longer, connect a 100 to 200 mmf. capacitor in series with the lead-in.

Victrola Attachment.—A jack is provided on the rear of chassis for connecting a Victrola Attachment into the audio-amplifying circuit. The cable from the Victrola Attachment should be terminated in a Stock No. 31048 plug to fit the jack.

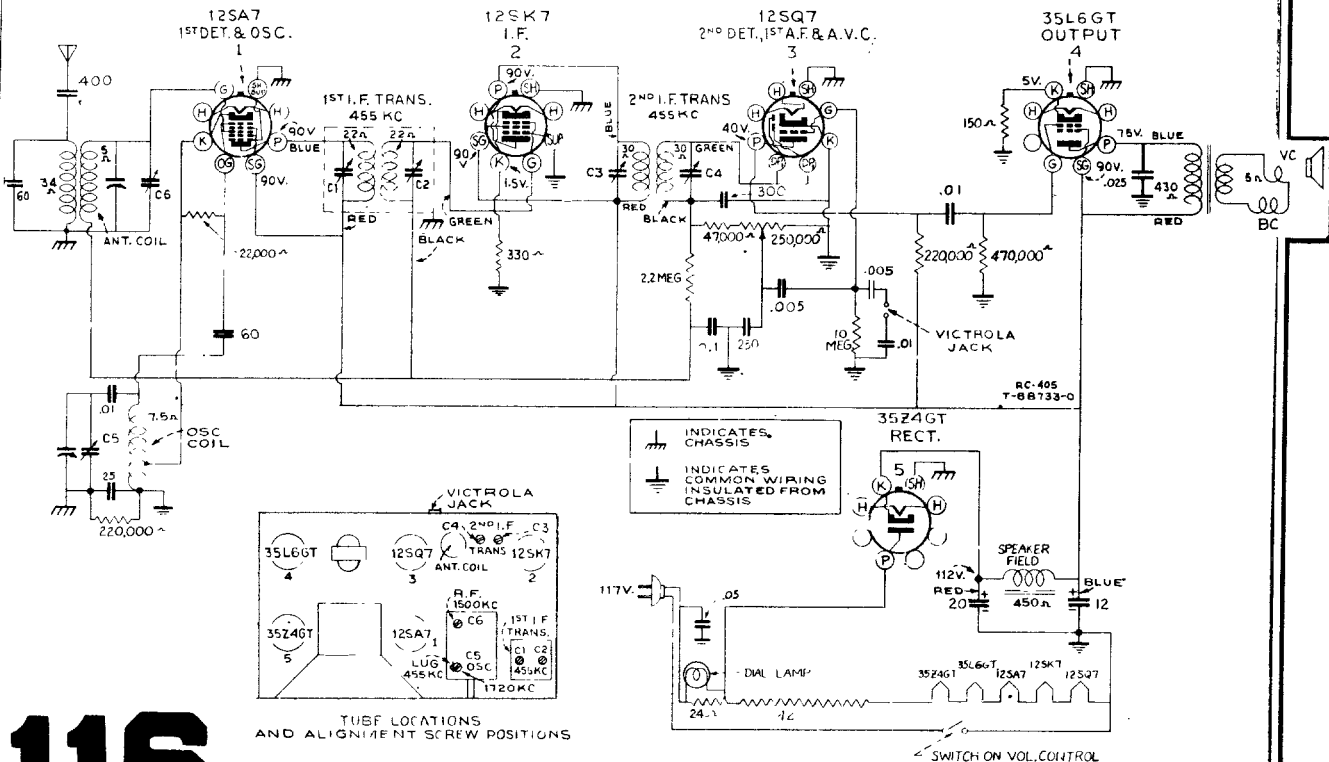



RCA VICTROLA MODEL U-9 (Chassis No. RC-482B) Five-Tube, Single-Band, A-C, Superheterodyne

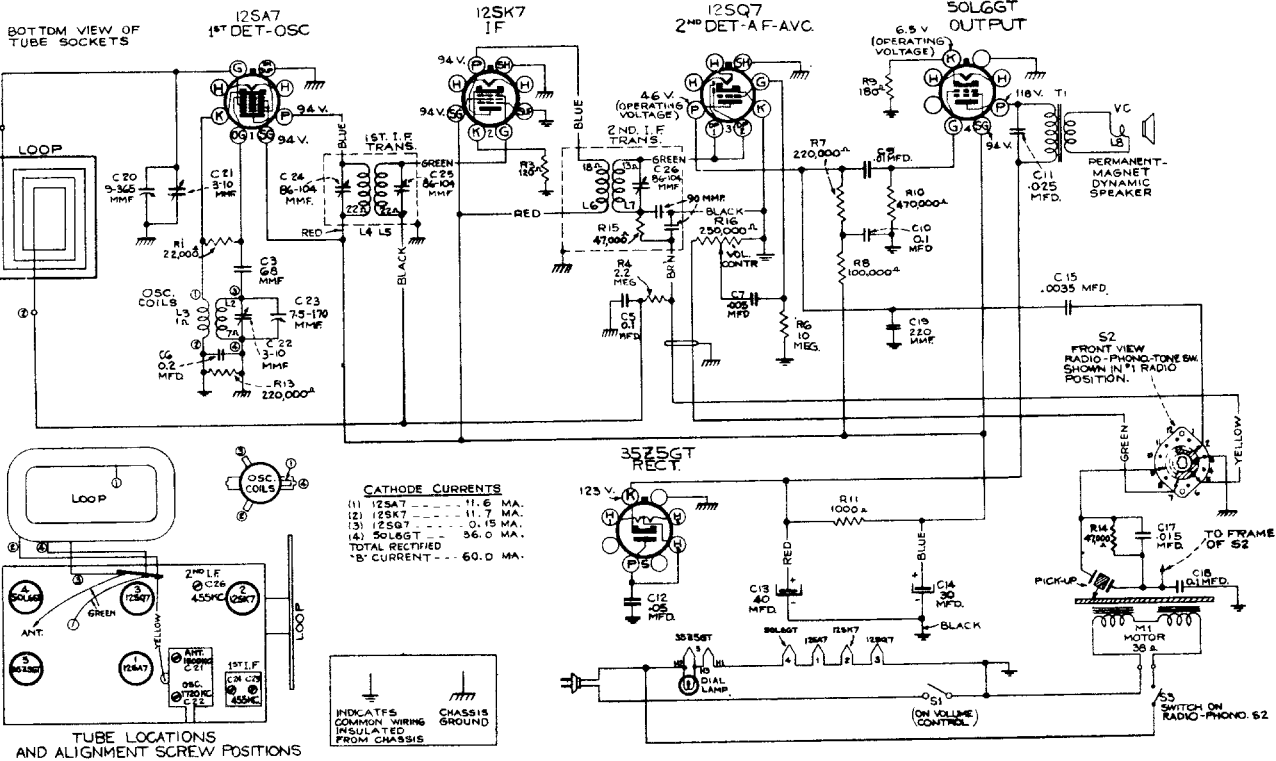

Miscellaneous Service Data


PHONOGRAPH MECHANISM.—

The phonograph motor is self-starting and operates the turntable through friction drive between the motor spindle and the rubber tire on the underside of the turntable.

The rubber driving tire on the turntable should never be removed since it is ground in to be concentric with the spindle. If replacement is required, the entire turntable should be replaced.

The speed regulator raises and lowers the motor. This changes the driving ratio between the motor and the turntable due to the motor spindle being conical in shape. It is important to adjust this regulator for a turntable speed of 78 r.p.m. WHILE PLAYING A 10-INCH RECORD WITH THE NEEDLE APPROXIMATELY ONE INCH FROM THE OUTER EDGE OF THE RECORD.

Lubrication.—The motor should be lubricated as follows: Place a few drops of S.A.E. 20 (or equivalent) on the motor shaft with S.A.E. 10 oil. This oiling process should be repeated once or twice a year. **CAUTION.**—THE MOTOR DRIVE SPINDLE AND RUBBER DRIVING TIRE ON THE TURNTABLE MUST BE KEPT CLEAN AND ENTIRELY FREE FROM OIL AND GREASE AT ALL TIMES.

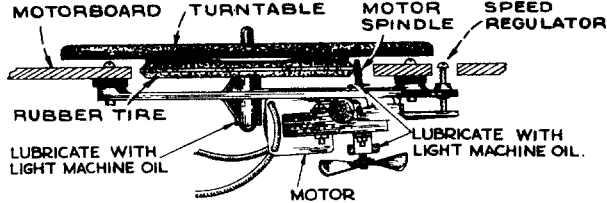

Alignment Procedure

Output Meter Alignment.—Connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test Oscillator.—Connect the low side of the test oscillator to the receiver chassis through a 0.01 mfd capacitor, and keep the output as low as possible.



Pre-Setting Dial.—With gang condenser in full mesh, the pointer should coincide with the left hand mark stamped in the dial back-plate.

Antenna.—This set is equipped with a built-in loop antenna. If an outdoor antenna is used, it may be connected to the green antenna lead, stapled to the base of the cabinet. The antenna should not be longer than 100 feet including the lead-in. If it is longer, connect a 100 mmfd. capacitor in series with the lead-in.


Steps	Connect the high side of test oscillator to—	Tune test osc. to—	Turn radio dial to—	Adjust the following for max. output—
1	Tuning Cond. stator (det.) in series with 0.01 mfd.	455 kc	Quiet Point at 1,600 kc end of dial	C24, C25, C26 (1st and 2nd I-F transformers)
2	Antenna lead (green) in series with 100 mmfd.	1,720 kc	Full Clockwise (out of mesh)	C22 (osc.)
3		1,500 kc	Resonance on 1,500 kc signal	C21 (ant.)

RCA Victor

MODEL U-12

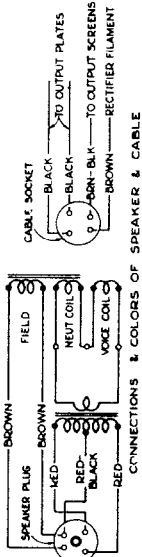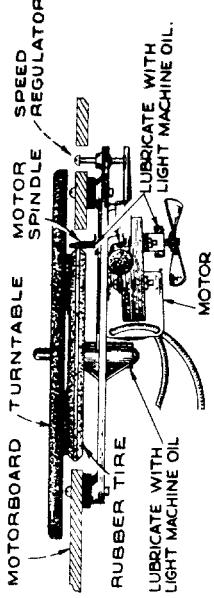

CONNECTIONS & COLORS OF SPEAKER & CABLE

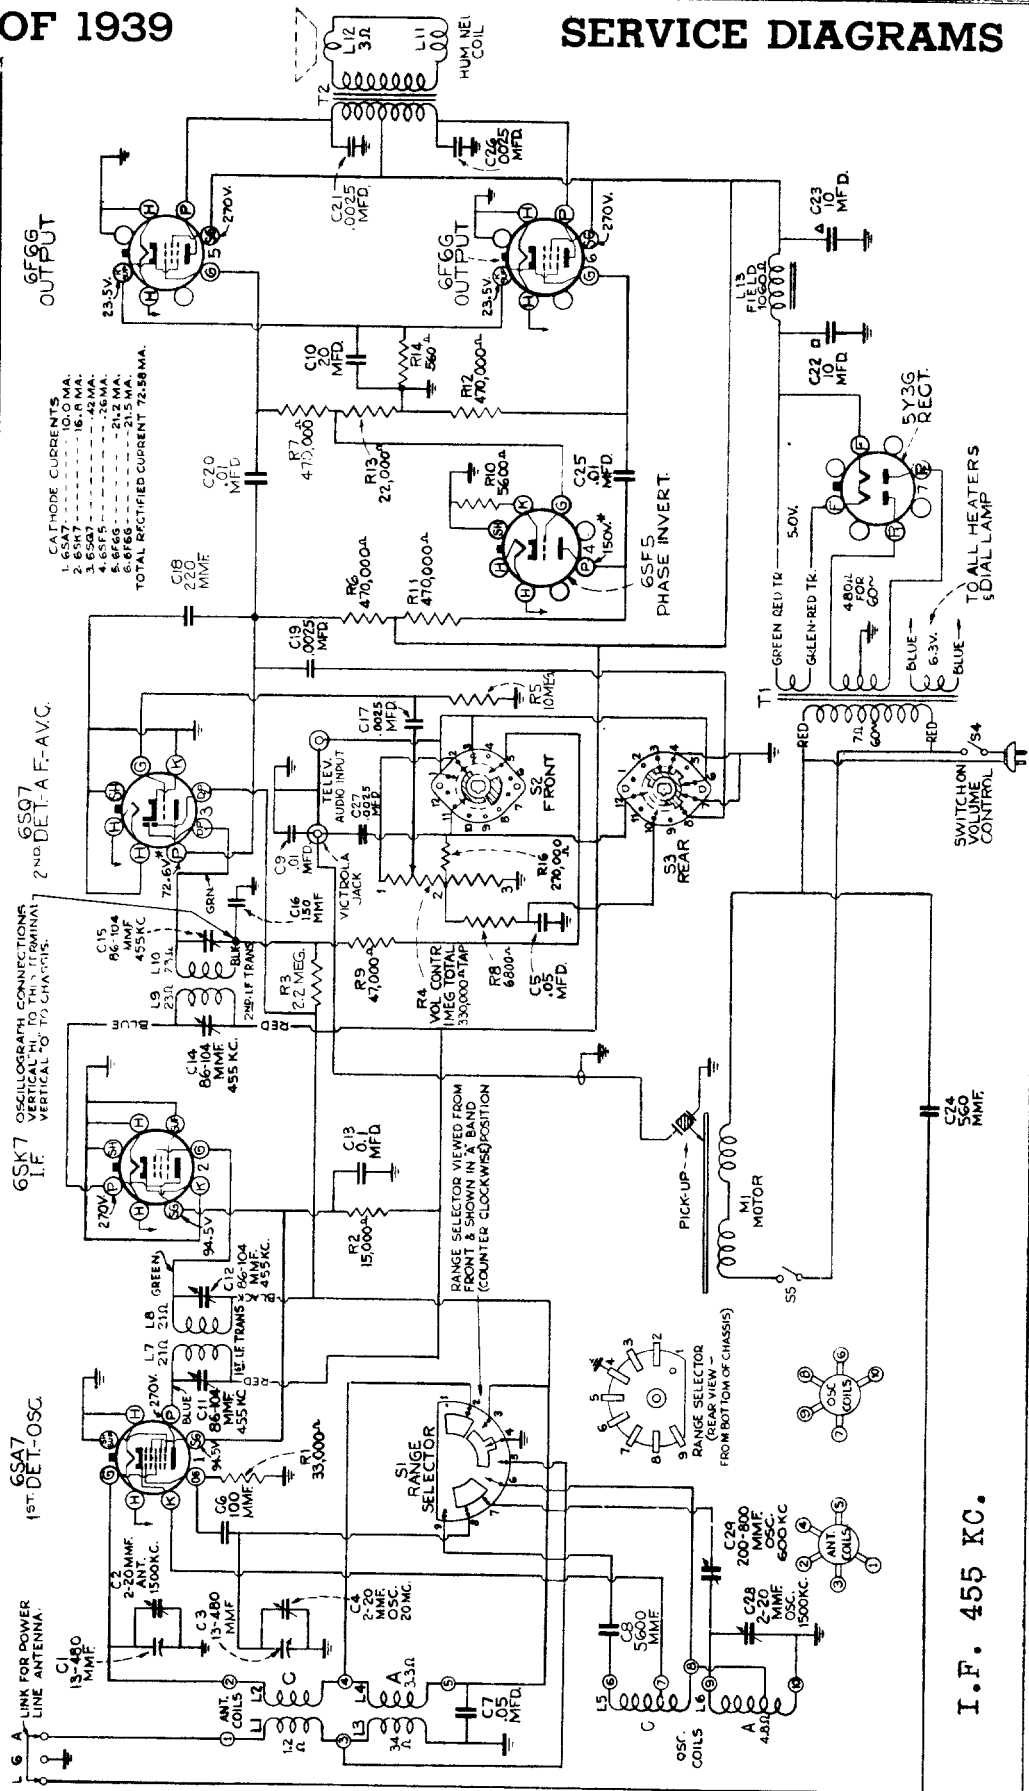

CATHODE CURRENTS

1. 6SA7	10.0 MA.
2. 6SK7	16.4 MA.
3. 6SQ7	42 MA.
4. 6F6G	64 MA.
5. 6F6G	21.2 MA.
6. 6F6G	21.5 MA.

TOTAL RECTIFIED CURRENT 72.86 MA.

OSCILLOGRAPH CONNECTIONS:
 VERTICAL "H" TO THIS TERMINAL
 VERTICAL "V" TO CHASSIS.

1ST DET-OSC.

LINE ANTENNA

6SK7 I.F.

6SA7

ANT. COILS

OSC. COILS

6SQ7

6F6G OUTPUT

6F6G OUTPUT

6S5 PHASE INVERT.

6X4 RECT.

MOTOR


SWITCH ON VOLUME CONTROL

TO ALL HEATERS

TO DIAL LAMP

I.F. 455 KC.

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

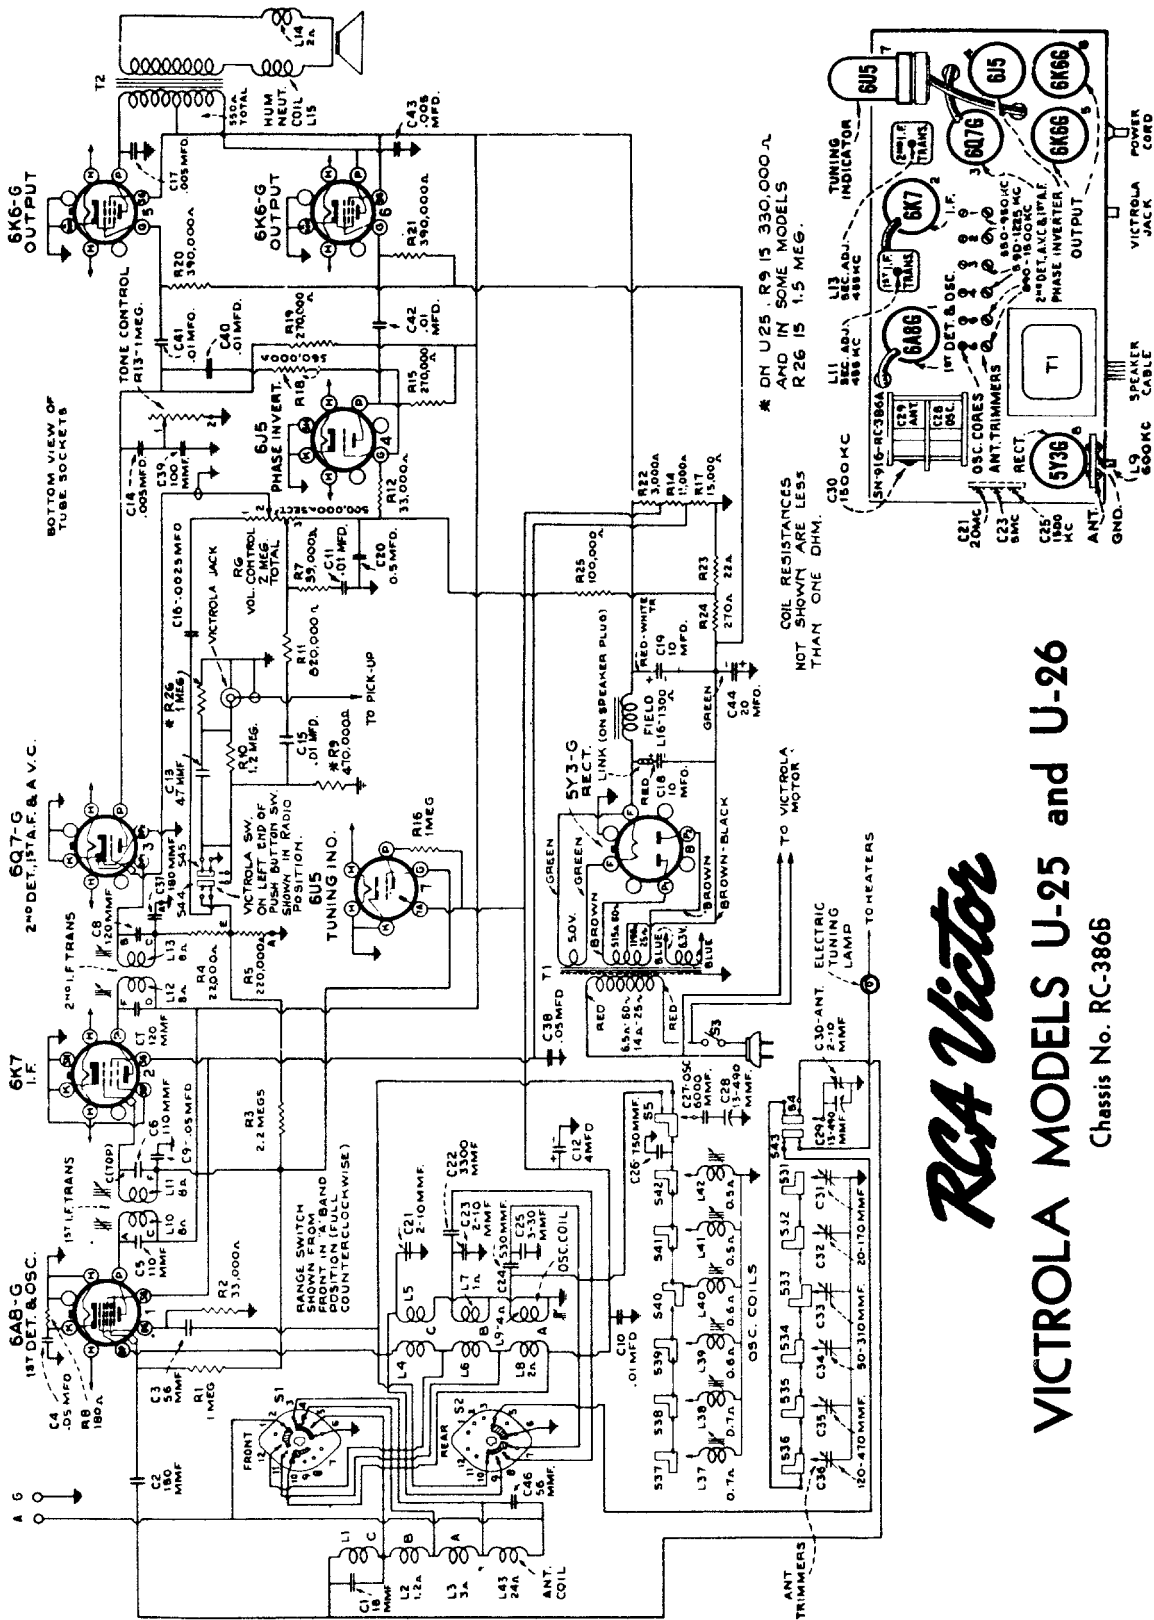

RCA Victor

VICTROLA MODELS U-25 and U-26

Chassis No. RC-3865

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

Automatic Record Changer

GENERAL INFORMATION

Before servicing the automatic record changer, inspect the assembly to see that all levers, parts, gears, springs, etc. are in good order and are correctly assembled.

A bind or jam in the mechanism can usually be relieved by rotating the turntable in the reverse direction.

The changer can be conveniently rotated through its change cycle by pushing the index lever to "Reject" and revolving the turntable by hand. Six turntable revolutions are required for one change cycle.

ADJUSTMENTS

A. Main Lever.—This lever is basically important in that it interlinks the various individual mechanisms which control needle landing, tripping, record separation, etc. One adjustment is provided for the main lever. Rotate the turntable until the changer is out-of-cycle; and adjust rubber bumper bracket (A) so that the roller clears the nose of the cam plate by $1/16$ inch.

B. Friction Clutch.—The motion of the tone arm toward the center of the record is transmitted to the trip pawl "22" by the trip lever "7" through a friction clutch "5." If the motion of the pickup is abruptly accelerated or becomes irregular due to swinging in the eccentric groove, the trip finger "7" moves the trip pawl "22" into engagement with the pawl on the main gear, and the change cycle is started. Proper adjustment of the friction clutch "5" occurs when movement of the tone arm causes positive movement of the trip pawl "22" without tendency of the clutch to slip. The friction should be just enough to prevent slippage, and is adjustable by means of screw "B." If adjustment is too tight, the needle will repeat grooves; if too loose, tripping will not occur at the end of the record.

C. Pickup Lift Cable Screw.—During the record change cycle, lever "16" is actuated by the main lever "15" so as to raise the tone arm clear of the record by means of the pickup lift cable. To adjust pickup for proper elevation, stop the changer "in-cycle" at the point where pickup is raised to the maximum height above turntable plate, and has not moved outward; at this point adjust locknuts "C" to obtain 1 inch spacing between needle point and turntable top surface.

D. & E. Needle Landing on Record.—The relation of coupling between the tone arm vertical shaft and lever "20" determines the landing position of the needle on a 10 inch record. Position of eccentric stud "E" governs the landing of the needle on a 12 inch record; this, however, is dependent on the proper 10 inch adjustment.

To adjust for needle landing, place 10 inch record on turntable; push index lever to reject position and return to the 10 inch position; see that pickup locating lever "17" is tilted fully toward turntable; rotate mechanism through cycle until needle is just ready to land on the record; then see that pin "V" on lever "14" is in contact with "Step T" on lever "17." The correct point of landing is $4-11/16$ inches from the nearest side of the turntable spindle; loosen the two screws "D" and adjust horizontal position of tone arm to proper dimension, being careful not to disturb levers "14" and "17." Leave approximately $1/32$ inch end play between hub of lever "20" and pickup base bearing, and tighten the blunt nose screw "D"; run mechanism through several cycles as a check, then tighten cone pointed screw "D".

After adjusting for needle landing on a 10 inch record, place 12 inch record on turntable; push index lever to reject and return to 12 inch position; rotate mechanism through cycle until needle is just ready to land on the record; the correct point of landing is $5-11/16$ inches from nearest side of spindle. If the landing is incorrect, turn stud "E" until the eccentric end adjusts lever "14" to give correct needle landing. The eccentric end of the stud must always be toward the rear of the motor board, otherwise incorrect landing may occur with 10 inch records.

F. & G. Record Separating Knife.—The upper plate (knife) "25" on each of the record posts serves to separate the lower record from the stack and to support the remaining records during the change cycle. It is essential that the spacing between the knife and the rotating record shelf "27" be accurately maintained. The spacing for the 10 inch record is nominally $.058$ inch, and for the 12 inch record is $.075$ inch.

To adjust, rotate the knife to the point of minimum

vertical separation from the record shelf and turn screw and locknut "F" to give $.055-.061$ inch separation. Screw "G" must not be depressed during this adjustment. After setting screw "F" adjust screw "G" so that when its tip is depressed flush with top of record shelf, the vertical spacing between the knife, in its lowest rotational position, and the shelf, is $.072-.078$ inch.

H. Record Support Shelf.—The record shelf revolves during the change cycle to allow the lower record to drop onto the turntable. Both posts are rotated simultaneously by a gear and rack coupled to the main lever "15," and it is necessary that adjustments be such that the record is released from both shelves at the same instant. To adjust, place a 12 inch record on the turntable, rotate mechanism into cycle to the point where tone arm is at maximum distance outward from turntable; lift record upward until it is in contact with both separating knives, then loosen screws "H" and shift record shelves so that the curved inner edges of the shelves are uniformly spaced at least $1/16$ inch from record edge. Tighten the blunt nose screw "H," run mechanism through cycle several times to check action, then tighten cone pointed screw "H".

If record shelves or knives are bent, or not perfectly horizontal, improper operation and jamming of mechanism will occur.

J. Tone Arm Rest Support (not shown).—When the changer is out-of-cycle, the front lower edge of the pickup head should be $5/16$ inch above surface of motor board. This may be adjusted by bending the tone arm support bracket, which is associated with the tone arm mounting base, in the required direction.

K. Trip Pawl Stop Pin.—The position of the trip pawl stop pin "K" in relation to the main lever "15" governs the point at which the roller enters the cam. By bending the pin support either toward or away from trip pawl bearing stud, the roller can be made to enter the cam later or earlier, respectively. This adjustment should be made so that the roller definitely clears the cam outer guide as well as the nose of the cam plate.


Lubrication.—Petrolatum or petroleum jelly should be applied to cam, main gear, spindle pinion gear, and gears of record posts.

MISCELLANEOUS SERVICE HINTS

Incorrect adjustment of a particular mechanism of the changer is generally exhibited in a specific mode of improper operation. The following relations between effects on operation and the usual mis-adjustments will enable ready adjustment in most cases.

1. For any irregularity of operation, the adjustment of the main lever "15" should be checked first as in "A".
2. Needle does not land properly on both 10 and 12 inch records—Make complete adjustments "D" and "E".
3. Needle does not land properly on 12 inch record but correct on 10 inch—Effect adjustment "E".
4. Failure to trip at end of record—Increase clutch "5" friction by means of screw "B". Also, see that levers "7" and "12" are free to move without touching each other.
5. Pickup strikes lower record of stack or drags across top record on turntable—Adjust lift cable per adjustment "C".
6. Needle does not track after landing—Friction clutch "5" adjustment "B" may be too tight; bind in tone arm vertical bearing; levers "7" and "12" fouled; or pickup output cable twisted.
7. Cycle commences before record is complete—Record is defective, or adjustment "B" of friction clutch "5" is too tight.
8. Wow in record reproduction—Record is defective; flexible coupling between motor and changer mechanism not correctly assembled; or instrument is not being operated at normal room temperature (65° F).
9. Record knives strike edge of records—Records warped; record edges are rough; or knife adjustments "F" and "G" are incorrect.
10. Record not released properly—Adjust record shelf assemblies in respect to shaft by means of adjustment "H".
11. Needle lands in 10 inch position on 12 inch record or misses record when playing both types mixed—Increase tension of pickup locating lever spring "34".

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS VICTROLA MODELS U-25 and U-26

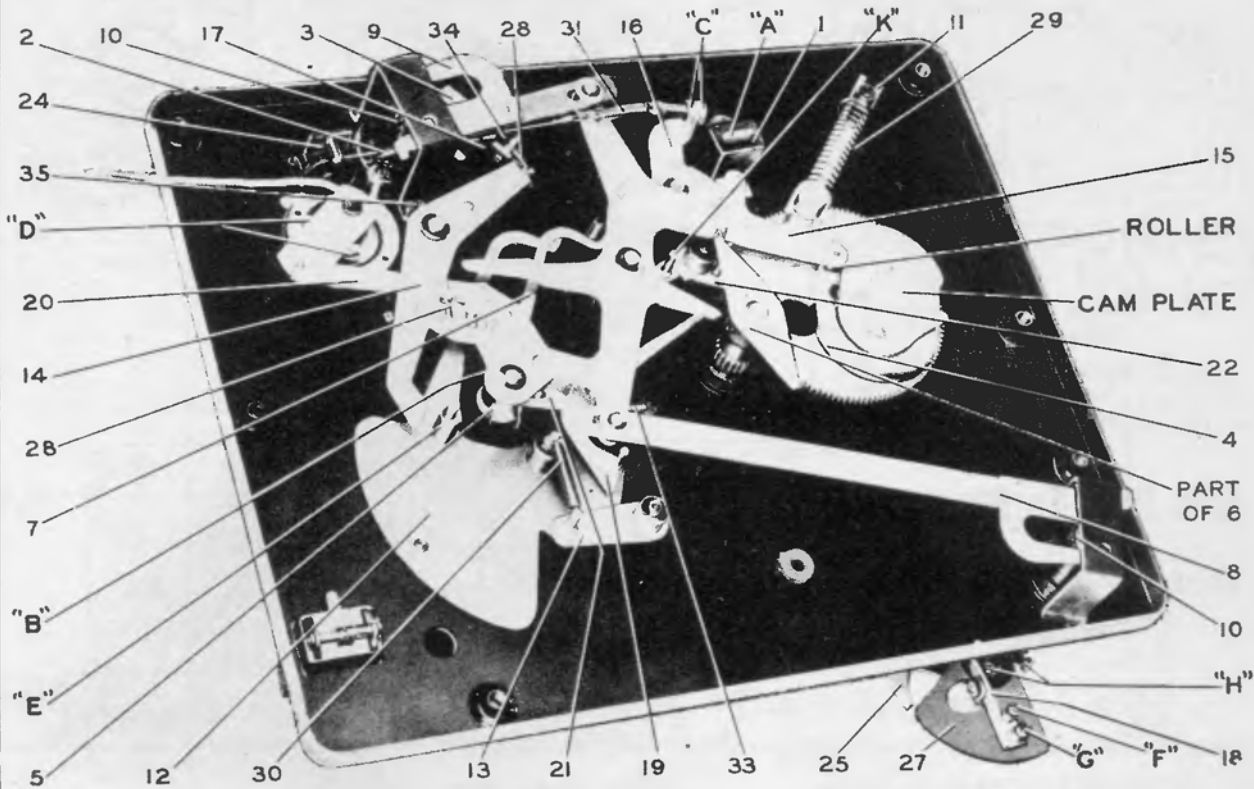

Bottom View of Automatic Record Changer

NOTE: Numbers refer to parts—letters refer to adjustments.

SPEED ADJUSTMENT (SCREW) TO DECREASE SPEED TURN CLOCKWISE



TURN SPEED ADJUSTER SO THE FELT WILL PROTRUDE $\frac{1}{16}$ " WHEN ALL THE WAY IN. ADJUST GOVERNOR SO AS TO LEAVE $\frac{1}{16}$ " BETWEEN FELT AND DISC, THEN SECURE BY MEANS OF GOVERNOR SCREW.

ADJUST SO THAT SHAFT IS FREE TO ROTATE WITHOUT END PLAY
REMOVE TO TAKE OFF GOVERNOR



SPEED ADJUSTMENT LOCK NUT

OIL
KEEP FILLED WITH LIGHT OIL TO INSURE SMOOTH OPERATION

DO NOT CHANGE THIS ADJUSTMENT
RCA MFG. CO. INC.
M-81479-D

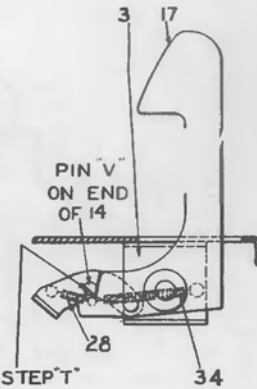
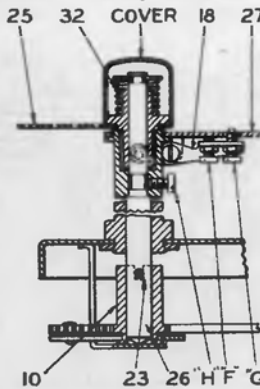


Details of Record Shelf Posts, and Locating Lever Assemblies

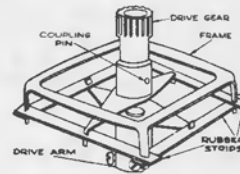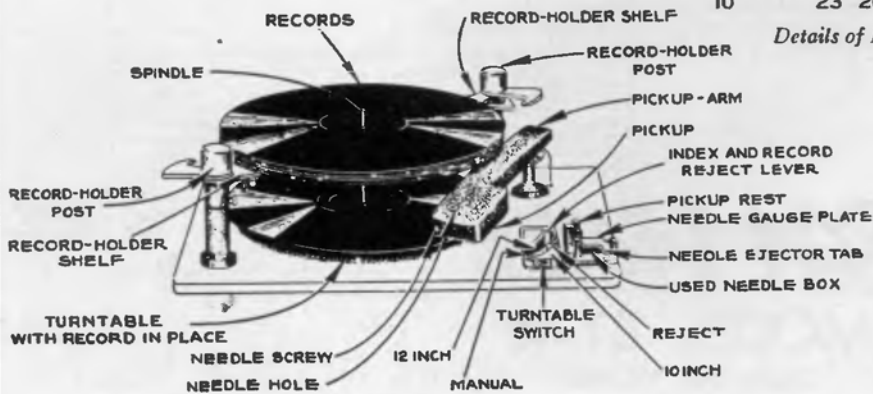


COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

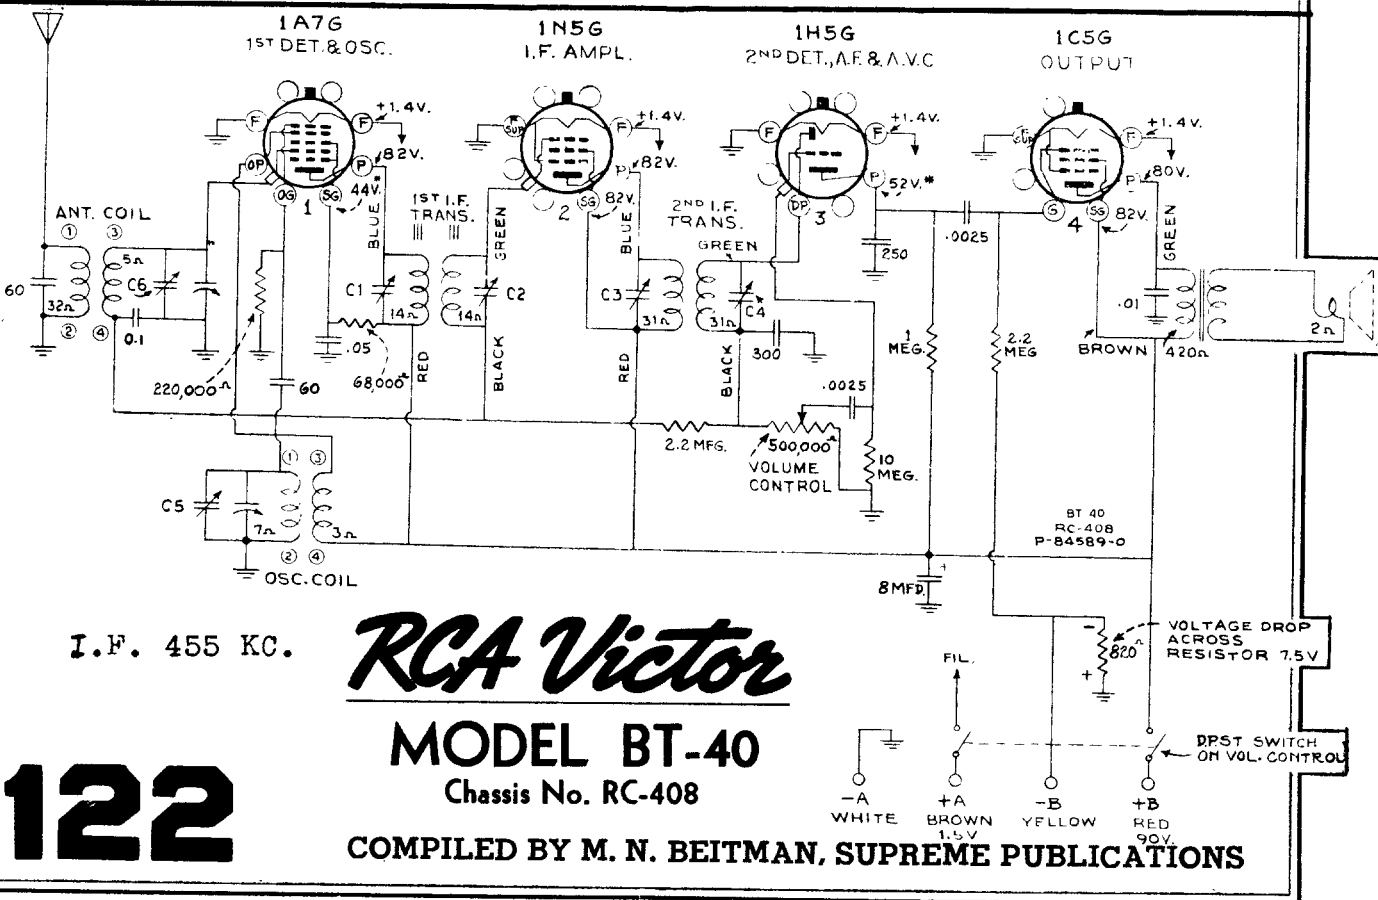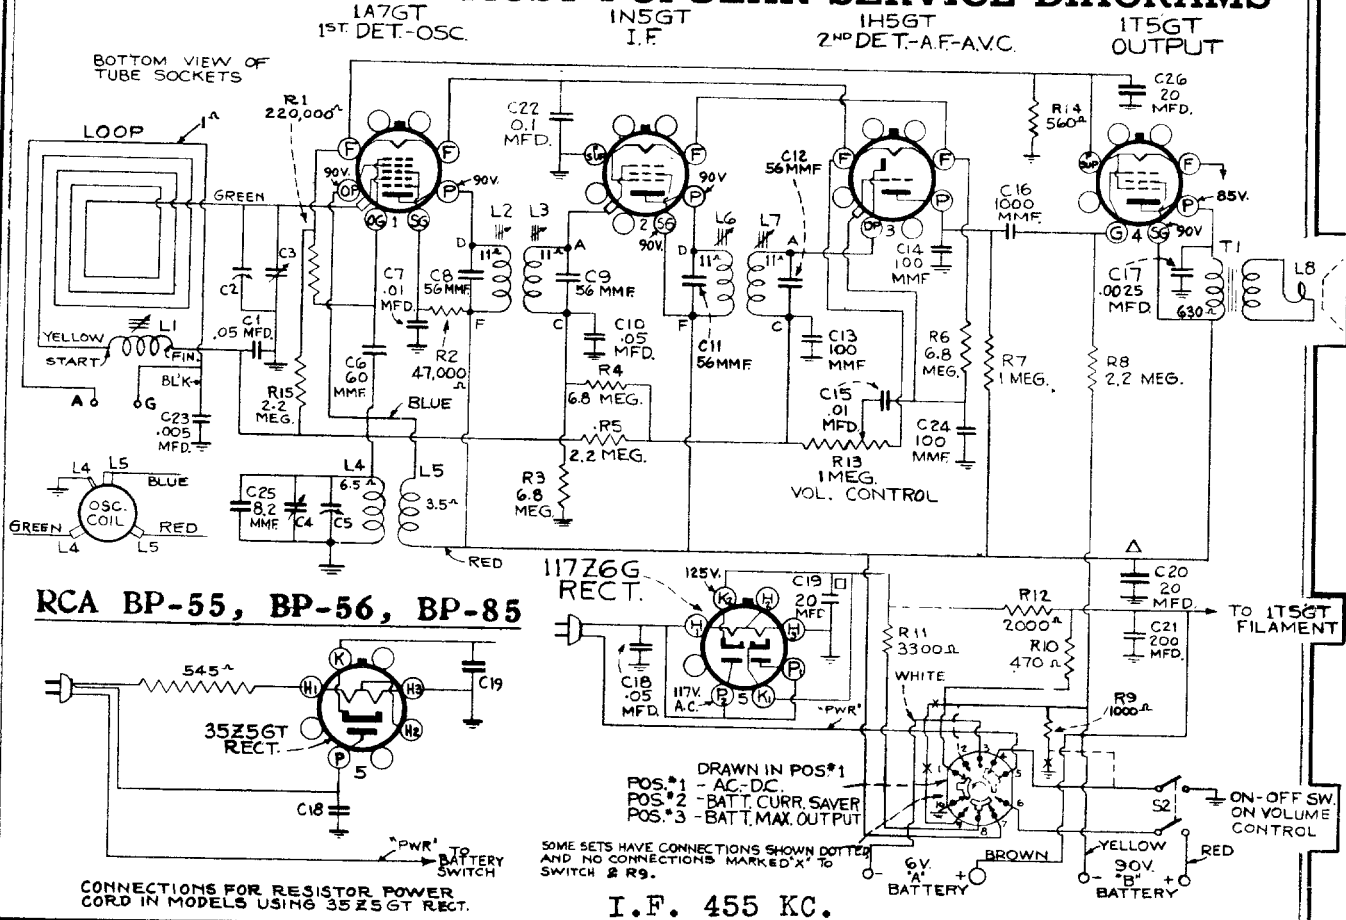


122

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

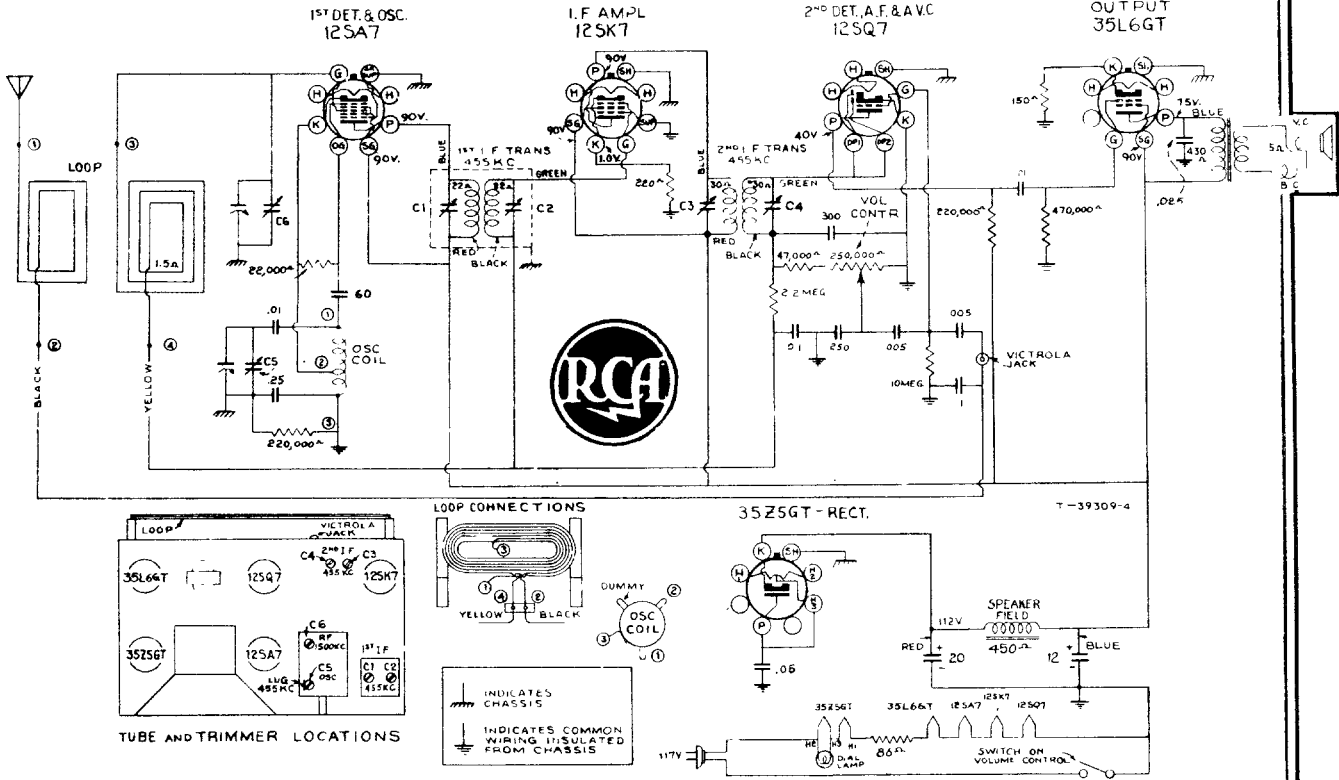

Models 40X-30 and 40X-31 (Chassis No. RC405C & D)

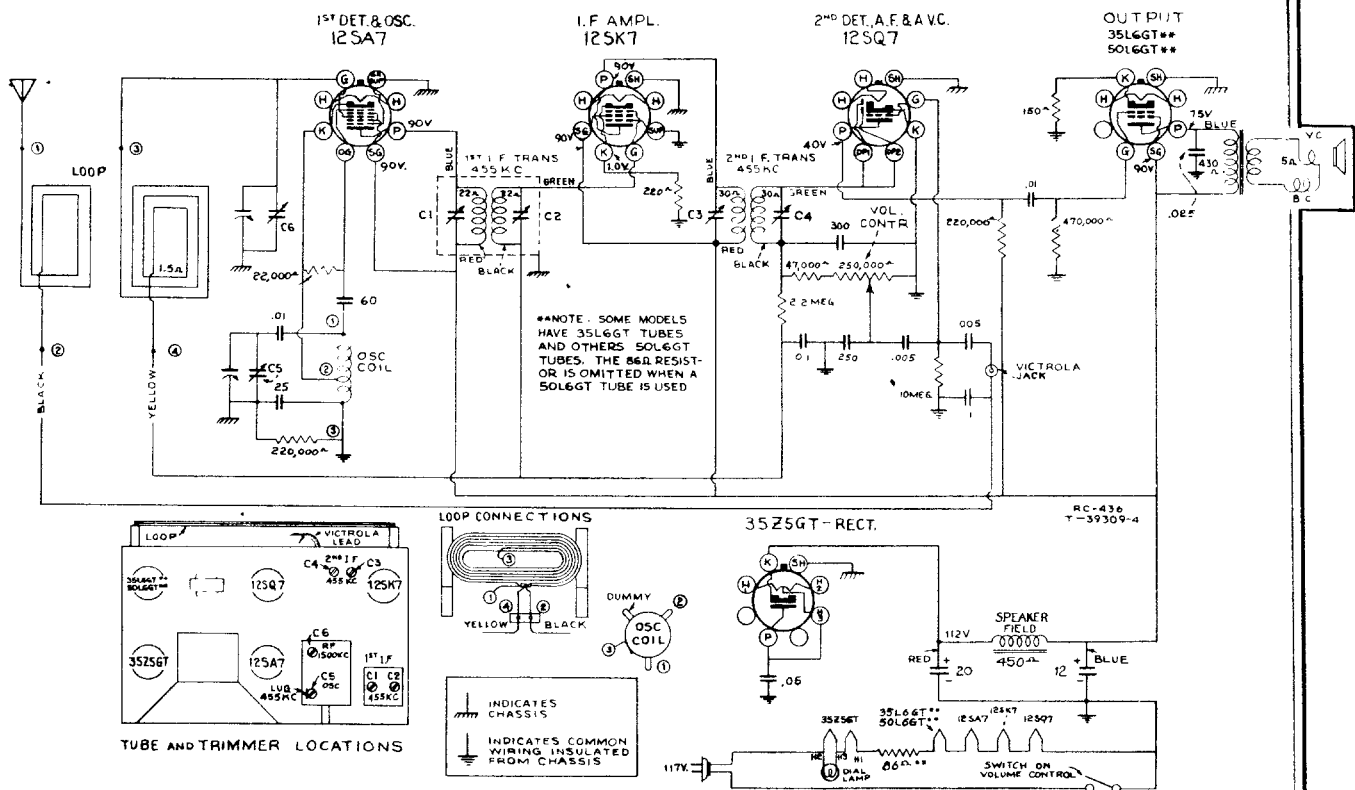


Model 40X-50 Series (Chassis No. RC-436)


COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

123

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

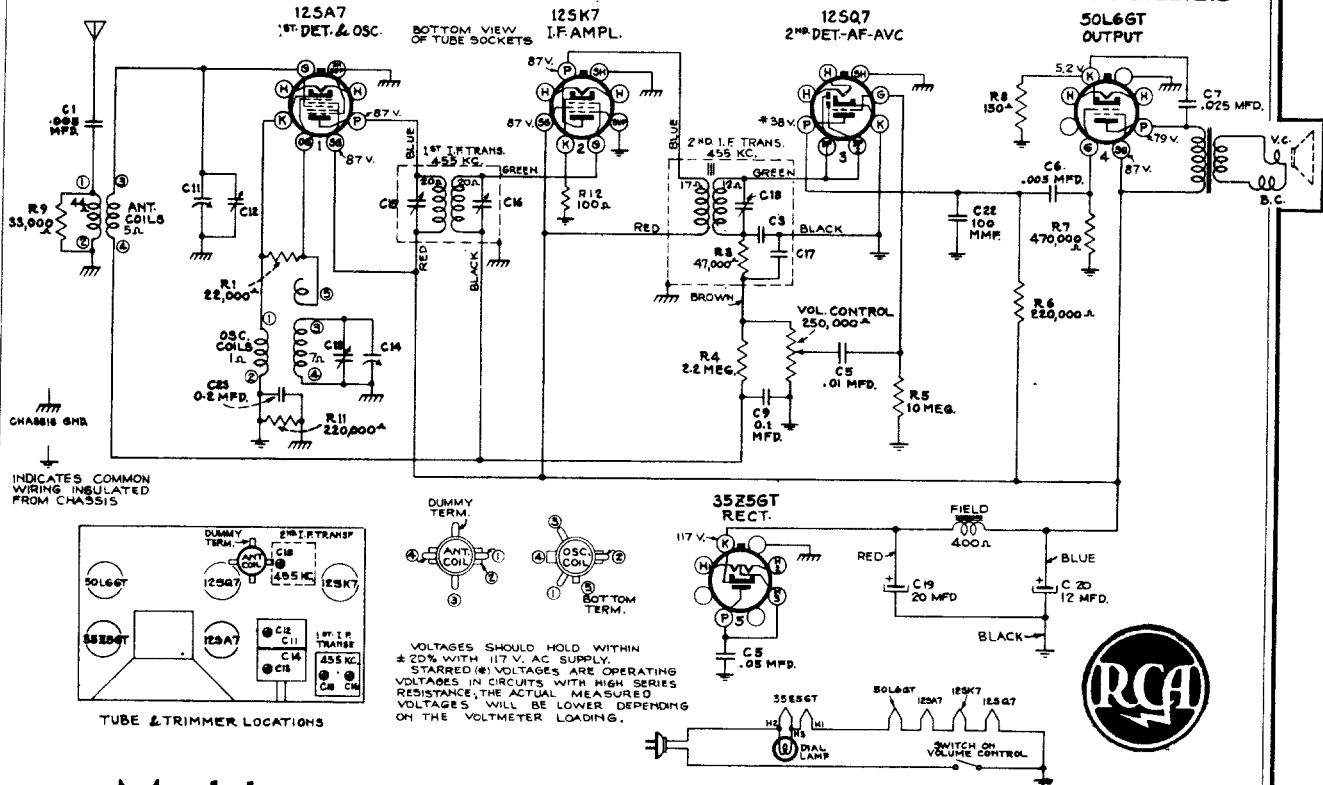


Models 45X5 and 45X6 (Chassis No. RC-457-D)

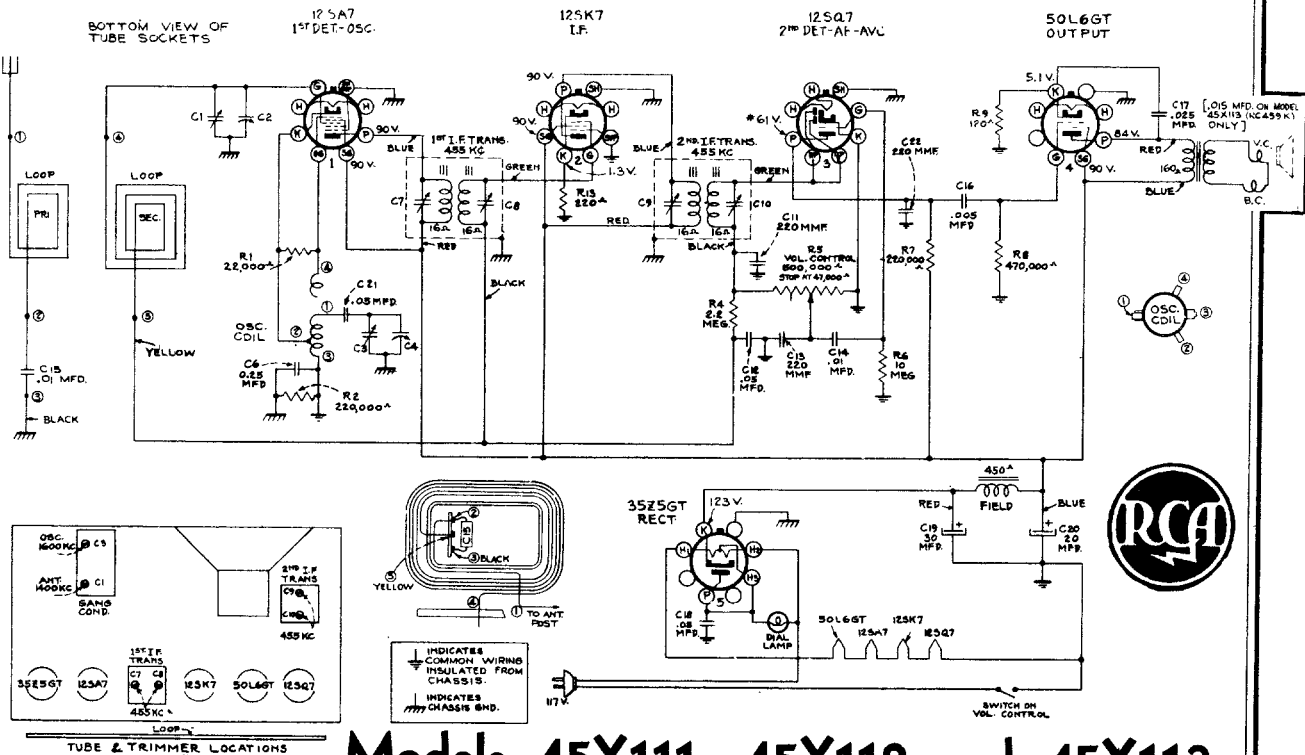

124

Models 45X111, 45X112 and 45X113
Chassis Nos. 459J and 459K
COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

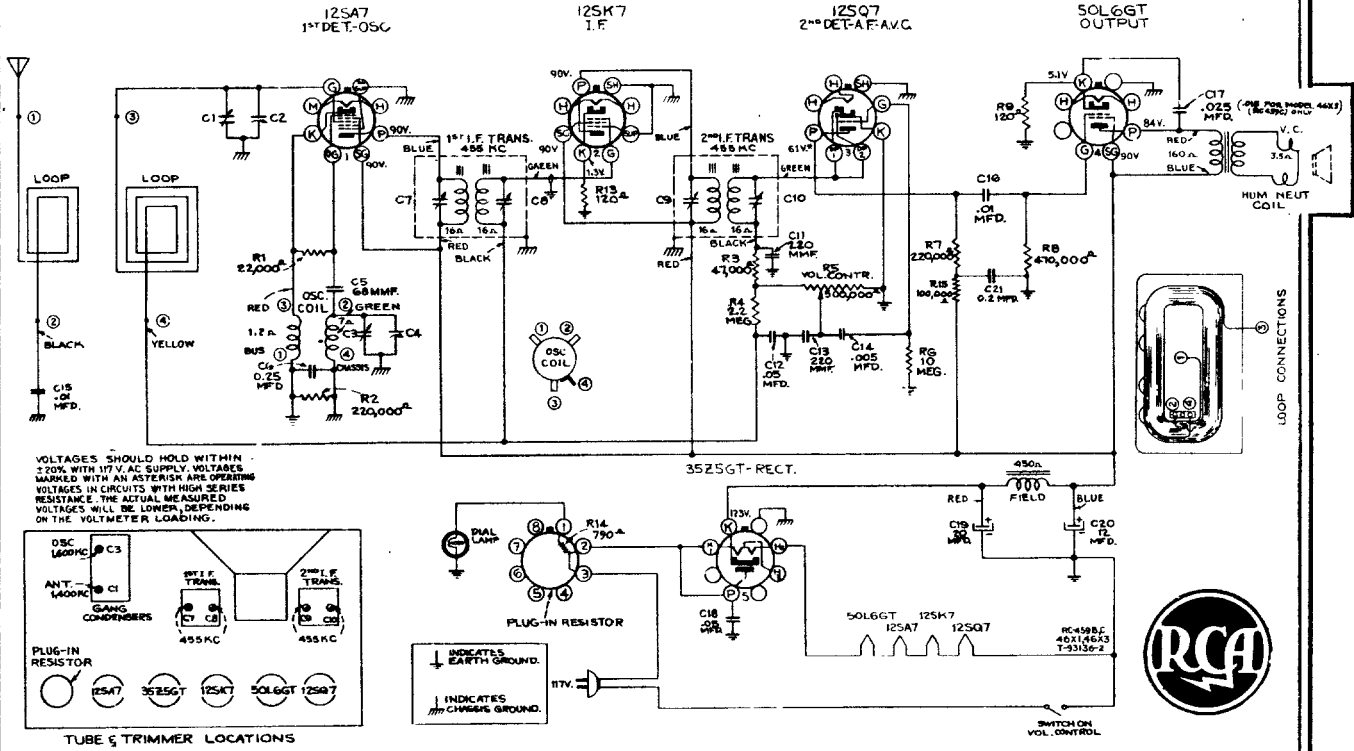


Models 46X1, 46X2 and 46X3

Chassis Nos. 459B and 459C


Models 46X11, 46X12, and 46X13

Chassis Nos. RC456 and RC456A

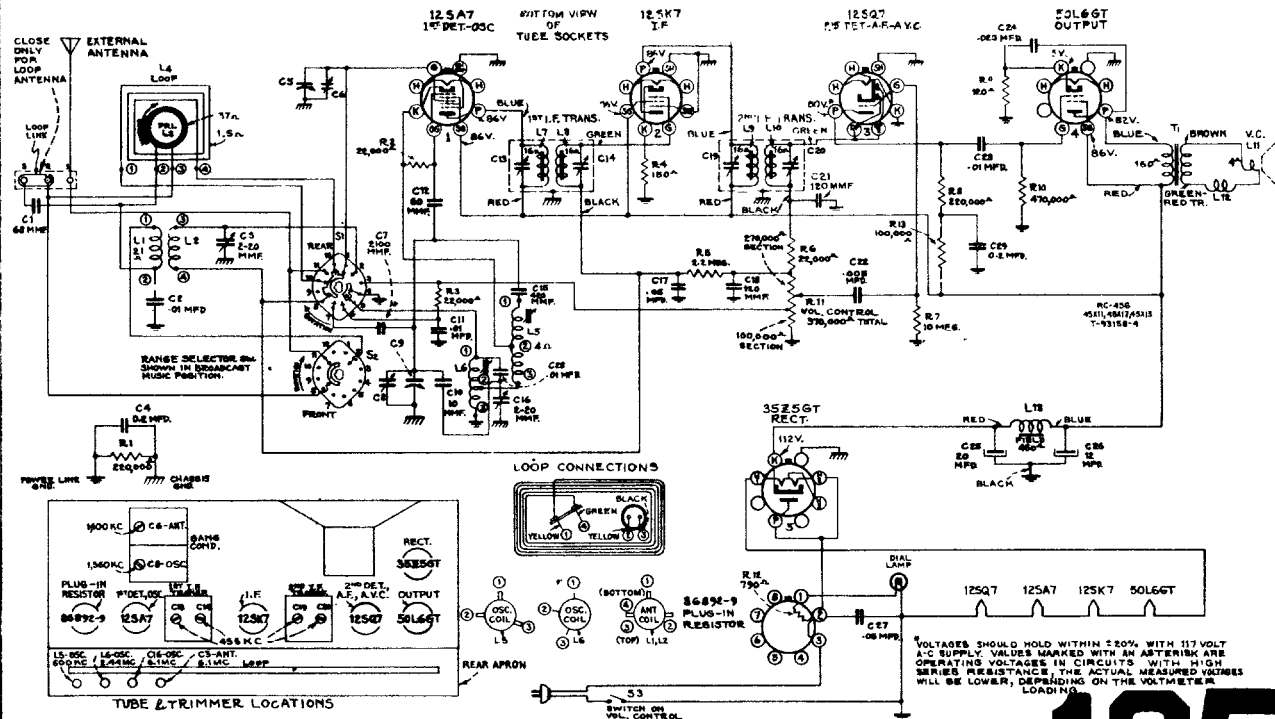

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

RCA Victor Models 46X21, 46X23, and 46X24

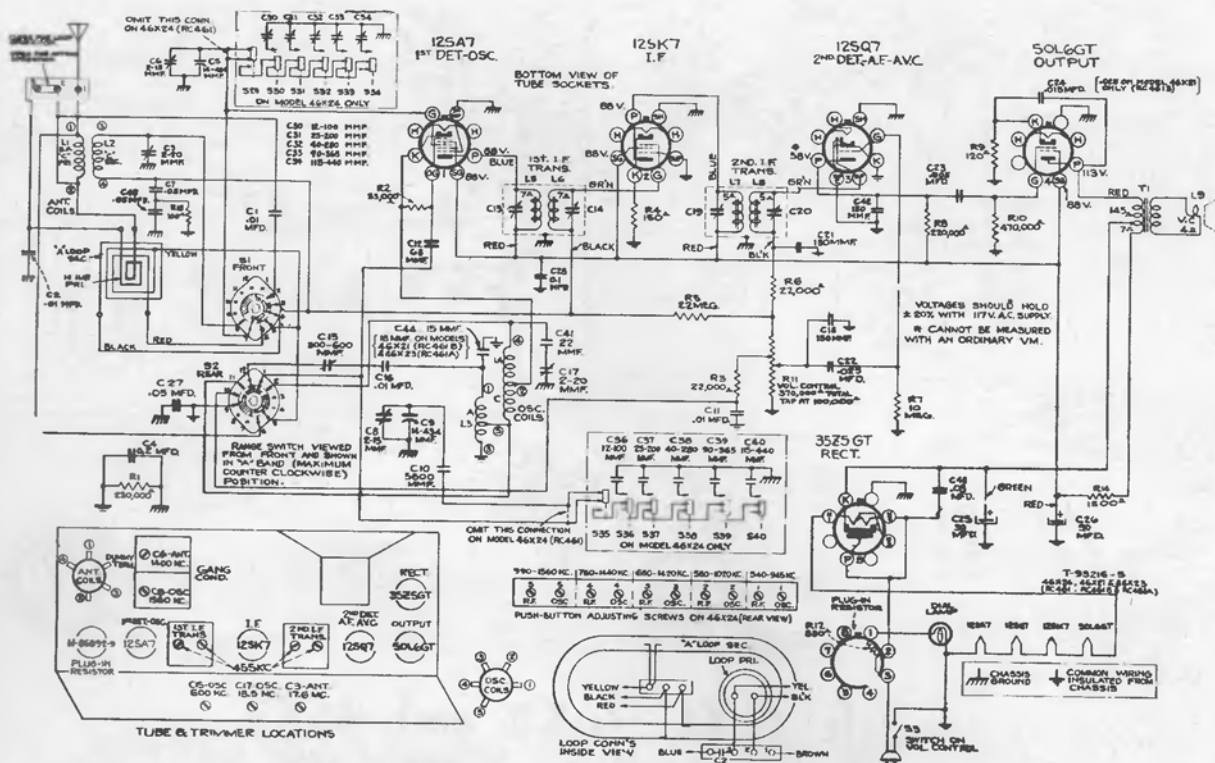

Alignment Procedure

Output Meter Alignment.—Connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—Connect the low side of the test-oscillator to the receiver chassis through a .01 mfd. capacitor, and keep the output as low as possible.

Pre-Setting Pointer.—With gang condenser in full mesh, the pointer should be adjusted to a horizontal position.

Antenna.—The set is equipped with a built-in loop antenna. If the loop antenna is used, the antenna terminal board link should be closed. This link should be open when an external antenna is used. Connect the external antenna to terminal 1.

Adjustments for Electric Tuning:

The push buttons and corresponding frequency ranges are given in the schematic diagram. Allow the set to warm up for about 15 minutes and proceed as follows:

- (1) List five desired stations in order of the push button ranges.
- (2) Push in the dial tuning (right hand) button and manually tune in the first station on the list.
- (3) Press button No. 1. Turn R-F screw half way in; next turn the oscillator screw entirely in and then gradually back out until the station is heard.
- (4) Adjust the R-F trimmer for maximum output.
(Clockwise adjustment of oscillator and R-F trimmers tunes the circuits to lower frequencies.)
- (5) By turning the set to a position in which reception is weak a final more accurate adjustment may be made.
- (6) Adjust for each of the remaining stations in a similar manner and place corresponding station tabs in recesses above buttons. A "Dial Tuning" tab should be above button No. 6.

Precautionary Lead Dress:

- (1) Dress all leads away from oscillator and antenna coils.
- (2) Dress cathode resistor (R4) and B+ lead across 12SK7 socket between plate and grid terminals.
- (3) (46X24 only) Dress leads to push button switch straight up and parallel so that they do not touch each other.
- (4) Dress black lead from 1st I-F transformer over green lead.
- (5) Keep plate-cathode bypass (C43) of rectifier tube away from volume control.

Step	Connect high side of test oscillator to—	Tune test oscillator to—	Turn radio dial to—	Adjust following for max. output—
1	Grid 12SK7 in series with 0.01 mfd.	455 kc	"A" Band Quiet Point at 1,550 kc end of dial	C19 and C20 (2nd I-F Trans.)
2	Grid 12SA7 in series with 0.01 mfd.			C13 and C14 (1st I-F Trans.)
3		600 kc	"A" Band 600 kc	C15 (osc.)
4	Antenna in series with 200 mmfd.	1,560 kc	"A" Band Full Clockwise	C8 (osc.)
5		1,400 kc	Resonance on 1,400 kc "A" Band	C6 (ant.)
6	Repeat steps 3 (rock in), 4 and 5			
7	Antenna in series with 300 ohms	18.5 kc	"C" Band Full Clockwise	C17 (osc.)*
8		17.8 kc	"C" Band Resonance on 17.8 kc Signal	C3 (ant.)
9	Repeat steps 7 and 8			


* Use minimum capacity peak if two can be obtained.

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

RCA Victor


MODELS K-50 and T-55

Chassis Nos. RC-418A and RC-418

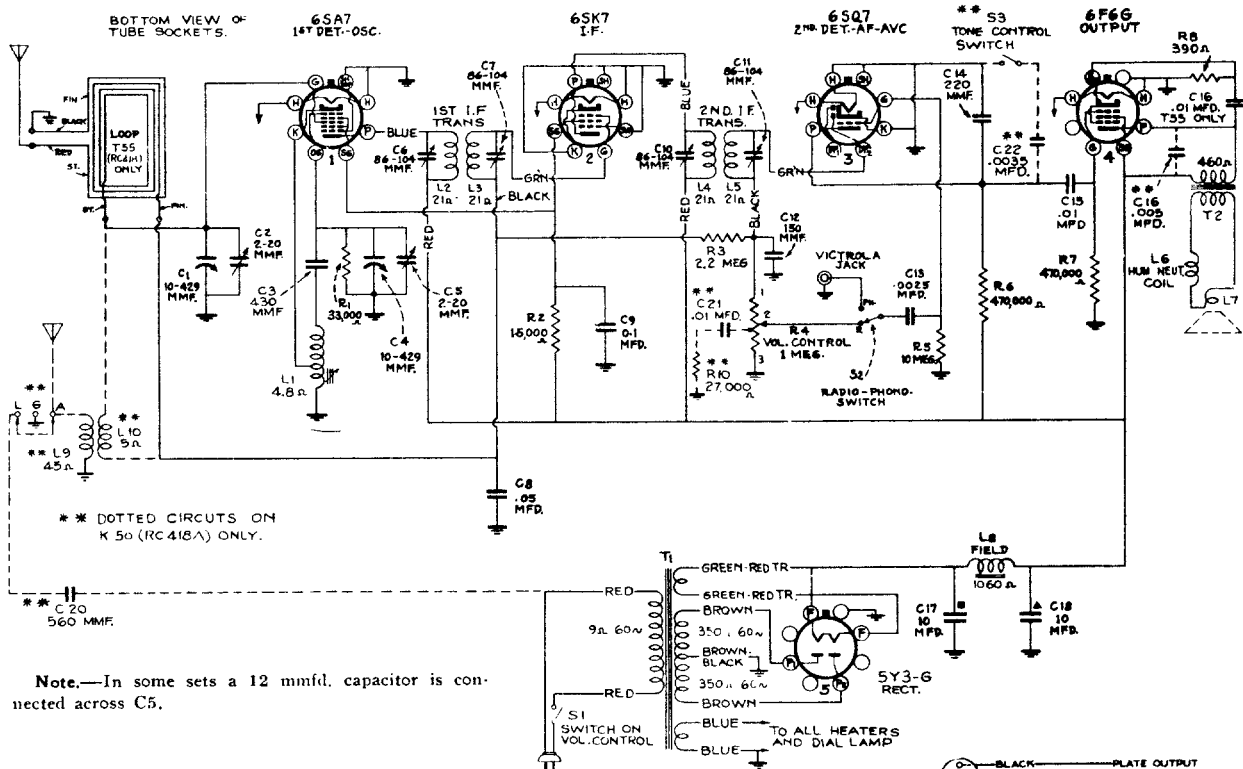

Adjustments for Push-Button Tuning

1. Pull off the push-buttons and loosen the push-button rods with a small screwdriver.
2. Set the radio-phono switch to "radio" position and accurately tune in the station for which the first button is to be set.
3. Press in push-button rod No. 1 (left) with the screwdriver, as far as it will go without undue pressure, hold in, retune station with manual control if necessary for best reception, and then carefully tighten up the rod. Do not tighten more than 1/4 turn after the rod begins to grip or damage to the mechanism may result.
4. Replace the push-button on its shaft.
5. Proceed in a similar manner for the remainder of the push-buttons
6. Insert the station marker tabs in the recesses above the push-buttons.

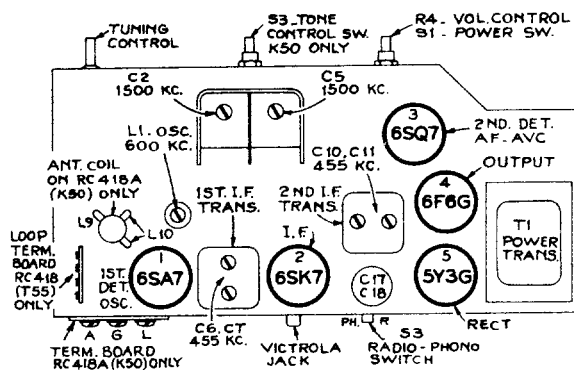

Steps	Connect the high side of the test-osc. to—	Tune test osc. to—	Turn radio dial to	Adjust the following for maximum peak output
1	Antenna terminal	455 kc	Quiet Point between 1,720-1,500 kc	C10 and C11 (2nd I-F trans.)
2	Antenna terminal			C6 and C7 (1st I-F trans.)
3	Ant. terminal in series with 200 mmfd.	1,500 kc	1,500 kc calibration mark	C5 (osc.) C2 (ant.)
4		600 kc	600 kc calibration mark	L1 (osc.) (Rock in)
5	Repeat step 3			

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

127

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

128




MODEL M50

Chassis No. RC 357J


Position of Dial Pointer	Generator Frequency	Dummy Antenna	Generator Connection	Adjustment Symbol	Circuit Adjusted
No Signal 550-750 kc	455 kc	.001 mfd.	6K7 Grid	L-10	2nd I.F. Trans.
No Signal 550-750 kc	455 kc	.001 mfd.	6A8 Grid	L-8, L-9	1st I.F. Trans.
1,400 kc	1,400 kc	.0001 mfd. †	Ant. Lead	C-3	Ant.
600 kc	600 kc	.0001 mfd. †	Ant. Lead	L-2	Ant.
1,400 kc	1,400 kc	.0001 mfd. †	Ant. Lead	C-3*	Ant.

NOTE: No oscillator alignment adjustments are required in this receiver.

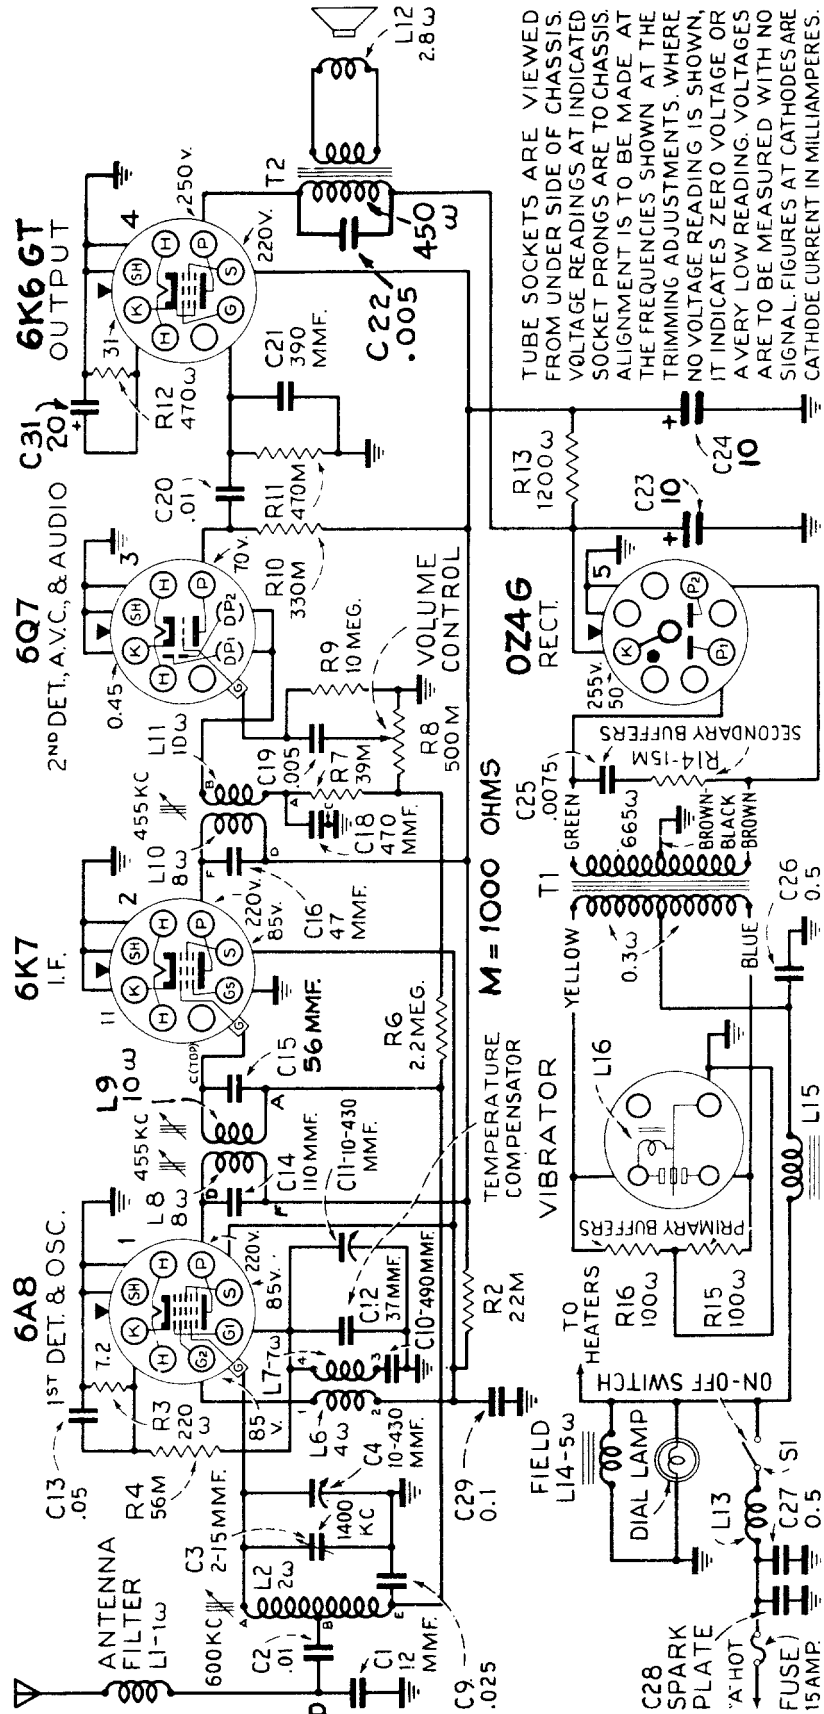

TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS AT INDICATED SOCKET PRONGS ARE TO CHASSIS. ALIGNMENT IS TO BE MADE AT THE FREQUENCIES SHOWN AT THE TRIMMING ADJUSTMENTS. WHERE NO VOLTAGE READING IS SHOWN, IT INDICATES ZERO VOLTAGE OR A VERY LOW READING. VOLTAGES ARE TO BE MEASURED WITH NO SIGNAL. FIGURES AT CATHODES ARE CATHODE CURRENT IN MILLIAMPERES.

MOST POPULAR SERVICE DIAGRAMS

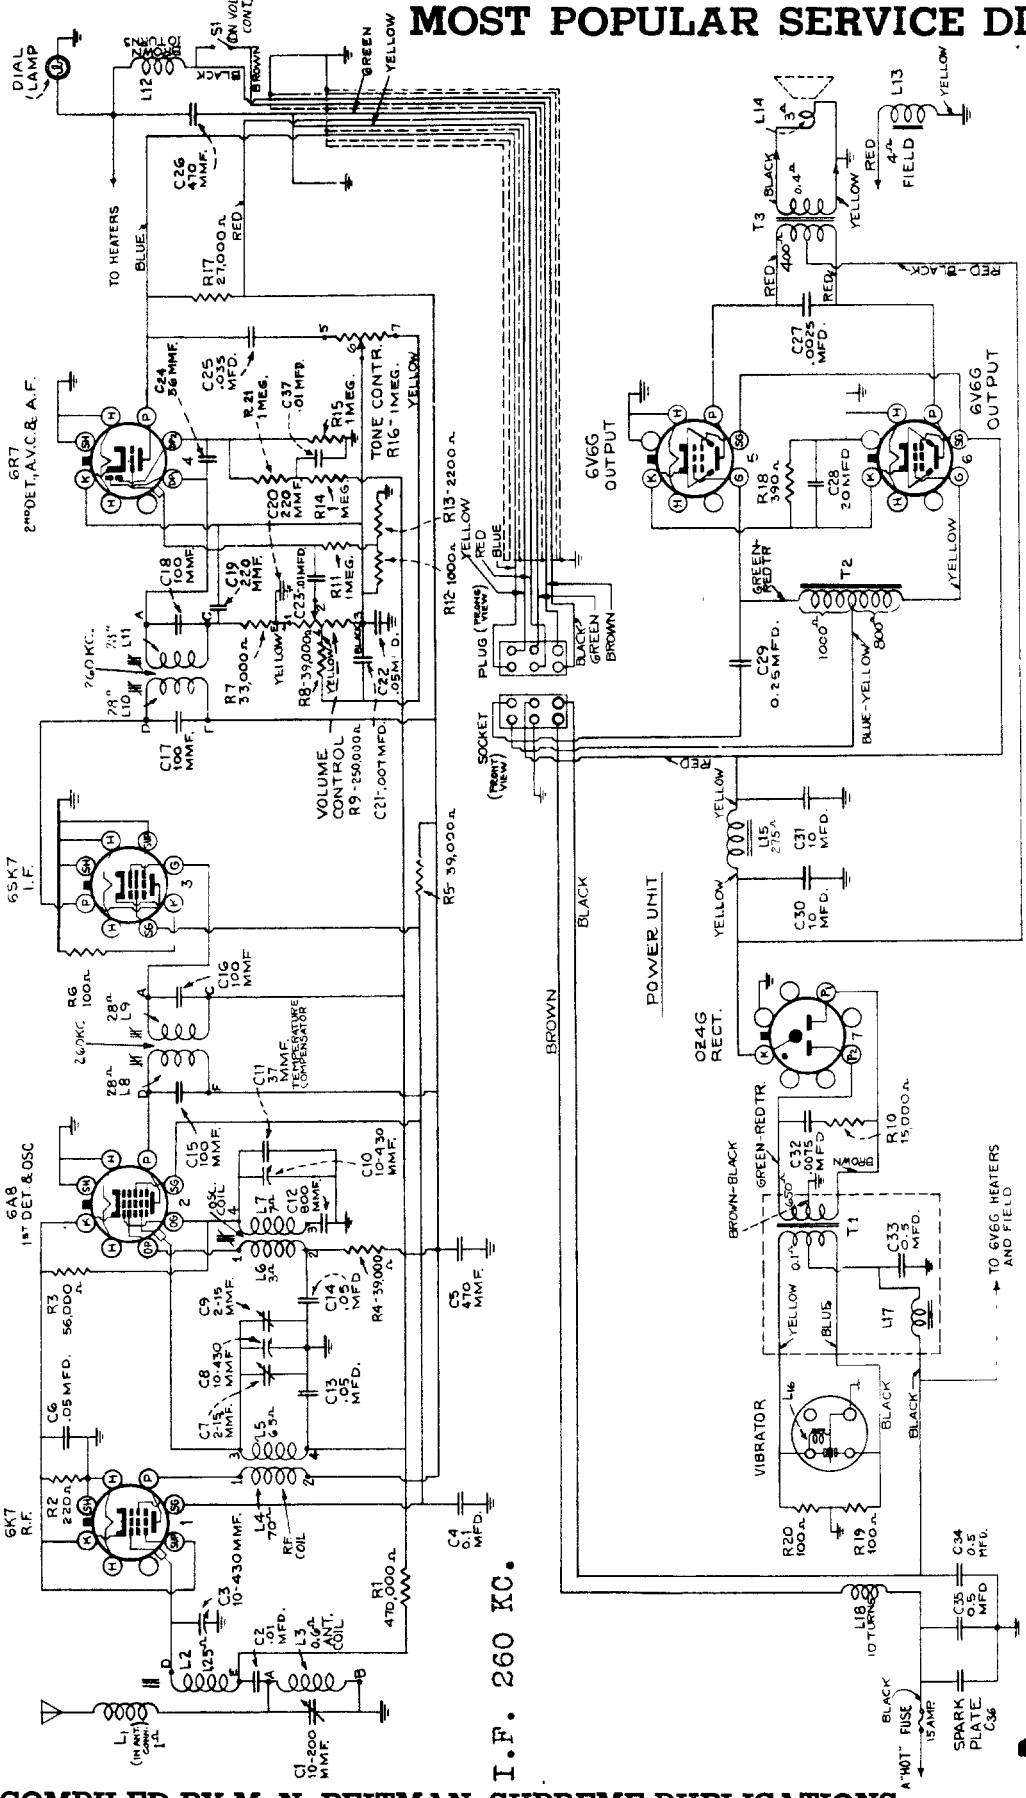

I. F. 260 KC.


MODEL M-70
Chassis No. RC-394

RCA Victor

129

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

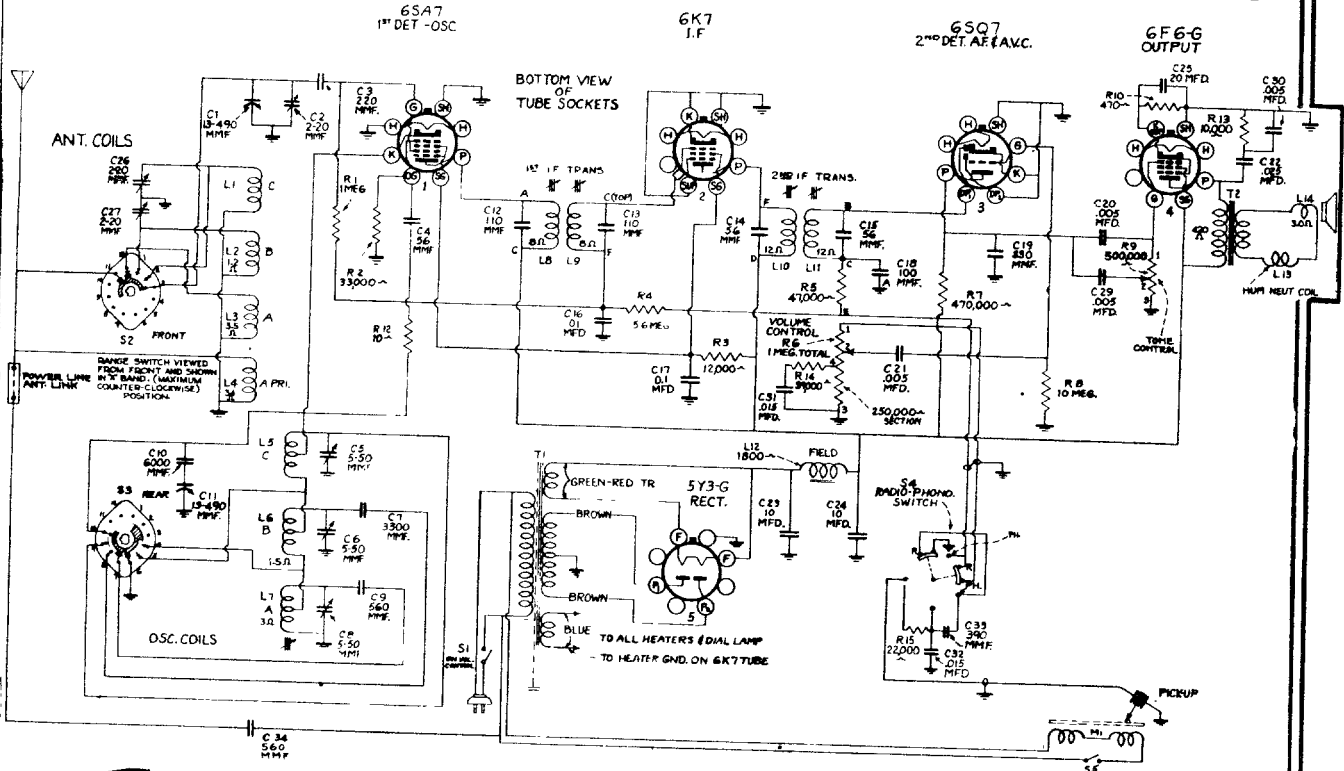

RCA Victor MODEL U-50 CHASSIS No. RC-414C

Steps	Connect the high side of test-osc. to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output
1	6K7 I-F grid cap. in series with .01 mfd.	455 kc	"A" Band quiet point between 550-750 kc	L10 and L11 (2nd I.F. trans.)
2	Tuning condenser stator (osc.) in series with .01 mfd. **	455 kc		L8 and L9 (1st I.F. trans.)
3	Antenna lead in series with 200 mmfd.	600 kc	600 kc (33°) "A" Band	L7†
4		1,500 kc	1,500 kc (152.4°) "A" Band	C2 (ant.) C8 (osc.)
5	Repeat steps 3 and 4			
6	Antenna lead in series with 400 ohms	20 mc	20 mc (156.4°) "C" Band	C5 (osc.) * C26 (ant.)
7		6 mc	6 mc (149°) "B" Band	C8 (osc.) * C27 (ant.)
8	Antenna lead in series with 200 mmfd.	1,500 kc	1,500 kc (152.4°) "A" Band	C8 (osc.)

* Use minimum capacity peak if two peaks can be obtained.
 † Rock gang condenser slightly while adjusting L7.
 ** Make test-oscillator connection to lug on tuning condenser stator (oscillator section) in series with .01 mfd. condenser.
 Note.—Oscillator tracks 455 kc above signal on all bands.

Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown in the chassis drawing.

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.


Test-Oscillator.—For all alignment operations, connect the low side of the test-oscillator to the receiver chassis, and keep the output as low as possible to avoid a-v-c action.

Calibration Scale On Indicator-Drive-Cord Drum.—In most cases it will not be necessary to remove the chassis from the dial scale for alignment, allowing the dial scale to be used for calibration. However, if alignment is made with the receiver chassis removed, the calibration scale attached to the rear of the drum which is mounted on the front shaft of the gang condenser must be used. The setting of the gang condenser is read on this scale, which is calibrated in degrees. The correct setting of the gang in degrees, for each alignment frequency, is given in the alignment table.


As the first step in r-f alignment, check the position of the drum. The 135° mark on the drum scale must be vertical, and directly under the center of the gang-condenser shaft when the plates are fully meshed. The drum is held in place by one set-screw, which must be securely tightened when the drum is in the correct position.

Pointer for Calibration Scale.—Improvise a pointer for the calibration scale by fastening a piece of wire to the gang-condenser frame, and bend the wire so that it points to the 0° mark on the calibration scale when the plates are fully meshed.

Dial-Indicator Adjustment.—After fastening the chassis in the cabinet, attach the dial indicator to the drive cable with indicator at the 530 kc mark, and gang condenser fully meshed. The indicator has a spring clip for attachment to the cable.

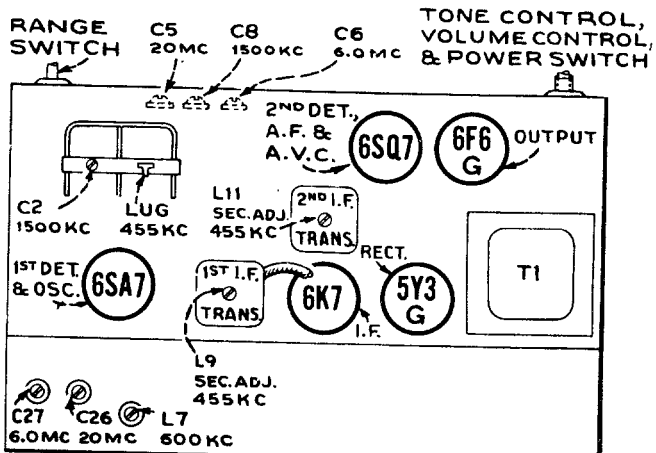

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS MODEL T-80 Eight-Tube, Three-Band, AC, Superheterodyne

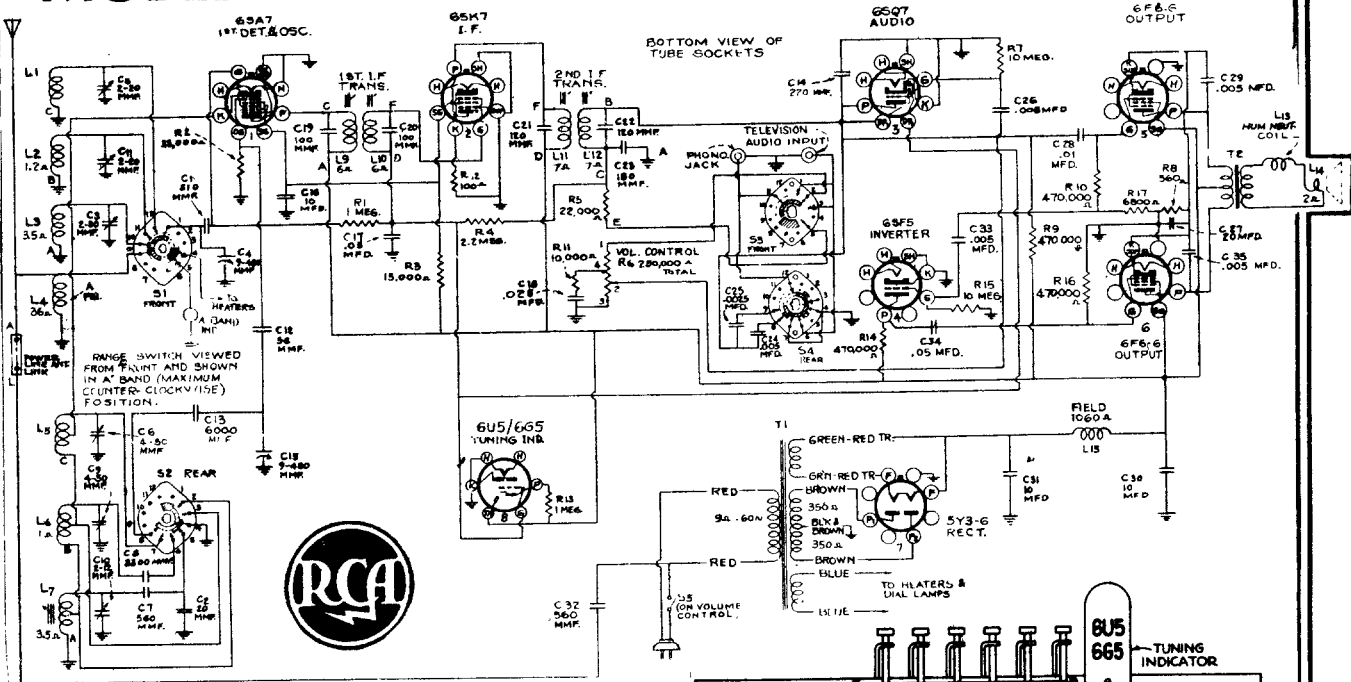


Steps	Connect the high side of the test-osc. to—	Tune test osc. to—	Turn radio dial to—	Adjust the following for maximum peak output
1	6SK7 grid in series with .01 mfd.	455 kc	"A" Band	L11 and L12 (2nd I-F Trans.)
2	6SA7 grid in series with .01 mfd.		Quiet Point between 550-750 kc	L9 and L10 (1st I-F Trans.)
3	Ant. terminal in series with 300 ohms	20 mc	20 mc (40°) "C" Band	C8 (osc.)* C5 (ant.)
4		6 mc	6 mc (52.5°) "B" Band	C9 (osc.)** C11 (ant.)
5	Ant. terminal in series with 200 mmfd.	1,500 kc	1,500 kc (41.75°) "A" Band	C10 (osc.) C9 (ant.)
6		600 kc	600 kc (200.25°) "A" Band	L7 (osc.) Rock Gang
7	Repeat step 5.			

* Use minimum capacity peak if two can be obtained. Check to determine that C8 has been adjusted to correct peak by tuning receiver to approximately 19.09 mc where a weaker signal should be received.

** Use minimum capacity peak if two can be obtained. Check to determine that C9 has been adjusted to correct peak by tuning receiver to approximately 5.09 mc where a weaker signal should be received.

Note: Oscillator tracks above signal on all bands.

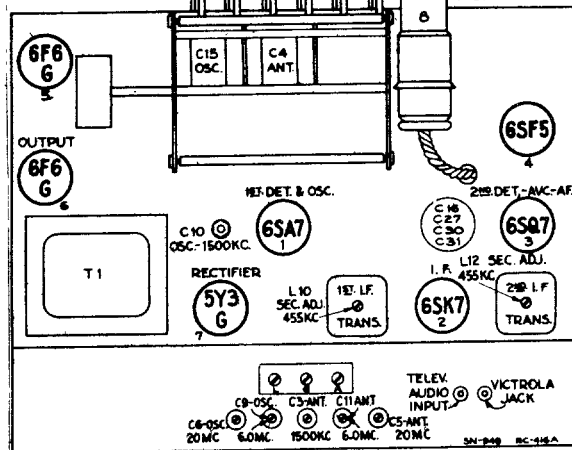

Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown in the chassis drawing.


Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—For all alignment operations, connect the low side of the test-oscillator to the receiver chassis, and keep the output as low as possible to avoid a-v-c action.

Calibration Scale on Indicator-Drive-Cord-Drum.—The tuning dial is fastened in the cabinet and cannot be used for reference during alignment; therefore, a calibration scale is attached to the tuning drum. The setting of the gang condenser is read on this scale, which is calibrated in degrees. The correct setting of the gang in degrees, for each alignment frequency, is given in the alignment table.

As the first step in r-f alignment, check the position of the drum. The 240° mark on the drum scale must be vertical and directly above the center of the shaft of the tuning drum when the plates are fully meshed. The drum is held to the shaft by means of two set-screws, which must be tightened securely when the drum is in the correct position.

On the inner side of the tuning drum are two projections which serve as stops to prevent extreme rotation of the gang condenser. The tuning drum should be set so that the stop limiting clockwise movement of the drum takes effect just as the gang condenser plates are becoming fully meshed, thus preventing stress on the gang due to extreme rotation.

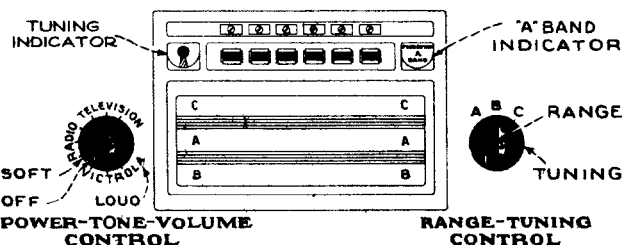


COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS


131

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

RANGE SWITCH SHOWN IN MAX. COUNTERCLOCKWISE "PUSH BUTTON" POSITION.

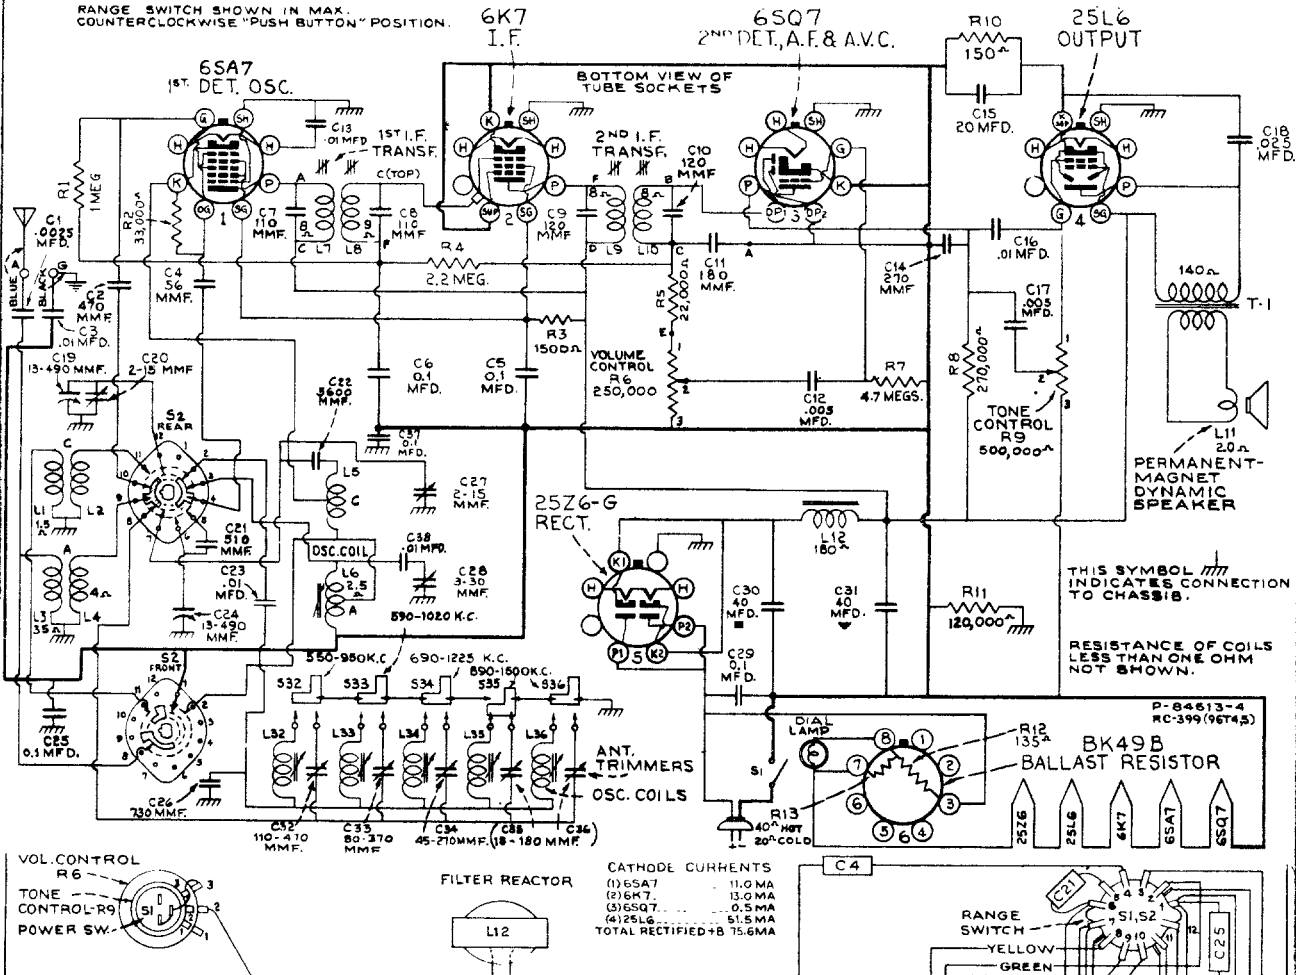

Measurements made to low-side of volume control unless otherwise indicated, with set tuned to quiet point and volume control at minimum. Values should hold within $\pm 20\%$ with 117 volt a-c supply.

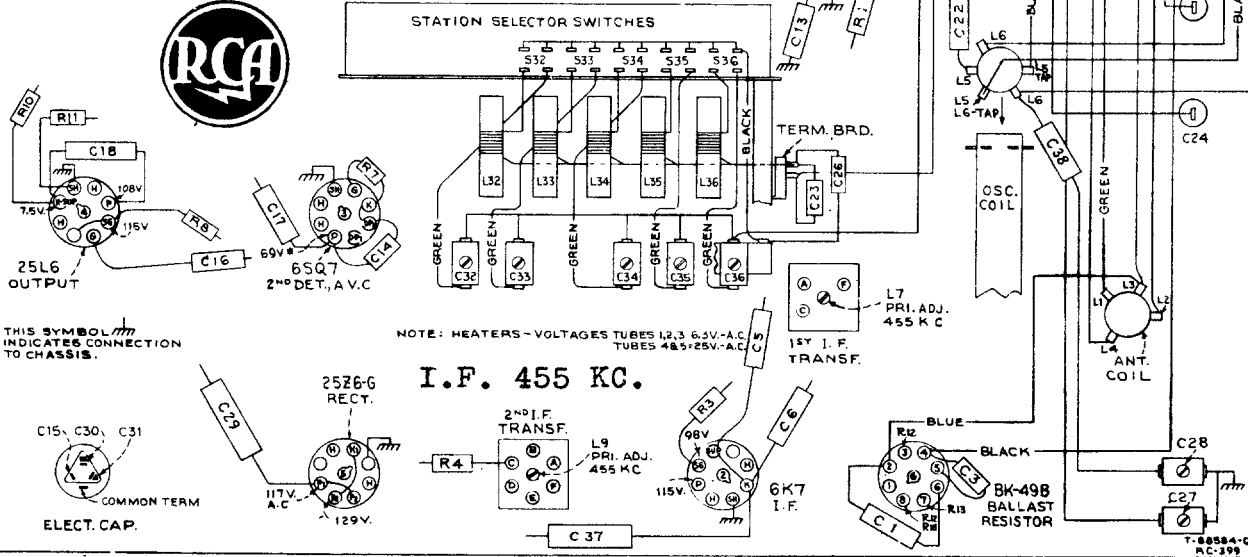

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

RCA Victor


MODELS 96X-1, -2, -3, -4 and -11, -12, -13, -14

Chassis No. RC-400

and

RC-400A

Six-Tube, Two-Band, A-C—D-C, Superheterodyne Receivers

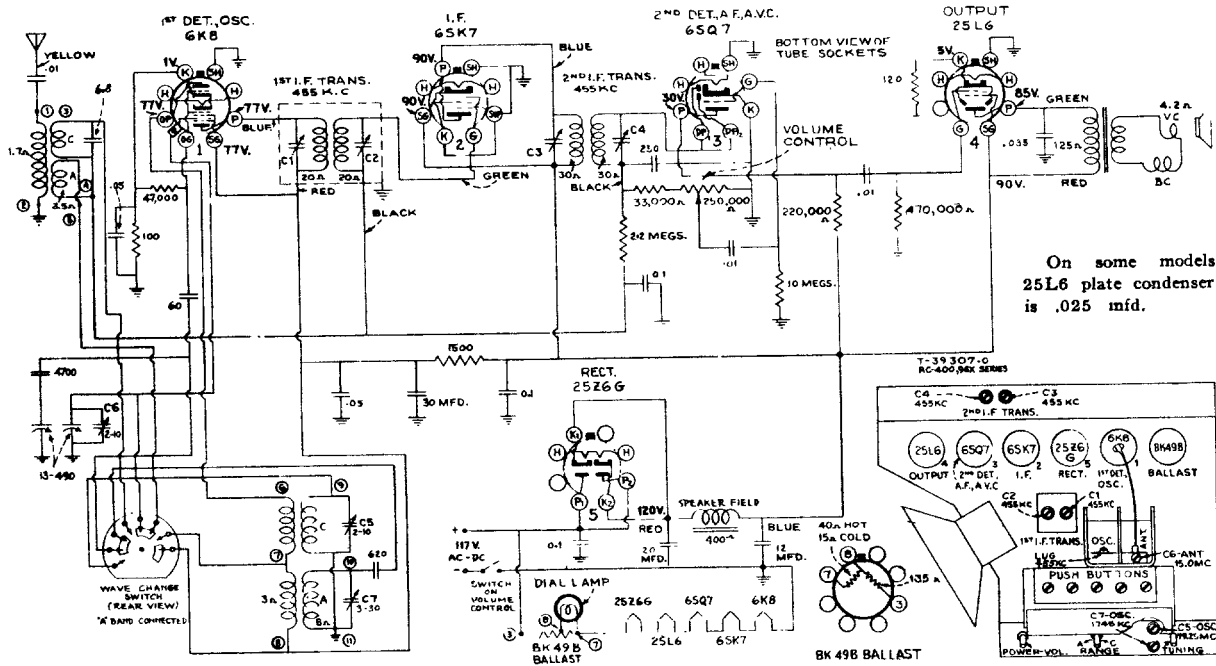

On some models
25L6 plate condenser
is .025 mfd.

Alignment Procedure

Output Meter Alignment.—Connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—Connect the low side of the test-oscillator to the receiver chassis, through a .01 mfd. capacitor, and keep the output as low as possible.

Dial Setting.—To set dial indicator drum, turn tuning condensers fully clockwise and then counter-clockwise.

Push-button Adjustments.—Remove bakelite button and loosen screw two turns with a screwdriver or coin. Tune in the desired station by means of the right-hand control knob. Press push lever down as far as it will go and tighten screw. Release lever and put on push-button.


Steps	Connect the high side of test-oscillator to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output—
1	Tuning condenser stator (osc.) in series with .01 mfd.†	455 kc	Quiet point between 550-750 kc	C1, C2, C3, C4 (1st and 2nd I-F transformer)
2	Antenna lead (yellow) in series with 400 ohms	19.25 mc	Full clockwise (out of mesh) "C" band	C5* (osc.)
3	Same as step 2	15.0 mc	15.0 mc Test oscillator signal	C6** (ant.) See Note No. 1
4	Antenna lead in series with 200 mmf condenser	1,745 kc	Full clockwise (out of mesh) "A" band	C7 (osc.)

* Use minimum capacity peak if two peaks can be obtained.
** Rock gang slightly and check to determine that C5 has been adjusted to the correct peak by tuning to approximately 14.09 mc, where a weaker signal should be received.

† Make test oscillator connection to lug on tuning condenser stator (oscillator section) in series with .01 mfd. condenser.

Note No. 1.—Accurately tune receiver to the 15.0 mc test oscillator signal. This signal will appear twice (14.09 and 15.0 mc) as dial is turned. Use the higher frequency setting of the tuning condensers (gang furthest out of mesh).

Note No. 2.—Oscillator tracks 455 kc above signal on all bands.

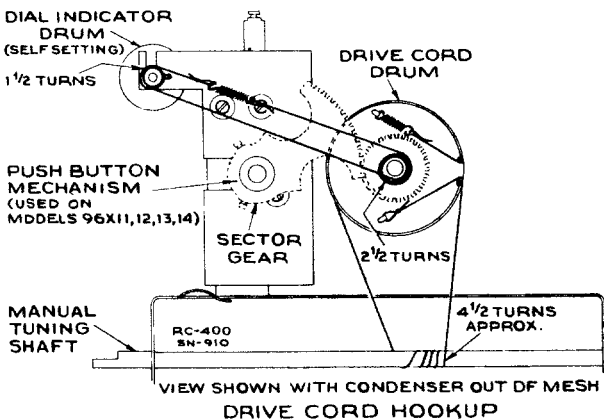


COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

133

RCA Victor

MODEL 98T2

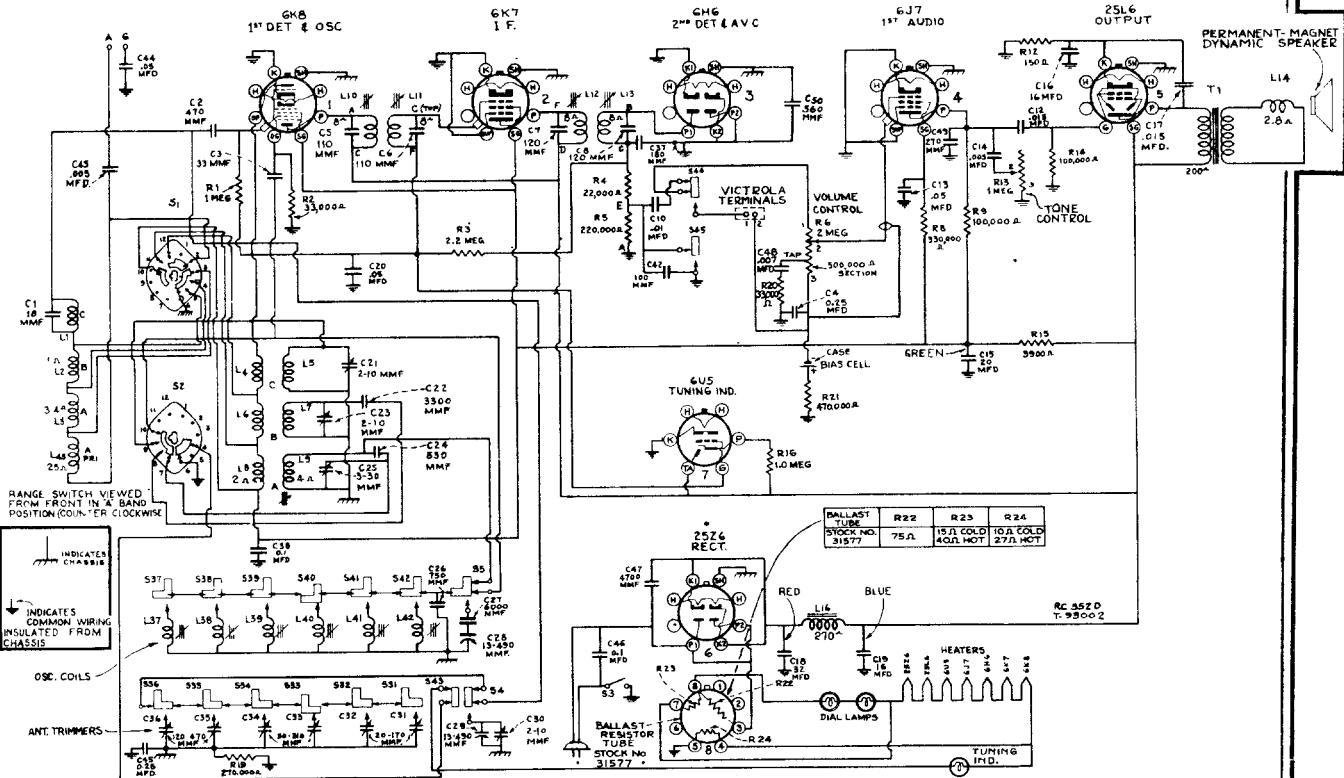

Adjustments for Electric Tuning

These models have eight push buttons. The left-hand button is a Victrola switch. The right-hand button connects the gang condenser for manual tuning. The other six buttons are for electric tuning of six different stations in the standard-broadcast range. The station buttons connect to separate magnetite-core oscillator coils and separate antenna trimmers which must be adjusted for the desired stations. Use an insulated screwdriver or alignment tool such as RCA Stock No. 31031. Allow at least five minutes warm-up period before making adjustments.


The procedure is as follows:

1. Make a list of the desired six stations, arranged in order from low to high frequencies.
 2. Push in the dial-tuning button, and manually tune in the first station on the list.
 3. Push in station button No. 1 (second from left) and adjust No. 1 oscillator core (L37) to receive this station. Screw the core all the way in, to lowest frequency, and then unscrew slowly until station is received.
 4. Adjust No. 1 antenna trimmer (C36) for maximum output on this station.
- Clockwise adjustment of cores and trimmers tunes the circuits to lower frequencies.
5. Adjust for each of the remaining five stations in the same manner.
 6. Make a final careful adjustment of the oscillator cores and antenna trimmers.

Steps	Connect the high side of test-osc. to—	Tune test-osc. to—	Turn radiodial to—	Adjust the following for max. peak output
1	6K7 I-F grid cap, in series with .01 mfd.	455 kc	"A" band, Quiet Point between 550-750 kc	L12 and L13 (2nd I-F Transformer)
2	6K8 det. grid cap, in series with .01 mfd.	455 kc		L10 and L11 (1st I-F Transformer)
3	Antenna Terminal, in series with 200 mmf.	600 kc	600 kc (150.5°) "A" band	L9
4		1,500 kc	1,500 kc (28°) "A" band	C25 (osc.) C30 (ant.)
5	Repeat steps 3 and 4.			
6	Antenna Terminal, in series with 400 ohms.	6 mc	6 mc (26.5°) "B" band	C23 (osc.)*
7		20 mc	20 mc (22°) "C" band	C21 (osc.)*
8	Follow "Adjustments for Electric Tuning."			

*Use minimum capacity peak if two peaks can be obtained, and rock gang condenser slightly while adjusting C23 and C21.
Note.—Oscillator tracks 455 kc above signal on all bands.

Dial-Indicator Adjustment.—After fastening the chassis in the cabinet, move the dial indicator on the drive cable to the left-hand end mark on dial, with gang condenser fully meshed.

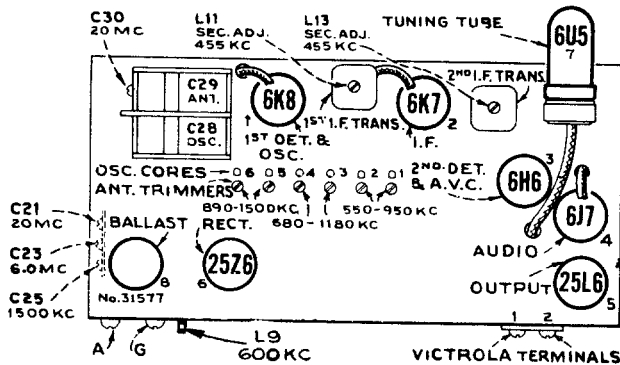


MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS


RCA Victor

MODELS 98T and 98K2

Chassis No. RC-386A and RC-386A

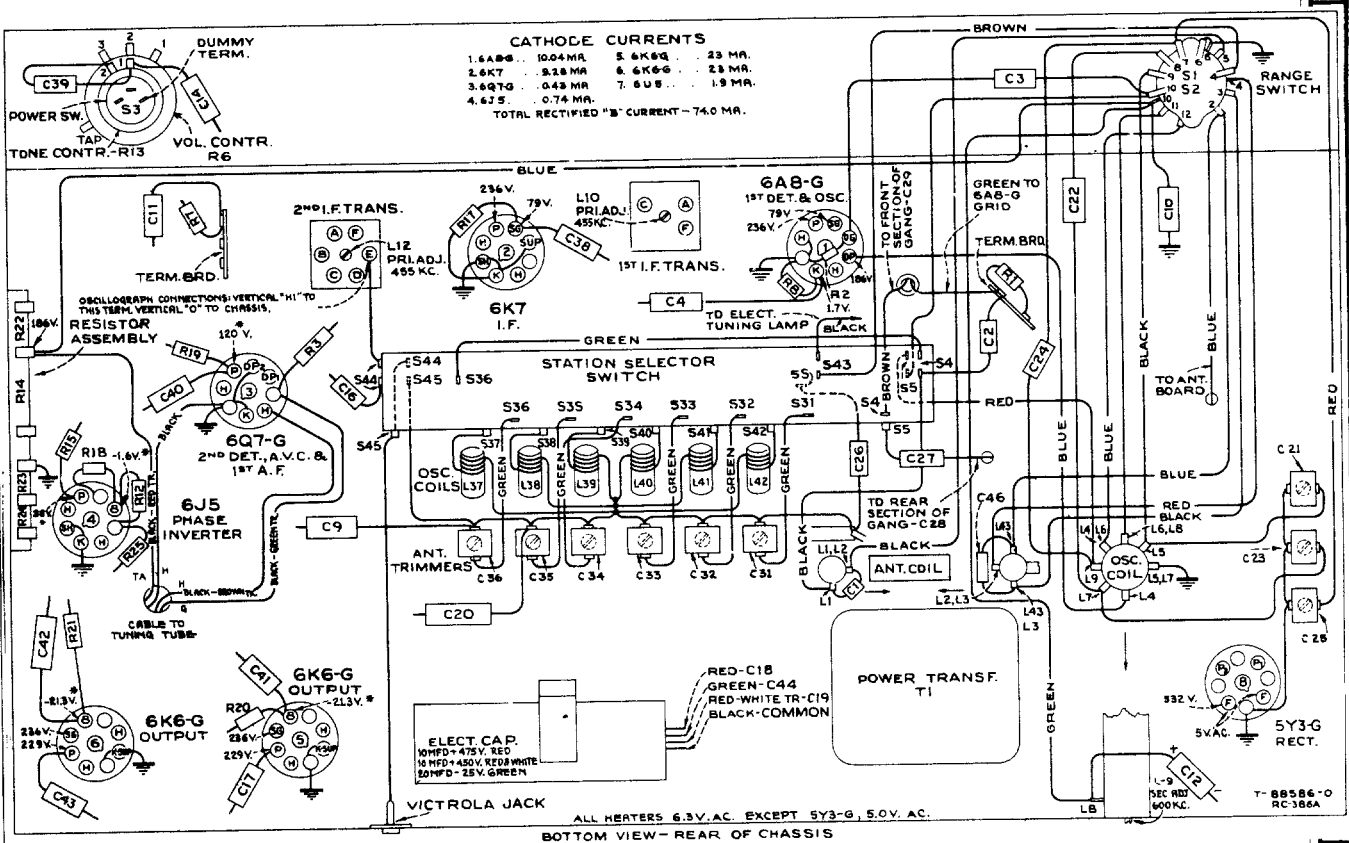



BOTTOM VIEW - REAR OF CHASSIS

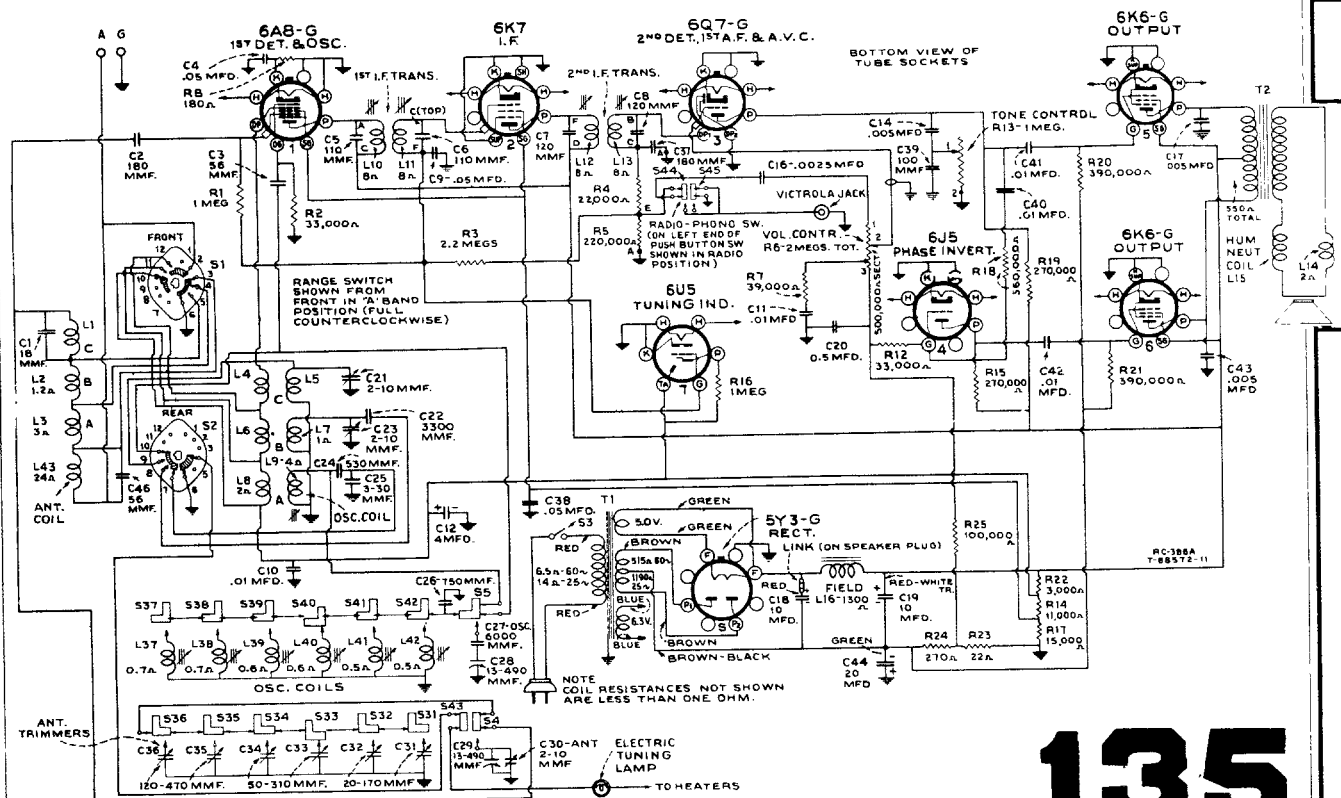


135

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS


U-121, U-123 (Single-Band), and U-127E

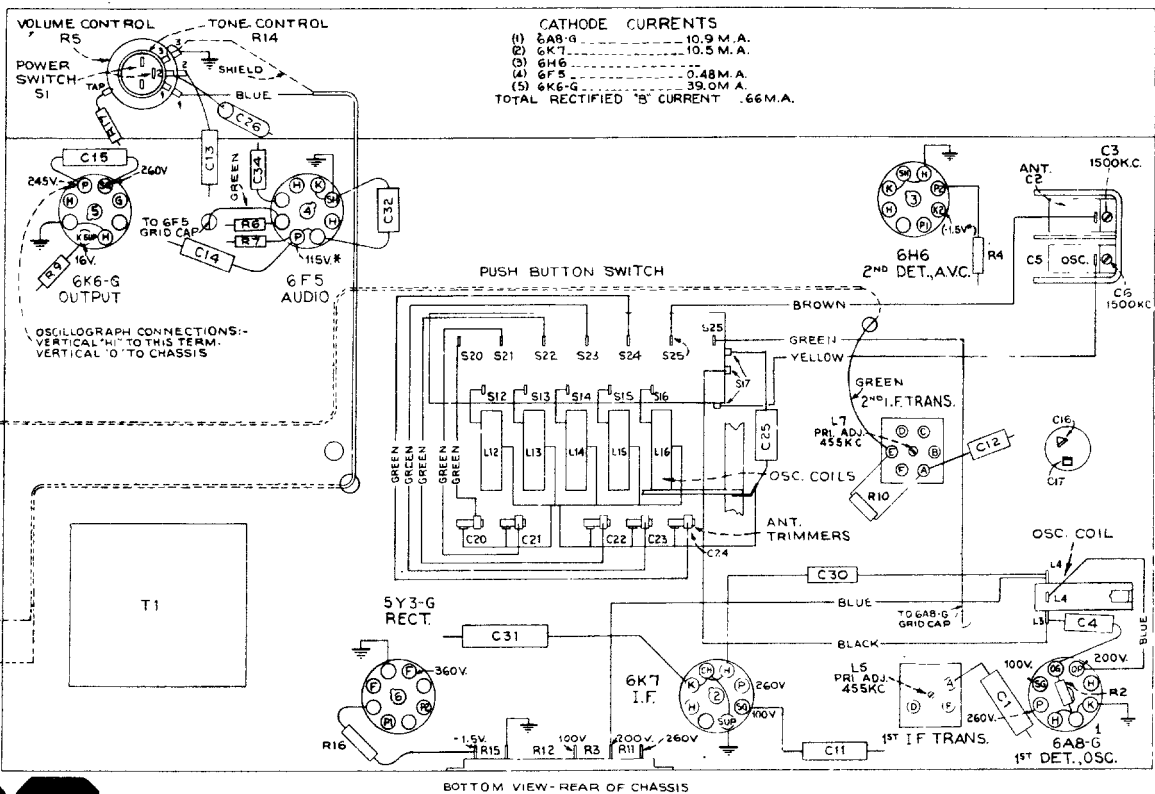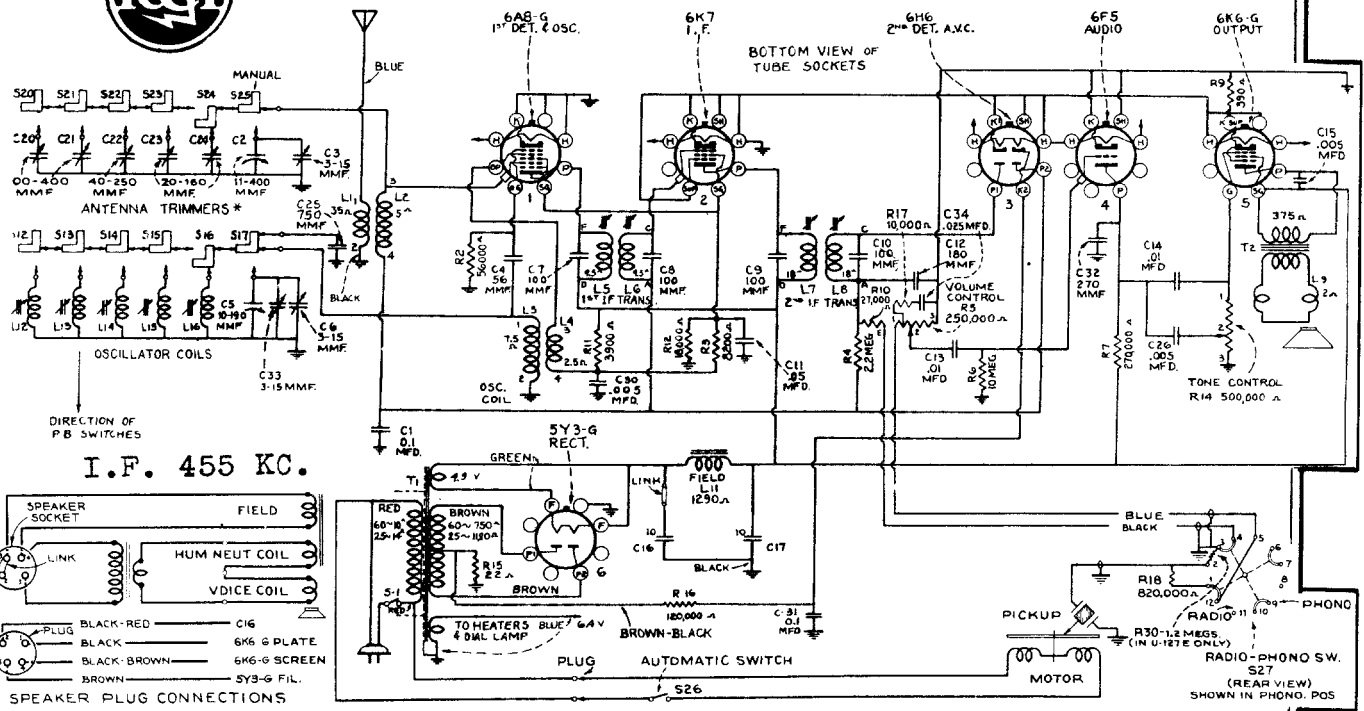

WIRING DIAGRAM FOR SILVERTONE CHASSIS 101.505 & 101.505X

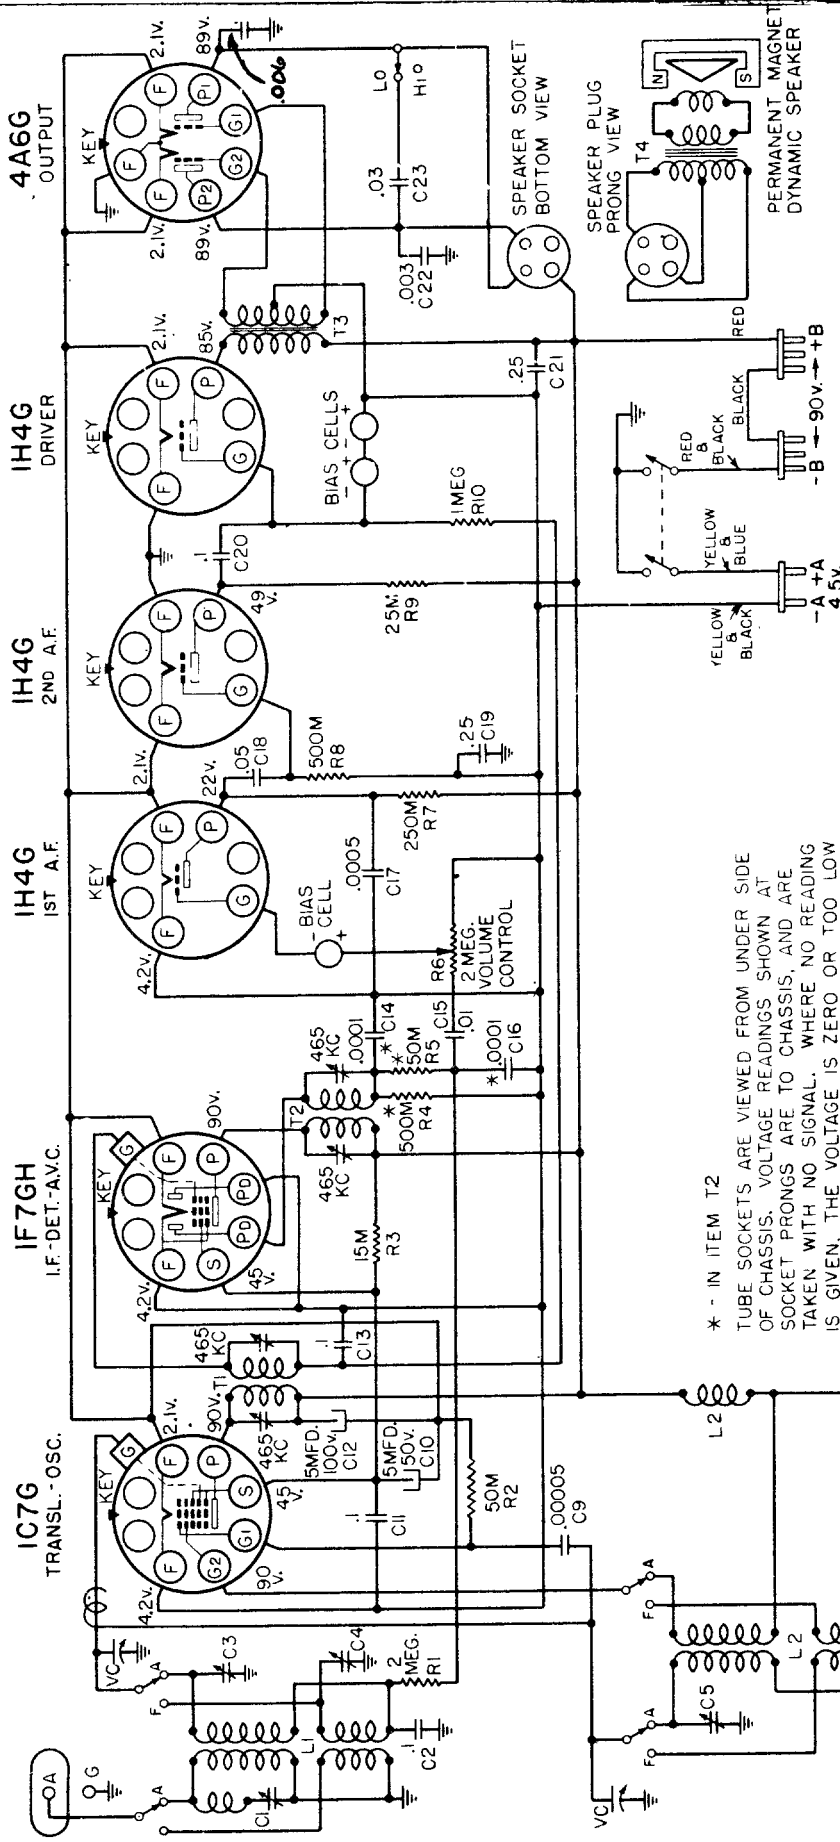

* - IN ITEM T2
 TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO CHASSIS, AND ARE TAKEN WITH NO SIGNAL. WHERE NO READING IS GIVEN, THE VOLTAGE IS ZERO OR TOO LOW TO READ.



SWITCH OPERATED BY PUSHING VOLUME CONTROL KNOB IN.
 (MODELS 4632A & 4633A ONLY)




Sears, Roebuck and Co.
Chicago, Ill.

**Models 4632A, 4633A, 6014, 6015, 6044, 6045, 6058, 6059,
 6063, 6064, 6065, 6144, and 6164**

137

WIRING DIAGRAM FOR SILVERTONE CHASSIS 101-510

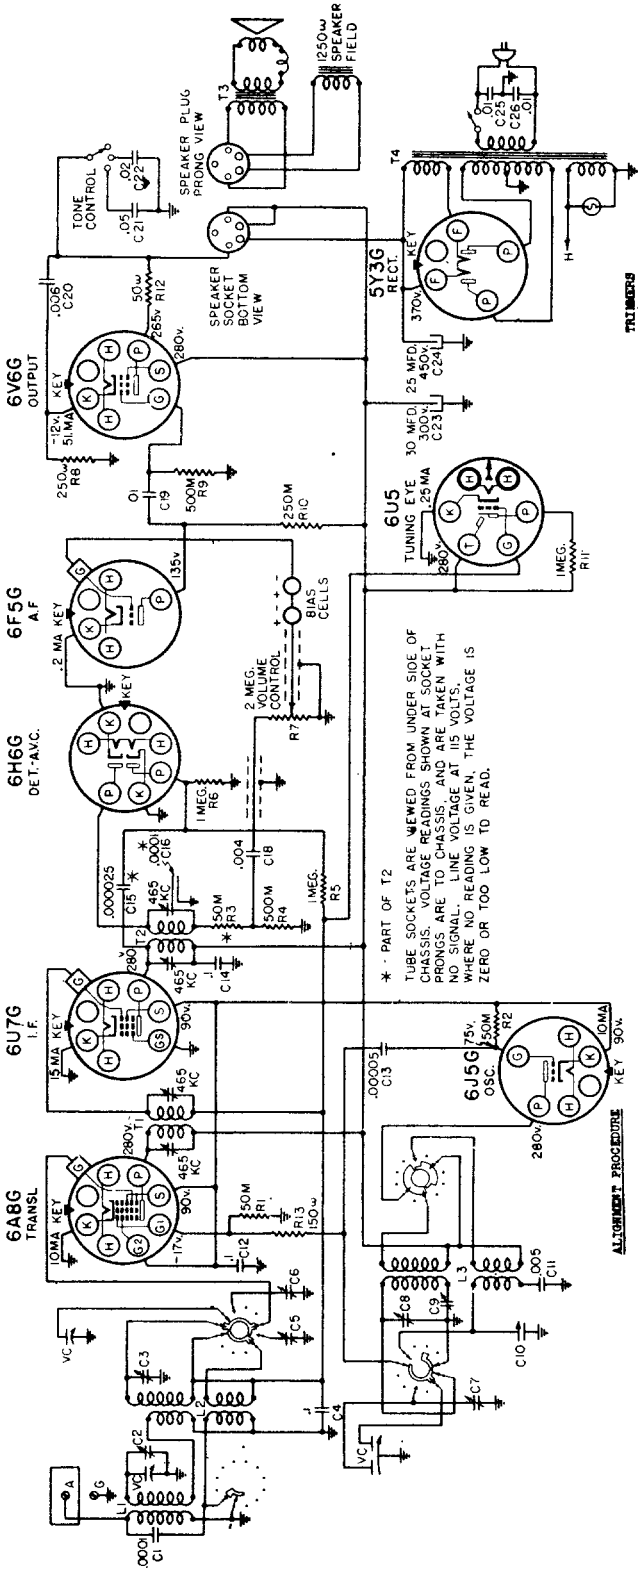

TRIMMER ADJUSTED POSITION (IN ORDER SHOWN)	GENERATOR FREQUENCY	DUMMY ANTENNA	GENERATOR	TRIMMER FUNCTION	APPROXIMATE MICROVOLTS
T2, T1	495 kc	.1 mfd.	8A8G 6p10	IF Output	90
C5	15 mc (rock)	400 ohms	Ant. Term.	Translator	50
C7*	9.55 mc	400 ohms	Ant. Term.	Oscillator	80
C8	Fully open	.0008 mfd.	Ant. Term.	Translator	90
C5, C8	1400 kc	.0008 mfd.	Ant. Term.	Transl., Ant.	75
C9	600 kc (rock)	.0008 mfd.	Ant. Term.	Paider	80

IMPORTANT ALIGNMENT NOTICE


The alignment must be done in the order given. Two peaks can be had, one with the trimmer screwed further out than the other. The correct adjustment is with the trimmer screwed further out.

- PRELIMINARY:**
- Output meter connection Across load speaker voice coil
 - Output meter reading to indicate 500 milliwatts 0.85 volts
 - Average sensitivity in microvolts for 500 milliwatts output See chart below
 - Generator ground lead connection Receiver chassis
 - Dummy antenna value to be in series with generator output See chart below
 - Connection of generator output lead See chart below
 - Generator modulation 30%, 400 cycles
 - Position of Volume Control Fully clockwise
 - Position of Tone Control HI
 - Position of Dial Pointer with variable fully closed Center of block to left of 550 kc calibration mark.

* PART OF T2
TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO BE TAKEN WITH SIGNAL LINE VOLTAGE AT 15 VOLTS. WHERE NO READING IS GIVEN, THE VOLTAGE IS ZERO OR TOO LOW TO READ.

Sears, Roebuck and Co., Chicago.
Models 6003, 6004, 6024, 6034, 6124, 6134

WIRING DIAGRAM FOR SILVERTONE CHASSIS 101.511

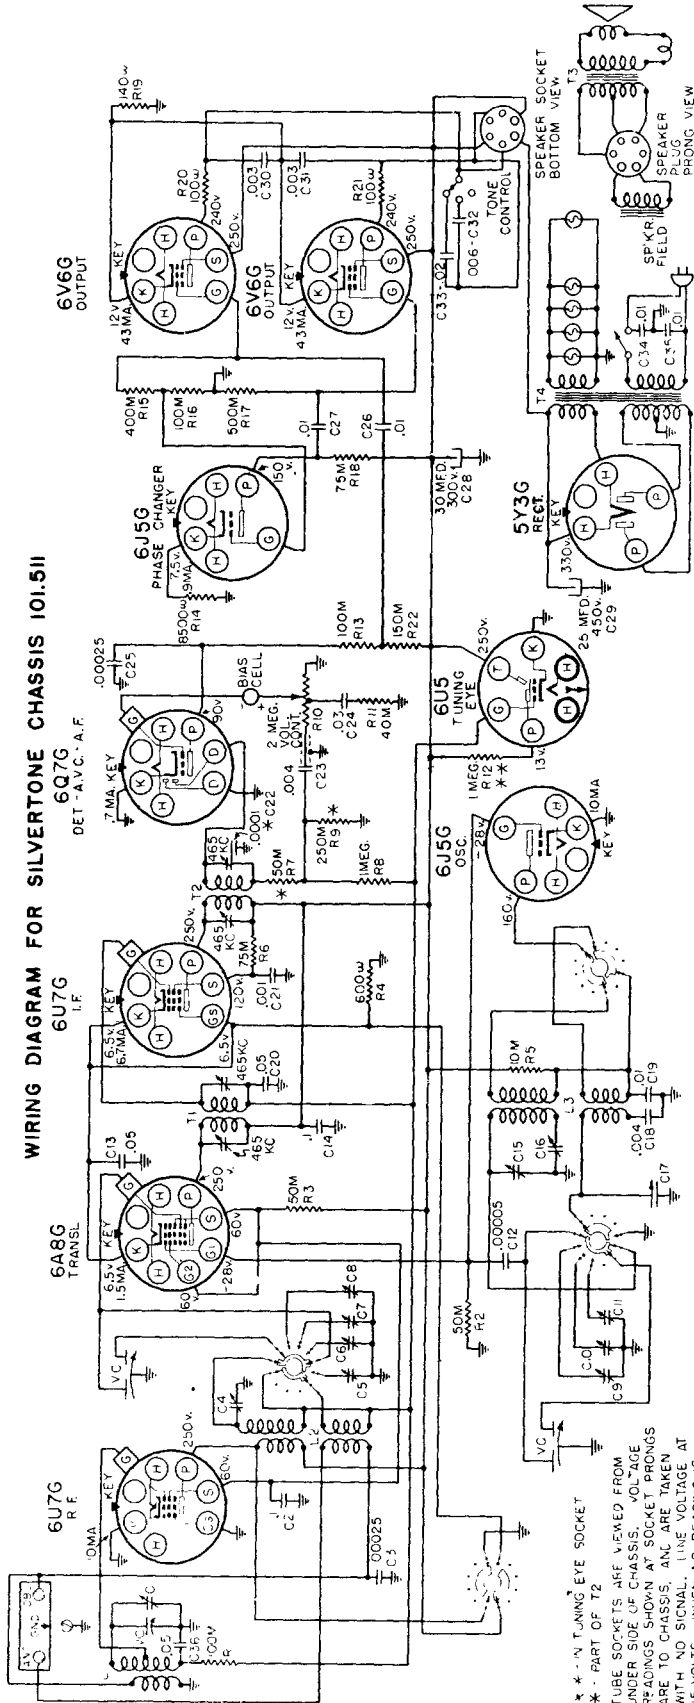

*** IN TUNING EYE SOCKET
 TUBE SOCKETS ARE VIEWED FROM
 UNDER SIDE OF CHASSIS. VOLTAGE
 READINGS SHOWN AT SOCKET PRONGS
 ARE TO CHASSIS, AND ARE TAKEN
 WITH NO SIGNAL. LINE VOLTAGE AT
 115 VOLTS. WHEN NO READING IS
 GIVEN, THE VOLTAGE IS ZERO OR TOO
 LOW TO READ. READINGS TAKEN
 WITH WAVE SWITCH IN BROADCAST POSITION.

GENERAL INFORMATION & SERVICE HINTS

THE AVC CIRCUIT:


The diode current of one of the 6Q7G diode plates, flowing through the 250M ohm resistor, R9, creates a voltage drop across it. This voltage is applied to the control grids of the RP, translator, and IF tubes, to provide AVC.

ELIMINATING WHISTLE AT 930 KC:

A whistle, due to a beat between the second harmonic (930 kc) of the 455 kc IF, and a 930 kc signal may be experienced. In localities where the 930 kc station is one that is frequently listened to, it will be desirable to shift the whistle to some other point where it will not be objectionable. This can be done by shifting the IF frequency of the receiver. Determine at what point between 900 kc and 960 kc the whistle will be least objectionable. Dividing this frequency by two will give the new IF frequency to which the receiver should be aligned. For example, if it is determined that a whistle at 915 kc would not be objectionable, the IF should be realigned at 915/3 or 457.5 kc. Try to select the new IF frequency as near as possible to 455 kc.

Sears, Roebuck & Co.
 Chicago.
 Models 6036, 6136.

WIRING DIAGRAM FOR SILVERTONE CHASSIS IOI.526

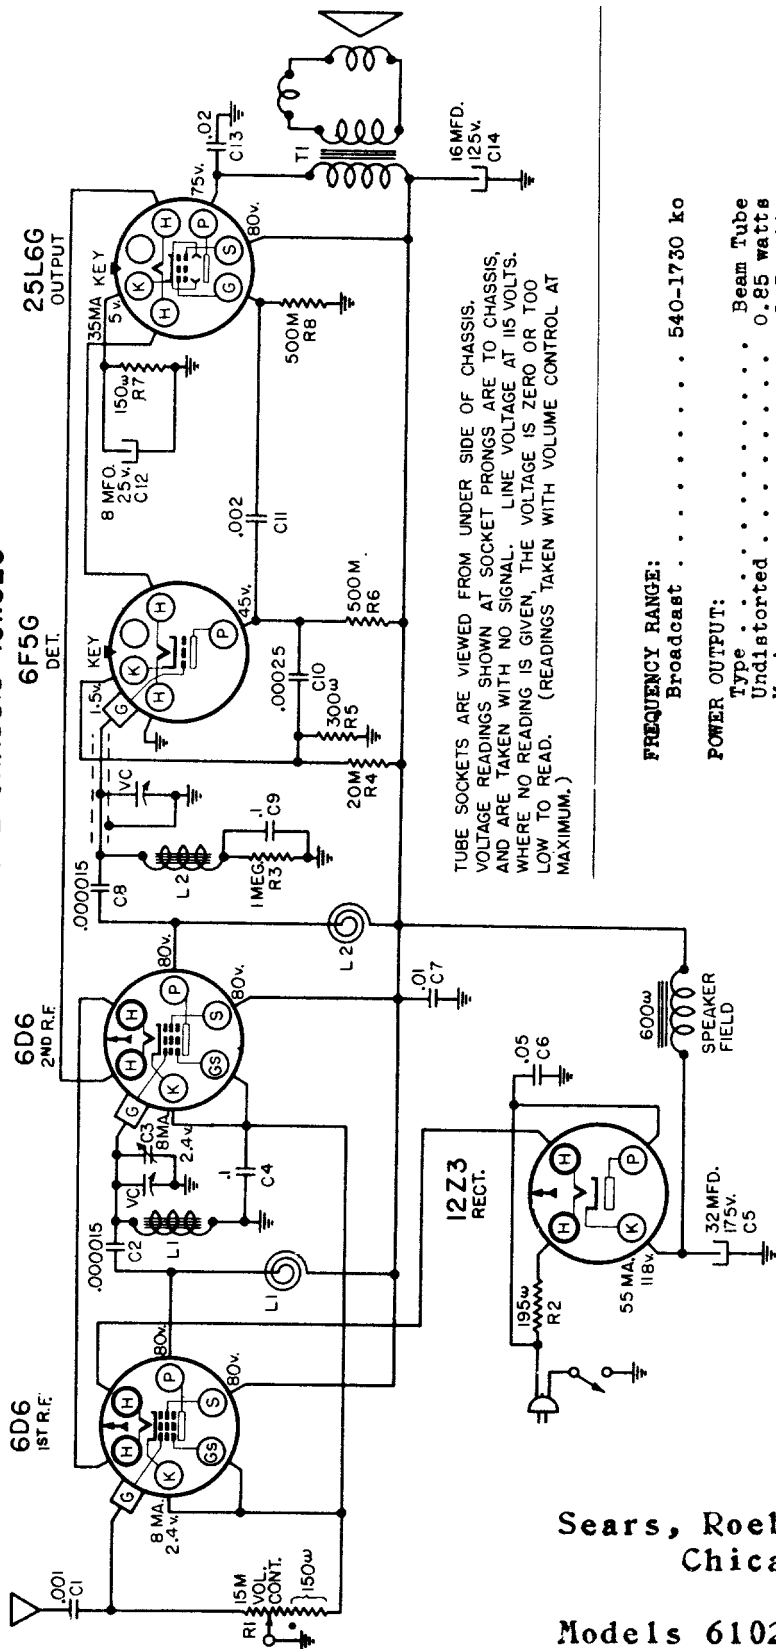

TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO CHASSIS, AND ARE TAKEN WITH NO SIGNAL. LINE VOLTAGE AT 115 VOLTS. WHERE NO READING IS GIVEN, THE VOLTAGE IS ZERO OR TOO LOW TO READ. (READINGS TAKEN WITH VOLUME CONTROL AT MAXIMUM.)

- FREQUENCY RANGE:**
Broadcast 540-1730 kc
- POWER OUTPUT:**
Type Beam Tube
Undistorted 0.85 watts
Maximum 1.5 watts

ALIGNMENT PROCEDURE

The receiver need not be taken out of the cabinet for alignment.

Either a broadcast signal of about 1500 kc should be tuned in or else a signal generator, connected through a .0003 mfd. condenser to the set's antenna, should be used.


Tune in the signal and adjust the trimmer (accessible through the hole in the bottom of the cabinet) for maximum loud speaker response. This can be done most accurately, if the volume control setting is reduced to give low volume level. (This set has no AVC.) The variable should be rocked a degree or two during the adjustment. An insulated screw driver should be used, since the chassis may be above ground potential as explained previously.

Sears, Roebuck and Co.
Chicago.

Models 6102, 6103, 6105

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

WIRING DIAGRAM FOR SILVERTONE CHASSIS 101.546

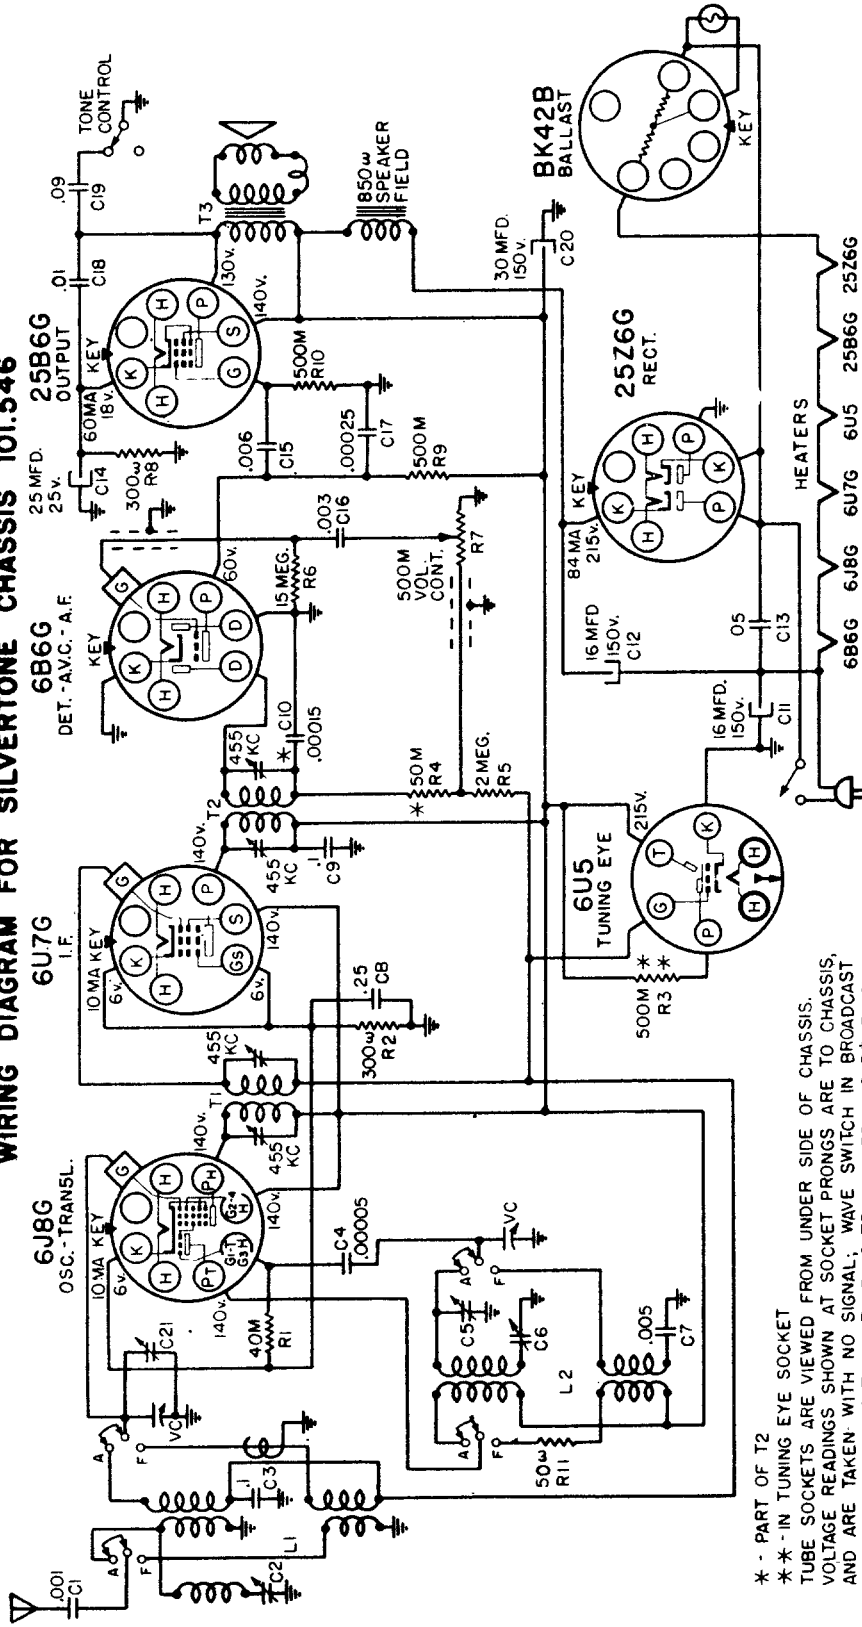

* - PART OF T2
 ** - IN TUNING EYE SOCKET
 TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS.
 VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO CHASSIS,
 AND ARE TAKEN WITH NO SIGNAL; WAVE SWITCH IN BROADCAST
 POSITION. LINE VOLTAGE AT 115 VOLTS. WHERE NO READING
 IS GIVEN, THE VOLTAGE IS ZERO OR TOO LOW TO READ.

WAVE BAND SWITCH POSITION	POSITION OF VARIABLE	GENERATOR FREQUENCY	DUMMY ANTENNA	GENERATOR CONNECTION	TRIMMERS ADJUSTED (IN ORDER SHOWN)	TRIMMER FUNCTION
"AM"	Closed	455 kc	.1 mfd.	6J8G Grid	T3, T1	IF Output IF Input
"AM"	600 kc	455 kc*	.0002 mfd.	Ant. Lead	C3*	Wave Trap
"AM"	1400 kc	1400 kc	.0002 mfd.	Ant. Lead	C5, C31	Oscillator Translator
"AM"	600 kc (rock)	600 kc	.0002 mfd.	Ant. Lead	C6	Padder


Sears, Roebuck & Co.
 Models 6200, 6120, 6126,
 6127, 6119, 6250.

141

Sears, Roebuck & Co.
Chicago.
Models 6158, 6159,
6192.


WAVE BAND SWITCH POSITION	POSITION OF VARIABLE	GENERATOR FREQUENCY	DUMMY ANTENNA	GENERATOR CONNECTION	TRIMMERS ADJUSTED (IN ORDER SHOWN)	TRIMMER FUNCTION	APPROXIMATE MICROVOLTS
"AM"	Closed	455 kc	.1 mfd.	6A8G Grid	T2, T1	IF Input	810
"SW"	15 mc(rock)	15 mc	400 ohms.	Ant. Term.	C17	Translator	40
"9"	9.55 mc	9.55 mc	400 ohms.	Ant. Term.	C9*	Oscillator	60
"11"	11.71 mc	11.71 mc	400 ohms.	Ant. Term.	C16	Translator	40
"15"	14.9 mc	14.9 mc	400 ohms.	Ant. Term.	C7*	Oscillator	40
"AM"	1400 kc	1400 kc	.0002 mfd.	Ant. Term.	C15	Translator	40
"AM"	600 kc(rock)	600 kc	.0002 mfd.	Ant. Term.	C5*	Oscillator	30
					C14	Translator	30
					C17, C13, C1	Osc., Transl., RF	40
					C18	Padder	40

WIRING DIAGRAM FOR SILVERTONE CHASSIS 101.555

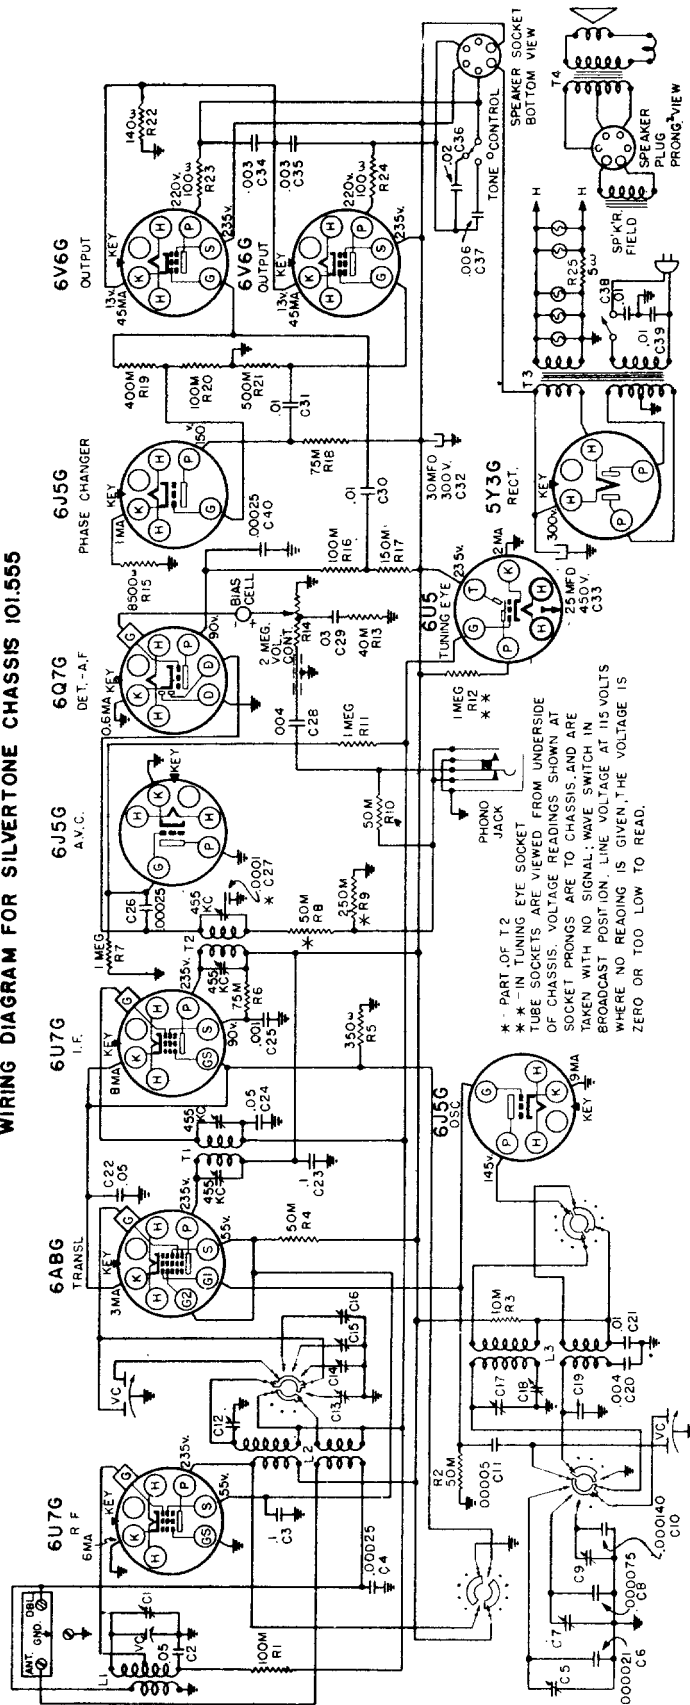

* PART OF T2
** IN TUNING EYE SOCKET
*** IN TUNING EYE SOCKET
OF CHASSIS. VOLTAGE READINGS SHOWN AT
SOCKET PRONGS ARE TO CHASSIS, AND ARE
TAKEN WITH NO SIGNAL. WAVE SWITCH IN
BROADCAST POSITION. LINE VOLTAGE AT 115 VOLTS
WHERE NO READING IS GIVEN, THE VOLTAGE IS
ZERO OR TOO LOW TO READ.

Sparton Wireless Phonograph Models
219-P 219-PD

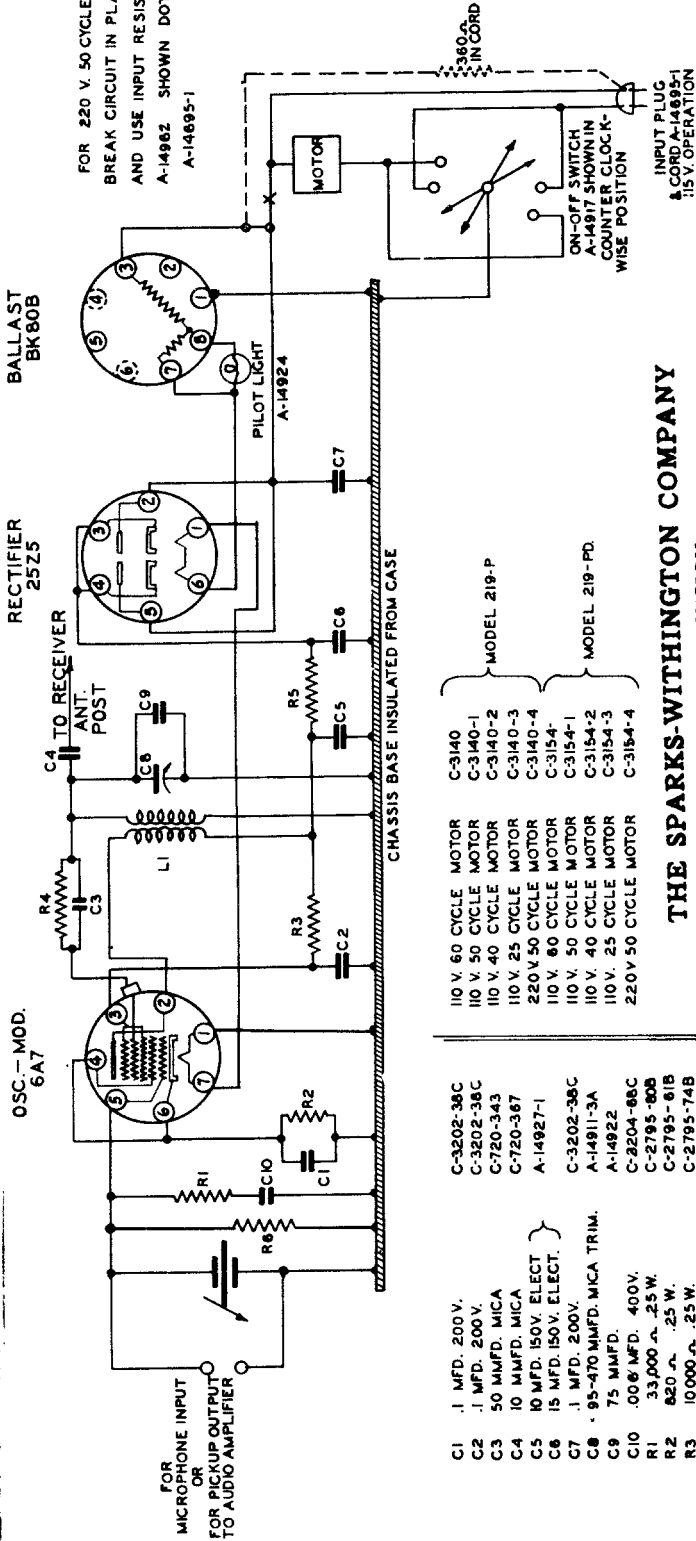

THE SPARKS-WITHINGTON COMPANY
SERVICE DIVISION
Jackson, Michigan, U. S. A.

Line Voltage: 115 volts Control Switch in Center Position		Antenna Not Connected. Microphone Not Connected.								
Voltage of Socket Prongs to Gnd. (See Prong Nos. on Schematic Diagram)										
Tube	Function	No. 1	No. 2	No. 3	No. 4	No. 5	No. 6	No. 7	No. 8	Grid Cap
6A7	Oscillator-Modulator	0	120	80	4.5	0	4.5	6.3*	-	0
25Z5	Rectifier	6.3*	117*	150	150	117*	31.3*	-	-	-
BK-80B	Ballast	0	-	117*	-	-	-	31.3*	37*	-

Notes: Voltage readings are for schematic diagram on back of sheet. Allow 15% + or - on all measurements. Always use meter scale which will give greatest deflection within scale limits. All DC measurements made with 1000 ohms per volt voltmeter. All AC voltages made with rectifier type voltmeter. Unless designated otherwise, voltages in table are + DC voltages.
*AC volts.


NOTE: Original production models did not have resistor R6 and condenser C10 included in the circuit as shown above. In these first run production sets resistor R1 connected across the microphone tip jacks in the same position as shown for resistor R6. The above change can be made easily, when servicing any of the first run Models 219-P Wireless Phonographs.

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS


CONVERTER
6A8GT

DETECTOR
6J7GT


POWER OUTPUT
25L6GT

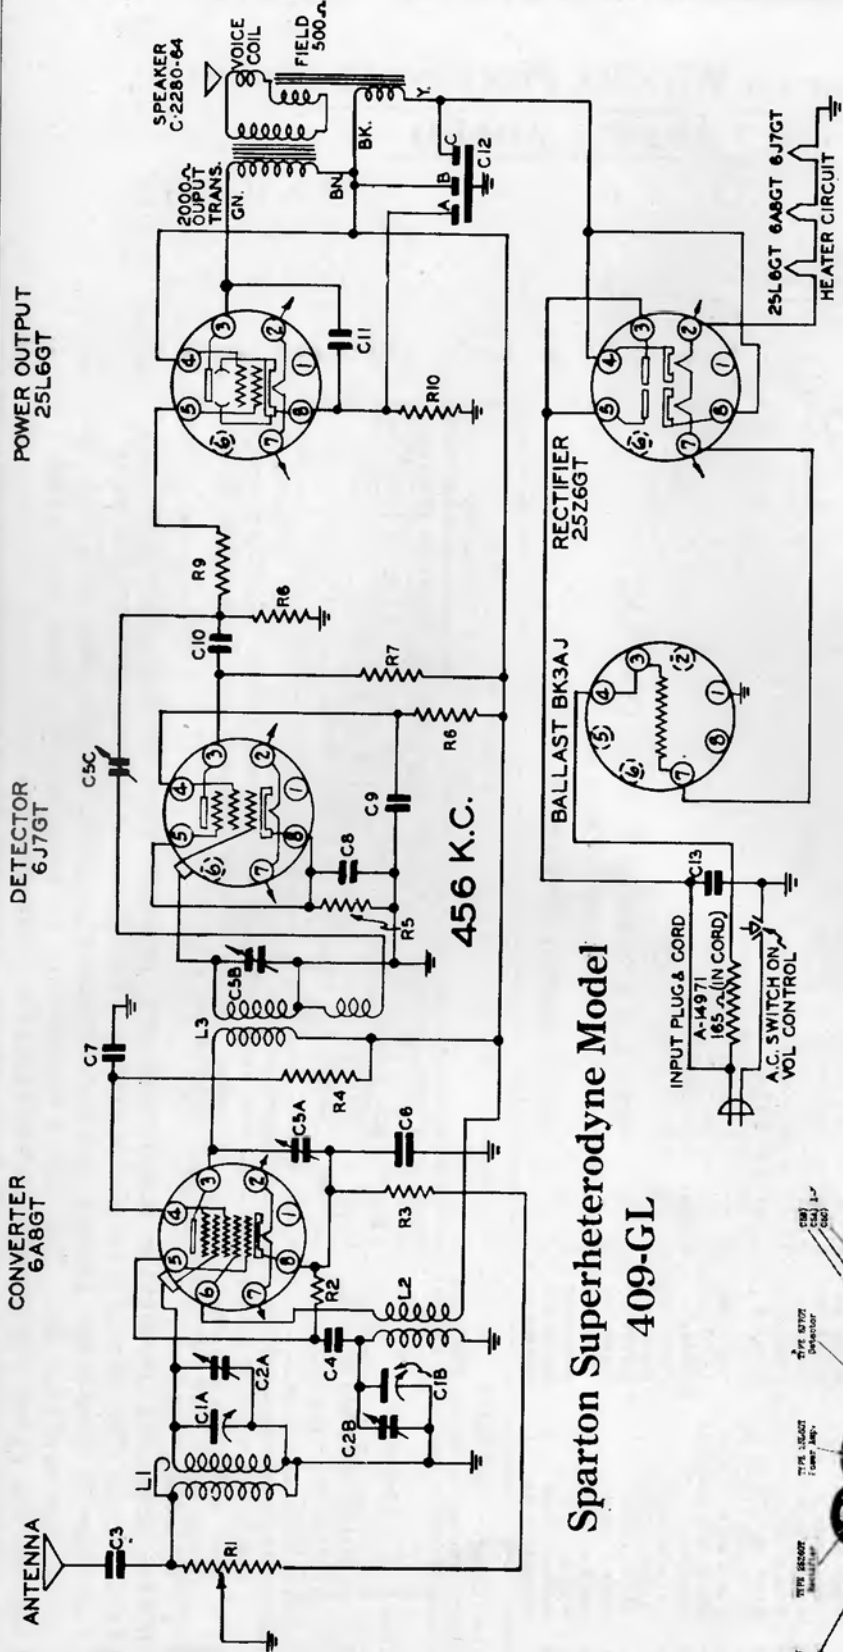

Sparton Superheterodyne Model 409-GI

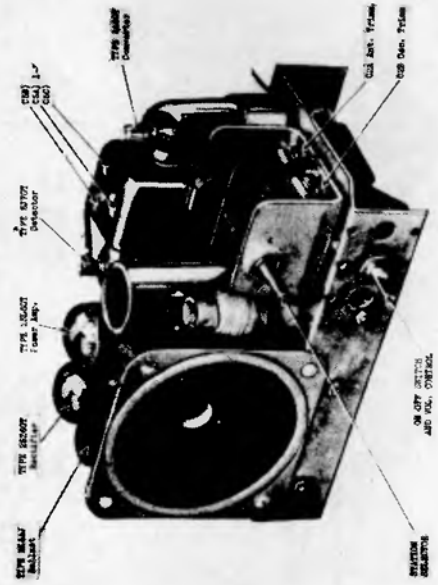


C1A, B	VARIABLE CONDENSER	B-7288
C2A, B	ON VARIABLE CONDENSER	C-3204-2C
C3	.001 MFD. 400 V.	C-720-343
C4	50 MMF. MICA	A-14792
C5A, B, C	I.F. TRIMMER	C-3202-76C
C6	.01 MFD. 200V.	C-3202-28C
C7	.05 MFD. 200V.	A-14782-2
C8	10 MFD. 25V.	C-3202-20C
C9	.01 MFD. 200V.	C-3202-20C
C10	.01 MFD. 200V.	C-3202-20C
C11	.02 MFD. 400V.	C-3204-78C
C12A, B, C	20-25-25 MFD. ELECT.	A-14972
C13	.05 MFD. 400V.	C-3204-28C
R1	VOL. CONTROL & SWITCH	A-12708-AI
R2	56000 ohms .25W.	C-2795-83B
R3	390 ohms .25W.	C-2795-57B
R4	39000 ohms .25W.	C-2795-B1B
R5	27000 ohms .25W.	C-2795-79B
R6	6.2 MEGOHM .25W.	C-2795-250B
R7	560000 ohms .25W.	C-2795-95B
R8	580000 ohms .25W.	C-2795-95B
R9	100000 ohms .25W.	C-2795-86B
R10	150 ohms .5W.	C-2798-52C
L1	B.C. ANT. COIL	A-14974
L2	B.C. OSC. COIL	A-14975
L3	I.F. TRANS.	A-12989-5

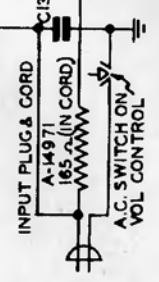

ON OFF SWITCH AND VOL. CONTROL

SCHEMATIC DIAGRAM SPARTON SUPERHETERODYNE MODELS 520 & 520-M INTERMEDIATE FREQUENCY 456 K.C. TOP VIEWS OF ALL SOCKET CONNECTIONS

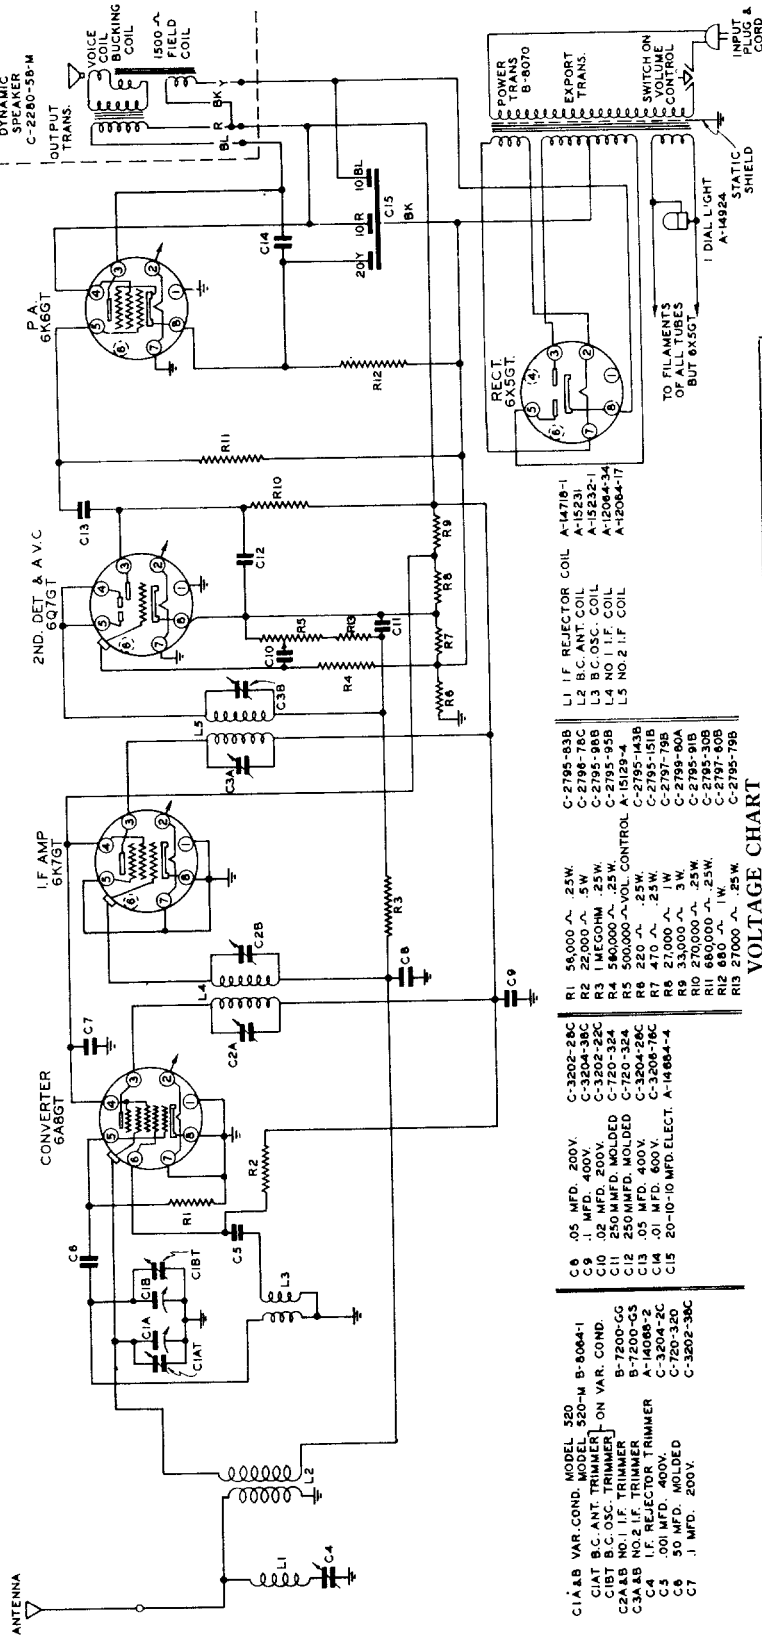

- C1A AB VAR. COND. MODEL 520
- C1B ANT. TRIMMER ON VAR. COND.
- C1C B.C. OSC. TRIMMER
- C1D B.C. OSC. TRIMMER
- C1E 250 MFD. MOLEDED
- C1F 50 MFD. MOLEDED
- C1G .01 MFD. 400V.
- C1H .01 MFD. 400V.
- C1I 20-10-10 MFD. ELECT.
- C1J .01 MFD. 400V.
- C1K 50 MFD. MOLEDED
- C1L .1 MFD. 200V.
- C1M .05 MFD. 200V.
- C1N .1 MFD. 400V.
- C1O 250 MFD. MOLEDED
- C1P 50 MFD. MOLEDED
- C1Q .01 MFD. 400V.
- C1R 20-10-10 MFD. ELECT.
- C1S .01 MFD. 400V.
- C1T .1 MFD. 200V.
- C1U .05 MFD. 200V.
- C1V .1 MFD. 400V.
- C1W 250 MFD. MOLEDED
- C1X 50 MFD. MOLEDED
- C1Y .01 MFD. 400V.
- C1Z 20-10-10 MFD. ELECT.
- C2A .01 MFD. 400V.
- C2B .01 MFD. 400V.
- C2C 20-10-10 MFD. ELECT.
- C2D .01 MFD. 400V.
- C2E 20-10-10 MFD. ELECT.
- C2F .01 MFD. 400V.
- C2G 20-10-10 MFD. ELECT.
- C2H .01 MFD. 400V.
- C2I 20-10-10 MFD. ELECT.
- C2J .01 MFD. 400V.
- C2K 20-10-10 MFD. ELECT.
- C2L .01 MFD. 400V.
- C2M 20-10-10 MFD. ELECT.
- C2N .01 MFD. 400V.
- C2O 20-10-10 MFD. ELECT.
- C2P .01 MFD. 400V.
- C2Q 20-10-10 MFD. ELECT.
- C2R .01 MFD. 400V.
- C2S 20-10-10 MFD. ELECT.
- C2T .01 MFD. 400V.
- C2U 20-10-10 MFD. ELECT.
- C2V .01 MFD. 400V.
- C2W 20-10-10 MFD. ELECT.
- C2X .01 MFD. 400V.
- C2Y 20-10-10 MFD. ELECT.
- C2Z .01 MFD. 400V.
- C3A AB VAR. COND. MODEL 520
- C3B ANT. TRIMMER ON VAR. COND.
- C3C B.C. OSC. TRIMMER
- C3D B.C. OSC. TRIMMER
- C3E 250 MFD. MOLEDED
- C3F 50 MFD. MOLEDED
- C3G .01 MFD. 400V.
- C3H .01 MFD. 400V.
- C3I 20-10-10 MFD. ELECT.
- C3J .01 MFD. 400V.
- C3K 50 MFD. MOLEDED
- C3L .1 MFD. 200V.
- C3M .05 MFD. 200V.
- C3N .1 MFD. 400V.
- C3O 250 MFD. MOLEDED
- C3P 50 MFD. MOLEDED
- C3Q .01 MFD. 400V.
- C3R 20-10-10 MFD. ELECT.
- C3S .01 MFD. 400V.
- C3T .1 MFD. 200V.
- C3U .05 MFD. 200V.
- C3V .1 MFD. 400V.
- C3W 250 MFD. MOLEDED
- C3X 50 MFD. MOLEDED
- C3Y .01 MFD. 400V.
- C3Z 20-10-10 MFD. ELECT.

- L1 I.F. REJECTOR COIL A-14710-1
- L2 B.C. OSC. COIL A-15231
- L3 B.C. OSC. COIL A-15232-1
- L4 NO. 1 I.F. COIL A-12084-34
- L5 NO. 2 I.F. COIL A-12084-17
- L6 I.F. REJECTOR COIL A-14710-1
- L7 B.C. OSC. COIL A-15231
- L8 B.C. OSC. COIL A-15232-1
- L9 NO. 1 I.F. COIL A-12084-34
- L10 NO. 2 I.F. COIL A-12084-17
- L11 I.F. REJECTOR COIL A-14710-1
- L12 B.C. OSC. COIL A-15231
- L13 B.C. OSC. COIL A-15232-1
- L14 NO. 1 I.F. COIL A-12084-34
- L15 NO. 2 I.F. COIL A-12084-17

VOLTAGE CHART


Position of Volume Control: Full with Antenna Disconnected

Tube	Voltage of Socket Prongs to Gnd. (See Prong Nos. on Diagram)							
	#1	#2	#3	#4	#5	#6	#7	#8
6A8GT Converter	0	0	250	67	4	175	*6.3	0
6K7GT I. F. Amp.	0	0	250	67	0	1.5	*6.3	0
6Q7GT 2nd. Det. AVC-AF	0	0	65	**	**	**	*6.3	0
6K6GT P. A.	0	0	225	250	0	3.5	*6.3	10
6X5GT Rectifier	-	0	275*	0	275*	0	0	300

Notes: Voltage readings are for schematic diagram on back of sheet. Allow 15% + or - on all measurements. Always use meter scale which will give greatest deflection within scale limits. All DC measurements made with 1000 ohms per volt voltmeter. All AC voltages made with rectifier type voltmeter. Unless designated otherwise, voltages in table are + DC voltages. * AC volts. ** Cannot be measured with Weston Analyzer #665 Type 2.

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS


SCHEMATIC DIAGRAM
SPARTAN SUPERHETERODYNE MODEL 1160
INTERMEDIATE FREQUENCY 456 K.C.
 TOP VIEWS OF ALL SOCKET CONNECTIONS
 6AG6
 CONVERTER

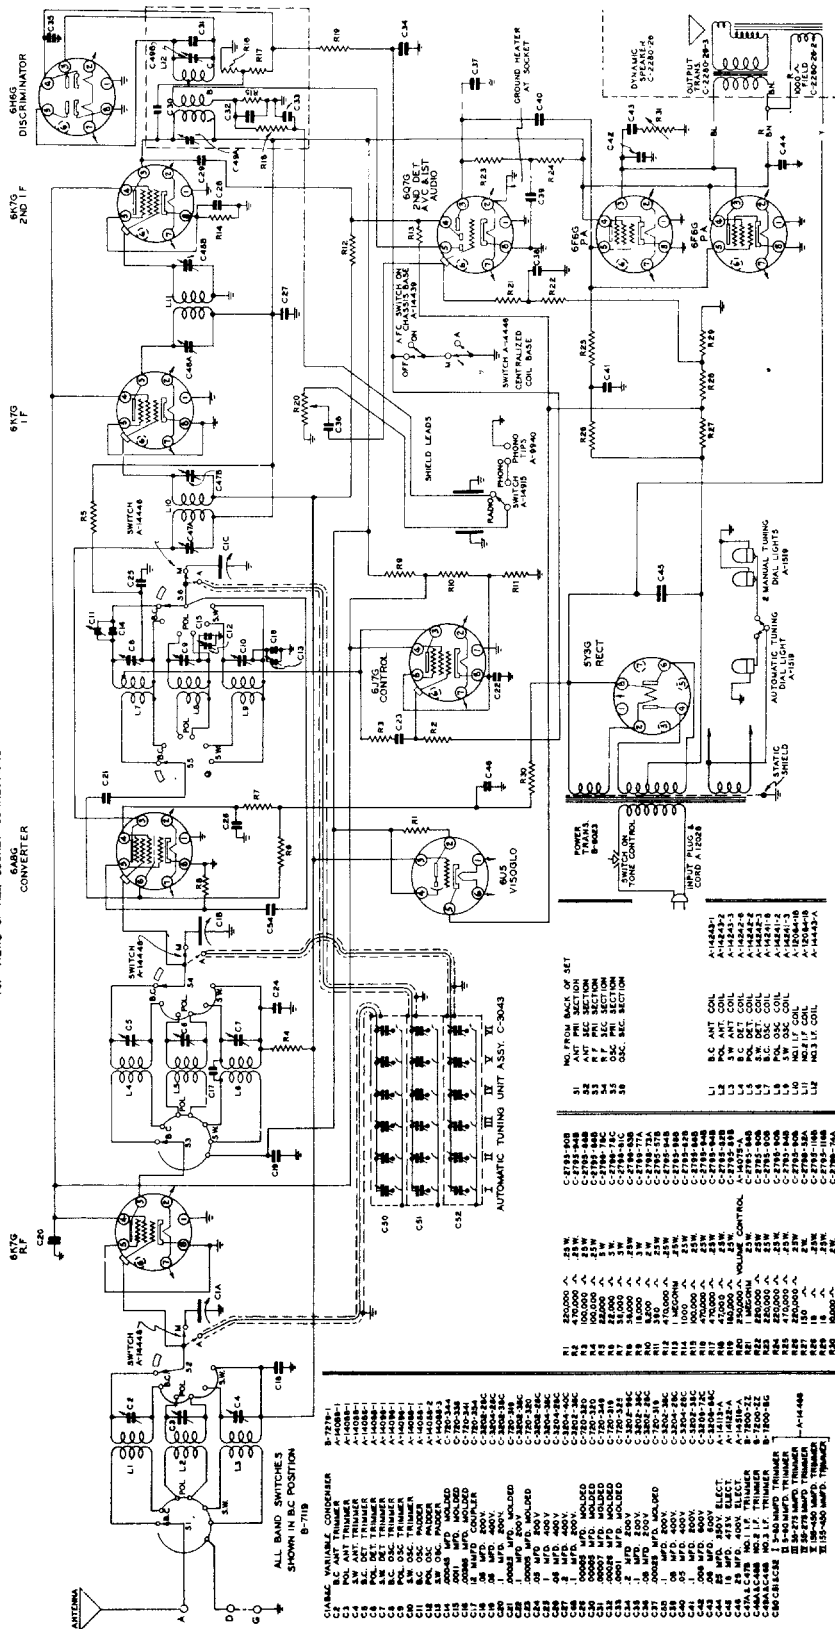


- ALL BAND SWITCHES SHOWN IN B.C. POSITION B-718**
- CHARACTER VARIANTS CONSUMER**
- C2 6A2000
 - C3 100000
 - C4 100000
 - C5 100000
 - C6 100000
 - C7 100000
 - C8 100000
 - C9 100000
 - C10 100000
 - C11 100000
 - C12 100000
 - C13 100000
 - C14 100000
 - C15 100000
 - C16 100000
 - C17 100000
 - C18 100000
 - C19 100000
 - C20 100000
 - C21 100000
 - C22 100000
 - C23 100000
 - C24 100000
 - C25 100000
 - C26 100000
 - C27 100000
 - C28 100000
 - C29 100000
 - C30 100000
 - C31 100000
 - C32 100000
 - C33 100000
 - C34 100000
 - C35 100000
 - C36 100000
 - C37 100000
 - C38 100000
 - C39 100000
 - C40 100000
 - C41 100000
 - C42 100000
 - C43 100000
 - C44 100000
 - C45 100000
 - C46 100000
 - C47 100000
 - C48 100000
 - C49 100000
- RESISTORS**
- R1 100000
 - R2 100000
 - R3 100000
 - R4 100000
 - R5 100000
 - R6 100000
 - R7 100000
 - R8 100000
 - R9 100000
 - R10 100000
 - R11 100000
 - R12 100000
 - R13 100000
 - R14 100000
 - R15 100000
 - R16 100000
 - R17 100000
 - R18 100000
 - R19 100000
 - R20 100000
 - R21 100000
 - R22 100000
 - R23 100000
 - R24 100000
 - R25 100000
 - R26 100000
 - R27 100000
 - R28 100000
- INDUCTORS**
- L1 100000
 - L2 100000
 - L3 100000
 - L4 100000
 - L5 100000
 - L6 100000
 - L7 100000
 - L8 100000
 - L9 100000
 - L10 100000
 - L11 100000
 - L12 100000
 - L13 100000
 - L14 100000
 - L15 100000
 - L16 100000
 - L17 100000
 - L18 100000
 - L19 100000
 - L20 100000
 - L21 100000
 - L22 100000
 - L23 100000
 - L24 100000
 - L25 100000
 - L26 100000
 - L27 100000
 - L28 100000
 - L29 100000
 - L30 100000
 - L31 100000
 - L32 100000
 - L33 100000
 - L34 100000
 - L35 100000
 - L36 100000
 - L37 100000
 - L38 100000
 - L39 100000
 - L40 100000
 - L41 100000
 - L42 100000
 - L43 100000
 - L44 100000
 - L45 100000
 - L46 100000
 - L47 100000
 - L48 100000
 - L49 100000
 - L50 100000
- COMPONENTS**
- A-1408-1 100000
 - A-1408-2 100000
 - A-1408-3 100000
 - A-1408-4 100000
 - A-1408-5 100000
 - A-1408-6 100000
 - A-1408-7 100000
 - A-1408-8 100000
 - A-1408-9 100000
 - A-1408-10 100000
 - A-1408-11 100000
 - A-1408-12 100000
 - A-1408-13 100000
 - A-1408-14 100000
 - A-1408-15 100000
 - A-1408-16 100000
 - A-1408-17 100000
 - A-1408-18 100000
 - A-1408-19 100000
 - A-1408-20 100000
 - A-1408-21 100000
 - A-1408-22 100000
 - A-1408-23 100000
 - A-1408-24 100000
 - A-1408-25 100000
 - A-1408-26 100000
 - A-1408-27 100000
 - A-1408-28 100000
 - A-1408-29 100000
 - A-1408-30 100000
 - A-1408-31 100000
 - A-1408-32 100000
 - A-1408-33 100000
 - A-1408-34 100000
 - A-1408-35 100000
 - A-1408-36 100000
 - A-1408-37 100000
 - A-1408-38 100000
 - A-1408-39 100000
 - A-1408-40 100000
 - A-1408-41 100000
 - A-1408-42 100000
 - A-1408-43 100000
 - A-1408-44 100000
 - A-1408-45 100000
 - A-1408-46 100000
 - A-1408-47 100000
 - A-1408-48 100000
 - A-1408-49 100000
 - A-1408-50 100000
 - A-1408-51 100000
 - A-1408-52 100000
 - A-1408-53 100000
 - A-1408-54 100000
 - A-1408-55 100000
 - A-1408-56 100000
 - A-1408-57 100000
 - A-1408-58 100000
 - A-1408-59 100000
 - A-1408-60 100000
 - A-1408-61 100000
 - A-1408-62 100000
 - A-1408-63 100000
 - A-1408-64 100000
 - A-1408-65 100000
 - A-1408-66 100000
 - A-1408-67 100000
 - A-1408-68 100000
 - A-1408-69 100000
 - A-1408-70 100000
 - A-1408-71 100000
 - A-1408-72 100000
 - A-1408-73 100000
 - A-1408-74 100000
 - A-1408-75 100000
 - A-1408-76 100000
 - A-1408-77 100000
 - A-1408-78 100000
 - A-1408-79 100000
 - A-1408-80 100000
 - A-1408-81 100000
 - A-1408-82 100000
 - A-1408-83 100000
 - A-1408-84 100000
 - A-1408-85 100000
 - A-1408-86 100000
 - A-1408-87 100000
 - A-1408-88 100000
 - A-1408-89 100000
 - A-1408-90 100000
 - A-1408-91 100000
 - A-1408-92 100000
 - A-1408-93 100000
 - A-1408-94 100000
 - A-1408-95 100000
 - A-1408-96 100000
 - A-1408-97 100000
 - A-1408-98 100000
 - A-1408-99 100000
 - A-1408-100 100000

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

OPERATION	ALIGNMENT OF	GENERATOR CONNECTED TO	DUMMY ANTENNA	GENERATOR FREQUENCY	TUNING COND. SETTING	TRIMMER	REMARKS	
1	I.F.	6A7 Grid	.1 mf.	262	Closed	2 trimmers	2nd I.F.	
2	Broad. Osc.	Ant.	250 mmf.	1580	Open	2 trimmers	1st I.F.	
3	Broad. & R.F.	Ant.	250 mmf.	1400	1400	Osc.	Adj. to max.	
4	Check sensitivity at 1000 KC and 600 KC.							Adj. to max.
5	Check operations 1 to 4 inclusive.							Adj. to max.

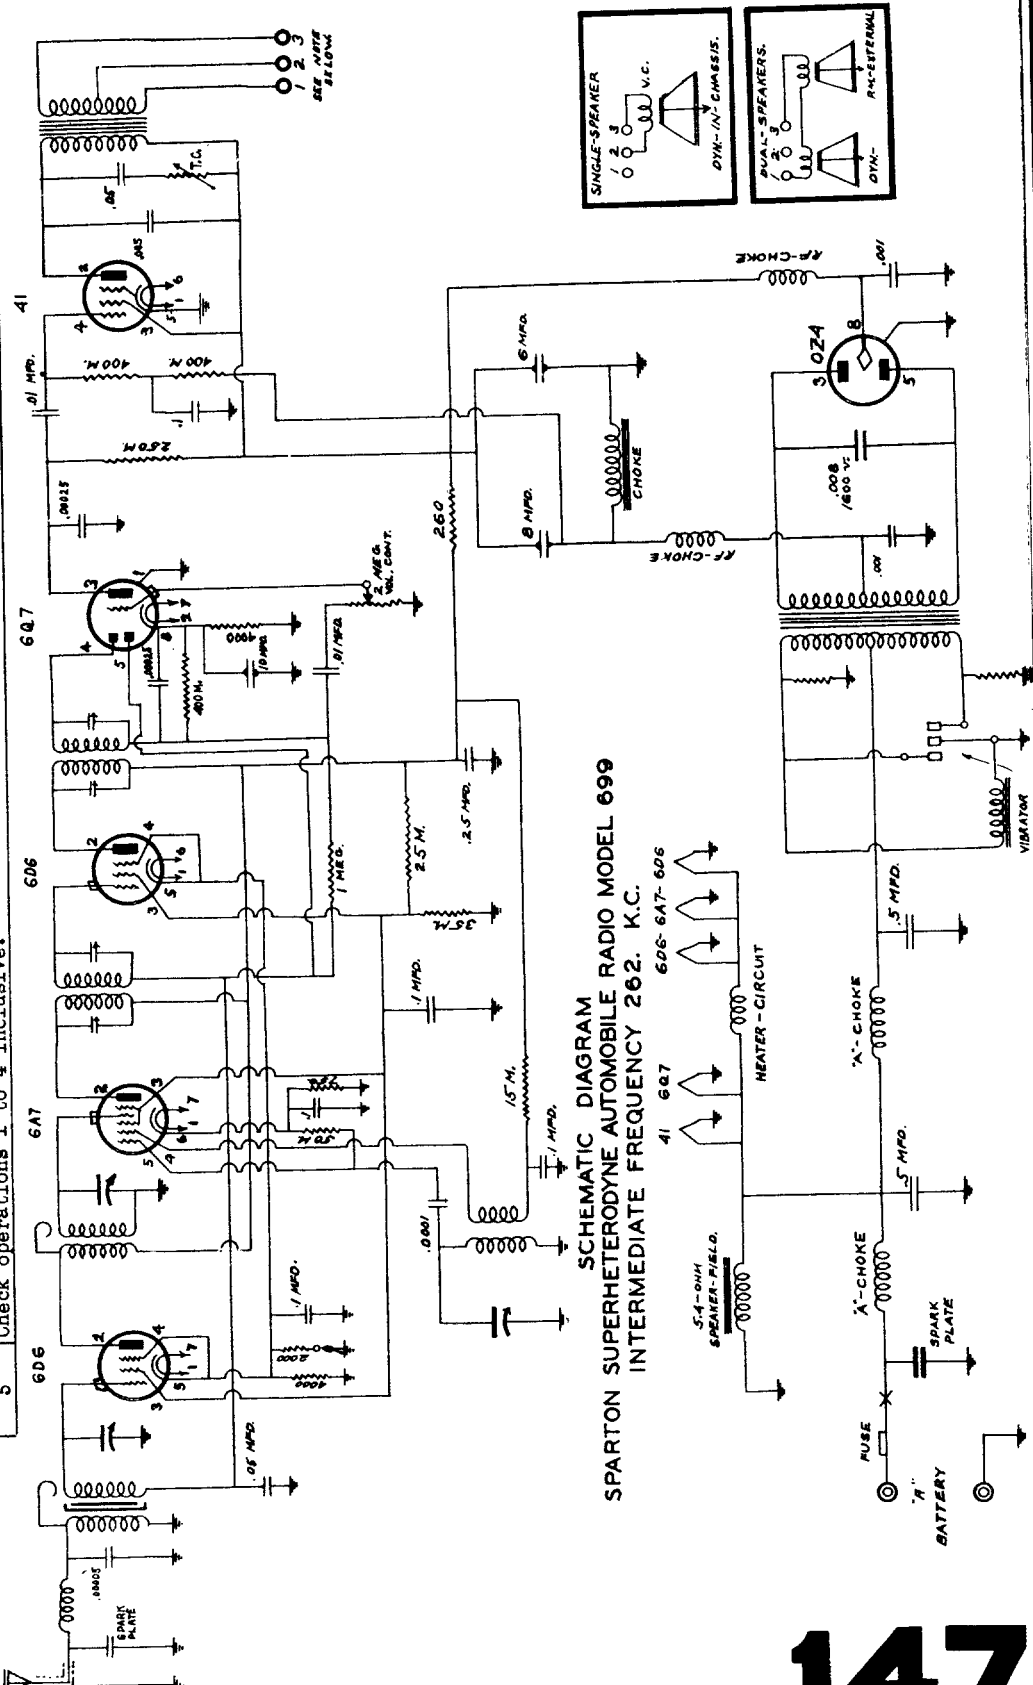


**SCHEMATIC DIAGRAM
SPARTON SUPERHETERODYNE AUTOMOBILE RADIO MODEL 699
INTERMEDIATE FREQUENCY 262. K.C.**

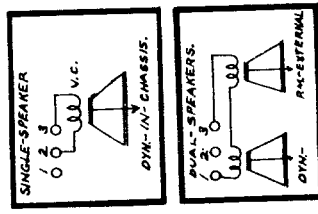



MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

No. of Tubes	OHMS	RESISTORS		WATTS	No. of Tubes	MFDS.	CAPACITORS		VOLTS.
		WATTS	No.				MFDS.	No.	
2	1750	1/2	C9	1/2	1	.002	C11	50	250
2	1750	1/2	C10	1/2	1	.005	C12	50	500
2	250K	1/2	R1	1/2	1	.00008	C13	50	400
2	250K	1/2	R2	1/2	1	.00008	C14	50	400
2	250K	1/2	R3	1/2	1	.00008	C15	50	400
2	1750	1/2	R4	1/2	1	.00008	C16	50	400
2	1750	1/2	R5	1/2	1	.00008	C17	50	400
2	1750	1/2	R6	1/2	1	.00008	C18	50	400
2	1750	1/2	R7	1/2	1	.00008	C19	50	400
2	1750	1/2	R8	1/2	1	.00008	C20	50	400
2	1750	1/2	R9	1/2	1	.00008	C21	50	400
2	1750	1/2	R10	1/2	1	.00008	C22	50	400
2	1750	1/2	R11	1/2	1	.00008	C23	50	400
2	1750	1/2	R12	1/2	1	.00008	C24	50	400
2	1750	1/2	R13	1/2	1	.00008	C25	50	400
2	1750	1/2	R14	1/2	1	.00008	C26	50	400
2	1750	1/2	R15	1/2	1	.00008	C27	50	400
2	1750	1/2	R16	1/2	1	.00008	C28	50	400
2	1750	1/2	R17	1/2	1	.00008	C29	50	400
2	1750	1/2	R18	1/2	1	.00008	C30	50	400
2	1750	1/2	R19	1/2	1	.00008	C31	50	400
2	1750	1/2	R20	1/2	1	.00008	C32	50	400
2	1750	1/2	R21	1/2	1	.00008	C33	50	400
2	1750	1/2	R22	1/2	1	.00008	C34	50	400
2	1750	1/2	R23	1/2	1	.00008	C35	50	400
2	1750	1/2	R24	1/2	1	.00008	C36	50	400
2	1750	1/2	R25	1/2	1	.00008	C37	50	400
2	1750	1/2	R26	1/2	1	.00008	C38	50	400
2	1750	1/2	R27	1/2	1	.00008	C39	50	400
2	1750	1/2	R28	1/2	1	.00008	C40	50	400

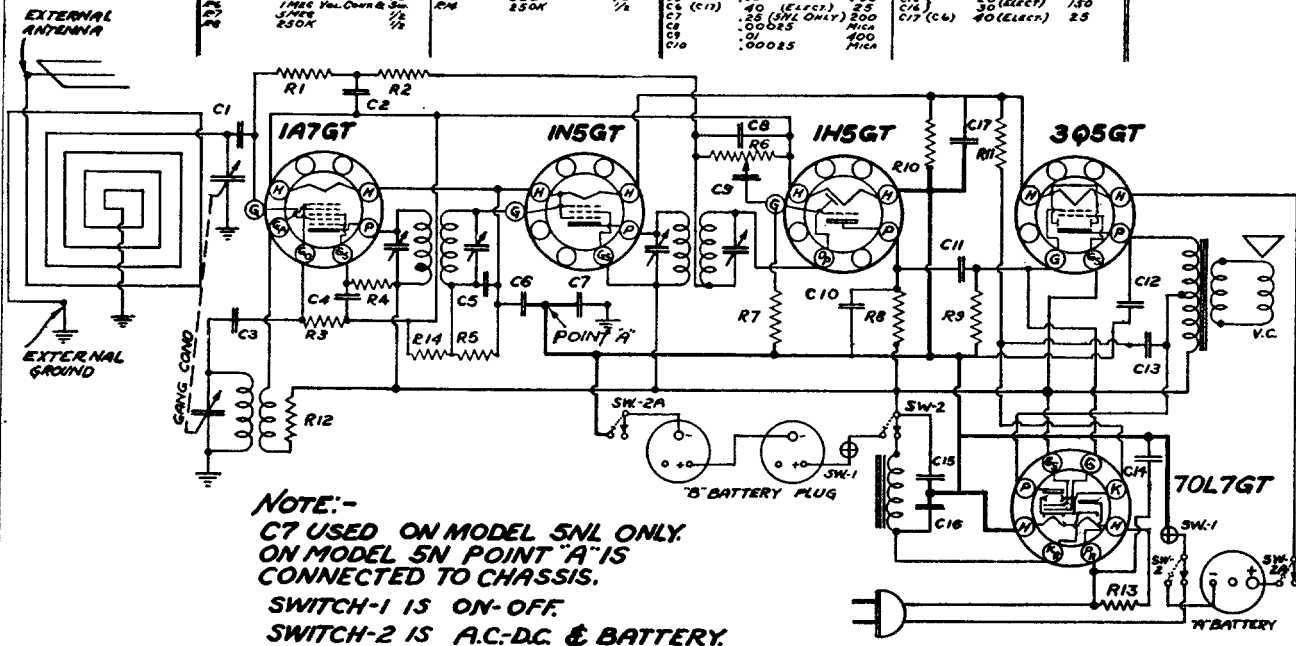


NOTE:-
 C7 USED ON MODEL 5N1 ONLY.
 ON MODEL 5N POINT 'A' IS CONNECTED TO CHASSIS.
 SWITCH-1 IS ON-OFF.
 SWITCH-2 IS A.C.-D.C. & BATTERY.
 SWITCH-2 SHOWN FOR A.C.-D.C.
 I.F. 455 K.C.
 ON MODEL 5N SWITCH, SWITCH 2A NOT USED.

Spiegel, Inc. Model 5N
 Cat. No. Z-7126

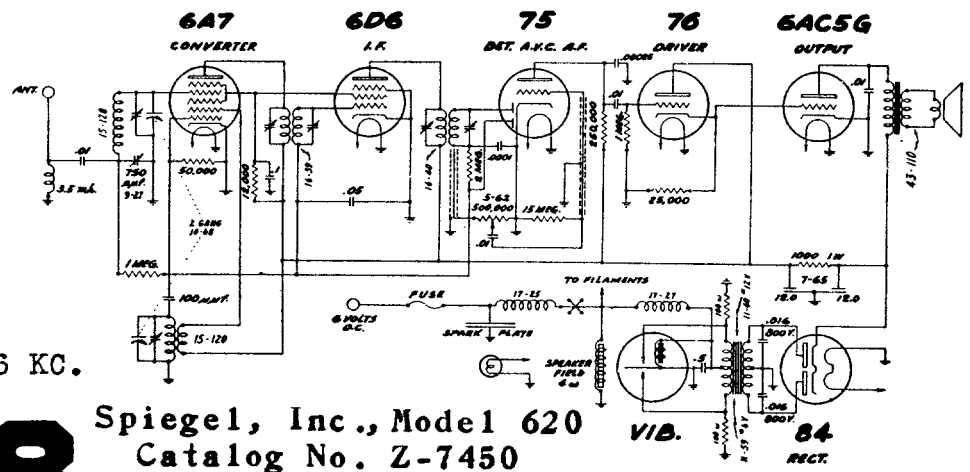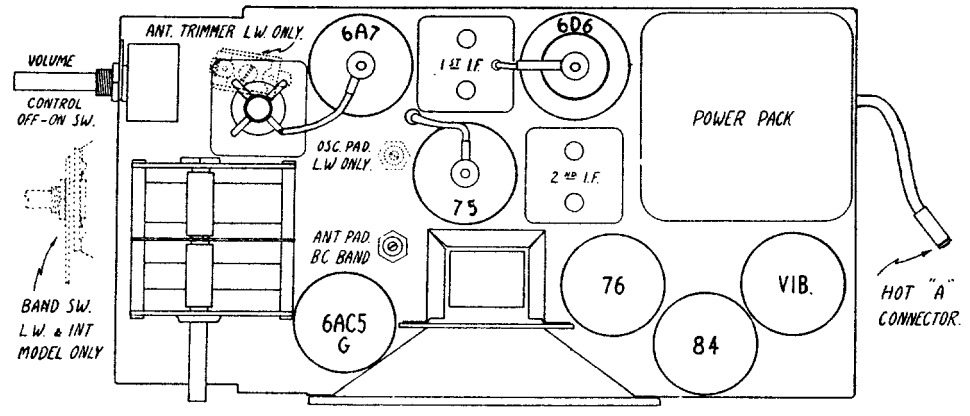


I.F. 456 KC.

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

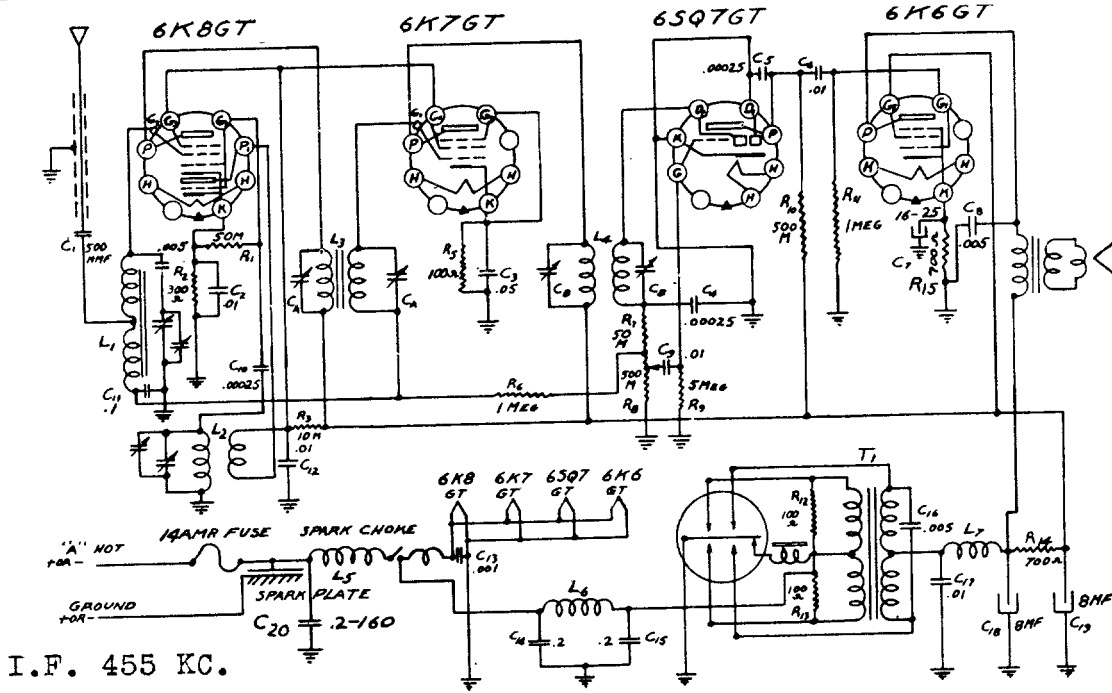

Spiegel, Inc., Chicago, Illinois
 Model 297, Catalog Nos. Z-7456 and Z-7458

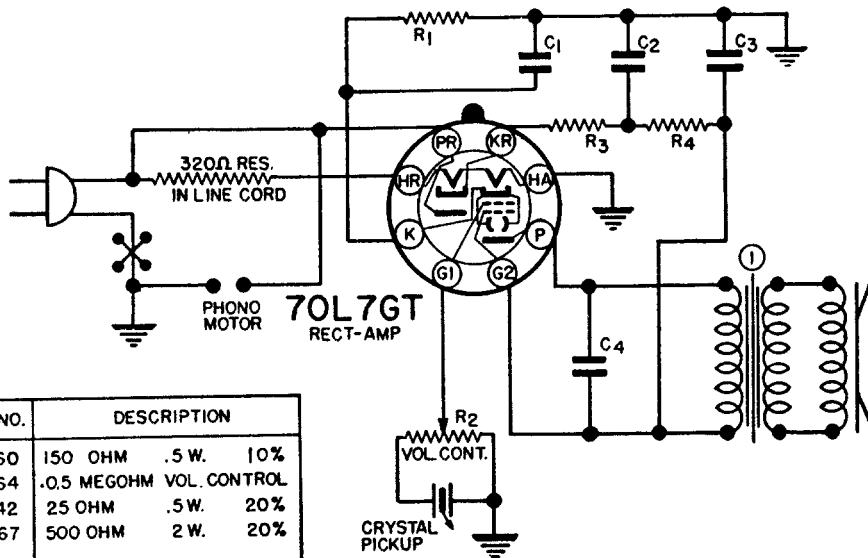

DIAG. NO.	PART NO.	DESCRIPTION
R ₁	N-1360	150 OHM .5 W. 10%
R ₂	N-1864	.05 MEGOHM VOL. CONTROL
R ₃	N-1742	25 OHM .5 W. 20%
R ₄	N-1867	500 OHM 2 W. 20%
C ₁	N-1866	20 MFD. 25V. } ELECTRO.
C ₂		30 MFD. 150V. }
C ₃		30 MFD. 150V. }
C ₄	N-1344	.01 MFD. 400V.
1	N-1863	5 1/2" P.M. SPEAKER (TE-38)
	N-1865	LINE RES. CORD
1	N-1910	5 1/2" P.M. SPKR. (TE-40 & 41)

Spiegel, Inc., Chicago, Illinois
 Phonograph Model "TE"
 Catalog Numbers Z-7020 and Z-7021

149

MODELS 91-III, 98-III AND 910-III



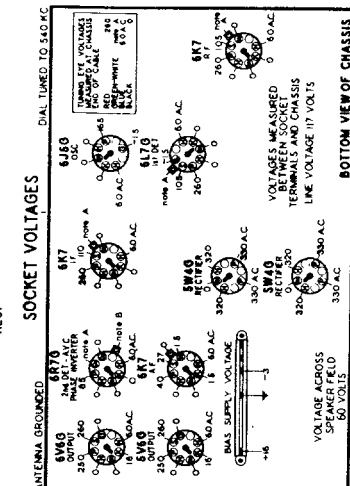


DIAGRAM PART NUMBER LIST

DIAGRAM PART NUMBER	DESCRIPTION	LIST PRICE
65	Resistor - carb. 18,000 ohm 1/4	.12
66	Resistor - carb. 120,000 ohm 1/4	.12
67	Resistor - carb. 10,000 ohm 1/4	.12
68	Resistor - carb. 1,000 ohm 1/4	.12
69	Resistor - carb. 100,000 ohm 1/4	.12
70	Resistor - carb. 10,000 ohm 1/4	.12
71	Resistor - carb. 1,000 ohm 1/4	.12
72	Resistor - carb. 100,000 ohm 1/4	.12
73	Resistor - carb. 10,000 ohm 1/4	.12
74	Resistor - carb. 1,000 ohm 1/4	.12
75	Resistor - carb. 100,000 ohm 1/4	.12
76	Resistor - carb. 10,000 ohm 1/4	.12
77	Resistor - carb. 1,000 ohm 1/4	.12
78	Resistor - carb. 100,000 ohm 1/4	.12
79	Resistor - carb. 10,000 ohm 1/4	.12
80	Resistor - carb. 1,000 ohm 1/4	.12
81	Resistor - carb. 100,000 ohm 1/4	.12
82	Resistor - carb. 10,000 ohm 1/4	.12
83	Resistor - carb. 1,000 ohm 1/4	.12
84	Resistor - carb. 100,000 ohm 1/4	.12
85	Resistor - carb. 10,000 ohm 1/4	.12
86	Resistor - carb. 1,000 ohm 1/4	.12
87	Resistor - carb. 100,000 ohm 1/4	.12
88	Resistor - carb. 10,000 ohm 1/4	.12
89	Resistor - carb. 1,000 ohm 1/4	.12
90	Resistor - carb. 100,000 ohm 1/4	.12
91	Resistor - carb. 10,000 ohm 1/4	.12
92	Resistor - carb. 1,000 ohm 1/4	.12
93	Resistor - carb. 100,000 ohm 1/4	.12
94	Resistor - carb. 10,000 ohm 1/4	.12
95	Resistor - carb. 1,000 ohm 1/4	.12
96	Resistor - carb. 100,000 ohm 1/4	.12
97	Resistor - carb. 10,000 ohm 1/4	.12
98	Resistor - carb. 1,000 ohm 1/4	.12
99	Resistor - carb. 100,000 ohm 1/4	.12
100	Resistor - carb. 10,000 ohm 1/4	.12

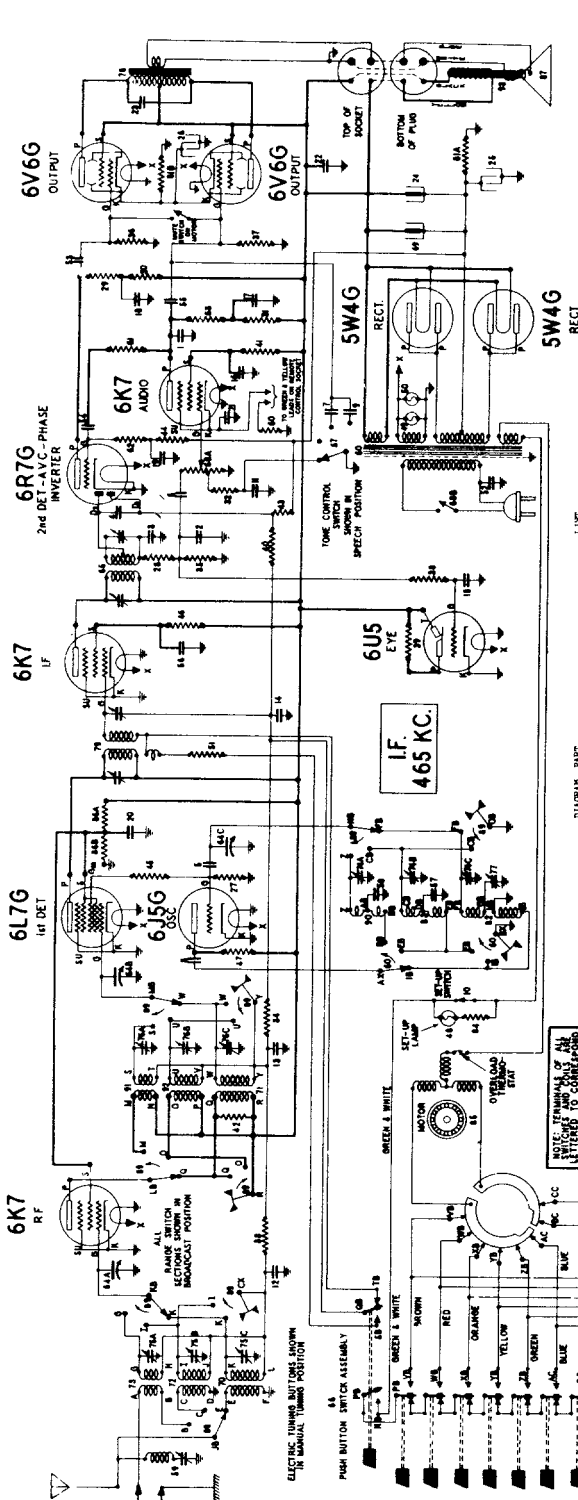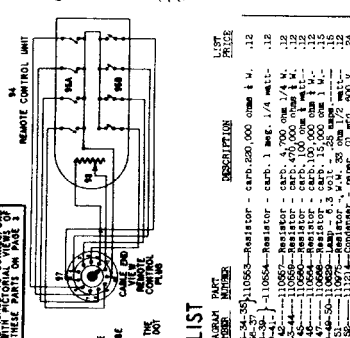

PARTS LIST

DIAGRAM PART NUMBER	DESCRIPTION	LIST PRICE
30	Resistor - carb. 220,000 ohm 1/4	.12
31	Resistor - carb. 10,000 ohm 1/4	.12
32	Resistor - carb. 1,000 ohm 1/4	.12
33	Resistor - carb. 100,000 ohm 1/4	.12
34	Resistor - carb. 10,000 ohm 1/4	.12
35	Resistor - carb. 1,000 ohm 1/4	.12
36	Resistor - carb. 100,000 ohm 1/4	.12
37	Resistor - carb. 10,000 ohm 1/4	.12
38	Resistor - carb. 1,000 ohm 1/4	.12
39	Resistor - carb. 100,000 ohm 1/4	.12
40	Resistor - carb. 10,000 ohm 1/4	.12
41	Resistor - carb. 1,000 ohm 1/4	.12
42	Resistor - carb. 100,000 ohm 1/4	.12
43	Resistor - carb. 10,000 ohm 1/4	.12
44	Resistor - carb. 1,000 ohm 1/4	.12
45	Resistor - carb. 100,000 ohm 1/4	.12
46	Resistor - carb. 10,000 ohm 1/4	.12
47	Resistor - carb. 1,000 ohm 1/4	.12
48	Resistor - carb. 100,000 ohm 1/4	.12
49	Resistor - carb. 10,000 ohm 1/4	.12
50	Resistor - carb. 1,000 ohm 1/4	.12
51	Resistor - carb. 100,000 ohm 1/4	.12
52	Resistor - carb. 10,000 ohm 1/4	.12
53	Resistor - carb. 1,000 ohm 1/4	.12
54	Resistor - carb. 100,000 ohm 1/4	.12
55	Resistor - carb. 10,000 ohm 1/4	.12
56	Resistor - carb. 1,000 ohm 1/4	.12
57	Resistor - carb. 100,000 ohm 1/4	.12
58	Resistor - carb. 10,000 ohm 1/4	.12
59	Resistor - carb. 1,000 ohm 1/4	.12
60	Resistor - carb. 100,000 ohm 1/4	.12
61	Resistor - carb. 10,000 ohm 1/4	.12

SOCKET VOLTAGES

ANTENNA GROUND

6V6G OUTPUT

6R7G 2nd DET-AVC-PHASE INVERTER

6K7 AUDIO

6U5 EYE

5W4G RECT

6K7

240.00 VOLTS

0 80 AC

VOLTAGES MEASURED BETWEEN SOCKET TERMINALS AND CHASSIS

LINE VOLTAGE 117 VOLTS

REAR VIEW OF CHASSIS

VOLTAGE ACROSS SPEAKER FIELD

60 VOLTS

B+ SUPPLY VOLTAGE

300 AC

Use a high resistance voltmeter of at least 1000 ohm per volt.

NOTE A: The plate voltage of the 6U5, 6R7, 6K7, 6V6 and the diode plate (D) of the 6V6G must be the value measured across resistor 81A.


NOTE B: The bias for the control grid of the audio section of the 6V6G is .30 volt measured across resistor 81A.

DIAGRAM PART NUMBER LIST

DIAGRAM PART NUMBER	DESCRIPTION	LIST PRICE
112858	Resistor - carb. 18,000 ohm 1/4	.12
112859	Resistor - carb. 120,000 ohm 1/4	.12
112860	Resistor - carb. 10,000 ohm 1/4	.12
112861	Resistor - carb. 1,000 ohm 1/4	.12
112862	Resistor - carb. 100,000 ohm 1/4	.12
112863	Resistor - carb. 10,000 ohm 1/4	.12
112864	Resistor - carb. 1,000 ohm 1/4	.12
112865	Resistor - carb. 100,000 ohm 1/4	.12
112866	Resistor - carb. 10,000 ohm 1/4	.12
112867	Resistor - carb. 1,000 ohm 1/4	.12
112868	Resistor - carb. 100,000 ohm 1/4	.12
112869	Resistor - carb. 10,000 ohm 1/4	.12
112870	Resistor - carb. 1,000 ohm 1/4	.12
112871	Resistor - carb. 100,000 ohm 1/4	.12
112872	Resistor - carb. 10,000 ohm 1/4	.12
112873	Resistor - carb. 1,000 ohm 1/4	.12
112874	Resistor - carb. 100,000 ohm 1/4	.12
112875	Resistor - carb. 10,000 ohm 1/4	.12
112876	Resistor - carb. 1,000 ohm 1/4	.12
112877	Resistor - carb. 100,000 ohm 1/4	.12
112878	Resistor - carb. 10,000 ohm 1/4	.12
112879	Resistor - carb. 1,000 ohm 1/4	.12
112880	Resistor - carb. 100,000 ohm 1/4	.12
112881	Resistor - carb. 10,000 ohm 1/4	.12
112882	Resistor - carb. 1,000 ohm 1/4	.12
112883	Resistor - carb. 100,000 ohm 1/4	.12
112884	Resistor - carb. 10,000 ohm 1/4	.12
112885	Resistor - carb. 1,000 ohm 1/4	.12
112886	Resistor - carb. 100,000 ohm 1/4	.12
112887	Resistor - carb. 10,000 ohm 1/4	.12
112888	Resistor - carb. 1,000 ohm 1/4	.12
112889	Resistor - carb. 100,000 ohm 1/4	.12
112890	Resistor - carb. 10,000 ohm 1/4	.12
112891	Resistor - carb. 1,000 ohm 1/4	.12
112892	Resistor - carb. 100,000 ohm 1/4	.12
112893	Resistor - carb. 10,000 ohm 1/4	.12
112894	Resistor - carb. 1,000 ohm 1/4	.12
112895	Resistor - carb. 100,000 ohm 1/4	.12
112896	Resistor - carb. 10,000 ohm 1/4	.12
112897	Resistor - carb. 1,000 ohm 1/4	.12
112898	Resistor - carb. 100,000 ohm 1/4	.12
112899	Resistor - carb. 10,000 ohm 1/4	.12
112900	Resistor - carb. 1,000 ohm 1/4	.12

STEWART-WARNER CORP.
1826 DIVERSEY PARKWAY
CHICAGO, ILLINOIS

STEWART-WARNER MODELS 91-81, 98-81 AND 910-81 CHASSIS

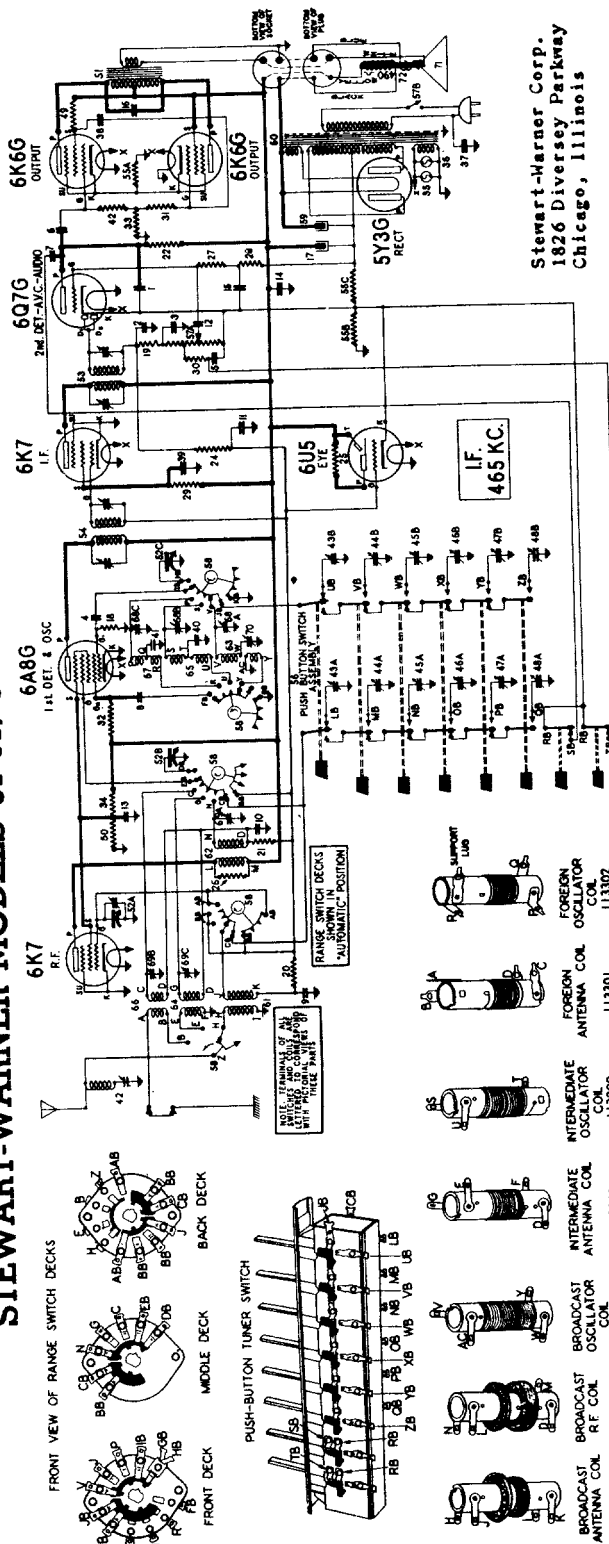

Stewart-Warner Corp.
1826 Diversey Parkway
Chicago, Illinois

SOCKET VOLTAGES


Diagram Number	Description	Line	Price
55A to 55C	Resistor—see wt. Sec. B, 25 ohm	30	\$0.12
55	Push Button Switch—250,000 ohms	34	1.00
55A-57B	Vacuum Control—250,000 ohms (with 55)	34	1.00
113285	Switch—range	23	2.10
113281	Switch—range	23	2.10
113282	Transformer—power 117 V, 60 cycles	23	6.00
113283	Transformer—power 110, 50, 45	23	5.00
113284	Transformer—power 110, 50, 45	23	5.00
113285	Transformer—power 110, 50, 45	23	5.00
113286	Transformer—power 110, 50, 45	23	5.00
113287	Transformer—power 110, 50, 45	23	5.00
113288	Transformer—power 110, 50, 45	23	5.00
113289	Transformer—power 110, 50, 45	23	5.00
113290	Transformer—power 110, 50, 45	23	5.00
113291	Transformer—power 110, 50, 45	23	5.00
113292	Transformer—power 110, 50, 45	23	5.00
113293	Transformer—power 110, 50, 45	23	5.00
113294	Transformer—power 110, 50, 45	23	5.00
113295	Transformer—power 110, 50, 45	23	5.00
113296	Transformer—power 110, 50, 45	23	5.00
113297	Transformer—power 110, 50, 45	23	5.00
113298	Transformer—power 110, 50, 45	23	5.00
113299	Transformer—power 110, 50, 45	23	5.00

ELECTRICAL PARTS

Diagram Number	Description	Line	Price
55A to 55C	Resistor—see wt. Sec. B, 25 ohm	30	\$0.12
55	Push Button Switch—250,000 ohms	34	1.00
55A-57B	Vacuum Control—250,000 ohms (with 55)	34	1.00
113285	Switch—range	23	2.10
113281	Switch—range	23	2.10
113282	Transformer—power 117 V, 60 cycles	23	6.00
113283	Transformer—power 110, 50, 45	23	5.00
113284	Transformer—power 110, 50, 45	23	5.00
113285	Transformer—power 110, 50, 45	23	5.00
113286	Transformer—power 110, 50, 45	23	5.00
113287	Transformer—power 110, 50, 45	23	5.00
113288	Transformer—power 110, 50, 45	23	5.00
113289	Transformer—power 110, 50, 45	23	5.00
113290	Transformer—power 110, 50, 45	23	5.00
113291	Transformer—power 110, 50, 45	23	5.00
113292	Transformer—power 110, 50, 45	23	5.00
113293	Transformer—power 110, 50, 45	23	5.00
113294	Transformer—power 110, 50, 45	23	5.00
113295	Transformer—power 110, 50, 45	23	5.00
113296	Transformer—power 110, 50, 45	23	5.00
113297	Transformer—power 110, 50, 45	23	5.00
113298	Transformer—power 110, 50, 45	23	5.00
113299	Transformer—power 110, 50, 45	23	5.00

DIAL AND MISCELLANEOUS PARTS

Diagram Number	Description	Line	Price
55A to 55C	Resistor—see wt. Sec. B, 25 ohm	30	\$0.12
55	Push Button Switch—250,000 ohms	34	1.00
55A-57B	Vacuum Control—250,000 ohms (with 55)	34	1.00
113285	Switch—range	23	2.10
113281	Switch—range	23	2.10
113282	Transformer—power 117 V, 60 cycles	23	6.00
113283	Transformer—power 110, 50, 45	23	5.00
113284	Transformer—power 110, 50, 45	23	5.00
113285	Transformer—power 110, 50, 45	23	5.00
113286	Transformer—power 110, 50, 45	23	5.00
113287	Transformer—power 110, 50, 45	23	5.00
113288	Transformer—power 110, 50, 45	23	5.00
113289	Transformer—power 110, 50, 45	23	5.00
113290	Transformer—power 110, 50, 45	23	5.00
113291	Transformer—power 110, 50, 45	23	5.00
113292	Transformer—power 110, 50, 45	23	5.00
113293	Transformer—power 110, 50, 45	23	5.00
113294	Transformer—power 110, 50, 45	23	5.00
113295	Transformer—power 110, 50, 45	23	5.00
113296	Transformer—power 110, 50, 45	23	5.00
113297	Transformer—power 110, 50, 45	23	5.00
113298	Transformer—power 110, 50, 45	23	5.00
113299	Transformer—power 110, 50, 45	23	5.00

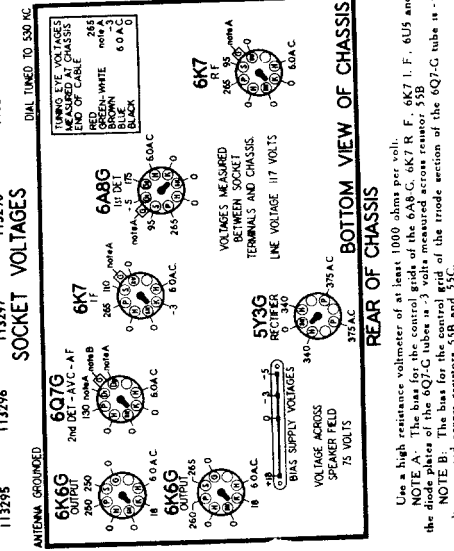

Use a high resistance voltmeter of at least 1000 ohms per volt.
NOTE: The control grids of the 6A8-G, 6K7 R. F., 6K7 I. F., 6U5 and the dot grid of the 6Q7-G tubes are -3 volts measured across resistor 55B.
NOTE B: The bias for the control grid of the triode section of the 6Q7-G tube is -5 volts measured across resistors 55B and 55C.

PARTS LIST

ELECTRICAL PARTS

SOCKET VOLTAGES

DIAL TUNED TO 530 KC.

REAR VIEW OF CHASSIS

STEWART-WARNER MODEL 91-648 RECEIVER

152

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

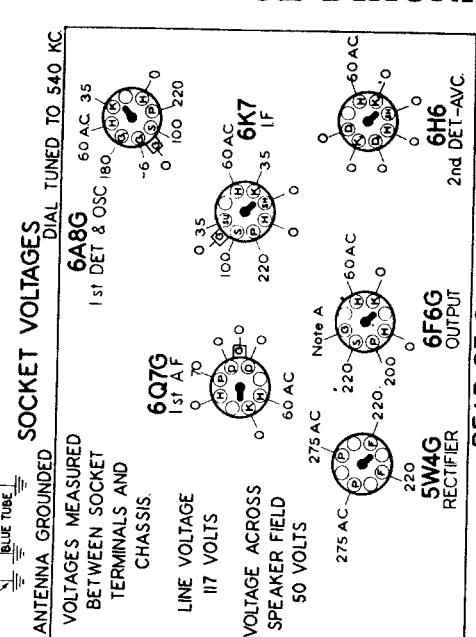
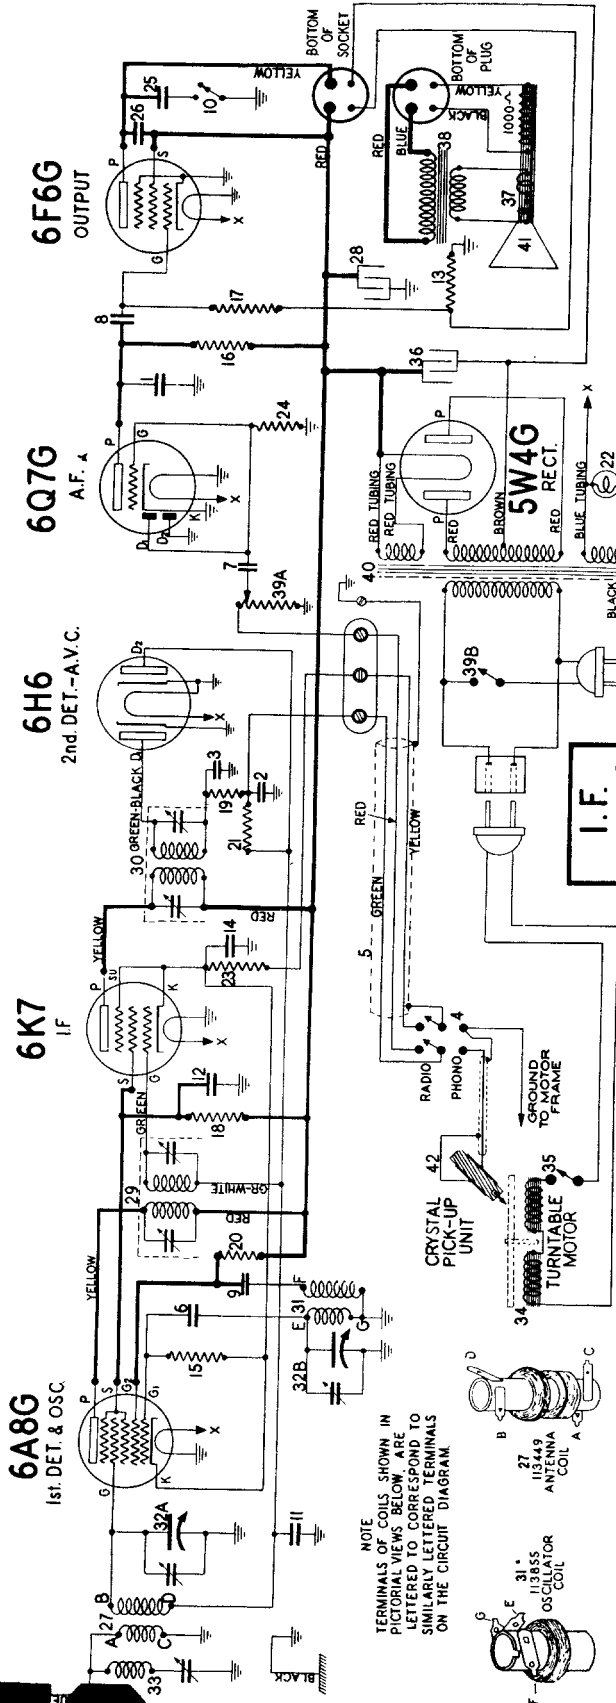


Diagram Number	Part Number	Description	Diagram Number	Part Number	Description
1	83539	Condenser—mica 260 mmfd.	25	113034	Condenser—paper .04 mfd. 600 volt
2-3	83783	Condenser—mica 110 mmf.	26	113035	Condenser—paper .006 mfd. 600 V
4	84566	Switch—"phono-radio".D.P.D.T.	27	113449	Antenna coil
5	84572	Cable—Shielded for Phono. Pickup.	28	113808	Condenset—electrolytic 8 mfd. 350 V.
6	85061	Condenser—mica 51 mmfd.	29	113853	Transformer—1st I.F.
7-8	88026	Condenser—paper .02 mfd. 400 Volt	30	113854	Transformer—2nd I.F.
9	88030	Condenser—paper .01 mfd. 400 Volt	31	113855	Coil—oscillator
10	88054	Switch for tone control.	32A-32B	113869	Condenset—gang
11	88189	Condenser—paper .05 mfd. 200 Volt	33	113889	Coil—wave trap
12	88191	Condenser—paper .1 mfd. 300 Volt	34	114400	Phono. motor & turntable
13	88462	Resistor—W. W. 270 ohms 1 W. 10%.	35	114437	Toggle Switch—phono. power off-on switch
14	89532	Condenser—paper .25 mfd. 200 Volt			
15	110552	Resistor—carbon 47,000 ohms 1/4 W.	36	114972	Condenset—elect. 16 mfd. 450 V.
16	110553	Resistor—carbon 220,000 ohms 1/4 W.	37	U-115048	Speaker—dynamic 6"
17	110559	Resistor—carbon 470,000 ohms 1/4 W.	38	U-116212	Output transformer for U-115048 speaker
18-19	110566	Resistor—carbon 33,000 ohms 1/4 W.			
20	110569	Resistor—carbon 10,000 ohms 1/4 W.	39A-39B	116274	Volume control 500,000 ohms with switch
21	110580	Resistor—carbon 3.3 meg. 1/4 watt	40	116283	Transformer—power 110 V 60 C.
22	110629	Dial bulb—6.3 volt .25 amps. 1/4 watt	41	U-116296	Cone & voice coil assembly for U-115048 speaker
23	112974	Resistor—carbon 220 ohms 1/4 W. (10%)	42	116300	Phono. pickup head.
24	112975	Resistor—carbon 10 meg. 1/4 watt.			

SOCKET VOLTAGES
 ANTENNA GROUND
 VOLTAGES MEASURED
 BETWEEN SOCKET
 TERMINALS AND
 CHASSIS

6A8G
 1st DET & OSC. 180
 60 AC. 35
 100 220

6Q7G
 1st AF
 60 AC
 100 220


6H6
 2nd DET.-A.V.C.
 60 AC
 100 220

6F6G
 OUTPUT
 60 AC
 100 220

5W4G
 RECTIFIER
 275 AC
 220

REAR OF CHASSIS
 Use a high resistance voltmeter of at least 1000 ohms per volt.
 NOTE A: The bias for the control grid of the 6F6G tube is
 —13.5 volts measured across resistor number 13.

MODEL 97-56-S CHASSIS
RECEIVER MODELS 97-561 to 97-569

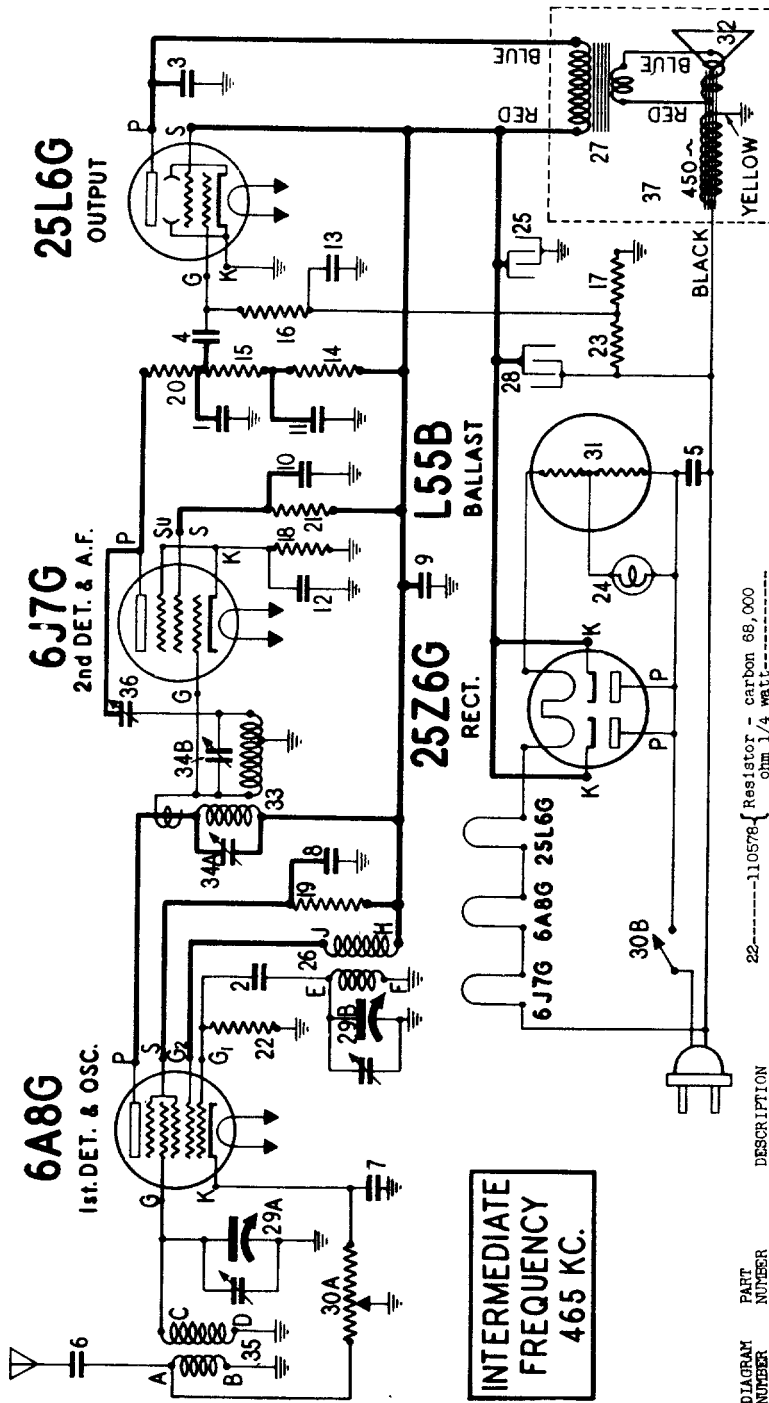

INTERMEDIATE
FREQUENCY
465 KC.

DIAGRAM NUMBER	PART NUMBER	DESCRIPTION
1	83539	Condenser - mica 280 mmfd.
2	83783	Condenser - mica 110 mmfd.
3-4-5	88026	Condenser - paper .02 mfd.
6	88029	Condenser - paper .004 mfd.
7-8-9	88421	Condenser - paper .1 mfd.
10-11	88421	Condenser - paper .25 mfd.
12-13	88532	Condenser - paper .25 mfd.
14	110553	Resistor - carbon 220,000 ohm 1/4 watt
15-16	110553	Resistor - carbon 470,000 ohm 1/4 watt
17	110564	Resistor - carbon 100,000 ohm 1/4 watt
18	110565	Resistor - carbon 22,000 ohm 1/4 watt
19	110566	Resistor - carbon 33,000 ohm 1/4 watt
20	110569	Resistor - carbon 10,000 ohm 1/4 watt
21	110570	Resistor - carbon 2.2 meg. 1/4 watt
22	110578	Resistor - carbon 68,000 ohm 1/4 watt
23	110584	Resistor - carbon 330,000 ohm 1/4 watt
24	110629	Lamp - 6.3 volt-.25 amp.
25	112898	Condenser - electrolytic 16 mfd. 150 volt
26	113042	Coil - oscillator
27	R-113343	Transformer - output for R-115013 speaker
28	113472	Condenser - electrolytic 40 mfd. 150 volt
29A	29B-113478	Condenser - variable gang with on-off switch
30A	30B-113501	Volume control-20,000 ohms
31	113506	Ballast Resistor - L55B
32	R-113737	Cone - voice coil assem. for R-115025 speaker
33	113738	Transformer - I.F. (with trimmer)
34A	34B-113743	Condenser - trimmer (2 section for I.F.)
35	113744	Coil - antenna
36	113745	Condenser - trimmer (regen control)
37	R-115025	Speaker - dynamic - 5" (sub. R-115013)

SOCKET VOLTAGES
ANTENNA GROUNDED

VOLTAGES MEASURED BETWEEN SOCKET TERMINALS AND CHASSIS UNLESS OTHERWISE SHOWN

LINE VOLTAGE 117 VOLTS.

DIAL TUNED TO 540 KC.

VOLTAGE ACROSS SPEAKER FIELD 27 VOLTS

VOLTAGE ACROSS 1st DET & OSC.


VOLTAGE ACROSS 2nd DET - A-F

REAR VIEW OF CHASSIS



MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

Stromberg-Carlson No. 335 and 336 Radio Receivers STROMBERG-CARLSON TELEPHONE MANUFACTURING COMPANY ROCHESTER, NEW YORK

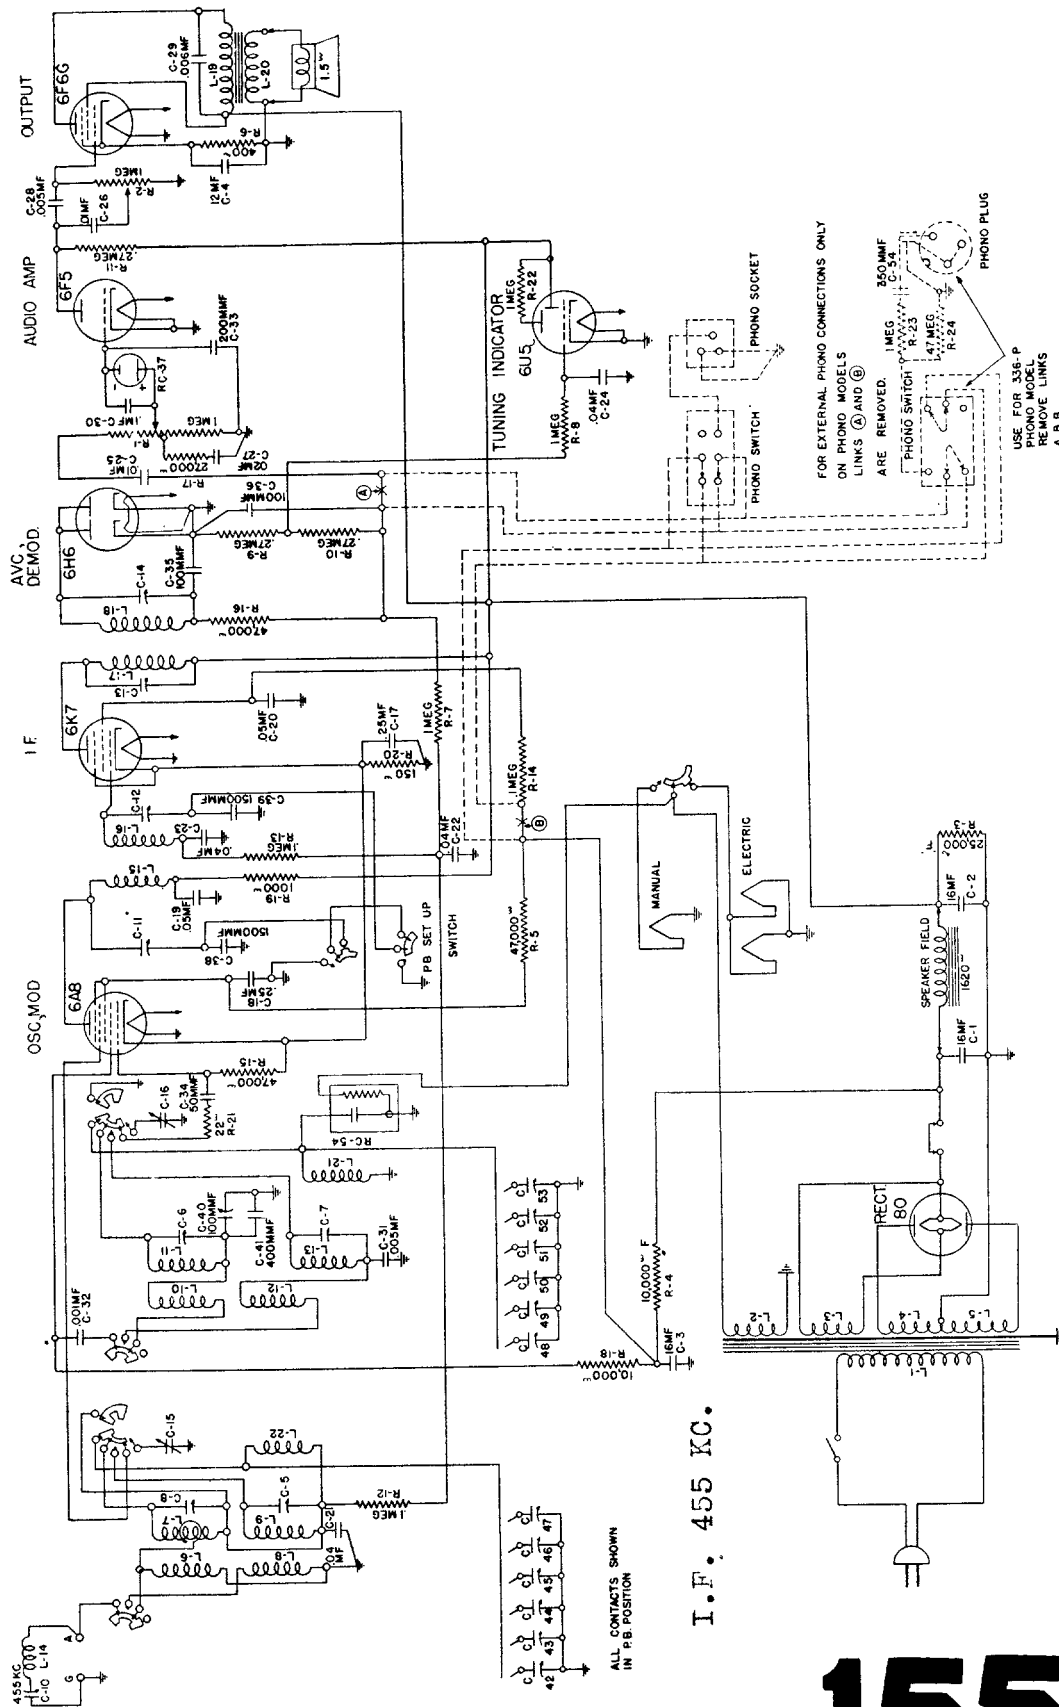


FOR EXTERNAL PHONO CONNECTIONS ONLY
ON PHONO MODELS
LINKS (A) AND (B)
ARE REMOVED.
PHONO SWITCH
PHONO SOCKET
PHONO PLUG
USE FOR 336-P
PHONO MODEL
REMOVE LINKS
A B B

155

Stromberg-Carlson Nos. 340 and 341 Radio Receivers


STROMBERG-CARLSON TELEPHONE MANUFACTURING COMPANY
ROCHESTER, NEW YORK

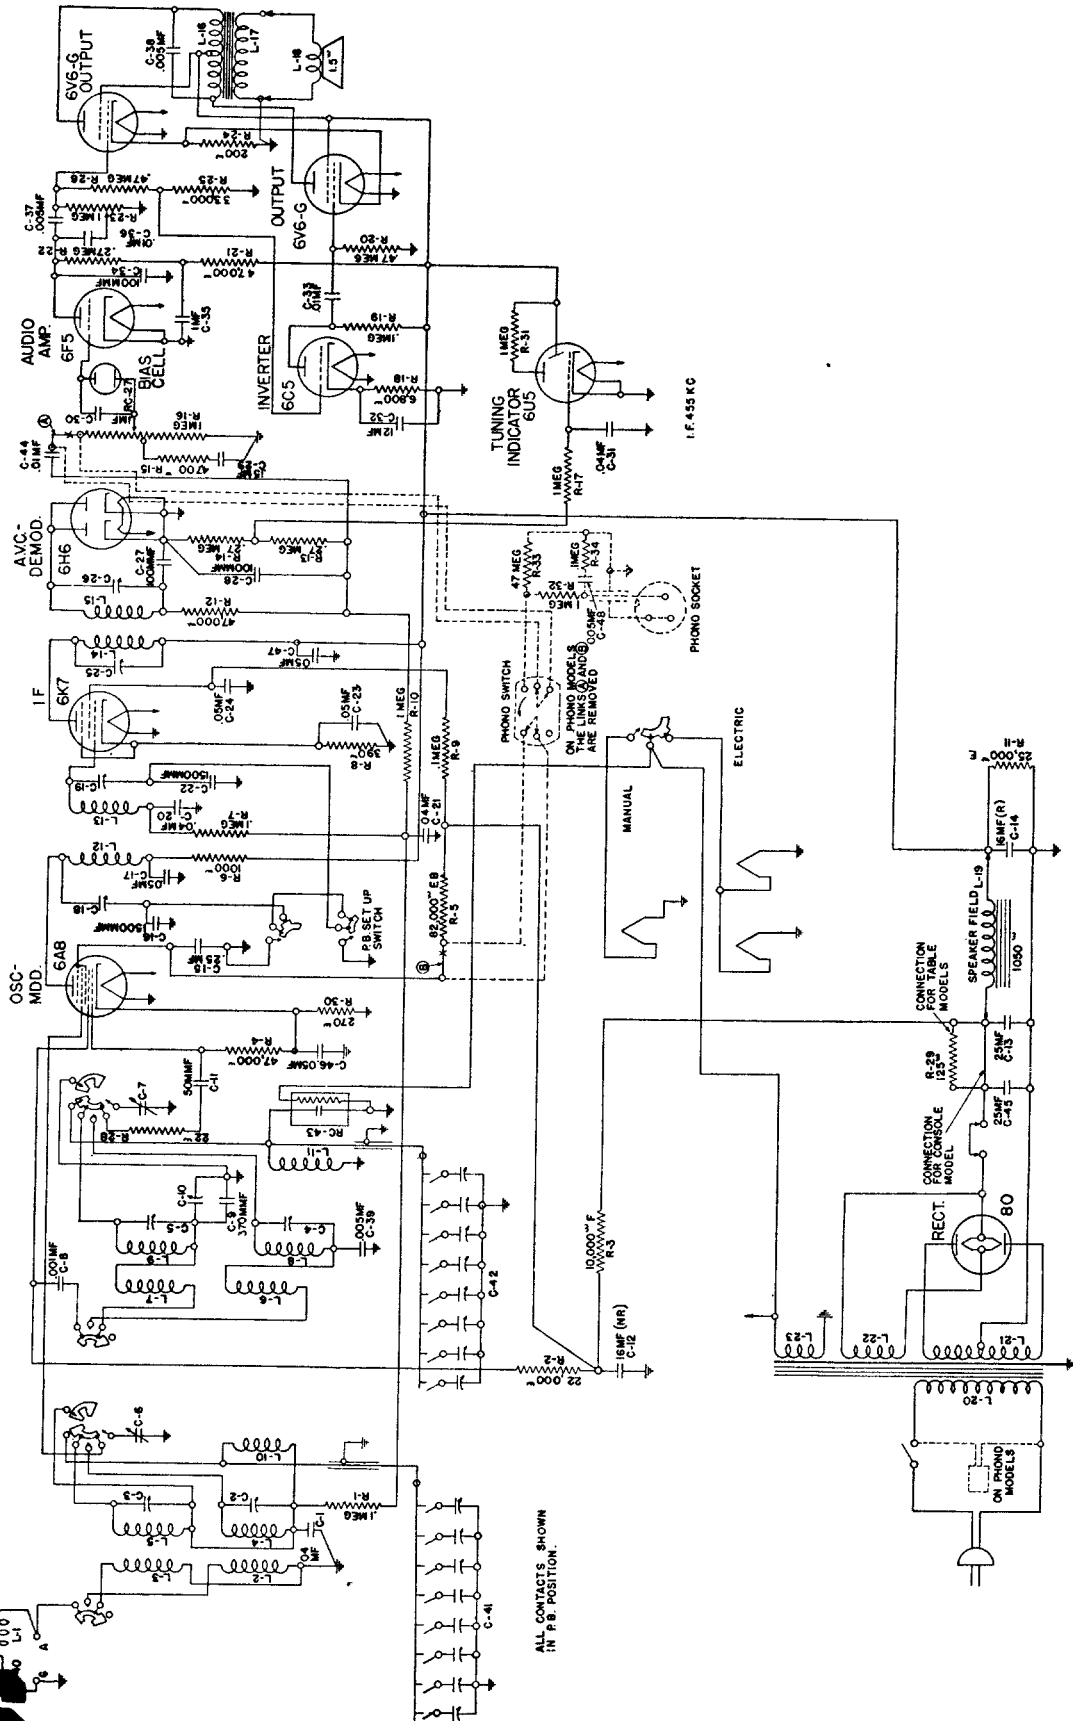

Stromberg-Carlson No. 350 Radio Receivers
 STROMBERG-CARLSON TELEPHONE MANUFACTURING COMPANY
 ROCHESTER, NEW YORK

ELECTRICAL SPECIFICATIONS


Type of Circuit..... Superheterodyne with A. E. C. Electric Tuning
 Tuning Ranges..... A—530 to 1700 Kc.; B—1700 to 5600 Kc.; C—5600 to 18,000 Kc.

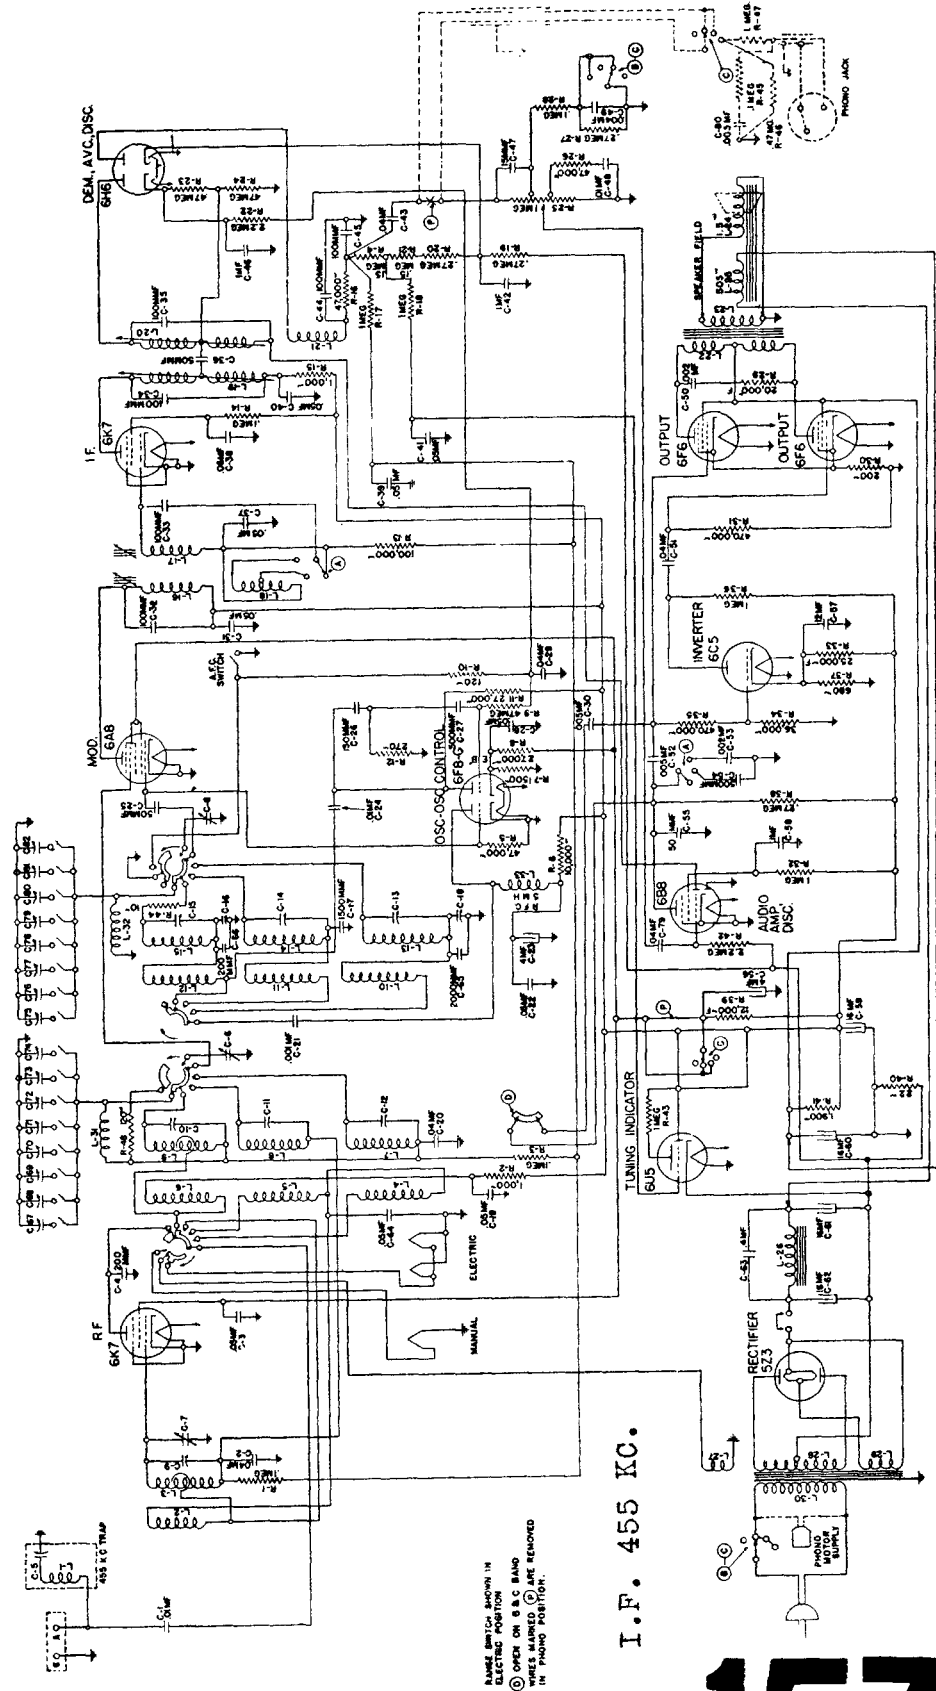


NAME SWITCH SHOWN IN
 ELECTRIC POSITION
 ① OPEN ON B & C BAND
 NAME SWITCH IS TO BE REMOVED
 IN PHONO POSITION.

I. F. 455 KC.

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

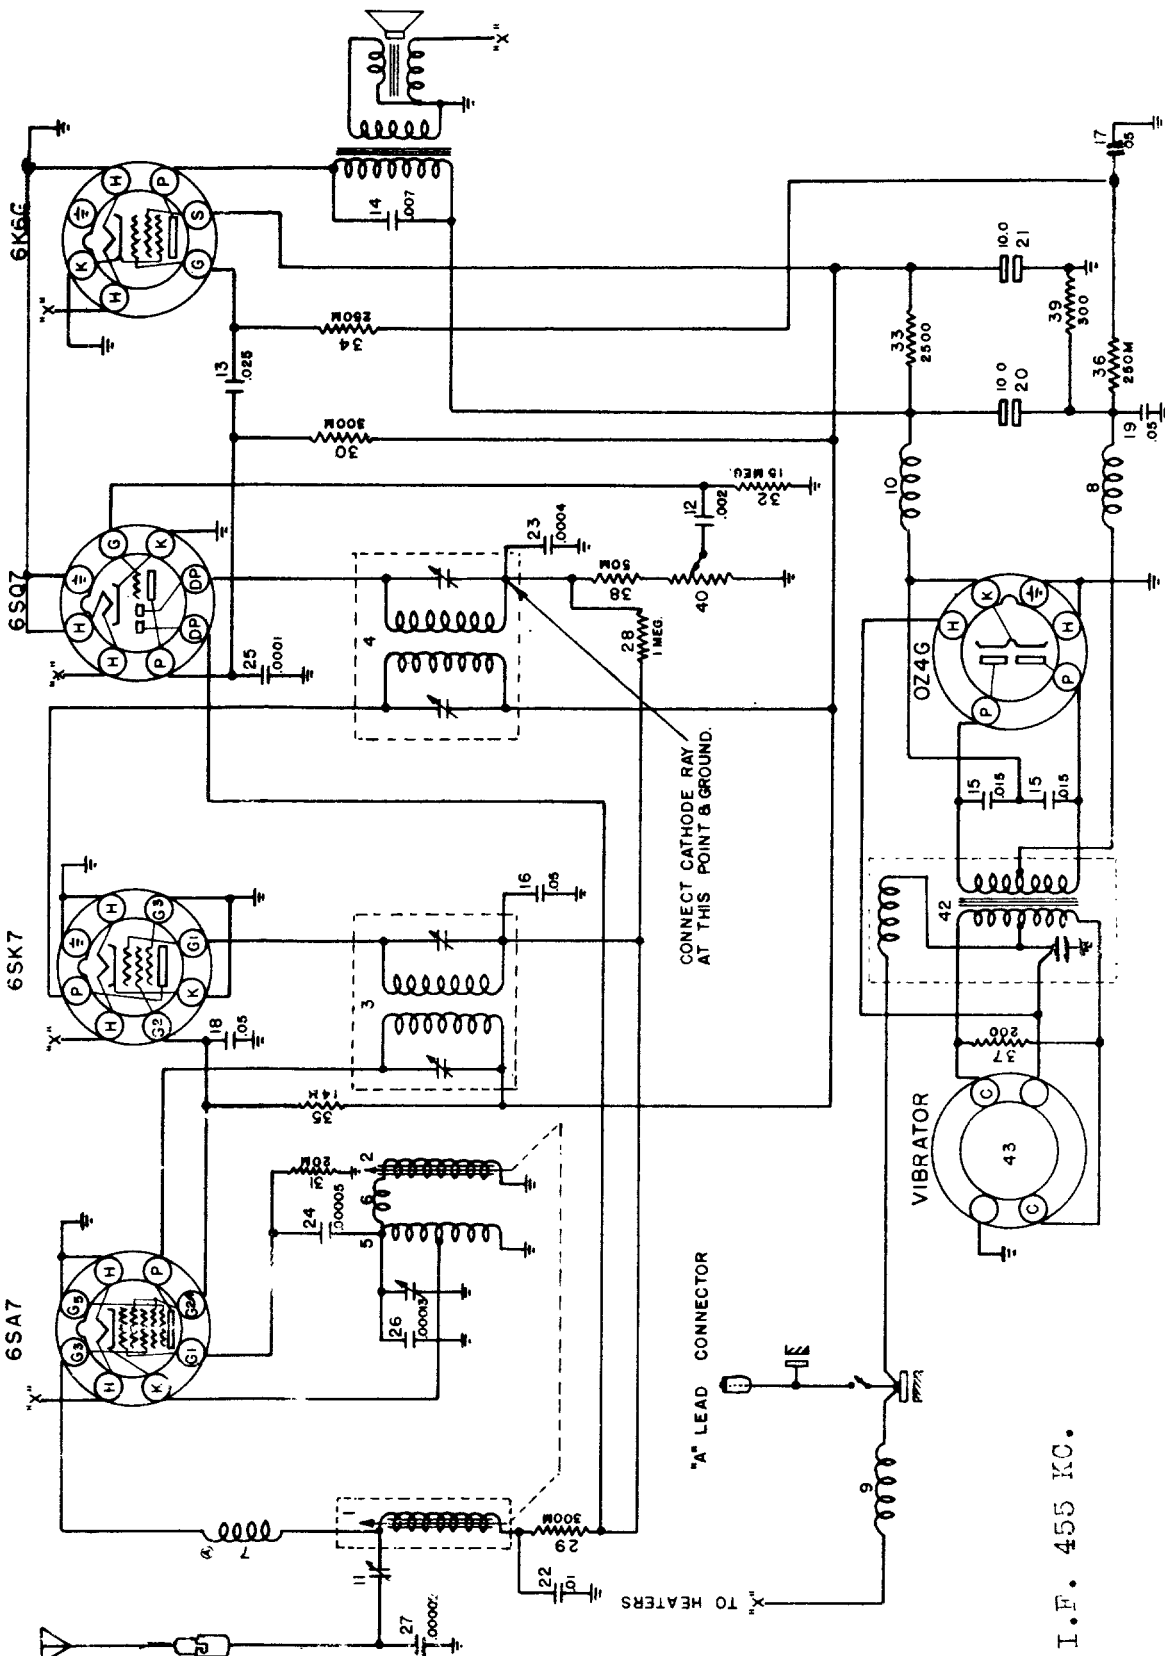

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

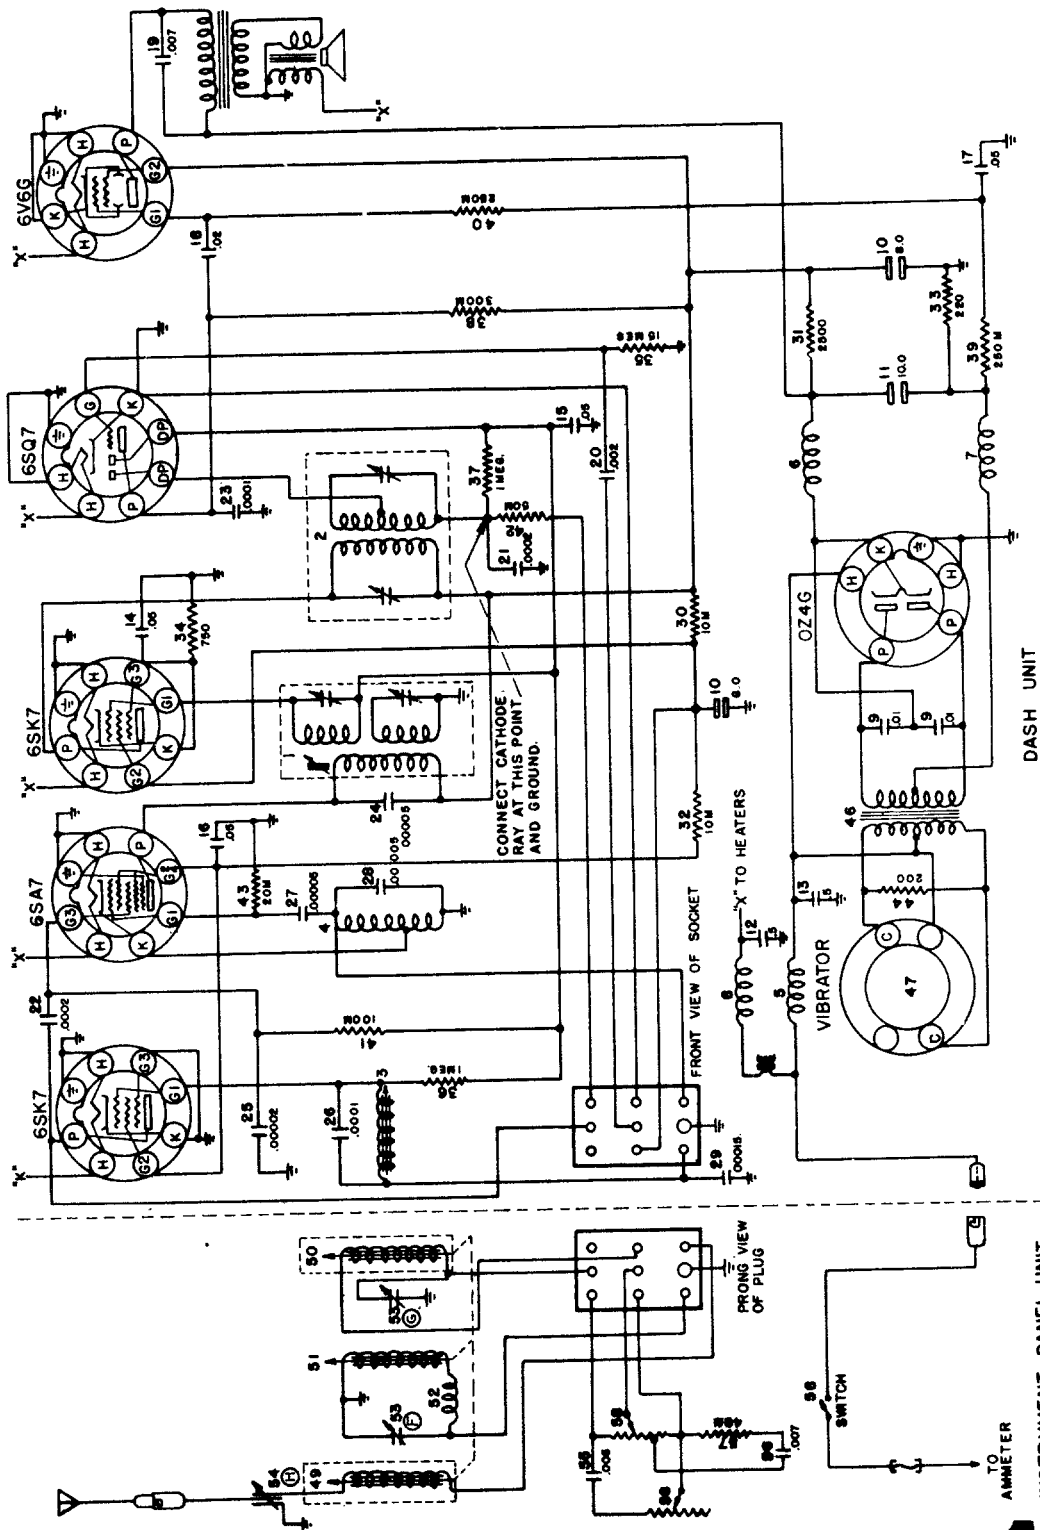

DELCO MODEL R-678 CIRCUIT DIAGRAM




I.F. 455 KC.

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS


SERVICE INSTRUCTIONS--DELCO MODEL R-678--Cont'd.

Tuning is accomplished by means of the conventional manual control or by means of five push-buttons which mechanically adjust the position of the iron cores in the tuning coils, tuning the radio to preselected frequencies



UNITED MOTORS SERVICE INCORPORATED

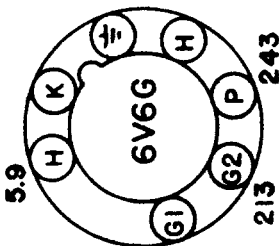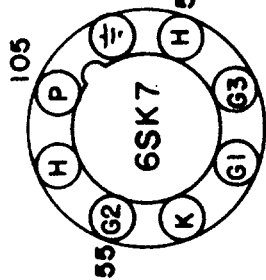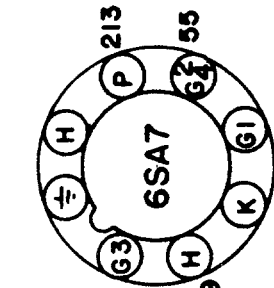


VOLTAGE READINGS TAKEN BETWEEN SOCKET
TERMINALS AND GROUND WITH D.C. VOLTMETER
HAVING RESISTANCE OF 1000 OHMS PER VOLT.
ALL READINGS TAKEN WITH 5.9 FILAMENT VOLTAGE
AT TUBES.

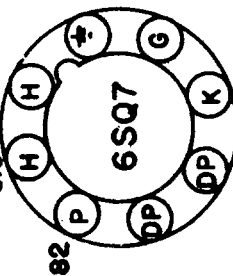


CURRENT DRAIN WITH SPEAKER & DIAL LIGHT 6.7 AMPS.
"B" SUPPLY DRAIN 50 M.A.

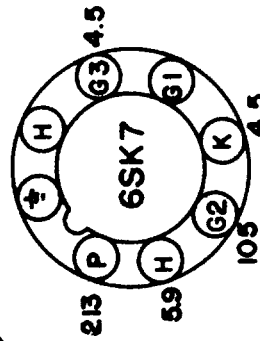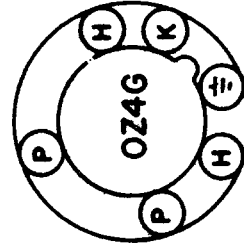

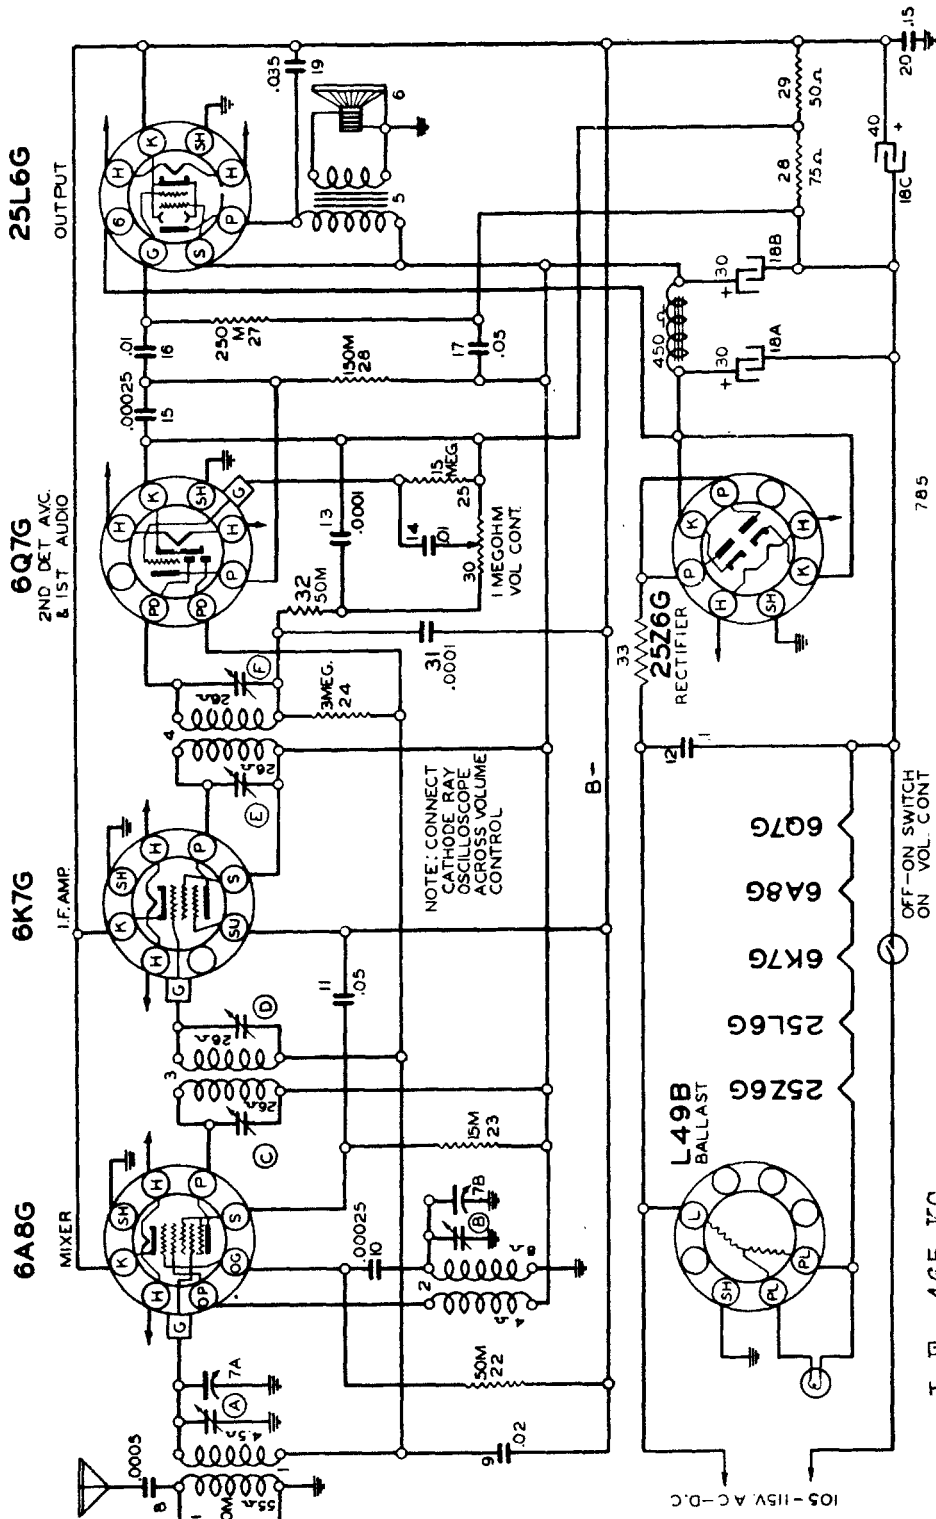

United Motors Service, Inc.
3044 West Grand Blvd.
Detroit, Mich.


MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

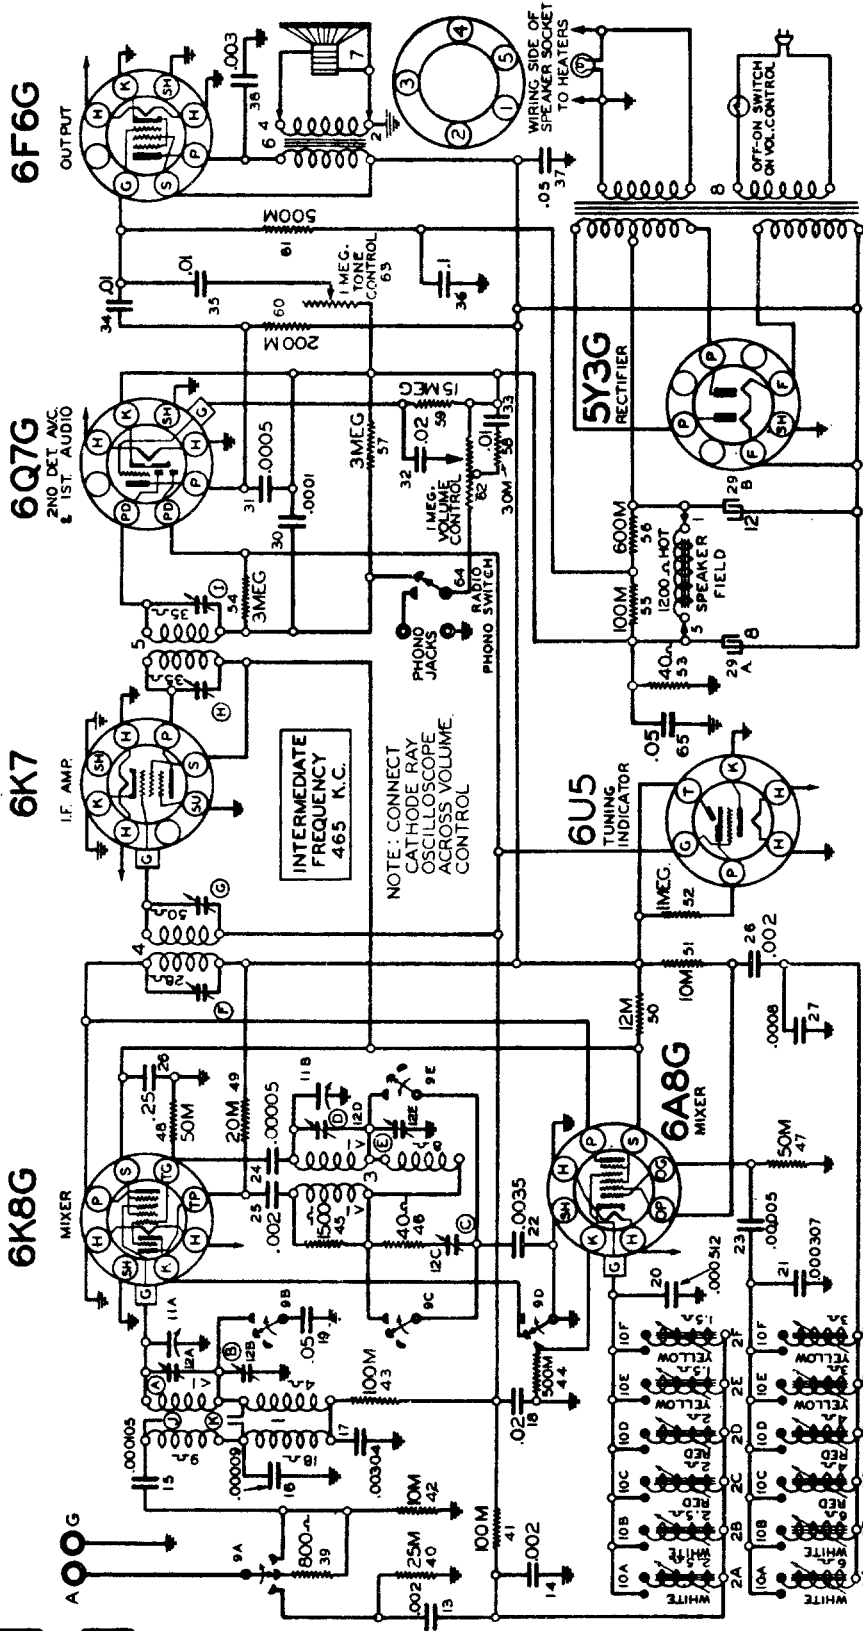

United Motors Service, Inc.
 3044 West Grand Blvd.
 Detroit, Michigan

DELCO MODEL R-1142 CIRCUIT DIAGRAM

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

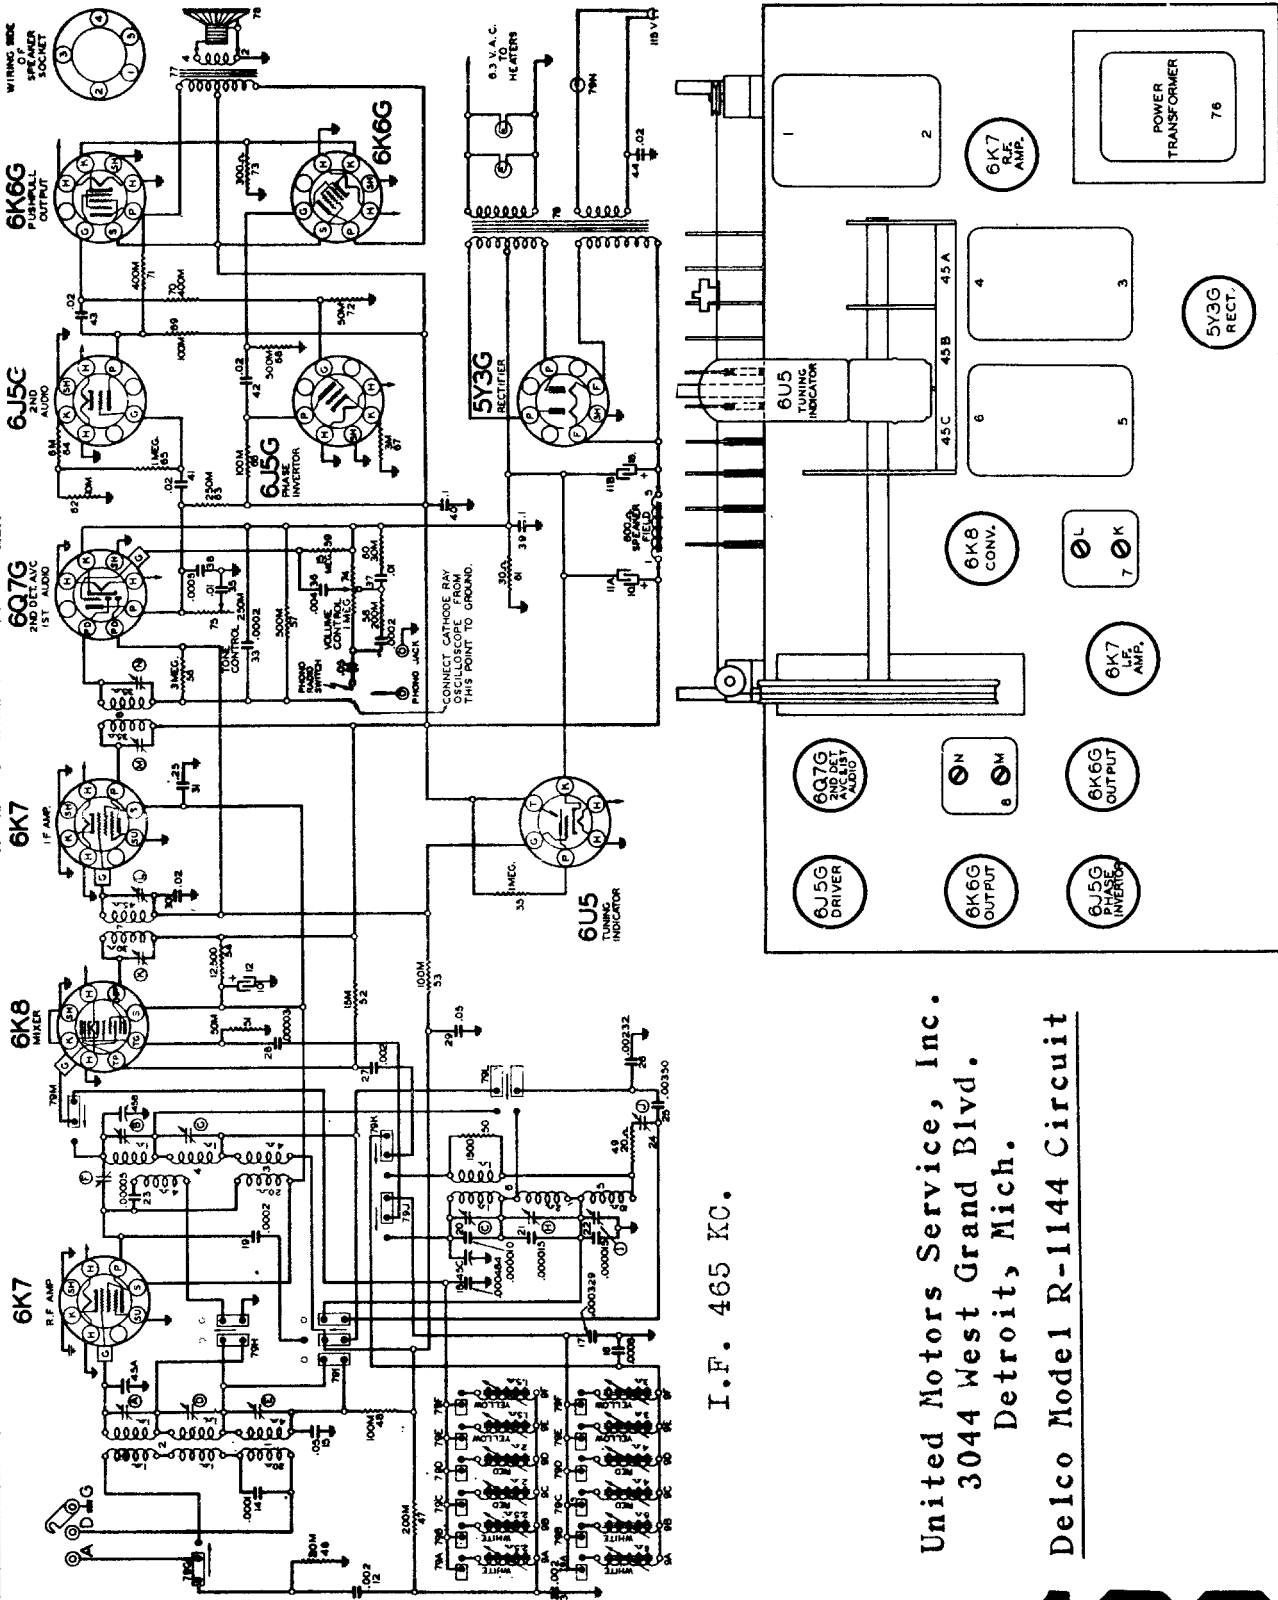

I.F. 465 KC.

United Motors Service, Inc.
 3044 West Grand Blvd.
 Detroit, Mich.

Delco Model R-1144 Circuit


MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS


Series 5D2

Wells-Gardner & Co.
2701 N. Kildare Ave.
Chicago, Illinois


164

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS


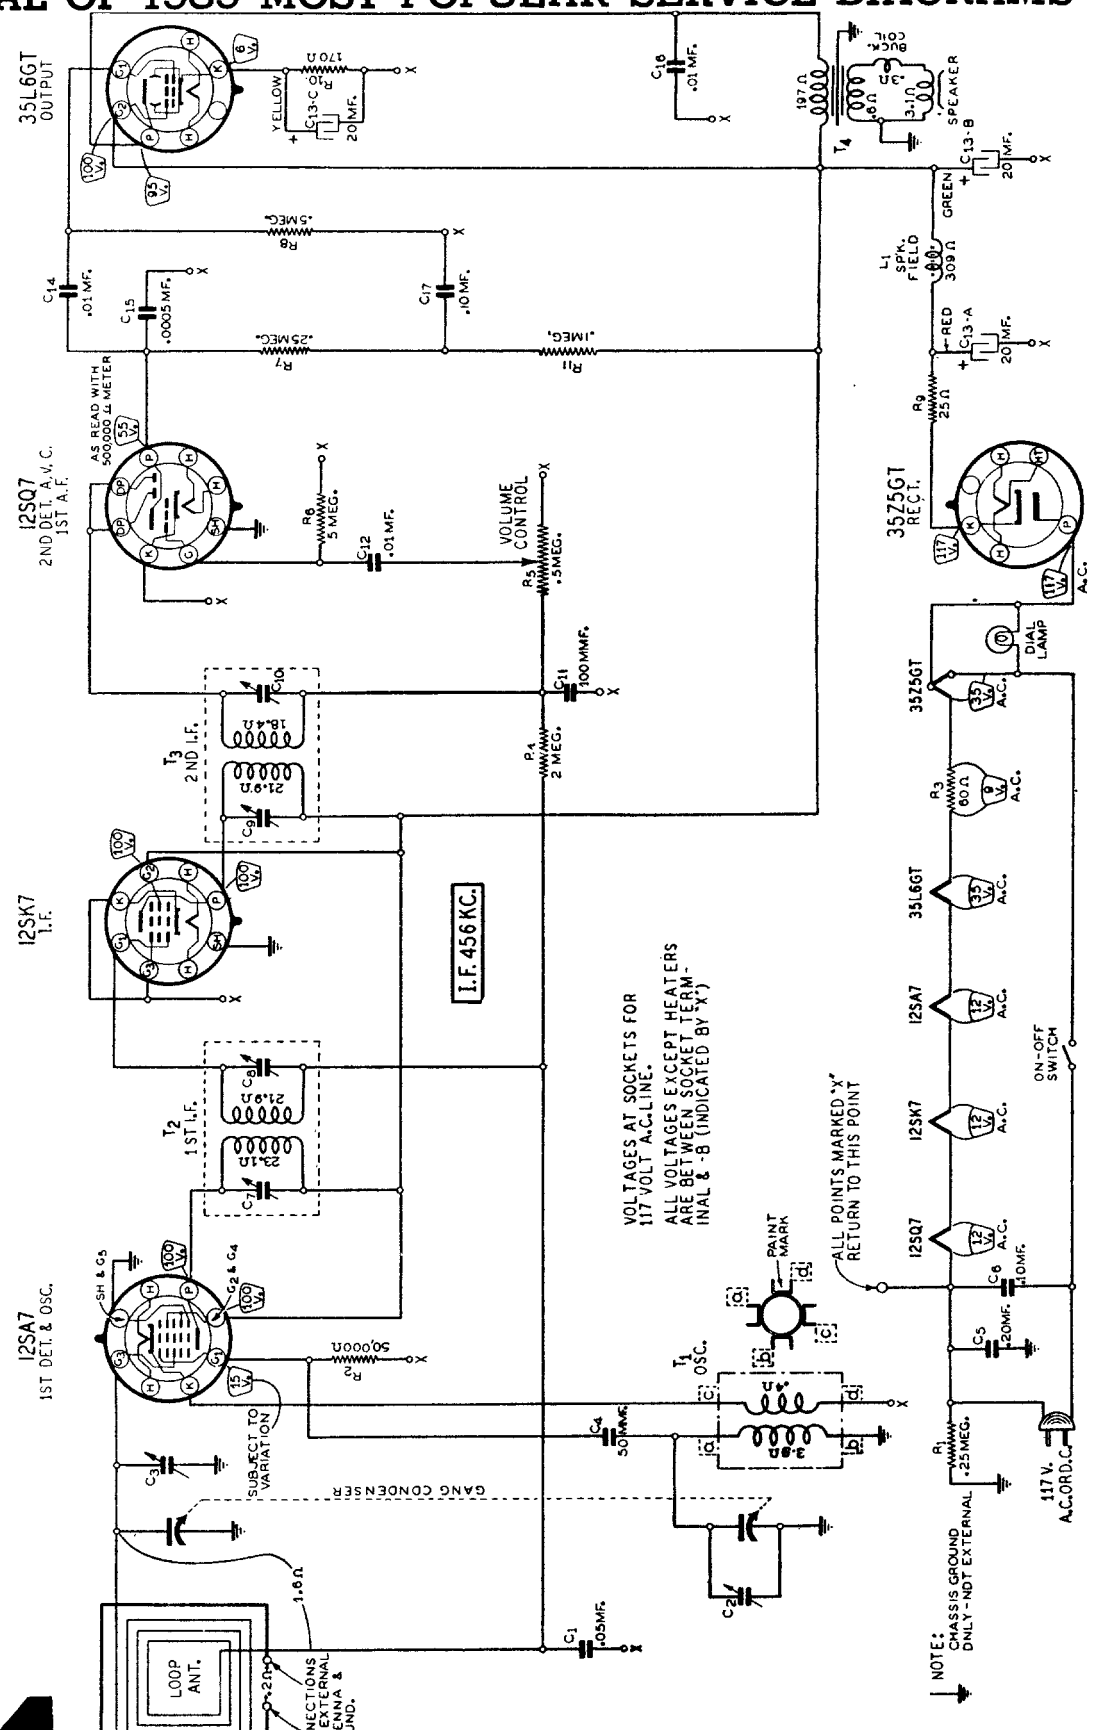


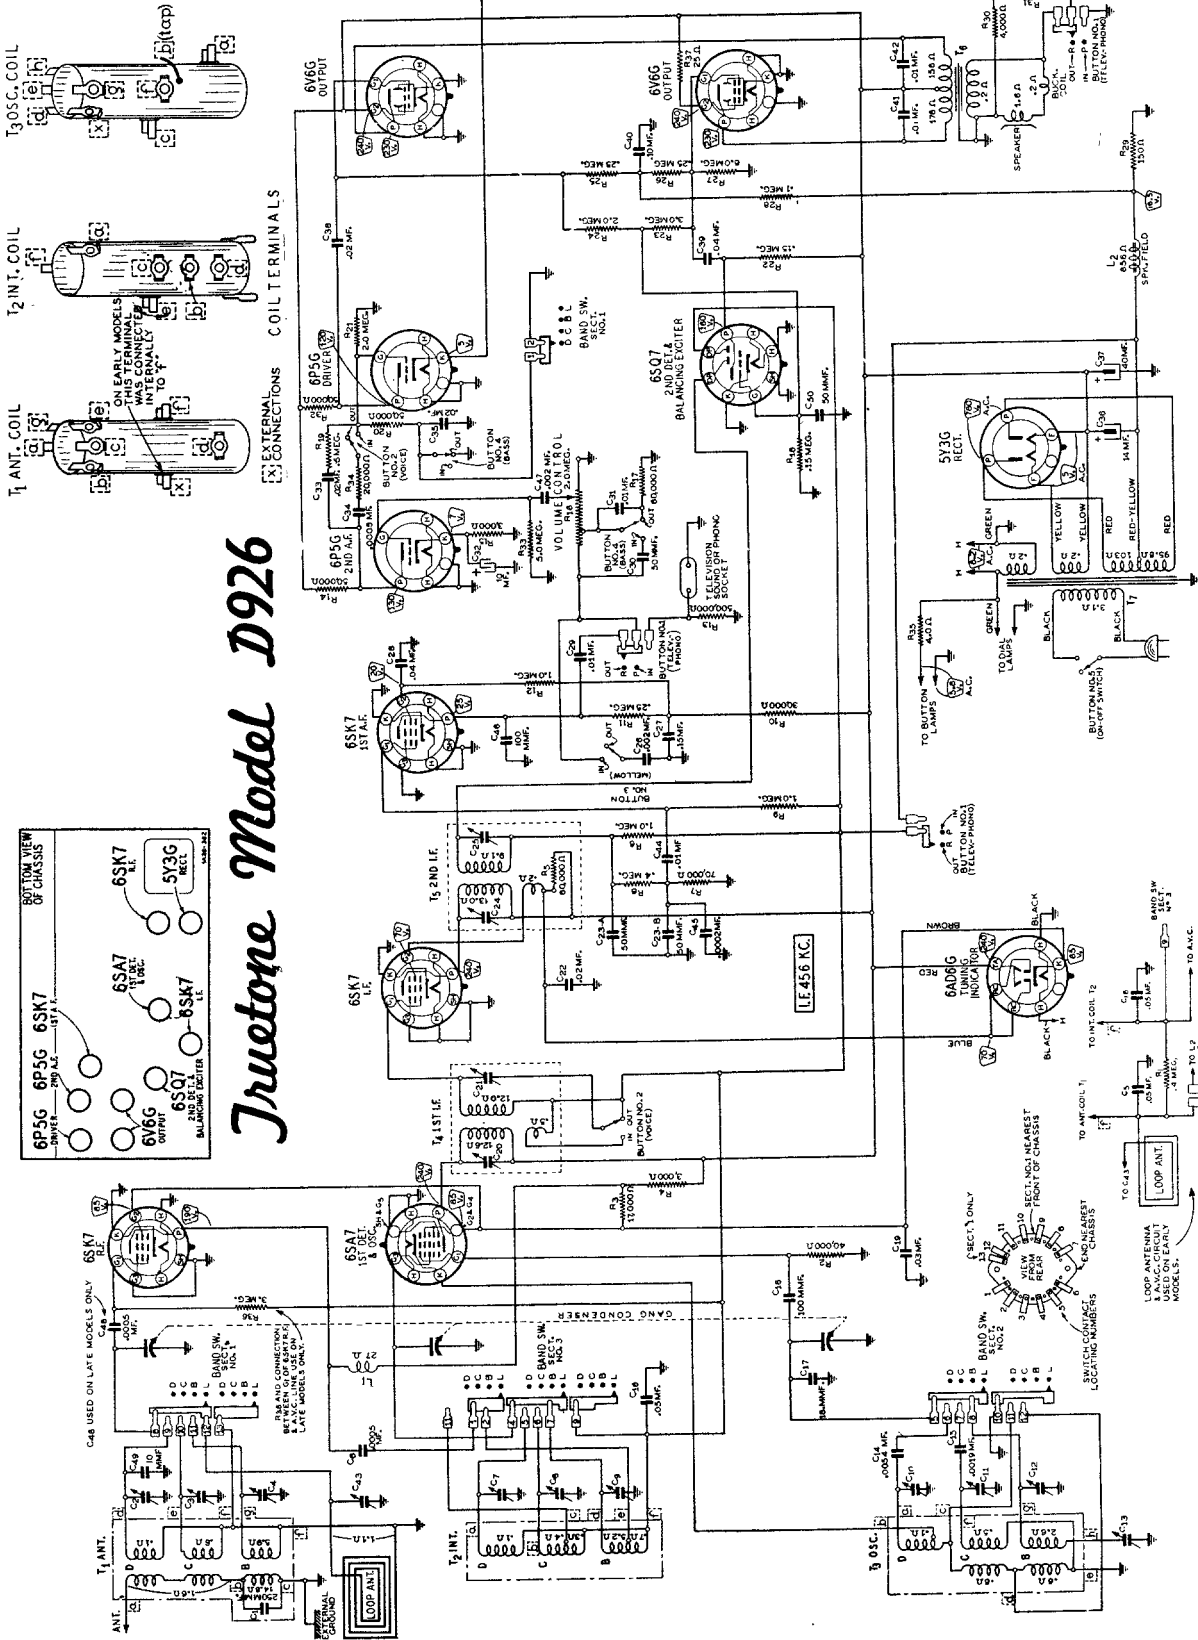

Truetone Model D926

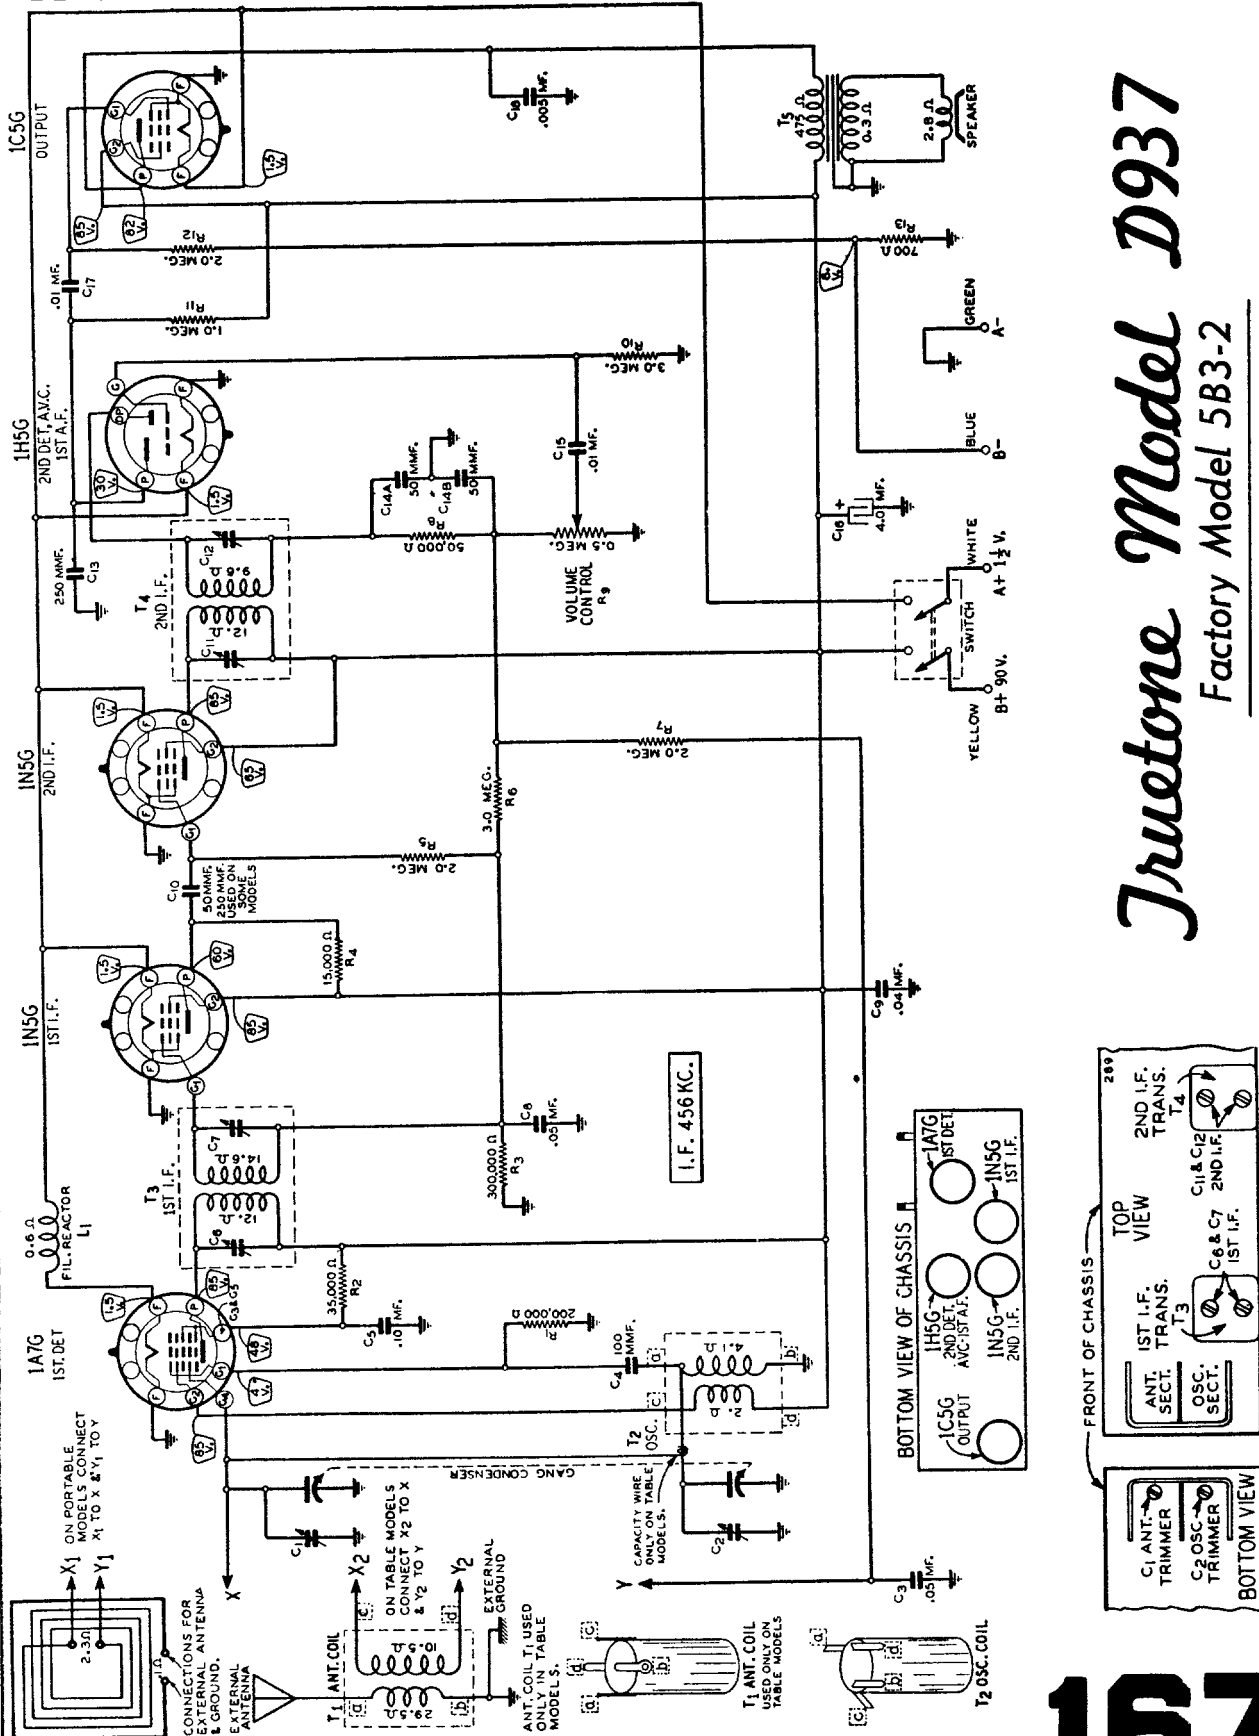

Truetone Model D937
Factory Model 5B3-2

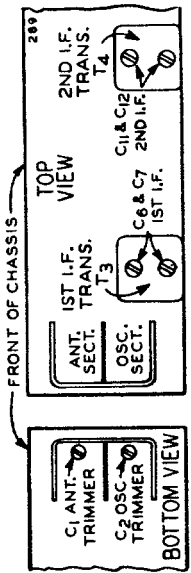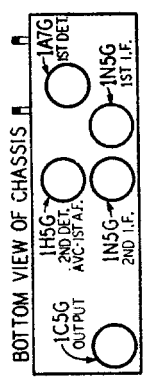

167


Westinghouse Radio Model WR-165

Five-Tube, Single-Band, AC-DC, Superheterodyne Receiver

Alignment Procedure

Output Meter Alignment.—Connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—Connect the low side of the test-oscillator to the receiver chassis, through a .01 mfd. capacitor, and keep the output as low as possible. The antenna should be rolled up and kept at least one foot from chassis during alignment.

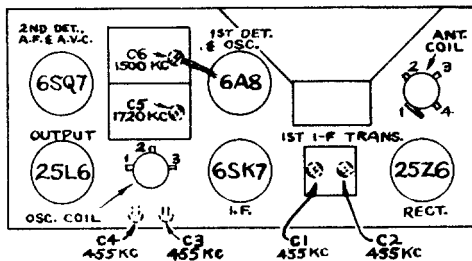

Trimmer Locations


Steps	Connect the high side of test-oscillator to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output—
1	6A8 1st-Det. grid cap, in series with .01 mfd.	455 kc	Quiet point at 1,600 kc end of dial	C1, C2, C3, C4 (1st and 2nd I-F transformers)
2	Antenna term. of ant. trans. in series with 100 mmfd.	1,720 kc	Full clockwise (out of mesh)	C5 (oscillator)
3		1,500 kc	Resonance on 1,500 kc signal.	C6 (antenna)

INTERMEDIATE FREQUENCY..... 455 kc
 POWER OUTPUT (125 volt, 60 cycle supply)
 Undistorted..... 1.5 watts
 Maximum..... 2.0 watts
 LOUDSPEAKER
 Type..... 4-inch Electrodynamic


Power-Supply Polarity.—For operation on d-c, the power plug must be inserted in the outlet for correct polarity. If the set does not function, reverse the plug. On a-c, reversal of the plug may reduce hum.

Resistor in Power Cord.—The power cord contains a resistor which becomes warm during operation.

Antenna.—The set is equipped with length of antenna wire. Do not connect the antenna to ground. If an outdoor antenna is used, it should not be longer than 100 feet, including lead-in. If it is longer, connect a 100 to 200 mmf. capacitor in series with the lead-in.


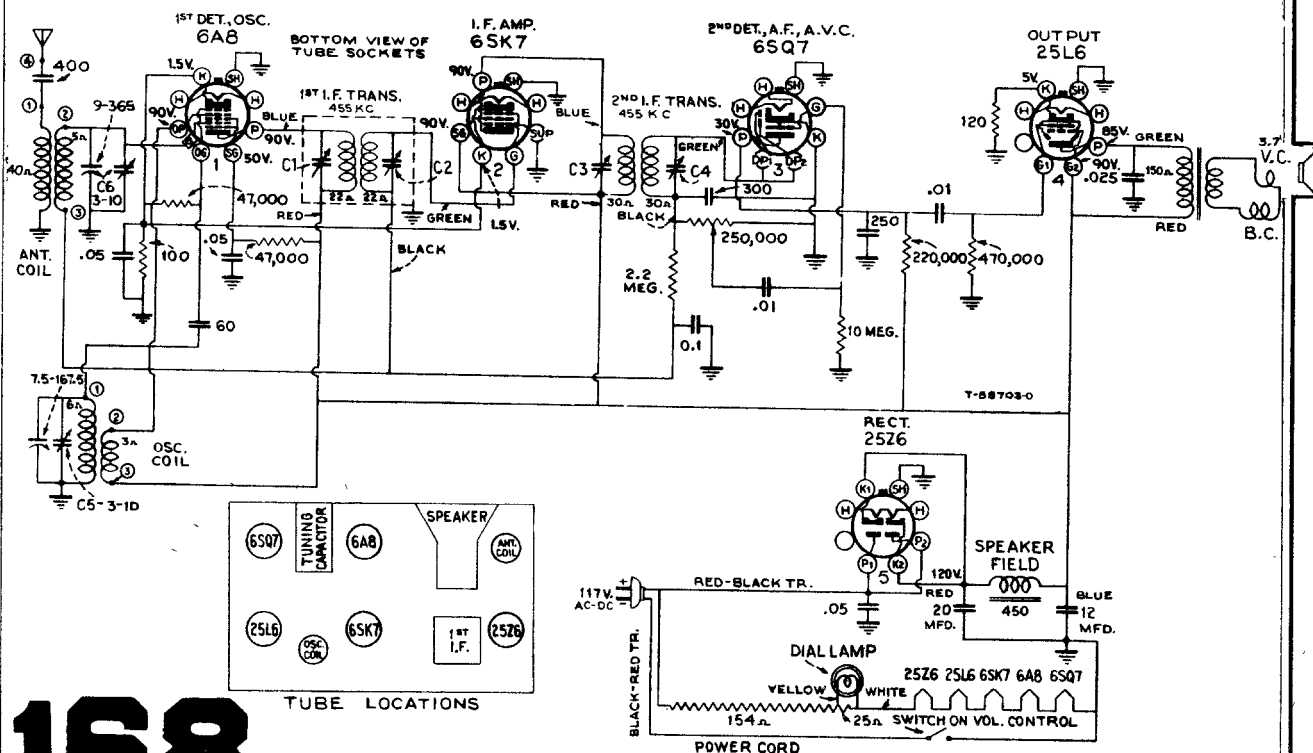


MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

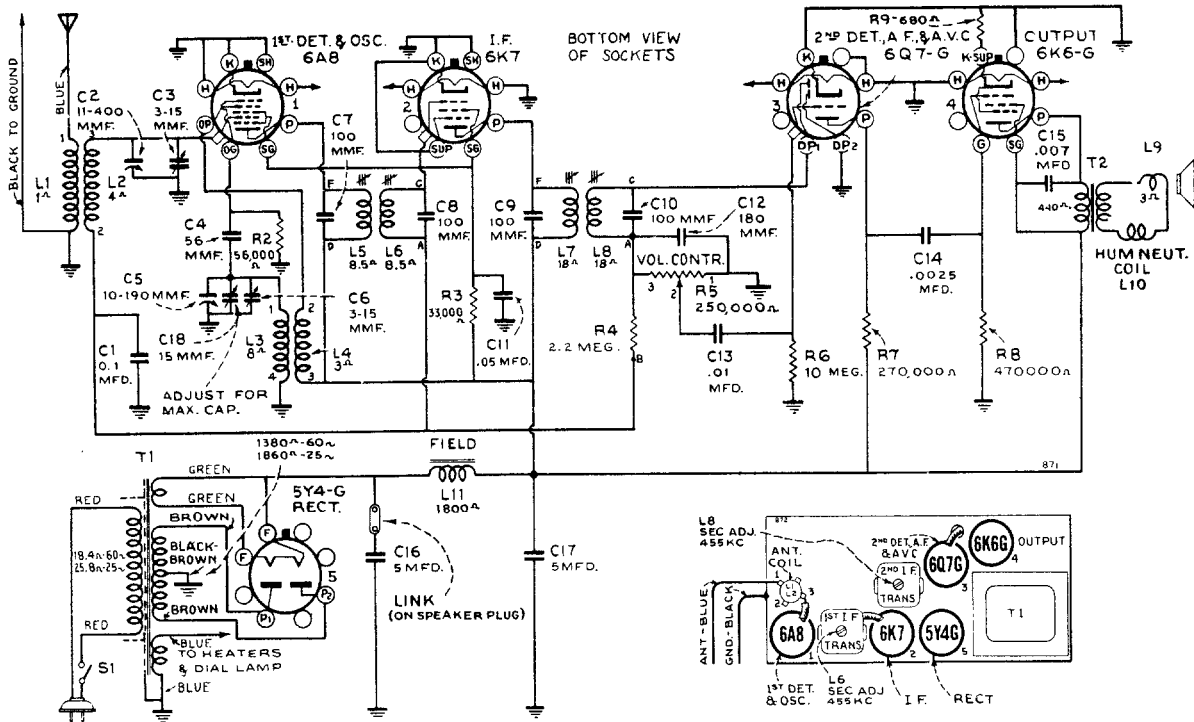


Model WR-256

Five-Tube, Single-Band, Superheterodyne Receiver

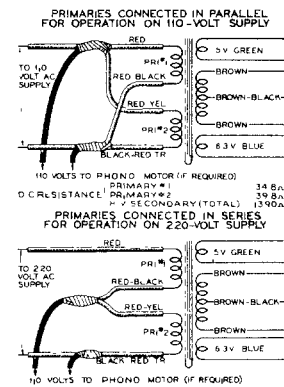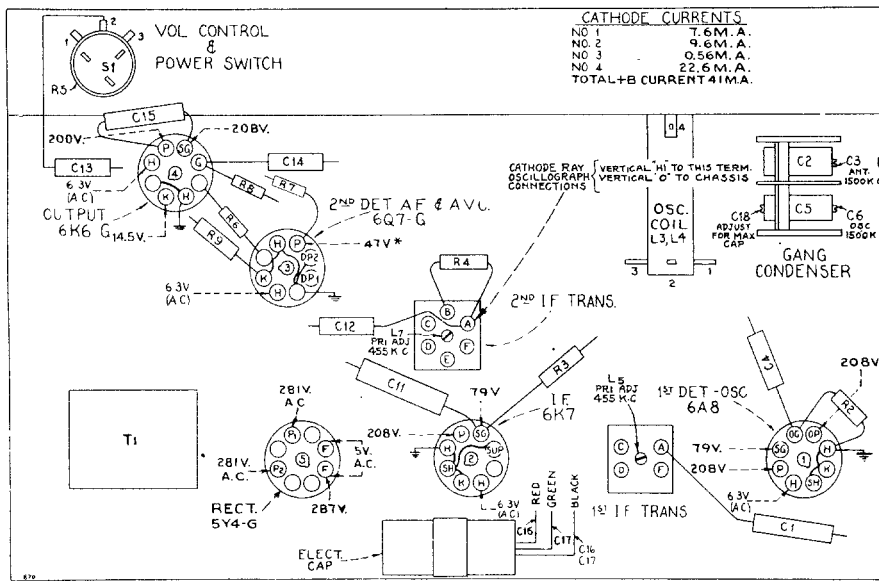

Connections for No. 30888 Transformer

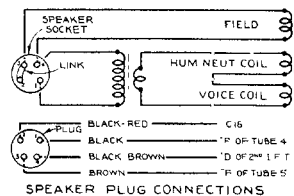

Tube Socket Voltages and Location of Parts

* Note: Values with star (*) are operating voltages. Values not starred are actual measured voltages.


Measurements made to chassis unless otherwise indicated. Measurements made with set tuned to quiet point, volume control at minimum, using 1,000-ohm-per-volt meter, having ranges of 10, 50, 250, and 500 volts. (Use nearest range above the specified measured voltage.) Values should hold within approximately $\pm 20\%$ for 117-volt 60-cycle supply.

WESTINGHOUSE
ELECTRIC SUPPLY COMPANY

169

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS


MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

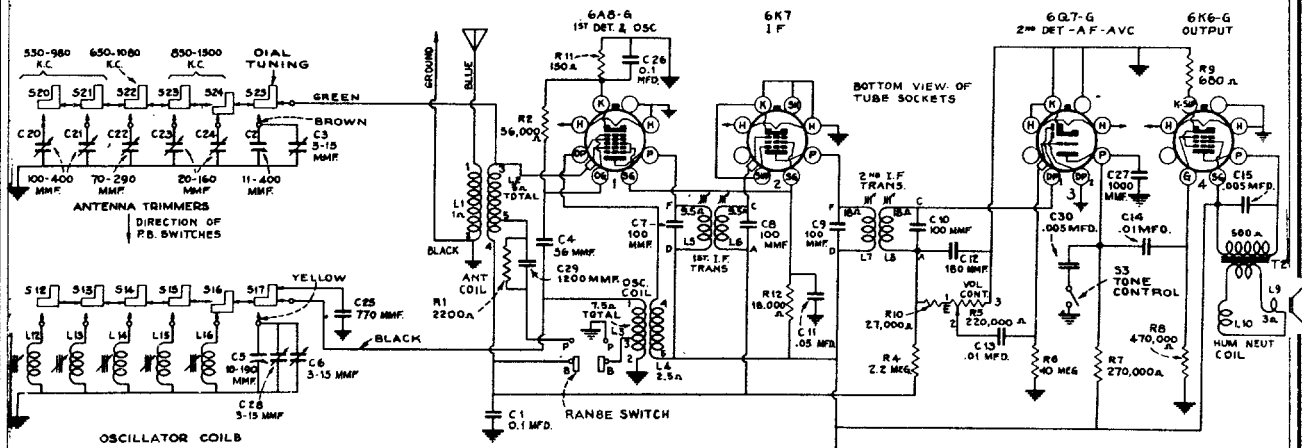

WR-258 WR-260

**Westinghouse
Radio**

Model WR-260 employs all features of the WR-258 and in addition has a tuning band covering from 1,550 to 3,500 kc for aviation and police reception. It also has a two-point tone control.

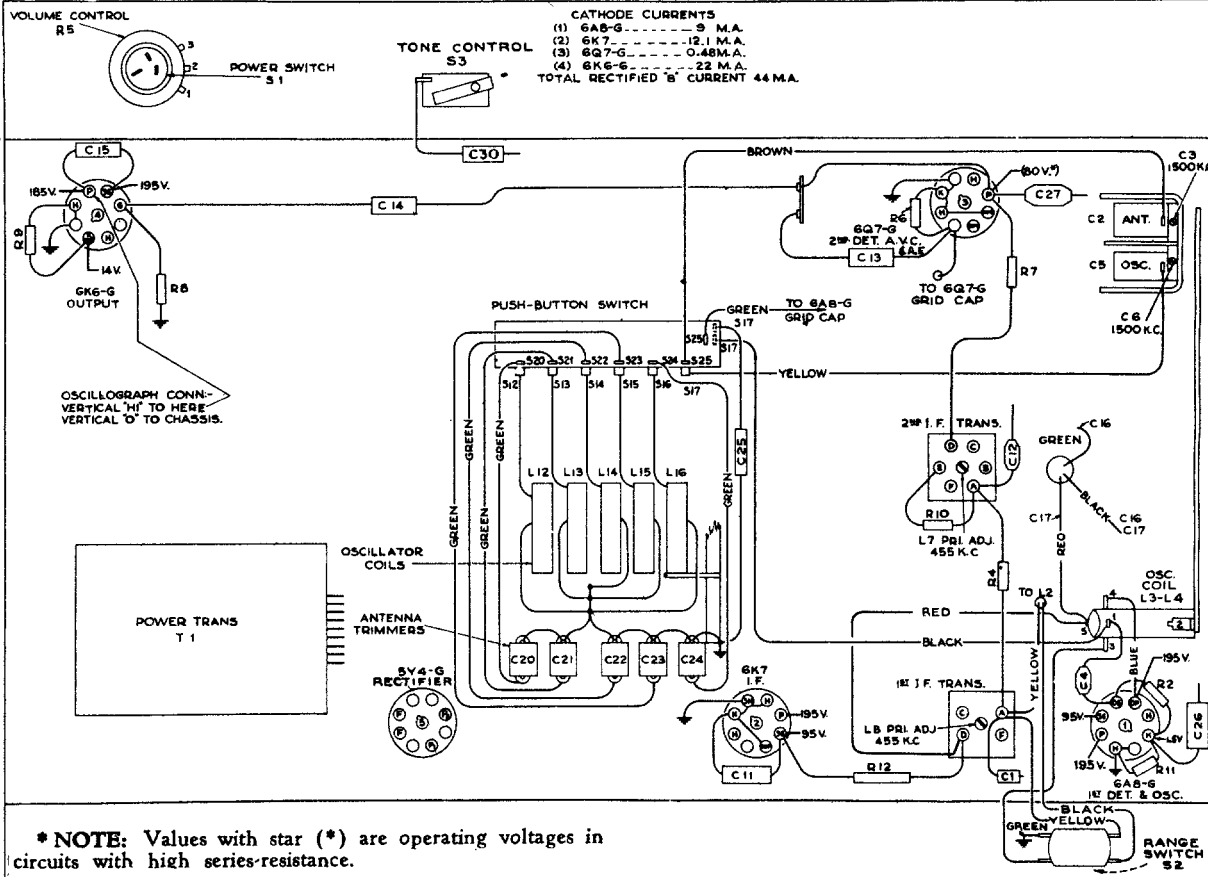


NOTE: Values with star () are operating voltages in circuits with high series-resistance.

WR-260 Bottom View of Chassis Showing Socket Voltages, Parts Location, and R-F Wiring

Measurements made to chassis unless otherwise indicated, with set tuned to quiet point and volume control at minimum. Values should hold within approximately $\pm 20\%$ with 117-volt a-c supply.

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

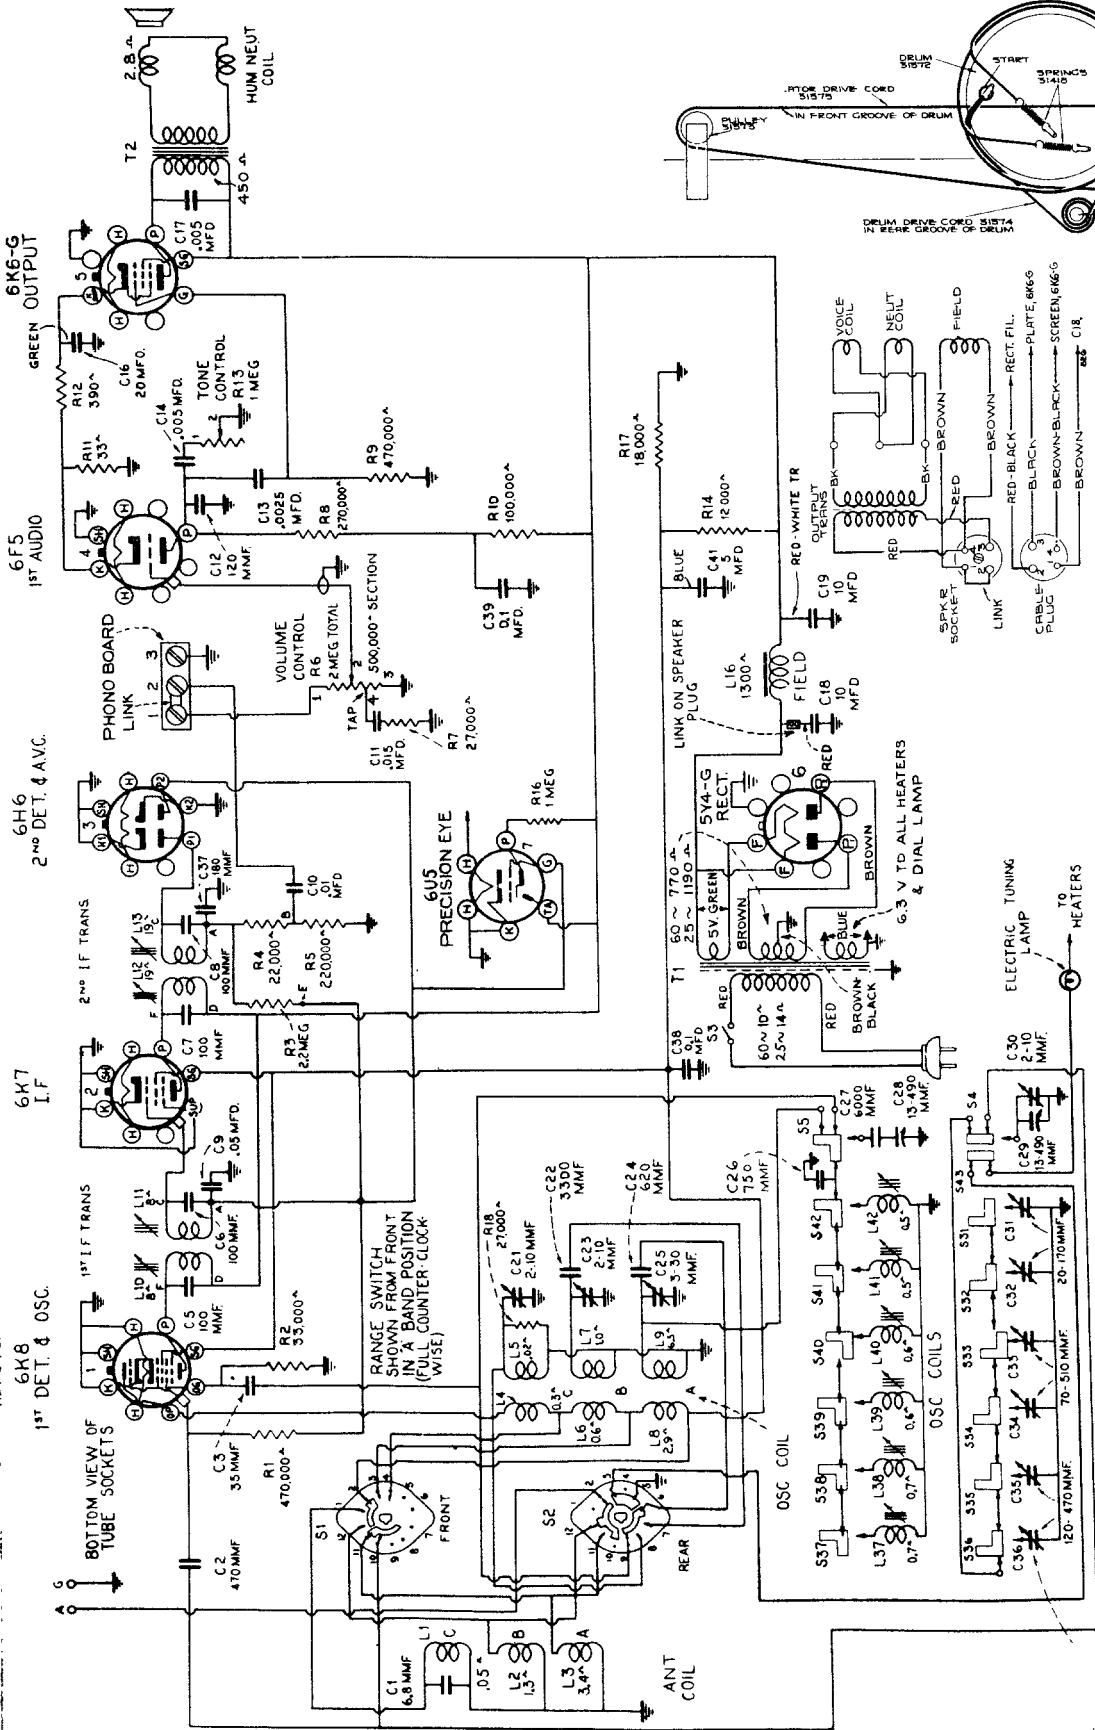

Westinghouse Radio Model WR-264

Loudspeaker Wiring

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown in the chassis drawing.


Output Meter Alignment.—If this method is used, connect the meter across the voice-coil, and turn the receiver volume control to maximum.

Test-Oscillator.—For all alignment operations, connect the low side of the test-oscillator to the receiver chassis, and keep the output as low as possible to avoid a-v-c action.

Calibration Scale on Indicator - Drive - Cord Drum.—The tuning dial is fastened in the cabinet and cannot be used for reference during alignment, therefore, a calibration scale is attached to the rear of the drum which is mounted on the front shaft of the gang condenser. The setting of the gang condenser is read on this scale, which is calibrated in degrees. The correct setting of the gang in degrees, for each alignment frequency, is given in the alignment table.

As the first step in r-f alignment, check the position of the drum. The 180° mark on the drum scale must be vertical, and directly over the center of the gang-condenser shaft when the plates are fully meshed. The distance from the front of the chassis to the drum must not exceed 3/8-inch. The drum is held to the shaft by means of two set screws, which must be tightened securely when the drum is in the correct position.

Pointer for Calibration Scale.—Improve a pointer for the calibration scale by fastening a piece of wire to the gang-condenser frame, and bend the wire so that it points to the "180°" mark on the calibration scale when the plates are fully meshed.

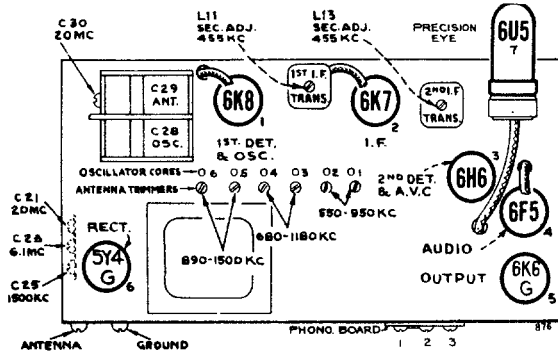

Tube and Trimmer Locations

Dial-Indicator Adjustment.—After fastening the chassis in the cabinet, attach the dial indicator to the drive cable with indicator at the 530 kc mark, and gang condenser fully meshed. The indicator has a spring clip for attachment to the cable.

After completion of alignment, seal the i-f core-adjusting screws with household cement.

The dial tuning (right hand) push button must be pushed in for steps 1 to 5 inclusive.

Steps	Connect the high side of test-osc. to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output
1	6K7 I-F grid cap, in series with .01 mfd.	455 kc	"A" band, Quiet Point between 560-750 kc	L12 and L13 (2nd I-F Trans.)
2	6K8 det. grid cap, in series with .01 mfd.	455 kc	20 mc (23°) "C" band	L10 and L11 (1st I-F Trans.)
3	Antenna Terminal, in series with 400 ohms	20 mc	6.1 mc (31°) "B" band	C21 (osc.)* C30 (ant.):**
4	Antenna Terminal, in series with 400 ohms	6.1 mc	1,500 kc (28½°) "A" band	C23 (osc.)†
5	Antenna Terminal, in series with 200 mmf.	1,500 kc	C25 (osc.)	
6	Follow "Adjustments for Electric Tuning"			

* Use minimum capacity peak if two peaks can be obtained.

** Rock gang slightly and use maximum capacity peak if two peaks can be obtained with C30. Check to determine that C21 has been adjusted to the correct peak by tuning to approximately 28° (19.09 mc), where a weaker signal should be received.

† Use minimum capacity peak if two peaks can be obtained. Check to determine that C23 has been adjusted to the correct peak by turning to approximately 49° (5.19 mc), at which point a weaker signal should be received.

ADJUSTMENTS FOR ELECTRIC TUNING

This receiver has seven push buttons. The right-hand button connects the gang condenser for manual tuning. The other six buttons are for electric tuning of six different stations in the standard-broadcast range. The station buttons connect to separate permeability tuned oscillator coils and separate antenna trimmers which must be adjusted for the


desired stations. Use an insulated screwdriver or alignment tool for making adjustments. Allow at least five minutes warm-up period before making adjustments.

The procedure is as follows:

1. Make a list of the desired six stations, arranged in order from low to high frequencies. See "Tube and Trimmer Locations" view for frequency coverage of each button.
2. Push in the dial-tuning button, and manually tune in the first station on the list.
3. Push in station button No. 1 (left) and adjust No. 1 oscillator core (L37) to receive this station. Screw the core all the way in, to lowest frequency, and then unscrew slowly until station is received.
4. Adjust No. 1 antenna trimmer (C36) for maximum output on this station.

Clockwise adjustment of cores and trimmers tunes the circuits to lower frequencies.

5. Adjust for each of the remaining five stations in the same manner.
6. Make a final careful adjustment of the oscillator cores and antenna trimmers. Use the Precision Eye to ensure sharp peaking.

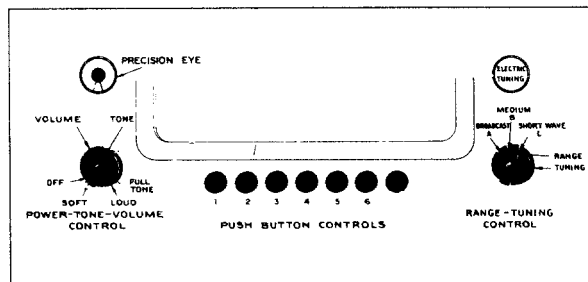


172

Westinghouse
Model WR-264

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

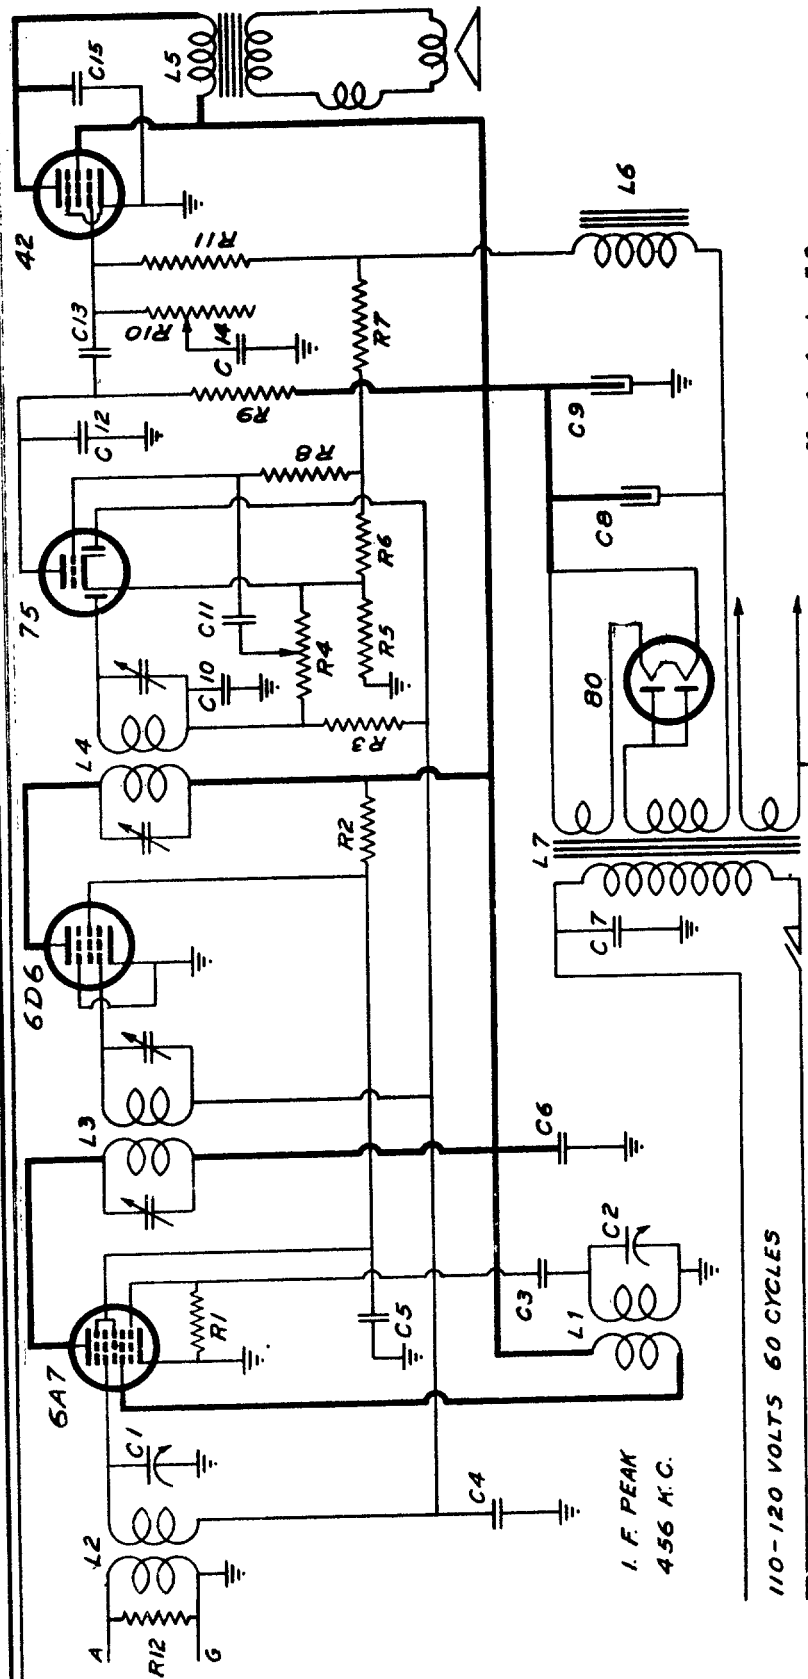


Model A-52

Wilcox-Gay Corporation, Charlotte, Mich.

CODE OF SCHEMATIC DIAGRAM

SOCKET LAYOUT

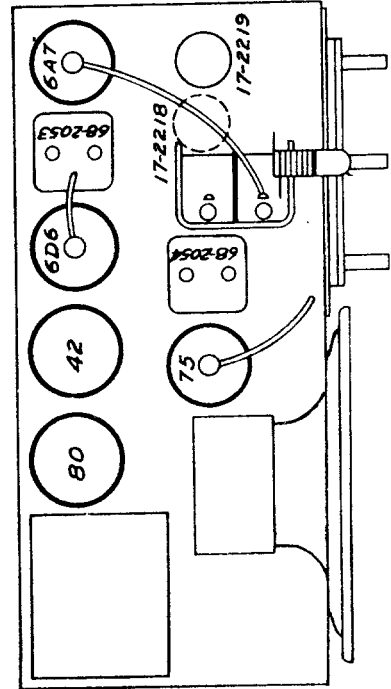

COND. (Cont.)

C7	75-2003	.01 Mfd. 400 V. Paper Cond.
C8	18-2014	8 Mfd. 300 W.V. Electro. Cond.
C9	18-2013	4 Mfd. 300 W.V. Electro. Cond.
C10	78-307	.0005 Mfd. Mica Condenser
C11	75-2003	.01 Mfd. 400 V. Paper Cond.
C12	75-2014	.001 Mfd. 600 V. Paper Cond.
C13	75-2003	.01 Mfd. 400 V. Paper Cond.
C14	75-2003	.01 Mfd. 400 V. Paper Cond.
C15	75-2002	.004 Mfd. 600 V. Paper Cond.

RESISTORS

R1	55-898	50,000 Ohm 1/4 Watt Resistor
R2	55-941	20,000 Ohm 1/4 Watt Resistor
R3	55-926	1 Meg Ohm 1/4 Watt Resistor
R4	19-2007	500,000 Ohm Vol. Cont. & Switch
R5	55-2019	60 Ohm } Candolum Resistor
R6	55-2019	240 Ohm }
R7	55-925	500,000 Ohm 1/4 Watt Resistor
R8	55-924	250,000 Ohm 1/4 Watt Resistor
R9	19-2009	250,000 Ohm Tone Control
R10	55-925	500,000 Ohm 1/4 Watt Resistor
R11	55-925	500,000 Ohm 1/4 Watt Resistor
R12	55-925	100,000 Ohm 1/4 Watt Resistor


CONDENSERS

C1, C2	77-2014	Two Gang Variable Condenser
C3	76-2002	50 Mfd. Mica Condenser
C4	75-2005	.1 Mfd. 200 V. Paper Condenser
C5	75-2005	.1 Mfd. 200 V. Paper Condenser
C6	76-2005	.1 Mfd. 200 V. Paper Condenser

INDUCTANCES

L1	17-2218	Oscillator Coil Assembly
L2	17-2219	Prescaler Coil Assembly
L3	66-2053	First I.F. Trans. Assembly
L4	66-2054	Second I.F. Trans. Assembly
L5	64-2057	6 1/2" Speaker, Output Trans. for 442 Tube
L6	64-2057	150 Ohm Speaker Field
L7	80-2009	Power Transformer

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

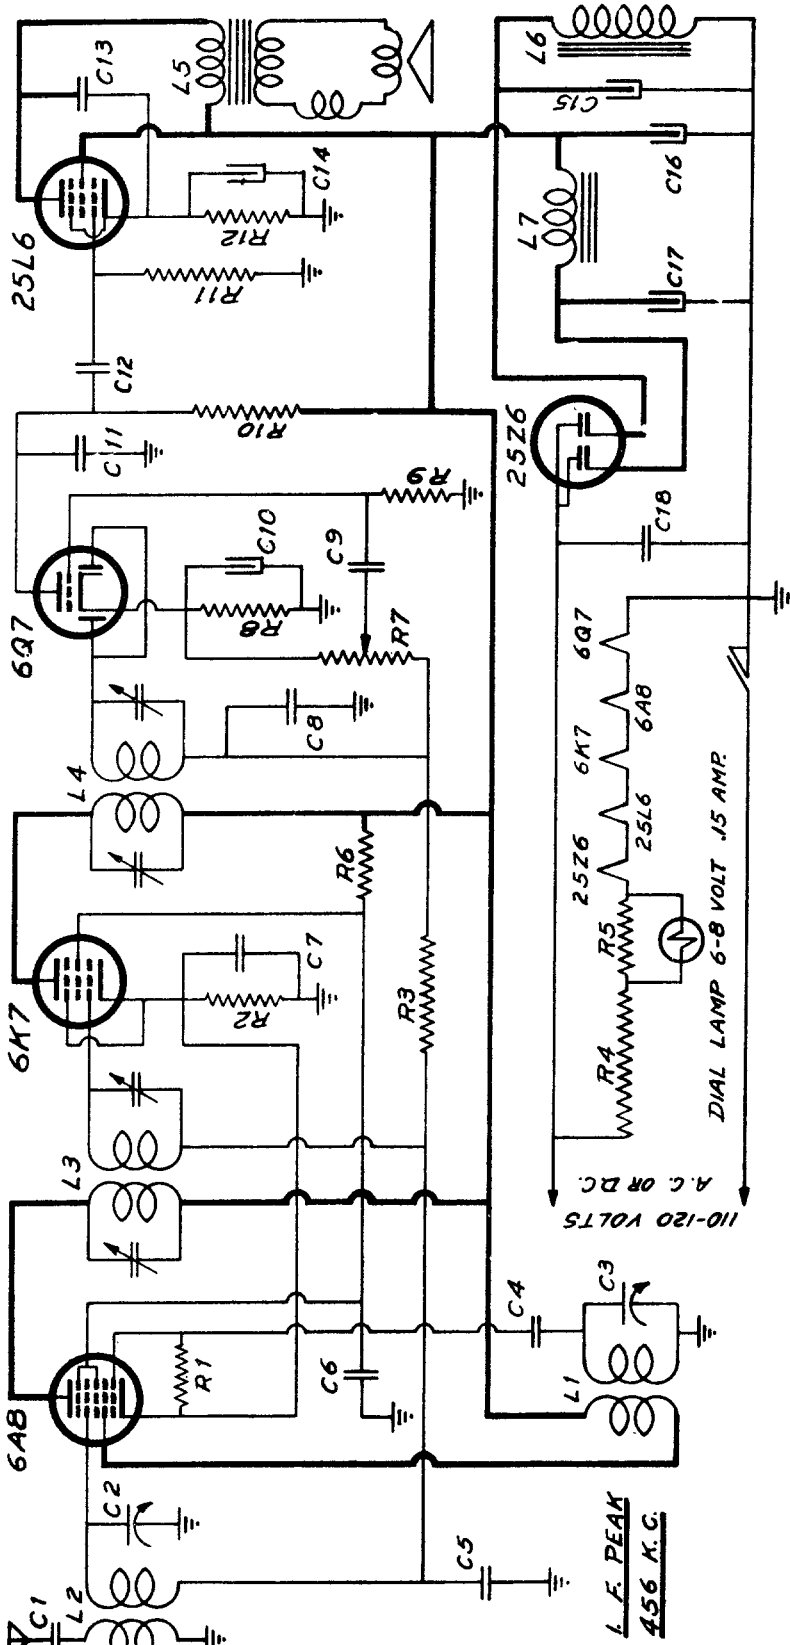

Wilcox-Gay Corporation, Charlotte, Mich.

Model 1 A-53
COND. (Cont.)

RESISTORS

R1	58-386	50,000 Ohm	1/4 Watt Resistor
R2	58-1062	250 Ohm	1/2 Watt Resistor
R3	58-928	1 Meg Ohm	1/4 Watt Resistor
R4	20-2011	154 Ohm	1/4 Watt Resistor
R5	58-2018	26 Ohm	2.54 Watt Resistor
R6	58-1042	25,000 Ohm	1/4 Watt Resistor
R7	19-2012	500,000 Ohm	Volume Cont. & Switch
R8	58-913	5,000 Ohm	1/4 Watt Resistor
R9	58-925	500,000 Ohm	1/4 Watt Resistor
R10	58-924	250,000 Ohm	1/4 Watt Resistor
R11	58-925	500,000 Ohm	1/4 Watt Resistor
R12	58-2014	200 Ohm	1/4 Watt Resistor

CONDENSERS


C1	75-2003	.01 Mfd	400 V. Paper Cond.
C2	CS 77-2015	Two Gaus	Variable Condenser
C3	75-2002	.00005 Mfd	Micro Condenser
C4	75-2005	.1 Mfd	200 V. Paper Cond.
C5	75-2005	.1 Mfd	200 V. Paper Cond.
C6	75-2005	.1 Mfd	200 V. Paper Cond.
C7	75-2005	.1 Mfd	200 V. Paper Cond.
C8	76-307	.0005 Mfd	Micro Condenser
C9	75-2003	.01 Mfd	400 V. Paper Cond.
C10	15-2012	10 Mfd	25 W. V. Dry Elect. Cond.
C11	75-2014	.001 Mfd	600 V. Paper Cond.
C12	75-2003	.01 Mfd	400 V. Paper Cond.
C13	75-2001	.002 Mfd	600 V. Paper Cond.
C14	18-2012	10 Mfd	25 W. V. Dry Elect. Cond.

C15	19-2011	8 Mfd	150 W. V. Dry Elect. Cond.
C16	19-2011	8 Mfd	150 W. V. Dry Elect. Cond.
C17	13-2010	15 Mfd	150 W. V. Dry Elect. Cond.
C18	75-2005	.1 Mfd	200 V. Paper Condenser
L1	17-2232	Oscillator Coil Assembly	
L2	17-2230	Preselector Coil Assembly	
L3	68-2035	First I.F. Trans. Assembly	
L4	68-2032	Second I.F. Trans. Assembly	
L5	64-2043	5" Speaker, Output Trans. for 25L6 Tube	
L6	64-2043	3000 Ohm Field on L5	
L7	14-2502	1 1/2 Henry Filter Choke	

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

Models 4K310, 4K331, 4K355


CHASSIS No. 5412

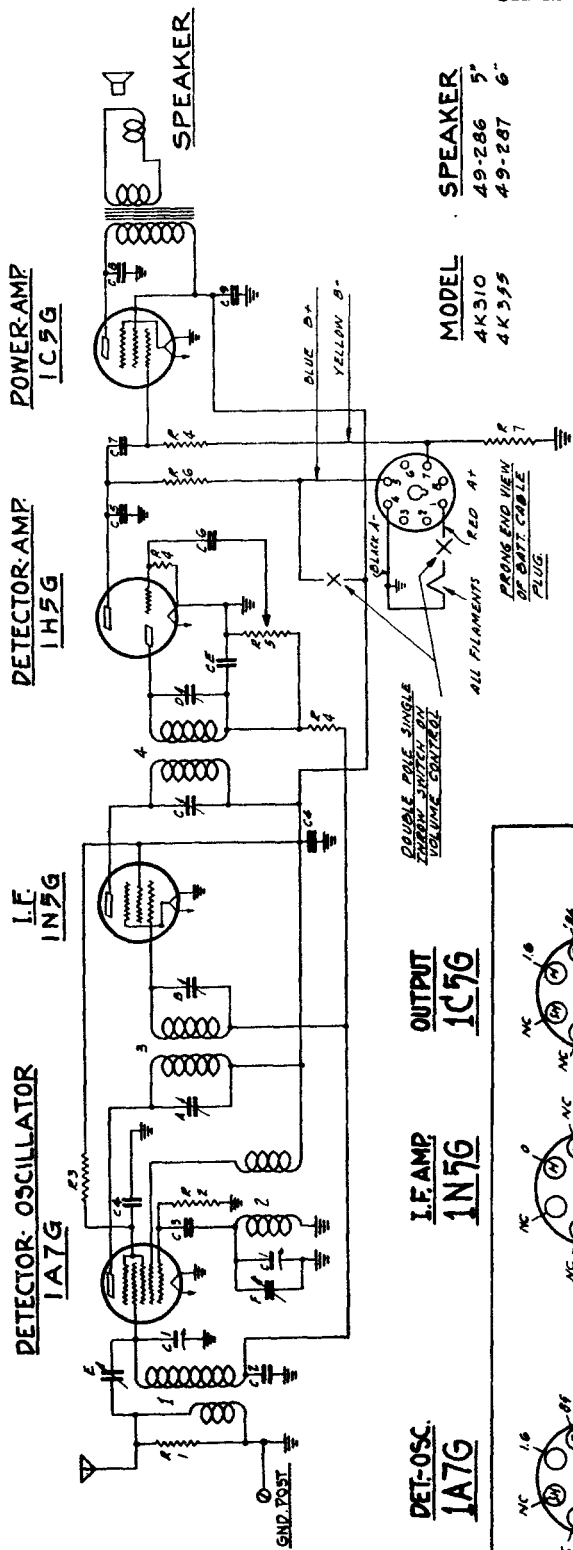


MODEL	SPEAKER
4K310	49-286 5"
4K331	49-287 6"

DWG. NO.	PART NO.	DESCRIPTION
1	5-6786	ANTENNA COIL ASSEMBLY
2	5-6361	OSCILLATOR COIL ASSEMBLY
3	95-513	1ST. I.F. TRANSFORMER
4	95-280	2ND. I.F. TRANSFORMER
		SPEAKER TRANS. (ON SPEAKER)
A		1ST. I.F. TRANS. PRIMARY
B		1ST. I.F. TRANS. SECONDARY
C		2ND. I.F. TRANS. PRIMARY
D		2ND. I.F. TRANS. SECONDARY
E		ANTENNA TUNING
F	28-308	BROADCAST OSC. (ON GRING)

DWG. NO.	PART NO.	DESCRIPTION
C-1	22-178	2 GANG VARIABLE
C-2	22-250	.05 MFD
C-3	22-192	.0005 MFD
C-4	22-212	.05 MFD
C-5	22-162	.001 MFD
C-6	22-223	.01 MFD
C-7	22-143	.001 MFD
C-8	22-148	.001 MFD
C-9	22-684	5MFD 50V. ELER.
R-1	63-587	4700 OHM
R-2	63-654	180 M OHM
R-3	63-594	88 M OHM
R-4	63-600	2.2 MEG OHM
R-5	63-937	400 M OHM VOL. CONTR. SWAR
R-6	63-271	1 MEG OHM
R-7	63-288	1000 OHM

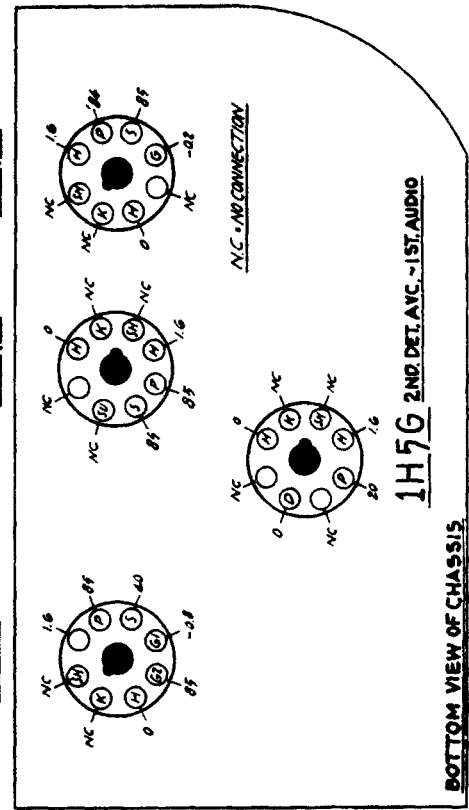


BOTTOM VIEW OF CHASSIS
FRONT OF CHASSIS

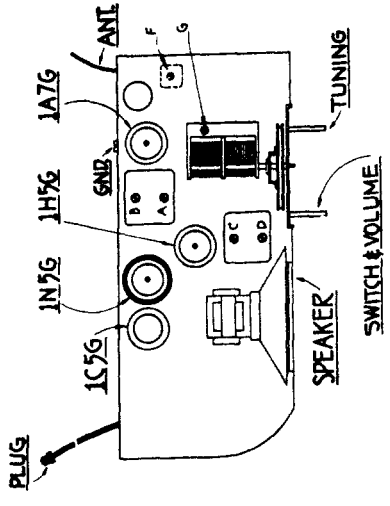

I.F. FREQUENCY 4.55 K. G.
 4 TUBE BATTERY SUPERHETERODYNE
 CHASSIS NO. 5412
 ZENITH RADIO CORPORATION
 CHICAGO ILLINOIS

All voltages measured from point indicated to chassis using a 1000 ohm per volt meter.
 Antenna disconnected — volume control at minimum and condenser plates in full mesh.

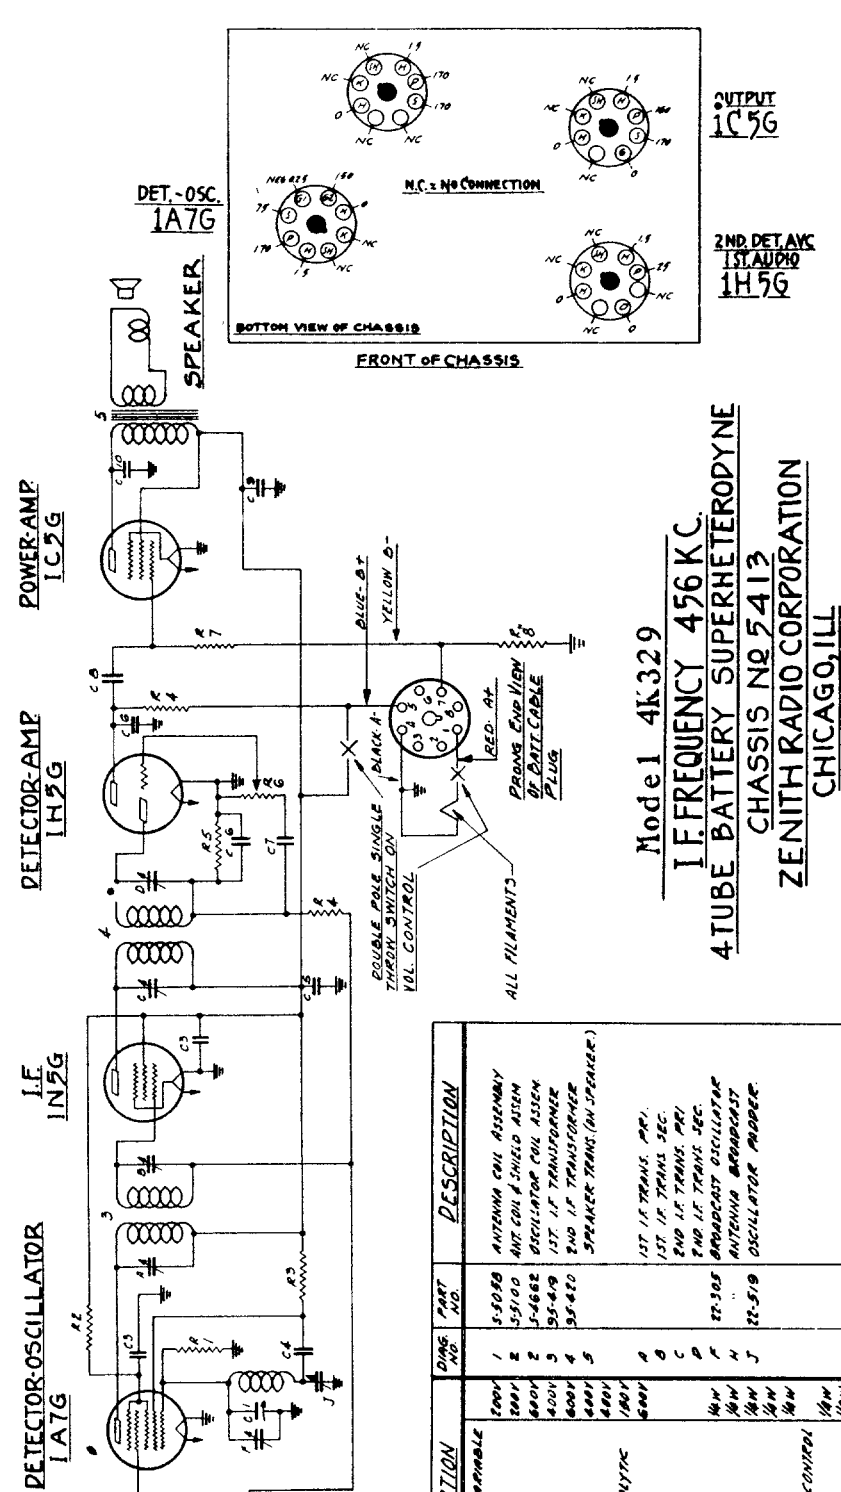


DET.-OSC
1A7G

POWER-AMP
1C2G

DETECTOR-AMP
1H2G

I.F.
1N2G

DETECTOR-OSCILLATOR
1A7G

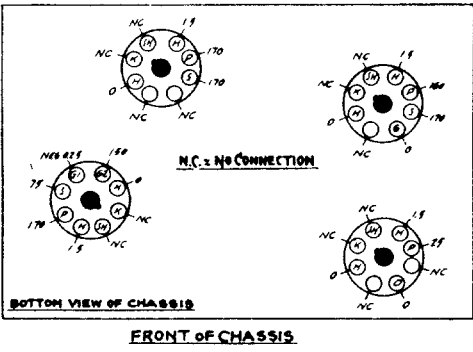

BOTTOM VIEW OF CHASSIS


FRONT OF CHASSIS

OUTPUT
1C2G

2ND DET-AMP
1H2G

Model 4K329
I.F. FREQUENCY 456 KC.
4-TUBE BATTERY SUPERHETERODYNE
CHASSIS NO 5413
ZENITH RADIO CORPORATION
CHICAGO, ILL.

COMP. NO.	PART NO.	DESCRIPTION	DWG. NO.	PART NO.	DESCRIPTION
C-1	22-650	TWO GANG VARIABLE	1	1-5090	ANTENNA COIL ASSEMBLY
C-2	22-280	.05 MFD	2	55-100	ANT. COIL & SHIELD ASSEM
C-3	22-109	.5 MFD	3	1-4662	OSCILLATOR COIL ASSEM
C-4	22-356	.002 MFD	4	15-4-9	1ST. I.F. TRANSFORMER
C-5	22-212	.05 MFD	5	15-4-20	2ND I.F. TRANSFORMER
C-6	22-162	.0001 MFD	6		SPEAKER TRANS. (ON SPEAKER)
C-7	22-327	.02 MFD	7		
C-8	22-100	.02 MFD	8		
C-9	22-604	8 MFD ELECTROLYTIC	9		
C-10	22-492	.002 MFD	10		
R-1	63-325	150 M OHM	A		1ST. I.F. TRANS. PRI.
R-2	63-594	68 M OHM	B		1ST. I.F. TRANS. SEC.
R-3	63-590	5600 OHM	C		2ND I.F. TRANS. PRI
R-4	63-271	1 MEGOHM	D		2ND I.F. TRANS. SEC.
R-5	63-590	390 M OHM	E		ANTENNA IMPEDANCE
R-6	63-548	1 MEGOHM VOL CONTROL	F		OSCILLATOR PADDER.
R-7	63-500	22 MEGOHM	G		
R-8	63-238	1000 OHM	H		
			J		

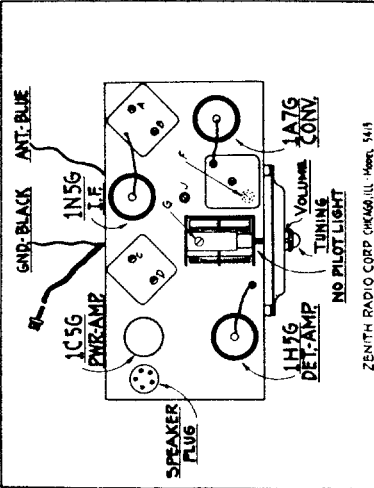



Location of tubes and trimmers

ALIGNMENT PROCEDURE

Operation	Connect Test Oscillator to—	Dummy Antenna	Set Test Osc. Jo	Band	Set Dial At	Adjust Trimmers	Purpose
1	1st Det. Grid	1/2 Mmfd.	456	Br'dc't	600	ABCD	I. F. Algm't.
2	Rec. Ant. Lead	200 Mmfd.	1500	"	1500	F	Set Osc. to Scale
3	"	200 Mmfd.	1500	"	1500	G	Algm't of Ant.
4	"	200 Mmfd.	600	"	600	J	Rock gang & adj. for max. output
5	"	200 Mmfd.	1500	"	1500	FG	Rpt. 3 & 4

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

Model 6D315. Chassis No. 5657

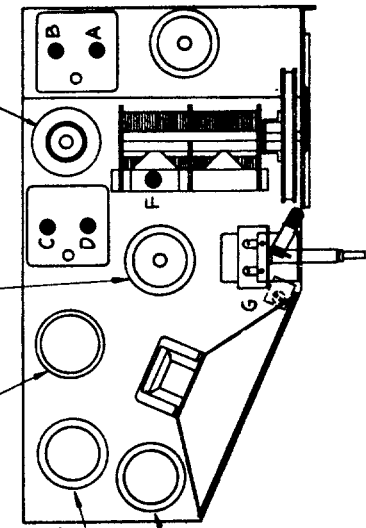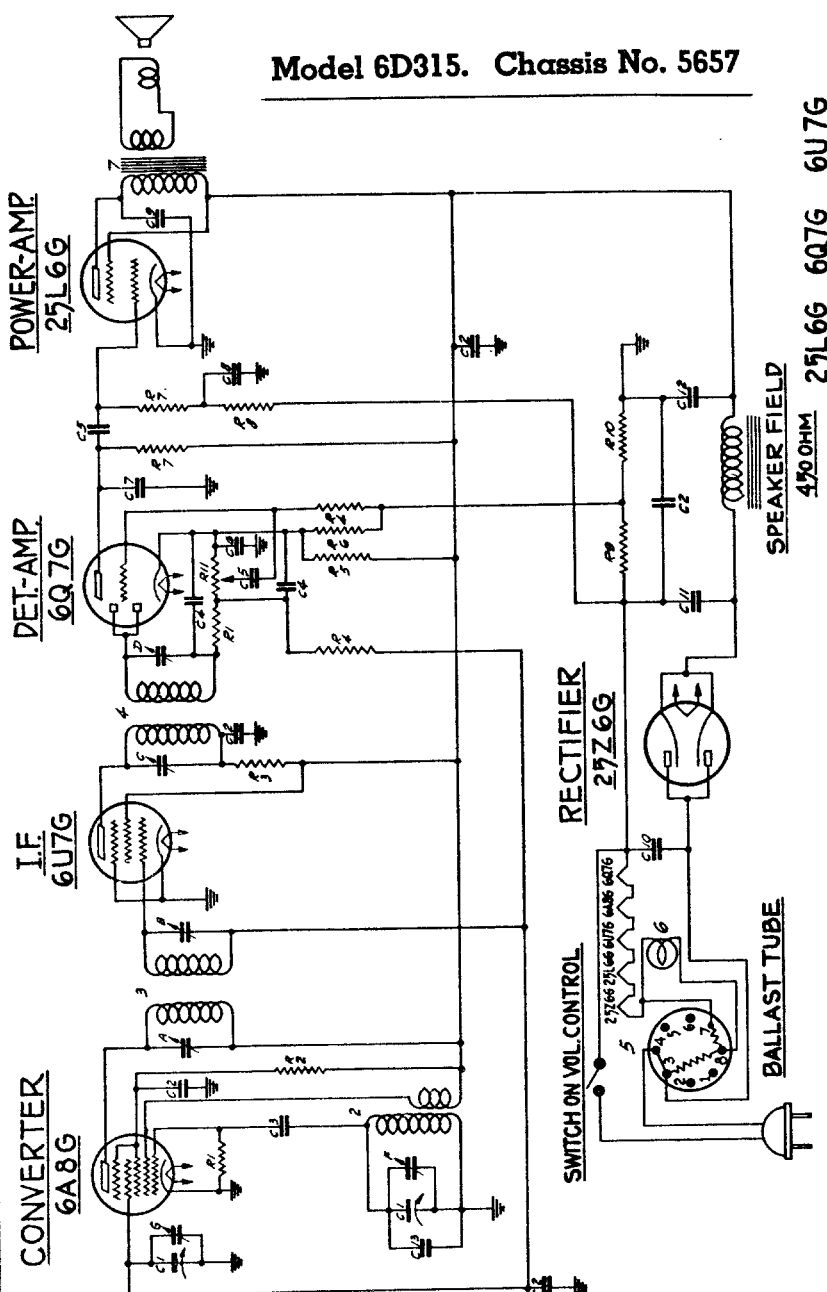


Location of tubes and trimmers

CONVERTER 6A8G **I.F.** 6U7G **DET.-AMP.** 6Q7G **POWER-AMP.** 25L6G **RECTIFIER** 27Z6G **BALLAST TUBE** 100-70

I.F. FREQUENCY - 455 K.C.
 6-TUBE SUPERHETERODYNE
 CHASSIS NO. 5657-A.C.D.C.

ZENITH RADIO CORPORATION

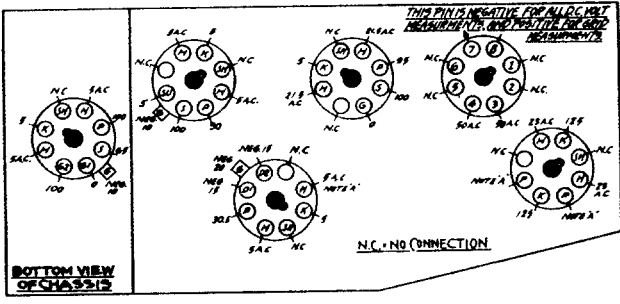


CIRCUIT NO.	PART NO.	DESCRIPTION	QTY	PART NO.	DESCRIPTION
C-1	89-993	47M OHM	1/W	100-70	BALLAST TUBE
C-2	89-443	10M OHM	1/W	100-16	RECTIFIER 27Z-6 G
C-3	89-443	10M OHM	1/W		SPEAKER TRANS.
C-4	89-443	10M OHM	1/W		
C-5	89-443	10M OHM	1/W	A	1ST I.F. TRANS. PRI.
C-6	89-443	10M OHM	1/W	B	1ST I.F. " SEC.
C-7	89-443	10M OHM	1/W	C	2ND I.F. " PRI.
C-8	89-443	10M OHM	1/W	D	2ND I.F. " SEC.
C-9	89-443	10M OHM	1/W	E	BROADCAST OSC. (M580)
C-10	89-443	10M OHM	1/W	F	ANT. BROADCAST
C-11	89-443	10M OHM	1/W		
C-12	89-443	10M OHM	1/W		
C-13	89-443	10M OHM	1/W		
C-14	89-443	10M OHM	1/W		
	5-570	LOOP ANT. ASSEMBLY			
	1-574	OSC. COIL ASSEMBLY			
	89-588	1ST I.F. TRANS.			
	89-591	2ND I.F. TRANS.			
	89-589	100M OHM VOL. CONTROL			
	89-587	50 OHM WIREWOUND			
	89-585	30 OHM WIREWOUND			
	89-584	50M OHM VOL. CONTROL			
	89-444	1000 OHM			
	1	LOOP ANT. ASSEMBLY			
	2	OSC. COIL ASSEMBLY			
	3	1ST I.F. TRANS.			
	4	2ND I.F. TRANS.			

Model 6D315
 CHASSIS No. 5657

FRONT OF CHASSIS 6Q7G
 DET.-AMP.

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

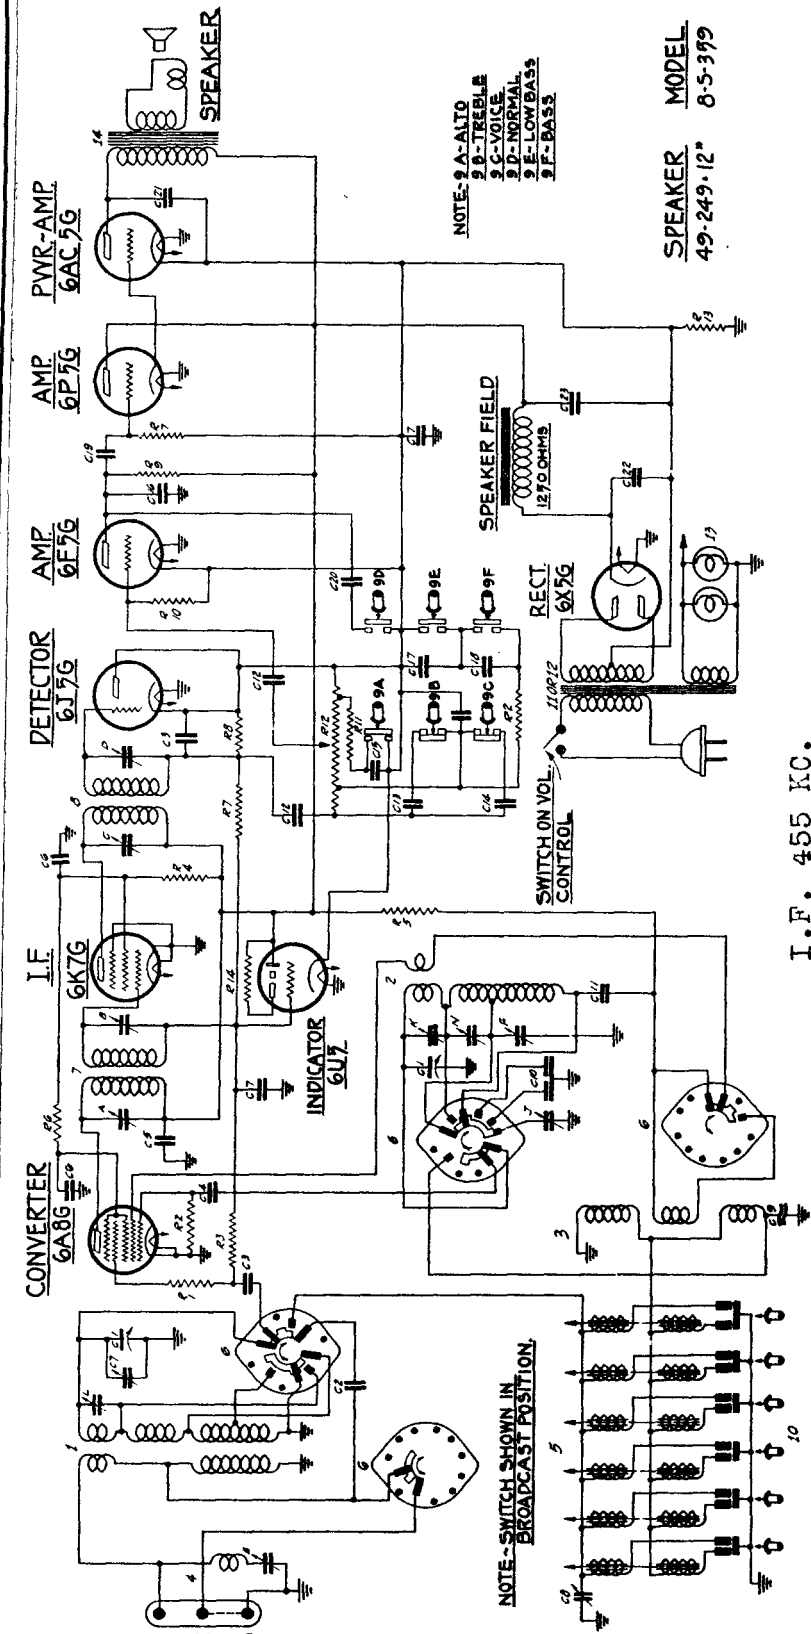


NOTE: 2A-ALTO
2D-TREBLE
2C-VOICE
2E-NORMAL
2F-LOW BASS
2G-HIGH BASS

SPEAKER MODEL 49-249-12" 8-5-399

NOTE-SWITCH SHOWN IN BROADCAST POSITION.

I. F. 455 KC.

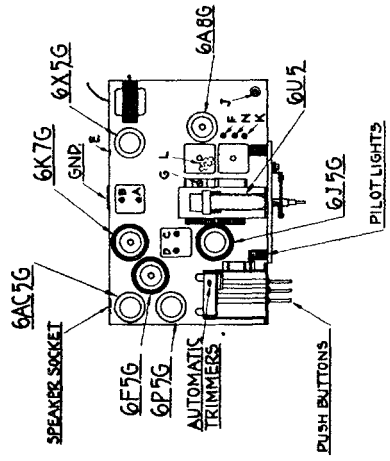


Location of tubes and trimmers

CHAS. NO.	PART NO.	DESCRIPTION	CHAS. NO.	PART NO.	DESCRIPTION
22-71	1-1124	1/4" WAVE TRAP	1	1-1124	1/4" WAVE TRAP
22-209	1-1224	1/4" WAVE TRAP	2	1-1224	1/4" WAVE TRAP
22-182	1-1224	1/4" WAVE TRAP	3	1-1224	1/4" WAVE TRAP
22-127	1-1224	1/4" WAVE TRAP	4	1-1224	1/4" WAVE TRAP
22-170	1-1224	1/4" WAVE TRAP	5	1-1224	1/4" WAVE TRAP
22-240	1-1224	1/4" WAVE TRAP	6	1-1224	1/4" WAVE TRAP
22-240	1-1224	1/4" WAVE TRAP	7	1-1224	1/4" WAVE TRAP
22-240	1-1224	1/4" WAVE TRAP	8	1-1224	1/4" WAVE TRAP
22-240	1-1224	1/4" WAVE TRAP	9	1-1224	1/4" WAVE TRAP
22-240	1-1224	1/4" WAVE TRAP	10	1-1224	1/4" WAVE TRAP
22-240	1-1224	1/4" WAVE TRAP	11	1-1224	1/4" WAVE TRAP
22-240	1-1224	1/4" WAVE TRAP	12	1-1224	1/4" WAVE TRAP
22-240	1-1224	1/4" WAVE TRAP	13	1-1224	1/4" WAVE TRAP
22-240	1-1224	1/4" WAVE TRAP	14	1-1224	1/4" WAVE TRAP
22-240	1-1224	1/4" WAVE TRAP	15	1-1224	1/4" WAVE TRAP
22-240	1-1224	1/4" WAVE TRAP	16	1-1224	1/4" WAVE TRAP
22-240	1-1224	1/4" WAVE TRAP	17	1-1224	1/4" WAVE TRAP
22-240	1-1224	1/4" WAVE TRAP	18	1-1224	1/4" WAVE TRAP
22-240	1-1224	1/4" WAVE TRAP	19	1-1224	1/4" WAVE TRAP
22-240	1-1224	1/4" WAVE TRAP	20	1-1224	1/4" WAVE TRAP

Model 85359. Chassis No. 5807


PHONOGRAPH OSCILLATOR

MODEL-S 6622

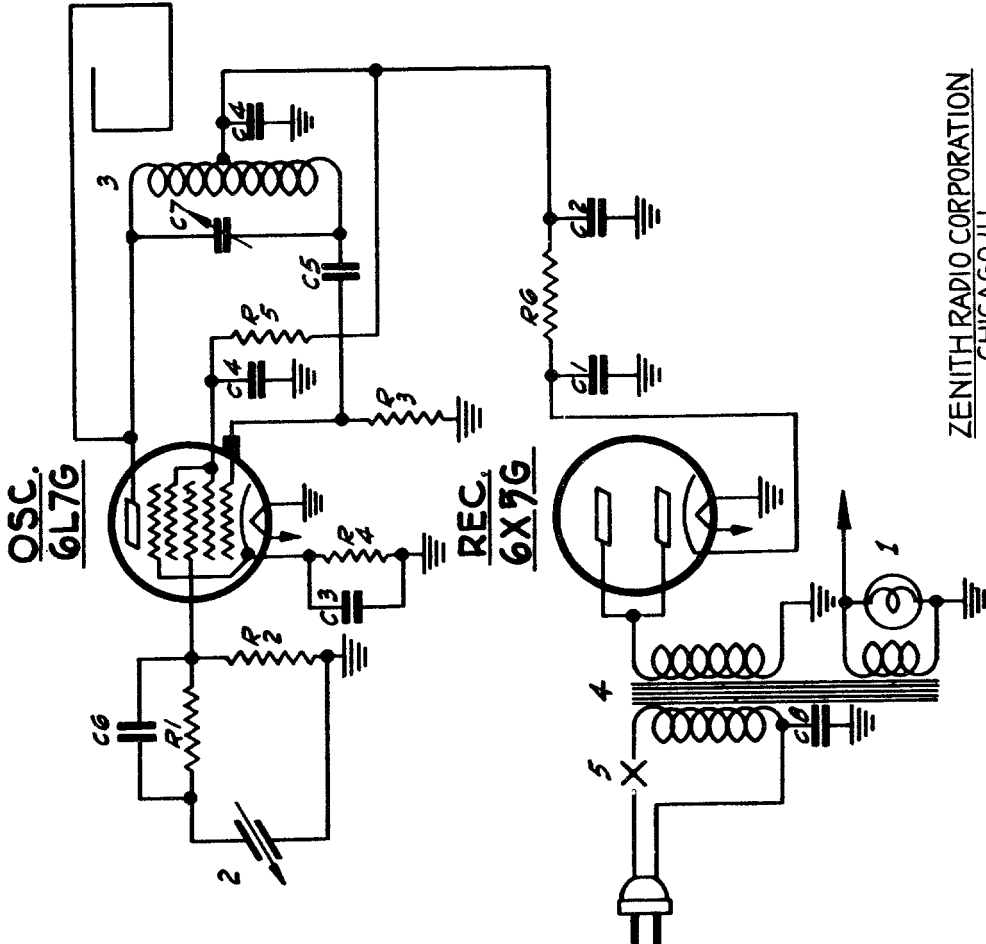


ZENITH RADIO CORPORATION
CHICAGO, ILL.

DIAG. NOS.	PART NOS.	DESCRIPTION	
C-1	22-768	16 MFD. ELECTROLYTIC	200V
C-2	22-270	40 MFD.	150V
C-3	22-270	.05 MFD.	200V
C-4	22-196	.01 MFD.	600V
C-5	22-182	.00025 MFD.	600V
C-6	22-147	.0005 MFD.	600V
C-7	22-463	TRIMMER	600V
C-8	22-925	.005 MFD.	1000V
R-1	63-658	390 M OHM	1/4 W
R-2	63-654	180 M OHM	1/4 W
R-3	63-593	47 M OHM	1/4 W
R-4	63-583	1000 OHM	1/4 W
R-5	63-587	4700 OHM	1/4 W
R-6	63-964	4700 OHM	1/2 W
1	100-36	PILOT LIGHT 6.3V. 25A.	
2	142-14	PICK-UP ARM - COMPLETE	
3	142-16	CRYSTAL UNIT ONLY	
4	S-6625	OSC. COIL ASSEM.	
5	95-567	POWER TRANS.	
	85-170	SWITCH	

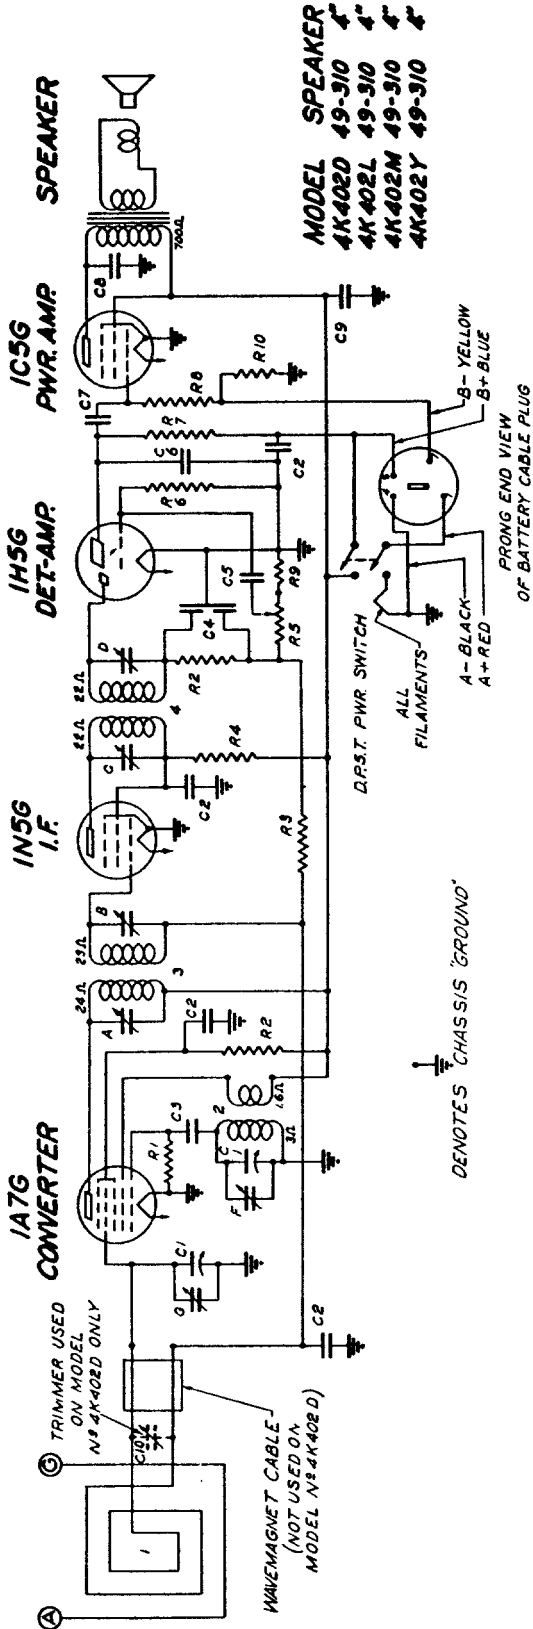


DIAG. NO.	PART NO.	DESCRIPTION	DIAG. NO.	PART NO.	DESCRIPTION	DIAG. NO.	PART NO.	DESCRIPTION
C1	22-885	TWO-GANG VARIABLE	R1	63-452	1/2 W. 0HM	1		WAVEMAGNET ASSEMBLY
C2	22-929	.05 MFD.	R2	63-453	1/2 W. 0HM	2	S7029	OSCILLATOR COIL ASSEM.
C3	22-930	.001 MFD.	R3	63-454	1/2 W. 0HM	3	57050	1ST I.F. TRANS. ASSEM.
C4	22-931	DUAL .001 MFD.	R4	63-583	1000 OHM	4	95-006	2ND I.F. TRANS.
C5	22-932	.001 MFD.	R5	63-034	VOLUME CONTROL	A		1ST I.F. TRANS. PRI.
C6	22-933	.001 MFD.	R6	63-034	10 MEGOHM	B		1ST I.F. TRANS. SEC.
C7	22-934	.001 MFD.	R7	63-271	1 MEGOHM	C		2ND I.F. TRANS. PRI.
C8	22-935	.001 MFD.	R8	63-600	2.2 MEGOHM	D		2ND I.F. TRANS. SEC.
C9	22-936	.001 MFD.	R9	63-307	4700 OHM	E		GRID-CAST. OSC. (ON GANG)
C10	22-937	.001 MFD.	R10	63-258	1000 OHM	F		ANTENNA BRIDGECAST (ON GANG)
C11	22-938	TRIMMER COND.				G		

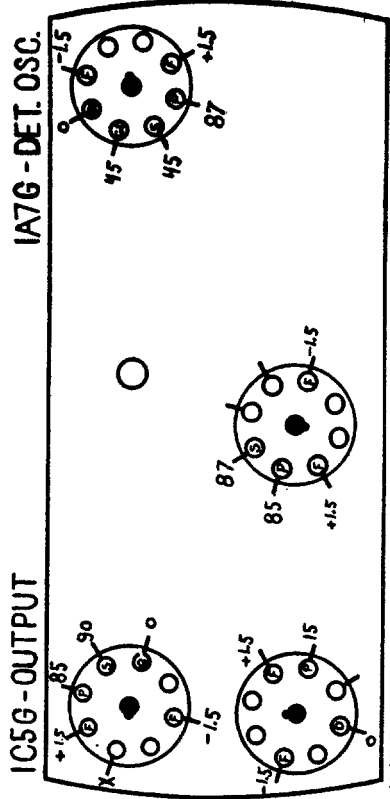

NOTE
 All measurements with 1000 ohms per volt meter — loop antenna not connected — volume at minimum — All readings made with fresh Zenith (part No. Z-59) battery pack with speaker in circuit.
 All voltages measured from contact X on 1C56 tube socket to point indicated.


MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

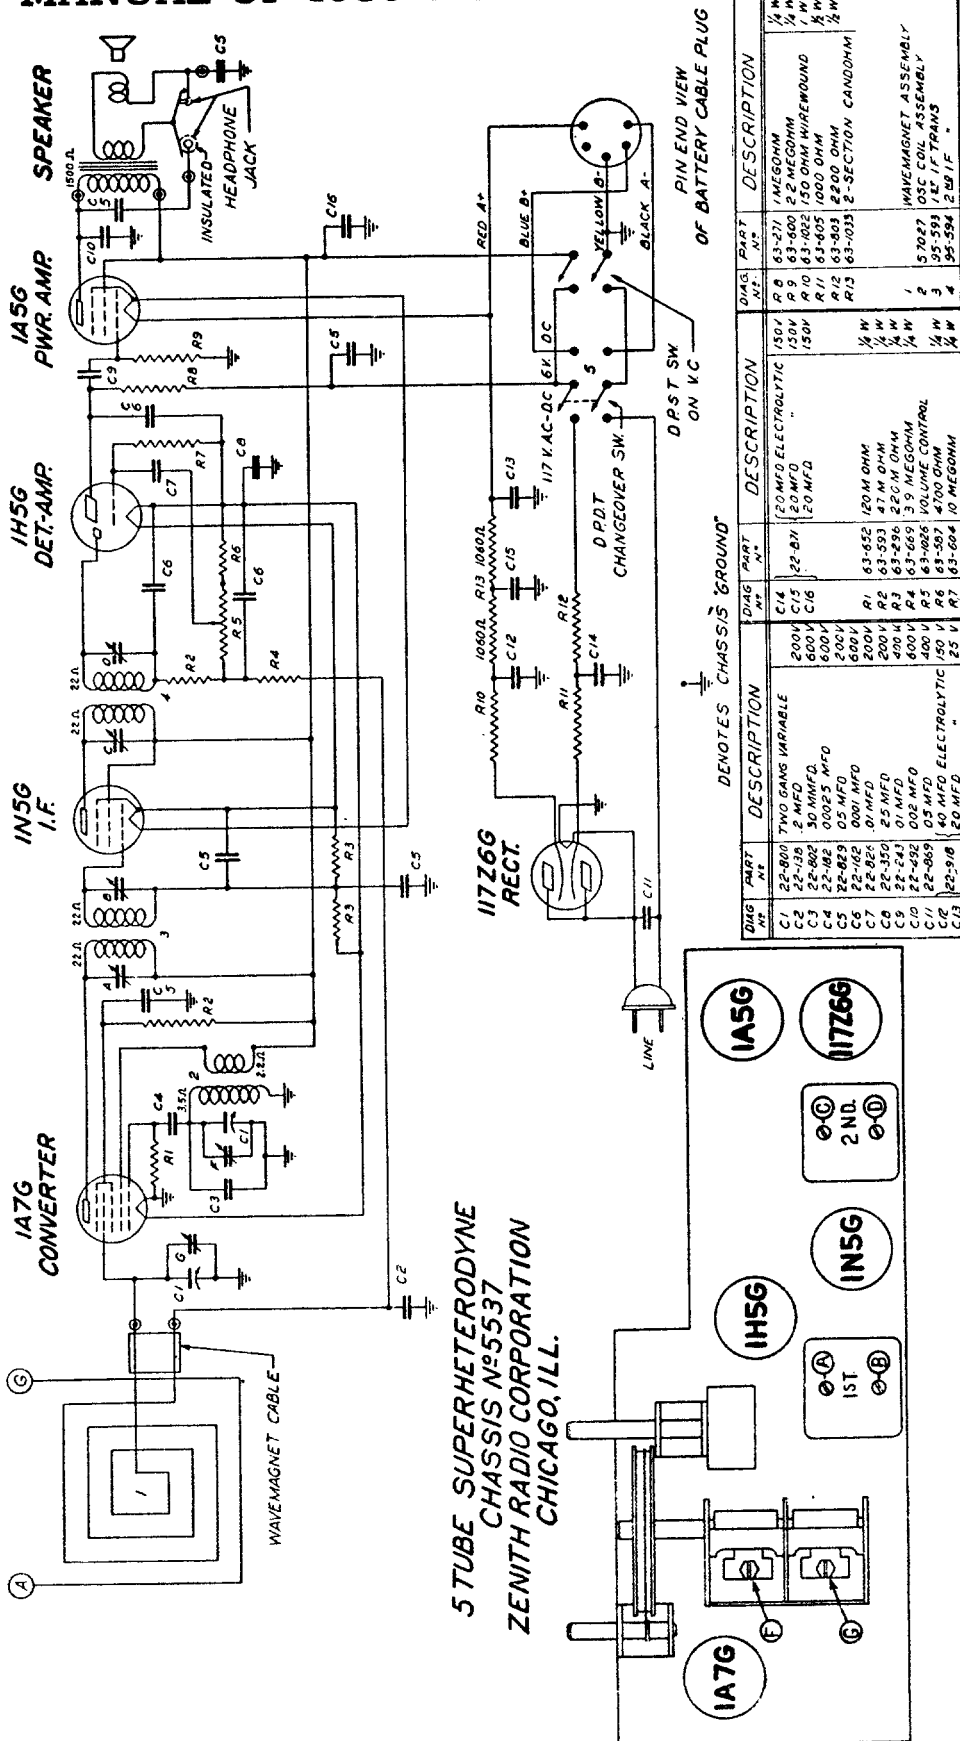

Model 5G401
CHASSIS No. 5537

Operation	Connect Test Oscillator to	Dummy Antenna	Set Test Oscillator to	Band	Set Dial At	Adjust Trimmers	Purpose
1	1st Det. Grid	.5 mmfd.	455	—	600	A B C D	I. F. Alignment
2	Single Turn Loop Coupled Loosely to Wave Magnet	—	1400	—	1400	F	Set Osc. to Scale
3	—	—	1400	—	1400	G	Alignment of Antenna

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

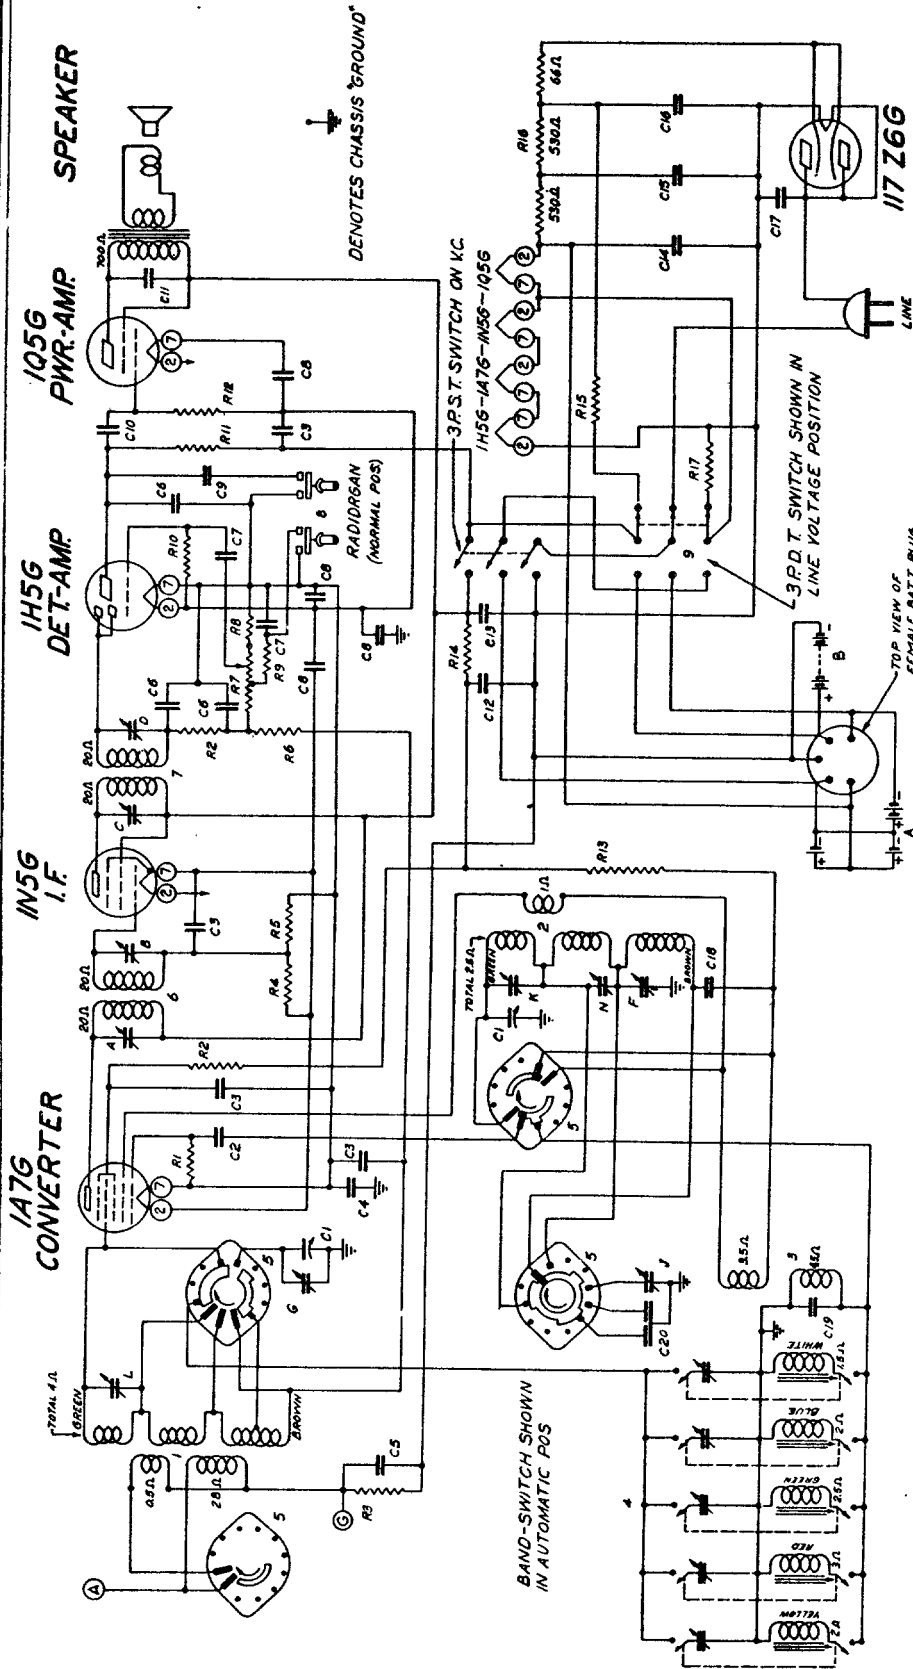

MODEL SPEAKER
 5G441 49-316 8"
 5G442 49-317 10"
 5G461 49-318 10"


117 Z6G

IF FREQUENCY 455 KC
 5 TUBE SUPERHETERODYNE
 110 V. AC - BATT. PACK - UNIVERSAL
 CHASSIS NO. 5539 - 3 BAND
 ZENITH RADIO CORPORATION
 CHICAGO, ILL.

DIAG. NO.	PART NO.	DESCRIPTION	DIAG. NO.	PART NO.	DESCRIPTION
C1	22-508	TWO-GANG VARIABLE	R14	63-506	3500 OHM
C2	22-499	50 MMFD.	R15	63-605	1000 OHM
C3	22-350	25 MFD.	R16	63-1036	3-SECTION CANOAH
C4	22-350	25 MFD.	R17	63-1012	90 OHM WIREWOUND
C5	22-195	100 MMFD.	1	57857	ANTENNA COIL ASSEMBLY
C6	22-182	100 MMFD.	2	57858	OSC. COIL ASSEMBLY
C7	22-826	.01 MFD.	3	56992	OSC. TUNING UNIT ASSEMB.
C8	22-827	.01 MFD.	4	57044	AUTO TUNING UNIT ASSEMB.
C9	22-827	.01 MFD.	5	85-195	BAND SELECTOR SW.
C10	22-243	.01 MFD.	6	95-607	1 1/2 I.F. TRANSFORMER
C11	22-488	.004	7	95-614	2 1/2 I.F. TRANSFORMER
C12	22-800	50 MFD. ELECTROLYTIC	8	56594	500 OHM TONE CONTROL SW.
C13	22-800	50 MFD. ELECTROLYTIC	9	85-196	POWER SW.
C14	22-800	50 MFD. ELECTROLYTIC			
C15	22-800	50 MFD. ELECTROLYTIC			
C16	22-800	50 MFD. ELECTROLYTIC			
C17	22-800	50 MFD. ELECTROLYTIC			
C18	22-350	.002 MFD.			
R1	63-554	100 OHM			
R2	63-593	470 OHM			
R3	63-597	470 OHM			
R4	63-649	55 OHM			
R5	63-298	250 OHM			
R6	63-469	39 MEG OHM			
R7	63-1080	VOLUME CONTROL			
R8	63-597	470 OHM			
R9	63-597	470 OHM			
R10	63-597	470 OHM			
R11	63-597	470 OHM			
R12	63-597	470 OHM			
R13	63-597	470 OHM			
R18	5302	5302			
R18	64	64			

MODELS 5G441, 5G442, 5G461 (Chassis No. 5539)


MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

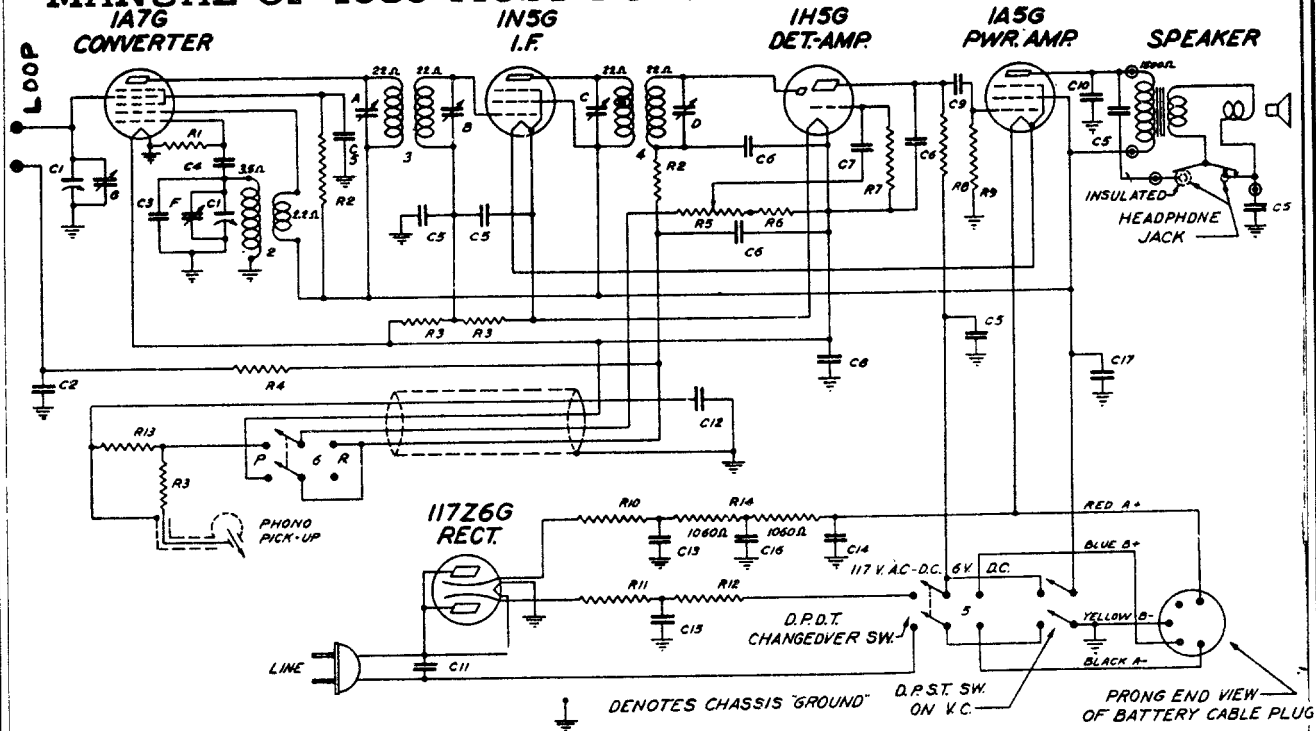

DIAG. NO.	PART NO.	DESCRIPTION	DIAG. NO.	PART NO.	DESCRIPTION	DIAG. NO.	PART NO.	DESCRIPTION
C1	22-300	TWO-GANG VARIABLE	C15	22-871	20 MFD ELECTROLYTIC	R9	63-500	2.2 MEGOHM
C2	22-138	2 MFD.	C16	20	"	R10	63-1022	150 OHM WIREWOUND
C3	22-302	30 MMFD.	C17	20	"	R11	63-505	1000 OHM
C4	22-482	0.0025 MFD.				R12	63-503	2200 OHM
C5	22-389	.05 MFD.	R1	63-552	120 M OHM	R13	63-591	22 M OHM
C6	22-152	.0001 MFD.	R2	63-593	47 M OHM	R14	63-1033	2-SECTION CANDOHM
C7	22-326	.01 MFD.	R3	63-296	220 M OHM			WAVEMAGNET ASSEMBLY
C8	22-350	.25 MFD.	R4	63-689	3.9 MEGOHM	1	57087	OSC. COIL ASSEMBLY
C9	22-243	.01 MFD.	R5	63-1026	VOLUME CONTROL	2	25-593	137 I.F. TRANS.
C10	22-492	.002 MFD.	R6	63-587	4700 OHM	3	95-594	2ND I.F. TRANS.
C11	22-369	.05 MFD.	R7	63-604	10 MEGOHM	4	65-180	POWER SWITCH
C12	22-327	.1 MFD.	R8	63-271	1 MEGOHM	5		
C13	22-348	40 MFD. ELECTROLYTIC						
C14	22-348	20 MFD.						

ALIGNMENT PROCEDURE

Operation	Connect Test Oscillator to	Dummy Antenna	Set Test Oscillator to	Band	Set Dial At	Adjust Trimmers	Purpose
1	1st Det. Grid	.5 Mfd.	455	—	600	A-B-C-D	I. F. Alignment
2	Single Turn Loop coupled loosely to Wave Magnet		1400	—	1400	F	Set Osc. to Scale
3	"		1400	—	1400	G	Alignment of Antenna

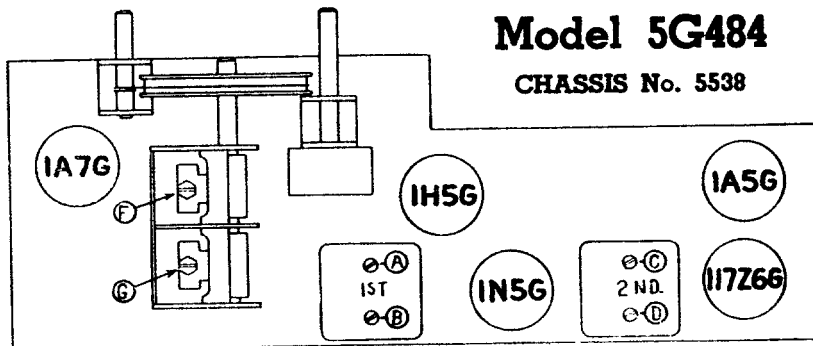



110 VOLT AC. BATTERY PACK
 PORTABLE PHONO
 I.F. FREQUENCY 455 KC.
 5 TUBE SUPERHETERODYNE
 CHASSIS No. 5538
 ZENITH RADIO CORPORATION
 CHICAGO, ILL.

183

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

I.F. FREQUENCY 455 KC.
6 TUBE SUPERHETERODYNE
CHASSIS N^o 5659-5663 AC, DC
ZENITH RADIO CORPORATION
CHICAGO, ILL.

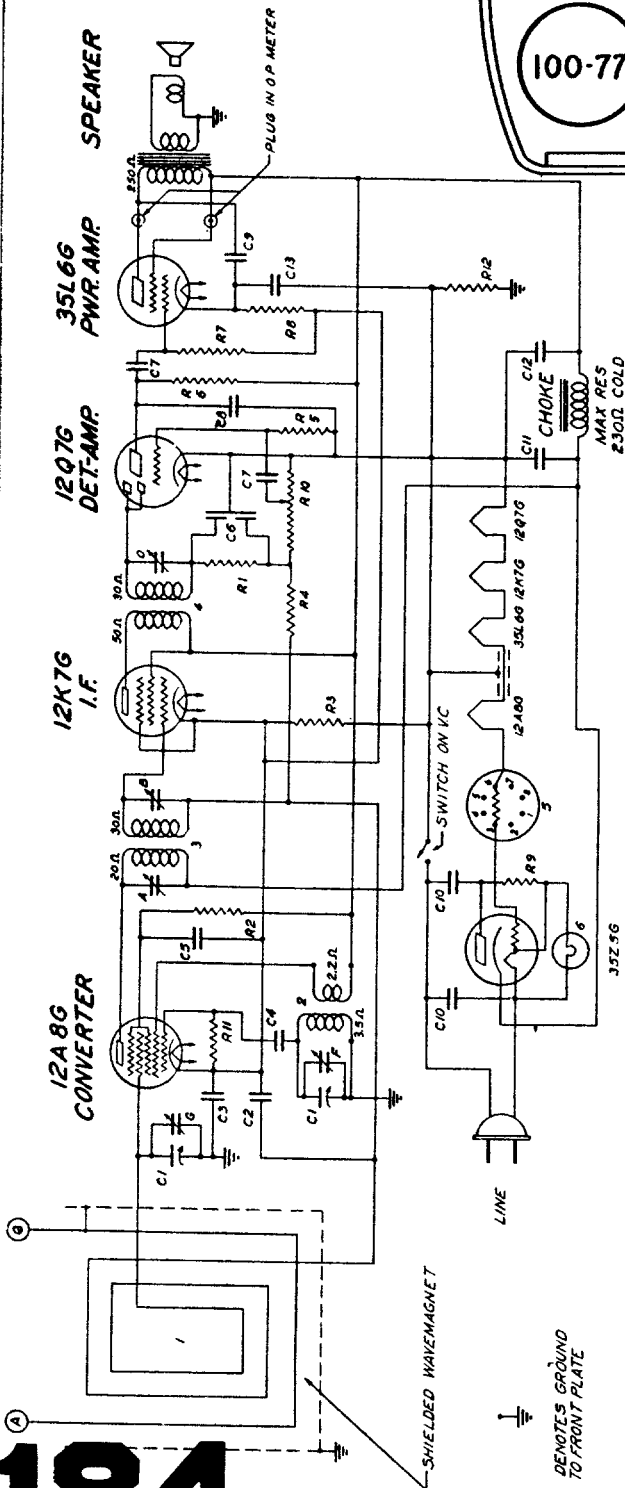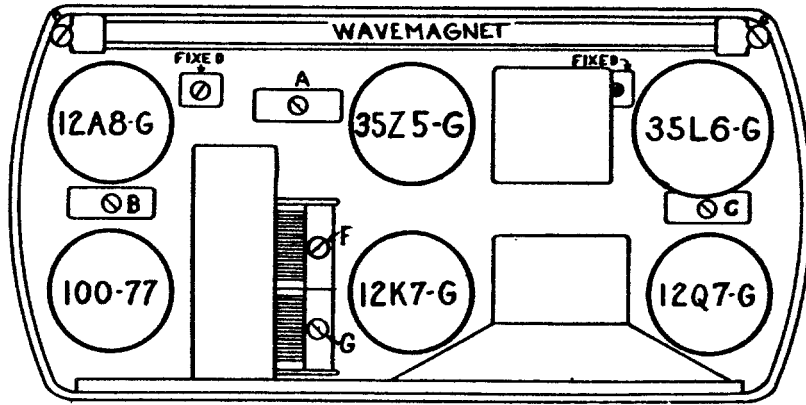


DIAG. NO.	PART NO.	DESCRIPTION	DIAG. NO.	PART NO.	DESCRIPTION
C1	22-865	2-GANG VARIABLE	4	56903	2ND I.F. TRANS
C2	22-250	.05 MFD	5	100-77	BALLAST TUBE
C3	22-150	.1 MFD	6	100-87	PILOT LIGHT 6.3 V. 1.5A.
C4	22-861	100 MFD	7	MS 87	TO NE CONTROL SWITCH
C5	22-861	.02 MFD			
C6	22-817	10 MFD	4		1ST I.F. TRANS PRI.
C7	22-813	1000 MFD	4		1ST I.F. TRANS SEC.
C8	22-813	.05 MFD	0		2ND I.F. TRANS SEC.
C9	22-813	.05 MFD	D		BROADCAST OSC. (ON GANG)
C10	22-813	.05 MFD	F		ANT. (" ")
C11	22-813	.05 MFD	G		
C12	22-831	16 MFD			
C13	22-831	20 MFD			
C14	22-844	100 MFD			
R1	63-593	47 M OHM			
R2	63-591	22 M OHM			
R3	63-572	15 OHM			
R4	63-600	22 MEG OHM			
R5	63-602	47 MEG OHM			
R6	63-599	470 M OHM			
R7	63-599	470 M OHM			
R8	63-636	150 OHM WIREWOUND			
R9	63-1017	27 OHM			
R10	63-1020	VOLUME CONTROL			
R11	63-713	47 M OHM			
R12	63-717	220 M OHM			
1	56901	OSC. COIL			
2	56902	1ST I.F. TRANS			
3	56902	1ST I.F. TRANS			

MODEL 60410 SPEAKER 49-323 4"
MODEL 60411 SPEAKER 49-323 4"
MODEL 60425 SPEAKER 49-323 4"

MODELS 6D410, 6D411, 6D425 (Chassis No. 5659)

Operation	Connect Test Oscillator to	Dummy Antenna	Set Test Oscillator to	Band	Set Dial At	Adjust Trimmers	Purpose
1	1st Det. Grid	.5 Mfd.	455	B'dcast	600	A B C	I. F. Alignm't
2	Single Turn Loop Loosely Coupled to Wave Magnet	—	1500	"	1500	F	Set Osc. to Scale
3	Wave Magnet	—	1500	"	"	G	Alignment of Ant.

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

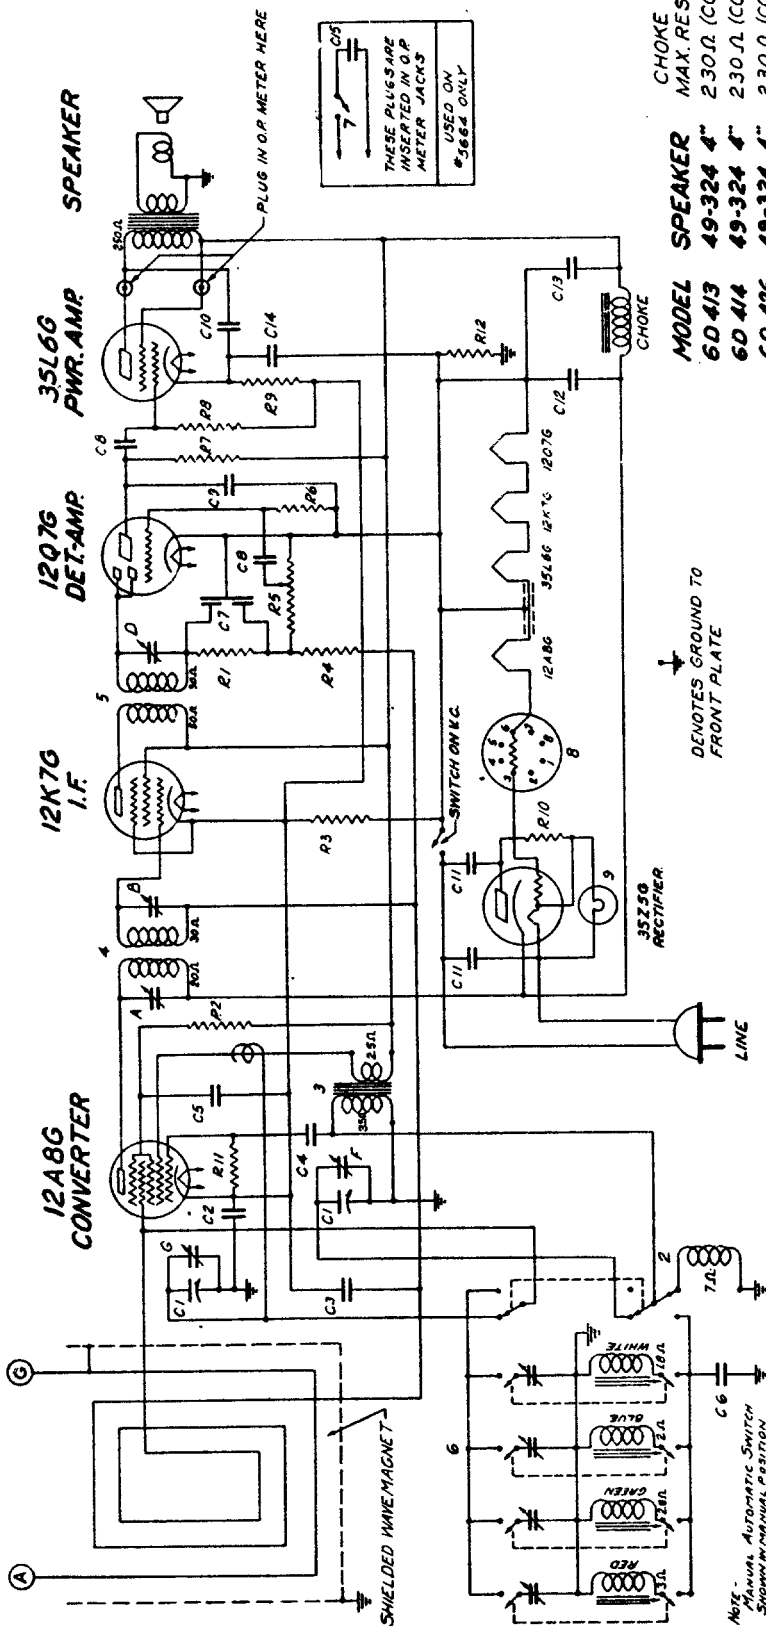

PLUG IN O.P. METER HERE

THESE PLUGS ARE INSERTED IN O.P. METER JACKS

USED ON #5664 ONLY

MODEL	SPEAKER	CHOKE	MAX. RES.
6D 413	49-324 4"	230 Ω	(COLD)
6D 414	49-324 4"	230 Ω	(COLD)
6D 426	49-324 4"	230 Ω	(COLD)
6D 427	49-324 4"	230 Ω	(COLD)
6D 446	49-336 5"	325 Ω	(HOT)
6D 455	49-324 4"	230 Ω	(COLD)

I.F. FREQUENCY 455 KC.
 6 TUBE SUPERHETERODYNE
 CHASSIS #5660X#5664 AC-DC.
 ZENITH RADIO CORPORATION
 CHICAGO, ILL.

DIAG. NO.	PART NO.	DESCRIPTION	DIAG. NO.	PART NO.	DESCRIPTION
C 1	22-888	THO GANG VARIABLE	1	63-539	47 M OHM
C 2	22-939	.1 MFD	2	63-531	25 M OHM
C 3	22-250	.05 MFD	3	63-572	.15 OHM
C 4	22-841	100 M MFD	4	63-600	2.2 MEG OHM
C 5	22-861	50 MFD	5	63-602	47 MEG OHM
C 6	22-868	COMPENSATING CONDENSER	6	63-296	250 M OHM
C 7	22-837	.01 MFD	7	63-584	250 M OHM
C 8	22-893	.0005 MFD	8	63-584	250 M OHM
C 9	22-896	.02 MFD	9	63-584	250 M OHM
C 10	22-896	.02 MFD	10	63-1017	27 OHM WIRE-WOUND
C 11	22-896	.02 MFD	11	63-713	47 M OHM
C 12	22-896	.02 MFD	12	63-717	220 M OHM
C 13	22-896	.02 MFD	13	63-717	220 M OHM
C 14	22-844	20 "	14	63-717	220 M OHM
C 15	22-844	20 "	15	63-717	220 M OHM
			1	562703	WAVE-MAGNET ASSEMBLY
			2	562703	OSCILLATOR COIL ASSEMBLY
			3	564205	OSC COIL ASSEMBLY
			4	56502	I.F. TRANS ASSEMBLY
			5	56503	I.F. TRANS ASSEMBLY
			6	56597	AUTOMATIC TUNING UNIT ASSEM.
			7	MS 917	TONE CONTROL SWITCH
			8	100-717	GALLIUM SULFIDE
			9	100-87	6 BK. 115 AMP
			1		I.F. TRANS. PRI
			2		I.F. TRANS. SEC
			3		I.F. TRANS. SEC
			4		BROADCAST OSC. (ON GANG)
			5		ANTENNA BROADCAST (ON GANG)


MODELS 6D413, 6D414, 6D426, 6D427, 6D446, 6D455 (Chassis No. 5660)

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

Models 6D413, 6D414, 6D426, 6D427, 6D446, 6D455

CHASSIS No. 5660

Zenith Radio Corporation

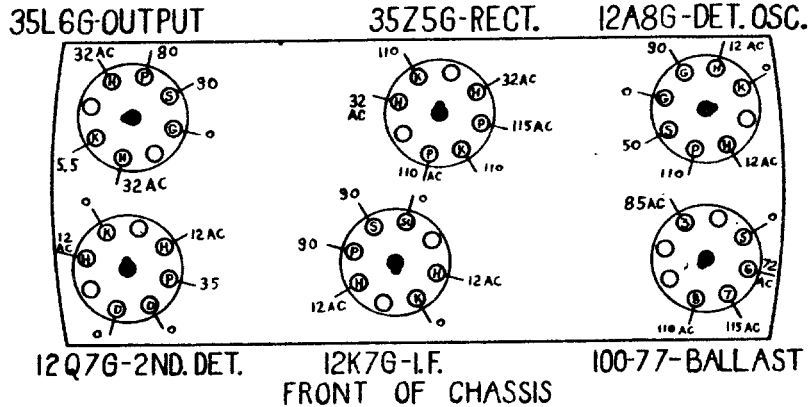

NOTE


Voltages measured from No. 7 pin on ballast tube to point indicated using a 1000 ohm per volt meter. Vol. control at minimum. Antenna disconnected.

All filament voltages measured across each respective tube, using an A.C. volt-meter.

Line voltage — 110v.

LEGEND

- NC—No Connection
- SH—Shield
- H—Heater
- P—Plate
- S—Screen
- G—Grid
- SU—Suppressor
- D—Diode
- F—Filament
- K—Cathode

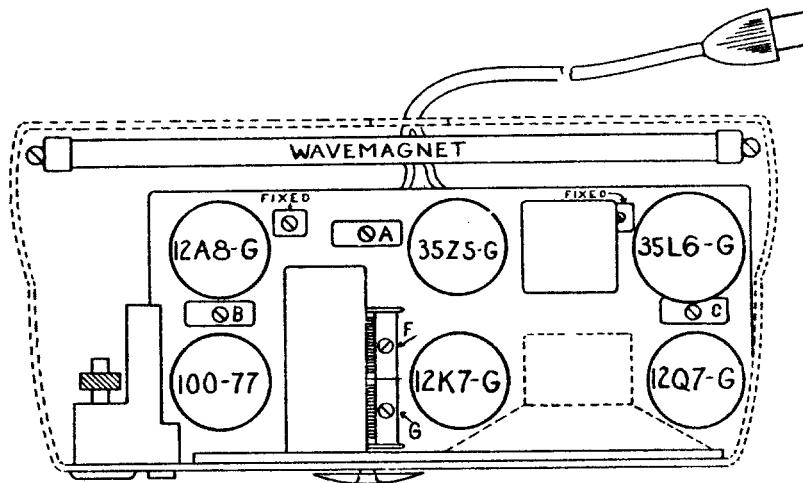

Location of tubes and trimmers

ALIGNMENT PROCEDURE

Operation	Connect Test Oscillator to	Dummy Antenna	Set Test Oscillator to	Band	Set Dial At	Adjust Trimmers	Purpose
1	1st Det. Grid	.5 Mid.	455	B'dcast	600	A B C	I. F. Alignm't.
2	Single Turn Loop Loosely Coupled to Wave Magnet	—	1500	"	1500	F	Set Osc. to Scale
3		—	1500	"	"	G	Alignment of Ant.


186

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

Models 6P416, 6P417, 6P428

CHASSIS No. 5661

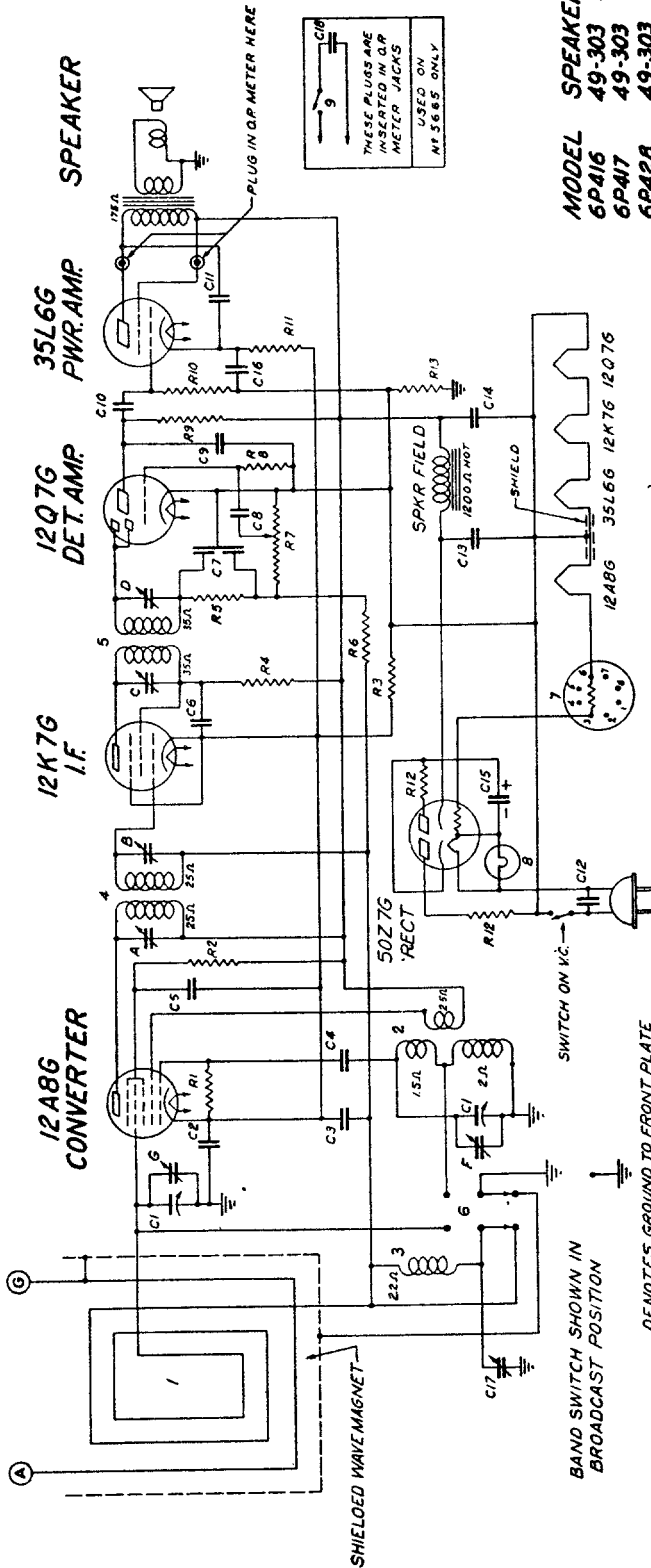

THESE PLUGS ARE INSERTED IN C.P. METER JACKS USED ON #5665 ONLY


MODEL SPEAKER
6P416 49-303 5"
6P417 49-303 5"
6P428 49-303 5"

I.F. FREQUENCY 455 KC
6 TUBE SUPERHETERODYNE
VOLTAGE DOUBLER A.C.
CHASSIS #5666/5665
ZENITH RADIO CORPORATION

DIAG. PART NO.	DESCRIPTION	DIAG. PART NO.	DESCRIPTION	DIAG. PART NO.	DESCRIPTION
C1	200V	A5	63-593 47M OHM	5	95-590 2ND I.F. TRANS
C2	200V	A6	63-722 2.2 MEG OHM	6	MSS15 BAND SWITCH
C3	100 MFD	A7	63-976 15 MEG OHM	7	100-79 BALLAST TUBE
C4	100 MFD	A8	63-294 220 M OHM	8	PIL0T LIGHT 2 9V-17A
C5	400V	A9	63-597 470 M OHM	9	MSS17 TONE CONTROL SWITCH
C6	400V	B1	63-1023 150 OHM WIREWOUND	A	1ST I.F. TRANS. PRI.
C7	100 MMFD	B2	63-712 33 M OHM	B	1ST I.F. SEC.
C8	.005 MFD	B3	63-591 22 M OHM	C	2ND I.F. SEC.
C9	.01 MFD	B4	63-572 15 OHM	D	ANTENNA BROADCAST OSC.
C10	.05 MFD	B5	63-583 1000 OHM	E	ANTENNA BROADCAST OSC.
C11	.05 MFD	B6	63-583 1000 OHM	F	ANTENNA BROADCAST OSC.
C12	220 OHM	B7	63-583 1000 OHM	G	ANTENNA BROADCAST OSC.
C13	1200 OHM	B8	63-583 1000 OHM		
C14	1200 OHM	B9	63-583 1000 OHM		
C15	1200 OHM	B10	63-583 1000 OHM		
C16	1200 OHM	B11	63-583 1000 OHM		
C17	1200 OHM	B12	63-583 1000 OHM		
R1	33 M OHM	R1	63-712 33 M OHM		
R2	22 M OHM	R2	63-591 22 M OHM		
R3	15 OHM	R3	63-572 15 OHM		
R4	1000 OHM	R4	63-583 1000 OHM		
R5	150 OHM	R5	63-1023 150 OHM WIREWOUND		
R6	47 M OHM	R6	63-593 47 M OHM		
R7	15 MEG OHM	R7	63-976 15 MEG OHM		
R8	220 M OHM	R8	63-294 220 M OHM		
R9	470 M OHM	R9	63-597 470 M OHM		
R10	150 OHM	R10	63-1023 150 OHM WIREWOUND		
R11	33 M OHM	R11	63-712 33 M OHM		
R12	22 M OHM	R12	63-591 22 M OHM		
R13	15 OHM	R13	63-572 15 OHM		
R14	1000 OHM	R14	63-583 1000 OHM		

NOTE
Voltages measured from No. 7 pin on ballast tube to point indicated using a 1000 ohm per volt meter. Vol. control at minimum. Antenna disconnected.
All filament voltages measured across each respective tube, using a 0-50 A. C. volt meter.


A. This lug is C.T. of fil. and is one side of pilot light supply line.
Lug No. 7 is return for pilot light.
B. This lug (No. 8) has a 50 v. A. C. potential with respect to lug No. 2 and also a 117 v. A.C. potential with respect to line switch.

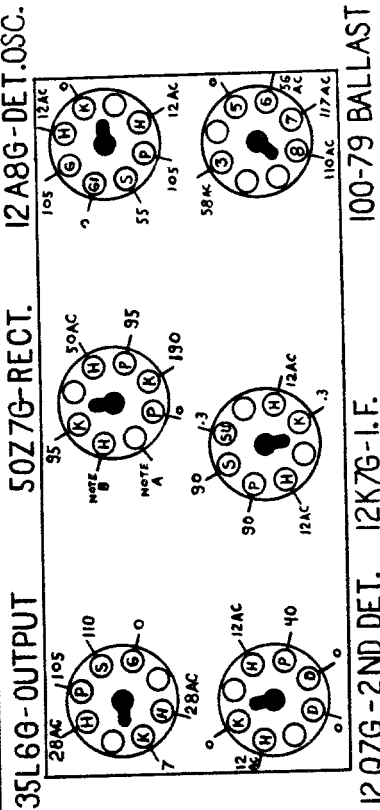

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

187

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

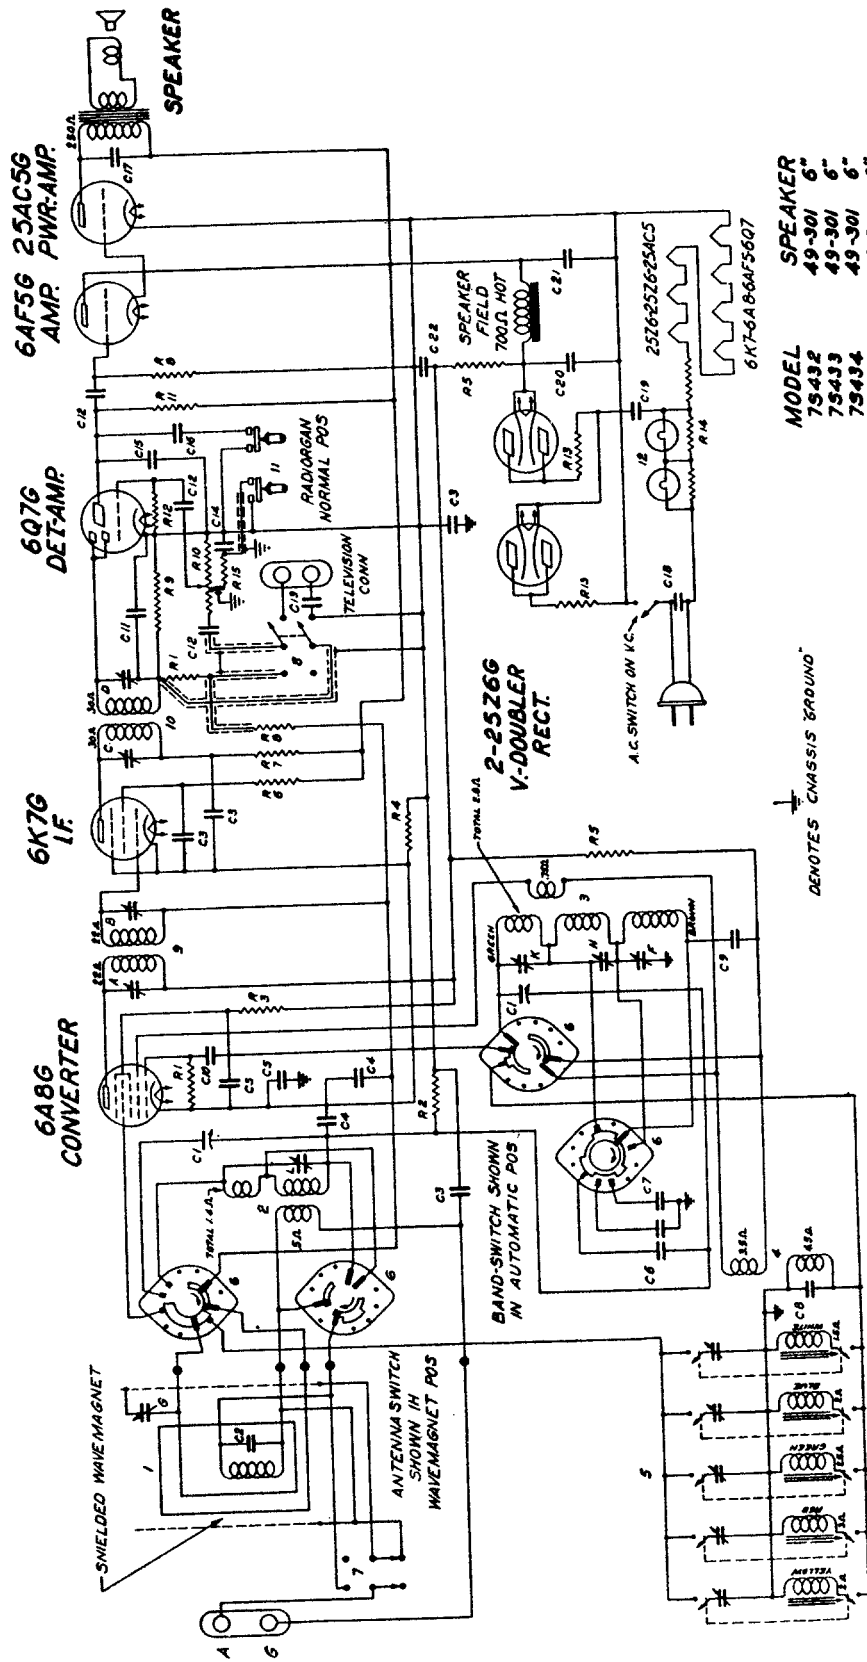

MODEL	SPEAKER
75432	49-301 6"
75433	49-301 6"
75434	49-301 6"
75449	49-301 6"
75450	49-314 8"
75459	49-308 10"
75460	49-314 8"
75461	49-309 12"
75462	49-311 10"

IF FREQUENCY 455 KC.
 7TUBE SUPERHETERODYNE.
 CHASSIS No. 5719 VOLTAGE DOUBLER AC.
 ZENITH RADIO CORPORATION
 CHICAGO, ILL.

QWG PART NO.	DESCRIPTION	QWG PART NO.	DESCRIPTION	QWG PART NO.	DESCRIPTION
C-1	22-849 TWO-BAND W/P	R-12	65-978 15 MEG OHMS	1	1ST. IF TRANS PRI
C-2	22-482 1000'S MFD	R-13	63-1024 22 OHM WIREWOUND	2	2ND IF - W/P
C-3	22-850 50 MFD	R-14	63-1028 3-SECTION CHADDMAN	3	2ND IF - W/P
C-4	22-594 15 MFD	R-15	63-713 47M OHM	4	2ND IF - W/P
C-5	22-803 OSC PHASER	1	56836 ANTENNA COIL	5	ANTENNA BROADCAST
C-6	22-866 COMPENSATING COND	2	56837 OSCILLATOR	6	SHORT WAVE DETECTOR
C-7	22-259 50 MMFD	3	56838 ANTENNA BROADCAST	7	POLICE BAND OSC (GREEN NOTE)
C-8	22-195 01 MFD	4	57045 UNIT ASSEMBLY	8	NOTE: TRANSFORMERS F.Y.N. ARE MOUNTED ON STRIP #22-850
C-9	22-327 02 MFD	5	85-185 BAND SELECTION SWITCH		
C-10	22-327 02 MFD	6	85-171 TELEVISION		
C-11	22-327 02 MFD	7	95-601 117 T TRANSFORMER		
C-12	22-440 0045 MFD	8	26894 TONE CONTROL SWITCH		
C-13	22-440 01 MFD	9	100-35 PILOT LIGHT 6.3K 85A		
C-14	22-440 01 MFD	10			
C-15	22-440 01 MFD				
C-16	22-440 01 MFD				
C-17	22-440 01 MFD				
C-18	22-440 01 MFD				
C-19	22-852 10MILE ELECTRETIC				

MODELS 75432, 75433, 75434, 75449, 75450, 75458, 75459, 75460, 75461, 75462 (Chassis No. 5719)

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS


Models 7S432, 7S433, 7S434, 7S449, 7S450, 7S458, 7S459 7S460, 7S461, 7S462

(Chassis No. 5719)

NOTE

Voltages measured from line switch to point indicated using a 1000 ohm per volt meter. Vol. control at minimum. Antenna disconnected.

All filament voltages measured across each respective tube, using an A.C. volt-meter.

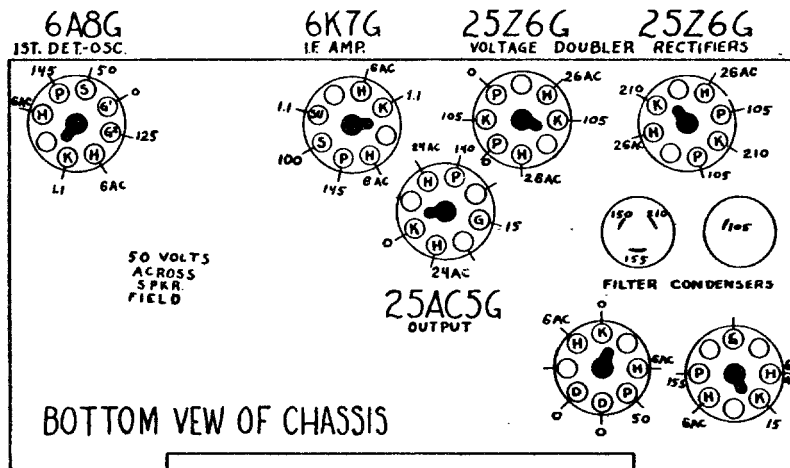


BOTTOM VIEW OF CHASSIS

FRONT

LEGEND

- NC—No Connection
- SH—Shield
- H—Heater
- P—Plate
- S—Screen
- G—Grid
- SU—Suppressor
- D—Diode
- F—Filament
- K—Cathode

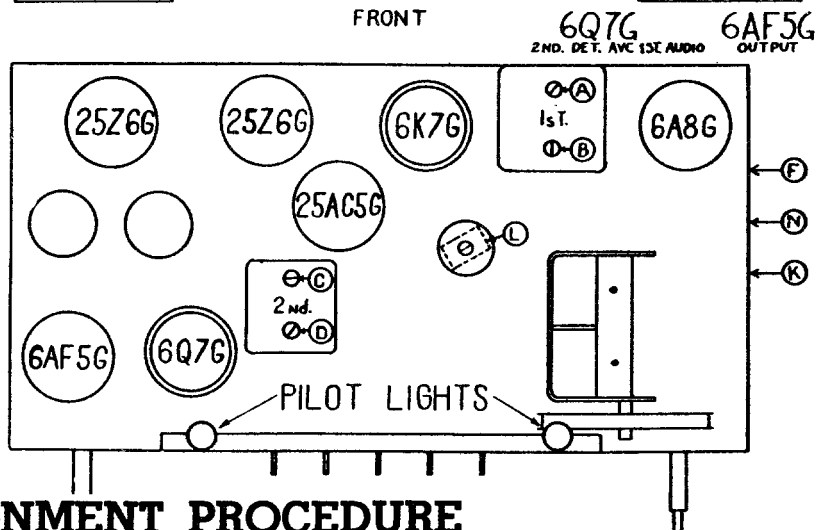


ALIGNMENT PROCEDURE

Operation	Connect Test Oscillator to	Dummy Antenna	Set Test Oscillator to	Band	Set Dial At	Adjust Trimmers	Purpose
1	1st Det. Grid	5 mfd.	455	B'dcast	600	A B C D	I. F.
2	Single *x Turn Coil	—	1500	"	1500	F	Set Osc. to Scale
3	" "	—	1500	"	1500	On Wave Magnet	Alignment of Wave Magnet
4	Rec. Ant. Post **	400 ohms	18000	S.W. #2	18000	K	Set Osc. to Scale
5	"	"	16000	"	16000	L	Rock gang & adj. for max. output
6	"	"	4500	S.W. #1	4500	N	"

* Loosely coupled to Wave Magnet
 x Switch in Wave Magnet Position
 ** Switch in Antenna Position

MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

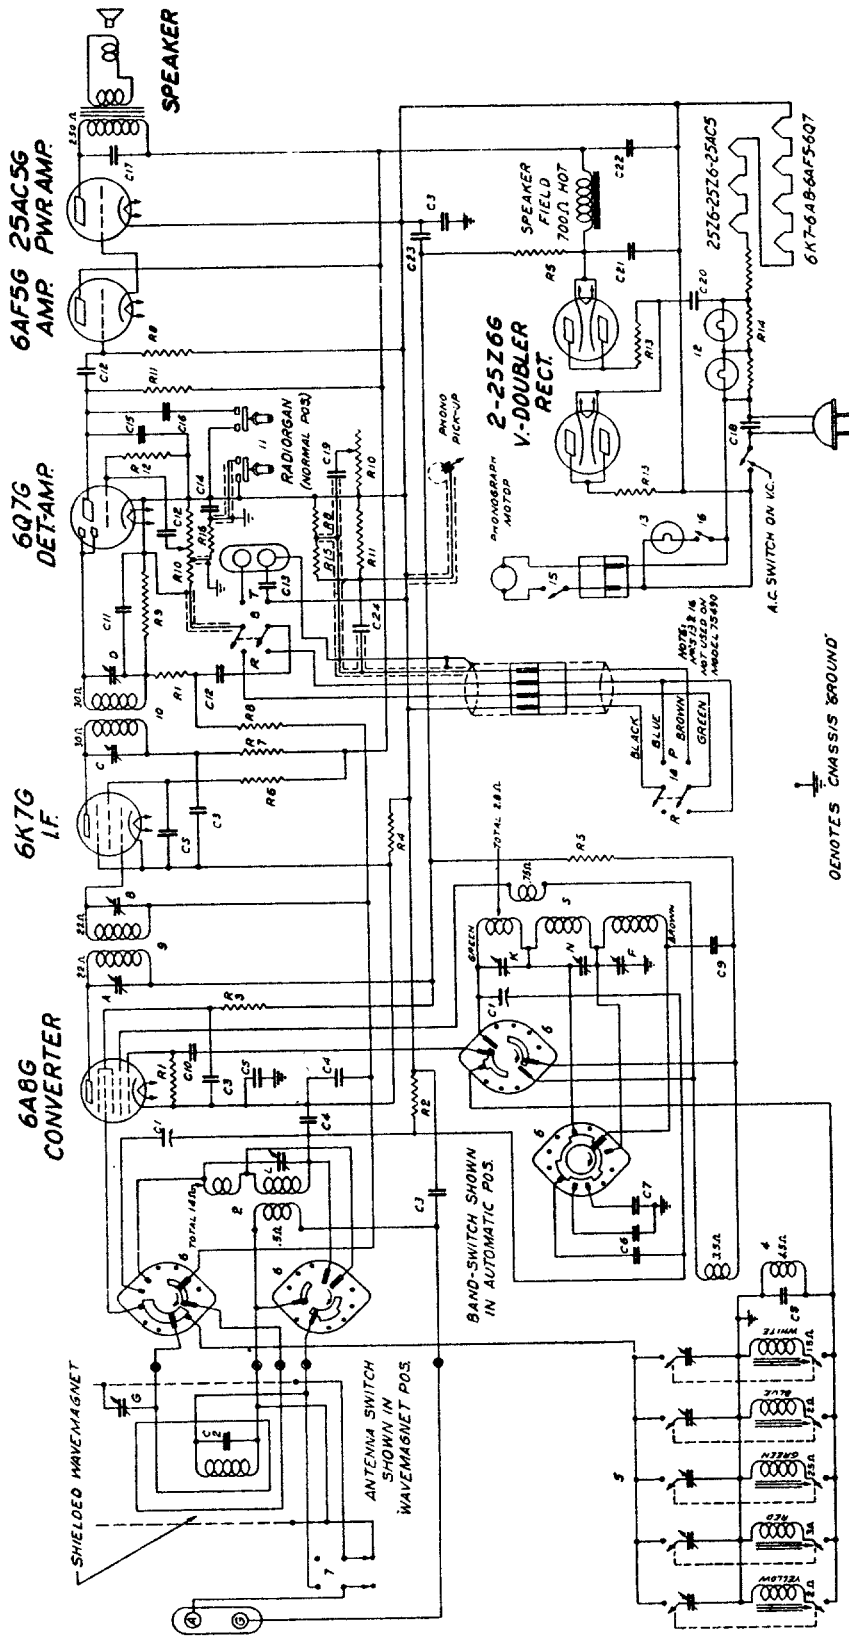


MODEL SPEAKER
79487 49-312 10"
75488 49-309 12"
79490 49-314 8"

I. F. FREQUENCY 455KC
7 TUBE SUPERHETERODYNE
CHASSIS NO. 5721 J 3 BAND
VOLTAGE DOUBLER A.C.
ZENITH RADIO CORPORATION
CHICAGO, ILL.

DATA NO.	PART NO.	DESCRIPTION	DATA NO.	PART NO.	DESCRIPTION
C1	22-840	TWO GANG VARIABLE	R15	63-594	330M OHM
C2	22-822	0.0025 MFD	R16	63-503	47M OHM
C3	22-825	0.05 MFD	4	16	1/4 W
C4	22-829	0.01 MFD	5	16	1/4 W
C5	22-834	0.001 MFD	6	16	1/4 W
C6	22-842	0.001 MFD	7	16	1/4 W
C7	22-844	0.001 MFD	8	16	1/4 W
C8	22-846	0.001 MFD	9	16	1/4 W
C9	22-850	0.01 MFD	10	16	1/4 W
C10	22-852	0.01 MFD	11	16	1/4 W
C11	22-854	0.01 MFD	12	16	1/4 W
C12	22-856	0.01 MFD	13	16	1/4 W
C13	22-858	0.01 MFD	14	16	1/4 W
C14	22-860	0.01 MFD	15	16	1/4 W
C15	22-862	0.01 MFD	16	16	1/4 W
C16	22-864	0.01 MFD	17	16	1/4 W
C17	22-866	0.01 MFD	18	16	1/4 W
C18	22-868	0.01 MFD	19	16	1/4 W
C19	22-870	0.01 MFD	20	16	1/4 W
C20	22-872	0.01 MFD	21	16	1/4 W
C21	22-874	0.01 MFD	22	16	1/4 W
C22	22-876	0.01 MFD	23	16	1/4 W
C23	22-878	0.01 MFD	24	16	1/4 W
C24	22-880	0.01 MFD	25	16	1/4 W
C25	22-882	0.01 MFD	26	16	1/4 W
C26	22-884	0.01 MFD	27	16	1/4 W
C27	22-886	0.01 MFD	28	16	1/4 W
C28	22-888	0.01 MFD	29	16	1/4 W
C29	22-890	0.01 MFD	30	16	1/4 W
C30	22-892	0.01 MFD	31	16	1/4 W
C31	22-894	0.01 MFD	32	16	1/4 W
C32	22-896	0.01 MFD	33	16	1/4 W
C33	22-898	0.01 MFD	34	16	1/4 W
C34	22-900	0.01 MFD	35	16	1/4 W
C35	22-902	0.01 MFD	36	16	1/4 W
C36	22-904	0.01 MFD	37	16	1/4 W
C37	22-906	0.01 MFD	38	16	1/4 W
C38	22-908	0.01 MFD	39	16	1/4 W
C39	22-910	0.01 MFD	40	16	1/4 W
C40	22-912	0.01 MFD	41	16	1/4 W
C41	22-914	0.01 MFD	42	16	1/4 W
C42	22-916	0.01 MFD	43	16	1/4 W
C43	22-918	0.01 MFD	44	16	1/4 W
C44	22-920	0.01 MFD	45	16	1/4 W
C45	22-922	0.01 MFD	46	16	1/4 W
C46	22-924	0.01 MFD	47	16	1/4 W
C47	22-926	0.01 MFD	48	16	1/4 W
C48	22-928	0.01 MFD	49	16	1/4 W
C49	22-930	0.01 MFD	50	16	1/4 W
C50	22-932	0.01 MFD	51	16	1/4 W
C51	22-934	0.01 MFD	52	16	1/4 W
C52	22-936	0.01 MFD	53	16	1/4 W
C53	22-938	0.01 MFD	54	16	1/4 W
C54	22-940	0.01 MFD	55	16	1/4 W
C55	22-942	0.01 MFD	56	16	1/4 W
C56	22-944	0.01 MFD	57	16	1/4 W
C57	22-946	0.01 MFD	58	16	1/4 W
C58	22-948	0.01 MFD	59	16	1/4 W
C59	22-950	0.01 MFD	60	16	1/4 W
C60	22-952	0.01 MFD	61	16	1/4 W
C61	22-954	0.01 MFD	62	16	1/4 W
C62	22-956	0.01 MFD	63	16	1/4 W
C63	22-958	0.01 MFD	64	16	1/4 W
C64	22-960	0.01 MFD	65	16	1/4 W
C65	22-962	0.01 MFD	66	16	1/4 W
C66	22-964	0.01 MFD	67	16	1/4 W
C67	22-966	0.01 MFD	68	16	1/4 W
C68	22-968	0.01 MFD	69	16	1/4 W
C69	22-970	0.01 MFD	70	16	1/4 W
C70	22-972	0.01 MFD	71	16	1/4 W
C71	22-974	0.01 MFD	72	16	1/4 W
C72	22-976	0.01 MFD	73	16	1/4 W
C73	22-978	0.01 MFD	74	16	1/4 W
C74	22-980	0.01 MFD	75	16	1/4 W
C75	22-982	0.01 MFD	76	16	1/4 W
C76	22-984	0.01 MFD	77	16	1/4 W
C77	22-986	0.01 MFD	78	16	1/4 W
C78	22-988	0.01 MFD	79	16	1/4 W
C79	22-990	0.01 MFD	80	16	1/4 W
C80	22-992	0.01 MFD	81	16	1/4 W
C81	22-994	0.01 MFD	82	16	1/4 W
C82	22-996	0.01 MFD	83	16	1/4 W
C83	22-998	0.01 MFD	84	16	1/4 W
C84	22-1000	0.01 MFD	85	16	1/4 W
C85	22-1002	0.01 MFD	86	16	1/4 W
C86	22-1004	0.01 MFD	87	16	1/4 W
C87	22-1006	0.01 MFD	88	16	1/4 W
C88	22-1008	0.01 MFD	89	16	1/4 W
C89	22-1010	0.01 MFD	90	16	1/4 W
C90	22-1012	0.01 MFD	91	16	1/4 W
C91	22-1014	0.01 MFD	92	16	1/4 W
C92	22-1016	0.01 MFD	93	16	1/4 W
C93	22-1018	0.01 MFD	94	16	1/4 W
C94	22-1020	0.01 MFD	95	16	1/4 W
C95	22-1022	0.01 MFD	96	16	1/4 W
C96	22-1024	0.01 MFD	97	16	1/4 W
C97	22-1026	0.01 MFD	98	16	1/4 W
C98	22-1028	0.01 MFD	99	16	1/4 W
C99	22-1030	0.01 MFD	100	16	1/4 W
C100	22-1032	0.01 MFD	101	16	1/4 W
C101	22-1034	0.01 MFD	102	16	1/4 W
C102	22-1036	0.01 MFD	103	16	1/4 W
C103	22-1038	0.01 MFD	104	16	1/4 W
C104	22-1040	0.01 MFD	105	16	1/4 W
C105	22-1042	0.01 MFD	106	16	1/4 W
C106	22-1044	0.01 MFD	107	16	1/4 W
C107	22-1046	0.01 MFD	108	16	1/4 W
C108	22-1048	0.01 MFD	109	16	1/4 W
C109	22-1050	0.01 MFD	110	16	1/4 W
C110	22-1052	0.01 MFD	111	16	1/4 W
C111	22-1054	0.01 MFD	112	16	1/4 W
C112	22-1056	0.01 MFD	113	16	1/4 W
C113	22-1058	0.01 MFD	114	16	1/4 W
C114	22-1060	0.01 MFD	115	16	1/4 W
C115	22-1062	0.01 MFD	116	16	1/4 W
C116	22-1064	0.01 MFD	117	16	1/4 W
C117	22-1066	0.01 MFD	118	16	1/4 W
C118	22-1068	0.01 MFD	119	16	1/4 W
C119	22-1070	0.01 MFD	120	16	1/4 W
C120	22-1072	0.01 MFD	121	16	1/4 W
C121	22-1074	0.01 MFD	122	16	1/4 W
C122	22-1076	0.01 MFD	123	16	1/4 W
C123	22-1078	0.01 MFD	124	16	1/4 W
C124	22-1080	0.01 MFD	125	16	1/4 W
C125	22-1082	0.01 MFD	126	16	1/4 W
C126	22-1084	0.01 MFD	127	16	1/4 W
C127	22-1086	0.01 MFD	128	16	1/4 W
C128	22-1088	0.01 MFD	129	16	1/4 W
C129	22-1090	0.01 MFD	130	16	1/4 W
C130	22-1092	0.01 MFD	131	16	1/4 W
C131	22-1094	0.01 MFD	132	16	1/4 W
C132	22-1096	0.01 MFD	133	16	1/4 W
C133	22-1098	0.01 MFD	134	16	1/4 W
C134	22-1100	0.01 MFD	135	16	1/4 W
C135	22-1102	0.01 MFD	136	16	1/4 W
C136	22-1104	0.01 MFD	137	16	1/4 W
C137	22-1106	0.01 MFD	138	16	1/4 W
C138	22-1108	0.01 MFD	139	16	1/4 W
C139	22-1110	0.01 MFD	140	16	1/4 W
C140	22-1112	0.01 MFD	141	16	1/4 W
C141	22-1114	0.01 MFD	142	16	1/4 W
C142	22-1116	0.01 MFD	143	16	1/4 W
C143	22-1118	0.01 MFD	144	16	1/4 W
C144	22-1120	0.01 MFD	145	16	1/4 W
C145	22-1122	0.01 MFD	146	16	1/4 W
C146	22-1124	0.01 MFD	147	16	1/4 W
C147	22-1126	0.01 MFD	148	16	1/4 W
C148	22-1128	0.01 MFD	149	16	1/4 W
C149	22-1130	0.01 MFD	150	16	1/4 W
C150	22-1132	0.01 MFD	151	16	1/4 W
C151	22-1134	0.01 MFD	152	16	1/4 W
C152	22-1136	0.01 MFD	153	16	1/4 W
C153	22-1138	0.01 MFD	154	16	1/4 W
C154	22-1140	0.01 MFD	155	16	1/4 W
C155	22-1142	0.01 MFD	156	16	1/4 W
C156	22-1144	0.01 MFD	157	16	1/4 W
C157	22-1146	0.01 MFD	158	16	1/4 W
C158	22-1148	0.01 MFD	159	16	1/4 W
C159	22-1150	0.01 MFD	160	16	1/4 W
C160	22-1152	0.01 MFD	161	16	1/4 W
C161	22-1154	0.01 MFD	162	16	1/4 W
C162	22-1156	0.01 MFD	163	16	1/4 W
C163	22-1158	0.01 MFD	164	16	1/4 W
C164	22-1160	0.01 MFD	165	16	1/4 W
C165	22-1162	0.01 MFD	166	16	1/4 W
C166	22-1164	0.01 MFD	167	16	1/4 W
C167	22-1166	0.01 MFD	168	16	1/4 W
C168	22-1168	0.01 MFD	169	16	1/4 W
C169	22-1170	0.01 MFD	170	16	1/4 W
C170	22-1172	0.01 MFD	171	16	1/4 W
C171	22-1174	0.01 MFD	172	16	1/4 W
C172	22-1176	0.01 MFD	173	16	1/4 W
C173	22-1178	0.01 MFD	174	16	1/4 W
C174	22-1180	0.01 MFD	175	16	1/4 W
C175	22-1182	0.01 MFD	176	16	1/4 W
C176	22-1184	0.01 MFD	177	16	1/4 W

12SA7GT OSC.

FREQUENCY
ADJUSTMENT

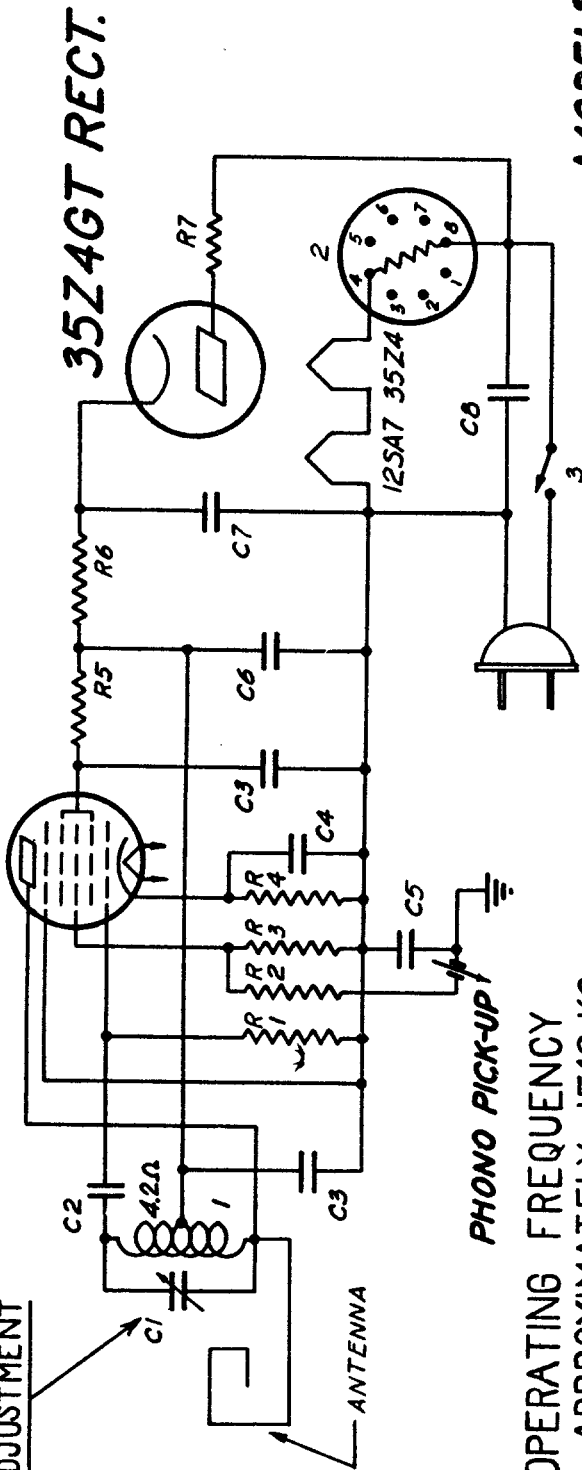

PHONO PICK-UP
OPERATING FREQUENCY
APPROXIMATELY 1540 KC.

MODELS
S-7000
S-7001
S-7002
S-7003

PHONOGRAPH OSCILLATOR
ZENITH RADIO CORPORATION
CHICAGO, ILL.

DIAG. N ^o	PART N ^o 1	DESCRIPTION	DIAG. N ^o 2	PART N ^o 2	DESCRIPTION
C1	22-690	TUNING CONDENSER	R2	63-658	390 M OHM
C2	22-182	.00025 MFD.	R3	63-260	100 M OHM
C3	22-243	.01 MFD.	R4	63-583	1000 OHM
C4	22-829	.05 MFD.	R5	63-964	4700 OHM
C5	22-927	.1 MFD.	R6	63-803	2200 OHM
C6	22-876	{ 8MFD ELECTROLYTIC	R7	63-575	47 OHM
C7	22-670	{ 40MFD			
C8		{ .1 MFD.			
R1	63-591	22 M OHM			
		1/4 W.			OSC. COIL ASSEM
		1/4 W.			BALLAST TUBE
		1/4 W.			AC SWITCH
		1/2 W.			
		1/2 W.			
		1/4 W.			

WIRELESS RECORD PLAYER Models S7000, S7001, S7002, S7003