

Most - Often - Needed

1948

RADIO
DIAGRAMS

and Servicing Information

Compiled by

M. N. BEITMAN



SUPREME PUBLICATIONS
CHICAGO

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

INDEX

Always use this complete Index to find description of the radio you are servicing.

Admiral Radio		Arvin		Emerson Radio	
4B1	6	RE-231	124	511	27
5H1	7	RE-237	127	512	28
5K1	8	552AN	124	514	29
5N1	9	552N	124	515	28
UL5K1	8	555	124	516	28
6L1	10	555A	124	517	27
7C1	11	665	126	525	31
7C63	11	6640	125	530	28
7P32	7			531	30
7P33	7	Bendix Radio		532	30
7P34	7	416A	15	533	30
7RT41	10	R526M	17	534	29
7RT42	10	697A	16	536A	32
7RT43	10			540A	26
7T01	9	Buick		541	27
7T04	9	980744	174-175	543	33-34
7T06	6	980745	174-175	544	33-34
7T10	8			547A	35
7T12	6	Clarion		548	37
7T14	8	see Warwick Mfg.		549	37
7T15	8			550	28
		Coronado		551A	32
Air King		see Gamble-Skogmo		552	31
470-1	12			553A	32
		Crosley		558	36
Airline		56TD	19	560	39
see Montgomery		56TN	20	1002	38
		56TQ	21	1003	38
Allied Radio		56TY	22	120006	28
5B175	12	56TZ	21	120007	29
5B176	12	57TK	23	120010	27
5C175	12	57TL	23	120016	39
5C176	12	57TQ	21	120036	32
6A-122	14	58TC	18	120037	31
6A-127	13	58TW	18	120040	30
6B-122	14			120042A	26
6B-127	13	Delco		120046	33
6C-122	14	see United Motors		120050A	35
6C-127	13			120051	37
		Echophone		120052	34
Arvin		EC-306	66	120056	28
140P	123	EX-306	66	120058	36
150-TC	128			129003	38
151-TC	128	Electronic Corp.			
182TFM	127	101	25		
RE-202	124	102W	25		
RE-206-2	125	104	25		
RE-209	123	106	25		
RE-228	128	108	24		
RE-229	126	133	25		

Continued on page 4

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

Espey Mfg. Co.

97-A	40
6547	40
10536A	41
20516A	40
20626-A	40

Fada Radio

P-82	42
P-100	42
711	43
740	43

Farnsworth

GK-100	44
GK-102,GK-103	44
GK-104	44
C-170	44
C-194	44
C-196	45
C-201	44
C-216	44
EF-451	45

Galvin Mfg. Co. see Motorola

Gamble-Skogmo

43-5005	46
43-8177	47
43-8178	47
43-8179	47
43-8190	48
43-8201	49
43-8353	50
43-8354	50

Garod Radio

4A-1	52
4A-2	52
5A1	52
5AP1-Y	51
5D-5	51
11FMP	53

General Electric

15	60
41	54-55
42	54-55
43	54-55
44	54-55
45	54-55
YRB 79-1	56
YRB 79-2	56

General Electric

YRB 83-1	56
140	57
180	58
254	59-60
280	61

General Television

23A6	62
------	----

Gilfillan

56	64
66B	62
66PM	64

Goodrich (B.F.) Co.

R662	63
R662N	63

Hallicrafters Co.

S-38	65
EC-306	66
EX-306	66

Hamilton Radio

6-507	67
6-608	68
7-526	69

Hoffman Radio Corp.

100	70
100S	70
110S	71
113	72
118	73
119	74
A202	74
A300	70
A309	74
B400	73
B502	72
A700	71

Howard Radio

902-A	79
906-S	75-76
909-M	77-78

Knight

see Allied Radio

Majestic Radio

5A445	80
5A445R	80
5AK711	81
5AK731	81-82
5AK780	81-82
5B01A	81

Majestic Radio

5B05A	81-82
7JK777R	83
7P420	85
8S473	84
4506	80
4705	85
4708R	83
4810	84

Mantola

R662	63
R662N	63

Masco

Phonograph	86
------------	----

John Meck Indust.

PM-5C5-P	87
RC-5C5-P	87
6A7	88

Midwest Radio

16	89
816	89

Montgomery Ward

74BR-1053A	90
74BR-1055A	90
74BR-2001A	91
74WG-1054A	92
74WG-1056A	93
74WG-1509A	94
74WG-1510A	94
74WG-1802A	95
74WG-1803A	95
74WG-1804D	94
74WG-1805A	94
74WG-2004	95
74WG-2010B	100
74WG-2504C	96-97
74WG-2704C	96
74WG-2705A	102
74WG-2709A	98-99

Motorola, Inc.

CT6	113-115
HS-22	111-112
HS-26	111-112
47B11	106
HS-52	111-112
ST-56	116-121
57X11	107-108
57X12	107-108
HS-59	109-110
HS-60	107-108
65F21	111-112
67F61BN	104-105

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS



Motorola, Inc.	R.C.A. Mfg. Co.	Sentinel Radio	Trav-ler Radio
67L11 109-110	CV-42 143	293-CT 157-158	501 172
HS-69 104-105	54B5 142	309-I 156	5019 171
85F21 111-112	63E 141	309-N 156	5028 172
85K21 111-112	63EM 141	309-R 156	5051 171
Chevrolet 113-115	65BR9 145	309-W 156	7004 172
Tuner 116-121	65F 143		
National Union	66X11 144	Silver (McMurdo) Co.	Trustone
G-619 122	66X12 144	906 159	see Western Auto
Noblitt-Sparks	66X13 144		
140P 123	66X14 144	Silvertone	United Motors
150-TC 128	66X15 144	see Sears, Roebuck	R-1236 173
151-TC 128	68R1 146-147		R-1237 173
182TFM 127	68R2 146-147	Simpson (Mark) Mfg.	R-1238 173
RE-202 124	68R3 146-147	Phonograph 86	980744 174-175
RE-206-2 125	68R4 146-147		980745 174-175
RE-209 123	RS-127 141	Sonora Radio	Warwick Mfg. Co.
RE-228 128	RC-608 146-147	WA-243 161	C110 176
RE-229 126	RS-1000 143	WA-244 161	11011 176
RE-231 124	RC-1004E 143	WAU-243 161	
RE-237 127	RC-1045 145	WAU-244 161	Western Auto
552AN 124	RC-1046 144	WD-233 162	D-1747 177-178
552N 124	RC-1046A 144	WD-249 162	D-1748 177-178
555 124	RC-1046B 144	WDU-233 162	D-2624 179
555A 124	RC-1047 142	WDU-249 162	D-2630 179
665 126	Regal Electronics	WGF-241 160	D-2634 180
6640 125	1049 148	WGF-242 160	D-2718 179
		WGFU-241 160	D-2745 182
		WGFU-242 160	
Olympic Radio	Sears, Roebuck		Westinghouse Elec.
6-507 67	6285 149	Sparks-Withington	H-135 183
6-608 68	6285A 149	see Sparton	H-148 184
7-526 69	7020 152		H-157 185
	7021 152	Sparton	
Packard-Bell	7086 151	5-07PA 164	Wilcox-Gay Corp.
5DA 129	7103 151	5-16 163	6B45B 181
471 131	7165 152	6-06 166	6B45M 181
673 130	7166 152	6-26 165	6B45W 181
	7210 154	6-26-PA 165	
Philco Radio	8000 150	Stewart-Warner	Zenith Radio Corp.
UN-6-400 133	8144 153	A41T1 167	4C21 187
46-250 132	8150 153	A51T1 168	4C54 188-189
46-350 134	101.666A 149	A51T2 168	4K040 188-189
46-427 135	101.666-1B 149	A51T3 168	4K040G 188-189
46-1226 136	101.807, -A 152	A51T4 168	5C40 190-191
250 132	101.820 154	A61CR1 169	5C40Z 190-191
350 134	101.823, -1, -A 152	A61CR2 169	5C51 186
427 135	109.634 153	A61CR3 169	5G003 190-191
1226 136	110.466 151	A61CR4 169	5G003Z 190-191
	110.466-1 151	9020-A, to-D 168	5G036 186
Pilot Radio	132.838 150	9032-A 167	6C50 192
T-521 137-138	431.199 153	9034-C, to-F 169	6G038 192
T-570 138	Sentinel Radio	Templetone Radio	11C21Z Change 189
T-601 140	1U-293-CT 157-158	E-510toE-519 170	S-12600 187
T-741 139	286P 155	G-513 170	
Pilotuner 140	286PR 155	G-515 170	

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS


Admiral

CHASSIS 4B1
MODELS 7T06, 7T12

TUBE AND TRIMMER LOCATION

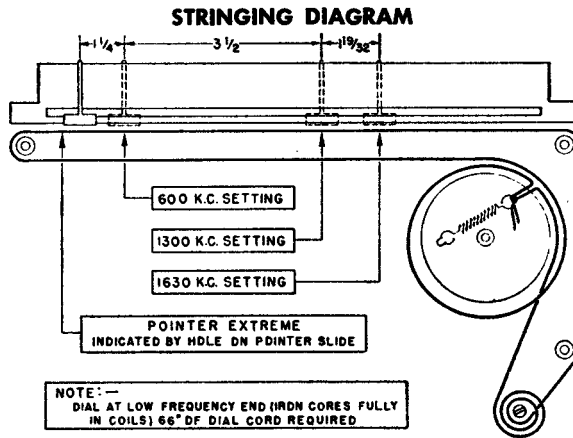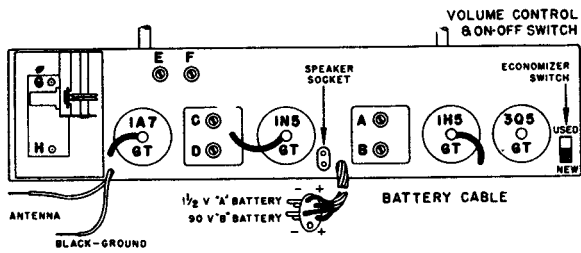

VOLTAGE CHART

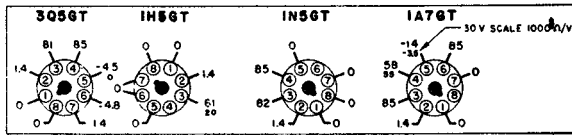

BACK OF CHASSIS

VOLTAGE DATA

All readings made between tube socket terminals and chassis. Voltages indicated have been obtained using a Vacuum Tube Voltmeter. A second voltage reading is shown made with a 1000 ohm-per-volt meter, when use of this instrument would result in appreciably lower readings. Measured with a fresh battery, volume control full on, dial at the high frequency end, no signal.

Occasionally audio oscillation may occur in the 4B1 chassis with the volume control in an intermediate position. Should you encounter this trouble, reverse the leads of the primary of the output transformer or ground the speaker frame to the chassis. The speaker leads and grid lead of the IH5 should be kept as far as possible from the 3Q5 output tube.

RESISTORS

Symbol	Description	Part No.
R1	15,000 ohm 1/2 Watt	60B B-153
R2	470,000 ohm 1/4 Watt	60B 2-474
R3	220,000 ohm 1/2 Watt	60B B-224
R4	33,000 ohm 1/2 Watt	60B B-333
R5, RB	4,700,000 ohm 1/4 Watt	60B 2-475
R6	2,200,000 ohm 1/4 Watt	60B 2-225
R7	1 meg. Vol. Control	75B 1-1
R9, R10	1,000,000 ohm 1/4 Watt	60B 2-105
R11	390 ohm 1/4 Watt	60B 2-391
R12	.75 ohm 1/2 Watt (wire)	61A 2-1
R13	2200 ohm 1/4 Watt	60B 2-222


TRANSFORMERS and COILS

Symbol	Description	Part No.
L1	Antenna Coil	AC105-1
L2	Oscillator Coil	A1020
L3	1st I.F. Transformer	72B 5
L4	2nd I.F. Transformer	72B 6
L5	Choke Coil (RF)	AB103-1
T1	Output Transformer	98A 5

CONDENSERS

Description	Part No.	
C1	.01 mfd. 400 Volts	64B 1-25
C2	.0008 mfd. Mica	65B 5-31
C3	Trimmer, Antenna	66A 9-1
C4	Trimmer, Oscillator	66A 9-1
C5	.0001 mfd. Mica	65B 7-17
C6	.0008 mfd. Mica	65B 5-31
C7	.01 mfd. 400 Volts	64B 1-25
C8	.002 mfd. 600 Volts	64B 1-14
C9	4. mfd. 150 Volts (Elect)	67A 4-2
C10	.05 mfd. 200 Volts	64B 1-32
C11	.00025 mfd. Mica	65B 7-22
C12	.00025 mfd. Mica	65B 7-22
C13	.01 mfd. 400 Volts	64B 1-25
C14	.01 mfd. 400 Volts	64B 1-25
C15	.005 mfd. 600 Volts	64B 1-12
C16	.01 mfd. 400 Volts	64B 1-25
C17	.01 mfd. 400 Volts	64B 1-25

(C17 omitted in early models)

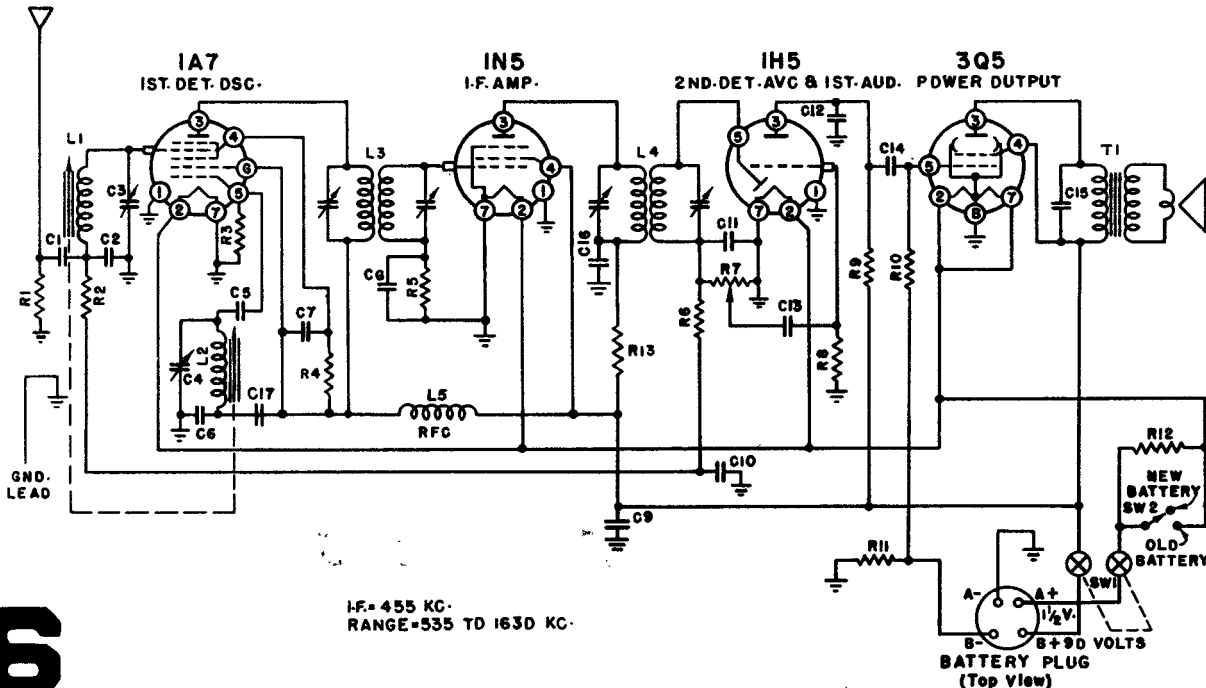

6

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

CHASSIS 5 H 1

MODELS 7P32, 7P33, 7P34

Admiral

ALIGNMENT PROCEDURE

1. Disconnect Loop Antenna leads from clips on set and remove chassis from cabinet.
2. Make alignment using a battery whenever possible.
3. Connect a fresh battery to the set.

IMPORTANT: Check dial drum position on shaft. Tuner arm should just complete downward travel when gang is fully meshed. At this point, tuner arm should be on short flat part of cam. Check pointer. It should be at last dial scale mark just below 550 K.C. when gang is fully meshed. If not, move pointer on dial cord.

Step	Dummy Antenna Used in Series with Signal Generator	Connect High Side Signal Generator to	Signal Generator Frequency	Receiver Gang Setting	Trimmer Designation and Description	Type of Adjustment
(1)	.00025 Mfd. when using A.C. .1 Mfd. when using Battery	Grid of 1R5 (Pin 6)	455 K.C.	Any point where it does not affect Signal	2nd I.F. 1st I.F.	Maximum Deflection Then repeat
(2)	.00025 Mfd. when using A.C. .1 Mfd. when using Battery	Stator lug of rear variable condenser section	1620 K.C.	Tuning Gang Wide Open	Oscillator Trimmer	Maximum Deflection
(3)	.00025 Mfd. when using A.C. .1 Mfd. when using Battery	Stator lug of rear variable condenser section	1400 K.C.	Tune in Generator Signal	R.F. Slug	Maximum Deflection
(4)	Replace Set in Cabinet					
(5)	.00025 Mfd.	Antenna and Ground Leads	1400 K.C.	Tune in Generator Signal	Antenna Trimmer	Maximum Deflection

RESISTORS


Symbol	Description	Part No.
R1	2.2 Megohms, 1/4 Watt	60B 3-225
R2	1 Megohm, 1/4 Watt	60B 3-105
R3	100,000 Ohms, 1/4 Watt	60B 3-104
R4	18,000 Ohms, 1/3 Watt	60B 2-183
R5	3.3 Megohms, 1/4 Watt	60B 2-335
R6	10 Megohms, 1/4 Watt	60B 3-106
R7	1 Megohm Volume Control and Switch SW2 (DPST)	75B 1-1B
RB	4.7 Megohms, 1/4 Watt	60B 2-475
R9	470,000 Ohms, 1/4 Watt	60B 3-474
R10	10,000 Ohms, 1/4 Watt	60B 3-103
R11	2.2 Megohms, 1/4 Watt	60B 3-225
R12	47 Ohms, 1 Watt	60B 14-470
R13	2700 Ohms, 1 Watt	60B 14-272

R14	2600 Ohms, 5 Watt	61A 6-1
R15	1500 Ohms, 1/4 Watt	60B 2-152
R16	820 Ohms, 1/4 Watt	60B 2-B21
R17	220 Ohms, 1/4 Watt	60B 2-221
R18	150 Ohms, 1/4 Watt	60B 2-151

CONDENSERS

C1	250 Mmf., Mica	65B 7-22
C2	.25 Mfd., 200 Volts, Paper	64B 1-2B
C3	420 Mmf., Mica	65B 1-13
C4	250 Mmf., Mica	65B 7-22
C5	.01 Mfd., 400 Volts, Paper	64B 1-25
C6	100 Mmf., Mica	65B 7-17
C7	15 Mmf., Ceramic	65B 6-18
C8	.01 Mfd., 400 Volts, Paper	64B 1-25


C9	.01 Mfd., 400 Volts, Paper	64B 1-25
C10	250 Mmf., Mica	65B 7-22
C11	.01 Mfd., 400 Volts, Paper	64B 1-25
C12	100 Mmf., Mica	65B 7-17
C13	.01 Mfd., 400 Volts, Paper	64B 1-25
C14	4 Mfd., 150 Volts, Electrolytic	67A 4-2
C15	.002 Mfd., 600 Volts, Paper	64B 1-14
C16	.18 Mfd., 200 Volts, Paper	64A 2-2
C17a	50 Mfd., 150 Volts, Elect.	67C 7-5
C17b	20 Mfd., 150 Volts, Elect.	
C17c	200 Mfd., 25 Volts, Elect.	
C17d	20 Mfd., 150 Volts, Elect.	
C18	.05 Mfd., 400 Volts, Paper	64B 1-22
C19a	0 to 420 Mmf., Gang	68B 6
C19b	0 to 162 Mmf., Gang	68B 6
C20	10 Mmf., Ceramic	65B 6-24

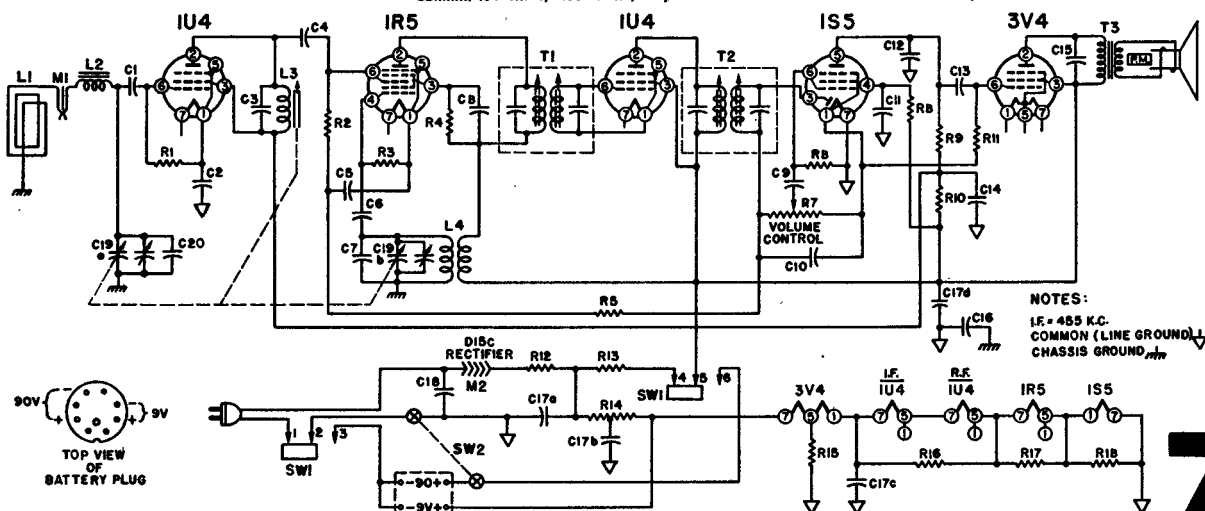

NOTES:
I.F. = 455 K.C.
COMMON (LINE GROUND)
CHASSIS GROUND

7

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

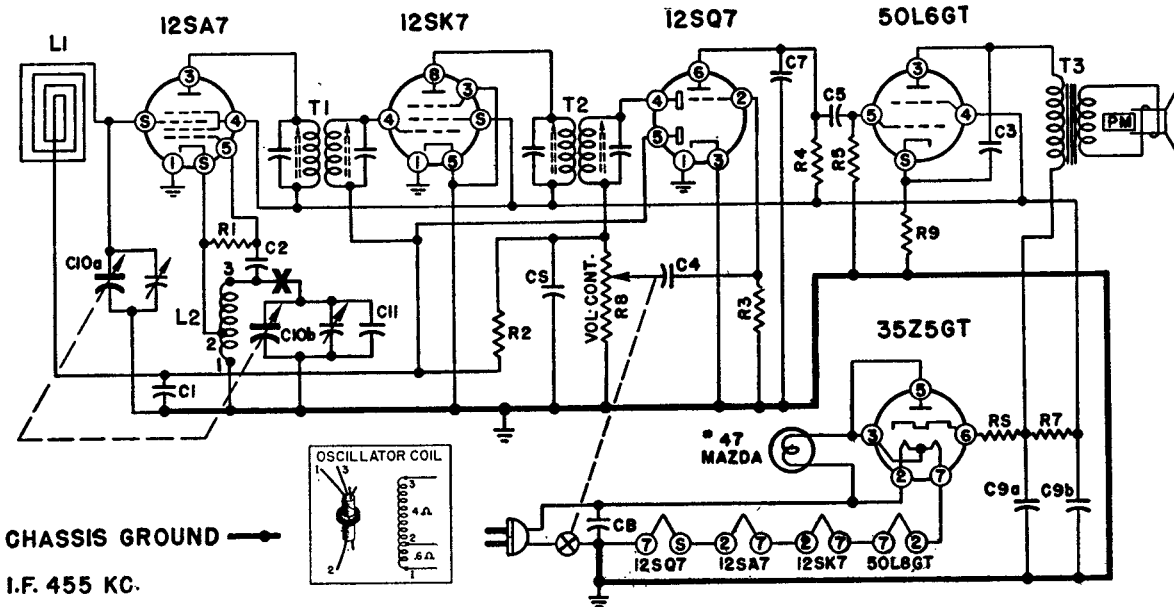

- UL5K1** {
1. .05 mfd. condenser added at point "X" in oscillator circuit.
 2. B minus is isolated from chassis by 150,000 ohm resistor and .18 mfd. condenser in parallel.
 3. Gang condenser grounded to chassis and not connected to B minus as in above circuit.

Admiral

CHASSIS 5 K 1
MODELS 7T10, 7T14, 7T15

RESISTORS


Symbol	Description	Part No.
R1	22,000 Ohms, 1/2 Watt	60B B-223
R2	1 Megohm, 1/2 Watt	60B B-105
R3	4.7 Megohms, 1/2 Watt	60B B-475
R4	470,000 Ohms, 1/2 Watt	60B B-474
R5	470,000 Ohms, 1/2 Watt	60B B-474
R6	33 Ohms, 1 Watt	60B 2B-3
R7	1000 Ohms, 1 Watt	60B 2B-2
RB	1 Megohm Volume Control and Switch	75B 1-16
R9	150 Ohms, 1/2 Watt	60B B-151

CONDENSERS

C1	1 mfd., 200 Volts, Paper	64B 1-30	
C2	50 mmfd., ±20%, Ceramic	65B 6-4	
C3	.02 mfd., 400 Volts, Paper	64B 1-24	
C4	.01 mfd., 400 Volts, Paper	64B 1-25	
C5	.01 mfd., 400 Volts, Paper	64B 1-25	
C6	250 mmfd., ±20%, Ceramic	65B 6-5	
C7	500 mmfd., ±20%, Ceramic	65B 6-6	
C8	.05 mfd., 400 Volts, Paper	64B 1-22	
C9a	50 mmfd., 150 Volts	Elec. 67A 10	
C9b	30 mmfd., 150 Volts		
C10a	Gang, 0 to 420 mmfd.	A1460	
C10b	Gang, 0 to 162 mmfd.		
			(Spot welded to drum)
C11	20 mmfd., ±20%, Ceramic	65B 6-26	


Connect Signal Generator to—	Dummy Antenna Between Radio and Generator	Set Generator Frequency to—	Set Receiver Dial Frequency to—	Adjust Following Trimmers	Type of Adjustment
Tuning Condenser Antenna Stator	250 mmfd. Condenser	455 K.C.	High frequency end of Dial	A-B—2nd I. F. C-D—1st I. F. (See note below)	Adjust to maximum Output
Tuning Condenser Antenna Stator	250 mmfd. Condenser	1630 K.C.	High frequency end of Dial	E—Osc.	Adjust to maximum Output
Loop radiator (or place lead from generator close to loop of set to obtain adequate signal).	No actual connection between set and generator.	1400 K.C.	Tune in generator signal	F—Ant.	Adjust to maximum Output

Note: In some sets, the B and D adjustments must be made from the underside of the chassis.

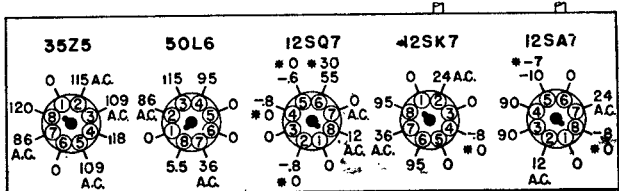

8


e Voltages measured with a vacuum-tube voltmeter. A second voltage reading (marked with an asterisk *) indicates readings made with a 1000 ohm-per-volt meter.

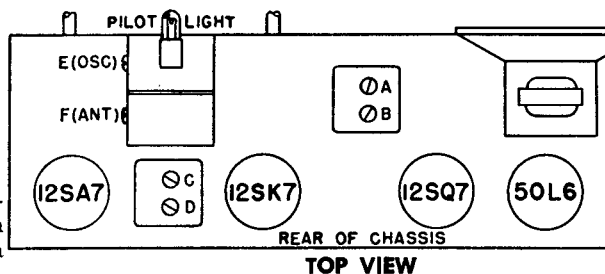


MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

Admiral

CHASSIS 5 N 1
MODELS 7T01, 7T04

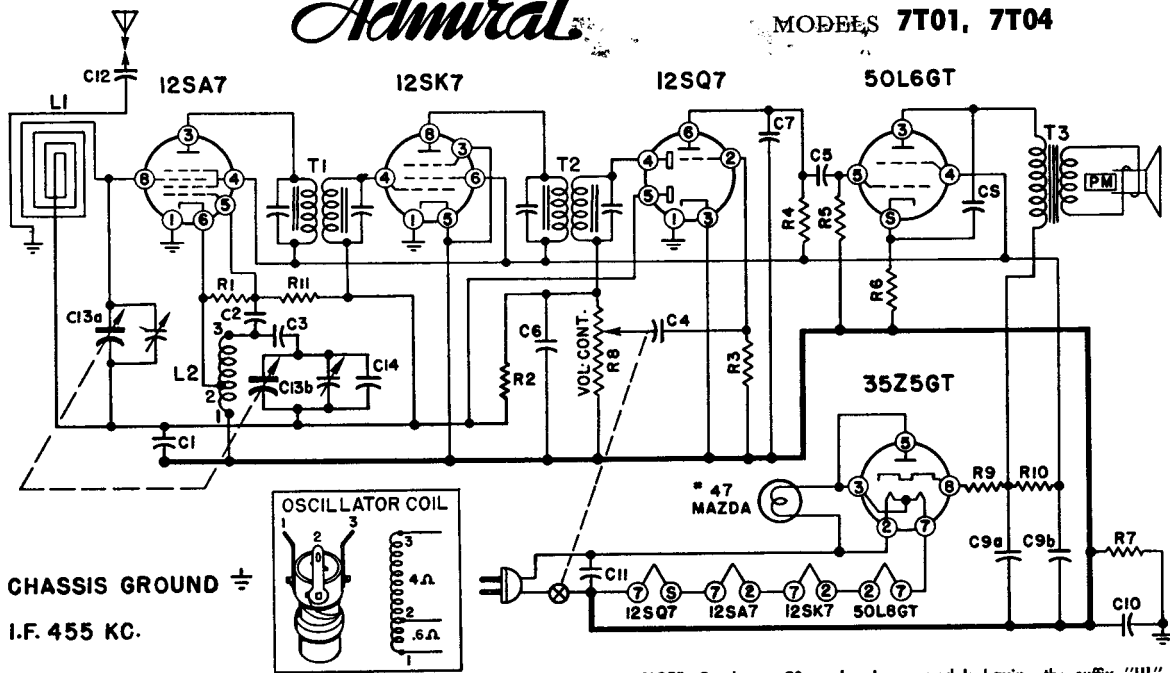


CHASSIS GROUND \perp
I.F. 455 KC.

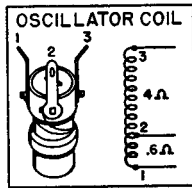


NOTE: Condenser C3 used only on models having the suffix "UL".

DIAL CORD STRINGING & POINTER SETTING

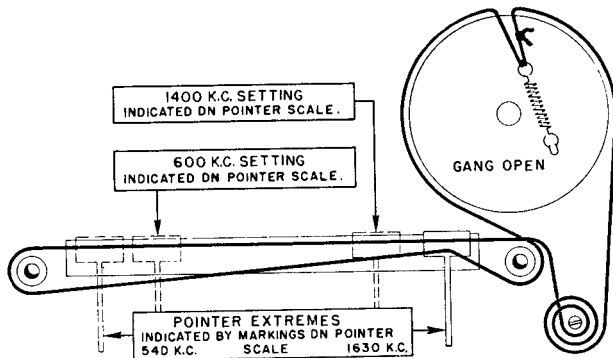

VOLTAGE CHART

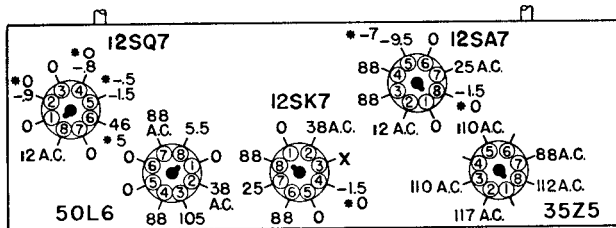

- All readings made between tube socket terminals and pin 3 of 12SK7 (marked "X" on Voltage Chart).
- Voltages measured on a 117 Volt A.C. line.
- Dial turned to low frequency end, no signal.
- Voltages measured with a vacuum-tube voltmeter. A second voltage reading (marked with an asterisk *) indicates readings made with a 1000 ohm-per-volt meter when use of this instrument would result in appreciably lower readings.

RESISTORS

Symbol	Description	Part No.
R1	22,000 Ohms, 1/2 Watt	60B 8-223
R2	1 Megohm, 1/2 Watt	60B 8-105
R3	4.7 Megohms, 1/2 Watt	60B 8-475
R4	470,000 Ohms, 1/2 Watt	60B 8-474
R5	470,000 Ohms, 1/2 Watt	60B 8-474
R6	150 Ohms, 1/2 Watt	60B 8-151
R7	150,000 Ohms, 1/2 Watt	60B 8-154
R8	1 Megohm Volume Control & Switch	75B 1-6
R9	33 Ohms, 1 Watt	60B 28-3
R10	1,000 Ohms, 1 Watt	60B 28-2
R11	10 Megohms, 1/4 Watt	60B 2-106

CONDENSERS

C1	.1 mfd., 200 Volts, Paper	64B 1-30
C2	50 mmfd., Ceramic	65B 6-4
C3	.02 mfd., 400 Volts, Paper	64B 1-24
C4	.01 mfd., 400 Volts, Paper	64B 1-25
C5	.01 mfd., 400 Volts, Paper	64B 1-25
C6	250 mmfd., Ceramic	65B 6-5
C7	500 mmfd., Ceramic	65B 6-6
C8	.02 mfd., 400 Volts, Paper	64B 1-24
C9a	50 mmfd., 150 Volts	Elec. 67A 3
C9b	30 mmfd., 150 Volts	
C10	.1 mfd., 400 Volts, Paper	64B 1-20
C11	.05 mfd., 400 Volts, Paper	64B 1-22
C12	.005 mfd., 600 Volts, Paper	64B 1-12
C13a	Gang, 0 to 420 mmfd.	A1364
C13b	Gang, 0 to 162 mmfd.	
C14	15 mmfd., Ceramic	65B 6-18

COILS, TRANSFORMERS, ETC.


L1	Antenna, Loop (Includes C12)	69B 4
L2	Coil, Oscillator	69A 14
T1	Transformer, 1st I.F.	72B 31
T2	Transformer, 2nd I.F.	72B 32
T3	Transformer, Output	98A 4
	Speaker (5" PM) and Output Transformer	78B 18-2
	(Can also use 78B 18-1)	

MISCELLANEOUS

Description	Part No.
Botton, Snap (for Dial Background)	13A 1-3-47
Cabinet, Black Plastic (7T01E)	34D 1-3 N
Cabinet, Ivory Plastic (7T01C)	34D 1-1 N
Cabinet, Mahogany Plastic (7T01M)	34D 1-2 N

9

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

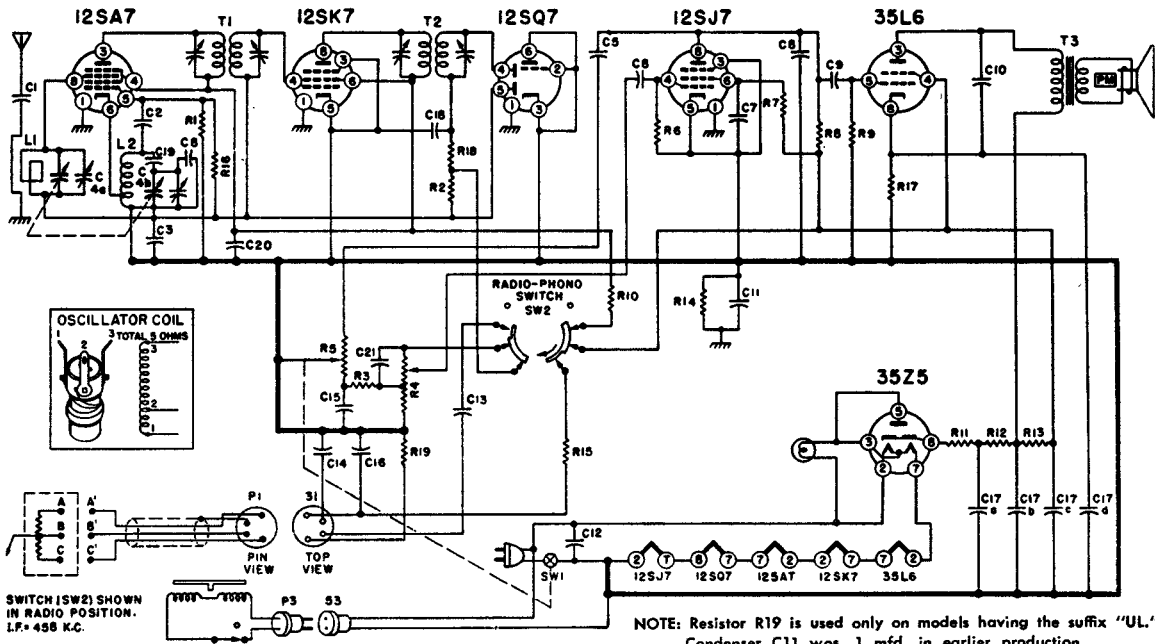

RESISTORS


Symbol	Description	Part No.
R1	22,000 Ohms, 1/2 Watt	608 8-223
R2	1 Megohm, 1/2 Watt	608 8-105
R3	27,000 Ohms, 1/2 Watt	608 8-273
R4	1 Megohm Volume Control (Tapped at 500,000 ohms)	758 2-6
R5	2 Megohm Tone Control and Switch SW1	758 1-12
R6	4.7 Megohms, 1/2 Watt	608 8-475
R7	1.8 Megohms, 1/2 Watt	608 8-185
R8	100,000 Ohms, 1/2 Watt	608 8-104
R9	470,000 Ohms, 1/2 Watt	608 8-474
R10	100 Ohms, 1/2 Watt	608 8-101
R11	33 Ohms, 1 Watt	608 28-3
R12	220 Ohms, 1 Watt	608 28-7

R13	1,000 Ohms, 1 Watt	608 28-2
R14	150,000 Ohms, 1/2 Watt	608 8-154
R15	22,000 Ohms, 1/2 Watt	608 8-223
R16	10 Megohms, 1/2 Watt	608 8-106
R17	150 Ohms, 1 Watt	608 14-151
R18	100,000 Ohms, 1/2 Watt	608 8-104
R19	33,000 Ohms, 1/2 Watt	608 8-333

CONDENSERS

C1	.005 mfd., 600 Volts, Paper	648 1-12
C2	50 mmfd. ±20%, Ceramic	658 6-4
C3	.1 mfd., 200 Volts, Paper	648 1-30
C4a	Gang, 0 to 420 mmfd.	688 5
C4b	Gang, 0 to 162 mmfd.	688 101
C5	.002 mfd., 600 Volts, Paper	648 1-14
C6	.01 mfd., 400 Volts, Paper	648 1-25

C7	.05 mfd., 400 Volts, Paper	648 1-22
C8	15 mmfd. ±20%, Ceramic	658 6-18
C9	.01 mfd., 400 Volts, Paper	648 1-25
C10	.03 mfd., 400 Volts, Paper	648 1-23
C11	.18 mfd., 200 Volts, Paper	64A 2-2
C12	.05 mfd., 400 Volts, Paper	648 1-22
C13	.001 mfd., 600 Volts, Paper	648 1-15
C14	.05 mfd., 400 Volts, Paper	648 1-25
C15	.01 mfd., 400 Volts, Paper	648 1-24
C16	.1 mfd., 200 Volts, Paper	648 1-30
C17a	30 mmfd., 150 Volts	Elect. 67A 14-1
C17b	30 mmfd., 150 Volts	
C17c	20 mmfd., 150 Volts	
C17d	20 mmfd., 25 Volts	
C18	250 mmfd. ±20%, Ceramic	658 6-5
C19	.02 mfd., 200 Volts, Paper	648 1-24
C20	.05 mfd., 400 Volts, Paper	648 1-22
C21	500 mmfd. ±20%, Ceramic	658 6-6

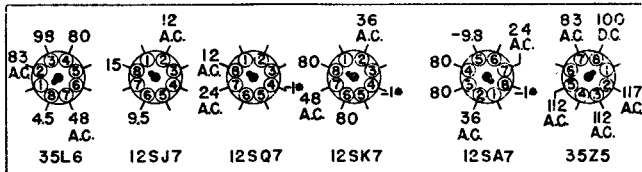

- Measured on a 117 Volt A.C. line.
- Volume control full on.
- Dial tuned to low frequency end, no signal.
- Voltage obtained on Vacuum Tube Voltmeter.


Connect Signal Generator to—	Dummy Antenna Between Radio and Generator	Set Generator Frequency to—	Set Receiver Dial Frequency to—	Adjust Following Trimmers	Type of Adjustment
Tuning Condenser Antenna Stator	250 mmfd. Condenser	455 K.C.	High frequency end of Dial	A-B—2nd I. F. C-D—1st I. F.	Adjust to maximum Output
Tuning Condenser Antenna Stator	250 mmfd. Condenser	1630 K.C.	High frequency end of Dial	E—Osc.	Adjust to maximum Output
Loop radiator (or place lead from generator close to loop of set to obtain adequate signal)	No actual connection between set and generator.	1400 K.C.	Tune in generator signal	F—Ant. (See Note)	Adjust to maximum Output

Note: Antenna Trimmer "F" must be aligned after chassis and loop are mounted in cabinet. This adjustment can be made thru the small round hole located in the rear of the cabinet.

10


Admiral

CHASSIS 6 L 1
MODELS 7RT41, 7RT42, 7RT43

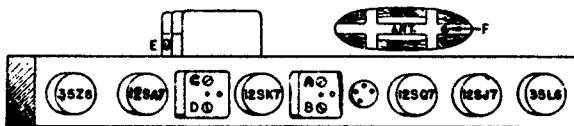

Knight RADIO

6A-122
6B-122
6C-122

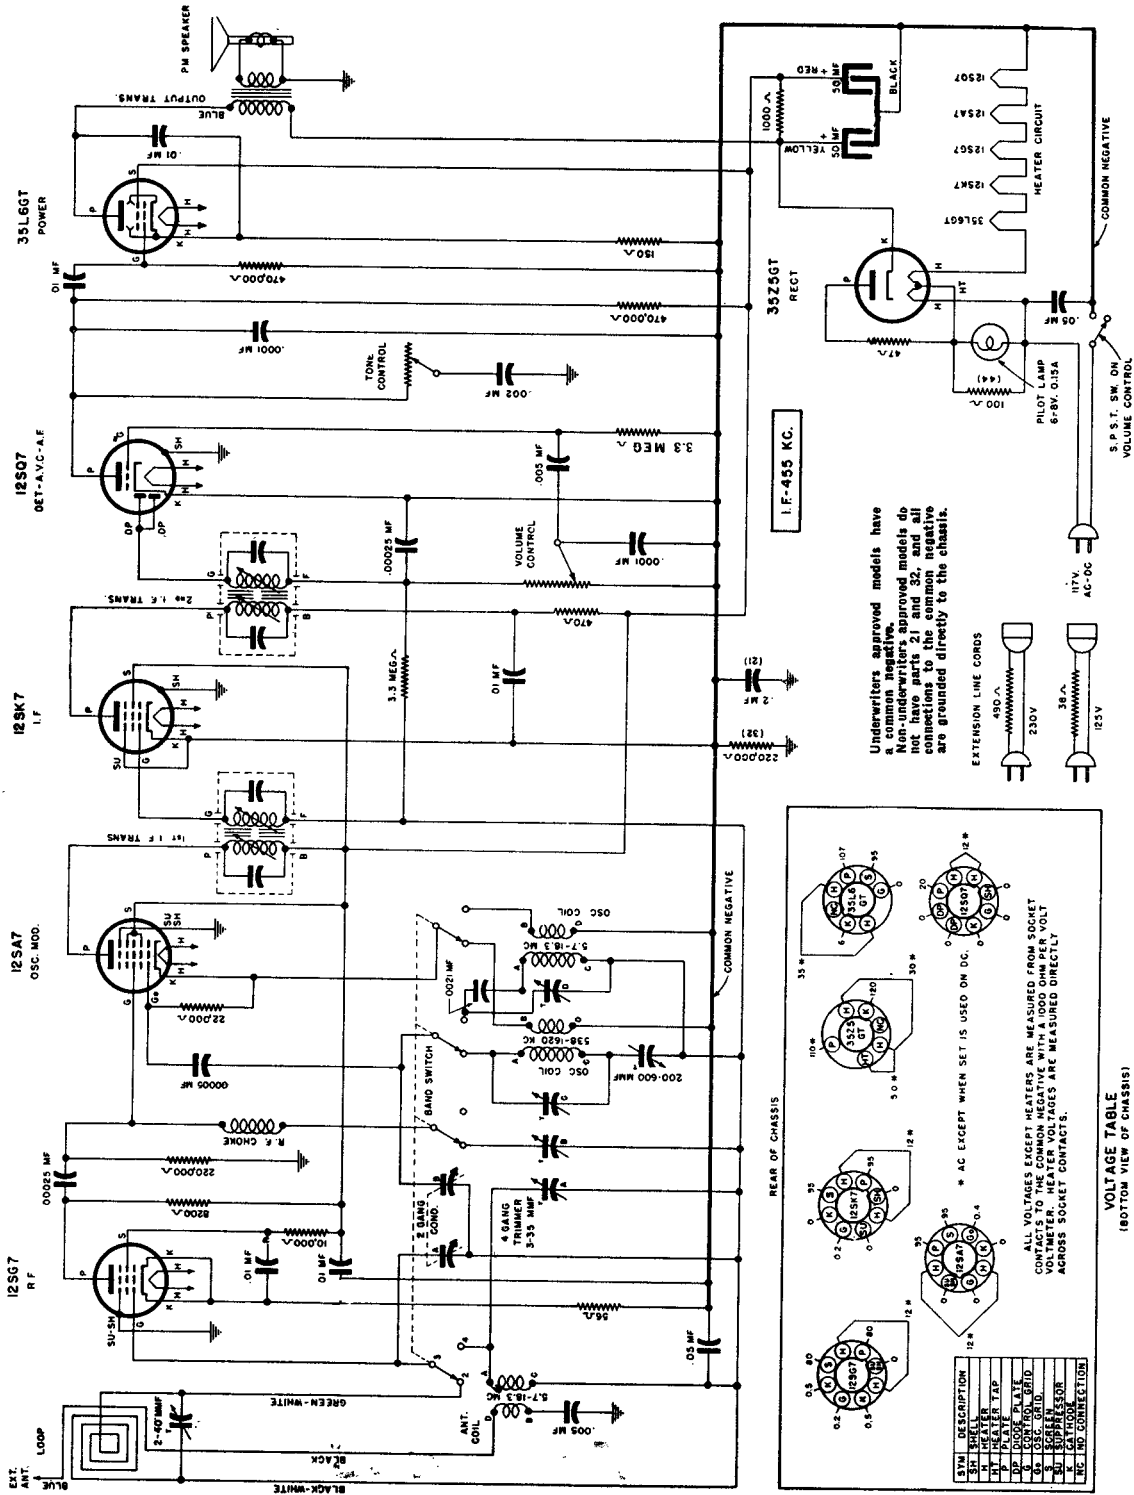


MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

Bendix

COPYRIGHT 1947 BENDIX AVIATION CORPORATION

MODEL 416A RECEIVER

CONDITIONS OF MEASUREMENTS
 ZERO SIGNAL INPUT VOL. CONT. MIN. SOCKET VOLTAGE RESISTANCE TO COMMON GROUND \perp D.C. AT 20,000 Ω/V .

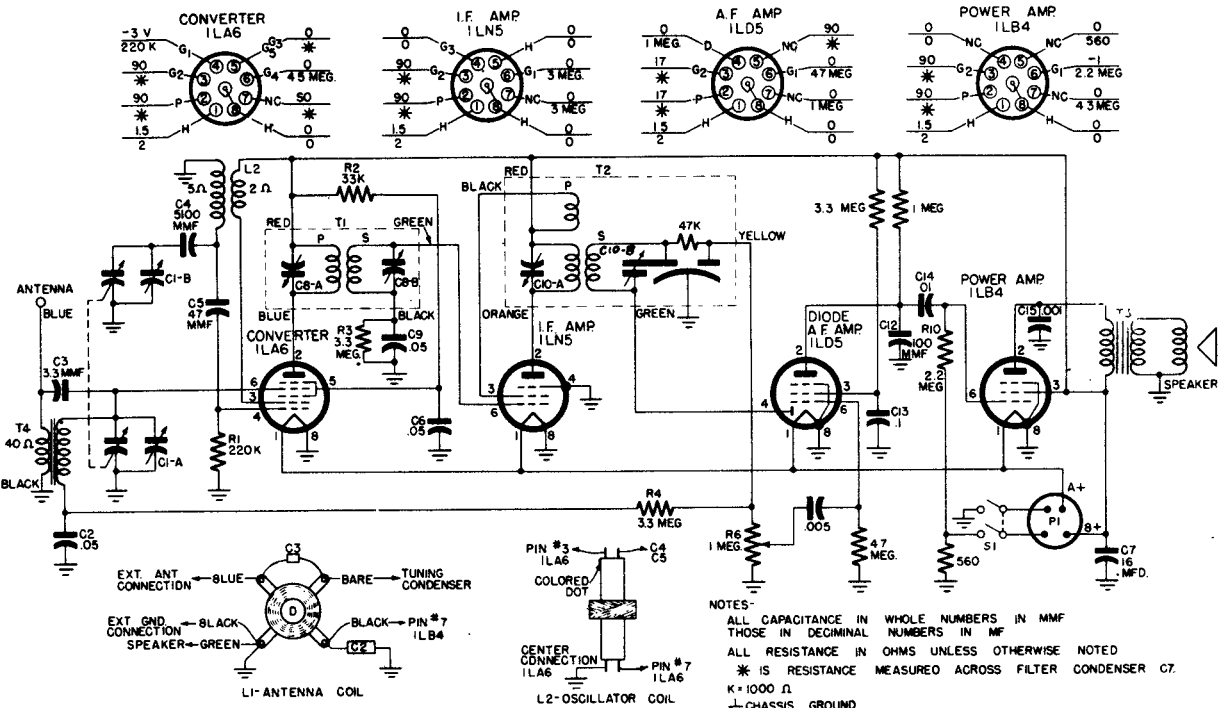

NOTES:
 ALL CAPACITANCE IN WHOLE NUMBERS IN MMF
 THOSE IN DECIMAL NUMBERS IN MF
 ALL RESISTANCE IN OHMS UNLESS OTHERWISE NOTED
 * IS RESISTANCE MEASURED ACROSS FILTER CONDENSER C7
 K = 1000 Ω
 \perp CHASSIS GROUND
 RANGE - 540 TO 1620 KCS

SYMBOL	TRANSFORMER RESISTANCE IN OHMS											
	ANT	OSC	1ST IF		2ND IF		OUTPUT					
	L1	L2	T1	T2	T3	T4	T5	T6	T7	T8		
PRIMARY	40	15	16	16	22	24	25	20	20	1000	1000	2000
SECONDARY	15	5	16	16	22	24	25	20	20			


RESISTANCE LESS THAN 1 OHM NOT SHOWN

ALIGNMENT PROCEDURE



Before making any adjustments check battery voltage: the "B" supply should not be below 85 volts and the "A" supply below 1.3 volts. Connect output meter across voice coil and RF signal generator, 30% amplitude modulated, to antenna lead through a .05 mfd. capacitor for IF alignment and through 200 mfd. for oscillator and RF alignment. All adjustments made for maximum output meter reading with volume control full on. Keep output of signal generator as low as possible at all times. Rotate tuning gang to fully closed position and set dial pointer to reference mark on dial back plate before proceeding with alignment as outlined in chart below.

Input Freq.	Dial Pointer Position	Adjust
455KC	Max. to right	C10B, C10A
1475KC	1475KC	C1B, C1A
965KC	965KC	*Check Calib.
580KC	580KC	*Check Calib.


If calibration is off more than 10KC the rotor plates of the gang may be bent to correct calibration.

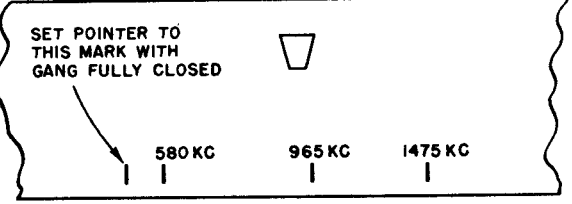

DIAL REFERENCE POINTS

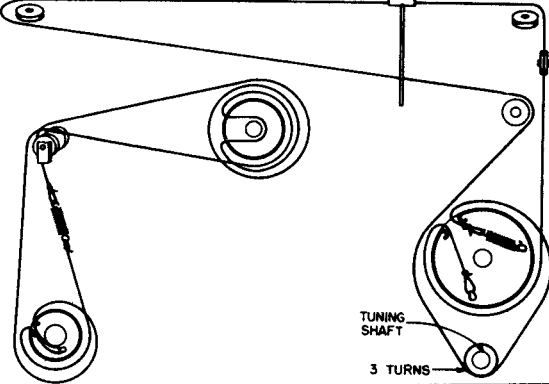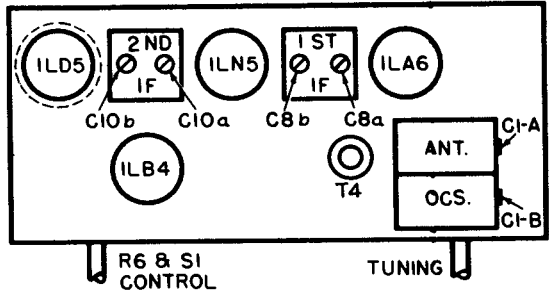

Bendix Radio

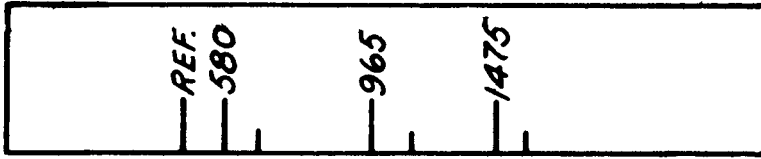

Dial Back Plate

Model R526M

5 Tube AC-DC Chassis

Power

Voltage.....105-125 V. A.C. or D.C.
 Frequency.....50-60 Cycles per Second
 Power Consumption.....30 Watts
 I.F. Frequency.....455 K.C.
 Tuning Range.....540-1620 K.C.
 Max. Power Output.....1.5 Watts
 Loud Speaker.....P.M.
 Cone Diameter.....4 Inches
 Voice Coil Impedance.....400Cycles, 3.2 Ohms

ALIGNMENT CHART

Before alignment begins, set middle of pointer over "Reference" line - with Gang Condenser completely closed - See Figure 1.

CIRCUITS ALIGNED	DIAL POINTER	INPUT FREQUENCY	APPLY THROUGH	TO	ADJUST
I.F.	Max. to Right	455 K.C.	.01 Mfd	Input Grid 12BE6	C3a, C3b, C6a, C6b.
Broadcast	1475 Ref. Mark	1475 K.C.	50 Muf	External Antenna Terminal	C1d C1b
Broadcast	965 Ref. Mark	965 K.C.	50 Muf	"	Check Calibration*
Broadcast	580 Ref. Mark	580 K.C.	50 Muf	"	Check Calibration*


* If calibration does not check within one pointer's width of the frequency mark, both oscillator and antenna sections of the gang condenser must be "knifed" properly.

Alignment Procedure



Set volume control at maximum. Use low range on output meter and keep signal generator input as low as practical. Make adjustments as shown in table for maximum output - with output meter connected across voice coil.

Precautions

An isolating transformer should be used between the power supply and the receiver for protection of test equipment.

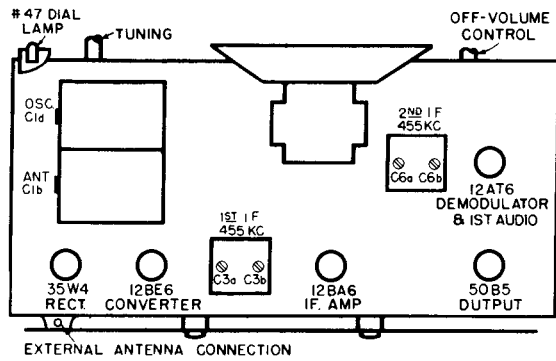



STANDARD CONDITIONS: LINE VOLTAGE - 117 V. A.C. ZERO SIGNAL INPUT VOL. CONT. MIN. DC AT 20,000 R.F.V. 4 G. AT 1,000 R.F.V.

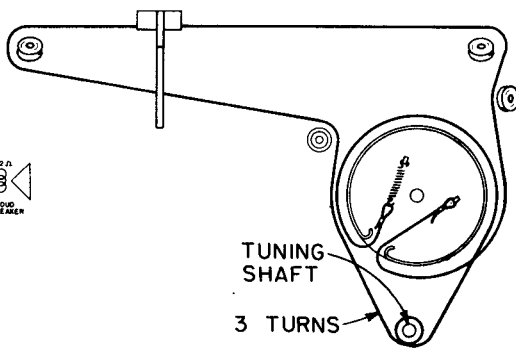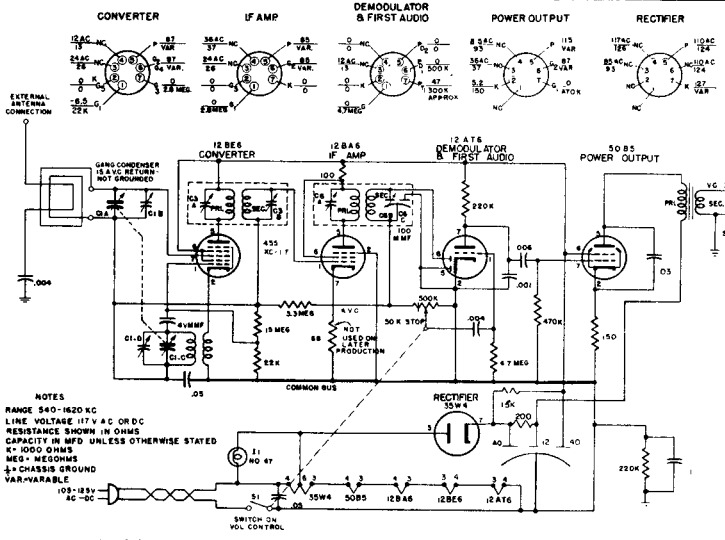

DIAL STRINGING DIAGRAM

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

Alignment Sequence	Signal Generator Output			Position of Tuning Dial KC	Adjust for Maximum Outout
	Frequency in KC	In Series with	To		
1	455	200 mmf.	Ant.	1620	A & B
2	1620	200 mmf.	Ant.	1620	C
3	1400	200 mmf.	Ant.	1400	D

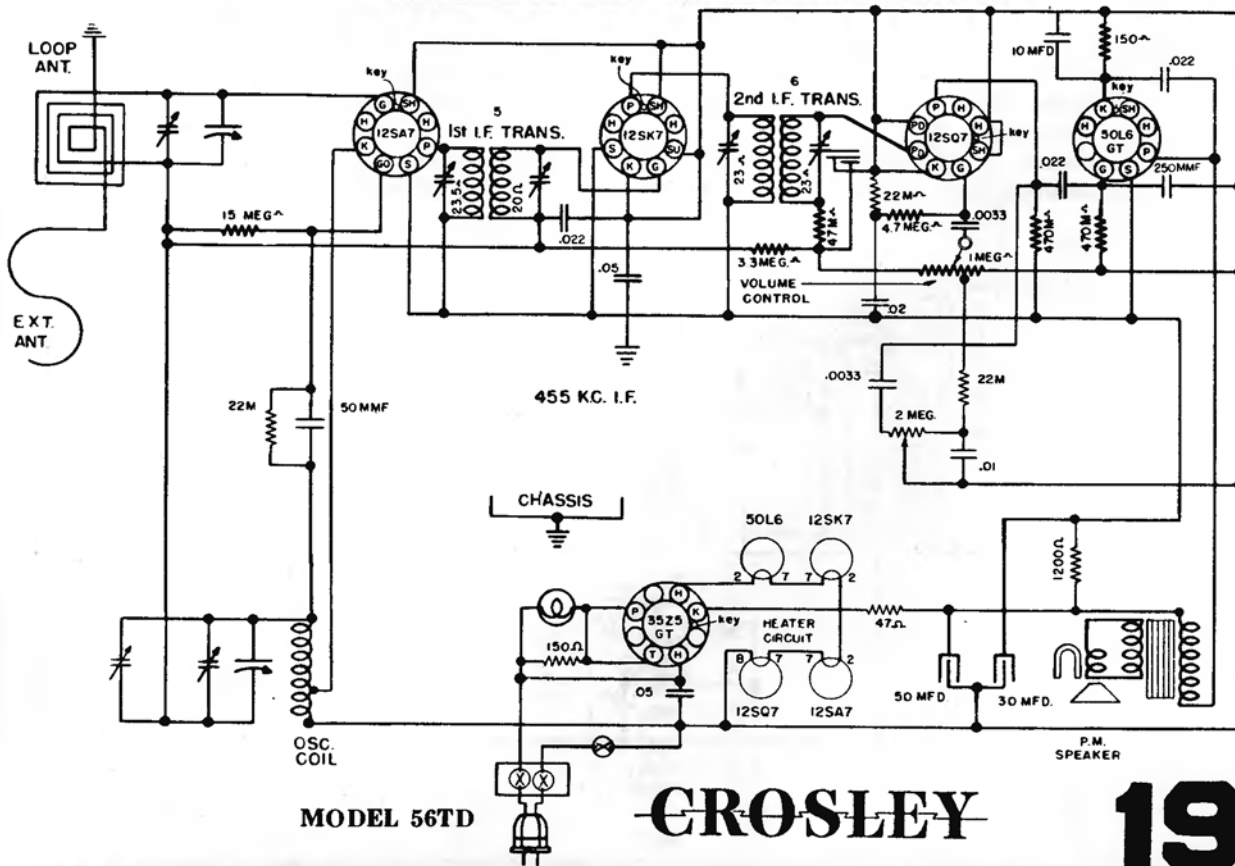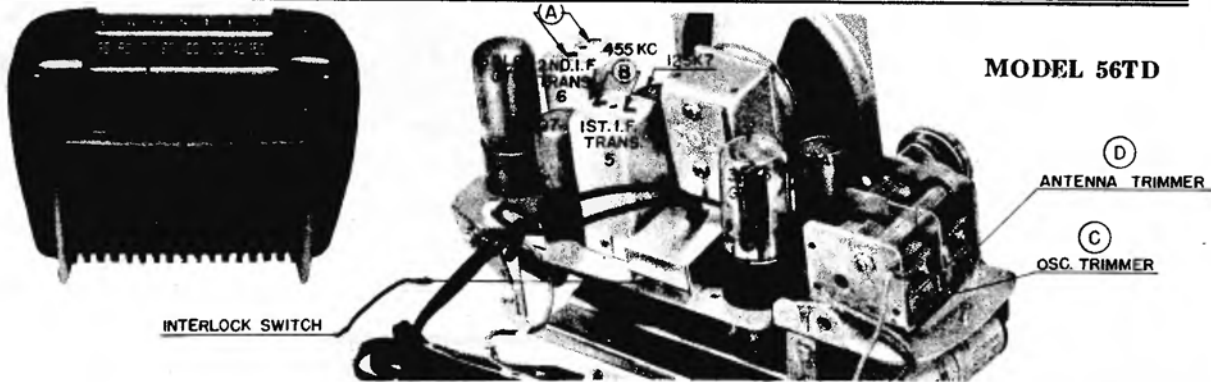


MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

CROSLEY


ALIGNMENT PROCEDURE—MODEL 56TN

1. Turn the tuning condenser to the completely closed position against the stop and set the dial pointer to the reference line at the end of the dial scale.
2. Connect the output meter across the speaker voice coil.
3. The r.f. signal input from the signal generator should be connected to the external antenna lead. Connect the signal generator ground through a 0.1 mfd. condenser to —B (pin 3 on 12SK7 tube socket).
4. Turn the volume control on full and adjust the signal generator output to produce approximately mid-scale deflection of the output meter, but maintain signal generator output as low as possible to prevent AVC action in the receiver.

Alignment Sequence	Signal Generator Output			Position of		Adjust for Maximum Output
	Frequency in kc.	In Series with	To	Band Switch	Tuning Dial	
1	455	200 mmf.	Ant.	Left	1,620	A & B
2	15,300	400 ohms	Ant.	Right	15,300	C
3	15,000	400 ohms	Ant.	Right	15,000	D
4	1,400	200 mmf.	Ant.	Left	1,400	E & F

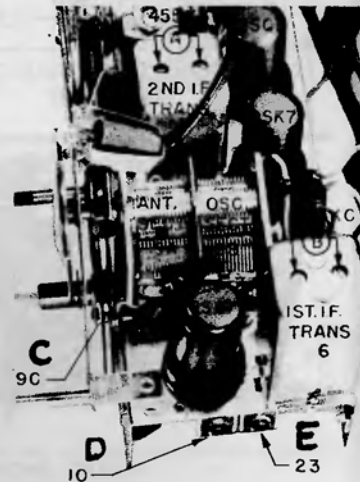


NOTE: When aligning the short-wave oscillator trimmer (C), be sure that the circuit is aligned at the correct frequency and not at the image frequency which is 910 kilocycles lower as indicated by the receiver dial. To check: Tune in the generator frequency, then increase the generator output and tune in the image frequency. The image frequency should be weaker than the fundamental and audible 910 kilocycles lower on the receiver dial. If the image cannot be tuned in, the oscillator trimmer is adjusted to the wrong peak; i.e., the oscillator trimmer may be adjusted to the image or one of the harmonics instead of the fundamental frequency. The correct peak is the second one heard as the trimmer adjustment screw is opened from the completely closed position.

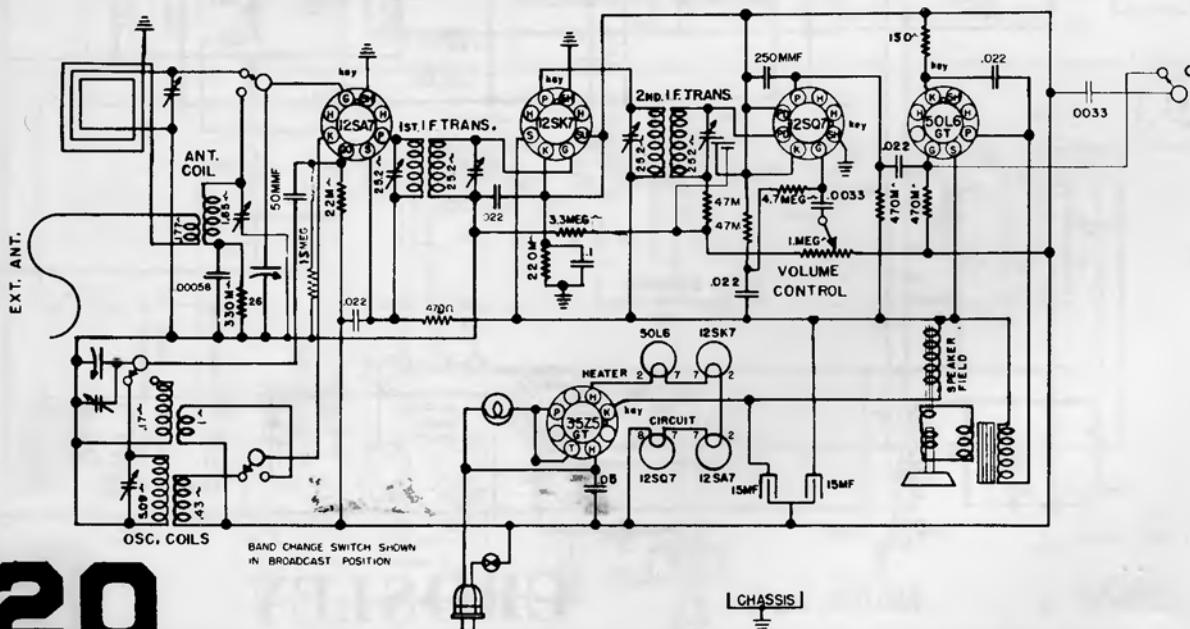


MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

MODELS 56TZ, 56TQ, 2nd PRODUCTION

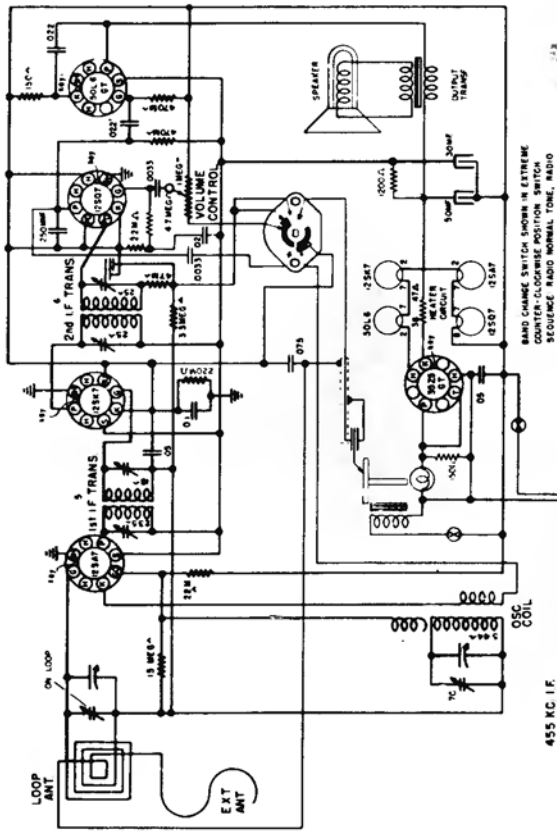


MODELS 56TZ, 57TQ, 1st PRODUCTION

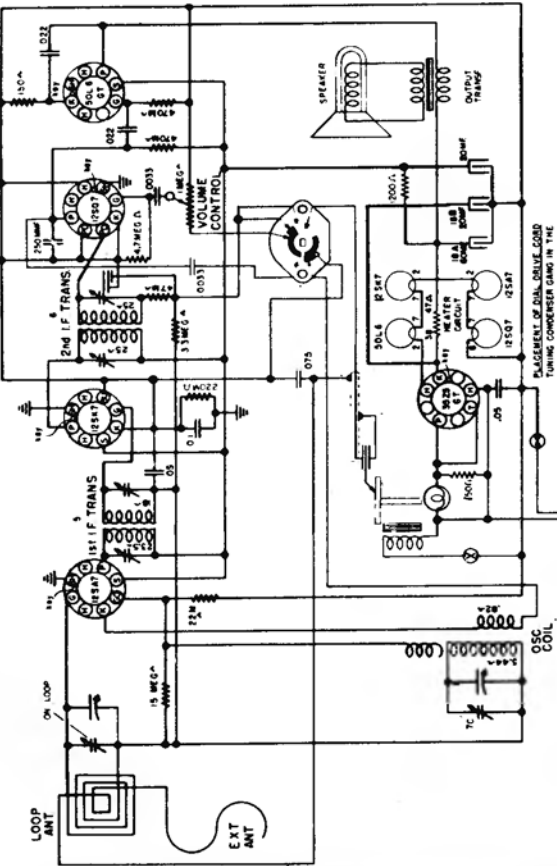

CROSLLEY

MODELS: 56TZ, 57TQ

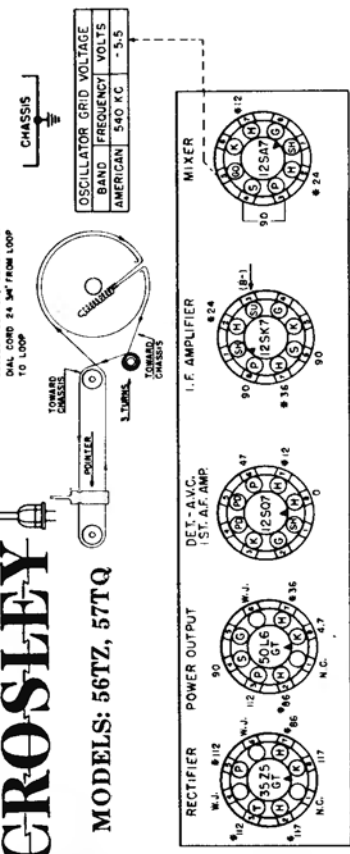

Alignment Sequence	Frequency in kc.	In Series with	Signal Generator Output		Position of		Adjust for Maximum Output
			To	Selector Switch	Tuning Dial		
1	455	200 mmf.	Ant.	R	1620	A & B	
2	1620	200 mmf.	Ant.	R	1620	C	
3	1400	200 mmf.	Ant.	R	1400	D	

NOTES:
 1. THESE ARE BOTTOM VIEWS OF TUBE SOCKETS
 2. MEASURE VOLTAGES FROM SOCKET LUGS TO B-(PIN 3 ON THE 12SK7)
 3. THESE VOLTAGES WERE MEASURED USING AN ELECTRONIC VOLTMETER.
 4. W.J. = WIRING JUNCTION.
 5. N.C. = NO CONNECTION.
 6. W. = 60 CYCLE A.C. VOLTAGES.
 7. SOCKET VOLTAGE TOLERANCE, 10%
 8. LINE VOLTAGE 117V, 60~A.C.


MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

ALIGNMENT PROCEDURE



CROSLEY

MODEL 56TY

1. Turn the tuning condenser to the completely closed position against the stop and set the dial pointer to the reference line at the end of the dial scale.
2. Connect the output meter across the speaker voice coil.
3. The r.f. signal input from the signal generator should be connected to the external antenna lead. Connect the signal generator ground through a 0.1 mfd. condenser to -B (pin 4 on 14A7 tube socket).
4. Turn the volume control on full and adjust the signal generator output to produce approximately mid-scale deflection of the output meter, but maintain signal generator output as low as possible to prevent AVC action in the receiver.

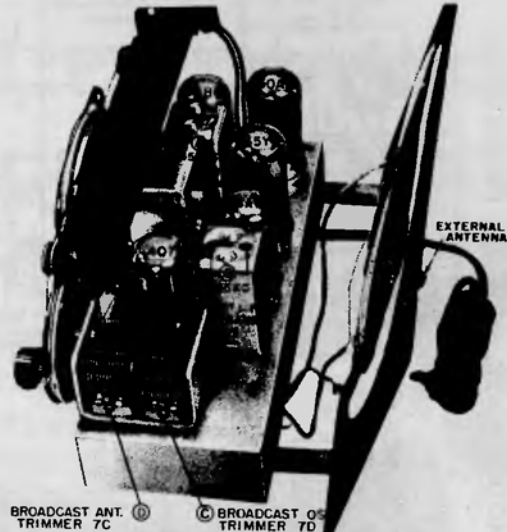

Alignment sequence	Signal Gen. Output			Position of Tuning Dial	Adjust for max. output
	Frequency in KC	In Series with	To		
1	455	200 mmf.	Ant.	1620	A & B
2	1620	200 mmf.	Ant.	1620	C
3	1400	200 mmf.	Ant.	1400	D

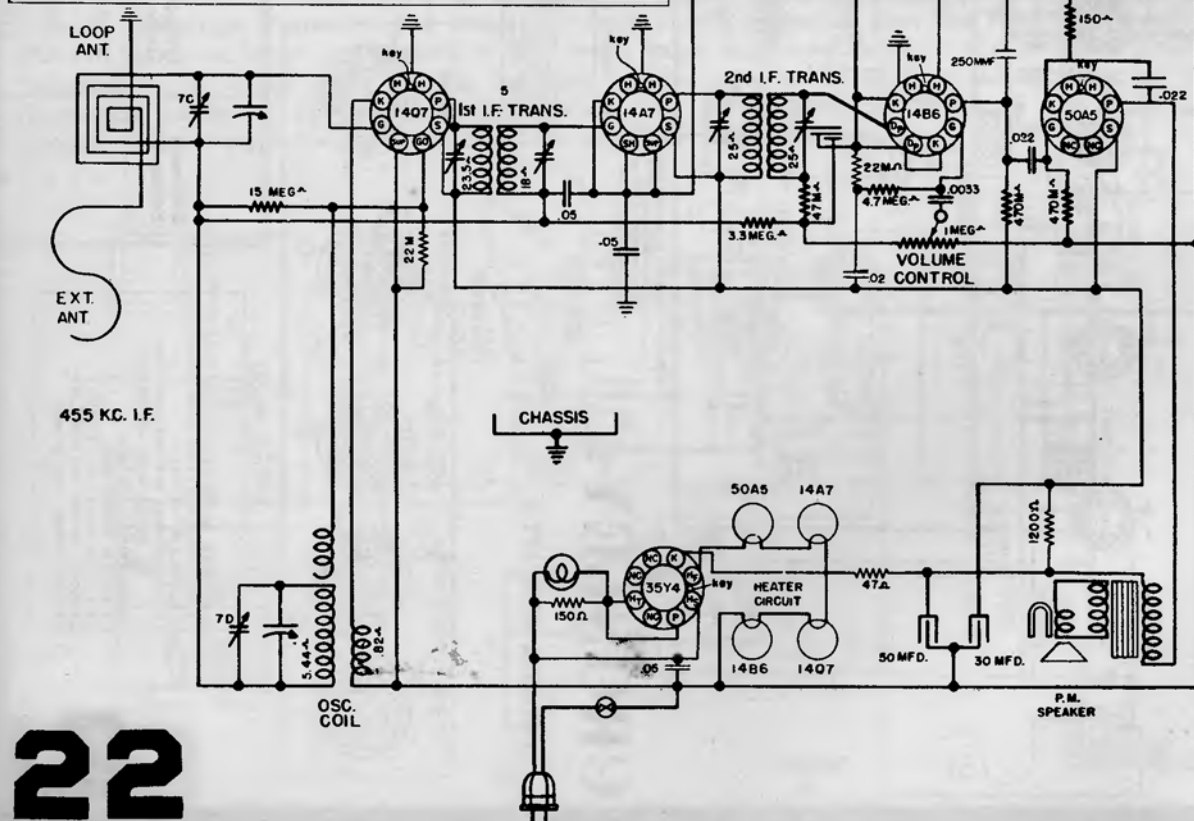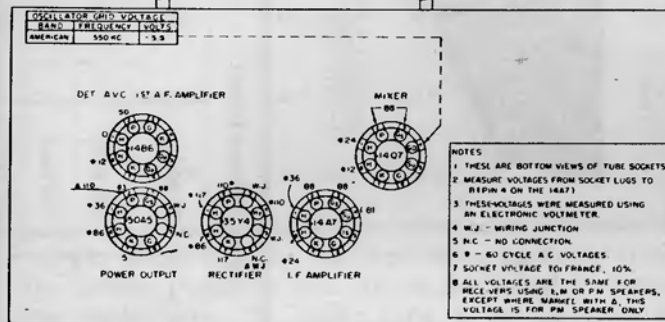


MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

Item No.	Part No.	Description	Item No.	Part No.	Description
2	C-132300-1	Cable and Plug Assy., Power	21	39373-60	Resistor, 22,000 ohm, 1/2 w.
3	AC-135209	Loop and Back Assy., Antenna	23	39373-100	Resistor, 3.3 megohm, 1/2 w.
4	AW-135195	Coil Assy., Oscillator	25	39373-144	Resistor, 1200 ohm, 1 w.
5	AW-137665	Transformer, 1st I. F.	26	39373-102	Resistor, 4.7 megohm, 1/2 w.
6	AW-137667	Transformer, 2nd I. F.	27	39373-87	Resistor, 470,000 ohm, 1/2 w.
8 A	B-135056	Condenser, Variable } Two	28	39373-87	Resistor, 470,000 ohm, 1/2 w.
8 B		Condenser, Variable } Section	29	39373-16	Resistor, 150 ohm, 1/2 w.
8 C	Part of Item #8A	Condenser, Trimmer	30 A	C-135127	Control, Volume (1 megohm) } Assy.
8 D	Part of Item #8B	Condenser, Trimmer	30 B		Switch, Power
9	39001-17	Condenser, .05 mfd., 600 v., paper	*	39368-14	Control, Volume
10	39001-17	Condenser, .05 mfd., 600 v., paper	*	39369-1	Switch, Power
12	39001-73	Condenser, 250 mmf., 600 v., paper	31	B-137723	Transformer, Output
13	39001-73	Condenser, .003 mfd., 600 v., paper	33	W-137367	Resistor, 47 ohm, 1 w.
14	39001-80	Condenser, .02 mfd., 600 v., paper	34	Part of Item #6	Resistor, 47,000 ohm, 1/2 w.
15	39001-80	Condenser, .02 mfd., 600 v., paper		W-135164	Bumper, Rubber
17	B-136768	Speaker		R-135162	Cabinet, (57TK)
18	39001-17	Condenser, .05 mfd., 600 v., paper		AW-135246	Cabinet, (57TL)
19 A	B-136770	Cond'ner, 50 mfd., 150 v. } Two Sect.		W-131154-1	Cotter, External
19 B		Cond'ner, 30 mfd., 150 v. } Elec. Filter		B-135713	Dial Glass
20	39373-109	Resistor, 15 megohm, 1/2 w.		W-134055	Grommet, Var. Cond. Mtg


DET. - AVC. 1st. A.F. AMPL.

MIXER

MODELS: 57TK, 57TL

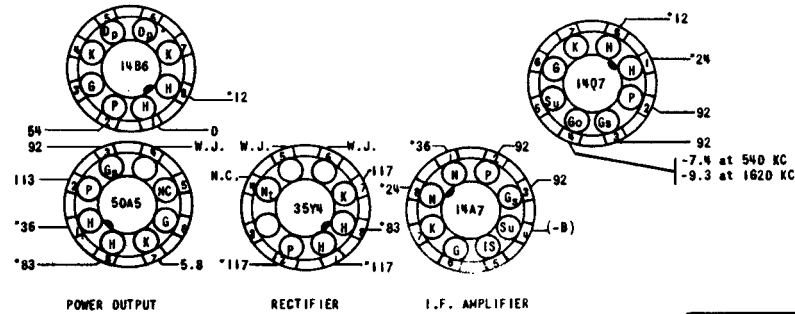

- NOTES:
1. These are bottom views of tube sockets.
 2. Measure voltages from socket lugs to -B (pin 4 on the 14A7).
 3. These voltages were measured using an electronic voltmeter. Line voltage 117.
 4. W.J. = Wiring junction
 5. N.C. = No connection
 6. * = 60 cycle A.C. voltages.
 7. Socket voltage tolerance 10%.

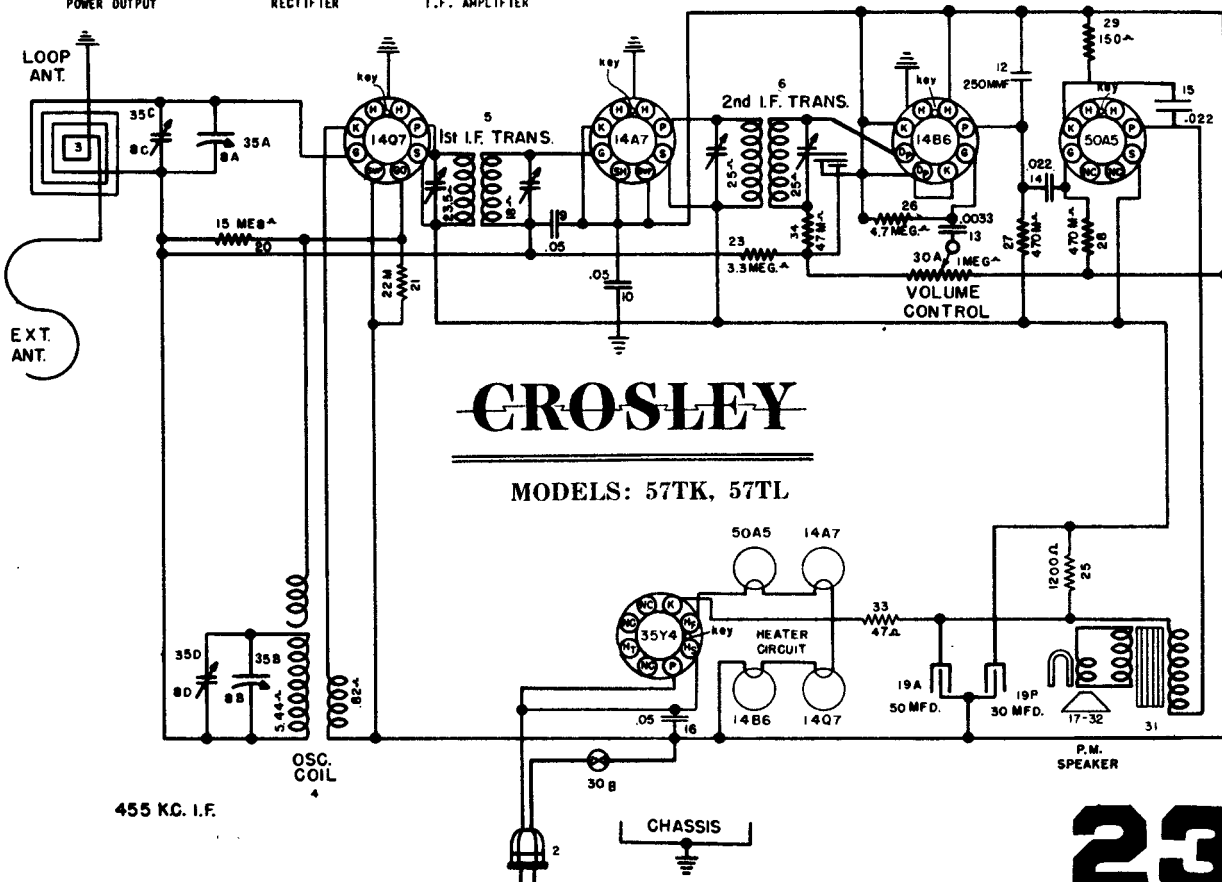


MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS




ELECTRONIC CORP. OF AMERICA

RADIO

104 & 106

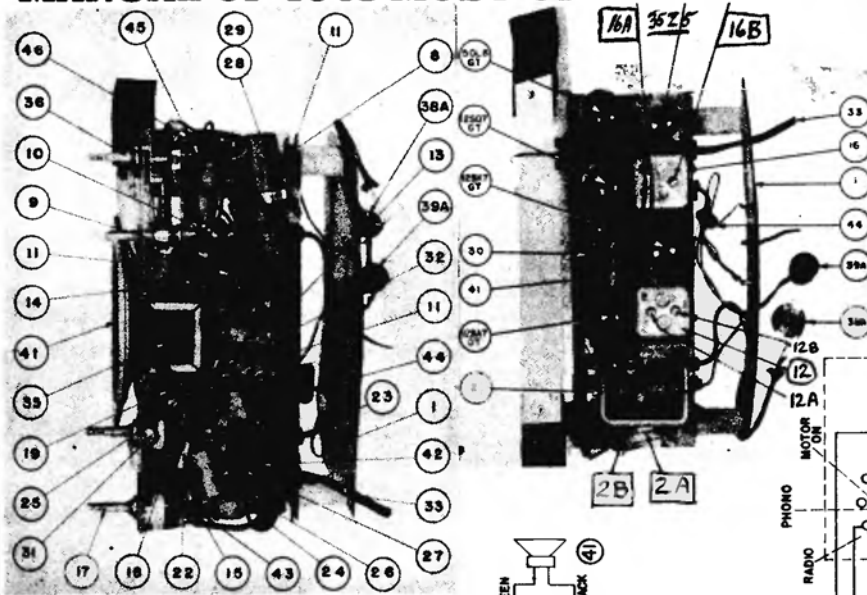

SET SIGNAL GENERATOR AT	SET GANG	LOOP DISTANCE	ADJUST TRIMMER	TUNE FOR	OPERATION
455 KC	Meshed	Close	12a 12b 16a 16b	Max.	Align -- I.F.
1720 KC 1400 KC	Fully Open 1400 KC	Close Close	2b 2a	Max. Max.	Align Oscillator Align - R.F.

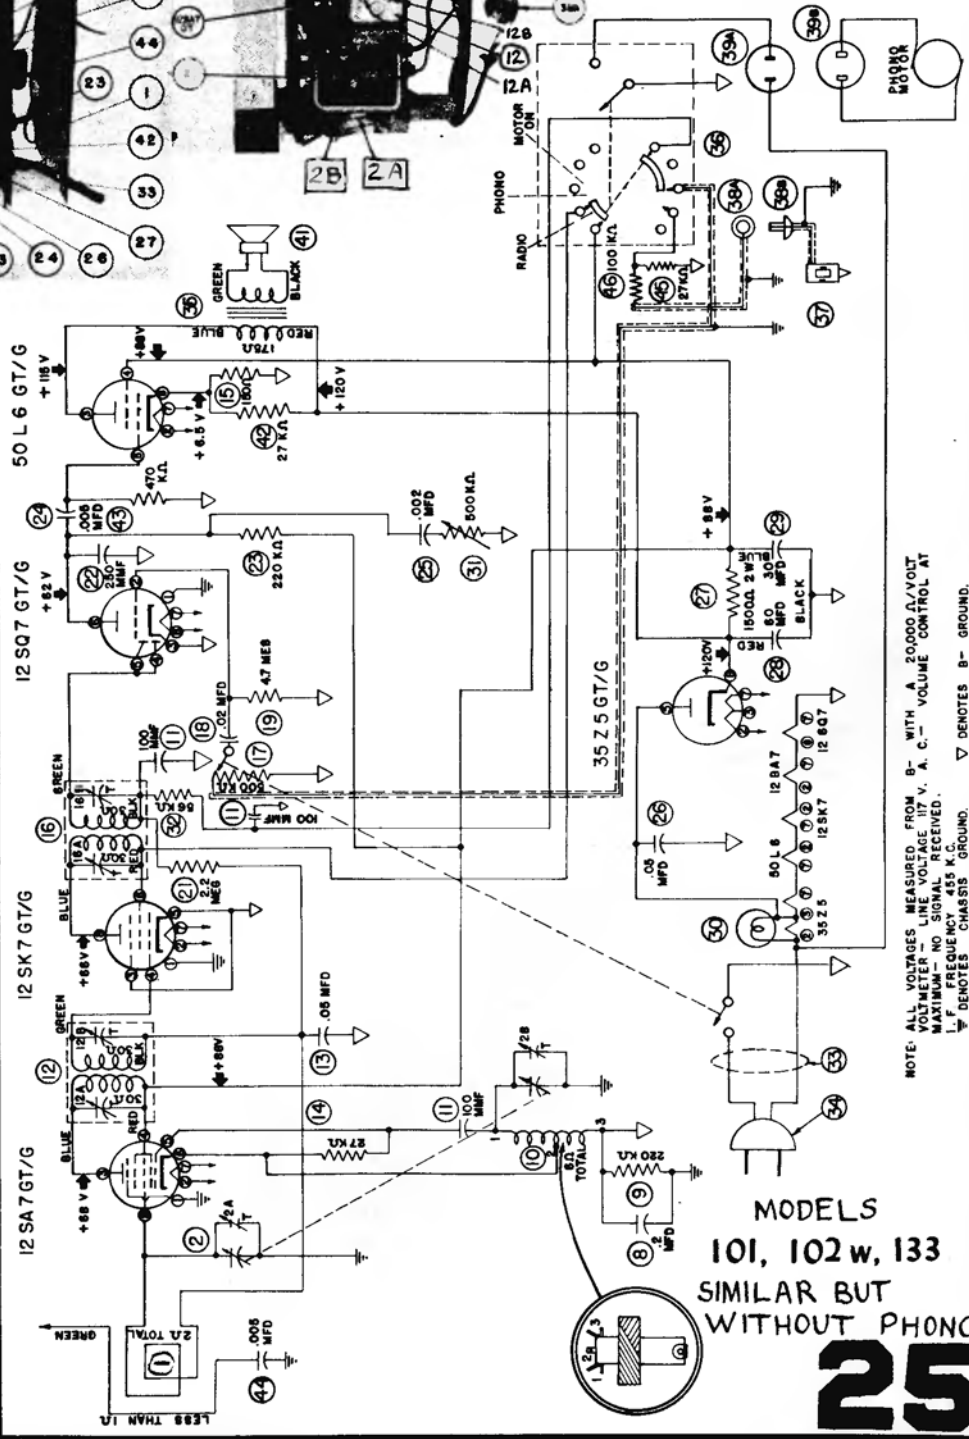




NOTE: ALL VOLTAGES MEASURED FROM B- WITH A 20000 Ω/VOLT VOLTMETER - LINE VOLTAGE 117 V. A. C. - VOLUME CONTROL AT MAXIMUM - NO SIGNAL RECEIVED.
I.F. FREQUENCY 455 K.C.
▽ DENOTES CHASSIS GROUND.

MODELS
101, 102 w, 133
SIMILAR BUT
WITHOUT PHONO
25

Emerson Radio

MODEL: 540A

CHASSIS MODEL: 120042A

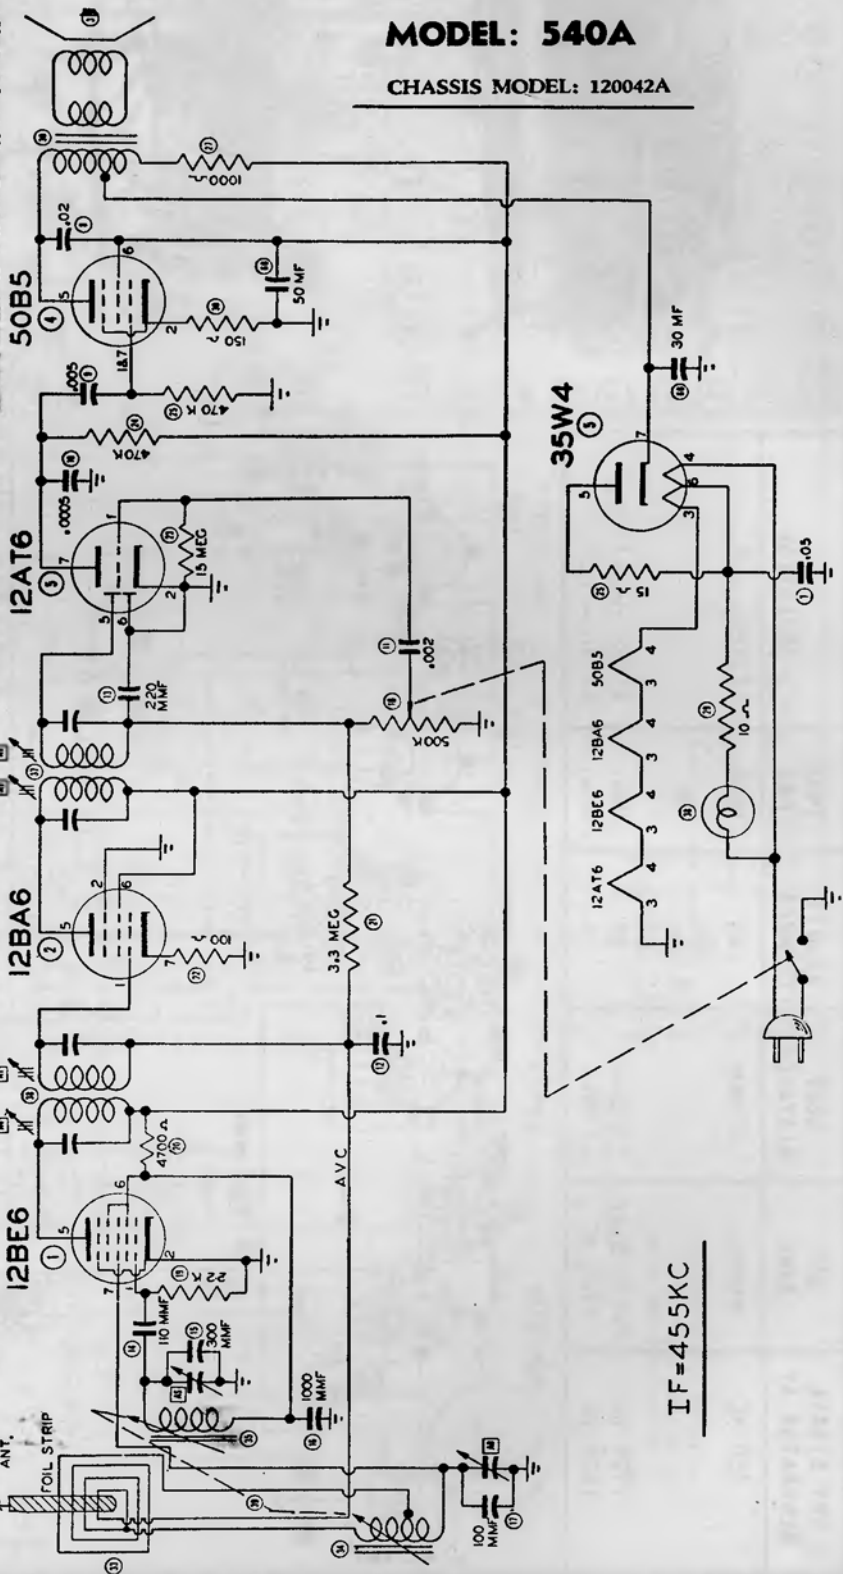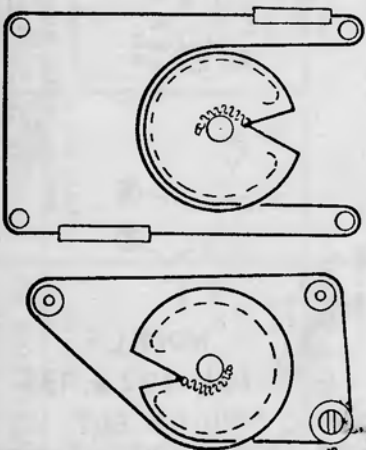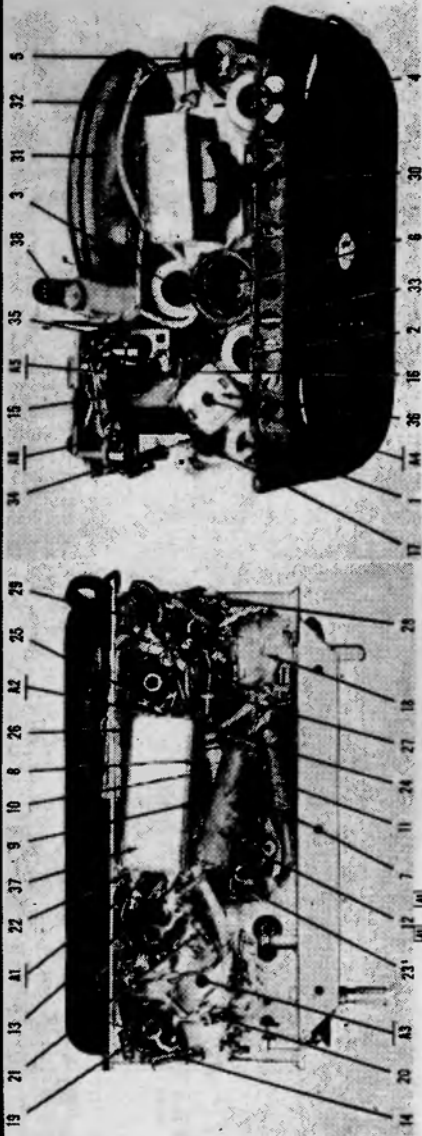

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS


Emerson Radio

MODELS: 511, 517, 541

CHASSIS, MODEL: 120010

TUBE	PIN NUMBER							
	1	2	3	4	5	6	7	8
12SA7			89	89	*—10			*—1.6
12SK7				*—1.6		89		89
12SQ7		*—0.7		*—1.6	*—0.5	37.5		
50L6			110	89				6.2
35Z5				116		116		117

The following voltage readings are d-c measurements taken from B— (line switch) to the indicated tube-socket pin. A 1000 ohms-per-volt meter should be used for all readings except those indicated by an asterisk (*), which should be taken with a d-c vacuum-tube voltmeter. Line voltage for these readings was 117 volts, 60 cycles, a.c. Measurements made with 117 volts d.c. will be lower than those given below. Take readings with the volume control set at minimum and the variable condenser closed.

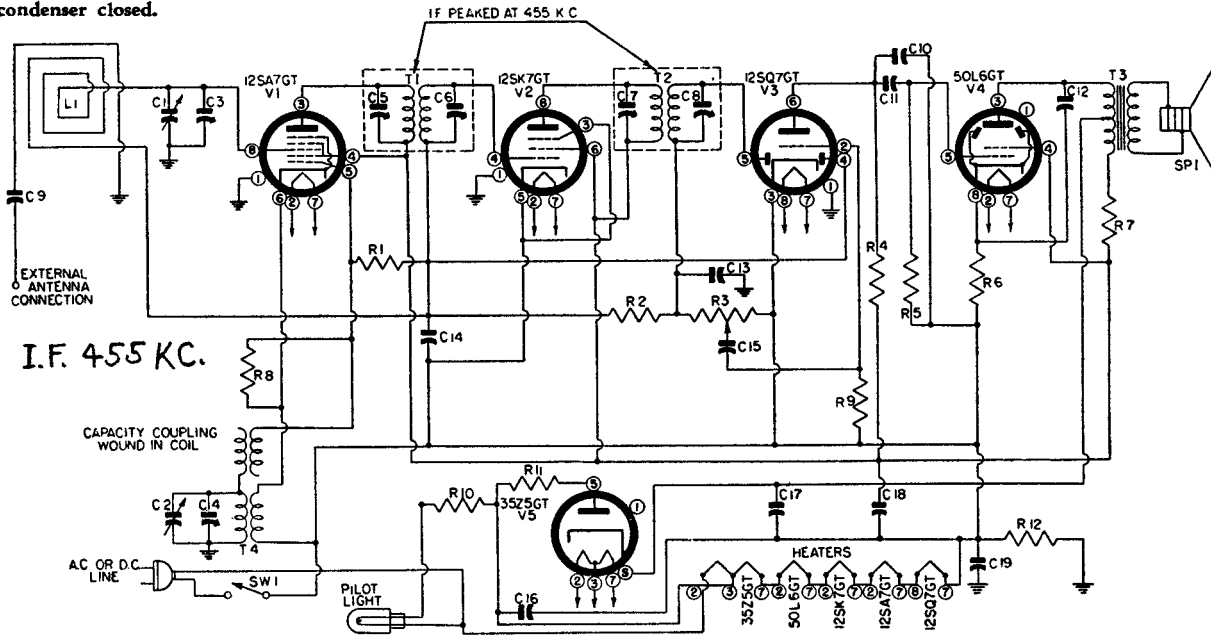

Schematic Symbol	†Part No.	DESCRIPTION	Schematic Symbol	†Part No.	DESCRIPTION
C1, C2	900160	Two-gang variable condenser	R2	321330	3.3 meg., ¼ watt carbon resistor
*C3, C4		Trimners, part of variable condenser	R3	390000	Volume control with line switch
*C5, C6, } C7, C8 }		Trimners, part of i-f transformers	R4, R5	321130	470,000 ohms, ¼ watt carbon resistor
C9, C15	920010	0.002 mfd., 600 V. paper condenser	R6	340290	150 ohms, ½ watt carbon resistor
C10	920240	500 mmfd., 600 V. paper condenser	R7	370490	1000 ohms, 1 watt carbon resistor
C11, C12	920020	0.02 mfd., 400 V. paper condenser	R8	310810	22,000 ohms, ¼ watt carbon resistor
C13	910000	220 mmfd., 600 V. mica condenser	R10	340010	6.8 ohms, ¼ watt carbon resistor
C14	920040	0.1 mfd., 200 V. paper condenser	R11	397040	15 ohms, 1 watt wire-wound resistor
C16	920030	0.05 mfd., 400 V. paper condenser	R12	321050	220,000 ohms, ¼ watt carbon resistor
C17, C18	925000	Dual electrolytic condenser, 150 V.; C20—30 mfd., C21—50 mfd.	SP1	180000	P.M. Speaker
C19	920050	0.2 mfd., 200 V. paper condenser	*SW1		Line switch, part of volume control
L1	700000	Loop antenna assembly, or	T1	720000	First i-f transformer
L1	700200	Loop antenna assembly	T2	720100	Second i-f transformer
R1, R9	397000	15 meg., ¼ watt carbon resistor	T3	734000	Output transformer
			T4	716010	Oscillator coil
				583010	Line cord

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

EMERSON RADIO

MODELS: 512, 515, 516, 550

CHASSIS MODELS: 120006, 120056 **530**

The 455 kc wave-trap is located below the chassis deck.

The trimmers for the antenna and oscillator coils are located on the variable condenser. The trimmer on the front section is for the oscillator coil.

The oscillator coil is located underneath the chassis. The loop antenna acts as the antenna coil.

I-f and Wave-Trap Alignment

Swing the variable condenser to the minimum capacity position. Feed 455 kc to the grid of the 12SA7 or 14Q7 tube through a 0.1 mfd. condenser and adjust the four i-f trimmers for maximum response.


Feed 455 kc to the external antenna lead and adjust the wave-trap for minimum response.

R-f Alignment

Set the dial pointer at 140. Set the signal generator at 1400 kc and feed its output into a loop of wire about 12 inches in diameter. Hold this radiating loop about 12 inches from and parallel to the receiver loop antenna. Advance the output of the signal generator until deflection is obtained on the output meter. Adjust first the oscillator trimmer (on front section of variable condenser) then the antenna trimmer (on rear section of variable condenser) for maximum response.

If the loop antenna has been replaced it may be necessary to adjust the loop inductance as follows. Align at 140. Set the pointer at 60 and feed 600 kc to the antenna lead. A portion of the outside turn of the loop may be swung to either side of the center to give maximum response. Realign at 140.

Schematic Symbol	†Part No.	DESCRIPTION
C5, C15, C20	920010	0.002 mfd., 600 volt condenser
C6, C18	920060	0.05 mfd., 200 volt condenser
C7, C19	910010	0.00011 mfd., mica condenser
C12, C17	910000	0.00022 mfd., mica condenser
C13, C14	920020	0.02 mfd., 400 volt condenser
C21, C22	920030	0.05 mfd., 400 volt condenser
C23, C24	925110	30-50 mfd., 150 volt dual electrolytic condenser (chassis 120006), or
C23, C24	925011	50-50 mfd., 150 volt dual electrolytic condenser (chassis 120056)
C25	920050	0.2 mfd., 200 volt condenser
L1	700010	Loop antenna
L2	708060	455 kc wave trap
R1	310730	10,000 ohms, ¼ watt resistor
R2, R6	310810	22,000 ohms, ¼ watt resistor
R3	310870	39,000 ohms, ¼ watt resistor
R4, R14	397000	15 meg., ¼ watt resistor
R5, R10, R11	321130	470,000 ohms, ¼ watt resistor
R7	321330	3.3 meg., ¼ watt resistor
*R8		47,000 ohms resistor, part of i-f transformer
R9	390180	0.5 meg. volume control
R12	340290	150 ohms, ½ watt resistor
R13	370490	1,000 ohms, 1 watt resistor
R15	340050	15 ohms, ½ watt resistor
R16	340010	10 ohms, ½ watt resistor
R17	321050	220,000 ohms, ½ watt resistor

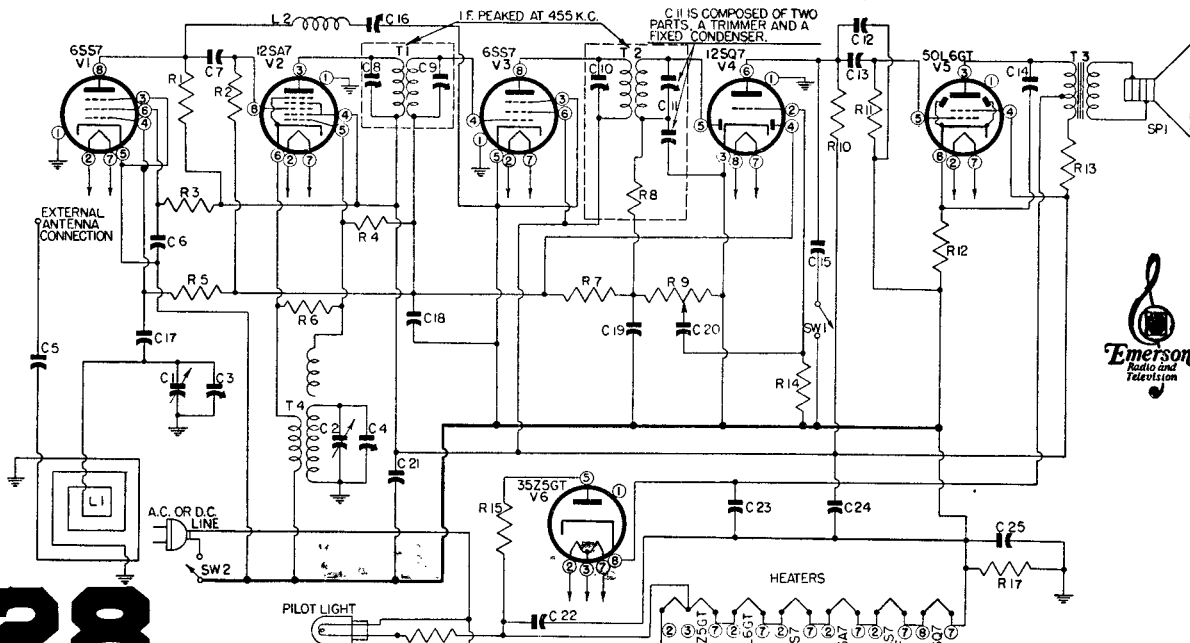

circuit diagram for chassis 120006. Substitute proper pin connections for local tubes on chassis 120056.



MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

Emerson Radio

FREQUENCY RANGE:

540-1620 kc., (555-185 meters)
8.8-12.2 mc., (16.3-24.5 meters)

MODELS: 514, 534

CHASSIS MODEL: 120007

The color coding of the i-f transformer leads is as follows:

Grid—green Plate—blue
Grid return—black B+—red

An oscillator with frequencies of 455, 600, 1600 and 12,000 kc is required.

An output meter should be used across the voice coil or output transformer for observing maximum response.

Always use as weak a test signal as possible when aligning the receiver.

I-f Alignment

Swing the variable condenser to the minimum capacity position. Feed 455 kc to the grid of the 12SG7 tube through a 0.1 mfd. condenser and adjust the four i-f trimmers for maximum response.

Note: The grid of the 12SG7 tube is the No. 4 pin.


R-f Alignment

Rotate the wave-band switch counter-clockwise to the short-wave position. Set the dial pointer at 12 megacycles and using a 400 ohm carbon resistor as a dummy antenna

feed 12 megacycles from the generator to the external antenna lead emerging from the rear of the chassis. Adjust first the short-wave oscillator trimmer and then the short-wave antenna trimmer for maximum response.

Rotate the wave-band switch clockwise to the broadcast position. Set the dial pointer at 160 and feed 1600 kc from the signal generator into a loop of wire about 12 inches in diameter. Hold this radiating loop about 12 inches from the loop antenna and advance the signal generator until a deflection is obtained on the output meter. Adjust first the oscillator trimmer (rear section of the variable condenser) and then the antenna trimmer (front section of the variable condenser) for maximum response.

If the loop has been replaced it may be necessary to adjust the loop inductance as follows: Align at 1600. Set the pointer at 60 and feed 600 kc into the radiating loop. A portion of the outside turn of the loop may then be swung to either side of the center to give maximum response. Re-align at 1600.

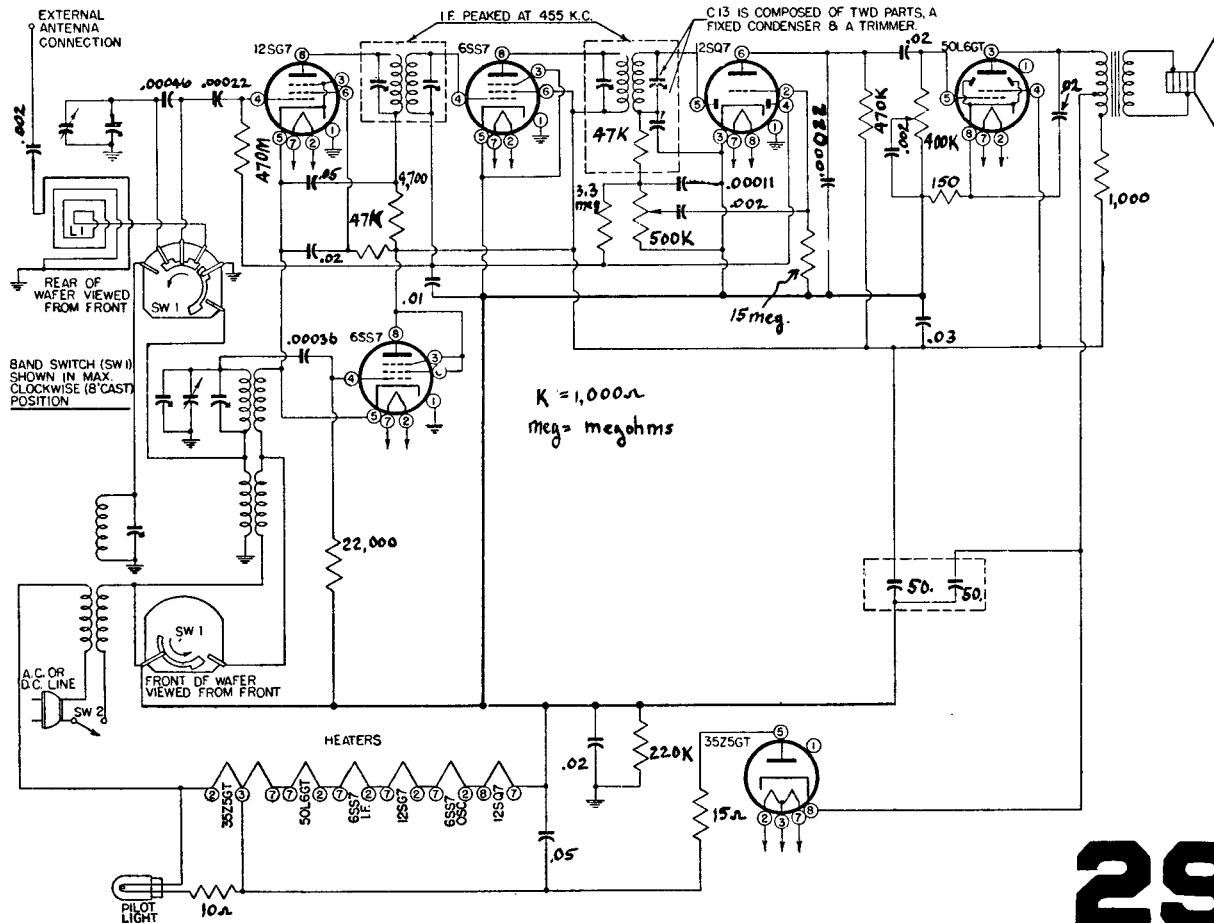


MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

Emerson Radio

MODELS: 531, 532, 533

CHASSIS MODEL: 120040

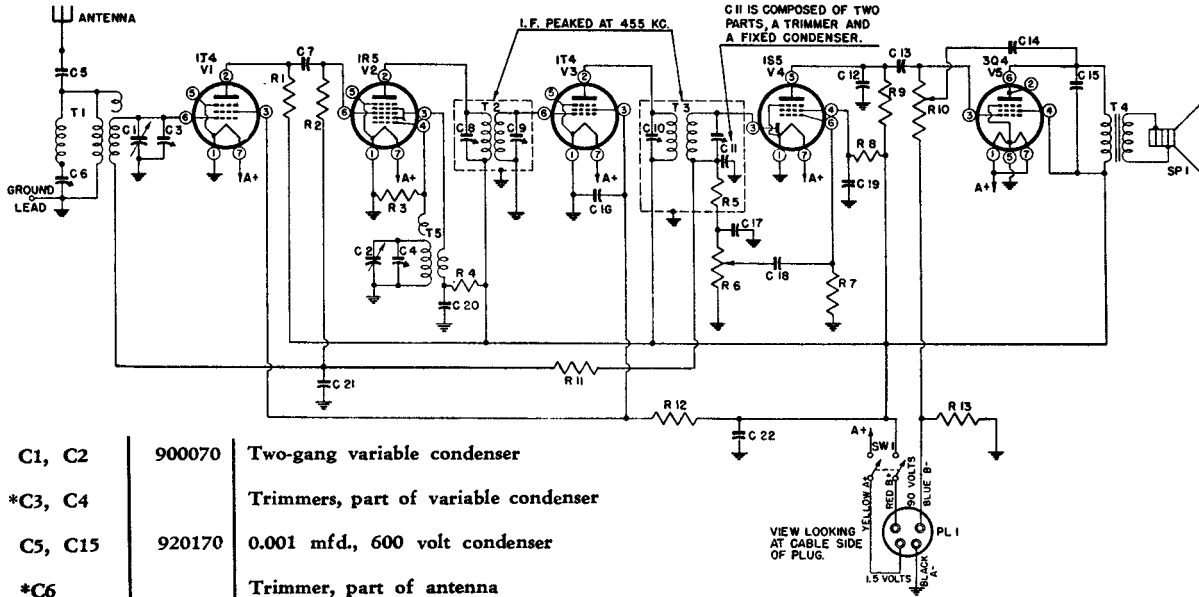

C1, C2	900070	Two-gang variable condenser	R2	321130	470,000 ohms, 1/4 watt resistor
*C3, C4		Trimmers, part of variable condenser	R3	320970	100,000 ohms, 1/4 watt resistor
C5, C15	920170	0.001 mfd., 600 volt condenser	*R5		47,000 ohms, 1/4 watt resistor, part of second i-f transformer
*C6		Trimmer, part of antenna transformer	R6	390180	0.5 meg. volume control
C7, C12	910000	0.00022 mfd. mica condenser	R7	321450	10 meg., 1/4 watt resistor
*C8, C9, C10		Trimmers, part of i-f transformer	R8, R11	321330	3.3 meg., 1/4 watt resistor
*C11		Trimmer and fixed condenser, part of second i-f transformer	R9	321210	1 meg., 1/4 watt resistor
C13, C16, C19, C20	920100	0.02 mfd., 200 volt condenser	R10	390280	0.4 meg. tone control
C14	910250	0.00005 mfd. mica condenser	R12	310770	15,000 ohms, 1/4 watt resistor
C17	910010	0.00011 mfd. mica condenser	R13	310410	470 ohms, 1/4 watt resistor
C18	920515	0.002 mfd., 400 volt condenser	SP1	180008	P.M. speaker
C21	920040	0.1 mfd., 200 volt condenser	SW1	510401	Battery switch, or
C22	925003	16 mfd., 150 volt electrolytic condenser	SW1	510001	Battery switch
PL1	585311	Battery plug and cable assembly, or	T1	710001	Antenna transformer and trap
PL1	585312	Battery plug and cable assembly			
R1, R4	310730	10,000 ohms, 1/4 watt resistor			

The following voltage readings are d-c measurements from tube socket pin to chassis. A 1000 ohms-per-volt meter should be used for all readings except those indicated by an asterisk (*), which should be taken with a d-c vacuum-tube voltmeter. All voltages are positive unless otherwise indicated.

TUBE	PIN NUMBER						
	1	2	3	4	5	6	7
1T4 (V1)		55	52	82		*-3	1.5
1R5		82	57	*-11.0		*-4	1.5
1T4 (V3)		82	52			*-4	1.5
1S5		-6.2	*-45	*18	10	*-3	1.5
3Q4		80.0	*-6.2	82	1.5	80	

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

TUBE	PIN NUMBER							
	1	2	3	4	5	6	7	8
12SA7			89	89	*-10			*-1.6
12SK7				*-1.6		89		89
12SQ7		*-0.7		*-1.6	-0.5	37.5		
50L6GT			110	89				6.2
35Z5GT				116		116		117


The following voltage readings are d-c measurements taken from B— (line switch) to the indicated tube-socket pin. A 1000 ohms-per-volt meter should be used for all readings except those indicated by an asterisk (*), which should be taken with a d-c vacuum-tube voltmeter. Line voltage for these readings was 117 volts, 60 cycles, a.c. Take readings with the volume control set at minimum and the variable condenser closed.

EMERSON RADIO MODELS: 525, 552

CHASSIS MODEL: 120037

C1, C2	900290	Two-gang variable condenser
*C3, C4		Trimmers, part of variable condenser
*C5, C6, C7, C8		Trimmers, part of i-f transformers
C9	910000	0.00022 mfd. mica condenser
C10	920010	0.002 mfd., 600 volt condenser
C11	920515	0.002 mfd., 400 volt condenser
C12	920240	0.0005 mfd., 600 volt condenser
C13, C14	920020	0.02 mfd., 400 volt condenser
C15	920040	0.1 mfd., 200 volt condenser
C16	920050	0.2 mfd., 200 volt condenser (used only when T1 and T2 are 720000 and 720100 respectively)
C17, C19	920030	0.05 mfd., 400 volt condenser
C18	922090	0.05 mfd., 400 volt condenser (used up to serial No. 8,550,551), or
C18	922101	0.05 mfd., 400 volt condenser (used after serial No. 8,550,551)
C20, C21	925267	30-50 mfd., 150 volt dual electrolytic

R1	310810	22,000 ohms, ¼ watt resistor
R2, R4	397000	15 meg., ½ watt resistor
R3	321330	3.3 meg., ¼ watt resistor
R5	390010	0.5 meg. volume control
R6, R7	321130	470,000 ohms, ¼ watt resistor
R8	340290	150 ohms, ½ watt resistor
R9	321290	2.2 meg., ¼ watt resistor
R10	370490	1,000 ohms, 1 watt resistor
R11	321050	220,000 ohms, ¼ watt resistor
R12	321210	1 meg., ¼ watt resistor
R13	340010	10 ohms, ½ watt resistor
R14	340050	15 ohms, ½ watt resistor
SP1	180000	P.M. speaker
SW1	510130	Tone control switch
SW2	510390	Phono-radio switch
*SW3		Motor switch, part of record changer
*SW4		Line switch on volume control

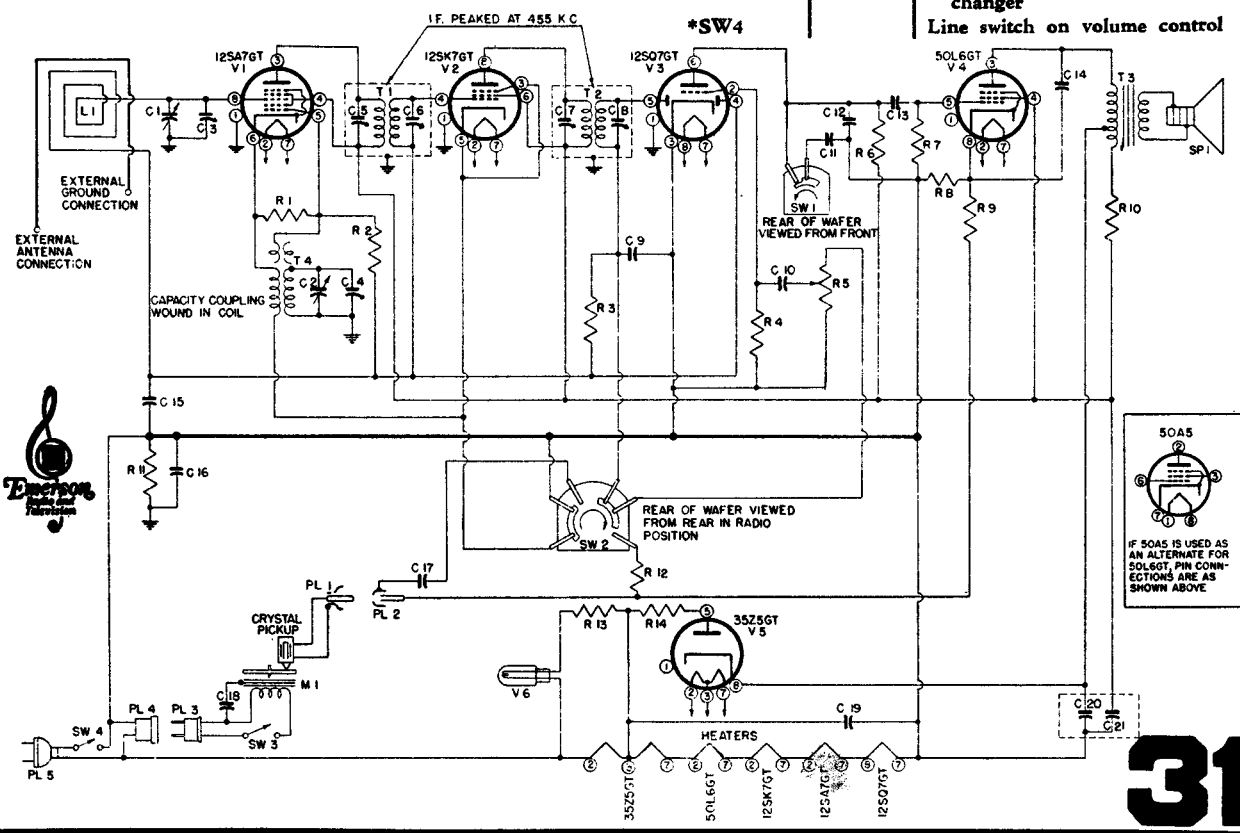

Emerson Radio R-f Alignment

Models 543, 544
Chassis 120046, 120052


Chassis 120046 below,
120052 next page.

I-f Alignment

1. Rotate the variable condenser to the minimum capacity position.
2. Feed 455 kc to the converter grid (stator of the r-f section of the variable condenser) through a 0.1 mfd. condenser and adjust the four i-f trimmers for maximum response.

1. Connect the oscillator to a coil composed of three to four turns of wire wound in a circle approximately 12" in diameter. This coil should be held parallel to and in line with the loop antenna of the receiver at a distance of 15 to 20 inches.
2. Radiate a signal at 1425 kc, set the dial indicator to 1425 kc, and adjust the trimmers on the variable condenser for maximum response.
3. Radiate a 600 kc signal and tune in the signal on the receiver. Adjust the loose outside turn of the loop antenna for maximum response. This loose turn may be moved to either side of the center. Fasten it in the position which gives maximum response.
4. Repeat steps 2 and 3 until no further improvement is evident.

C1, C2	900013	Two-gang variable condenser	R2, R6	397000	15 meg., 1/2 watt resistor
*C3, C4		Trimmers, part of variable condenser	R3	340310	180 ohms, 1/2 watt resistor
*C5, C6, } C7, C8 } C9		Trimmers, part of i-f transformers	R4	321290	2.2 meg., 1/4 watt resistor
C10	920040	0.1 mfd., 200 volt condenser	R5	390015	0.5 meg. volume control
C11	910000	0.00022 mfd. mica condenser	R7, R8	321130	470,000 ohms, 1/4 watt resistor
C12	920010	0.002 mfd., 600 volt condenser	R9	340290	150 ohms, 1/2 watt resistor
C13	920240	0.0005 mfd., 600 volt condenser	R10	370490	1,000 ohms, 1 watt resistor
C13, C14	920020	0.02 mfd., 400 volt condenser	R11	321050	220,000 ohms, 1/4 watt resistor
C15	920050	0.2 mfd., 200 volt condenser (used when T1 and T2 are 720000, and 720100 respectively), or 720525 respectively)	R12	340050	15 ohms, 1/2 watt resistor
C15	470199	0.2 mfd., 200 volt assembly (used when T1 and T2 are 720525 and 720529 respectively)	R13	340010	10 ohms, 1/2 watt resistor
C16	920030	0.05 mfd., 400 volt condenser	SP1	180000	P.M. speaker
C17, C18	925009	50-50 mfd., 150 volt dual electrolytic condenser	*SW1		Line switch on volume control
L1	700000	Loop antenna	T1	720000	First i-f transformer, or
*PL1		Power plug, part of line cord	T1	720525	First i-f transformer, midget
R1	310810	22,000 ohms, 1/4 watt resistor	T2	720100	Second i-f transformer, or
			T2	720529	Second i-f transformer, midget
			T3	734000	Output transformer
			T4	716010	Oscillator coil
				583010	Pilot light
				807000	Line cord
				507090	Pilot light socket

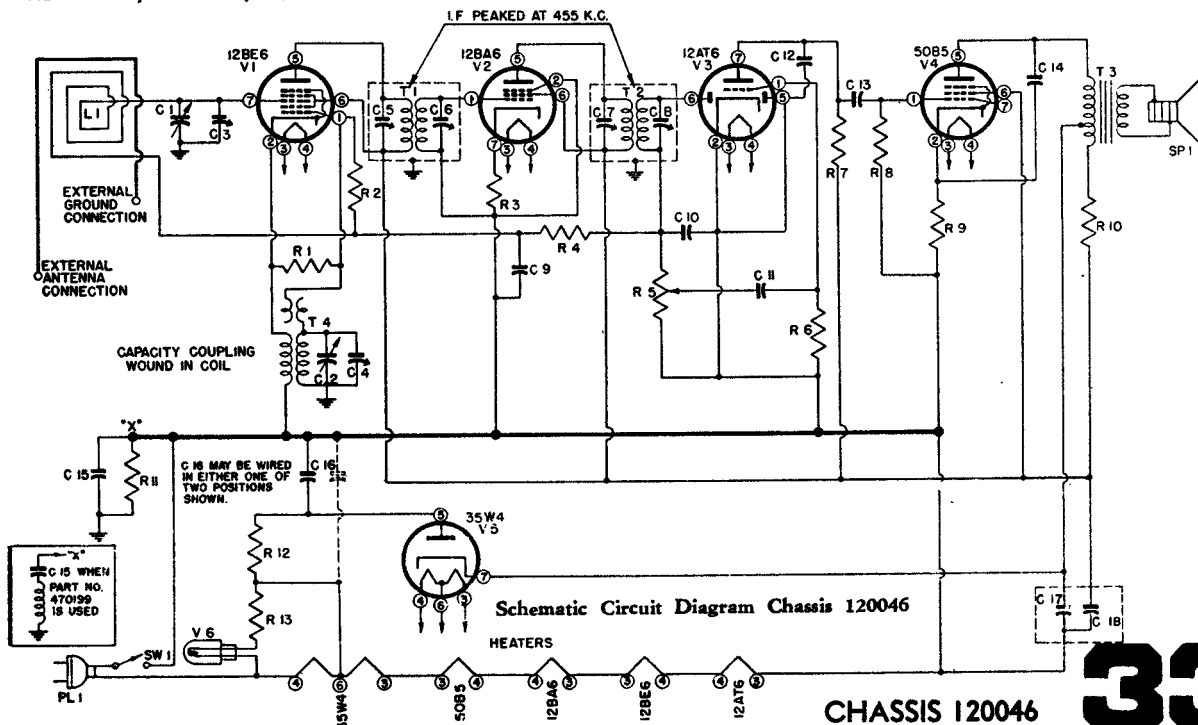

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS


Emerson Radio, Models 543, 544, Chassis 120052

See also preceding page for 120046

The following voltage readings are d-c measurements taken from B- (line switch) to the indicated tube-socket pin. A 1000 ohms-per-volt meter should be used for all readings except those indicated by an asterisk (*), which should be taken with a d-c vacuum-tube voltmeter. Line voltage for these readings was 117 volts, 60 cycles, a.c. Measurements made with 117 volts d.c. will be lower than those given below. Take readings with the volume control set at minimum and the variable condenser closed.


TUBE	PIN NUMBER							
	1	2	3	4	5	6	7	8
12SA7			89	89	*-10			*-1.6
12SK7				*-1.6		89		89
12SQ7		*-0.7		*-1.6	-0.5	37.5		
50L6			110	89				6.2
35Z5				116		116		117
12BE6	*-80				92	92	*-1.3	
12BA6					92	92	1.7	
12AT6	*-0.6					*-0.45	*44	
50B5		5.65			110	92		
35W4	115						115	

Schematic Symbol	†Part No.	DESCRIPTION	Schematic Symbol	†Part No.	DESCRIPTION
C1, C2	900160	Two-gang variable condenser	R3	390015	0.5 meg. volume control
*C3, C4		Trimmer, part of variable condenser	R4, R5	321130	470,000 ohms, ¼ watt resistor
*C5, C6, } C7, C8 } C9, C15		Trimners, part of i-f transformers	R6	340290	150 ohms, ½ watt resistor
C10	920010	0.002 mfd., 600 volt condenser	R7	370490	1000 ohms, 1 watt resistor
C11, C12	920240	0.0005 mfd., 600 volt condenser	R8	310810	22,000 ohms, ¼ watt resistor
C13	920020	0.02 mfd., 400 volt condenser	R10	340010	10 ohms, ½ watt resistor
C14	910000	0.00022 mfd. mica condenser	R11	397040	15 ohms, 1 watt wire-wound resistor
C16	920040	0.1 mfd., 200 volt condenser	R12	321050	220,000 ohms, ¼ watt resistor
C17, C18	920030	0.05 mfd., 400 volt condenser	SP1	180000	P.M. speaker
C19	925000	30-50 mfd., 150 volt dual electrolytic condenser	*SW1		Line switch on volume control
L1	920050	0.02 mfd., 200 volt condenser	T1	720000	First i-f transformer
L1	700000	Loop antenna, or	T2	720100	Second i-f transformer
L1	700200	Loop antenna	T3	734000	Output transformer
R1, R9	397000	15 meg., ¼ watt resistor	T4	716010	Oscillator coil
R2	321330	3.3 meg., ¼ watt resistor		583010	Line cord
				807000	Pilot light
				507090	Pilot light socket

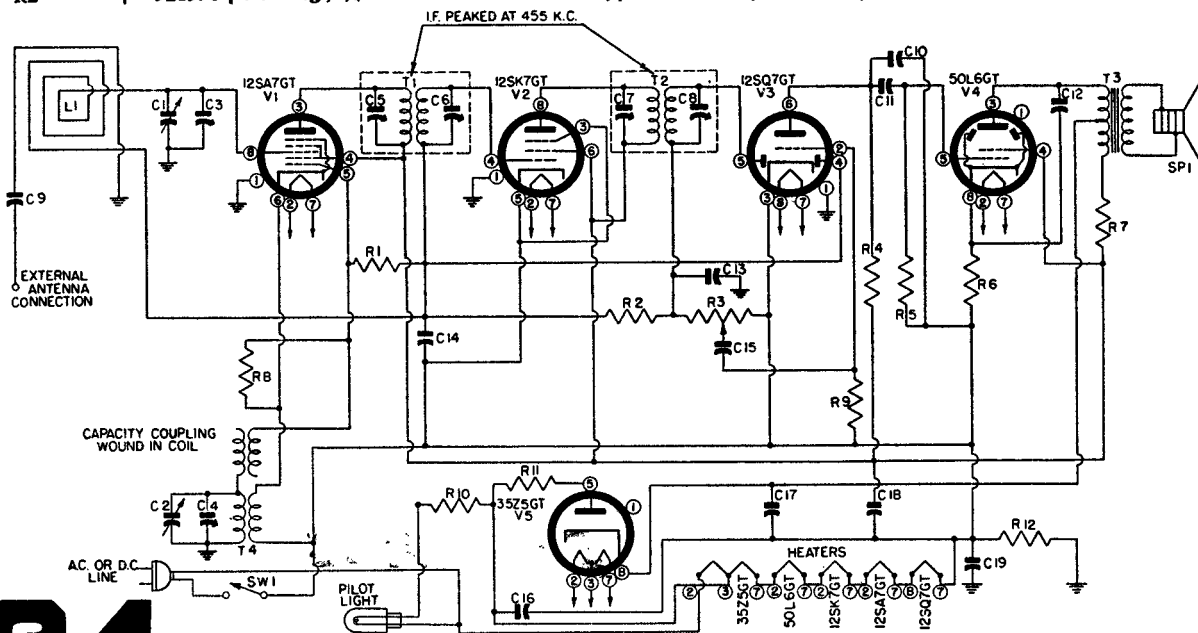

Schematic Circuit Diagram Chassis 120052

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

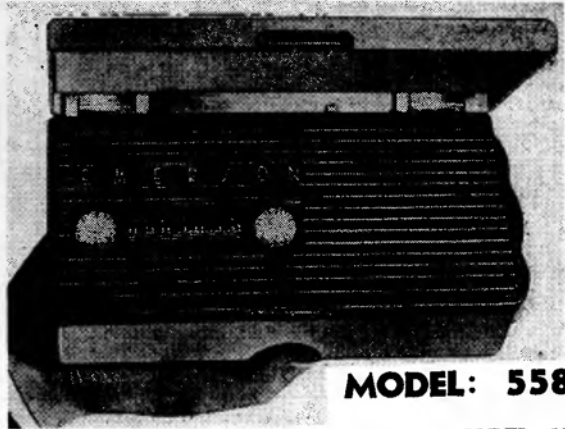

MODEL: 558

CHASSIS MODEL: 120058

The first i-f transformer is located next to the 1R5 tube. The trimmers are accessible through holes in the top of the can.

The second i-f transformer is located between the 1T4 and 1S5 tubes. The single trimming core screw extends from the end of the can. Trimmers are accessible through holes in the top of the can.

The oscillator coil is located behind the on-off switch. The trimmer for the oscillator is located on the smaller variable condenser section. The 600 kc oscillator core adjustment is the brass screw protruding from the end of the oscillator coil.


I-f Alignment

1. Rotate the variable condenser to the minimum capacity position.
2. Feed 455 kc to the grid (pin 6) of the 1R5 tube through a 0.01 mfd. condenser.
3. Adjust the four i-f trimmer screws for maximum response. (Clip the test signal lead to the stator of the larger capacity section of the variable condenser.)

R-f Alignment

1. Connect the test oscillator to a coil composed of three or four turns of wire wound in a circle approximately 12 inches in diameter. This coil should be placed parallel to and in line with the receiver loop at a distance of approximately 15 to 20 inches.
2. Radiate a signal at 1620 kc, rotate the variable condenser to minimum capacity, and adjust the oscillator trimmer, on the smaller section of the variable condenser, for maximum response.
3. Radiate a signal at 1420 kc, tune in the 1420 kc signal, and adjust the antenna trimmer, on the larger section of the variable condenser, for maximum response.
4. Radiate a signal at 600 kc, set the dial indicator to 60, and adjust the oscillator coil core trimmer while rocking the variable condenser for maximum response.
5. Return to 1620 kc and check alignment. If readjustment is necessary, repeat Steps 2 to 4 until no further improvement is noted.

Schematic Symbol	†Part No.	DESCRIPTION
C1, C2	900022	Two-gang variable condenser
*C3, C4		Trimmers, part of variable condenser
*C5, C6		Trimmers, part of first i-f transformer
*C7, C8		Trimmers, part of second i-f transformer
C9, C14	928013	100 mmfd., ceramic condenser
C10, C13	920495	0.001 mfd., 200 volt condenser
C11	920496	0.005 mfd., 200 volt condenser
C12	928104	212 mmfd., ceramic condenser
C15	920494	0.05 mfd., 200 volt condenser
C16	920120	0.02 mfd., 100 volt condenser
C17	925063	16 mfd., 100 volt electrolytic condenser
C18	920485	0.01 mfd., 100 volt condenser
L1	700008	Loop antenna
R1	350970	100,000 ohms, ½ watt resistor
R2	340470	820 ohms, ½ watt resistor
R3	390025	1 meg., volume control
R4	351450	10 meg., ½ watt resistor
R5, R9	351330	3.3 meg., ½ watt resistor
R6	351130	470,000 ohms, ½ watt resistor
R7	351250	1.5 meg., ½ watt resistor
R8	340730	10,000 ohms, ½ watt resistor
SP1	180029	Speaker, 3-inch P.M.
T1	720028	First i-f transformer, or
T1	720034	First i-f transformer
T2	720028	Second i-f transformer, or
T2	720035	Second i-f transformer
T3	734011	Output transformer
T4	716011	Oscillator coil

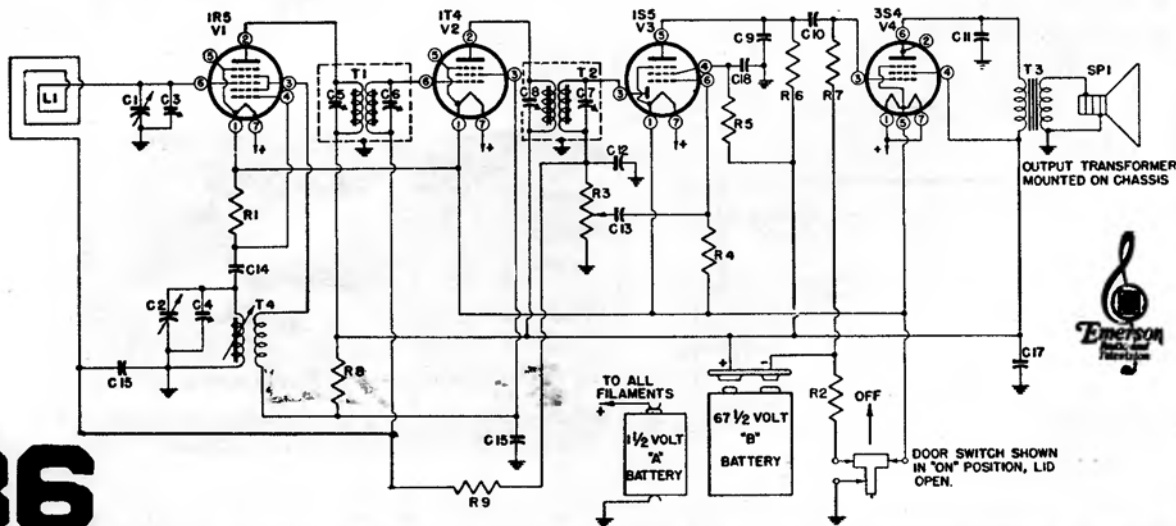

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

Emerson Radio

MODEL: 548 549

CHASSIS MODEL: 120051


To replace tubes, remove the two knobs and unscrew the four red screws holding the chassis support to the cabinet at the bottom. Lift the board and chassis out and set it aside.

Normally, the record changer should not require additional lubrication. A drop of machine oil on the turntable shaft bearings, motor bearings, and frictional surfaces once a year will do no harm. Do not lubricate the trip mechanism or allow oil to come in contact with the idler wheel.

C1	920170	0.001 mfd., 600 volt condenser
C2	920020	0.02 mfd., 400 volt condenser
C3, C6	920030	0.05 mfd., 400 volt condenser
C4	910010	0.00011 mfd. mica condenser, or
C4	910220	0.0001 mfd. mica condenser
C5	910000	0.00022 mfd. mica condenser, or
C5	910230	0.0002 mfd. mica condenser
C8, C9	925009	50-50 mfd., 150 volt dual electrolytic condenser
C10	920420	0.15 mfd., 200 volt condenser
R1	390016	0.5 meg. volume control
R2	397000	15 meg., 1/2 watt resistor
R3, R4	351130	470,000 ohms, 1/2 watt resistor
R5	370290	150 ohms, 1 watt resistor
R6	340430	560 ohms, 1/2 watt resistor
R8	390370	2 meg. tone control
R9	340050	15 ohms, 1/2 watt resistor
R10	394160	133 ohms, 5 watt resistor

The following voltage readings are d-c measurements taken from B— (line switch) to the indicated tube-socket pin. A 1000 ohms-per-volt meter should be used for all readings except those indicated by an asterisk (*), which should be taken with a d-c vacuum-tube voltmeter. Line voltage for these readings was 117 volts, 60 cycles, a-c.

TUBE	PIN NUMBER						
	1	2	3	4	5	6	7
12AT6	*-0.7						45
50B5		7.8			118	123	
35W4	128						128

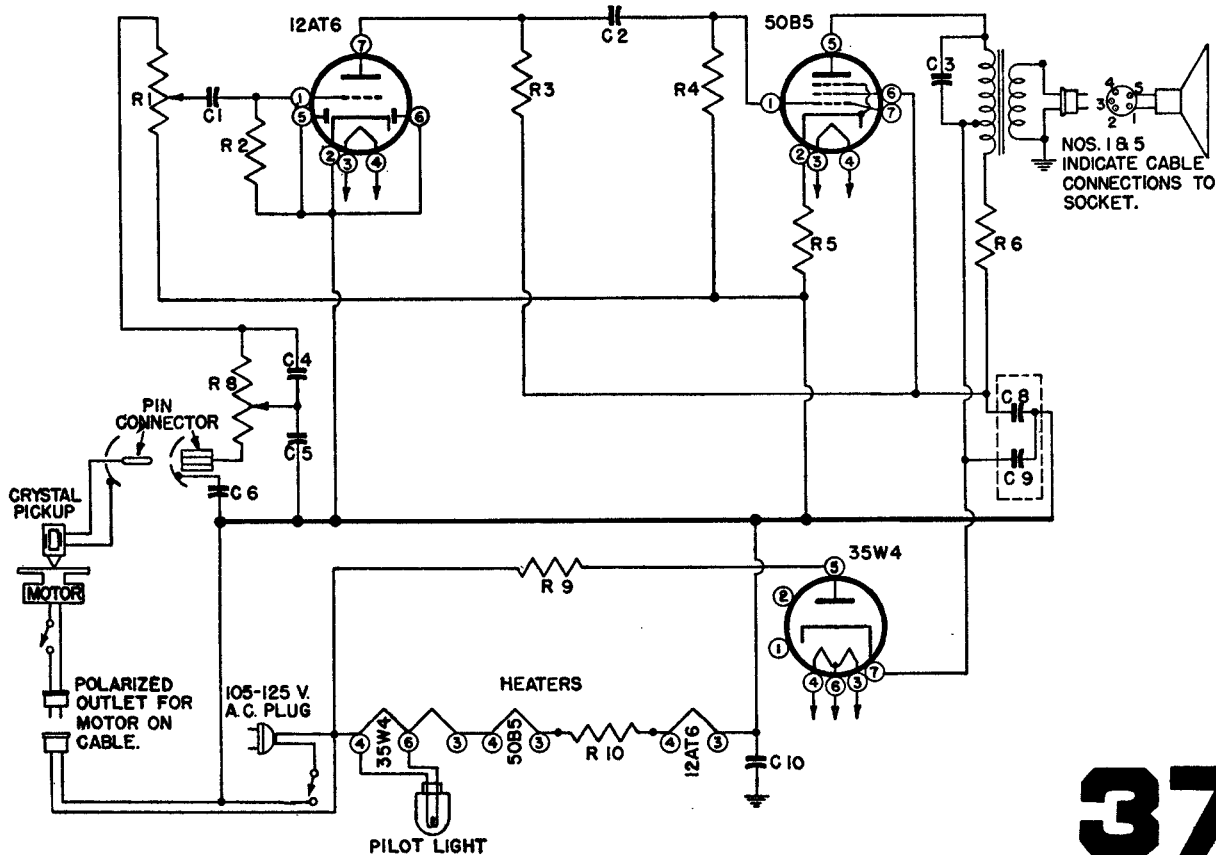

37

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

EMERSON RADIO

MODELS: 1002, 1003

CHASSIS MODEL: 129003

The second i-f transformer (T2) is mounted on top of the chassis to the right of the speaker. The trimmers (C7, C8) are accessible through holes in the top of the can.

The trimmer for the antenna (C3) and the trimmer for the oscillator coil (C4) are located on the variable condenser. The trimmer on the front section is for the oscillator coil.


I-f Alignment

1. Rotate the variable condenser to the minimum capacity position.
2. Feed 455 kc to the converter grid (stator of the r-f section of the variable condenser) and adjust the four i-f trimmers (C5, C6, C7, C8) for maximum response.

R-f Alignment

1. Connect the oscillator to a coil composed of three or four turns of wire wound in a circle approximately 12" in diameter. This coil should be held parallel to and in line with the loop antenna of the receiver at a distance of 15 to 20 inches.
2. Radiate a signal at 1425 kc, set the dial indicator to 1425 kc, and adjust the trimmers on the variable condenser (C3, C4) for maximum response.
3. Radiate a 600 kc signal and tune in the signal on the receiver. Adjust the loose outside turn of the loop antenna for maximum response. This loose turn may be moved to either side of the center. Fasten it in the position which gives maximum response.
4. Repeat steps 2 and 3 until no further improvement is evident.

Schematic Symbol	Part No.	DESCRIPTION
C1, C2	900070	Two-gang variable condenser
*C3, C4		Trimmers, part of variable condenser
*C5, C6, {		Trimmers, part of i-f transformers
C7, C8 }		
C9, C15, {	920010	0.002 mfd., 600 volt condenser
C20, C25 }		
C10	920240	0.0005 mfd., 600 volt condenser
C11, C12, {	920020	0.02 mfd., 400 volt condenser
C21 }		
C13	920040	0.1 mfd., 200 volt condenser
C14	910010	0.00011 mfd. mica condenser
C16	920050	0.2 mfd., 200 volt condenser
C17, C24	920030	0.05 mfd., 400 volt condenser
C18, C19	925011	50-50 mfd., 150 volt dual electrolytic condenser
C22	920060	0.05 mfd., 200 volt condenser
C23	925180	10 mfd., 25 volt electrolytic condenser
L1	700000	Loop antenna
R1	340810	22,000 ohms, 1/2 watt resistor
R2, R9	397000	15 meg., 1/2 watt resistor
R3, R4	351130	470,000 ohms, 1/2 watt resistor
R5	340290	150 ohms, 1/2 watt resistor
R6	370490	1000 ohms, 1 watt resistor
R7, R14	351330	3.3 meg., 1/2 watt resistor
R8	390190	0.5 meg. volume control
R10	351050	220,000 ohms, 1/2 watt resistor
R11	340010	10 ohms, 1/2 watt resistor
R12	340050	15 ohms, 1/2 watt resistor
R13	390180	0.5 meg. volume control (sets below 8,767,450), or
R13	390014	2 meg. volume control (sets 8,767,450 and higher)
R15	340410	470 ohms, 1/2 watt resistor
R16	351050	220,000 ohms, 1/2 watt resistor (sets below 8,767,450), or
R16	340970	100,000 ohms, 1/2 watt resistor (sets 8,767,450 and higher)

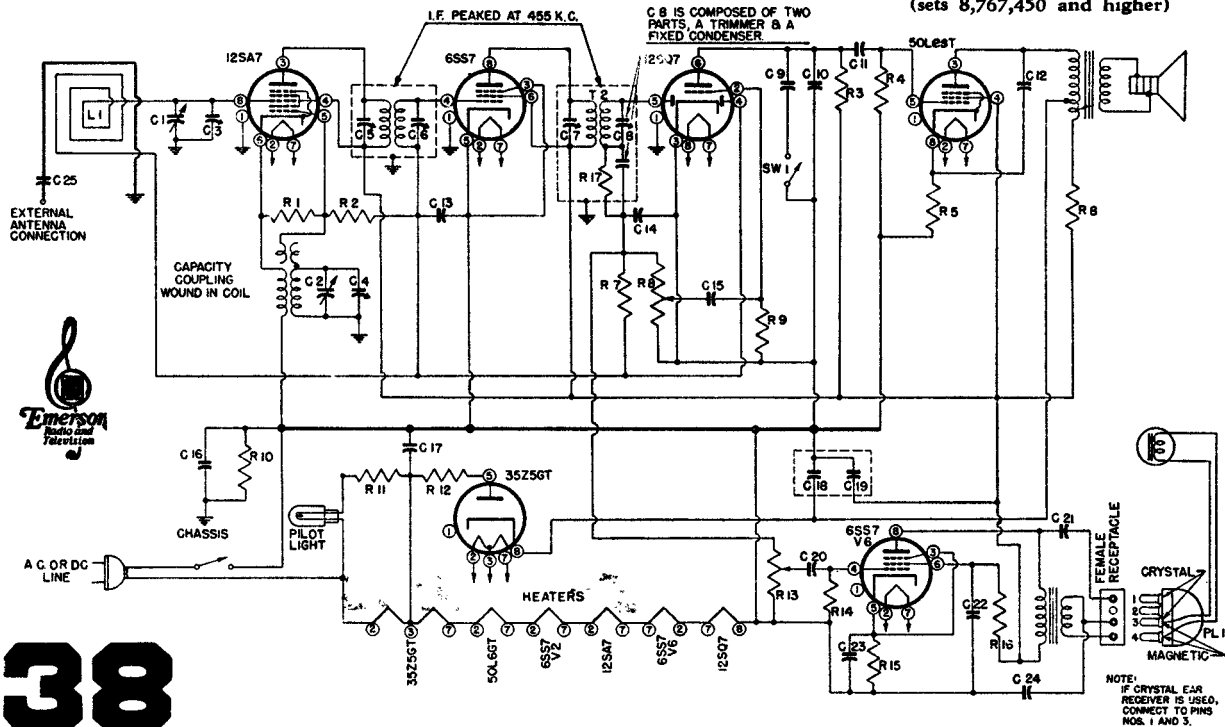


MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

Emerson


MODEL: 560

CHASSIS MODEL: 120016

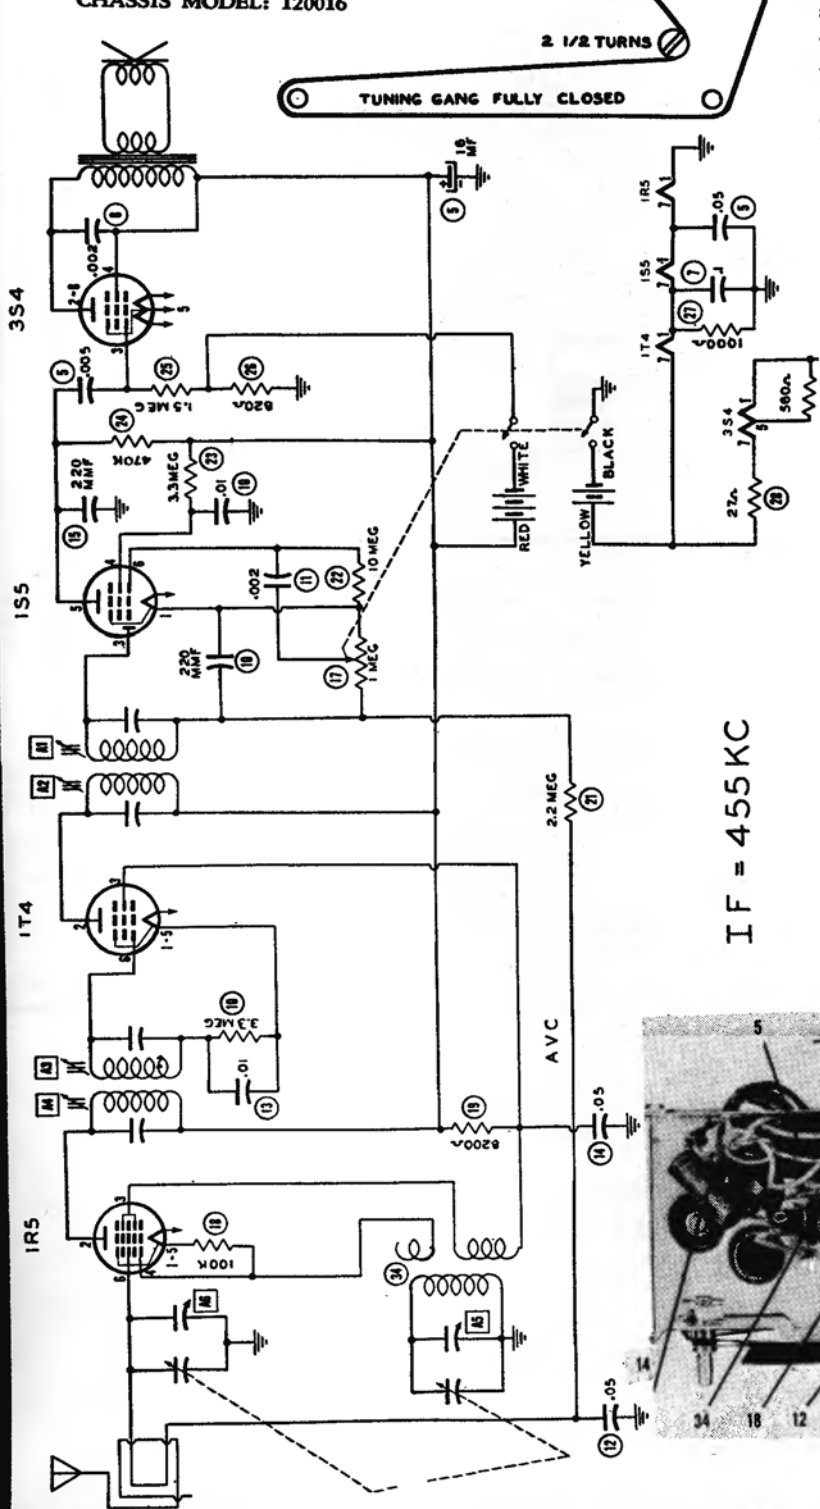


To set pointer, turn variable condenser fully closed and set pointer at mark near left end of dial backplate. Connect a 100,000 ohm resistor across the loop leads during Steps 1 and 2. Volume control should be at maximum position; output of signal generator should be no higher than necessary to obtain an output reading. Use an insulated alignment screwdriver for adjusting.

DUMMY ANTENNA	SIGNAL GENERATOR COUPLING	SIGNAL GENERATOR FREQUENCY	RADIO DIAL SETTING	OUTPUT METER	ADJUST	REMARKS
1 0.1 mfd.	High side to rear stator of variable condenser. Low side to chassis.	455 kc	Variable condenser fully open.	Across voice coil.	A1, A2, A3, A4	Adjust for maximum output.
2 0.1 mfd.	High side to rear stator of variable condenser. Low side to chassis.	1620 kc	Variable condenser fully open.	Across voice coil.	A5	Adjust for maximum output.
3	Loop	1400 kc	Tune for maximum output.	Across voice coil.	A6	Disconnect 100,000 ohm resistor from loop leads. Connect loop leads to loop. Hold chassis in same relative position.

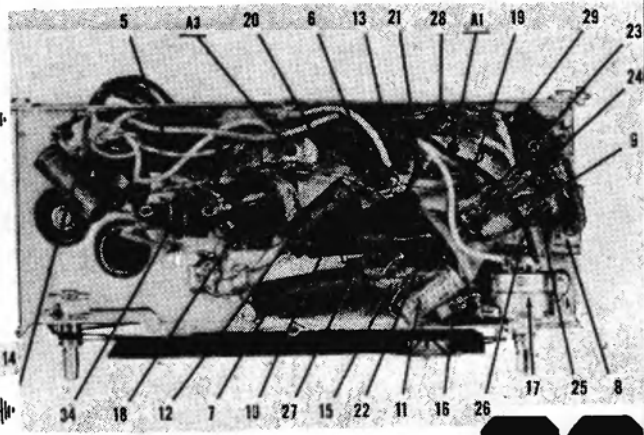

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

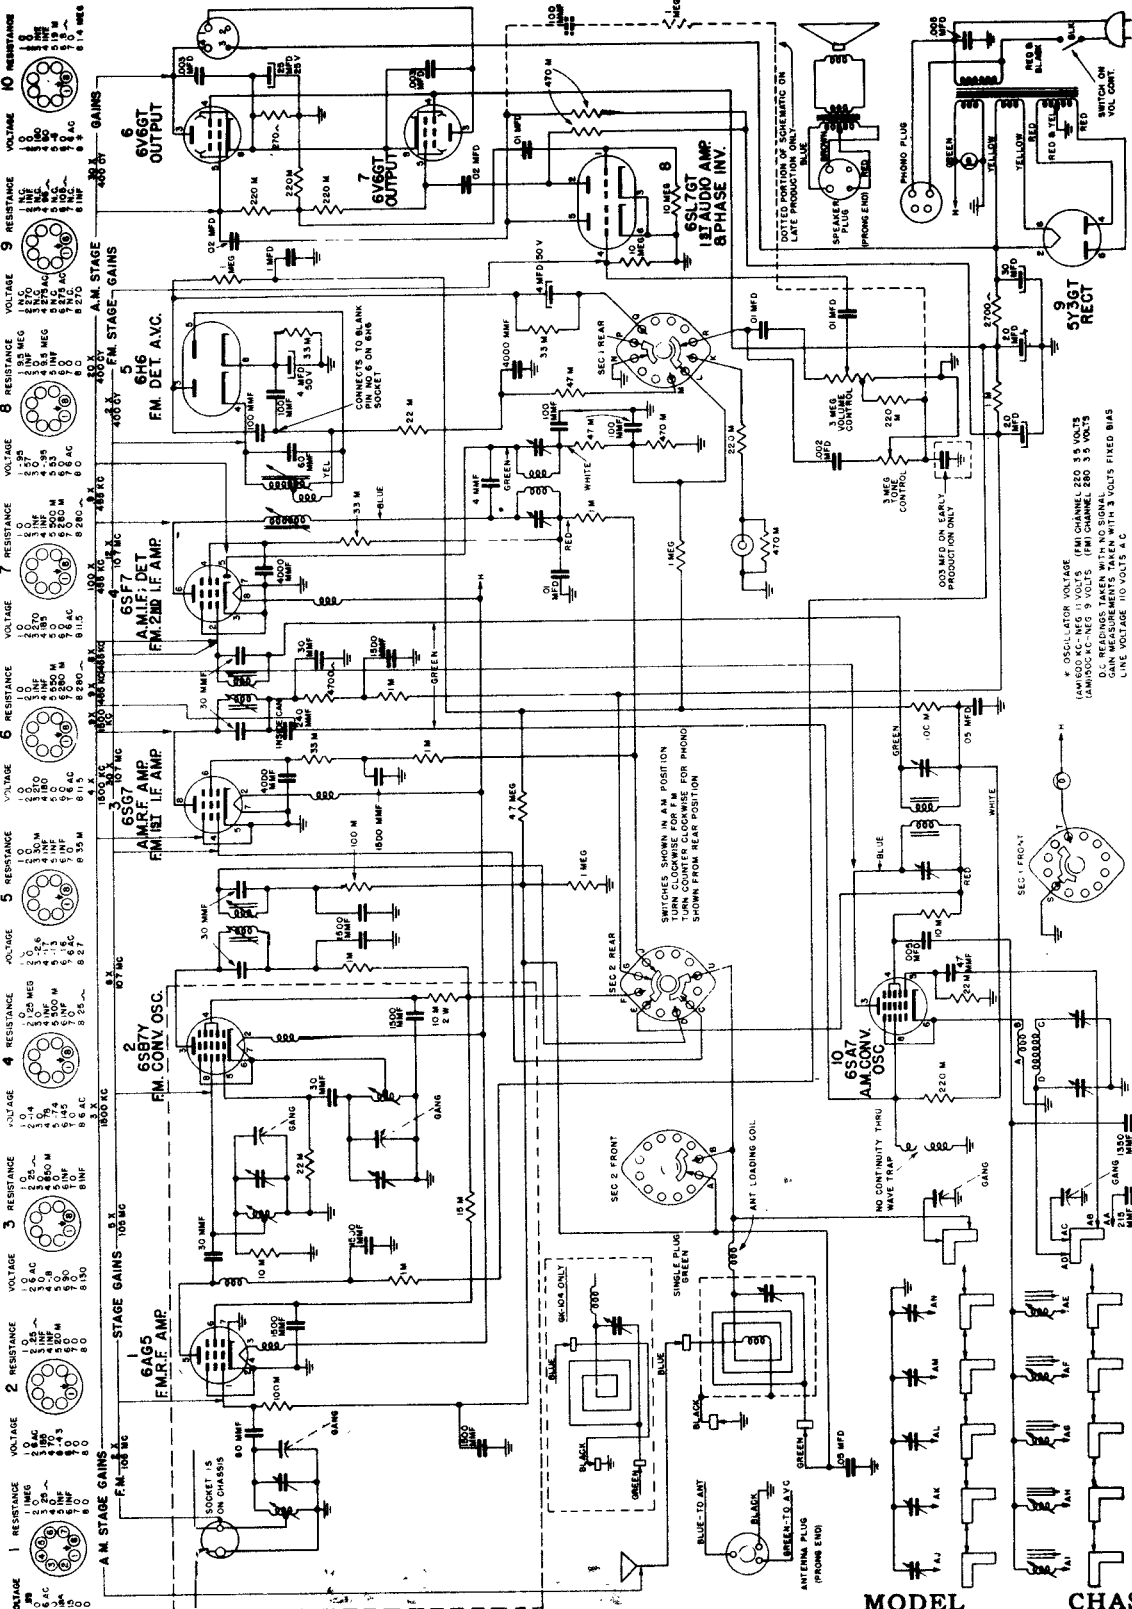

44

Farnsworth

TELEVISION & RADIO CORPORATION

MODEL	CHASSIS
GK-100	C-170
GK-102	C-194
GK-103	C-216
GK-104	C-201

AM Intermediate Frequency 455 KC.
FM Intermediate Frequency 10.7 MC.


* OSCILLATOR VOLTAGE
(AM) 600 KC-NES 11 VOLTS (FM) CHANNEL 200 3.5 VOLTS
(AM) 600 KC-NES 9 VOLTS (FM) CHANNEL 800 3 VOLTS
GAIN MEASUREMENTS TAKEN WITH 3 VOLTS FIXED BIAS
LINE VOLTAGE 110 VOLTS A.C.

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

FARNSWORTH TELEVISION & RADIO CORPORATION

MODEL EF-451


CHASSIS -C-196

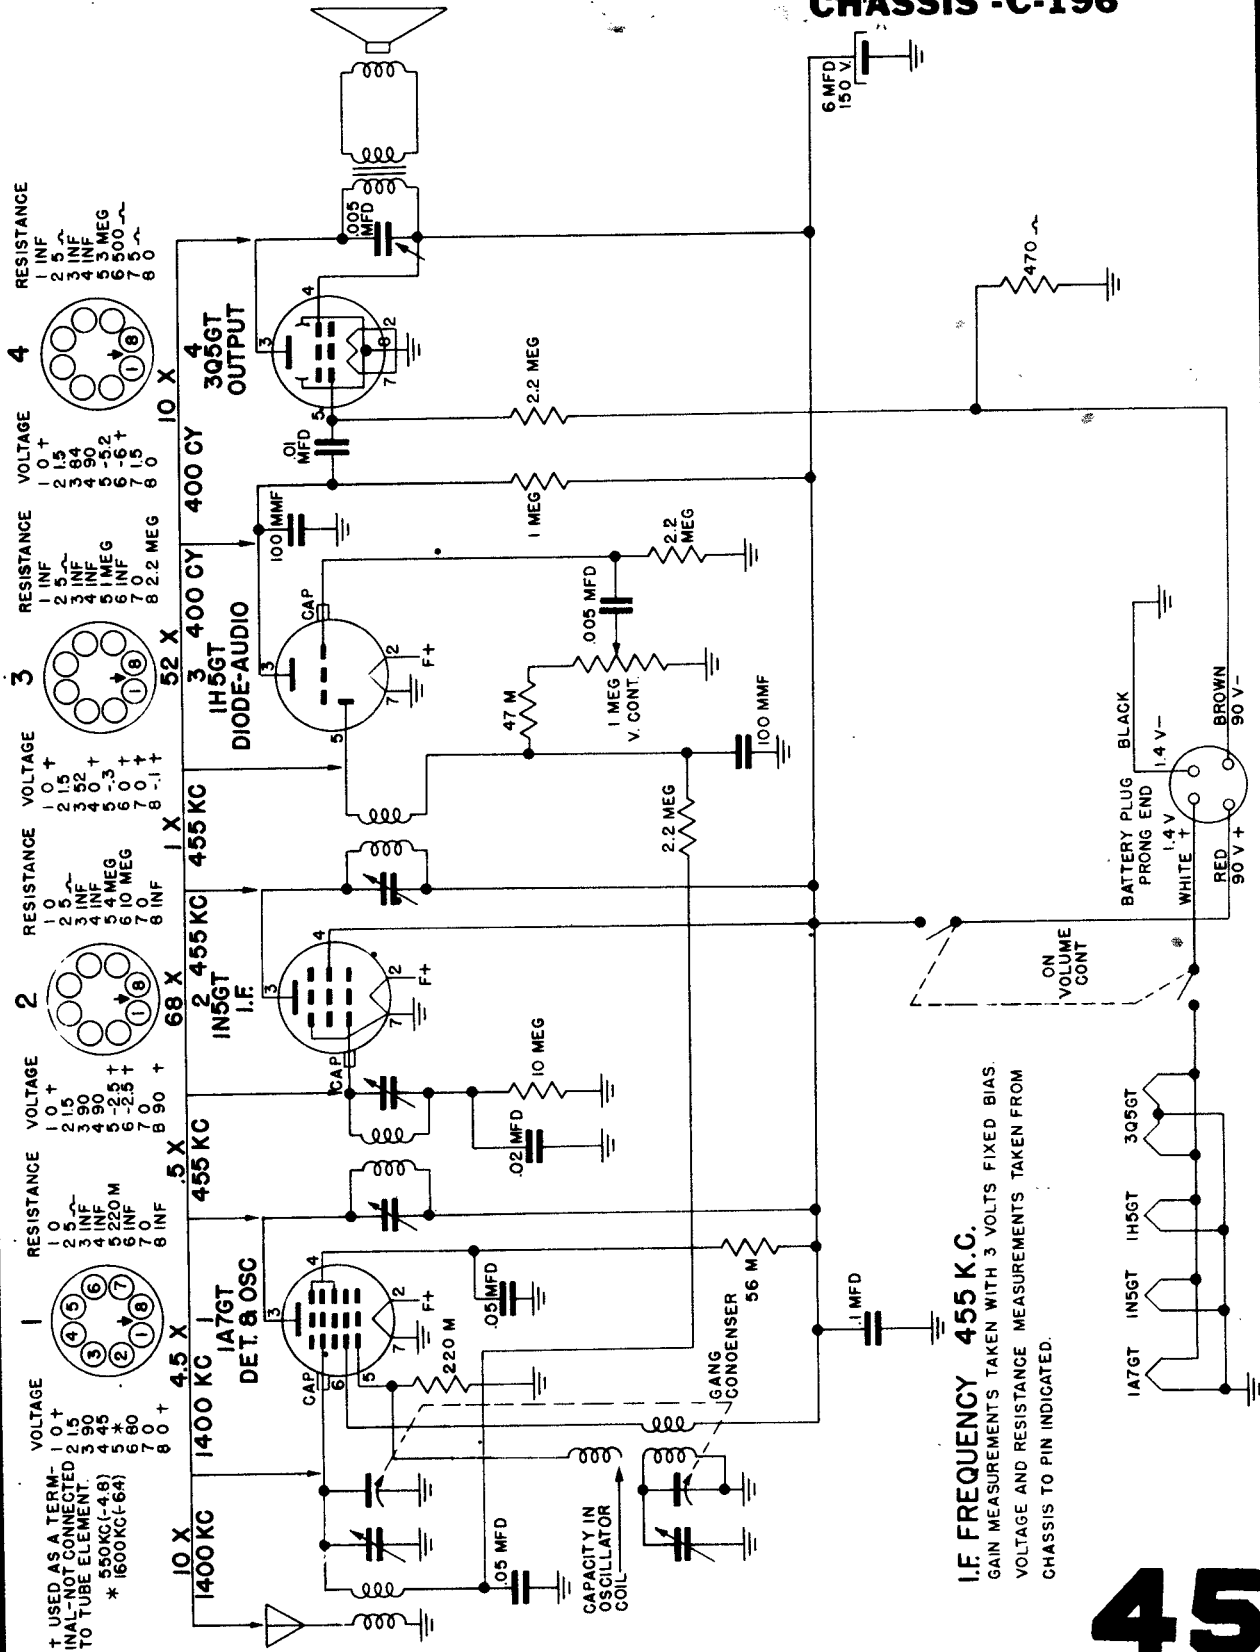

45

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS


SCHEMATIC DIAGRAM FOR MODELS 43-8177, 43-8178

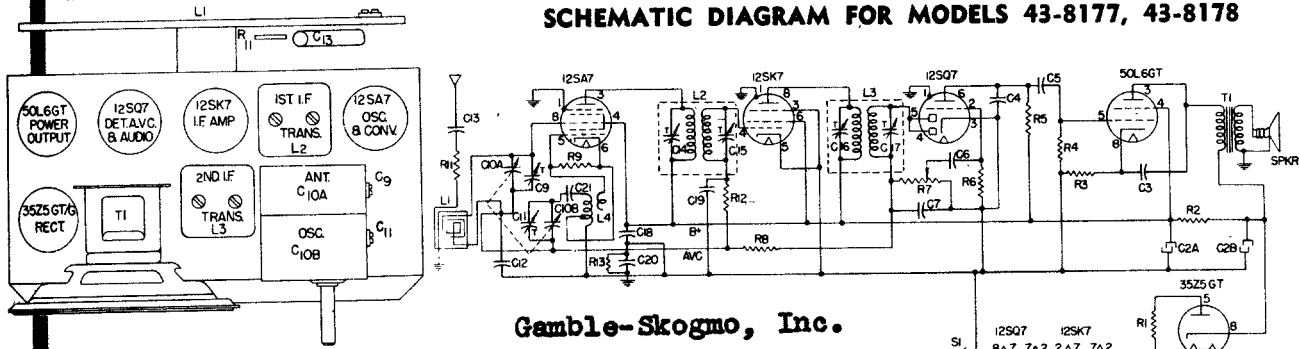

Gamble-Skogmo, Inc.

CORONADO RADIO MODELS 43-8177, 43-8178, 43-8179


SCHEMATIC DIAGRAM FOR MODEL 43-8179

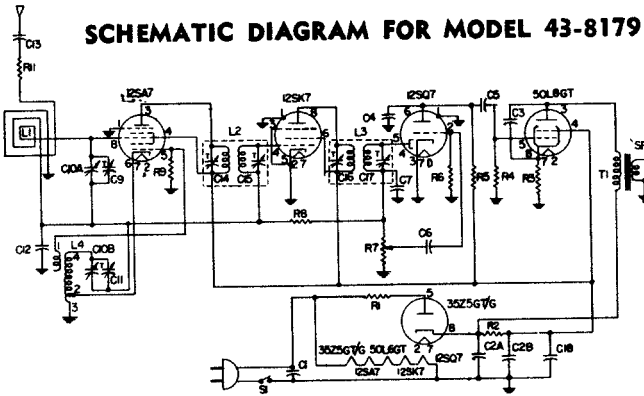

VOLTAGE DIAGRAM

FRONT OF CHASSIS

117 VOLTS AC LINE NO SIGNAL INPUT
VOLTAGES MEASURED BETWEEN SOCKET
TERMINALS AND B- WITH 20,000 OHM PER VOLT
METER
VOLUME CONTROL MINIMUM
* INDICATES AC VOLTS

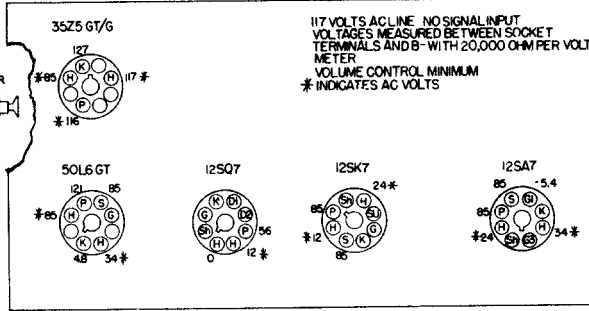

BOTTOM VIEW OF CHASSIS

PARTS DESCRIPTION LIST

MODELS 43-8177, 43-8178, 43-8179

CATALOG NO.	SYMBOL	TITLE	VALUE	RATING	TOLERANCE
UCC-045	C1	Paper Capacitor	.05 mf	600WVDC	+40 - 15%
SCE-003	C2A	Electrolytic Capacitor	40 mf	150WVDC	+100 - 10%
SCE-003	C2B	Electrolytic Capacitor	40 mf	150WVDC	+100 - 10%
UCC-041	C3	Paper Capacitor	.02 mf	600WVDC	±20%
UCU-1040	C4	Mica Capacitor	330 mmf	500WVDC	±10%
UCC-040	C5	Paper Capacitor	.01 mf	400WVDC	±20%
UCC-039	C6	Paper Capacitor	.006 mf	600WVDC	+40 - 15%
UCU-1040	C7	Mica Capacitor	330 mmf	500WVDC	±10%
*	C9	Antenna Trimmer			
*	C10A	Variable Condenser ant. section			
*	C10B	Variable Condenser osc. section			
*	C11	Oscillator Trimmer			
UCC-045	C12	Paper Capacitor	.05 mf	400WVDC	±20%
UCC-039	C13	Paper Capacitor	.005 mf	600WVDC	±20%
UCC-045	C18	Paper Capacitor	.05 mf	400WVDC	±20%
URE-007	R1	Carbon Resistor	22 ohm	½ W	±20%
URF-053	R2	Carbon Resistor	1500 ohm	2 W	±20%
URD-029	R3	Carbon Resistor	150 ohm	½ W	±20%
URD-113	R4	Carbon Resistor	470,000 ohm	½ W	±20%
URD-105	R5	Carbon Resistor	220,000 ohm	½ W	±20%
URD-145	R6	Carbon Resistor	10 megohm	½ W	±20%
SRC-004	R7	Volume Control	500,000 ohm		
URD-129	R8	Carbon Resistor	2.2 megohm	½ W	±20%
URD-081	R9	Carbon Resistor	22,000 ohm	½ W	±20%
URD-041	R11	Carbon Resistor	470 ohm	½ W	±20%
*	L1	Antenna Loop			
*	L2	1st IF Transformer			
*	L3	2nd IF Transformer	} 455 K.C.		
*	L4	Oscillator Coil			
SLC-001	T1	Output Transformer			
SRC-004	S1	Power Switch with R7			
*	SPKR	4" PM Speaker			
SJS-002		Socket-Octal base tube			
SMS-003		Speed Nuts—for fastening metal grille in cabinet			

ADDITIONAL PARTS FOR MODEL 43-8179

UCC-039	C19	Paper Capacitor	.005 mf	600WVDC	
UCC-048	C20	Paper Capacitor	.1 mf	400WVDC	
UCC-040	C21	Paper Capacitor	.01 mf	400WVDC	
URD-113	R12	Carbon Resistor	470,000 ohm	½ W	
URD-113	R13	Carbon Resistor	470,000 ohm	½ W	

47

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

Gamble-Skogmo, Inc.

CORONADO RADIO MODEL 43-8190

ALIGNMENT PROCEDURE

Allow unit to heat for a few minutes before starting alignment.

Volume control set to maximum.

Output meter across speaker.




Align for maximum output.

Keep input as low as readable meter reading of output will permit.

Note: If signal generator is AC operated, use an isolating transformer between the power supply and the radio receiver power input. The use of an isolating capacitor is not recommended as AC through the capacitor will introduce hum and/or create the possibility of a burned out signal generator attenuator.

FREQUENCY	SIGNAL GENERATOR COUPLING CAPACITOR	GENERATOR CONNECTION TO RADIO	GROUND CONNECTION	TUNING CONDENSER SETTING	ADJUST TRIMMERS FOR MAXIMUM OUTPUT (in order shown)
455 KC	0.1 mf	Converter grid	B-	Wide open	2nd IF transformer trimmer 1st IF transformer trimmer
1720 KC	200 mmf	Receiver antenna post	Chassis	Wide open	Oscillator trimmer C3
1500 KC	200 mmf	Receiver antenna post	Chassis	Tune for maximum output	Antenna trimmer C1

SYMBOL	TITLE	VALUE	RATING	TOLERANCE	PART NO
C1	Antenna trimmer				*
C2A	Variable Condenser ant. section				SC T-013
C2B	Variable Condenser osc. section				SC T-013
C3	Oscillator trimmer				*
C8	Mica capacitor	220 mmf	500WVDC	±20%	UCU-036
C9	Paper capacitor	.005mf	600WVDC	+40-15%	UCC-044
C10	Mica capacitor	220 mmf	500WVDC	±20%	UCU-036
C11	Paper capacitor	.01mf	600WVDC	±20%	UCC-040
C12	Paper capacitor	.02mf	600WVDC	±20%	UCC-041
C13A	Electrolytic capacitor	30mf	150WVDC		SCE-026
C13B	Electrolytic capacitor	30mf	150WVDC		SCE-026
C14	Paper capacitor	.05mf	600WVDC	±20%	UCC-045
C15	Paper capacitor	.05mf	600WVDC	±20%	UCC-045
C16	Paper capacitor	.05mf	600WVDC	±20%	UCC-045
C17	Paper capacitor	.01 mf	600WVDC	±20%	UCC-040
C19	Paper capacitor	.1mf	600WVDC	+20-10%	UCC-048
C20	Paper capacitor	.02mf	600WVDC	±20%	UCC-041
C21	Paper capacitor	.005mf	600WVDC	+40-15%	UCC-044
R1	Carbon resistor	22,000 ohm	½ W	±20%	URD-081
R2	Carbon resistor	2.2 megohm	½ W	±20%	URD-129
R3	Volume control	0.5 megohm			SRC-070
R4	Carbon resistor	4.7 megohm	½ W	±20%	URD-137
R5	Carbon resistor	470,000 ohm	½ W	±20%	URD-113
R6	Carbon resistor	470,000 ohm	½ W	±20%	URD-113
R7	Carbon resistor	150 ohm	½ W	±20%	URD-029
R8	Carbon resistor	2700 ohm	2 W	±20%	URE-059
R9	Carbon resistor	18 ohm	½ W	±10%	URD-007
R10	Carbon resistor	470,000 ohm	½ W	±10%	URD-113
R11	Carbon resistor	470 ohm	½ W	±20%	URD-041
R12	Carbon resistor	470,000 ohm	½ W	±20%	URD-113

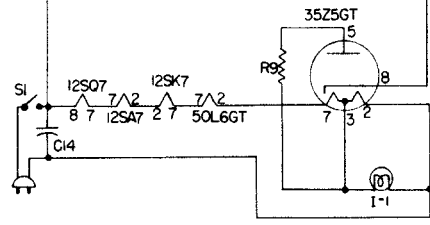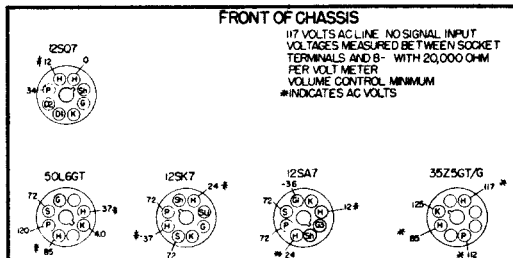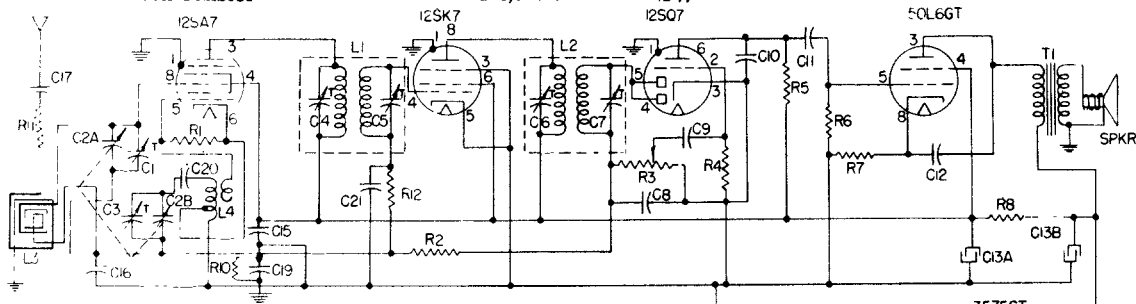

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

Gamble-Skogmo, Inc.


CORONADO RADIO MODEL 43-8201

FREQUENCY	SIGNAL GENERATOR COUPLING CAPACITOR	GENERATOR CONNECTION TO RADIO	GROUND CONNECTION	TUNING CONDENSER SETTING	ADJUST TRIMMERS FOR MAXIMUM OUTPUT (in order shown)
455 KC	0.1 mf	Converter grid	Chassis	Wide open	2nd IF transformer trimmer 1st IF transformer trimmer
1720 KC	200 mmf	Receiver antenna post	Chassis	Wide open	Oscillator trimmer C11
1500 KC	200 mmf	Receiver antenna post	Chassis	Tune for maximum output	Antenna trimmer C9



PARTS DESCRIPTION LIST

SYMBOL	TITLE	VALUE	RATING	TOLERANCE	PART NO
C1	Paper capacitor	.05mf	600WDVC	+40-10%	UCC-045
C2A	Electrolytic capacitor	40mf	150WVDC	+100-10%	SCE-003
C2B	Electrolytic capacitor	40mf	150WVDC	+100-10%	SCE-003
C3	Paper capacitor	.02mf	600WDVC	+40-10%	UCC-041
C4	Mica capacitor	330mmf	500WVDC	±20%	UCU-1040
C5	Paper capacitor	.01mf	600WDVC	+40-10%	UCC-040
C6	Paper capacitor	.005mf	600WDVC	+40-10%	UCC-039
C7	Mica capacitor	330mmf	500WVDC	±20%	UCU-1040
C8	Mica capacitor	47mmf	500WVDC	±20%	UCU-1020
C12	Paper capacitor	.05mf	600WDVC	+40-10%	UCC-045
C18	Paper capacitor	.05mf	600WDVC	+40-10%	UCC-045
C19	Paper capacitor	.005mf	600WDVC	+40-10%	UCC-039
R1	Carbon resistor	18 ohm	1w	±20%	URE-007
R2	Carbon resistor	150 ohm	2w	±20%	URF-053
R3	Carbon resistor	150 ohm	½ w	±20%	URD-029
R4	Carbon resistor	470,000 ohm	½ w	±20%	URD-113
R5	Carbon resistor	220,000 ohm	½ w	±20%	URD-105
R6	Carbon resistor	10 megohm	½ w	±20%	URD-145
R7	Volume control	.5 megohm			SRC-004
R8	Carbon resistor	2.2 megohm	½ w	±20%	URD-129
R9	Carbon resistor	22,000 ohm	½ w	±20%	URD-081

SOCKET VOLTAGE LAYOUT

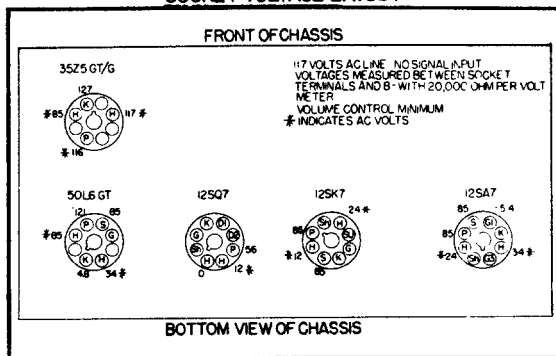

TUBE & TRIMMER LOCATION

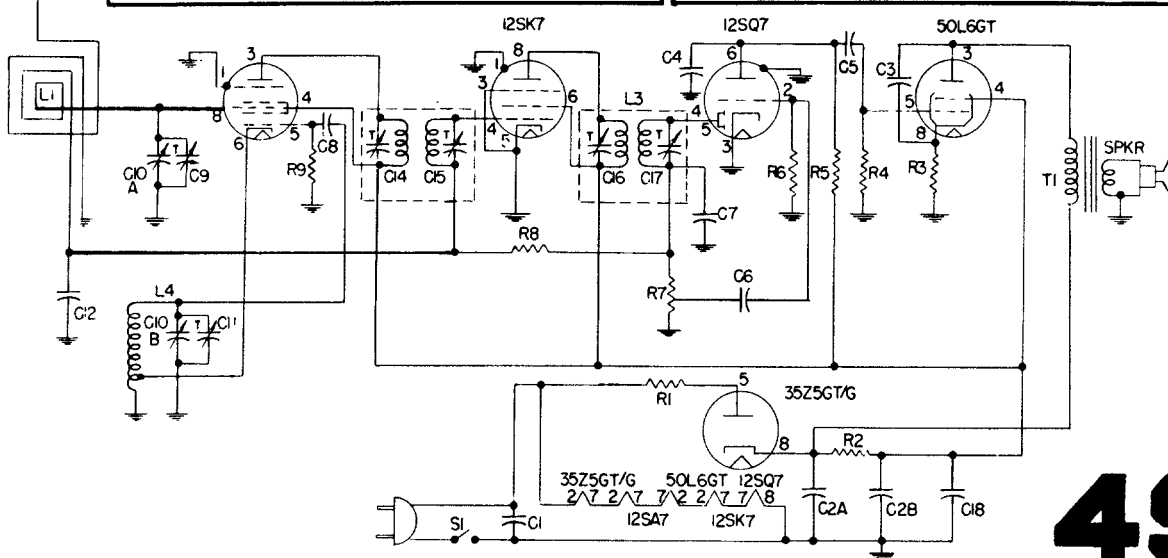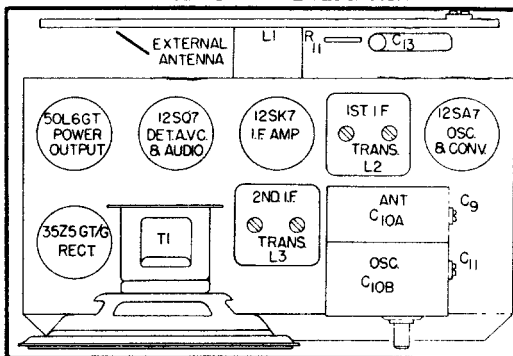



MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

Gamble-Skogmo, Inc. Coronado Models 43-8353 & 43-8354

ALIGNMENT PROCEDURE (Refer to Chassis View)


- Output meter across 3.2-ohm output load.
- Volume control at maximum.
- Connect ground post of signal generator to B— of radio.
- Align for maximum output. Reduce input as needed to keep output near 0.4 volts.

SIGNAL GENERATOR			TUNER SETTING	ADJUST FOR MAXIMUM OUTPUT (in order shown)
Frequency	Dummy Antenna	Connection to Radio		
455 kc	0.1 mf	Stator of antenna section of gang	Rotor full open (plates out of mesh)	Trimmers on output and input I.F. cans
1650 kc	0.1 mf	Stator of antenna section of gang	Rotor full open (plates out of mesh)	Oscillator trimmer C3B
1400 kc	200 mmf	External antenna clip	1400 kc	Antenna trimmer C3A

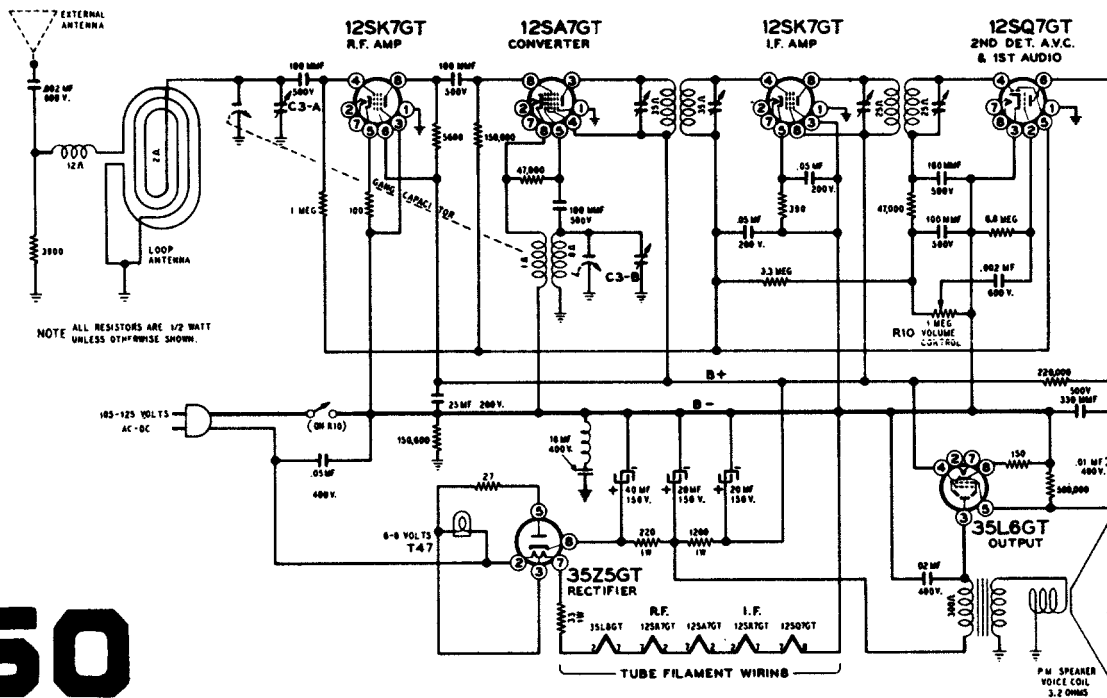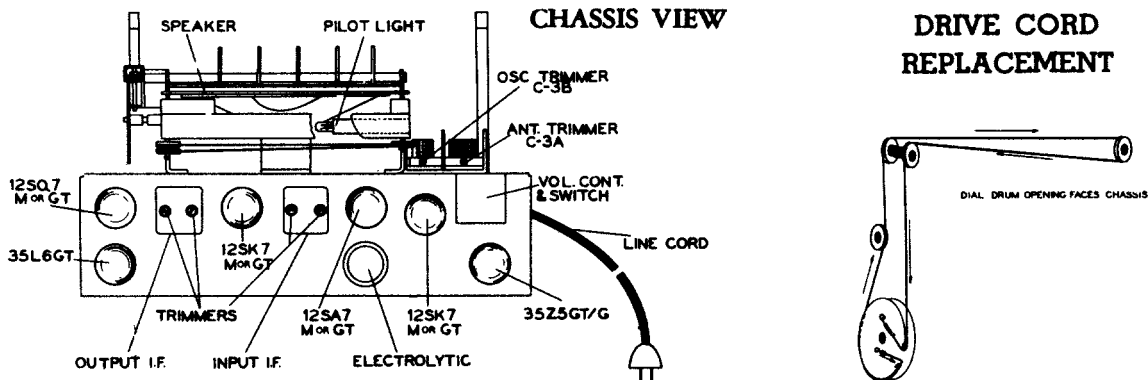


GAROD RADIO

MODEL 5A1

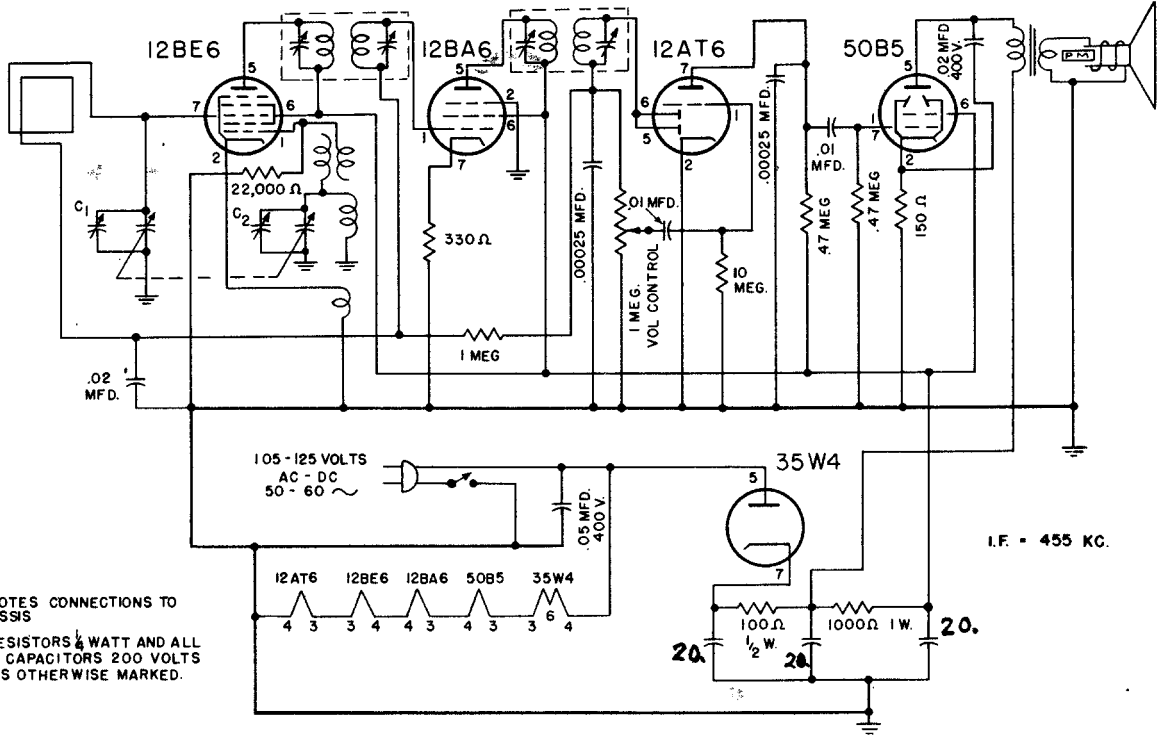


⊥ DENOTES CONNECTIONS TO CHASSIS
 ALL RESISTORS 1/4 WATT AND ALL PAPER CAPACITORS 200 VOLTS UNLESS OTHERWISE MARKED.

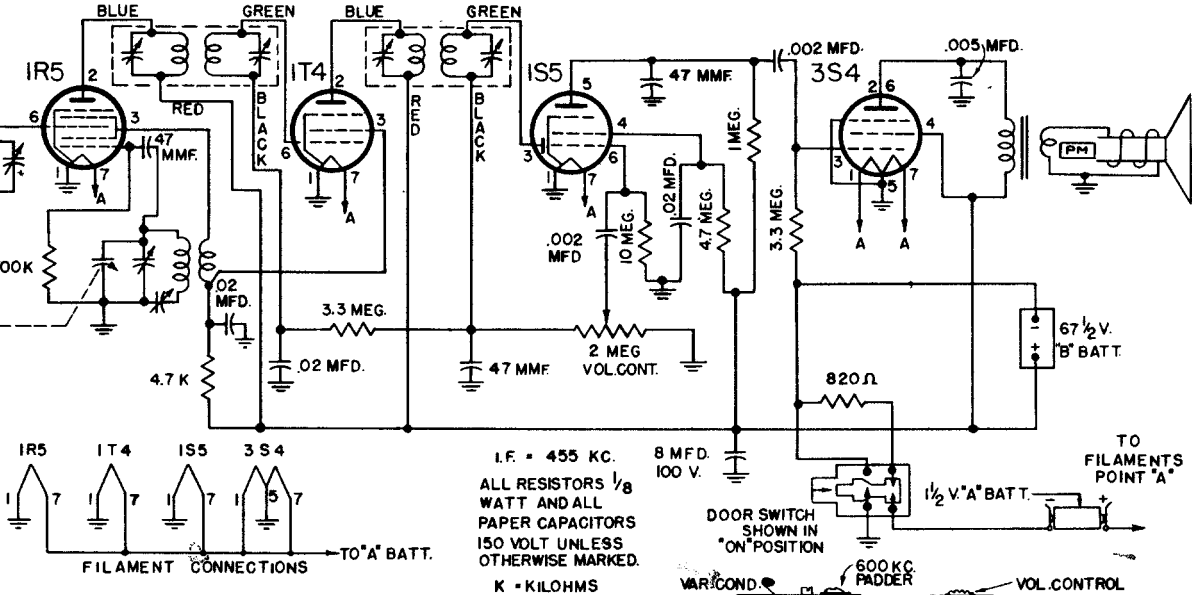

FILAMENT CONNECTIONS TO "A" BATT.
 I.R.5 I.T.4 I.S.5 3.S.4

I.F. = 455 KC.
 ALL RESISTORS 1/8 WATT AND ALL PAPER CAPACITORS 150 VOLT UNLESS OTHERWISE MARKED.
 K = KILOHMS



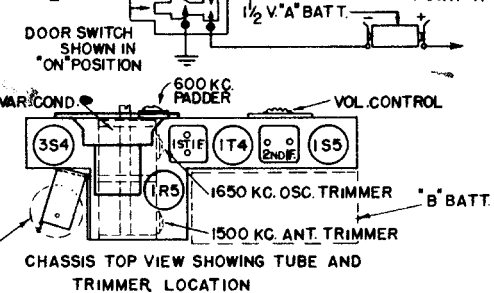


MODEL 4A-1 & 4A-2


4 TUBE SUPERHETERODYNE PERSONAL BATTERY RECEIVER

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

GENERAL ELECTRIC COMPANY
MODELS 41, 42, 43, 44, 45

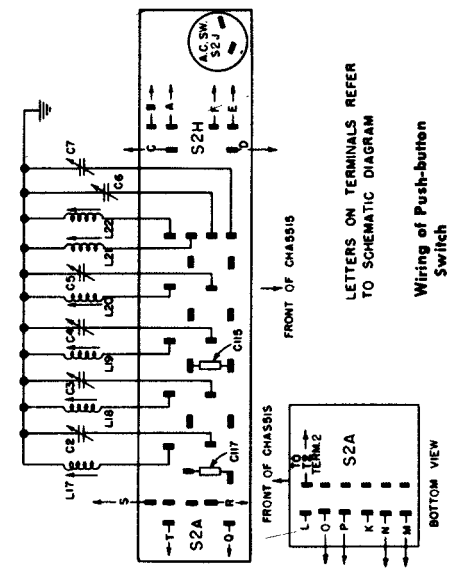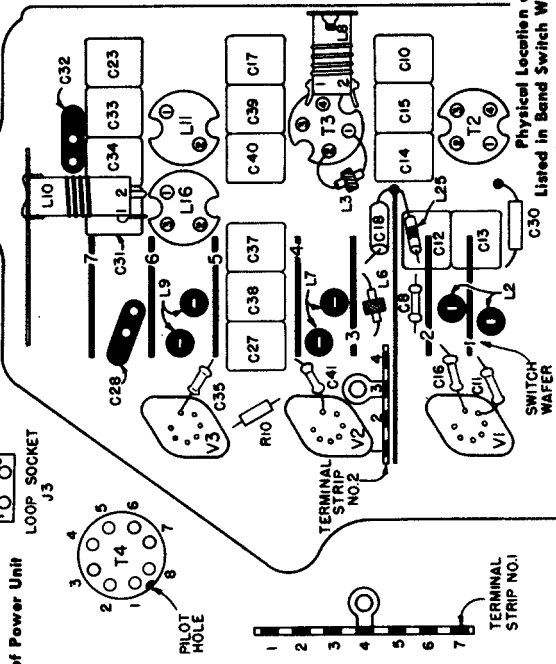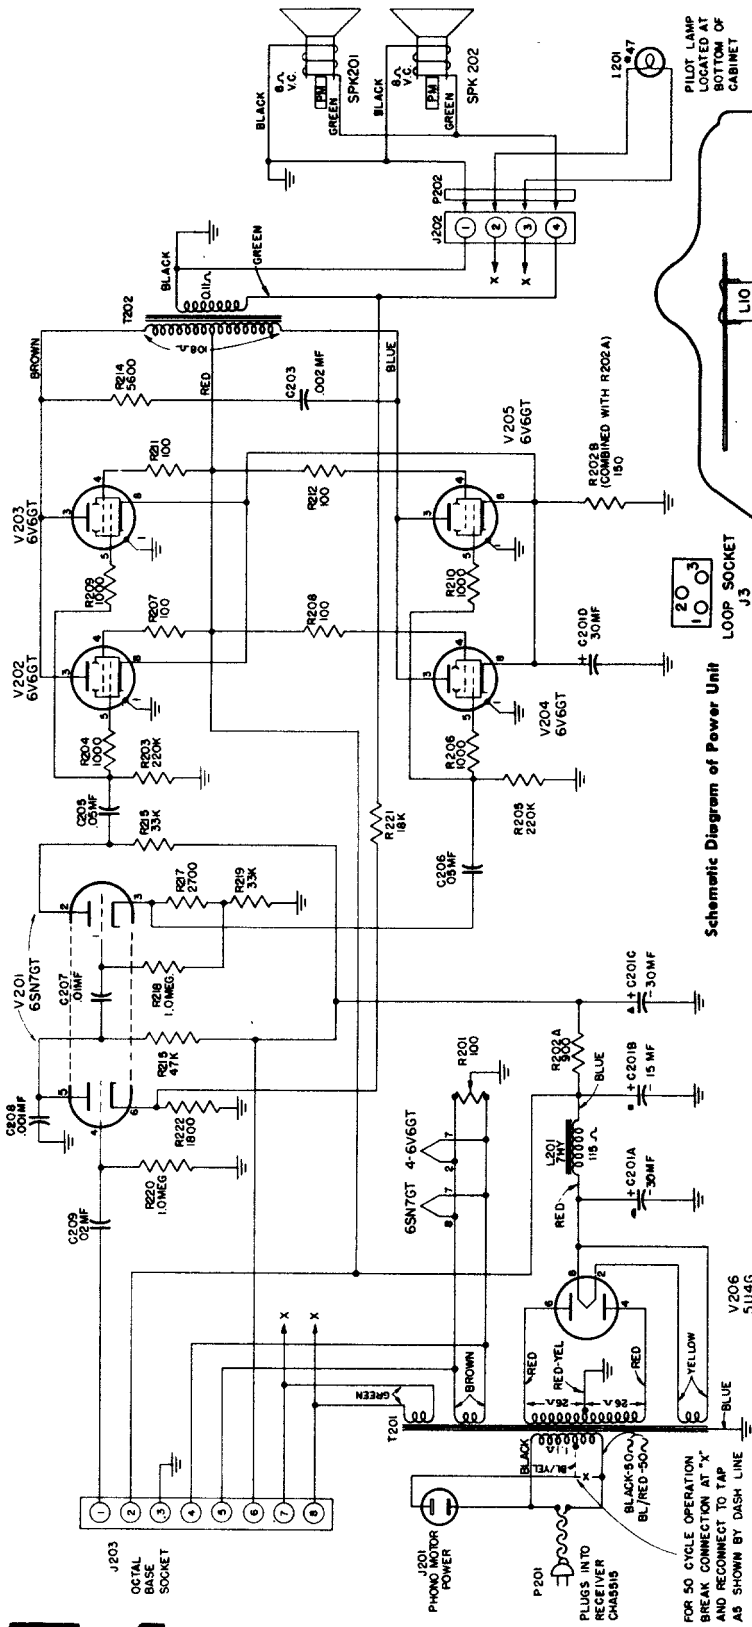

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

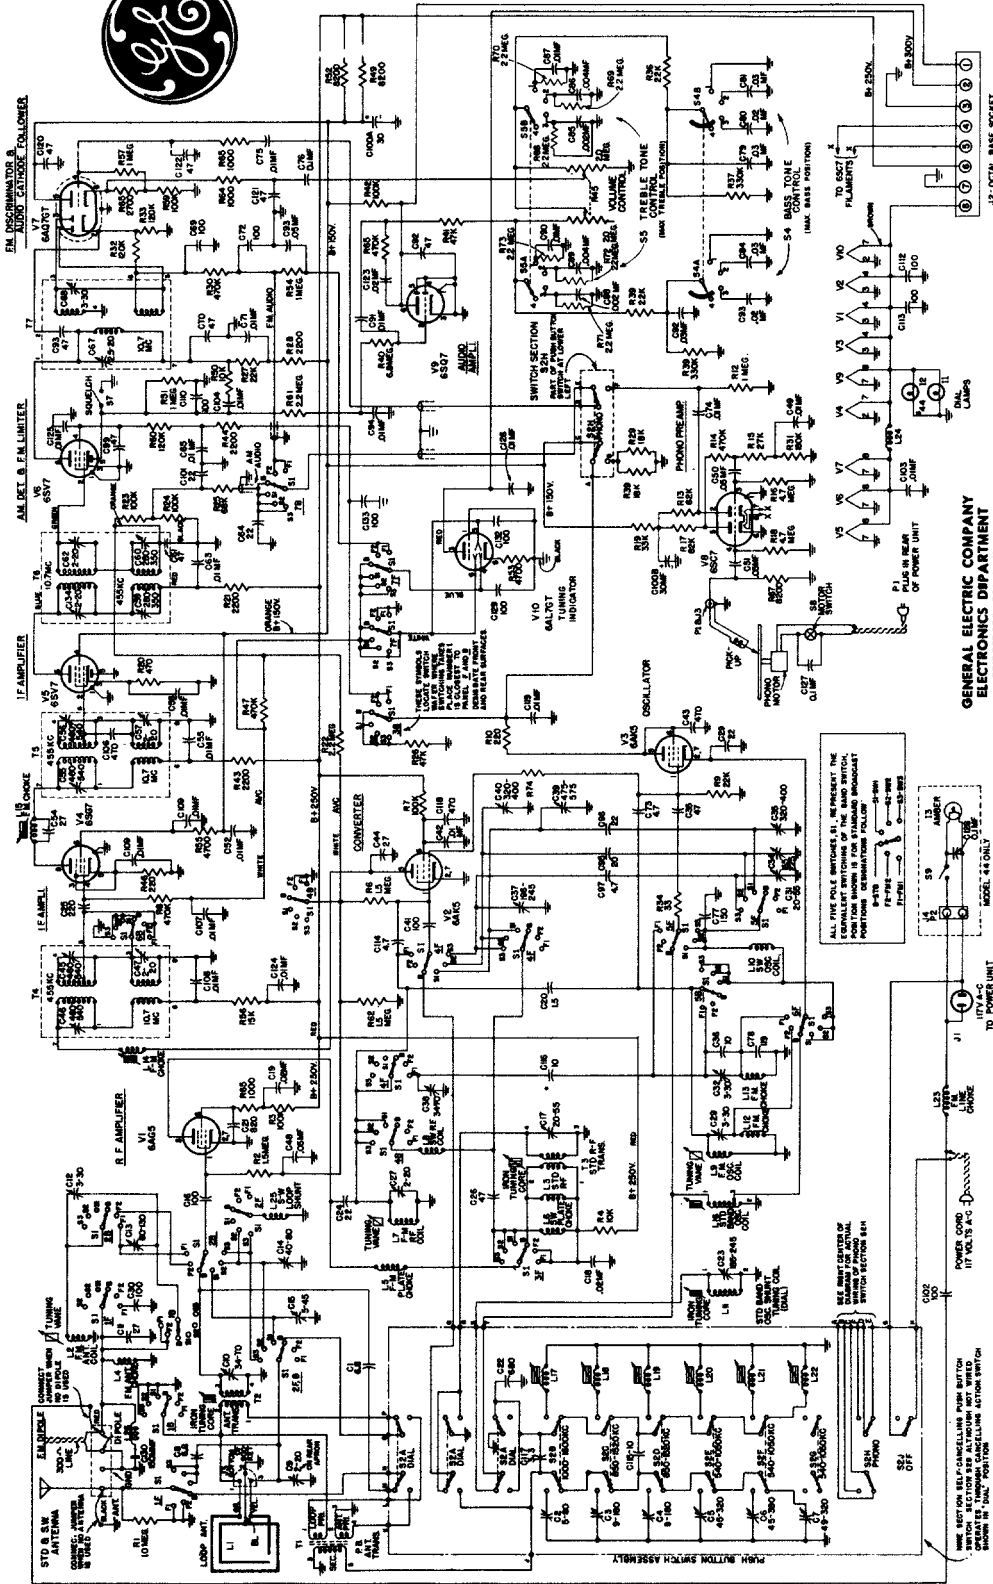

GENERAL ELECTRIC COMPANY
ELECTRONICS DEPARTMENT
BRIDGEPORT, CONN., U.S.A.

Schematic Diagram, Monophonic Model 41 through 45

A.M. I.F. = 455 KC.
P.M. I.F. = 10.7 MC.

NOTE: SECTION 54 CANCELLED BY PUSH BUTTON SWITCH SECTION 55. ALTERNATE WIRING SHOWN IN DUAL POSITION.

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

GENERAL ELECTRIC

RADIO

SERVICE DATA

FOR

MODELS YRB 83-1, YRB 79-1, YRB 79-2

Rating: 105-125 volts d-c
105-125 volts 40-60 cycles a-c
28 watts at 117 volts

Tuning Frequency Range:540-1720 KC

Intermediate Frequency:455 KC

LOUDSPEAKER "ALNCO V" MAGNET DYNAMIC

Outside Cone Diameter.....5 1/4 in.
Voice Coil Impedance (400 cycles).....3.2 ohms


I.F. ALIGNMENT

Connect an output meter across the voice coil. Turn the volume control to maximum. Set test oscillator to 455 KC and keep the oscillator output as low as a readable meter reading will permit.


Apply signal to the converter grid through a .05 mfd capacitor and align progressively the trimmers in the 2nd and 1st I.F. transformer cans.

R.F. ALIGNMENT


Apply the R.F. alignment signals through a standard I.R.E. dummy antenna to the receiver antenna post. With the gang condenser wide open, align the oscillator trimmer (C17B) to 1720 KC. Change the generator signal to 1500 KC, tune the receiver to the signal and peak antenna trimmer (C17A) for maximum output.

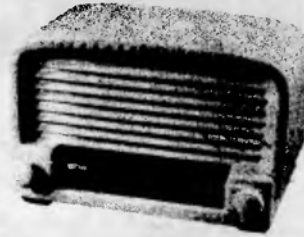

Model YRB 79-2

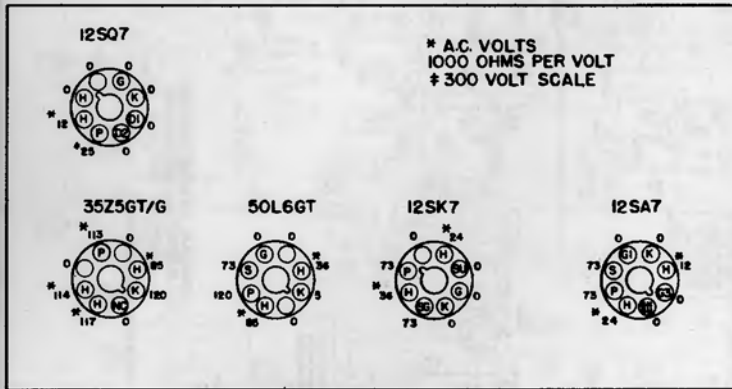

BOTTOM VIEW OF CHASSIS

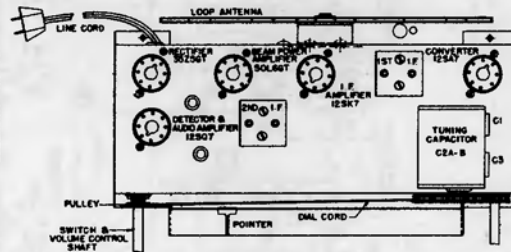


LINE VOLTS - 117

VOL. CONT. MAX.

NO SIGNAL



Symbol	Description	Symbol	Description	Symbol	Description
C1	Antenna trimmer condenser	C14	.05 mfd paper capacitor	R1	22,000 ohm carbon resistor
C2A	Tuning condenser, antenna section	C15	.05 mfd paper capacitor	R2	2.2 megohm carbon resistor
C2B	Tuning condenser, oscillator section	C16	.05 mfd paper capacitor	R3	Volume control, .5 megohm
C3	Oscillator trimmer condenser	C17	.01 mfd paper capacitor	R4	4.7 megohm carbon resistor
C8	220 mmfd mica capacitor	L1	1st I.F. transformer	R5	470,000 ohm carbon resistor
C9	.005 mfd paper capacitor	L2	2nd I.F. transformer	R6	470,000 ohm carbon resistor
C10	220 mmfd mica capacitor	L3	Loop assembly	R7	150 ohm carbon resistor
C11	.01 mfd paper capacitor	L4	Oscillator coil	R8	2700 ohm carbon resistor
C12	.02 mfd paper capacitor	P1	Pilot lamp	R9	18 ohm carbon resistor
C13A	30 mfd electrolytic capacitor	T1	Output transformer	R10	470 ohm carbon resistor
C13B	30 mfd electrolytic capacitor				

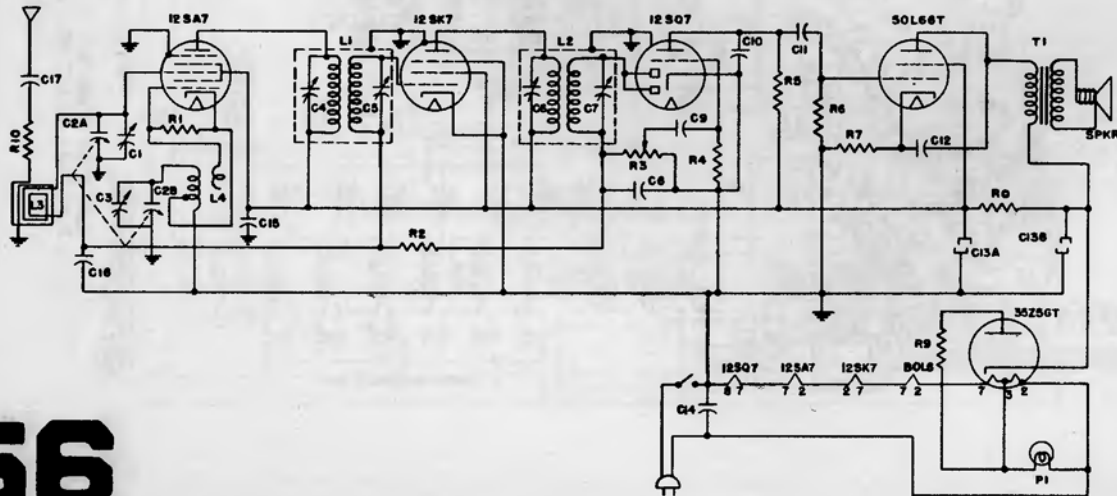

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

GENERAL ELECTRIC

MODEL 180

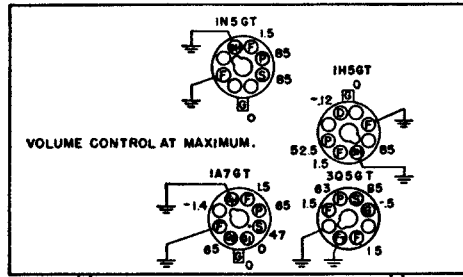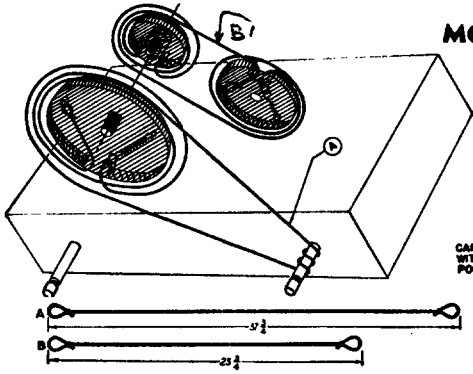


BOTTOM VIEW OF CHASSIS

MEASUREMENTS TAKEN ON 20,000 OHMS PER VOLT METER. MEASURED FROM PIN TO CHASSIS. 1.5 V "A"-90V "B" BATTERY PACK. NO SIGNAL INPUT.


ALIGNMENT CHART

Step	Connect Test Oscillator To	Test Oscillator Setting	Pointer Setting On Radio	Adjust For Max. Output
1	1N5GT IF grid in series with .05 mfd.	455 KC	550 KC	1st IF trans. trimmers
2	1A7GT Conv. grid in series with .05 mfd.	455 KC	550 KC	2nd IF trans. trimmers
3	To Ant. Post through 200 mmf. dummy and to Grd. Post.	1500 KC	1500 KC	C7* (osc.) and C3 (R-F)

*Rock gang condenser when making alignment.

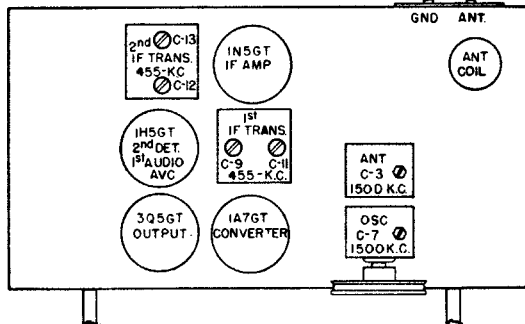

PART NO.	SYMBOL	DESCRIPTION
UCC-011	C4, 8, 10	CAPACITOR—.05 mfd., 200 v., paper
UCC-028	C16	CAPACITOR—.05 mfd., 400 v., paper
UCC-037	C20	CAPACITOR—.003 mfd., 600 v., paper
UCC-039	C15, 19	CAPACITOR—.005 mfd., 600 v., paper
UCC-040	C14	CAPACITOR—.01 mfd., 600 v., paper
UCU-1028	C6, 18	CAPACITOR—100 mmf., mica
UOP-629	SP	SPEAKER—6 1/2 in. permanent magnet
UOX-001		CONE—Replacement speaker cone
URD-037	R12	RESISTOR—330 ohm, 1/2 w., carbon
URD-065	R4	RESISTOR—4700 ohm, 1/2 w., carbon
URD-073	R1	RESISTOR—10,000 ohm, 1/2 w., carbon
URD-089	R5	RESISTOR—47,000 ohm, 1/2 w., carbon
URD-105	R3	RESISTOR—220,000 ohm, 1/2 w., carbon
URD-113	R7	RESISTOR—470,000 ohm, 1/2 w., carbon
URD-121	R10, 11	RESISTOR—1 meg., 1/2 w., carbon
URD-133	R2	RESISTOR—3.3 meg., 1/2 w., carbon
URD-137	R6	RESISTOR—4.7 meg., 1/2 w., carbon
URD-145	R9	RESISTOR—10 meg., 1/2 w., carbon
RCE-5001	C17	CAPACITOR—8 mfd., 150 v., electrolytic
RCT-5001	C5A, 5B	CAPACITOR—Tuning condenser
RCU-5002	C2	CAPACITOR—4.7 mmf., mica
RLA-5001	T2	COIL—Antenna coil
RLC-5001	T3	COIL—Oscillator coil
RRC-5001	R8, S3	VOLUME CONTROL—2 meg. vol. control and switch
RTL-5001	T5	TRANSFORMER—2nd i-f transformer
RTL-5002	T4	TRANSFORMER—1st i-f transformer

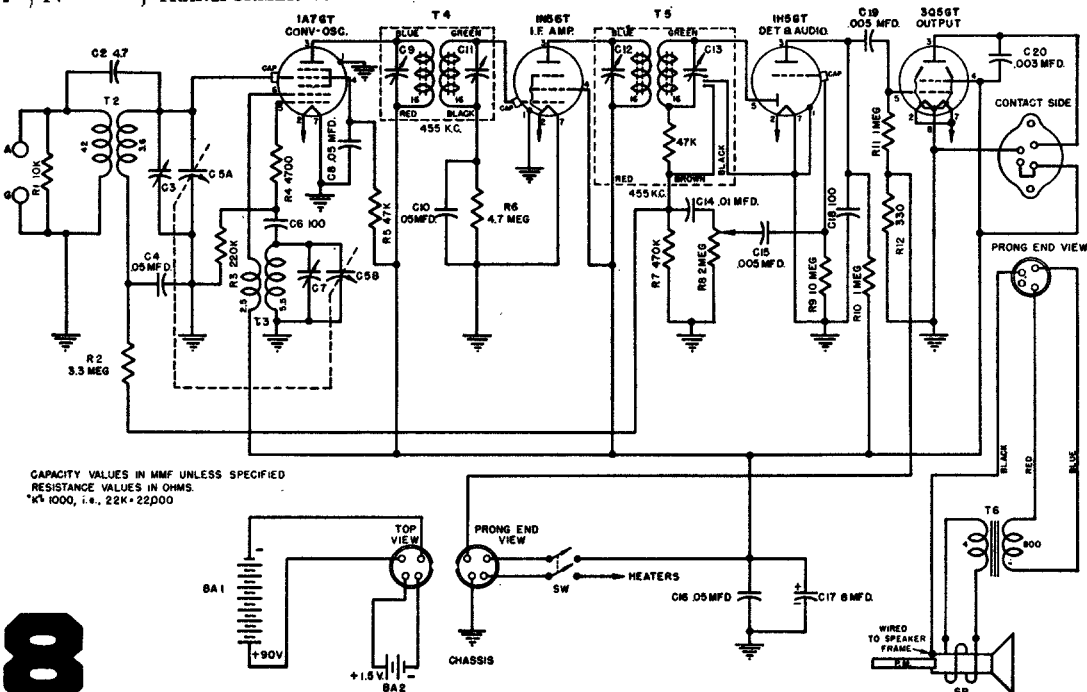

CAPACITY VALUES IN MMF UNLESS SPECIFIED. RESISTANCE VALUES IN OHMS. *K=1000, i.e., 22K=22,000


GENERAL ELECTRIC

RADIO SERVICE DATA FOR MODEL 254




Stage gain by vacuum tube voltmeter or similar measuring devices may be used to check circuit performances and isolate trouble. The gain values listed may have tolerances of 20 per cent. Readings should be taken with low signal input so that the AVC is not effective.

- (1) **RF STAGE GAINS.**
 1N5GT r-f grid to 1A7GT grid 25 at 1000 kc
 1A7GT grid to 1N5GT i-f grid 25 at 1000 kc
 1A7GT grid to 1N5GT i-f grid 30 at 455 kc
 1N5GT i-f grid to 1H5GT diode plate 65 at 455 kc
- (2) **AUDIO GAIN.**
 .06 volt at 400 cycles across volume control (R17) with control set at maximum will give approximately .05 watt output across speaker voice coil.
- (3) **DC voltage developed across oscillator grid resistor (R6) averages 13 volts at 1000 kc.**


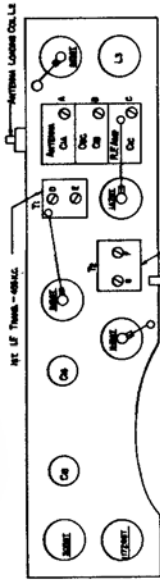


ALIGNMENT CHART

Step	Connect Test Oscillator to	Test Oscillator Setting	Pointer Setting on Radio	Adjustment for Maximum Output
1	1N5GT i-f grid in series with .05 mfd	455 kc	550 kc	2nd I-F Trana. (T2) Trimmers
2	1A7GT Conv. grid in series with .05 mfd	455 kc	550 kc	1st I-F Trana. (T1)
3	Repeat Steps 1 and 2			
4	Inductively coupled	1620 kc	Max. freq. cond. open	C1B OSC
5	Inductively coupled	1500 kc	1500 kc	C1A Ant. CIC RP
6	Inductively coupled	600 kc	600 kc	L2 Ant. Loading Coil
7	Inductively coupled	1500 kc	1500 kc	C1A Ant. CIC RP
8	Recheck Steps 5, 6, and 7			

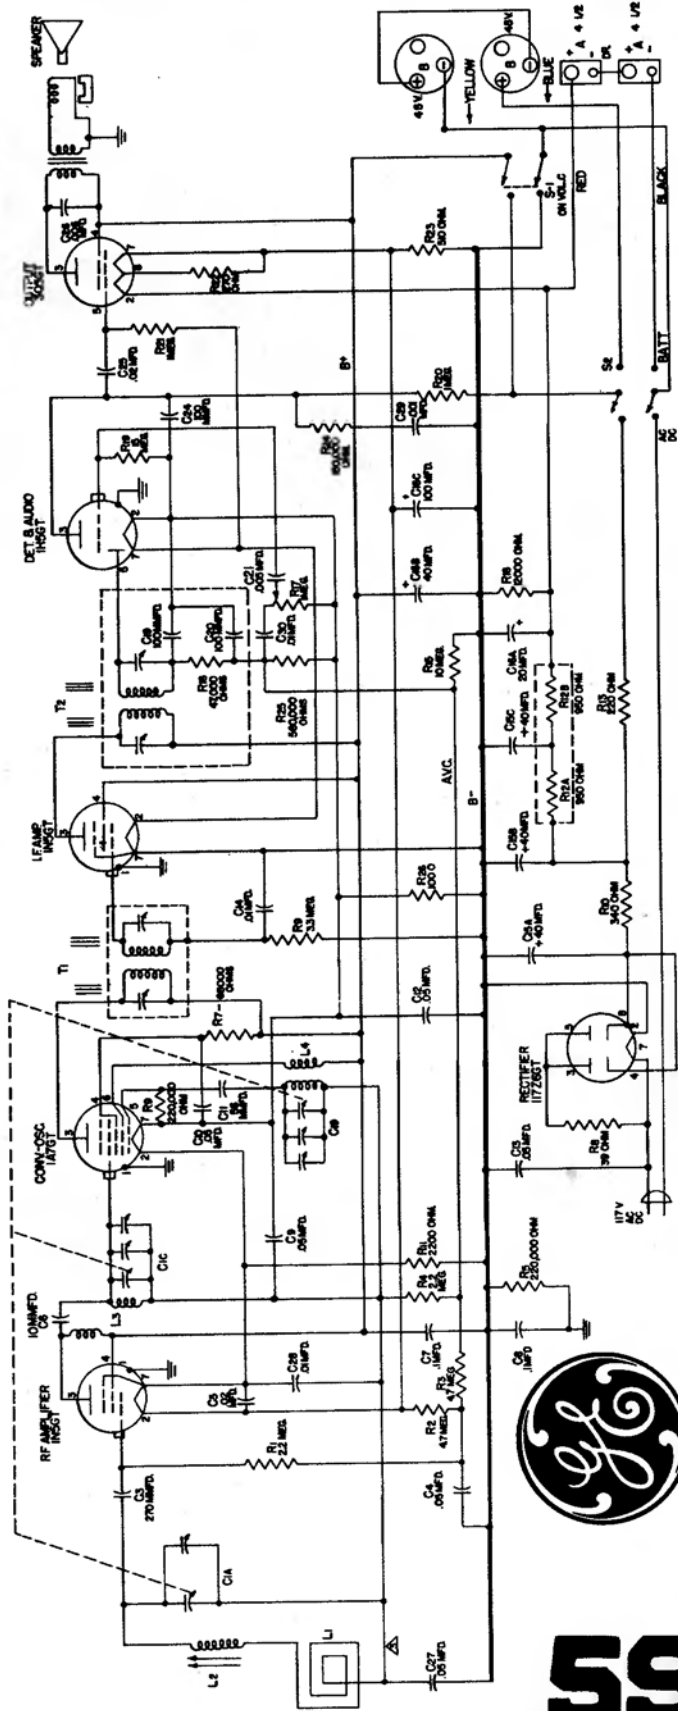

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

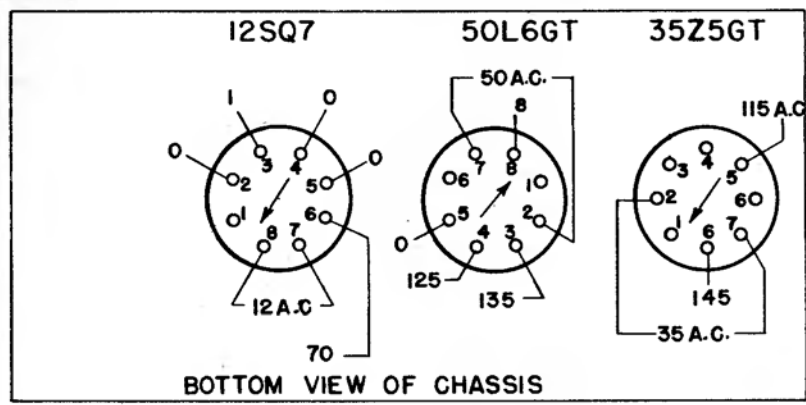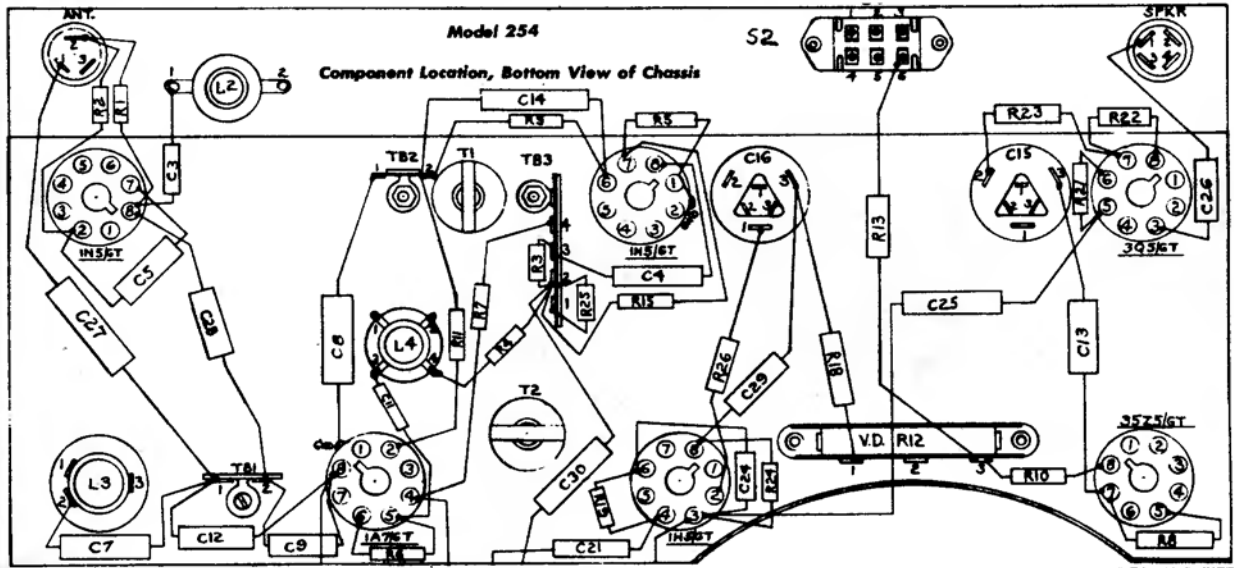


GENERAL ELECTRIC

SERVICE DATA
FOR
**PORTABLE RECORD PLAYER
MODEL 15**



CONDITIONS OF TEST



USE 1000 OHMS PER VOLT METER
ALL MEASUREMENTS TO B-
UNLESS SPECIFIED
LINE VOLTAGE — 115 V.A.C.

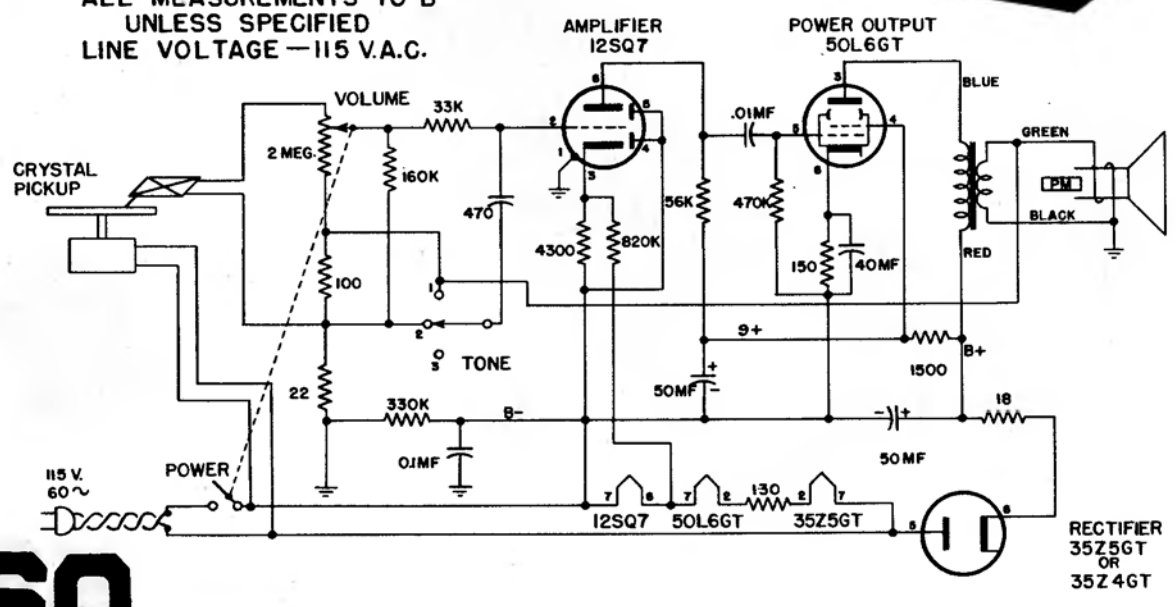


RECTIFIER
35Z5GT
OR
35Z4GT

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS


CAPACITOR GANGS CLOSED WITH DIAL ROTARY IN POSITION SHOWN

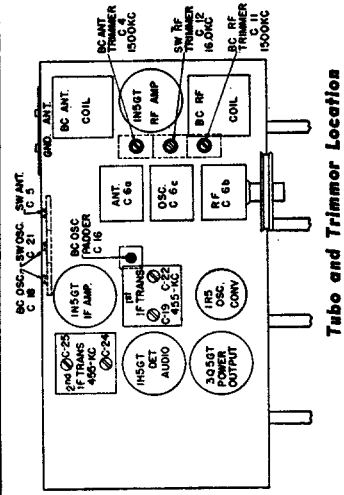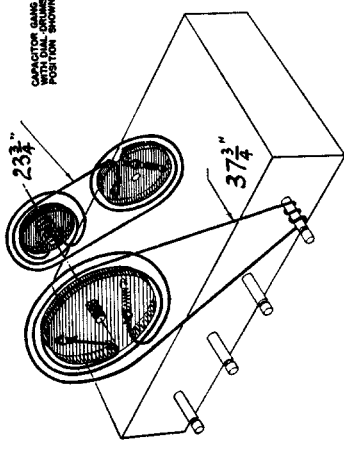

Tube end Trimmer Location

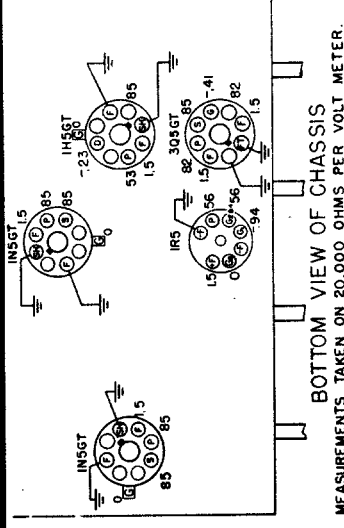

BOTTOM VIEW OF CHASSIS
MEASUREMENTS TAKEN ON 20,000 OHMS PER VOLT METER.
MEASURED FROM PIN TO CHASSIS.

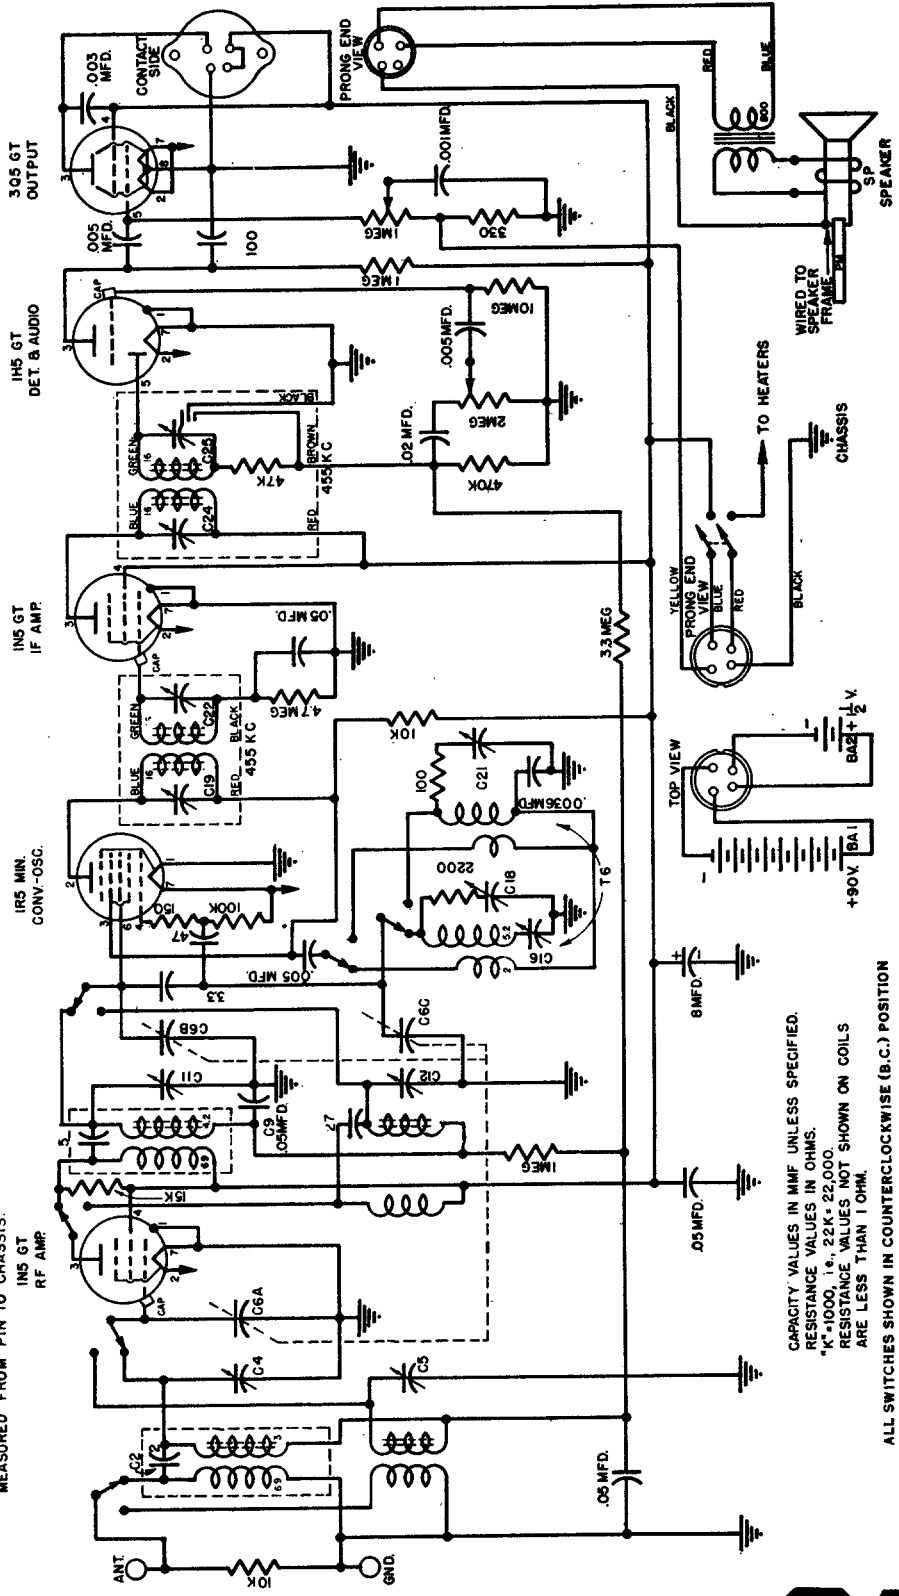

CAPACITY VALUES IN MMF UNLESS SPECIFIED.
RESISTANCE VALUES IN OHMS.
"K"=1000, "M"=22,000.
RESISTANCE VALUES NOT SHOWN ON COILS
ARE LESS THAN 1 OHM.

ALL SWITCHES SHOWN IN COUNTERCLOCKWISE (B.C.) POSITION



GENERAL ELECTRIC


MODEL 280

61

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

Mantola

Models
R662
R662N

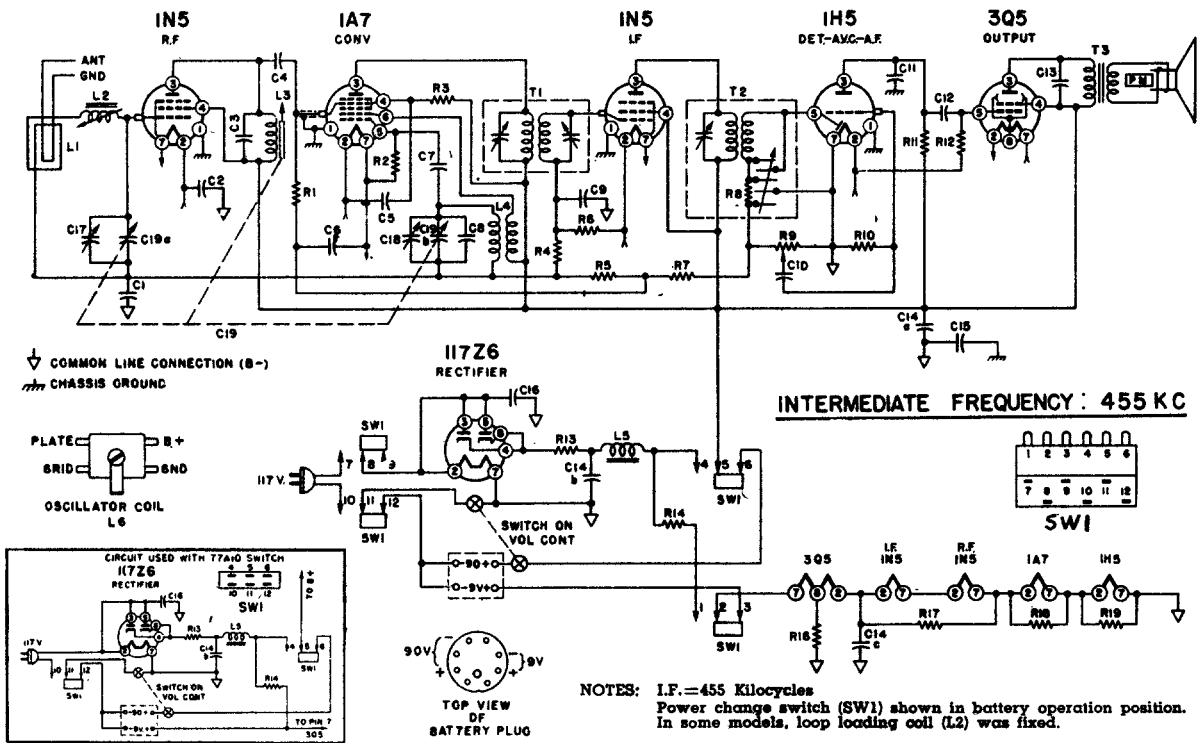

INTERMEDIATE FREQUENCY: 455 KC

NOTES: I.F. = 455 Kilocycles
Power change switch (SW1) shown in battery operation position.
In some models, loop loading coil (L2) was fixed.

CONDENSERS

Symbol	Description	Part No.
C1	.05 Mid., 200 Volt, Paper	64B1-32
C2	.25 Mid., 200 Volt, Paper	64B1-28
C3	.00042 Mid., Mica	65B1-9
C4, C11	.00025 Mid., Mica	65B5-22
C5, C6, C9, C10, C12	.01 Mid., 400 Volt, Paper	64B1-25
C7	.00005 Mid., Mica	65B5-11
C8	.000015 Mid., Mica	65B5-3
C13	.002 Mid., 600 Volt, Paper	64B1-14
C14a	50 Mid., 150 Volt	Elect. Cond. 67C7-42
C14b	30 Mid., 150 Volt	
C14c	100 Mid., 25 Volt	
C15	.2 Mid., 400 Volt, Paper	64A2-1
C16	.05 Mid., 400 Volt, Paper	64B1-22
C17	Antenna Trimmer	66A12-5
C18	Oscillator Trimmer (Part of Gang)	
C19	{ C18a } Condenser, Gang	68B4
	{ C19b }	

RESISTORS

Symbol	Description	Part No.
R6	4.7 Megohms, 1/2 Watt, Carbon	60B2-475
R7	3.3 Megohms, 1/2 Watt, Carbon	60B2-335
R8	50,000 Ohms, 1/2 Watt, Carbon	60B8-503
R9	1 Megohm Volume Control	75B1-100
R10	15 Megohms, 1/2 Watt, Carbon	60B2-156
R11	1 Megohm, 1/2 Watt, Carbon	60B2-105
R12	2.2 Megohms, 1/2 Watt, Carbon	60B2-225
R13	22 Ohms, Wire Wound, 1/2 Watt	61A2-2
R14	2,450 Ohms, Wire Wound, 5 Watt	61A3-5
R16	1,500 Ohms, 1/2 Watt, Carbon	60B8-152
R17	560 Ohms, 1/2 Watt, Carbon	60B8-561
R18	220 Ohms, 1/2 Watt, Carbon	60B8-221
R19	120 Ohms, 1/2 Watt, Carbon	60B8-121

COILS & TRANSFORMERS

Symbol	Description	Part No.
T2	2nd I.F. Transformer	72B10-2
T3	Transformer, Output	

When ordering, specify all numbers on the speaker and transformer.

SW1	{ Switch, Power Change (R662)	77A6
	{ Switch, Power Change (R662N)	77A10

COILS & TRANSFORMERS

L2	{ Coil, Loop Loading, (fixed)	AA114
	{ Coil, Loop Loading, (variable)	AA115
L3	{ Iron Slug for plate coil	71B1-3
L4	{ Coil, Plate	70A1-30
L5	{ Oscillator Coil	69A7
	{ Choke Filter	74A5
T1	{ 1st I.F. Transformer	72B9-2


MISCELLANEOUS

Description	Part No.
Dial Background	21A18-2
Dial Cord, 12"	50A1-3
Dial Cord Tension Spring	19A1-2
Escutcheon and Dial Scale	23C14
Knob, Tuning	33A14-6
Knob, Volume	33A14-5
Plug, Battery (9 prong)	88A3-3
Pointer, Cream Tenite	25A15-1
Speaker & Output Transformer	78B8
Tube Shields	87A8

RESISTORS

R1	100,000 Ohms, 1/2 Watt, Carbon	60B8-104
R2	220,000 Ohms, 1/2 Watt, Carbon	60B8-224
R3	47,000 Ohms, 1/2 Watt, Carbon	60B8-473
R4, R5	4.7 Megohms, 1/2 Watt, Carbon	60B2-475

VOLTAGE CHART

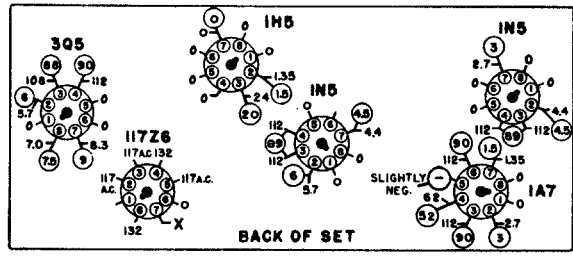

VOLTAGE DATA

1. Voltage readings circled (O) are for Battery Operation.
2. All readings made between Tube Socket Terminals and Terminal No. 7 on the 117Z6 (Point "X" on Voltage Chart).
3. A.C. Voltages measured on a 117 Volt A.C. line.
4. Battery Voltages measured with a fresh battery.
5. Dial turned to low frequency end, no signal.
6. All Voltages measured with a 1000 ohm-per-volt meter.

THE B. F. GOODRICH CO.


63

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS




MODEL 56
A, B, C, D, E

- ALIGNMENT PROCEDURE —**
- SET CONDENSER BANK TO FULL RANGE.
 - ADJUST SIGNAL GENERATOR TO 500 MC. SIGNAL GENERATOR OUTPUT LEAD TO ANTENNA CONNECTION ON LAMP IN SERIES WITH .0005 (5000) CONDENSER.
 - SET SIGNAL GENERATOR TO 455 KC. THEN ADJUST L1 TRANSFORMER FOR MAXIMUM RESPONSE INDICATED BY OUTPUT METER CONNECTED TO SPEAKER WICK COIL TERMINAL. FINAL ADJUSTMENT MADE WITH VOLTADE CONTROL. SIGNAL GENERATOR OUTPUT ADJUSTED TO 500 OUTPUT METER READING BY 75 VOLT A.C. METER.
 - SET SIGNAL GENERATOR TO 1500 KC. THEN TURN K905 TO 50% POSITION ON 1500 KC. THEN ADJUST SPEAKER WICK FOR MAXIMUM RESPONSE ON OUTPUT METER. NOW ADJUST L2 TRANSFORMER FOR MAXIMUM INDICATION ON OUTPUT METER.
 - INSTALL CHASSIS IN CABINET. MARK CERTAIN LOOP WAYS AGAINST BACK OF CABINET.

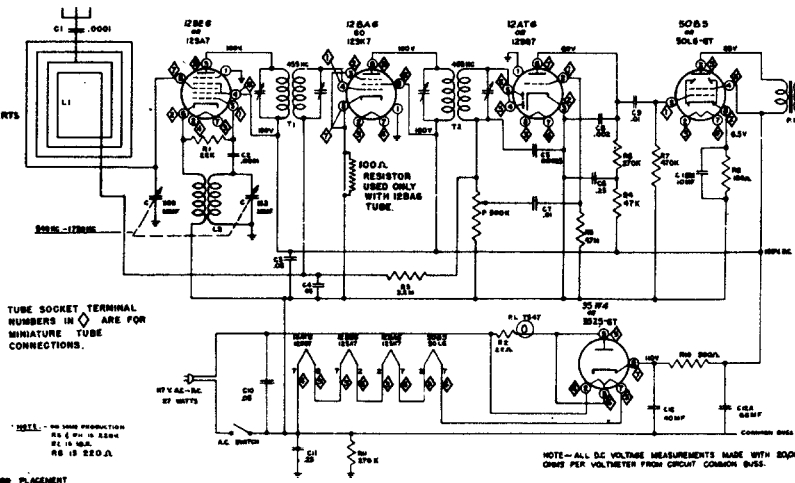

TUBE SOCKET TERMINAL NUMBERS IN Δ ARE FOR MINIATURE TUBE CONNECTIONS.

NOTE: NO 1948 PRODUCTION RS IS 220 Ω .

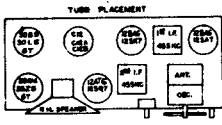


CONDENSERS

CONDENSER	VALUE	TOLERANCE	TYPE
C1	.0001	±5%	MICA
C2	.001	±5%	MICA
C3	.001	±5%	MICA
C4	.001	±5%	MICA
C5	.001	±5%	MICA
C6	.001	±5%	MICA
C7	.001	±5%	MICA
C8	.001	±5%	MICA
C9	.001	±5%	MICA
C10	.001	±5%	MICA
C11	.001	±5%	MICA
C12	.001	±5%	MICA
C13	.001	±5%	MICA
C14	.001	±5%	MICA
C15	.001	±5%	MICA
C16	.001	±5%	MICA
C17	.001	±5%	MICA
C18	.001	±5%	MICA
C19	.001	±5%	MICA
C20	.001	±5%	MICA
C21	.001	±5%	MICA
C22	.001	±5%	MICA
C23	.001	±5%	MICA
C24	.001	±5%	MICA
C25	.001	±5%	MICA
C26	.001	±5%	MICA
C27	.001	±5%	MICA
C28	.001	±5%	MICA
C29	.001	±5%	MICA
C30	.001	±5%	MICA
C31	.001	±5%	MICA
C32	.001	±5%	MICA
C33	.001	±5%	MICA
C34	.001	±5%	MICA
C35	.001	±5%	MICA
C36	.001	±5%	MICA
C37	.001	±5%	MICA
C38	.001	±5%	MICA
C39	.001	±5%	MICA
C40	.001	±5%	MICA
C41	.001	±5%	MICA
C42	.001	±5%	MICA
C43	.001	±5%	MICA
C44	.001	±5%	MICA
C45	.001	±5%	MICA
C46	.001	±5%	MICA
C47	.001	±5%	MICA
C48	.001	±5%	MICA
C49	.001	±5%	MICA
C50	.001	±5%	MICA
C51	.001	±5%	MICA
C52	.001	±5%	MICA
C53	.001	±5%	MICA
C54	.001	±5%	MICA
C55	.001	±5%	MICA
C56	.001	±5%	MICA
C57	.001	±5%	MICA
C58	.001	±5%	MICA
C59	.001	±5%	MICA
C60	.001	±5%	MICA
C61	.001	±5%	MICA
C62	.001	±5%	MICA
C63	.001	±5%	MICA
C64	.001	±5%	MICA
C65	.001	±5%	MICA
C66	.001	±5%	MICA
C67	.001	±5%	MICA
C68	.001	±5%	MICA
C69	.001	±5%	MICA
C70	.001	±5%	MICA
C71	.001	±5%	MICA
C72	.001	±5%	MICA
C73	.001	±5%	MICA
C74	.001	±5%	MICA
C75	.001	±5%	MICA
C76	.001	±5%	MICA
C77	.001	±5%	MICA
C78	.001	±5%	MICA
C79	.001	±5%	MICA
C80	.001	±5%	MICA
C81	.001	±5%	MICA
C82	.001	±5%	MICA
C83	.001	±5%	MICA
C84	.001	±5%	MICA
C85	.001	±5%	MICA
C86	.001	±5%	MICA
C87	.001	±5%	MICA
C88	.001	±5%	MICA
C89	.001	±5%	MICA
C90	.001	±5%	MICA
C91	.001	±5%	MICA
C92	.001	±5%	MICA
C93	.001	±5%	MICA
C94	.001	±5%	MICA
C95	.001	±5%	MICA
C96	.001	±5%	MICA
C97	.001	±5%	MICA
C98	.001	±5%	MICA
C99	.001	±5%	MICA
C100	.001	±5%	MICA

RESISTORS ± 20%

RESISTOR	VALUE	TOLERANCE	TYPE
R1	100K	±20%	RESISTOR
R2	100K	±20%	RESISTOR
R3	100K	±20%	RESISTOR
R4	100K	±20%	RESISTOR
R5	100K	±20%	RESISTOR
R6	100K	±20%	RESISTOR
R7	100K	±20%	RESISTOR
R8	100K	±20%	RESISTOR
R9	100K	±20%	RESISTOR
R10	100K	±20%	RESISTOR
R11	100K	±20%	RESISTOR
R12	100K	±20%	RESISTOR
R13	100K	±20%	RESISTOR
R14	100K	±20%	RESISTOR
R15	100K	±20%	RESISTOR
R16	100K	±20%	RESISTOR
R17	100K	±20%	RESISTOR
R18	100K	±20%	RESISTOR
R19	100K	±20%	RESISTOR
R20	100K	±20%	RESISTOR
R21	100K	±20%	RESISTOR
R22	100K	±20%	RESISTOR
R23	100K	±20%	RESISTOR
R24	100K	±20%	RESISTOR
R25	100K	±20%	RESISTOR
R26	100K	±20%	RESISTOR
R27	100K	±20%	RESISTOR
R28	100K	±20%	RESISTOR
R29	100K	±20%	RESISTOR
R30	100K	±20%	RESISTOR
R31	100K	±20%	RESISTOR
R32	100K	±20%	RESISTOR
R33	100K	±20%	RESISTOR
R34	100K	±20%	RESISTOR
R35	100K	±20%	RESISTOR
R36	100K	±20%	RESISTOR
R37	100K	±20%	RESISTOR
R38	100K	±20%	RESISTOR
R39	100K	±20%	RESISTOR
R40	100K	±20%	RESISTOR
R41	100K	±20%	RESISTOR
R42	100K	±20%	RESISTOR
R43	100K	±20%	RESISTOR
R44	100K	±20%	RESISTOR
R45	100K	±20%	RESISTOR
R46	100K	±20%	RESISTOR
R47	100K	±20%	RESISTOR
R48	100K	±20%	RESISTOR
R49	100K	±20%	RESISTOR
R50	100K	±20%	RESISTOR
R51	100K	±20%	RESISTOR
R52	100K	±20%	RESISTOR
R53	100K	±20%	RESISTOR
R54	100K	±20%	RESISTOR
R55	100K	±20%	RESISTOR
R56	100K	±20%	RESISTOR
R57	100K	±20%	RESISTOR
R58	100K	±20%	RESISTOR
R59	100K	±20%	RESISTOR
R60	100K	±20%	RESISTOR
R61	100K	±20%	RESISTOR
R62	100K	±20%	RESISTOR
R63	100K	±20%	RESISTOR
R64	100K	±20%	RESISTOR
R65	100K	±20%	RESISTOR
R66	100K	±20%	RESISTOR
R67	100K	±20%	RESISTOR
R68	100K	±20%	RESISTOR
R69	100K	±20%	RESISTOR
R70	100K	±20%	RESISTOR
R71	100K	±20%	RESISTOR
R72	100K	±20%	RESISTOR
R73	100K	±20%	RESISTOR
R74	100K	±20%	RESISTOR
R75	100K	±20%	RESISTOR
R76	100K	±20%	RESISTOR
R77	100K	±20%	RESISTOR
R78	100K	±20%	RESISTOR
R79	100K	±20%	RESISTOR
R80	100K	±20%	RESISTOR
R81	100K	±20%	RESISTOR
R82	100K	±20%	RESISTOR
R83	100K	±20%	RESISTOR
R84	100K	±20%	RESISTOR
R85	100K	±20%	RESISTOR
R86	100K	±20%	RESISTOR
R87	100K	±20%	RESISTOR
R88	100K	±20%	RESISTOR
R89	100K	±20%	RESISTOR
R90	100K	±20%	RESISTOR
R91	100K	±20%	RESISTOR
R92	100K	±20%	RESISTOR
R93	100K	±20%	RESISTOR
R94	100K	±20%	RESISTOR
R95	100K	±20%	RESISTOR
R96	100K	±20%	RESISTOR
R97	100K	±20%	RESISTOR
R98	100K	±20%	RESISTOR
R99	100K	±20%	RESISTOR
R100	100K	±20%	RESISTOR

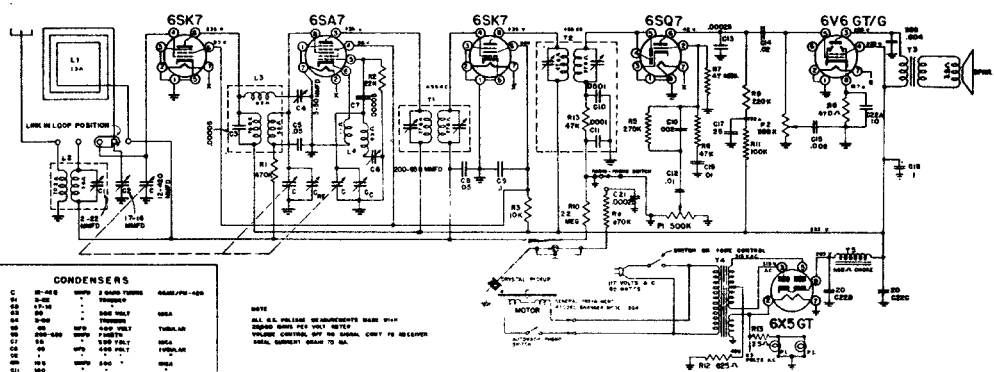


CONDENSERS

CONDENSER	VALUE	TOLERANCE	TYPE
C1	.0001	±5%	MICA
C2	.001	±5%	MICA
C3	.001	±5%	MICA
C4	.001	±5%	MICA
C5	.001	±5%	MICA
C6	.001	±5%	MICA
C7	.001	±5%	MICA
C8	.001	±5%	MICA
C9	.001	±5%	MICA
C10	.001	±5%	MICA
C11	.001	±5%	MICA
C12	.001	±5%	MICA
C13	.001	±5%	MICA
C14	.001	±5%	MICA
C15	.001	±5%	MICA
C16	.001	±5%	MICA
C17	.001	±5%	MICA
C18	.001	±5%	MICA
C19	.001	±5%	MICA
C20	.001	±5%	MICA
C21	.001	±5%	MICA
C22	.001	±5%	MICA
C23	.001	±5%	MICA
C24	.001	±5%	MICA
C25	.001	±5%	MICA
C26	.001	±5%	MICA
C27	.001	±5%	MICA
C28	.001	±5%	MICA
C29	.001	±5%	MICA
C30	.001	±5%	MICA
C31	.001	±5%	MICA
C32	.001	±5%	MICA
C33	.001	±5%	MICA
C34	.001	±5%	MICA
C35	.001	±5%	MICA
C36	.001	±5%	MICA
C37	.001	±5%	MICA
C38	.001	±5%	MICA
C39	.001	±5%	MICA
C40	.001	±5%	MICA
C41	.001	±5%	MICA
C42	.001	±5%	MICA
C43	.001	±5%	MICA
C44	.001	±5%	MICA
C45	.001	±5%	MICA
C46	.001	±5%	MICA
C47	.001	±5%	MICA
C48	.001	±5%	MICA
C49	.001	±5%	MICA
C50	.001	±5%	MICA
C51	.001	±5%	MICA
C52	.001	±5%	MICA
C53	.001	±5%	MICA
C54	.001	±5%	MICA
C55	.001	±5%	MICA
C56	.001	±5%	MICA
C57	.001	±5%	MICA
C58	.001	±5%	MICA
C59	.001	±5%	MICA
C60	.001	±5%	MICA
C61	.001	±5%	MICA
C62	.001	±5%	MICA
C63	.001	±5%	MICA
C64	.001	±5%	MICA
C65	.001	±5%	MICA
C66	.001	±5%	MICA
C67	.001	±5%	MICA
C68	.001	±5%	MICA
C69	.001	±5%	MICA
C70	.001	±5%	MICA
C71	.001	±5%	MICA
C72	.001	±5%	MICA
C73	.001	±5%	MICA
C74	.001	±5%	MICA
C75	.001	±5%	MICA
C76	.001	±5%	MICA
C77	.001	±5%	MICA
C78	.001	±5%	MICA
C79	.001	±5%	MICA
C80	.001	±5%	MICA
C81	.001	±5%	MICA
C8			

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

66

the hallicrafters co. MODELS EC-306 AND EX-306

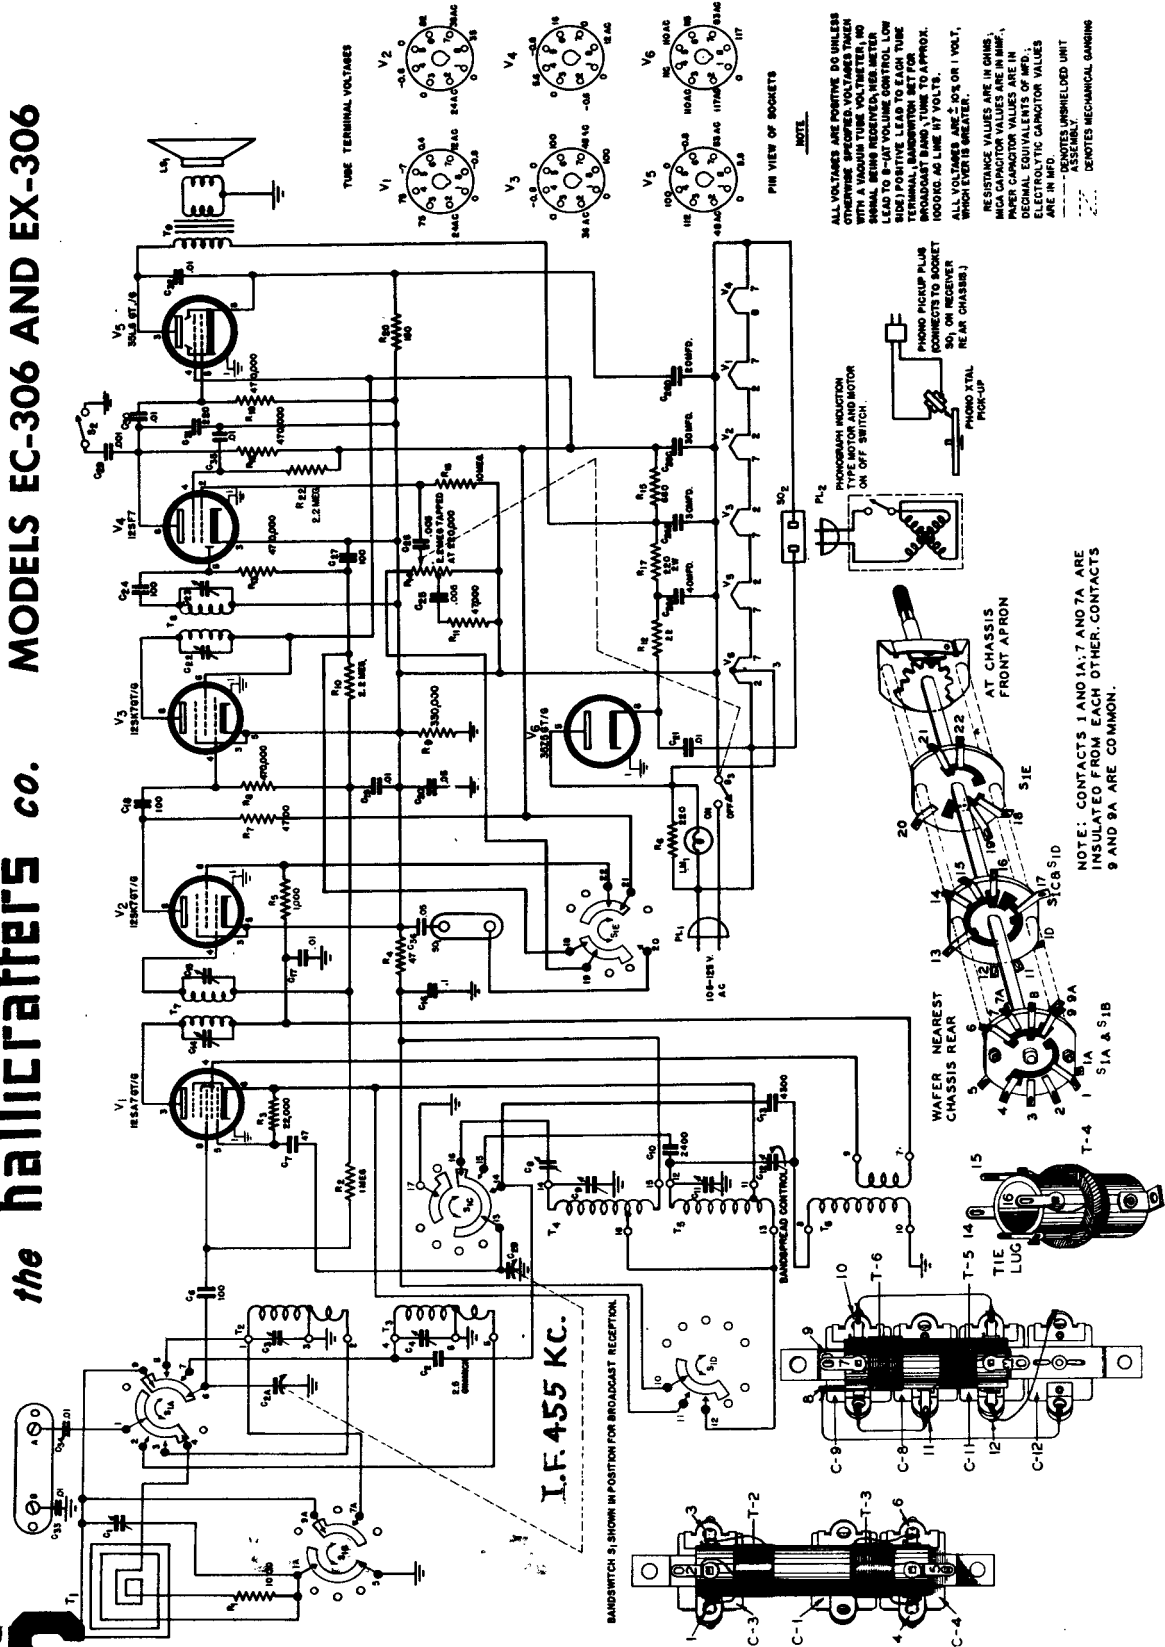


MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS



OLYMPIC RADIO & TELEVISION

DIVISION OF
HAMILTON RADIO CORPORATION

Model 6-507

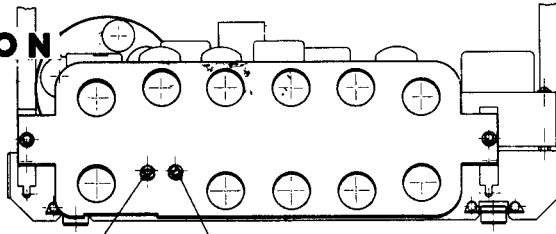


REAR VIEW OF RECEIVER CHASSIS WITH CABINET BACK REMOVED
ANTENNA TERMINAL GROUND TERMINAL

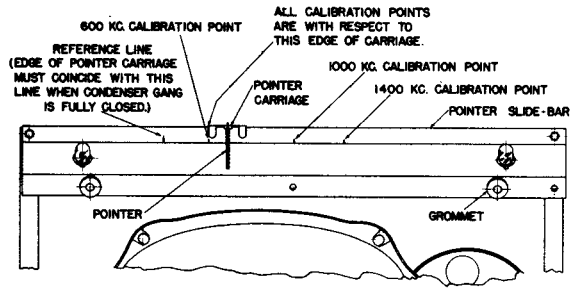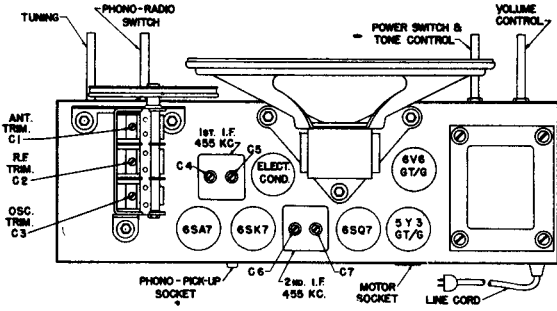

FRONT VIEW OF DIAL BACK-PLATE
SHOWING CALIBRATION POINTS

ALIGNMENT PROCEDURE CHART

STEP	CONNECT HIGH SIDE OF SIGNAL GENERATOR TO-	SET SIGNAL GENERATOR TO-	TURN POINTER TO-	ADJUST THE FOLLOWING FOR MAXIMUM OUTPUT. (KEEP SIGNAL FROM SIGNAL GENERATOR AS LOW AS POSSIBLE.)
1	R.F. SECTION OF THE VARIABLE CONDENSER.	455 KC.	EXTREME RIGHTHAND POSITION. (CONDENSER PLATES FULLY OPEN.)	C7, C6, C5, C4 AND REPEAT IN SAME ORDER (1st. AND 2nd. I.F. TRANSFORMERS.)
2	ANTENNA TERMINAL OF ANTENNA LOOP	1400 KC.	1400 KC. CALIBRATION POINT.	C3, C2, C1.
3	IN SERIES WITH 50 MMFD. COND.	600 KC.	RESONANCE	CHECK THAT POINTER EDGE AT RESONANCE COINCIDES WITH 600 KC. CALIBRATION POINT. IF DEVIATION IS TOO LARGE REPEAT STEP 2.

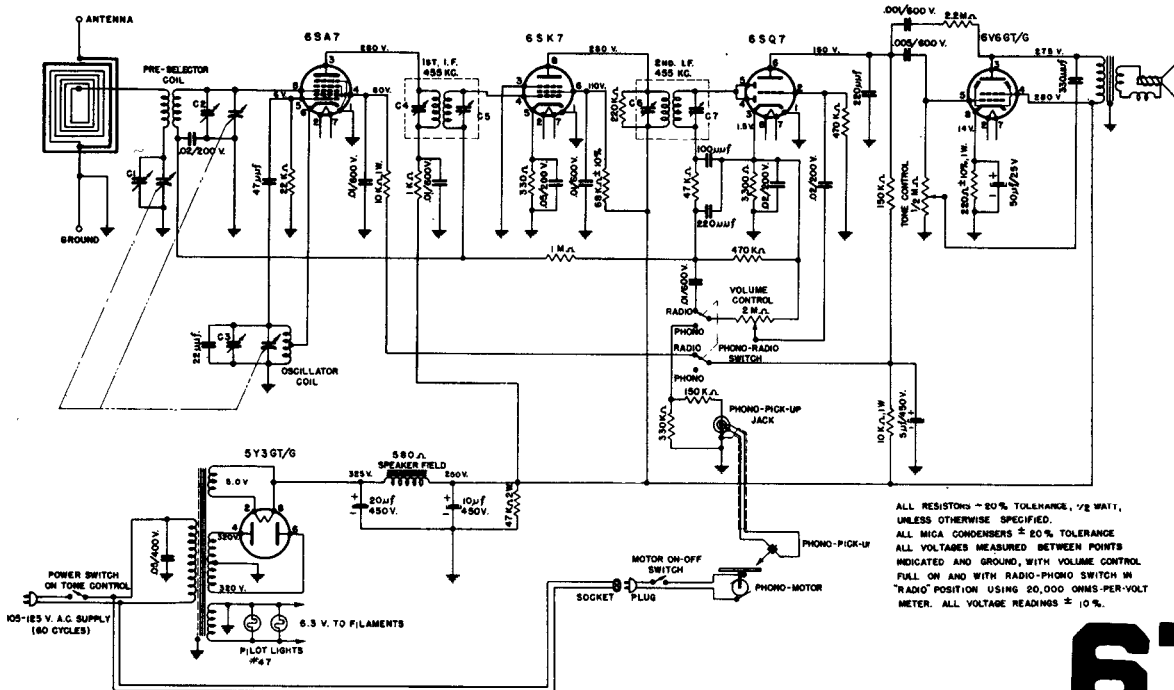


ALL RESISTORS - 20% TOLERANCE, 1/2 WATT, UNLESS OTHERWISE SPECIFIED.
ALL MICA CONDENSERS ± 20% TOLERANCE
ALL VOLTAGES MEASURED BETWEEN POINTS INDICATED AND GROUND, WITH VOLUME CONTROL FULL ON AND WITH RADIO-PHONO SWITCH IN "RADIO" POSITION USING 20,000 OHMS-PER-VOLT METER. ALL VOLTAGE READINGS ± 10%.

67

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

Olympic Radio & Television
Hamilton Radio Corp.


Models 6-608-110 & 6-608-220

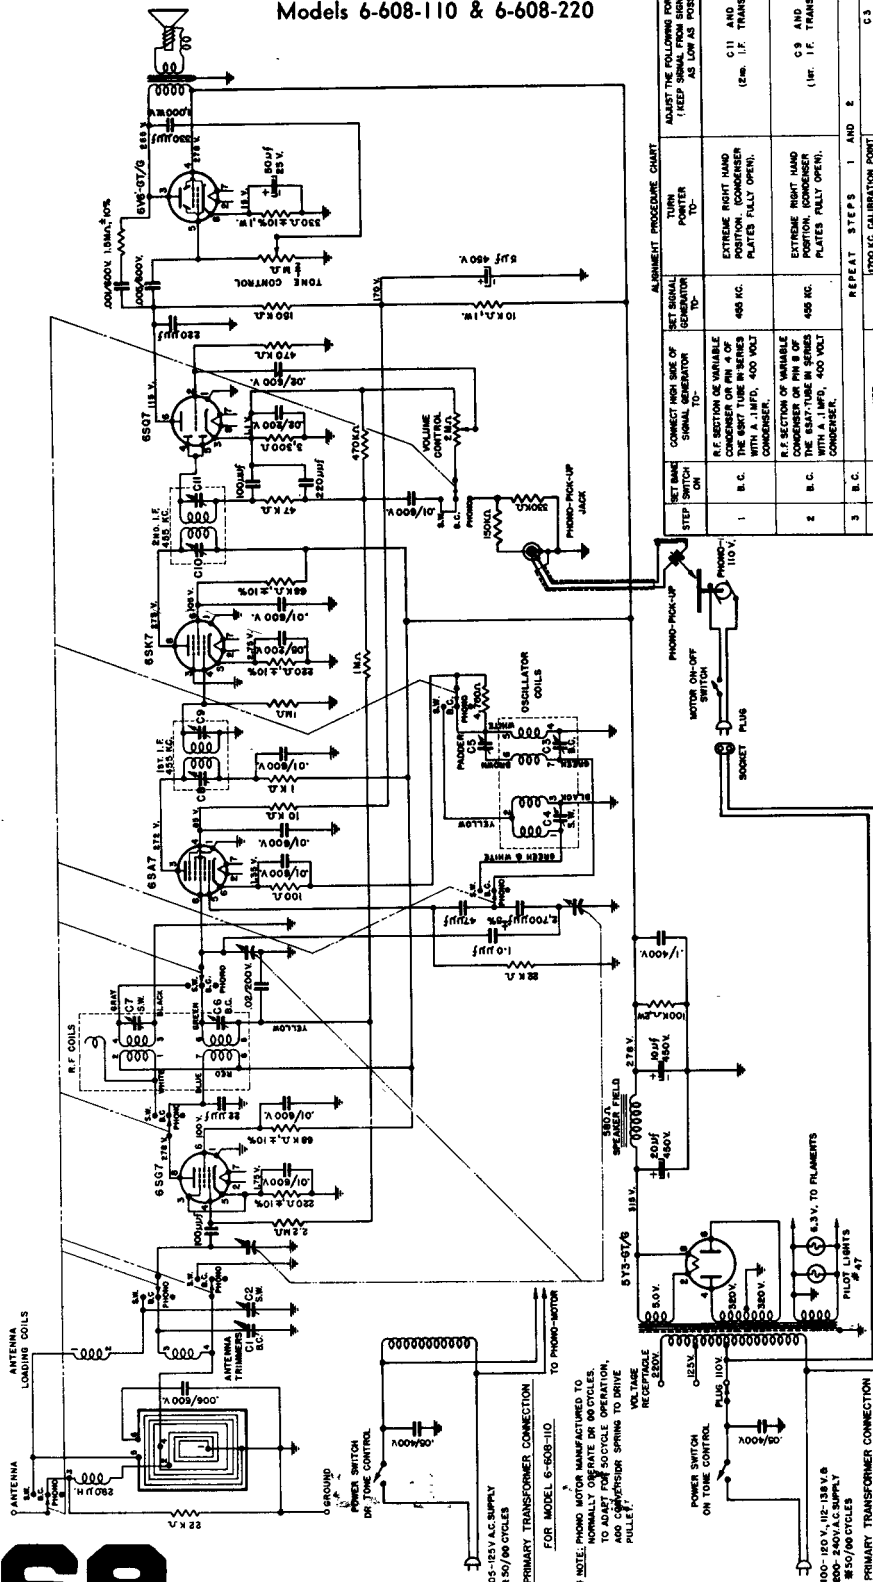


68

SET BIAS STEP	CONNECT HIGH SIDE OF GENERATOR SIGNAL TO:	SET SIGNAL GENERATOR TO:	TUNE POWER TO:	ALIGNMENT PROCEDURE CHART
1	B.C. (R.F. SECTION OF VARIABLE CONDENSER IN SERIES WITH A .1 MFD. 400 VOLT CONDENSER)	495 KC.	EXTREME RIGHT HAND POSITION (CONDENSER PLATES FULLY OPEN)	C11 AND C10 (2nd. I.F. TRANSFORMER)
2	B.C. (R.F. SECTION OF VARIABLE CONDENSER IN SERIES WITH A .1 MFD. 400 VOLT CONDENSER)	495 KC.	EXTREME RIGHT HAND POSITION (CONDENSER PLATES FULLY OPEN)	C9 AND C8 (1st. I.F. TRANSFORMER)
3	B.C.	REPEAT STEPS 1 AND 2		
4	B.C. (CONNECT BOTH SIDES OF SIGNAL GENERATOR TO INDUCTION LOOP)	1700 KC. (1700 KC. CALIBRATION POINT ON DIFFUSER PLATE)		C3 (OSCILLATOR TRIMMER)
5	B.C.	1400 KC. (1400 KC. CALIBRATION POINT ON DIFFUSER PLATE)		C8 AND C1 (R.F. AND ANTENNA TRIMMERS)
6	B.C.	600 KC. (RESONANCE APPROXIMATELY ON DIFFUSER PLATE)		C5 (PADDER)
7	B.C.	REPEAT STEPS 4, 5 AND 6		
8	S.W.	18 MC. CALIBRATION POINT ON DIFFUSER PLATE		C4 (OSCILLATOR TRIMMER) SECOND C1 (R.F. TRIMMER)
9	S.W.	9 MC. RESONANCE		C6 (ANTENNA TRIMMER)
10	S.W.	REPEAT STEPS 8 AND 9		CHEK THAT POINTER (AT RESONANCE) COINCIDES WITH 9 MC. CALIBRATION POINT IF NOT REPEAT STEP 8.

NOTE: In order to adjust the short wave oscillator trimmer accurately to the fundamental frequency and not to image signal, turn the trimmer first to the maximum capacity position (fully tight). Then, position loosen the trimmer through one peak indication of the output meter until a second peak is obtained. Adjust for maximum output on this second peak.

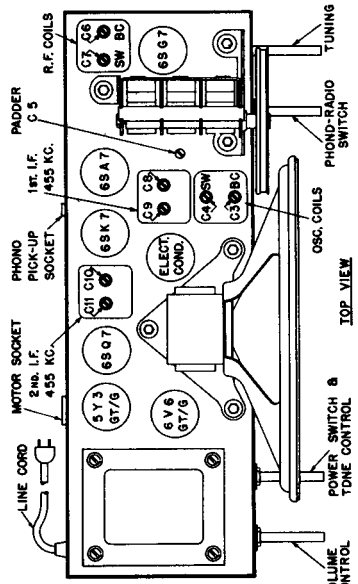

- NOTES:
1. RESISTORS ± 20% TOLERANCE, 1/2 WATT, UNLESS OTHERWISE SPECIFIED.
 2. ALL MICA CONDENSERS ± 20% TOLERANCE, UNLESS OTHERWISE SPECIFIED.
 3. BAND SELECTOR SWITCH SHOWN IN BROADCAST POSITION. ALL VOLTAGES MEASURED BETWEEN POINTS INDICATED AND GROUND, WITH VOLTMETER CORRECTLY ZEROED AND METER SET WITH "C" POSITION, USING 50,000 OHMS-PER-VOLT RANGE. ALL VOLTAGE READINGS ± 10%, MEASURED WITH AN INPUT VOLTAGE OF 117 V., 60 CYCLES, A.C.
 4. TERMINAL NUMBERS ON ANTENNA LOOP CORRESPOND WITH TERMINAL LUGS ON LOOP ON BACK OF CHASSIS.

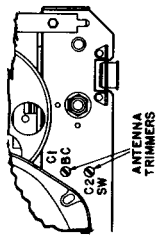

100-120V. 117-128V. & 200-240V. A.C. SUPPLY #50/60 CYCLES
PRIMARY TRANSFORMER CONNECTION SHOWN FOR MODEL 6-608-220

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS



OLYMPIC RADIO

Hamilton Radio Corp.

Model 7-526

ALIGNMENT PROCEDURE CHART

STEP	CONNECT HIGH SIDE OF SIGNAL GENERATOR TO-	SET SIGNAL GENERATOR TO-	SET POINTER TO-	ADJUST THE FOLLOWING FOR MAXIMUM OUTPUT. (KEEP SIGNAL FROM SIGNAL GENERATOR AS LOW AS POSSIBLE.)
1	R.F. SECTION OF VARIABLE CONDENSER IN SERIES WITH .1 MFD. COND.	455 KC.	EXTREME RIGHT HAND POSITION (CONDENSER PLATES FULLY OPEN)	C8, C7, C6, C5 AND REPEAT IN SAME ORDER (1ST. AND 2ND. I.F. TRANSFORMERS.)
2	USE RADIATED SIGNAL	1500 KC.	1500 KC. (150 ON DIAL)	C2, C3, C1 (OSCILLATOR, R.F. AND ANTENNA TRIMMERS)
3	(CONNECT BOTH SIDES OF SIGNAL GENERATOR TO RADIATION LOOP).	600 KC.	600 KC. (APPROX. 60 ON DIAL)	C4 (PADDER) ROCK DIAL FOR MAXIMUM SIGNAL
4				REPEAT STEPS 2 AND 3

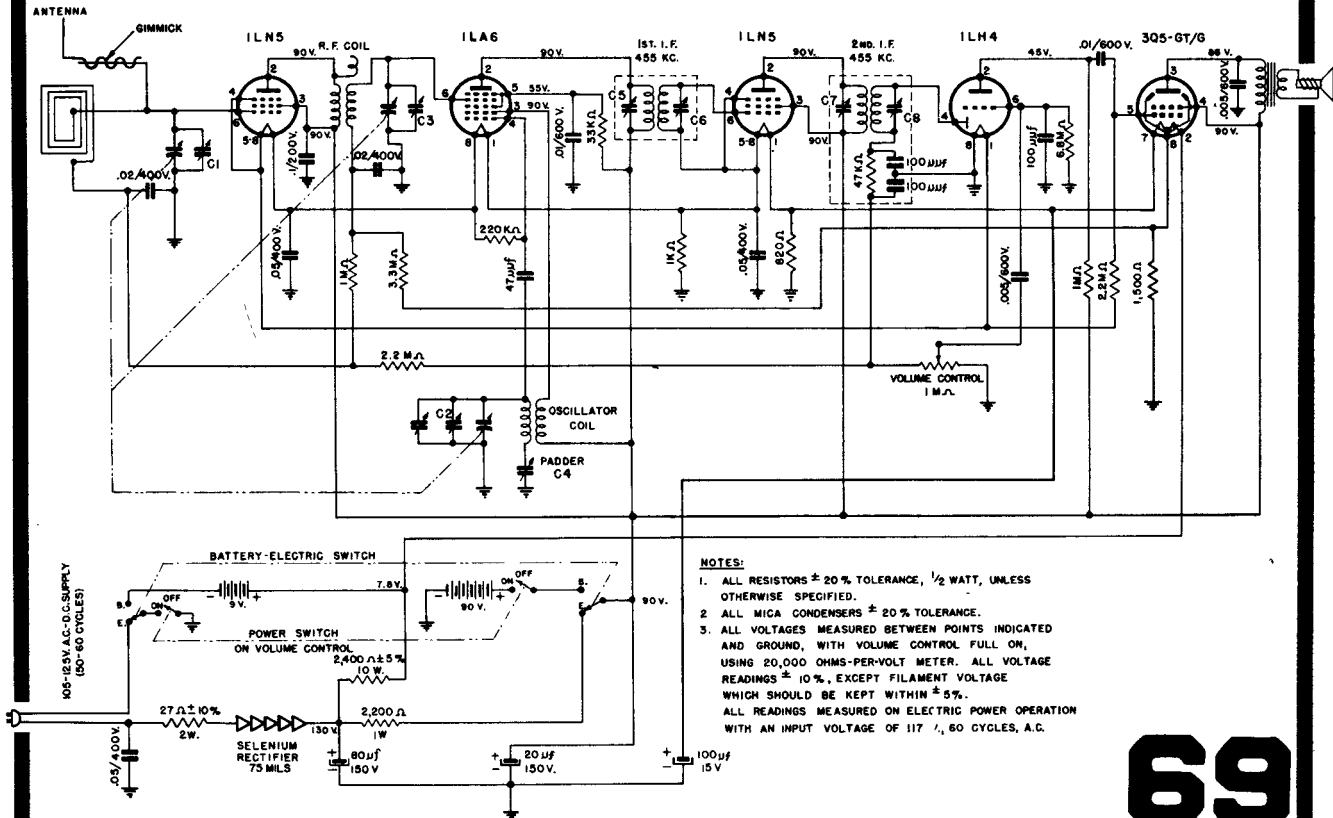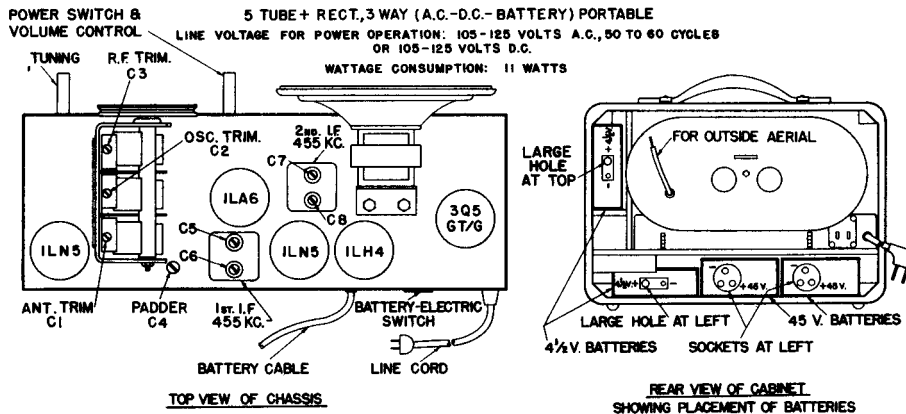

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

Hoffman


RADIO CORP.

MODEL A300
CHASSIS 100
CHASSIS 100S

Hoffman Model A300 with Chassis number 100S is electrically identical with Chassis number 100 except for the following:

1. Five-inch P.M. speaker, part number 9003, has been substituted for 4 x 6 inch oval dynamic speaker, part number 9000.
2. A 1500-ohm resistor, part number 4701, has been connected in the filter circuit in place of the 1500-ohm speaker field.

These changes have been incorporated in the schematic diagram shown below.

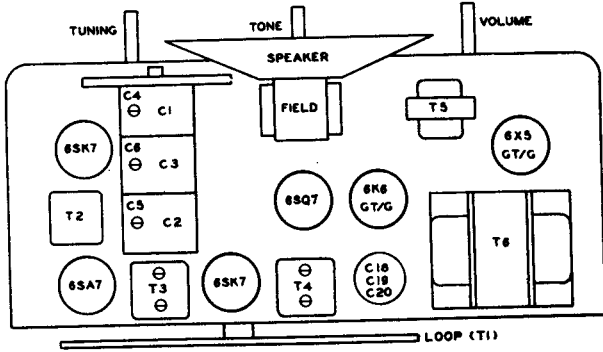


SYMBOL	DESCRIPTION	HOFFMAN NO
C1-C2-C3	Three-Section Variable (388-388-180 Mmf.)	4400
C4, C5, C6	Trimmers; Part of Variable Condenser	
C7, C8	.05 Mfd, 200 Volt, Tubular Paper	4100
C9, C12, C13, C15	100 Mmf ± 20%, Mica	4000
C10, C11	.05 Mfd, 400 Volt, Tubular Paper	4101
C14, C16	.005 Mfd, 600 Volt, Tubular Paper	4102
C17	.01 Mfd, 600 Volt, Tubular Paper	4103
C18-C19-C20	Dry Electrolytic Condenser (20-20-20 Mfd 450-450-25 Volt)	4200
C21	.001 Mfd, 600 Volt, Tubular Paper	4104
C22	.01 Mfd, 600 Volt, Tubular Paper (Metal Can)	4105
L1	Oscillator Coil	5200
L5	5" PM Loudspeaker	9003
R1, R8	.22 Megohm ± 20%, ½ Watt	4500
R2	22,000 Ohm ± 20%, ½ Watt	4501
R3	2.2 Megohm ± 20%, ½ Watt	4502
R4	10,000 Ohm ± 10%, 2 Watt	4503
R5	47,000 Ohm ± 20%, ½ Watt	4504
R6	.5 Megohm Potentiometer (Volume)	4800
R7	10 Megohm ± 20%, ½ Watt	4505
R9	.47 Megohm ± 20%, ½ Watt	4506
R10	560 Ohm ± 10%, ½ Watt	4507
R11	.25 Megohm Potentiometer With Switch (Tone)	4801
R12	47 Ohm ± 20%, ½ Watt	4508
R13	330 Ohm ± 20%, ½ Watt	4509
R14	1500 Ohm ± 10%, 10 Watt, W.W.	4702
S1	On-Off Switch (On Tone Control)	
T1	Antenna Loop	5201
T2	R.F. Coil (Shielded)	5202
T3	Input I.F. Transformer (455 K.C.)	5203
T4	Output I.F. Transformer (455 K.C.)	5204

PIN NO.	1	2	3	4	5	6	7	8
6SK7 (R.F.)	0	0	0	-.5	0	+85	6.1A.C.	+227
6SA7	0	0	+227	+85	-7	0	6.1A.C.	-7
6SK7 (I.F.)	0	0	0	-.7	0	+85	6.1A.C.	+227
6SQ7	0	-.5	0	-.25	0	+95	6.1A.C.	0
6K6GT/G	0	0	+217	+227	0	+325 *	6.1A.C.	+15
6X5GT/G	0	6.1A.C.	290A.C.	-	290A.C.	-	0	+325

D.C. voltages measured with 20,000 ohm/volt meter.
A.C. voltages measured with 1,000 ohm/volt meter.
All voltages measured with reference to chassis.
Line voltage 117.5.

* Means tie point.

NOTE: The above readings are obtained with no signal input to the receiver.

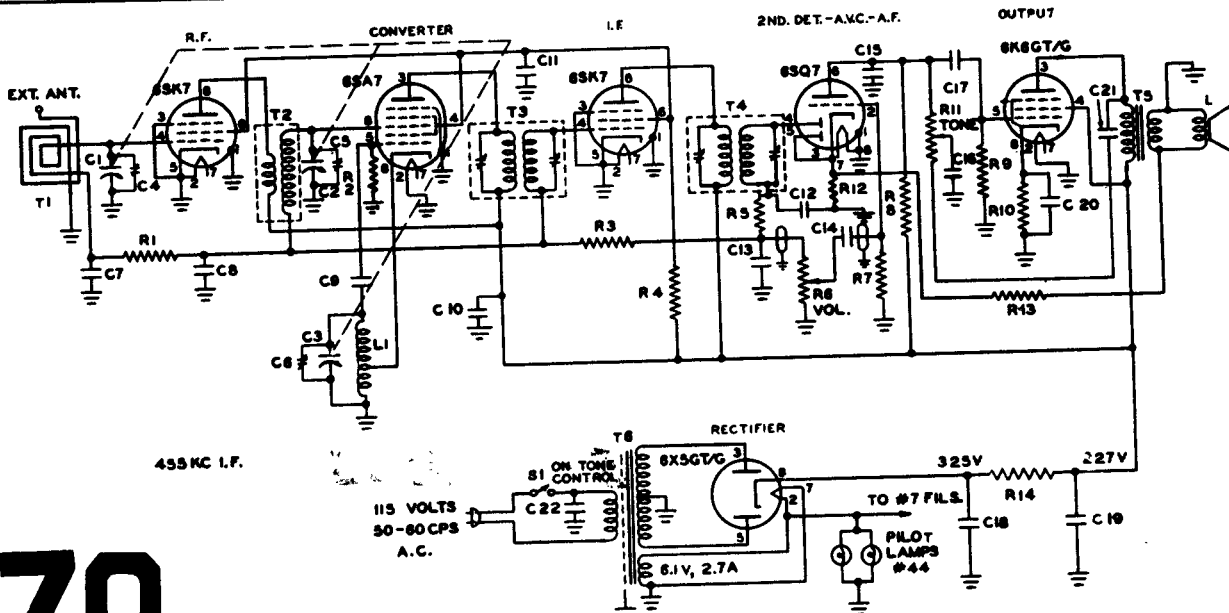

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

Hoffman

RADIO CORP.

MODEL A700

CHASSIS 110S

I. F. Alignment

1. Connect output meter across speaker voice coil; set meter on 1-volt scale.
2. Connect output of signal generator to trimmer C3 (blue wire on trimmer located at rear of chassis). The ground side of the signal generator should be connected to B through a .1 Mfd. condenser. Set signal generator on 455 Kc (modulated).
3. Adjust I.F. trimmers (first T2 and then T1) for maximum reading on output meter.
NOTE: Keep signal level low, just enough to keep the maximum reading on the output meter at 0.4 volt or less. tuning gang should be set with plates all the way out; volume control full on.
4. Replace bottom cover plate.

R. F. Alignment

1. Leave tuning gang with plates all the way out.
2. Set signal generator on 1650 Kc (modulated) and feed generator output into a loop of wire approximately 6" in diameter. Place the loop about one foot away and parallel to the receiver loop antenna.
3. Tune in signal by adjusting oscillator trimmer C7.
4. Adjust output of signal generator to obtain deflection of .4 volt or less on output meter.
5. Adjust oscillator trimmer for maximum output.
6. Set signal generator to 1400 Kc and tune in signal with tuning condenser.
7. Adjust loop antenna trimmer C1 and R. F. Coil assembly for maximum output. The R. F. coil adjustment is made by loosening the coil mounting clamp and sliding the coil up or down as required.
8. Set signal generator and tuning gang to 600 Kc and adjust R. F. trimmer C3 for maximum output.
9. Go back to 1400 Kc to check tracking and readjust at 1400 Kc and 600 Kc as required.

SYMBOL	DESCRIPTION	Hoffman No.
C1-C7	Trimners—Part of Variable Condenser	
C2-C6	Two Section Variable (388-180 Mmf.)	4401
C3	60-260 Mmf. Mica Trimmer	4306
C4-C9-C11	.0001 Mfd. Mica	4000
C5	47 Mfd. Mica	4009
C8-C26	.01 Mfd. 400 Volt Tubular Paper	4112
C10-C12-C13-C14	.005 Mfd. 600 Volt Tubular Paper	4102
C15-C16	100 Mfd. 25 Volt Dry Electrolytic	4204
C17-C19-C20-C21	.05 Mfd. 200 Volt Tubular Paper	4100
C18-C25	Dry Electrolytic Condenser (30-50 Mfd. 150-150 Volt)	4201
C22-C23	.2 Mfd. 200 Volt Tubular Paper	4108
C24	.05 Mfd. 400 Volt Tubular Paper	4101
L1	Antenna Loop	55208
L2	Antenna Loop Compensator	5250
L3	R.F. Coil Permeability Tuned	5245
L5	5 1/4" P.M. Speaker	9019
R1-R14	3.3 Megohm, 1/2 Watt	4535
R2-R7-R9-R16	2.2 Megohm, 1/2 Watt	4502
R3	680 Ohms, 1/2 Watt	4514
R4	.47 Megohm, 1/2 Watt	4506
R5-R15	1 Megohm, 1/2 Watt	4513
R6-R10	.1 Megohm, 1/2 Watt	4511
R8	3900 Ohms ± 10%, 1/2 Watt	4527
R11	1 Megohm Potentiometer with D.P.S.T. Switch (Volume)	4808
R12	10 Megohm, 1/2 Watt	4505
R13*	820 Ohm ± 10%, 1/2 Watt	4533
R17	1500 Ohm, 1/2 Watt	4534
R18-R22	47 Ohm, 2 Watt	4532
R19	1000 Ohm, 1 Watt	4522
R20	1500 Ohm, 6 1/2 Watt ± 5% Wirewound	4701
R21	470 Ohm, 1 Watt ± 10%	4531
S1	AC/DC Battery Switch Plug Operated	6010
S2	On-Off Switch (on Volume Control)	
T1	Input I.F. Transformer (455 K.C.)	5242
T2	Output I.F. Transformer (455 K.C.)	5243
T3	Output Audio Transformer	5104
T4	Oscillator Coil	5244
Rect.	Selenium Rectifier	9517


* Semo sets use 1000 ohms ± 20%, 1/2 Watt, Part No. 4542.

The following table lists the normal operating voltages to be expected at the various socket terminals.


PIN NO.	1	2	3	4	5	6	7	8
1T4 (RF)	2.6	84	65		2.6		3.9	
1R5	1.3	84	64	-5.0*	1.3	3*	2.6	
1T4 (RF)	3.9	84	65	1.2*	3.9	1.5*	5.2	
1S5	1.3	0	.5*	20*	1	-5*	0	
3Q4	5.2	84	-1.3*	84	6.5	84	7.8	

NOTE: All voltages are measured with reference to B- (black wires on volume control switch) and no signal input to receiver.

* These readings must be taken with a V. T. V. M.

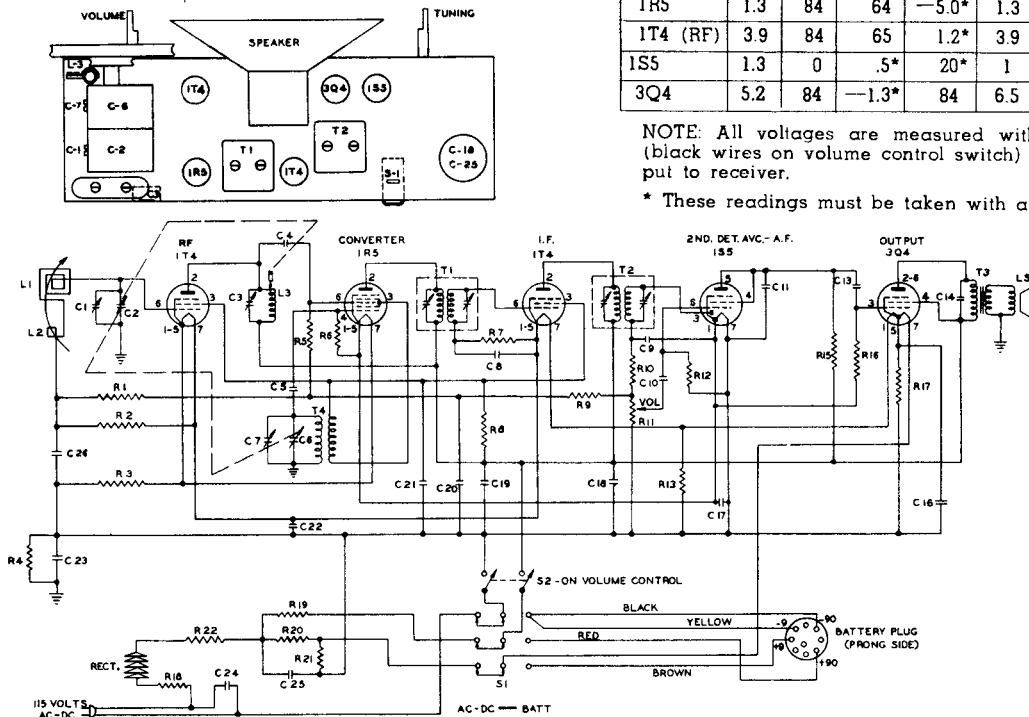

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

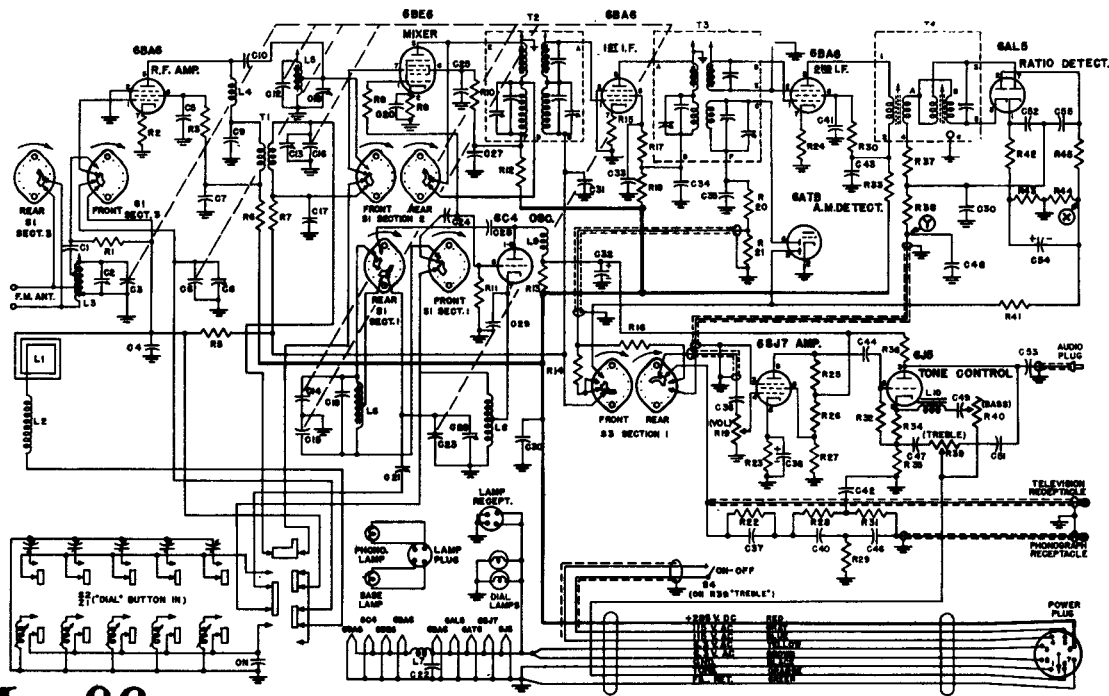

Tuner Schematic Diagram

Hoffman

RADIO CORP.


MODEL B502 CHASSIS 113

TUNING RANGES:

Broadcast Band 535 Kc to 1650 Kc
 FM Band 88 Mc to 108 Mc

INTERMEDIATE FREQUENCIES:

Broadcast Band 455 Kc
 FM Band 10.7 Mc

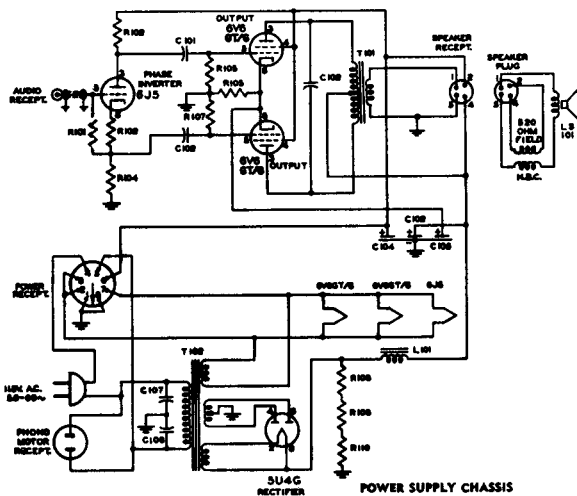

SYMBOL	DESCRIPTION	HOFFMAN NO.
C101, C102	.05 Mfd. 400 Volt Tub. Paper	4101
C103	470 Mmf. ±20% Mica	4003
C104, C105	20/20 Mfd. 450V. 20 Mfd. 25V. Electrolytic	4200
C107, C108	.01 Mfd. 600 Volt, Metal Case	4105
R101	1 Meg. ±20% ½ Watt	4513
R102, R104	47000 Ohm ±10% ½ Watt	4559
R103	2200 Ohm ±20% ½ Watt	4512
R105, R107	22 Meg. ±20% ½ Watt	4500
R106	220 Ohm ±20% 3 Watt W.W.	4706
R108, R109	10,000 Ohm ±10% 2 Watt	4503
L101	Filter Choke	5118
T101	Audio Output Transformer	5108
T102	Power Transformer	5007
LS101	Speaker—12" Electrodynamc	9044

SYMBOL	DESCRIPTION	HOFFMAN NO.
C1, C9, C10, C28, C35, C37	100 Mmf. ±10% Ceramic	4012
C2, C18	1 - 8 Mmf. Trimmer	4315
C3, C8, C12, C14, C15, C16, C23	3 Sect. Variable with Split Stator	4408
C4, C17, C22, C31	.05 Mfd. 200 Volt Tub. Paper	4100
C5, C25	470 Mmf. ±20% Mica	4003
C7, C30, C34, C44, C51, C53	.01 Mfd. 400 Volt Tub. Paper	4112
C8, C13, C26	1.8 - 30 Mmf. Trimmer	4313
C11	500 Mmf. ±5% Silver Mica	4004
C19	50 Mmf. ±2% Ceramic	4023
C20	220 Mmf. ±20% Ceramic	4028
C21	110-560 Mmf. Trimmer	4301
C24	22 Mmf. ±10% Ceramic	4021
C27	5000 Mmf. (Min.) Ceramic	4029
C29	50 Mmf. ±20% Ceramic	4031
C32	20 Mfd. 450 Volt Electrolytic	4207
C33, C41	.001 Mfd. 600 Volt Tub. Paper	4104
C36	.02 Mfd. 400 Volt Tub. Paper	4106
C38	25 Mfd. 25 Volt Electrolytic	4205
C40, C46, C50, C52, C55	330 Mmf. ±5% Mica	4010
C42	650 Mmf. ±5% Mica	4011
C47	.005 Mfd. 600 Volt Tub. Paper	4102
C48	.002 Mfd. 600 Volt Tub. Paper	4118
C49	.5 Mfd. 200 Volt Tub. Paper	4110
C54	5 Mfd. 50 Volt Electrolytic	4209
C43	2300 Mmf. ±5% Mica	4006
R1	.27 Meg. ±20% ½ Watt	4545
R2, R9, R15, R24	58 Ohm ±10% ½ Watt	4561
R3, R10, R17, R30	33,000 Ohm ±20% 1 Watt	4558
R5, R7	.1 Meg. ±20% ½ Watt	4511
R6, R12, R18, R33	1500 Ohm ±20% ½ Watt	4534
R8	22 Ohm ±20% ½ Watt	4560
R11, R35, R36	22,000 Ohm ±20% ½ Watt	4501
R13	4700 Ohm ±20% 2 Watt	4551
R14	2.2 Meg. ±20% ½ Watt	4502
R16, R32	1 Meg. ±20% ½ Watt	4513
R19	5 Meg. Pot. (Volume)	4804
R20, R38	47,000 Ohm ±20% ½ Watt	4506
R21	.68 Meg. ±20% ½ Watt	4555
R22	4.7 Meg. ±20% ½ Watt	4544
R23, R34	2200 Ohm ±20% ½ Watt	4512
R25	.22 Meg. ±20% ½ Watt	4500
R26	.12 Meg. ±10% ½ Watt	4548
R27	15,000 Ohm ±20% ½ Watt	4521
R28, R31	47,000 Ohm ±10% ½ Watt	4559
R29	22,000 Ohm ±5% ½ Watt	4538
R37	120 Ohm ±10% ½ Watt	4546
R39	.25 Meg. Pot. With Switch (Trebble)	4805
R40	50,000 Ohm Pot. (Bass)	4806
R41	.47 Meg. ±20% ½ Watt	4506
R42, R45	390 Ohm ±10% ½ Watt	4549
R43, R44	6800 Ohm ±10% ½ Watt	4557
L1	Loop Antenna	52210
L2	Antenna Coil—Broadcast	5285
L3	Coil—F.M. Ant.	5253
L4, L9	Filter—R.F.	5254
L5	Coil—F.M. R.F.	5252
L6	Coil—F.M. Osc.	5251
L7	Coil—Fil. R.F.	5266
L8	Coil—B.C. Osc.	5263



MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

Hoffman

RADIO CORP.

MODEL B400

CHASSIS 118

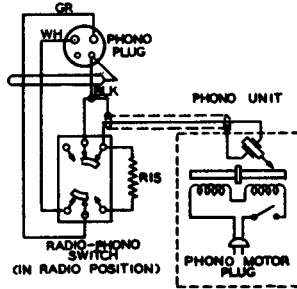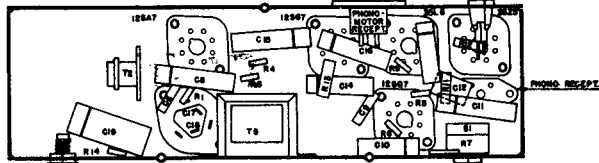


SYMBOL	DESCRIPTION	HOFFMAN No.
C1, C2	Two Section Variable (388-180 Mmf.)	4401
C3, C4	Trimmer: Part of Variable Cond.	
C6	100 Mmf. ±20% Mica	4000
C7, C10, C13	.005 Mfd. 600 Volt Tubular Paper	4102
C8, C11, C15	.05 Mfd. 200 Volt Tubular Paper	4100
C9, C12	270 Mmf. ±20% Mica	4001
C14	.02 Mfd. 400 Volt Tubular Paper	4106
C16	.05 Mfd. 400 Volt Tubular Paper	4101
C17, C18	87y Electrolytic (50 30 Mfd. 150 V.)	4201
C19	.2 Mfd. 200 Volt Tubular Paper	4108
C20	.001 Mfd. 600 Volt Tubular Paper	4104
R1	22,000 Ohm ±20% 1/2 Watt	4501
R4	2.2 Megohm ±20% 1/2 Watt	4502
R5	47,000 Ohm ±20% 1/2 Watt	4504
R6, R8	10 Megohm ±20% 1/2 Watt	4505
R7	.5 Megohm Pot. with Switch (Vol.)	4002
R9	.22 Megohm ±20% 1/2 Watt	4500
R10, R14, R15	.47 Megohm ±20% 1/2 Watt	4506
R11	150 Ohm ±20% 1/2 Watt	4510
R12	47 Ohm ±20% 1/2 Watt	4508
R13	1500 Ohm ±20% 1 Watt	4552
S2	Phono-Radio-Tone Switch	6021
L5	PM Loudspeaker	9023
S1	On-Off Switch (see Vol. Control)	
T1	Antenna Loop	5255
T2	Oscillator	5208
T3	Input I.F. Transformer (455Kc.)	5205
T4	Output I.F. Transformer (455Kc.)	5206
T5	Audio Output Transformer	5117

I. F. ALIGNMENT:

1. Connect output meter across speaker voice coil; set meter on 2.5 volt scale.
2. Connect output of signal generator directly to antenna post on loop; connect ground side of generator to chassis of receiver through .1 Mfd. condenser. Set signal generator on 455 Kc (modulated).
3. Adjust I.F. trimmers (first T4 and then T3) for maximum reading on output meter.

R.F. ALIGNMENT:


1. Set tuning condenser with plates completely out.
2. Set signal generator at 1650 Kc (modulated) and feed its output into a loop of wire about 6" in diameter. Place this loop about one foot away from and parallel to the receiver loop antenna.
3. Tune in signal by adjusting oscillator trimmer (C4).
4. Adjust output of signal generator to obtain deflection on lower half of meter scale.
5. Adjust oscillator trimmer (C4) for maximum output.
6. Set signal generator at 1400 Kc and tune in signal with tuning condenser.
7. Adjust antenna trimmer (C3) while rocking gang condenser for maximum reading on output meter. Feed only enough signal from generator to keep maximum reading on lower half of meter scale.

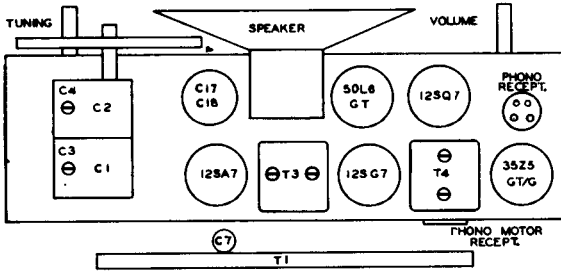

PIN NO.	1	2	3	4	5	6	7	8
12SA7	0	24 A.C.	+85	+92	-5.5	0	11.5 A.C.	-4
12SG7	0	22 A.C.	0	-4	0	+92	36 A.C.	+86
12SG7	0	-8	0	0	-1.0	+60	0	9 A.C.
50L6	0	36 A.C.	+101	+93	+2	0	87 A.C.	+7.5
35Z5	0	117 A.C.	114 A.C.	+112	114 A.C.	0	87 A.C.	+116

D.C. voltages measured with 20,000 ohm/volt meter.
A.C. voltages measured with 1,000 ohm/volt meter.
All voltages measured with reference to B-.

NOTE: The above readings are obtained with no signal input to the receiver, radio-phono switch in the RADIO position, and volume control full on.

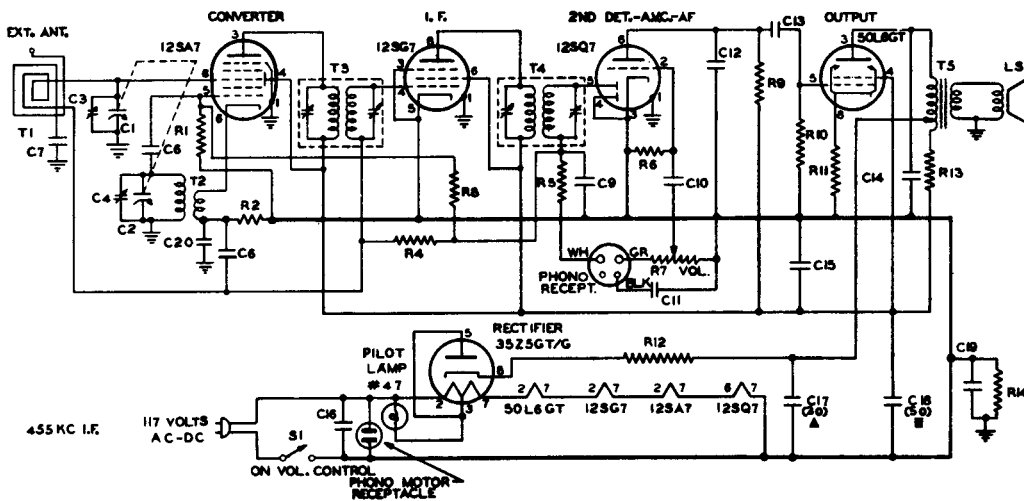

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

Hoffman

RADIO CORP.

MODELS A202 & A309

CHASSIS 119



I.F. ALIGNMENT:

1. Connect output meter across speaker voice coil; set meter on 2.5 volt scale.
2. Connect output of signal generator directly to 12BE6 control grid; connect ground side of generator to chassis of receiver through .25 Mfd. condenser. Set signal generator on 455 Kc (modulated).
3. Adjust I.F. slugs (first T4 and then T3) for maximum reading on output meter.
Note: Keep signal level low, just enough to keep maximum reading on lower half of meter scale. Tuning condenser plates should be all the way out; volume control should be on full. After adjustment, put a drop of wax on each I.F. tuning slug to hold it in place.

R.F. ALIGNMENT:

1. Set receiver tuning control with slugs all the way in.
2. Set signal generator on 540 Kc (modulated) and connect generator output to antenna post on receiver. The ground side of the generator should be connected to receiver B through a .25 Mfd. condenser.
3. Tune in signal by adjusting oscillator trimmer C5.
4. Adjust output of signal generator to obtain deflection on lower half of meter scale.
5. Adjust oscillator trimmer for maximum output.
6. Set signal generator on 1650 Kc and check signal with tuning condenser plates all the way out.
7. Set signal generator on 1470 Kc.
8. Tune in signal on receiver and adjust rf trimmer C2 for maximum reading on output meter. Feed only enough signal from the generator to keep maximum reading on lower half of meter scale.
9. Recheck at 600 Kc, 1000 Kc and 1410 Kc for tracking and readjust as required.

SYMBOL	DESCRIPTION	HOFFMAN No.
C1	.005 Mfd. 600 Volt Tubular Paper	4102
C2, C5	Dual Padder 280 Mmf. Por Section	4307
C3, C6	100 Mmf. ± 20% Mica	4000
C4	.05 Mfd. 400 Volt Tubular Paper	4101
C7, C8	100 Mmf. ± 10% Ceramic	4012
C9	.05 Mfd. 200 Volt Tubular Paper	4100
C10, C11	100 Mmf. ± 10% Ceramic	4012
C12	270 Mmf. ± 20% Mica	4001
C13, C15	Dry Electrolytic (30-50 Mfd./150 V)	4201
C14	.2 Mfd. 200 Volt Paper Tubular	4108
C16	.005 Mfd. 600 Volt Paper Tubular	4102
C17	270 Mmf. ± 20% Mica	4001
C18	.005 Mfd. 600 Volt Tubular Paper	4102
C19	.02 Mfd. 400 Volt Tubular Paper	4106
LS	5" PM Loudspeaker	9003
R1	2200 Ohm ± 20% ½ Watt	4512
R2, R6	47,000 Ohm ± 20% ½ Watt	4504
R3	22,000 Ohm ± 20% ½ Watt	4501
R4	47 Ohm ± 20% ½ Watt	4508
R5	2.2 Megohm ± 20% ½ Watt	4502
R7	10 Megohm ± 20% ½ Watt	4505
R8	.5 Megohm Pot. with Switch (Volume)	4802
R9	500 Ohm ± 10% 5 Watt	4700
R10, R12	.47 Megohm ± 20% ½ Watt	4506
R11	.22 Megohm ± 20% ½ Watt	4500
R13	150 Ohm ± 20% ½ Watt	4510

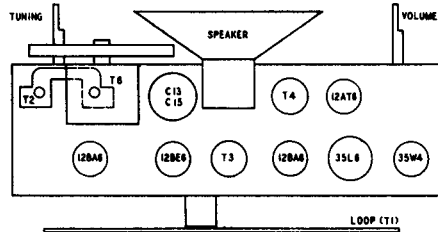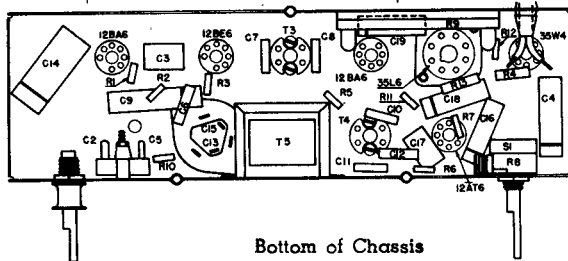


PIN NO.	1	2	3	4	5	6	7	8
12BA6(R.F.)	— .45	0.	25. A.C.	37.5 A.C.	+65.	+80.	0.	
12BE6	4.6*	0.	12.5 A.C.	25. A.C.	+80.	+80.	0.	
12BA6 (I.F.)	— .45	0.	37.5 A.C.	50. A.C.	+80.	+80.	0.	
12AT6	—1.5*	0.	0.	12.5 A.C.	0.	—15.	+37.5	
35L6	0.	85 A.C.	+75 D.C.	+80. D.C.	0.	0.	50. A.C.	+4.6
35W4	115 A.C.	0.	85. A.C.	115. A.C.	110. A.C.	110. A.C.	+110. D.C.	


D.C. voltages measured with 1000 ohm/volt meter
A.C. voltages measured with 1000 ohm/volt meter
All voltages measured with reference to B-

* These readings taken with V. T.V. M.



NOTE: The above readings are obtained with no signal input to receiver.

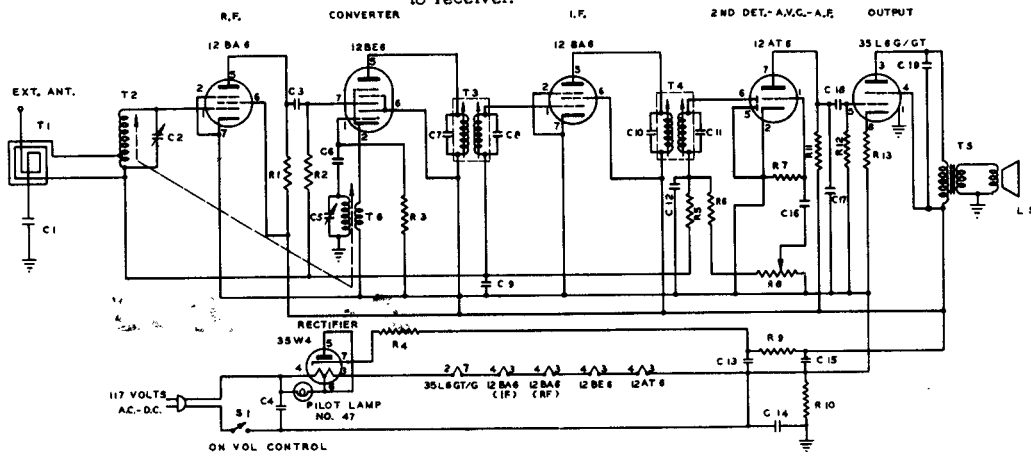

1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

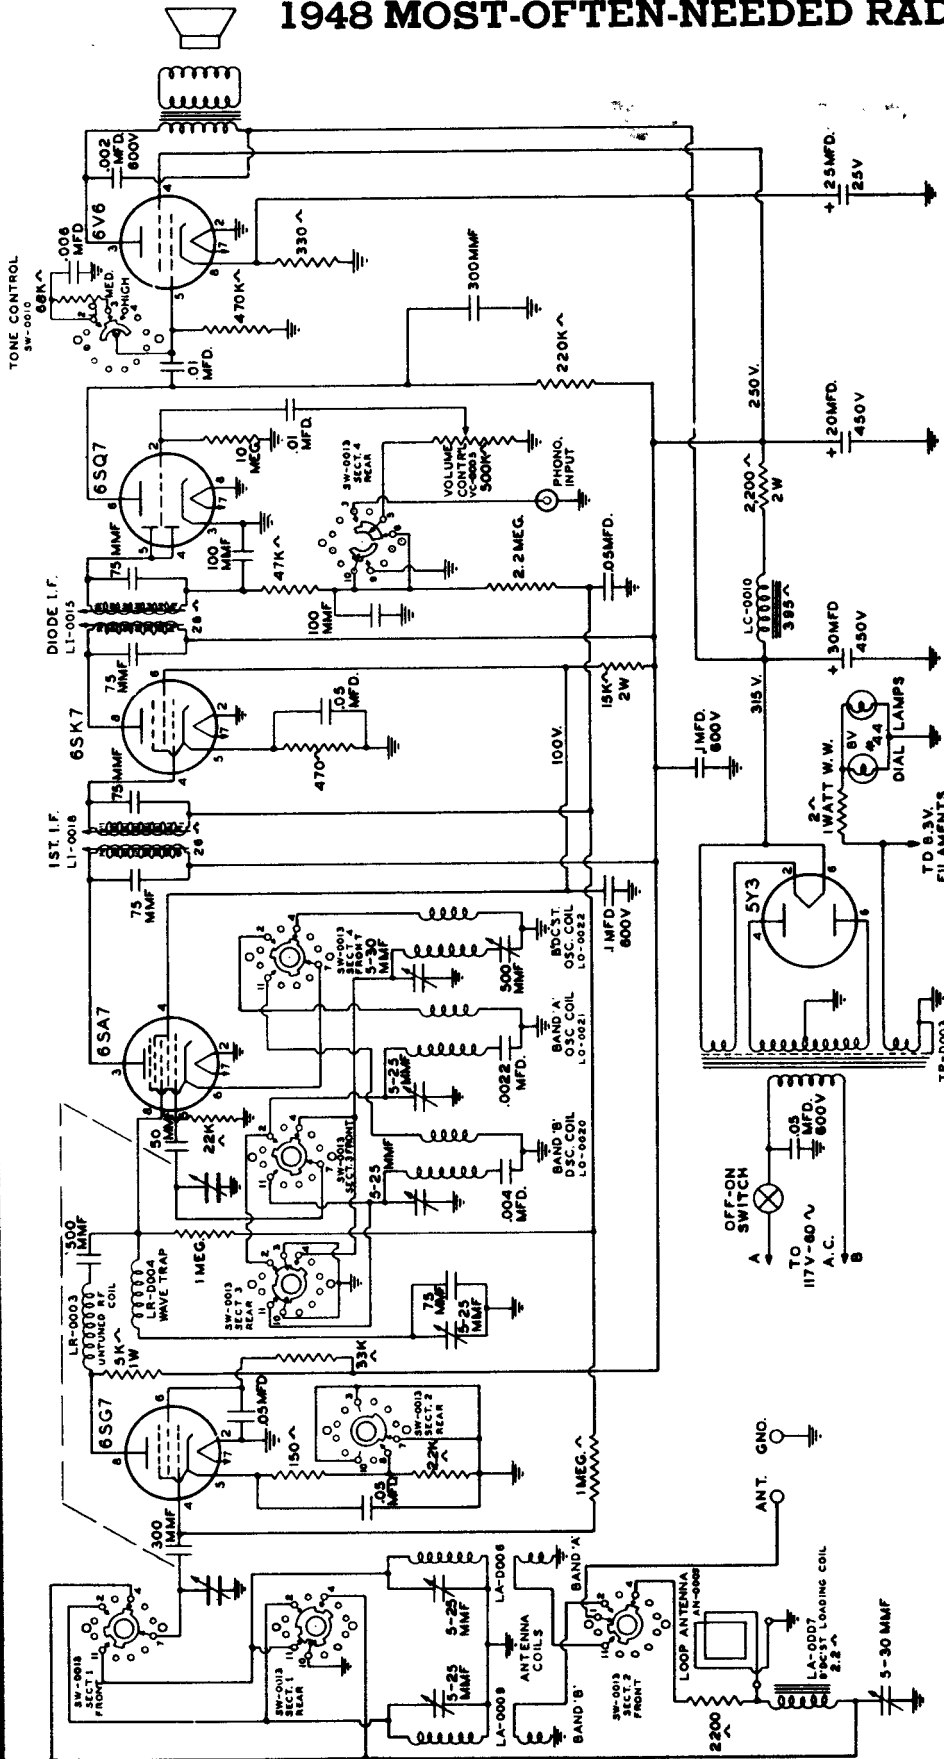

- NOTES—**
1. BAND SWITCH, SW-0013, SHOWN IN BROADCAST POSITION.
 2. FRONT AND REAR SECTIONS OF SWITCH SHOWN VIEWED FROM KNOB END.
 3. TONE CONTROL SWITCH, SW-0012, SHOWN VIEWED FROM KNOB END.
 4. BAND SWITCH POSITIONS—
 1. PHONOGRAPH.
 2. RADIO SHORT WAVE BAND 'A'.
 3. RADIO SHORT WAVE BAND 'B'.
 4. RADIO SHORT WAVE BAND 'B'.
 5. RADIO SHORT WAVE BAND 'A'.
 5. PRIMARY LEADS 'A' AND 'B' CONNECT TO 'A' AND 'B' ON PRIMARY CIRCUIT FOR UNIVERSAL 110-220 VOLT OPERATION.

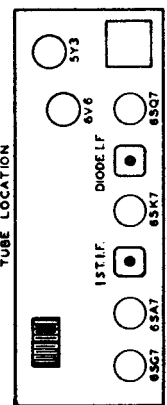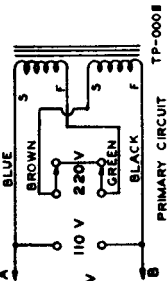

Model 906-S
See Page 76 for Alignment

HOWARD RADIO COMPANY

75

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

Howard Radio Company. Model 906-S. See page 75 for Schematic.

Voltage reading taken from ground with voltage at line set at 117 volts A.C. These readings were taken with a vacuum tube voltmeter of the VoltOhmyst Junior type.


TUBE	FUNCTION	CATH.	*	SC.	*	PLATE	*	B	*
6SG7	R.F	7.2	5 3	200.	6	210.	8		
6SA7	Convertor			-10. 85.	5 4	225.	3		
6SK7	1st. I.F.	3.	5	90.	6	230.	8		
6SQ7	Det. & 1st. Audio.					110.	6		
6V6	Output.	13.	8	230.	4	280.	3		
5Y3	Rectifier							290.	8

Voltage drop across filter choke 10 volts


* Socket Terminal Number.

	DUMMY ANTENNA	SIG. GEN. CONNECTION	GEN. FREQ.	BAND POSITION	DIAL SETTING	ORDER OF TRIMMER ADJUSTMENTS	TRIMMER FUNCTION	SEE NOTE	
1	.05 Mfd.	Grid of 6SA7	455 KC	BC	Off Station	①②③④	I.F. Peak to Maximum	A	
2	.05 Mfd.	Ant.	455 KC	BC	Off Station	⑤	Null	B	
3	400 Ohm. Line	"A" Ant. Post	600 KC	BC	600 KC	⑦	Maximum	C	
4	400 Ohm. Line	"A" Ant. Post	1400 KC	BC	1400 KC	⑥⑧	BC Osc. and R.F.	D	
5	Repeat operations 3 and 4								E
6	400 Ohm. Line	"A" Ant. Post	6 MC	A	6 MC	⑨⑩	Maximum	F	
7	400 Ohm. Line	"A" Ant. Post	20 MC	B	20 MC	⑪⑫	Maximum	G	
8	Accurately set signal generator at one MC and check through both short wave dials, harmonics to be one MC apart.								

- NOTE A. The I.F. adjustments are iron core slug tuning and it should not be necessary to move them very far in either direction from the factory setting, since they are of a very stable nature.
- NOTE B. Important. Connect the signal generator to the antenna screw on the outside of the radio chassis and keep the metal of the chassis between the generator lead and the wave trap coil. Use your signal generator to the desired turned up powerful position and adjust the wave trap trimmer to null.
- NOTE C. Padding condenser adjustment for calibration at low frequency end of broadcast band.
- NOTE D. Set dial at 1400 KC. Adjust oscillator and R.F. trimmer for maximum sensitivity.
- NOTE E. Check broadcast stations across dial for accuracy.
- NOTE F. True Signal at 6. Image at 5.
- NOTE G. True signal at 20. Image at 19.

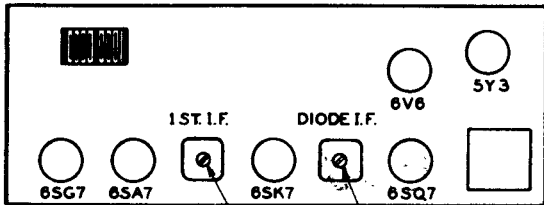

TOP VIEW

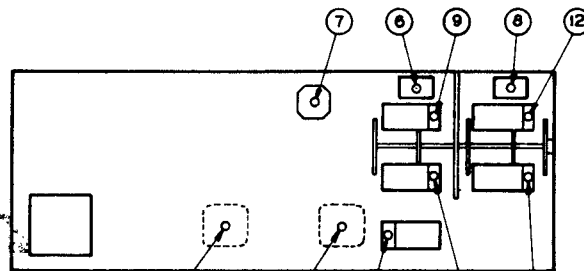

BOTTOM VIEW

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

HOWARD RADIO COMPANY

Model 909-M

Continued on page 78.

	DUMMY ANTENNA	SIG. GEN. CONNECTION	GEN. FREQ.	BAND POSITION	DIAL SETTING	ORDER OF TRIMMER ADJUSTMENTS	TRIMMER FUNCTION	SEE NOTE
1	.05 Mfd.	Grid of 6SA7	455 KC	BC	Low end of BC	1,2,3,4	I.F.	A
2	.05 Mfd.	Pin #4 6SK7	1400 KC	BC	1400 KC	5,6	BC Osc. and R.F.	
3	Note B	Note B	1400 KC	BC	1400 KC	7	Loop	B
4	400 Ohm. Line	Antenna on loop	11.9 MC	SW	11.9 MC	8,9,10	SW	C
5	Accurately set signal generator at one MC and check through short wave dial, harmonics to be one MC apart.							


NOTE A. The I.F. adjustments are iron core slug tuning and it should not be necessary to move them very far in either direction from the factory setting, since they are of a very stable nature.

NOTE B. Inductively couple signal generator to loop by wrapping one or two turns of wire around outside wire of loop and fasten one end to the high side of the signal generator.


NOTE C. In adjusting trimmer #8, be sure the image of the I.F. is at approximately 11.MC.

CAUTION: Do not knife gang unless absolutely necessary, and then with extreme care.

RECOMMENDED DUMMY ANTENNA. Although the values as shown in above table for antenna load may be satisfactory, we urgently recommend the circuit as shown at the right to properly take care of the various frequencies to accomplish the correct alignment.

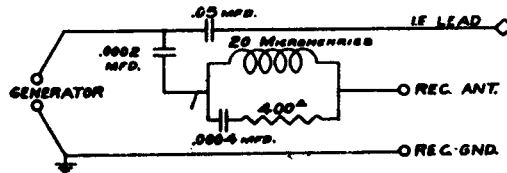


- NOTES -**
- RESISTORS ARE 1/4 W, 20% UNLESS OTHERWISE NOTED. *K=1000 OHMS
 - 6.3V FILAMENT STRING IS ENTIRELY UNGROUNDED ON POWER PACK CHASSIS, ONE SIDE IS GROUNDED ON R F CHASSIS ONLY.
 - VOLTAGES SHOWN ARE MEASURED TO GROUND WITH ELECTRONIC VOLT-OHM METER UNDER NO SIGNAL CONDITIONS, AND ARE SUBJECT TO ±20% NORMAL VARIATION.

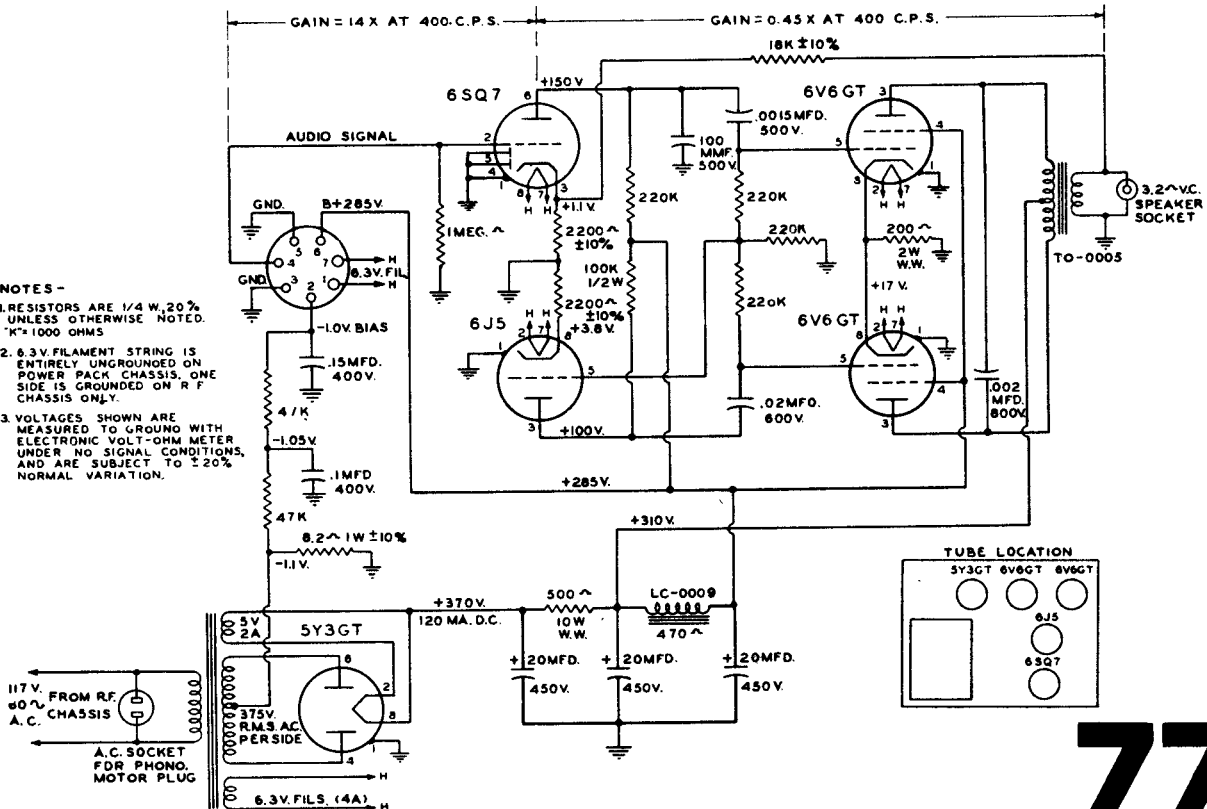

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

HOWARD RADIO COMPANY

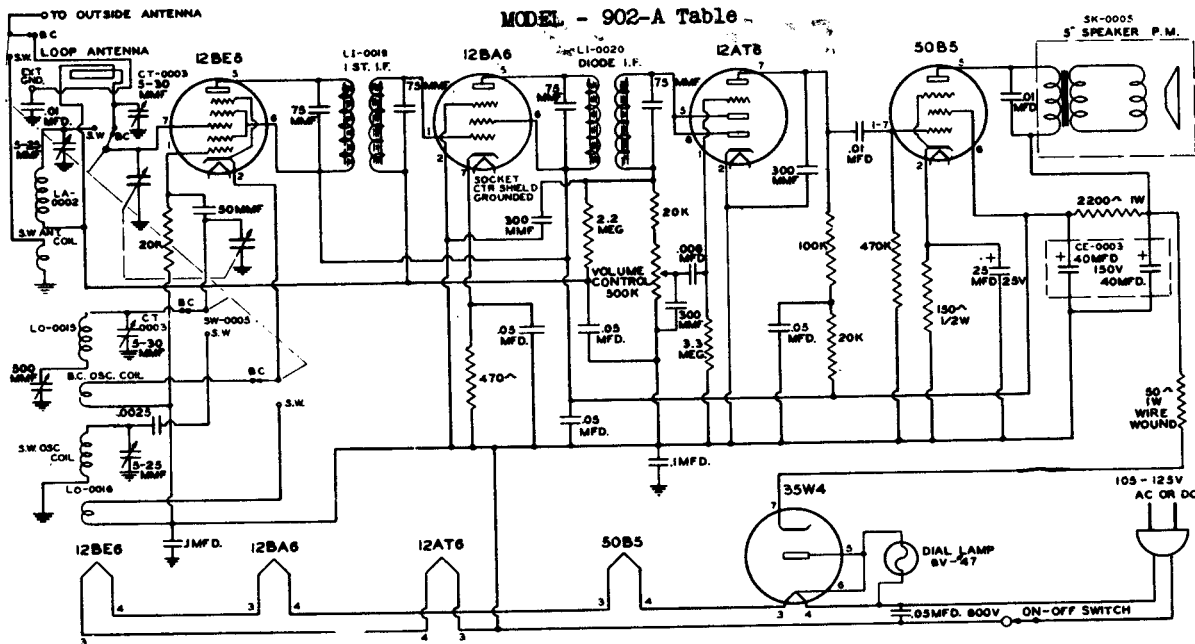


VOLTAGE AND ALIGNMENT CHARTS

TUBE	FUNCTION	CATH.	SCR. GRID	PLATE	TUBE	FUNCTION	CATH.	SCR. GRID	PLATE
12BE6	Mixer	0	79	79	12AT6	Det.	0	--	56
12BA6	I.F. Det.	2	79	79	50B5	Output.	4.6	79	110

	DUMMY ANTENNA	SIG. GEN. CONNECTION	GEN. FREQ.	BAND POSITION	DIAL SETTING	ORDER OF TRIMMER ADJUSTMENTS	TRIMMER FUNCTION
1	.05 MFD.	Grid of 12BE6	445 KC	BC	Off Station	1 2 3 4	I.F. Peak to Max. Output
2	400 Ohm Resistor	Ant.	1400 KC	BC	1400 KC	5 7	BC Osc. and R.F.
3	400 Ohm Resistor	Ant.	600 KC	BC	600 KC	6	BC Osc., Pad.
4	400 Ohm Resistor	Ant.	16 MC	SW	16 MC	9, 8	SW Osc. and R.F.


TRIMMER LOCATIONS

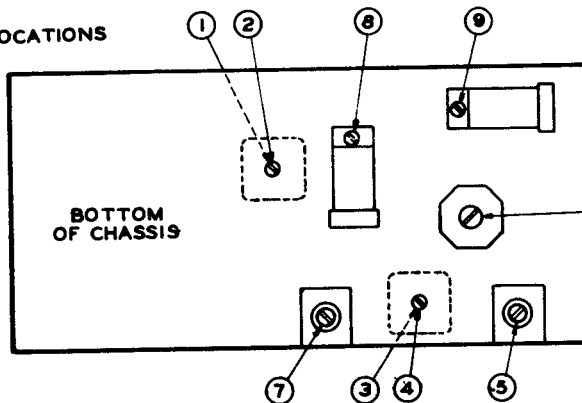

For Model 906-C
See Page 63 in
Volume 7, 1947
Diagram Manual.


BROADCAST BAND 535-1650KC
SHORT WAVE BAND 9-19MEGACYCLES
[I.F. 455KC]

NOTE -
ALL COND. ARE 400V.
UNLESS OTHERWISE NOTED.
ALL RESISTORS ARE 1/4 W
UNLESS OTHERWISE NOTED.
BAND SWITCH, SW-0005, SHOWN IN BROADCAST POSITION



79

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

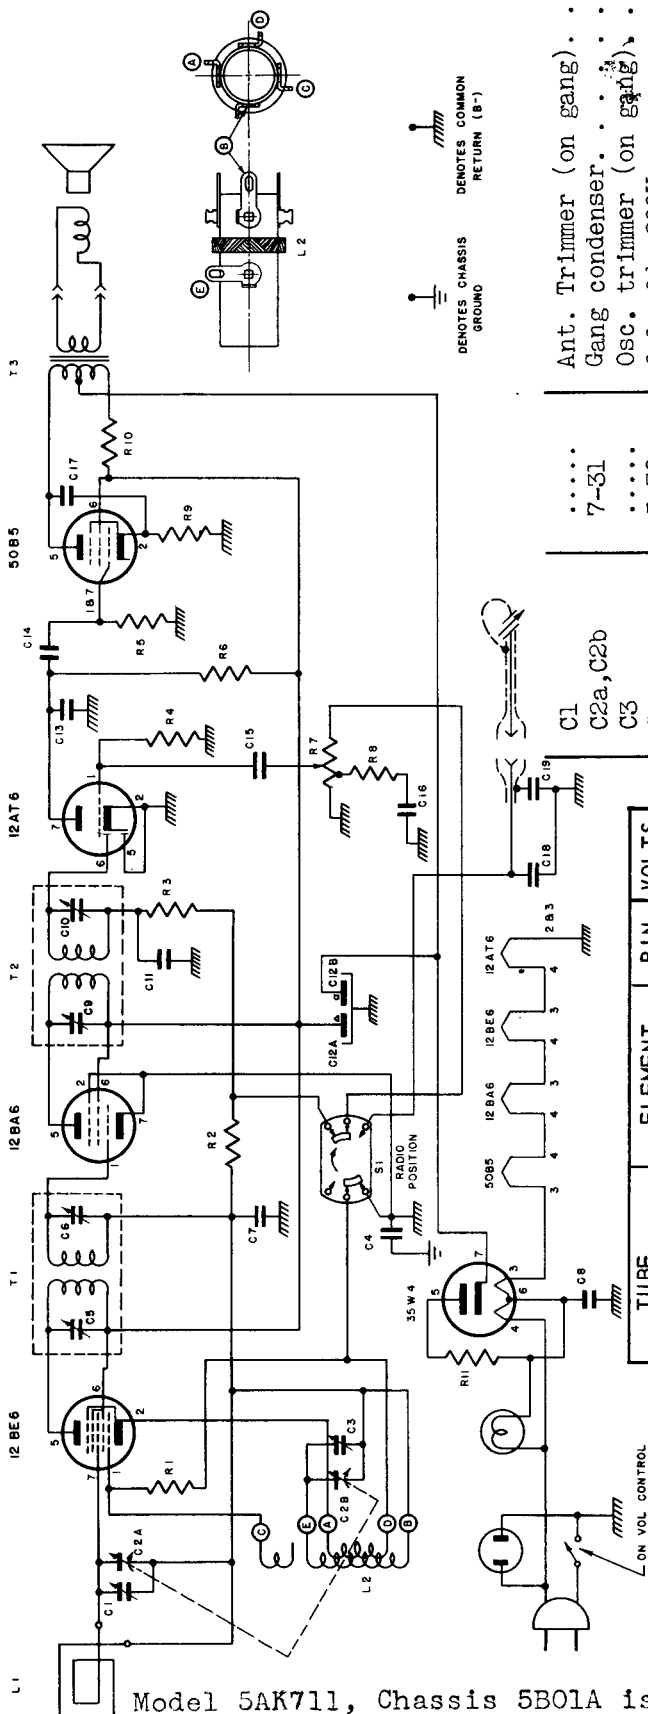

TUBE	ELEMENT	PIN	VOLTS
12BE6 Converter	Plate	5	88
	Screen Grid	6	88
	Grid	7	0.6
12BA6 I.F. Amp.	Plate	5	88
	Screen Grid	6	88
	Grid	1	-0.6
12AT6 2nd Det., AVC	Plate	7	38
	Grid	1	-0.6
	Plate	5	107
50B5 Output	Screen Grid	6	88
	Cathode	2	4.9
	Grid	1 & 7	0
35W4 Rectifier	Plate	5	117AC
	Cathode	7	115

NOTE: All voltages measured with a vacuum tube voltmeter to B---. A full line voltage of 117 V.A.C., volume control at minimum.

Majestic

MODELS 5AK731-5AK780
CHASSIS 5B05A

See page 82 for alignment

Model 5AK711, Chassis 5B01A is similar, but less phono.

- Ant. Trimmer (on gang)
- Gang condenser
- Osc. trimmer (on gang)
- 0.1 mfd. 200V
- On 1st I.F. Transformer
- .05 mfd. 200V
- On 2nd I.F. Transformer
- 220 mmf. 500V mica
- 20 mfd. 40 mfd. 150V Elec
- .01 mfd. 200V
- .002 mfd. 200V
- .04 mfd. 400V
- 22K ohm, 1/4 watt
- 3.3 megohm, 1/4 watt
- 10 megohm, 1/4 watt
- 470K ohm, 1/4 watt
- 330K ohm, 1/2 watt
- 500K ohm volume control
- 18K ohm, 1/4 watt
- 150 ohm, 1 watt
- 1200 ohm, 1 watt
- 27 ohm, 1/4 watt
- Loop Assembly
- Oscillator coil

- 7-31
- 5-39
- 5-40
- 6-151
- 19-25
- 5-57
- 5-52
- 5-58
- 01-143
- 01-234
- 01-255
- 01-199
- 02-192
- 13-28
- 01-139
- 03-52
- 03-90
- 01-20
- S-1354
- S-1374


- C1
- C2a, C2b
- C3
- C4
- C5, C6
- C7, C8, C19
- C9, C10
- C11, C13, C18
- C12a, C12b
- C14, C16
- C15
- C17
- R1, R3
- R2
- R4
- R5
- R6
- R7
- R8
- R9
- R10
- R11
- L1
- L2

⏏ DENOTES CHASSIS GROUND
 ⏏ DENOTES COMMON RETURN (B-)

Majestic

Models 5AK731, 5AK780

Chassis 5B05A

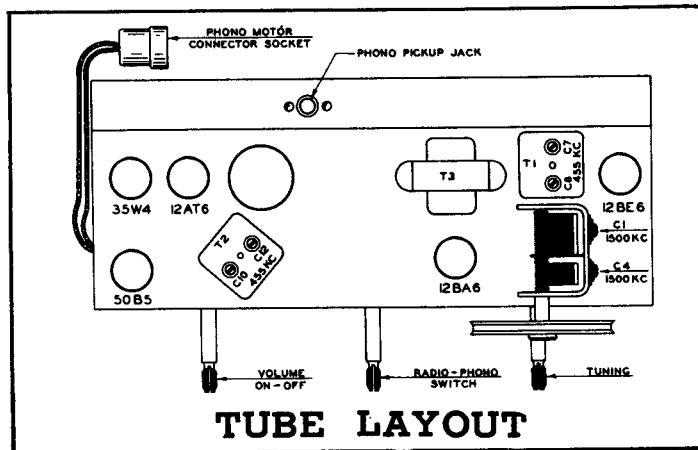


ALIGNMENT

Before aligning, set the dial pointer as follows: Close the tuning gang condenser (plates fully closed). Set the dial pointer so that it is in line with the last mark at the low frequency end of the dial scale.


While aligning this receiver, turn the volume control full on, and keep the signal generator output as low as possible to prevent AVC action and false readings.

OPERATION	CONNECT OSC. TO	DUMMY ANTENNA	INPUT SIGNAL FREQUENCY	SET DIAL TO	ADJ. TRIMMERS	PURPOSE
1	Pin 7 on converter tube I2BE6 socket	.05mfd	455KC Modulated	600KC	C5, C6, C9 and C10	Align I.F. channel for maximum output
2	2 turns loosely cpld. to loop ant.	-----	1500KC Modulated	1500KC	C3	Set oscillator to dial scale
3	2 turns loosely cpld. to loop ant.	-----	1500KC Modulated	1500KC	C1	Align ant. for maximum output

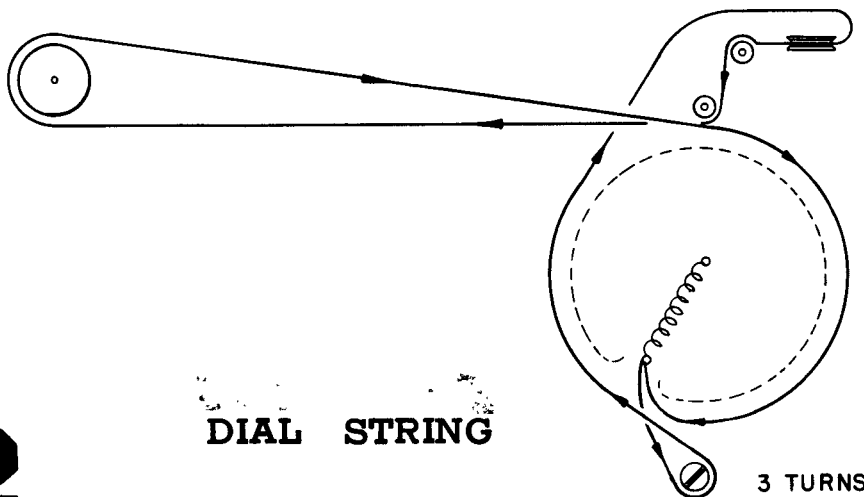

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS



JOHN MECK INDUSTRIES, Inc., CHASSIS RC-5C5-P or PM-5C5-P

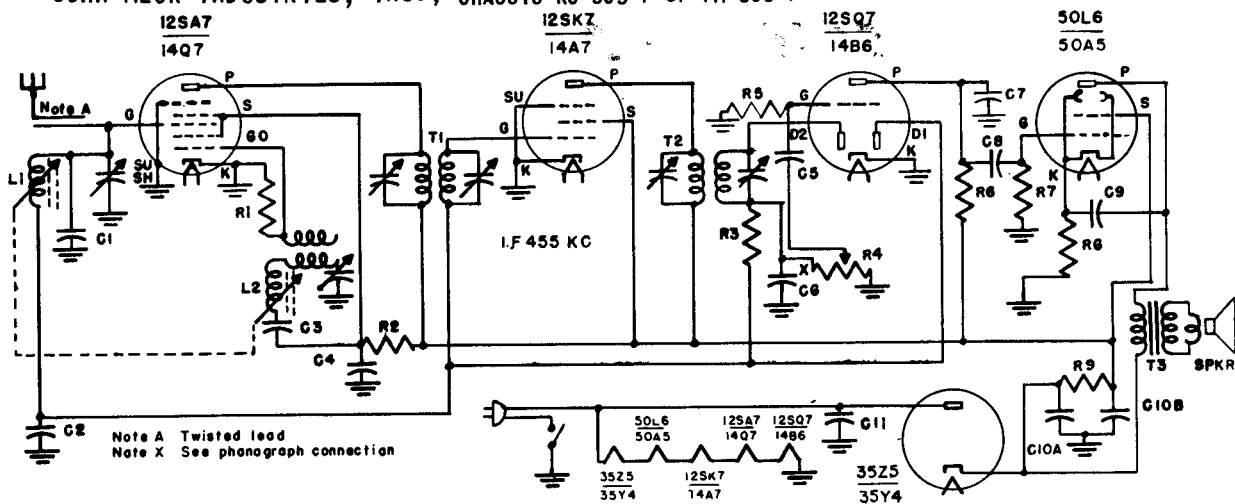

Circuit Symbol	Part Number	Description	Circuit Symbol	Part Number	Description
C1	CM-1525D	Condenser-Mica, 25 mfd., 500 volt	R8	RC-315DD	Resistor-Carbon, 15D ohms, 1/2 watt
C2, C9, C11	CP-145C31	Condenser-Paper, 0.05 mfd., 400 volt	R9	RC-3100I	Resistor-Carbon, 1000 ohms, 1/2 watt
C3, C5, C8	CP-14103	Condenser-Paper, 0.01 mfd., 400 volt	SPKR	SR-10000	Speaker-P.M. 4" round less T3
C4	CM-153D1	Condenser-Mica, 30D mfd., 500 volt	T1	TS-10000	Transformer-1st. I.F.
C6, C7	CM-1525I	Condenser-Mica, 25D mfd., 500 volt	T2	TS-100D1	Transformer-2nd. I.F.
C10A, C10B	CL-1000I	Condenser-Elect., 20/20 mfd., 15D volt	T3	TD-10000	Transformer-Output
L1, L2	YP-10000	Tuner-Permeability, assembly	PHONOGRAPH MODEL		
R1	RC-32002	Resistor-Carbon, 2D, 0DD ohms, 1/2 watt	MI	PRS-10000	Motor-Phono, with turntable
R2	RC-340D1	Resistor-Carbon, 4D00 ohms, 1/2 watt	PI	PA-10000	Pickup-Crystal
R3	RC-320D4	Resistor-Carbon, 2 megohms, 1/2 watt	R10	RC-310D4	Resistor-Carbon, 1 megohm, 1/2 watt
R4	YC-1D1D5	Control-Volume, 1 megohm with switch	R11	RC-37503	Resistor-Carbon, 75D, 0DD ohms, 1/2 watt
R5	RC-310D5	Resistor-Carbon, 10 megohms, 1/2 watt	S1	YS-10000	Switch-Radio, phono
R6	RC-32502	Resistor-Carbon, 25D, 0DD ohms, 1/2 watt			
R7	RC-35D03	Resistor-Carbon, 50D, 0DD ohms, 1/2 watt			

VOLTAGE TABLE - Use high resistance voltmeter of 1000 ohms per volt

Type tube	1	2	3	4	5	6	7	8
12SA7	0	24AC	78	78	-7 to -12	0	12AC	-0.65 to -1.2
12SK7	0	36AC	0	-0.8 to -1.2	0	78	24AC	78
12SQ7	0	-0.9 to -1.2	0	0	-0.8 to -1.2	55	12AC	0
50L6	0	--	95	78	0	--	36AC	4 to 5
35Z5	--	82	--	78	115 AC	100	115 AC	110
14Q7	24AC	78	78	-7 to -12	0	-0.65 to -1.2	0	12AC
14A7	36AC	78	78	0	0	-0.8 to -1.2	0	24AC
14B6	0	55	-0.9 to -1.2	0	-0.8 to -1.2	0	0	12AC
50A5	82AC	95	78	--	--	0	4 to 5	36AC
35Y4	115AC	115AC	78	--	100	--	110	82AC

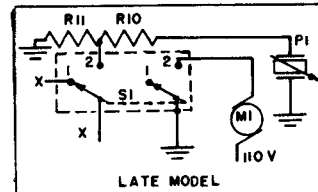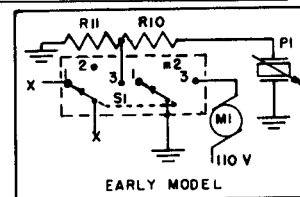


I.F. ALIGNMENT: The step-by-step routine given below should be carefully followed:

1. The signal generator must be set at 455 kilocycles.
2. Connect the output meter so that the output can be determined.
3. Connect the high side of the signal generator output to the antenna lead of the tuner, the white wire. The low side of the signal generator output lead is connected to the chassis through a 0.01 mfd. condenser.
4. Turn the volume control on full and turn the dial drive shaft so that the slugs of the tuner unit are all the way out against the stop.
5. Adjust the four I.F. trimmers, tuning each carefully to get the maximum deflection of the output meter. Reduce the signal generator output if the output meter goes off scale.
6. Repeat all four adjustments since the adjustment of each I.F. trimmer may effect the others to a certain extent.

OSCILLATOR and R.F. ALIGNMENT:

1. Connect the high side of the signal generator output to the insulation covering of the antenna wire and not the wire itself.
2. Set the signal generator to 1680 kilocycles with the slugs of the tuner all the way out against the stop. Adjust the oscillator trimmer, right hand trimmer screw, for maximum reading on the output meter.
3. Set the signal generator at 1120 kilocycles and turn the dial drive shaft until the 1120 kilocycle note is heard. Adjust the R.F. trimmer, left hand trimmer, for maximum reading on the output meter. Set the dial pointer on 1120 kilocycles on the dial scale. By aligning the R.F. section at 1120 kilocycles the overall alignment will be very good.



MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

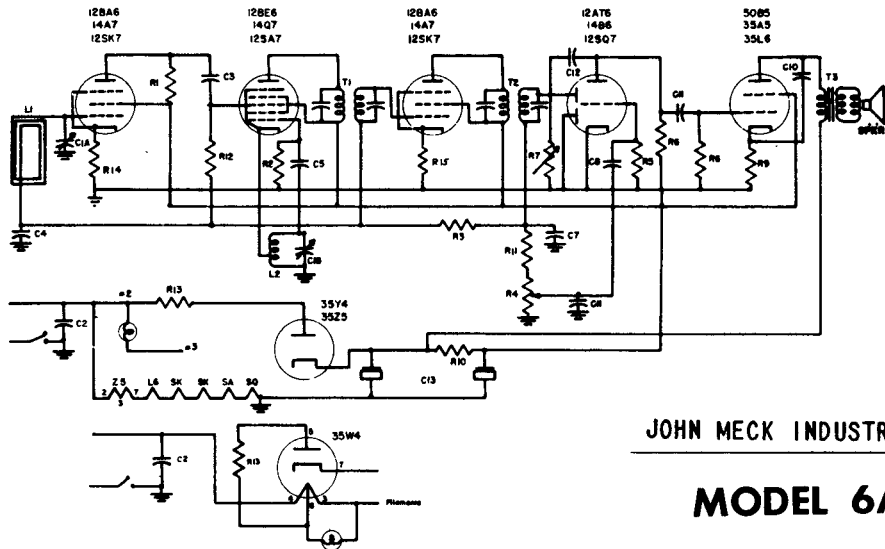

JOHN MECK INDUSTRIES, Inc.

MODEL 6A7

SYMBOL	PART NO.	DESCRIPTION	SYMBOL	PART NO.	DESCRIPTION
C1	CV-10009	Condenser, Variable with Pulley.	R4	VC-11105	Control, Volume 1 megohm with switch.
C2	CP-14503	Condenser, Paper .05 Mfd. 400 volts.	R5	RC-31005	Resistor, Carbon 10 megohm 1/2 watt.
C3	CH-15250	Condenser, Mica 25 mmf. 500 volts.	R6	RC-32203	Resistor, Carbon 220,000 ohm 1/2 watt.
C4	CP-12503	Condenser, Paper .05 Mfd. 200 volts.	R7	VC-13105	Control, Tone 1 megohm.
C5	CH-15500	Condenser, Mica 50 mmf. 500 volts.	R8, R12	RC-34703	Resistor, Carbon 470,000 ohm 1/2 watt.
C6-C7	CH-15251	Condenser, Mica 250 mmf. 500 volts.	R9, R14	RC-31500	Resistor, Carbon 150 ohm 1/2 watt.
C8, C11	CP-14103	Condenser, Paper .01 mfd. 400 volts.	R10	RC-41001	Resistor, Carbon 1000 ohm 1 watt.
C10	CP-14203	Condenser, Paper .02 mfd. 400 volts.	R11	RC-31003	Resistor, Carbon 100,000 ohm 1/2 watt.
C12	CP-14302	Condenser, Paper .003 mfd. 400 volts.	R13	RC-30220	Resistor, Carbon 22 ohm 1/2 watt.
C13	CL-10007	Condenser, Electrol. 50/30 mfd. 150	R15	RC-33300	Resistor, Carbon 330 ohm 1/2 watt.
L1	AL-10010	Loop Antenna.	SPKR	SO-10002	Speaker, Oval 4 x 6.
L2	TRC-10000D	Coil, Oscillator	T1	TS-10000	Transformer, I. F. Input.
R1	RC-34701	Resistor, Carbon 4700 ohm 1/2 watt.	T2	TS-10001	Transformer, I. F. Output.
R2	RC-32202	Resistor, Carbon 22000 ohm 1/2 watt.	T3	TO-10000	Transformer, Output.
R3	RC-32204	Resistor, Carbon 2.2 megohm 1/2 watt.			

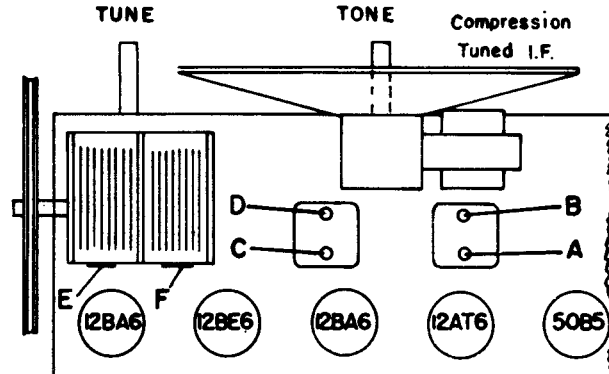
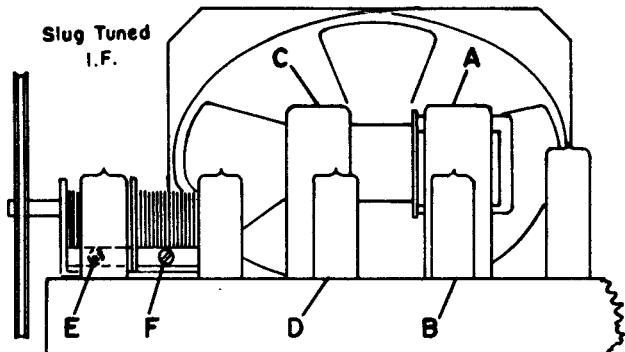


Signal Generator Coupling	Signal Generator Frequency	Gang Condenser Position	Output Meter	Adjust	Remarks
High side of Mixer tube Grid (12BE6)	455 Kc	Stator Turned out to minimum Capacity position	Across Voice Coil	A, B, C, D	Adjust for maximum output. If isolation transformer is not used, reduce dummy ant. to .001 MFD. to reduce hum modulation.
Loop	1720 Kc	Stator Turned out to minimum Capacity position	Across Voice coil	E	Fashion loop from few turns of wire and radiate signal into set. Adjust for maximum output.
Loop	1500 Kc	Tune gang to resonance	Across Voice coil	F	Fashion loop from few turns of wire and radiate signal into set. Adjust for maximum output.

RADIO DIAGRAMS

CAPACITY IS GIVEN IN MFED EXCEPT WHERE INDICATED.
TOLERANCE IS 5% UNLESS INDICATED.

RESISTANCE IS GIVEN IN OHMS UNLESS INDICATED.
R: 1000 OHMS
K: 10000 OHMS

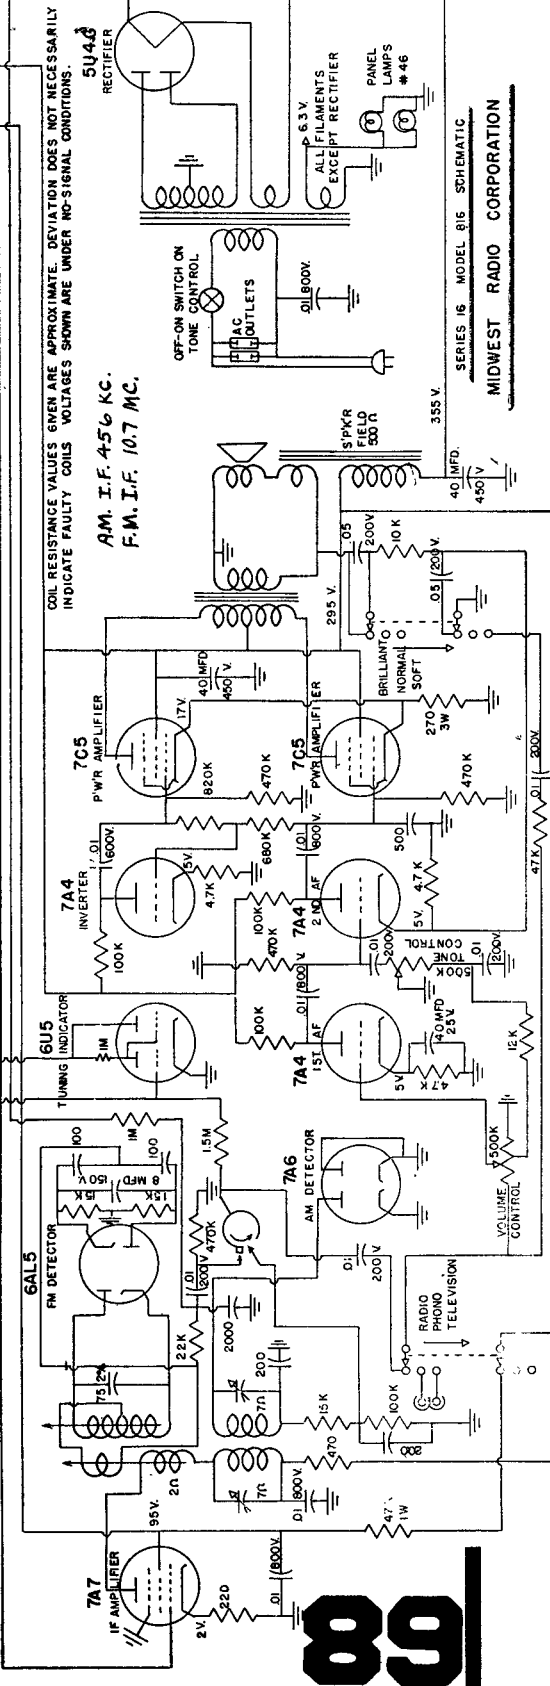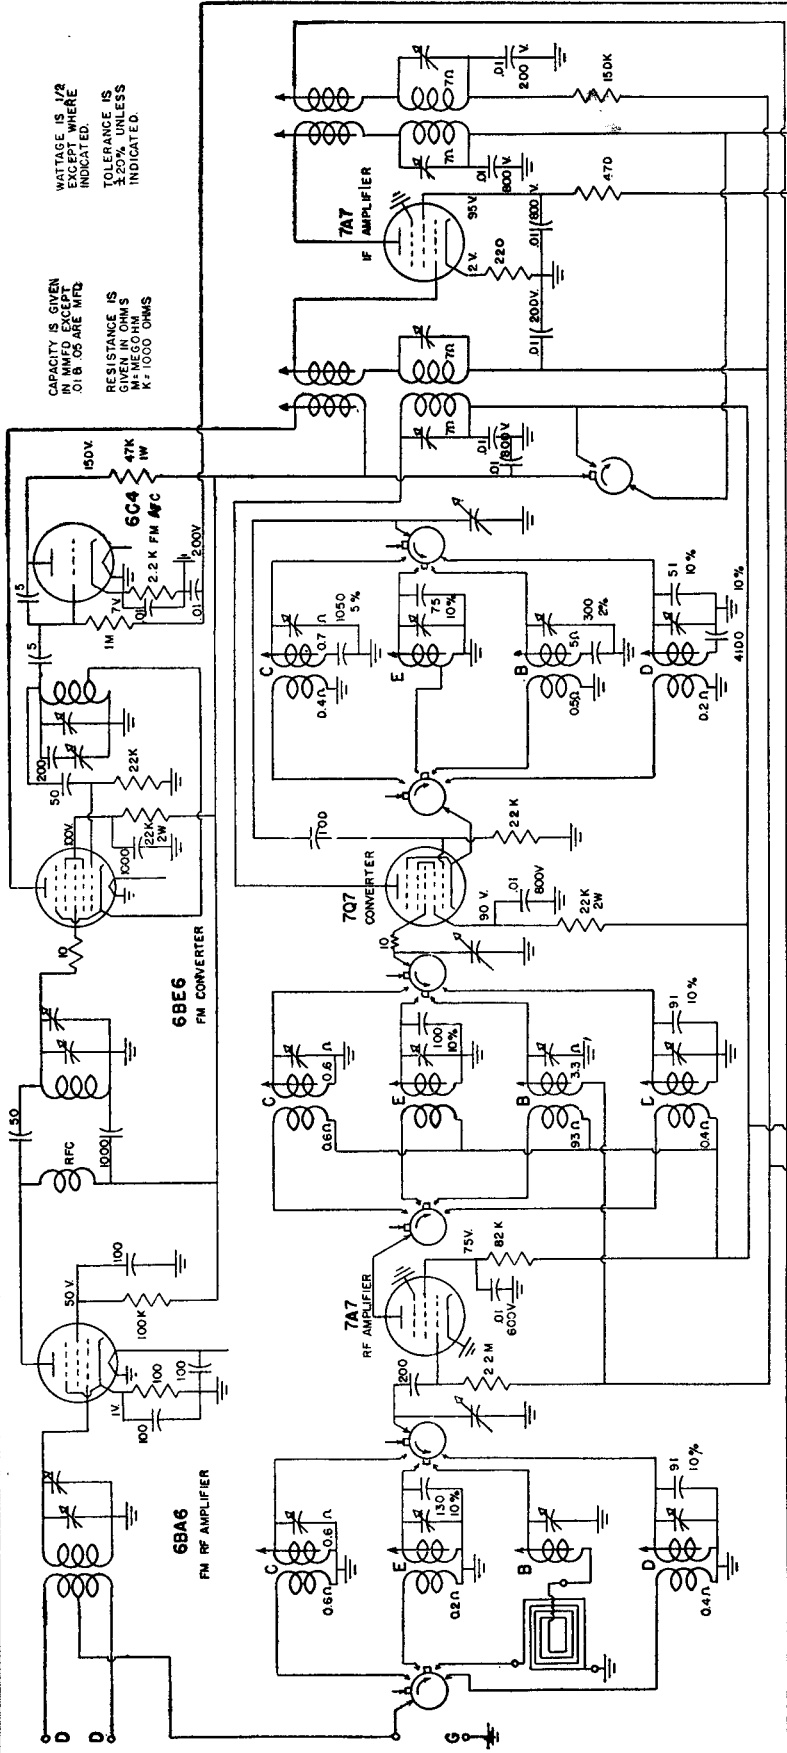


COIL RESISTANCE VALUES GIVEN ARE APPROXIMATE. DEVIATION DOES NOT NECESSARILY INDICATE FAULTY COILS. VOLTAGES SHOWN ARE UNDER NO-SIGNAL CONDITIONS.

AM. I.F. 456 KC.
F.M. I.F. 10.7 MC.


89

SERIES 16 MODEL 816 SCHEMATIC
MIDWEST RADIO CORPORATION

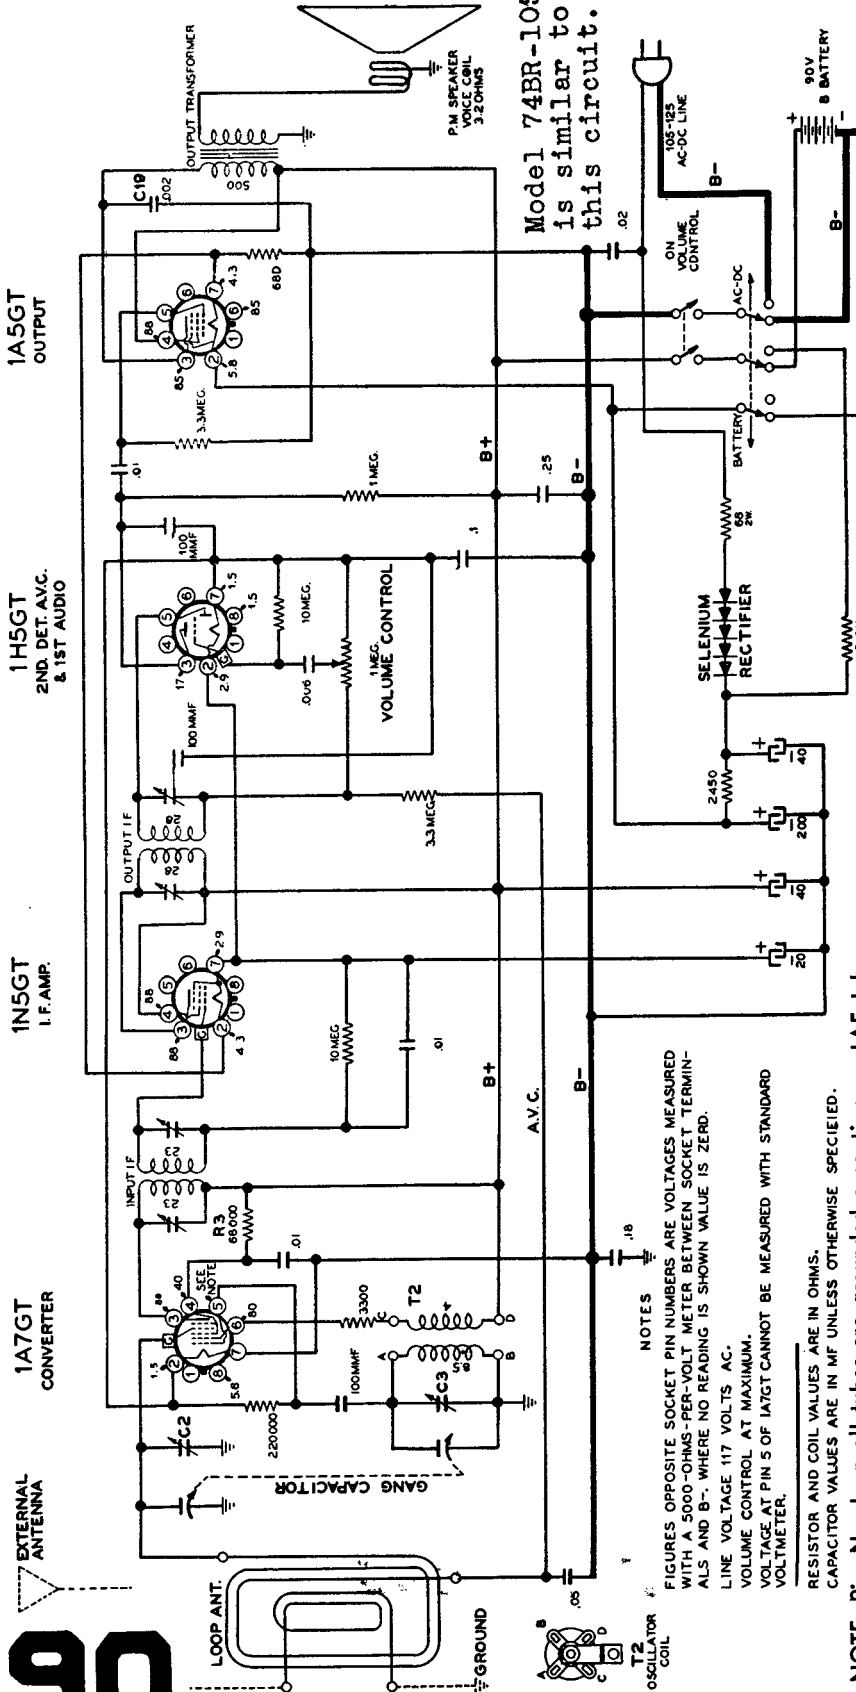

Model 74BR-1055A is similar to this circuit.

WARDS
MODEL 74BR-1053A

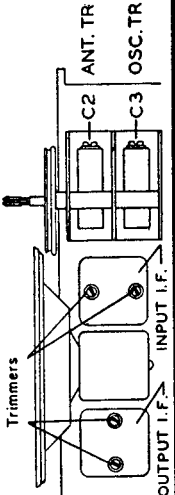


NOTES
FIGURES OPPOSITE SOCKET PIN NUMBERS ARE VOLTAGES MEASURED WITH A 5000-OHMS-PER-VOLT METER BETWEEN SOCKET TERMINALS AND B-, WHERE NO READING IS SHOWN VALUE IS ZERO.
LINE VOLTAGE 117 VOLTS AC.
VOLUME CONTROL AT MAXIMUM.
VOLTAGE AT PIN 5 OF 1A7GT CANNOT BE MEASURED WITH STANDARD VOLT-METER.
RESISTOR AND COIL VALUES ARE IN OHMS.
CAPACITOR VALUES ARE IN MF UNLESS OTHERWISE SPECIFIED.

NOTE: Pins No. 1 on all tubes are grounded excepting on 1A5 tube.

SIGNAL GENERATOR		DIAL SETTING	ADJUST TRIMMERS TO MAXIMUM OUTPUT in order shown
Frequency	Coupling Capacitor		
455 kc	.1 mf	1A7GT Pin 7	Input and output trimmers on IF cans
1650 kc	.1 mf	1A7GT Pin 7	Osc. trimmer on gang (see trimmer view)
1400 kc			Set dial to 1400 kc. Ant. trimmer on gang (see trimmer view)


*For these adjustments chassis must be removed from cabinet. Insert a 1 megohm resistor between A.V.C. Buss and 1A7GT grid cap. It is assumed loop is disconnected from chassis.

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

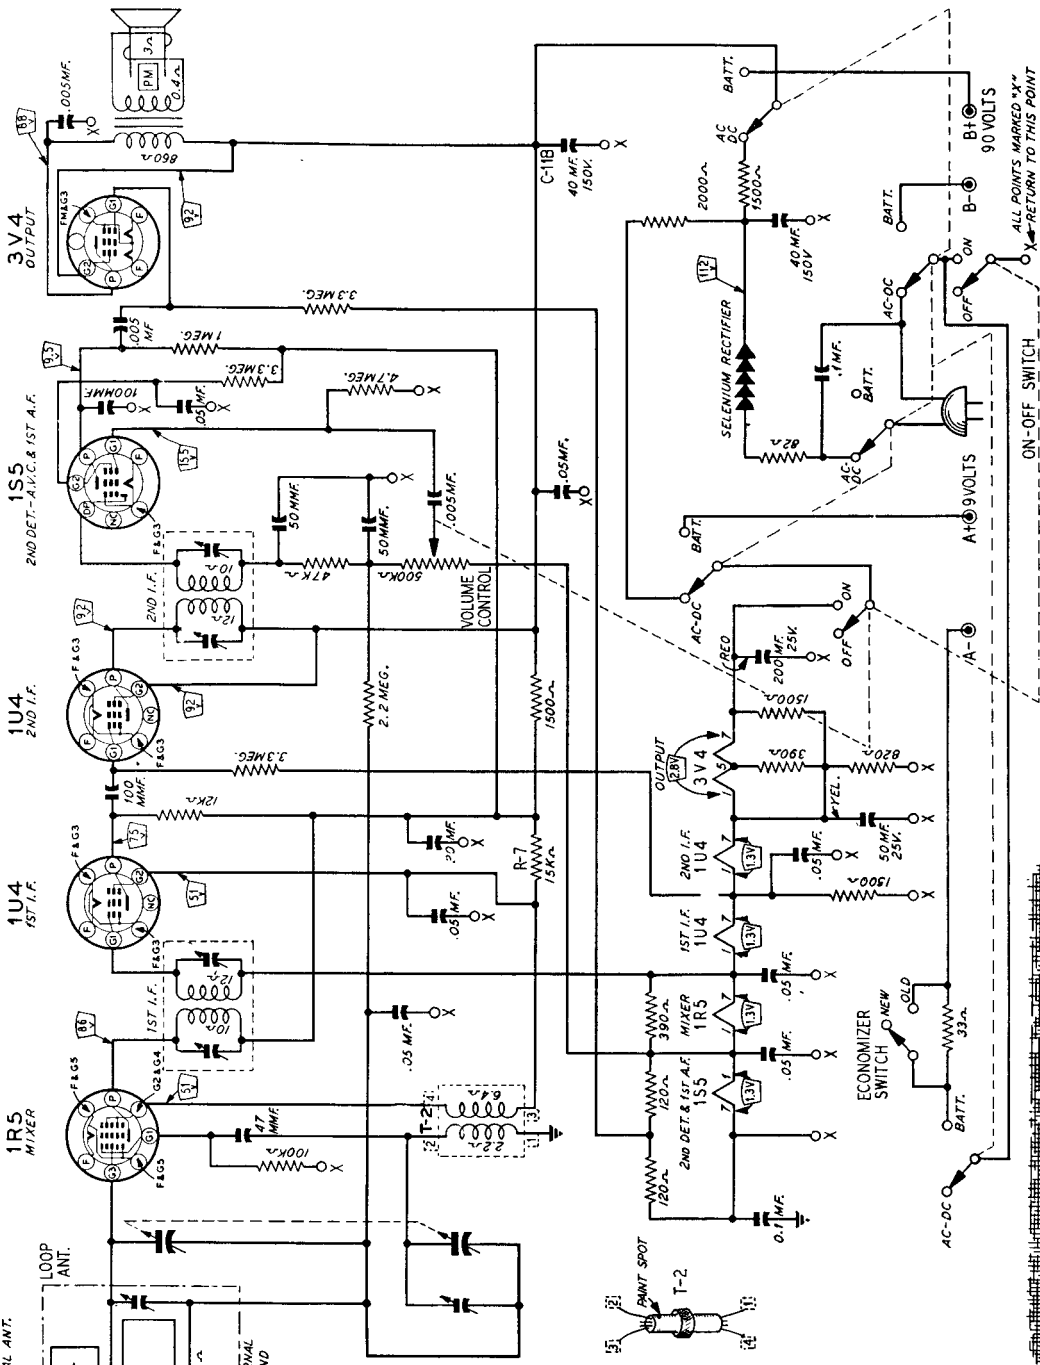

MODEL 74 WG-1054A

WARDS - Airline

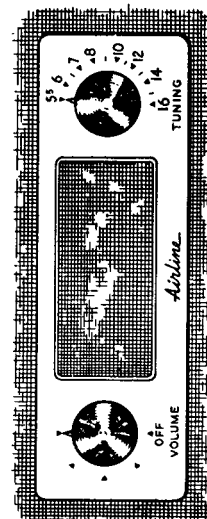


TUBE SOCKET VOLTAGES

The readings were taken with a 1000 ohm-per-volt meter and all plate and screen voltages read on a 500 volt scale. Conditions of measurement are:

- Line voltage.....117 volts AC
- Volume control.....maximum
- Signal input.....none


A variation of ±10% is usually permissible.

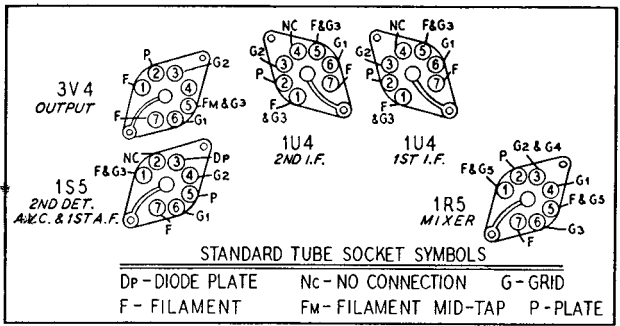

92

Frequency Range.....540-1600 KC
Intermediate Frequency 455 KC

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

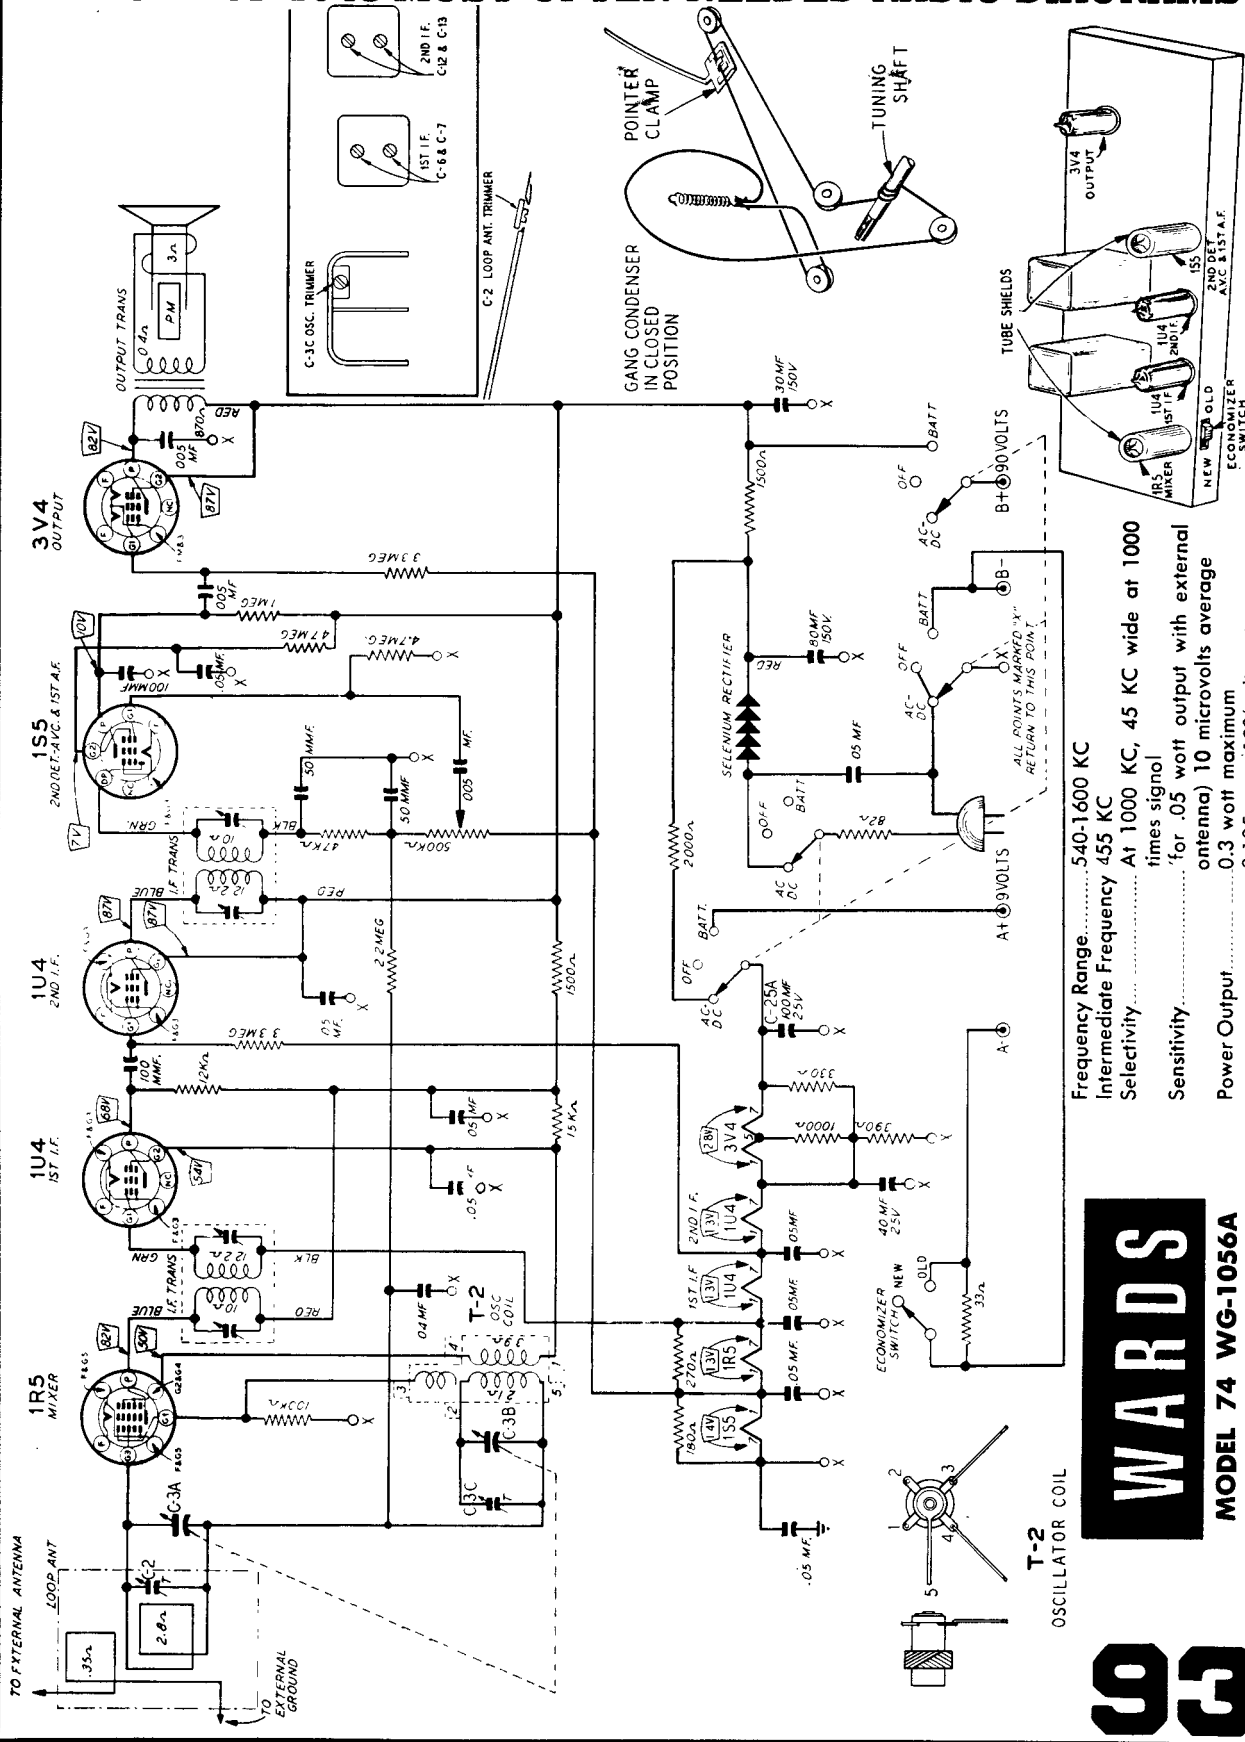


Frequency Range.....540-1600 KC
 Intermediate Frequency 455 KC
 Selectivity.....At 1000 KC, 45 KC wide at 1000 times signal
 Sensitivity.....for .05 watt output with external antenna) 10 microvolts average
 Power Output.....0.3 watt maximum
 0.125 watt 10% distortion

WARDS
MODEL 74 WG-1056A

93

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

SIGNAL GENERATOR				CONDENSER SETTING	ADJUST TRIMMERS TO MAXIMUM See Trimmer Illustration
Frequency Setting	Coupling Capacitor	Connection To Radio	Ground Connection		
455 kc	.1 mf	Control Grid 12SK7—1-F Prong No. 4	Point "X" 12SK7—1-F Prong No. 3	Turn Rotor to full open	2nd I-F (C7) & (C8)
455 kc	.1 mf	Control Grid 12SA7—1st Det. Prong No. 8	Same as above	Turn Rotor to full open	1st I-F (C5) & (C6)
1620 kc	.1 mf	Control Grid 12SA7—1st Det. Prong No. 8	Same as above	Turn Rotor to full open	Oscillator (C4)
1400 kc	50 mmf	External Antenna Clip on Loop See Note A	Chassis	Tune Rotor to Max. Output Set Indicator to 1400 KC— See Note B	Antenna (C19)

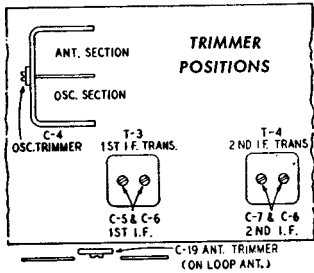


WARDS

74 WG-1802A
74 WG-1803A

NOTE A—Re-assemble chassis in cabinet. Replace back on cabinet.


NOTE B—Tune in a 1400 KC signal. If pointer is not at the 1400 KC mark on the dial scale, pull pointer off shaft. Set pointer at the 1400 KC mark and push back on shaft.

Model 74WG-2004 is similar, but has phono.

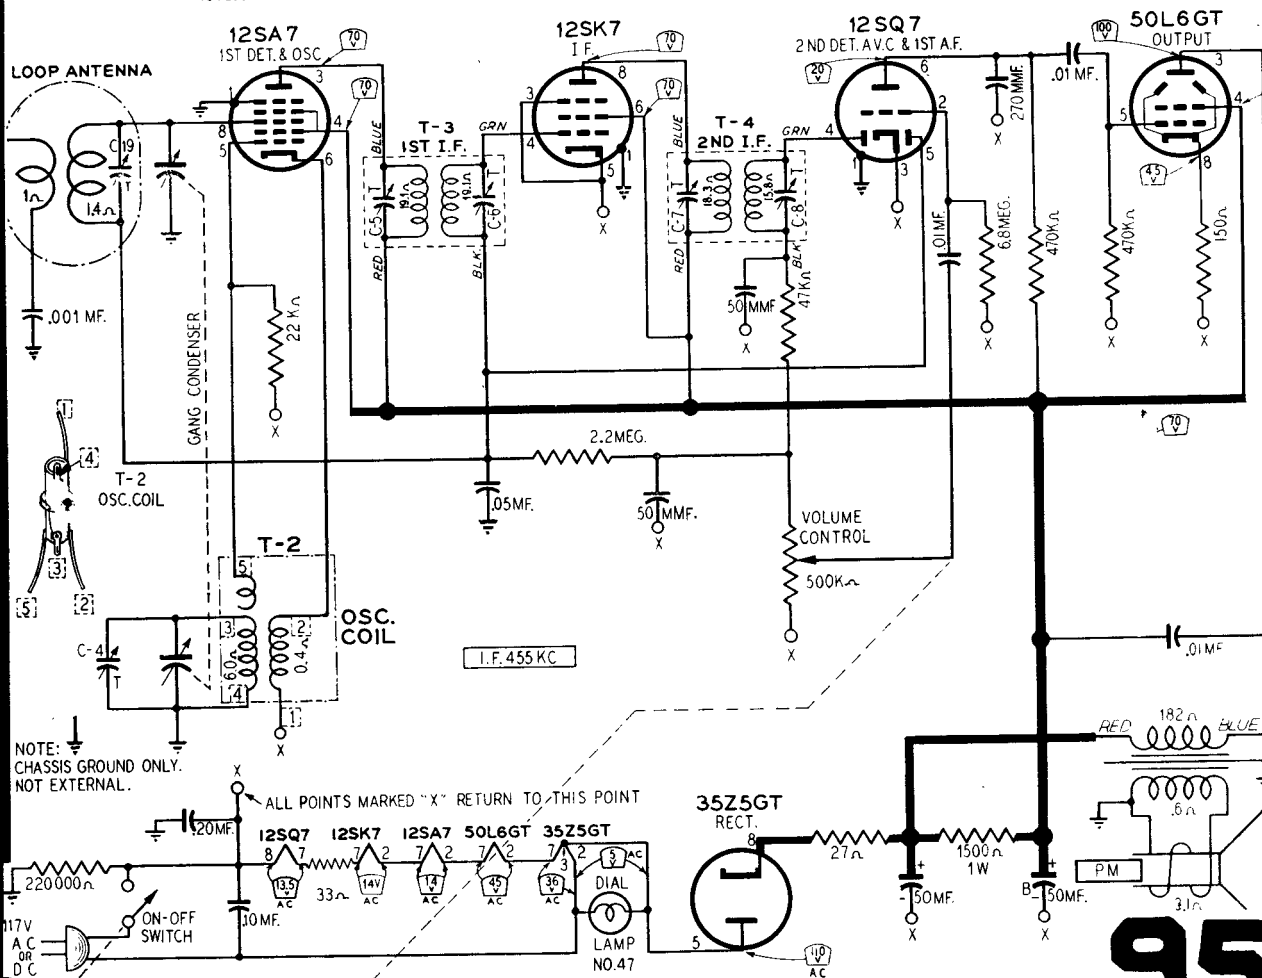

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

M O N T G O M E R Y W A R D

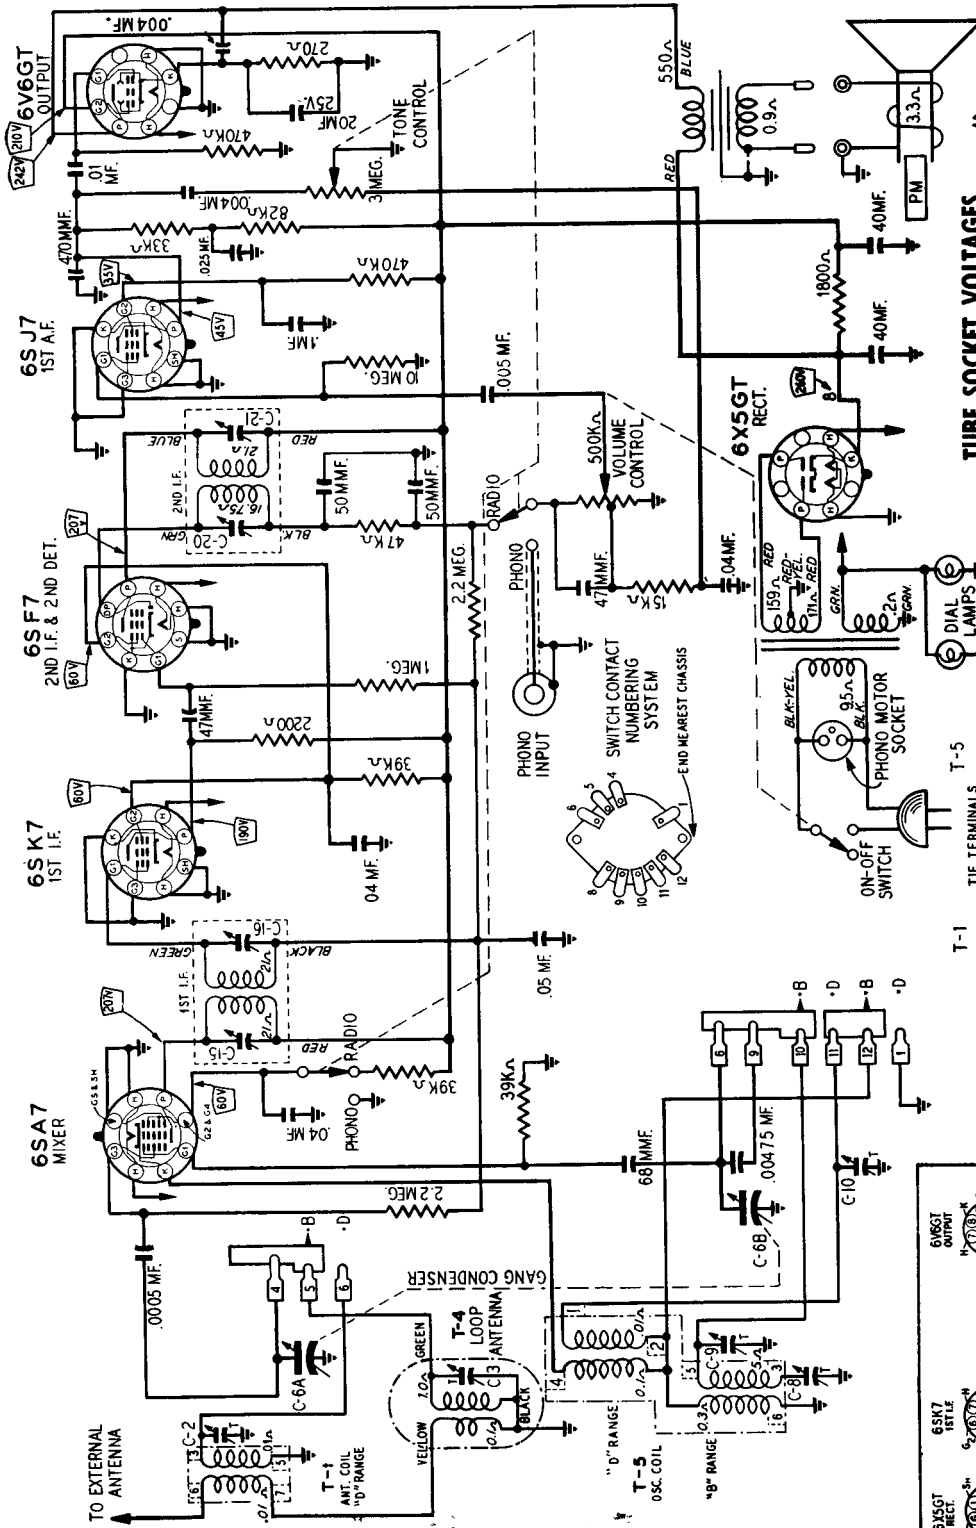



TUBE SOCKET VOLTAGES

Socket voltages are shown on the schematic diagram at the tube socket terminals. All voltages are between the socket terminal and chassis ground.

The readings were taken with a 1000 ohm per volt meter and all plate and screen voltages read on a 500 volt scale. Conditions of measurement are:

- Line voltage..... 117 volts AC
- Volume input..... maximum
- Signal input..... none
- none

A variation of ±10% is usually permissible.

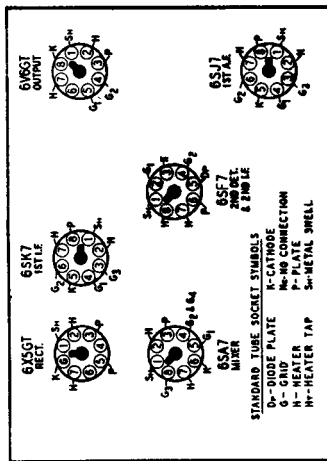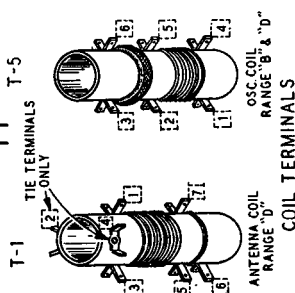

96

Montgomery Ward Model 74WG-2504C
(Model 74WG-2704C is similar)
See page 97 for more details.

WARDS *Airline* RADIO

MODEL 74 WG-2504C



(Model 74WG-2704C is similar)
See page 96 for schematic.

Frequency Range.....B range—540-1600 KC
D range—5.75 to 18.3 MC


Intermediate Frequency...455 KC

DRIVE CORD REPLACEMENT

Turn the gang condenser to the fully open position. Use a new 10X65 drive cord assembly or a piece of cord 48 inches long and tie one end to the tension spring. Hook the other end of the tension spring to the tab on the drive pulley. Pass the cord through the slot in the drive pulley rim around idler stud A and wind three and one-half turns clockwise around the tuning shaft (turns must progress away from chassis). Then pass cord over idler pulleys B and C. Wrap cord counterclockwise around drive pulley, stretch tension spring and fasten free end of cord to spring.

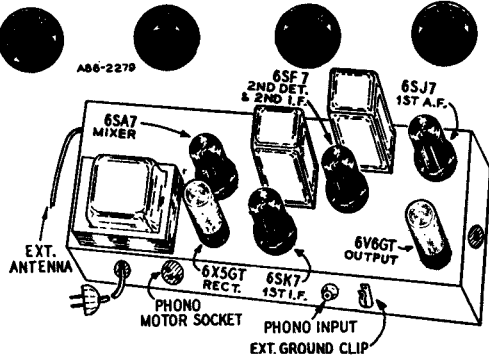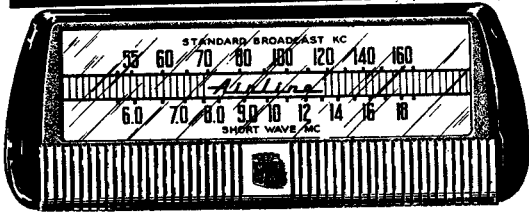


ALIGNMENT PROCEDURE

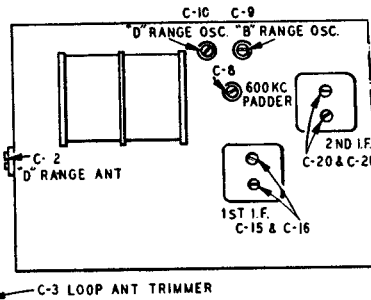

Volume Control—Maximum All Adjustments.
Connect Radio Chassis to Ground Post of Signal Generator with a Short Heavy Lead.
Allow Chassis and Signal Generator to "Heat Up" for several minutes.

The following equipment is required for aligning:
An All Wave Signal Generator which will provide an accurately calibrated signal at the test frequencies as listed.
Output Indicating Meter; Non-Metallic Screwdriver.
Dummy Antennas—.1 mf., 50 mmf., and 400 ohms.

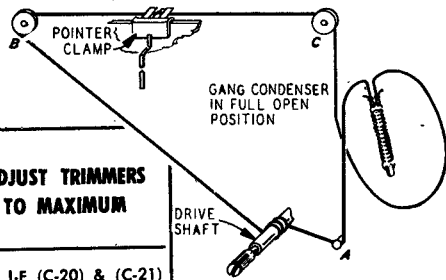

	SIGNAL GENERATOR		Dummy Antenna	Band Switch Setting	CONDENSER SETTING	ADJUST TRIMMERS TO MAXIMUM
	Frequency Setting	Connection at Radio				
I-F	455 kc	6SA7, Pin 8	.1 mf	B Range	Turn Rotor to Full Open	2nd I-F (C-20) & (C-21) 1st I-F (C-15) & (C-16)
RANGE B	1620 kc	Antenna Lead	50 mmf	B Range	Turn Rotor to Full Open	Oscillator Range B (C9)
	1400 kc	Antenna Lead	50 mmf	B Range	Tune Rotor to Max. Output. Set Indicator to 1400 KC. See Note A	Antenna Range B (C3)
	600 kc	Antenna Lead	50 mmf	B Range	Tune Rotor to Max. Output	600 kc (C8) Rock Rotor—See Note B
Repeat above oscillator adjustments at 1620 and 600 KC until readjusting the oscillator Range B Trimmer (C9) causes no further improvement in output.						
RANGE D	18.3 mc	Antenna Lead	400 Ohm	D Range	Turn Rotor to Full Open	Oscillator Range D (C10)
	16 mc	Antenna Lead	400 Ohm	D Range	Tune Rotor to Max. Output	Antenna Range D (C2) Rock Rotor—See Note B
LOOP RANGE B	Reassemble chassis in cabinet. 1400 kc Antenna Lead		50 mmf	B Range	Tune Rotor to Max. Output	Antenna Range B (C3)


After each range is completed, repeat the procedure as a final check.

NOTE A—If the pointer is not at 1400 KC on the dial, re-set pointer at the 1400 KC mark on the dial scale.

NOTE B—Turn the rotor back and forth and adjust the trimmer until the peak of greatest intensity is obtained.

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

Montgomery Ward Model 74WG-2010B (Alignment on page 101)

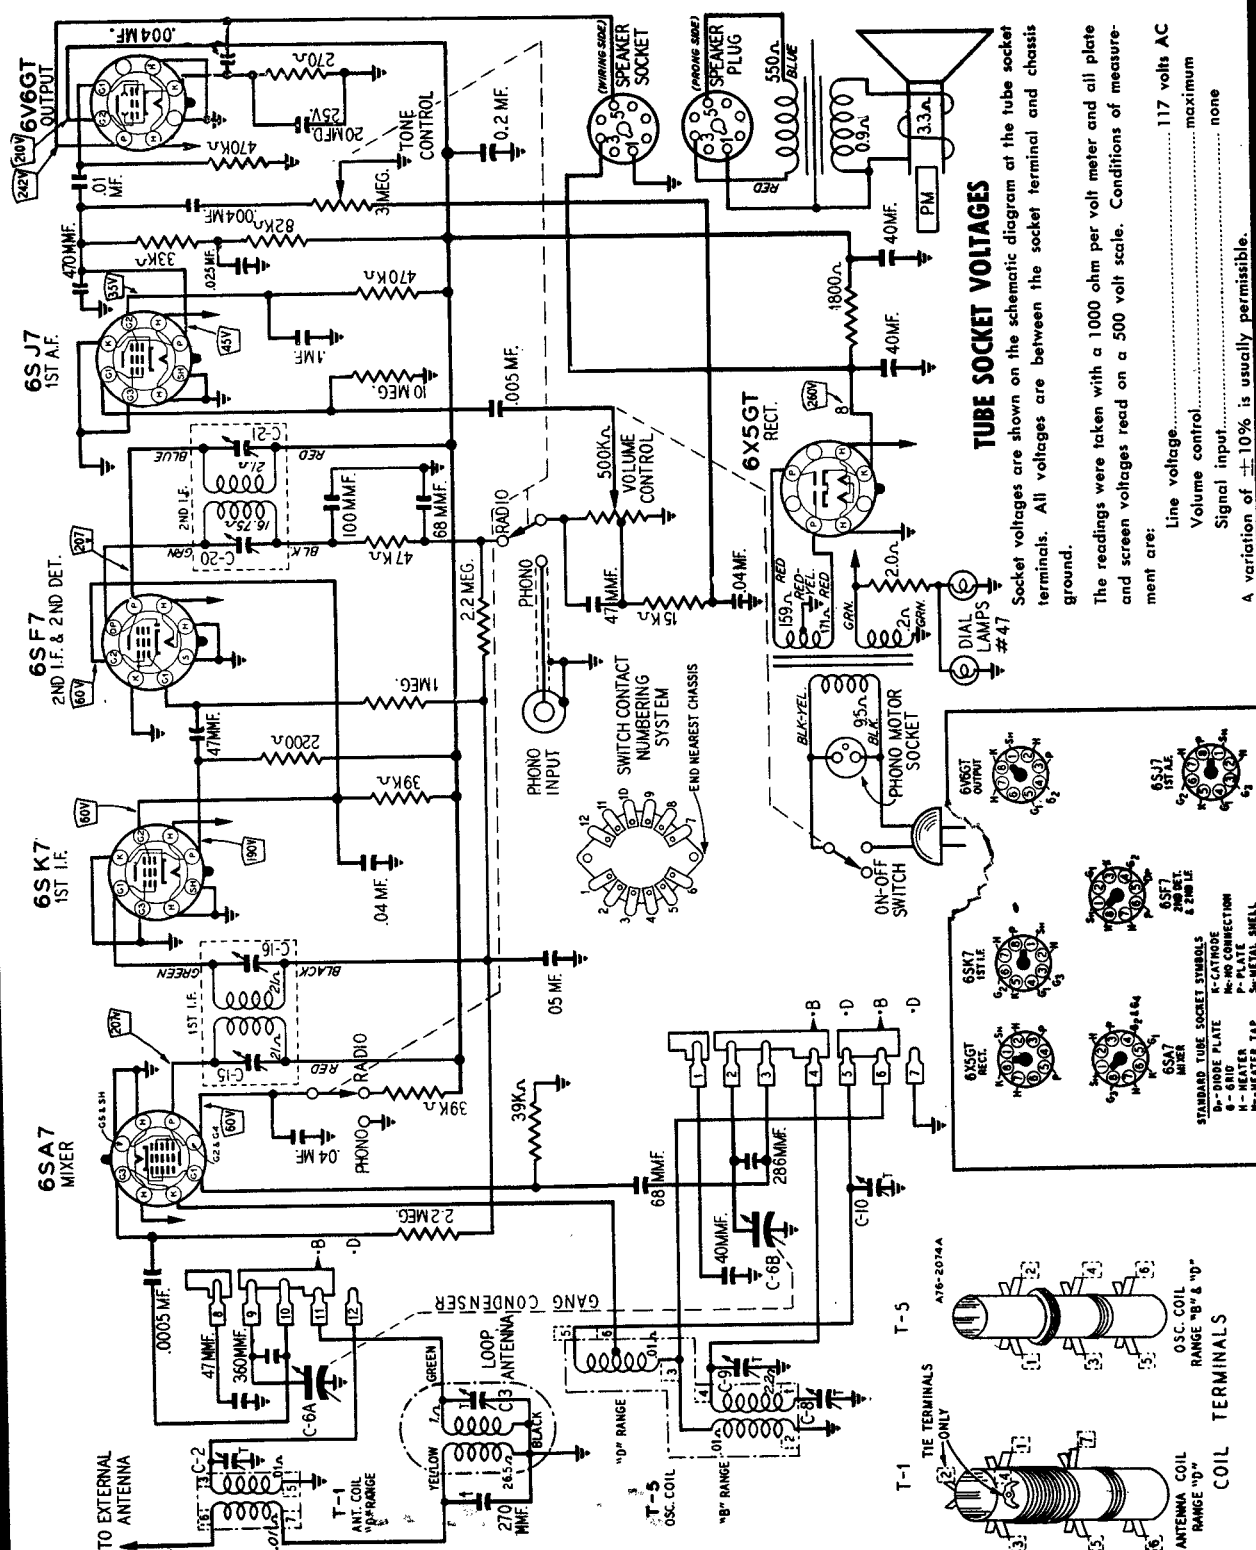


TUBE SOCKET VOLTAGES

Socket voltages are shown on the schematic diagram at the tube socket terminals. All voltages are between the socket terminal and chassis ground.

The readings were taken with a 1000 ohm per volt meter and all plate and screen voltages read on a 500 volt scale. Conditions of measurement are:


- Line voltage..... 117 volts AC
- Volume control..... maximum
- Signal input..... none

A variation of $\pm 10\%$ is usually permissible.

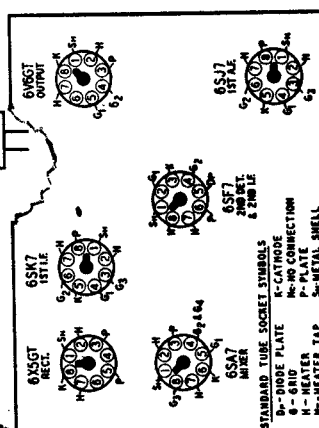

100

MONTGOMERY WARD

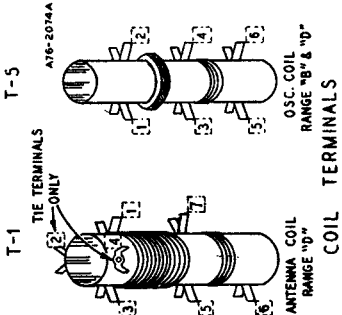


MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

WARDS

MODEL 74 WG-2010B

Frequency Range.....B range—540-1600 KC
 D range—9 to 15.5 MC
 Intermediate Frequency...455 KC
 Selectivity.....40 KC brood of 1000 times signal,
 1000 KC
 Sensitivity.....(for .5 watt output) with external
 antenno
 B range—9 microvolts overage
 D range—20 microvolts overage


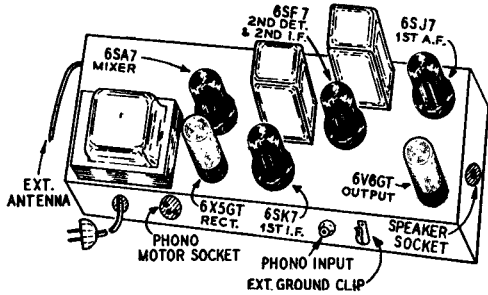


ALIGNMENT PROCEDURE

Volume Control—Maximum All Adjustments.
 Connect Radio Chassis to Ground Post of Signal Generator with a Short Heavy Lead.
 Allow Chassis and Signal Generator to "Heat Up" for several minutes.
 The following equipment is required for aligning:
 An All Wave Signal Generator which will provide an accurately calibrated signal at the test frequencies as listed.
 Output Indicating Meter; Non-Metallic Screwdriver.
 Dummy Antennas—.1 mf., 100 mmf., and 400 ohms.

DRIVE CORD REPLACEMENT

Turn the gang condenser to the fully open position. Use a new drive cord 46" long and tie one end to the tension spring. Hook the other end of the tension spring to the tob on the drive pulley. Pass the cord through the slot in the drive pulley rim and continue one and one-half turns counterclockwise around the drive pulley. Then pass the cord around idler stud A and wind three and one-half turns clockwise around the tuning shaft (turns must progress away from chassis). Pass cord around pulleys B and C and around idler stud D. Wrap cord counterclockwise around drive pulley, stretch the tension spring and tie free end of the cord to spring. Cut off any excess string.

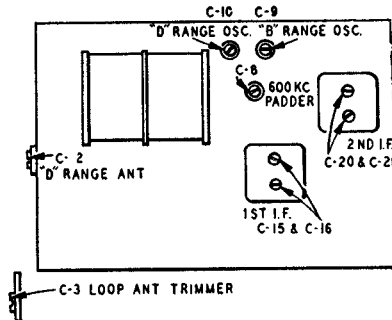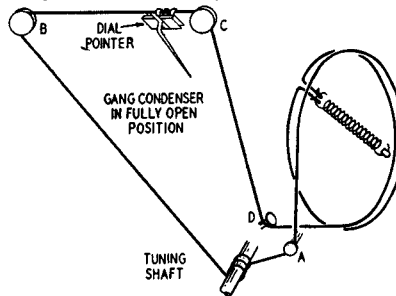






	SIGNAL GENERATOR		Dummy Antenna	Band Switch Setting	CONDENSER SETTING	ADJUST TRIMMERS TO MAXIMUM
	Frequency Setting	Connection at Radio				
I-F	455 kc	6SA7, Pin 8	.1 mf	B Range	Turn Rotor to Full Open	2nd I-F (C-20) & (C-21) 1st I-F (C-15) & (C-16)
RANGE B	1620 kc	Antenna Lead	100 mmf	B Range	Turn Rotor to Full Open	Oscillator Range B (C9)
	1400 kc	Antenna Lead	100 mmf	B Range	Tune Rotor to Max. Output. Set Indicator to 1400 KC. See Note A	Antenna Range B (C3)
	600 kc	Antenna Lead	100 mmf	B Range	Tune Rotor to Max. Output	600 kc (C8) Rock Rotor—See Note B
Repeat above oscillator adjustments at 1620 and 600 KC until readjusting the oscillator Range B Trimmer (C9) causes no further improvement in output.						
RANGE D	15.6 mc	Antenna Lead	400 Ohm	D Range	Turn Rotor to Full Open	Oscillator Range D (C10)
	14 mc	Antenna Lead	400 Ohm	D Range	Tune Rotor to Max. Output	Antenna Range D (C2) Rock Rotor—See Note B
LOOP RANGE B	Reassemble chassis in cabinet. 1400 kc Antenna Lead		100 mmf	B Range	Tune Rotor to Max. Output	Antenna Range B (C3)

After each range is completed, repeat the procedure as a final check.

NOTE A—If the pointer is not at 1400 KC on the dial, re-set pointer at the 1400 KC mark on the dial scale.

NOTE B—Turn the rotor back and forth and adjust the trimmer until the peak of greatest intensity is obtained.

Montgomery Ward
Model 74WG-2705A
Alignment on page 103.

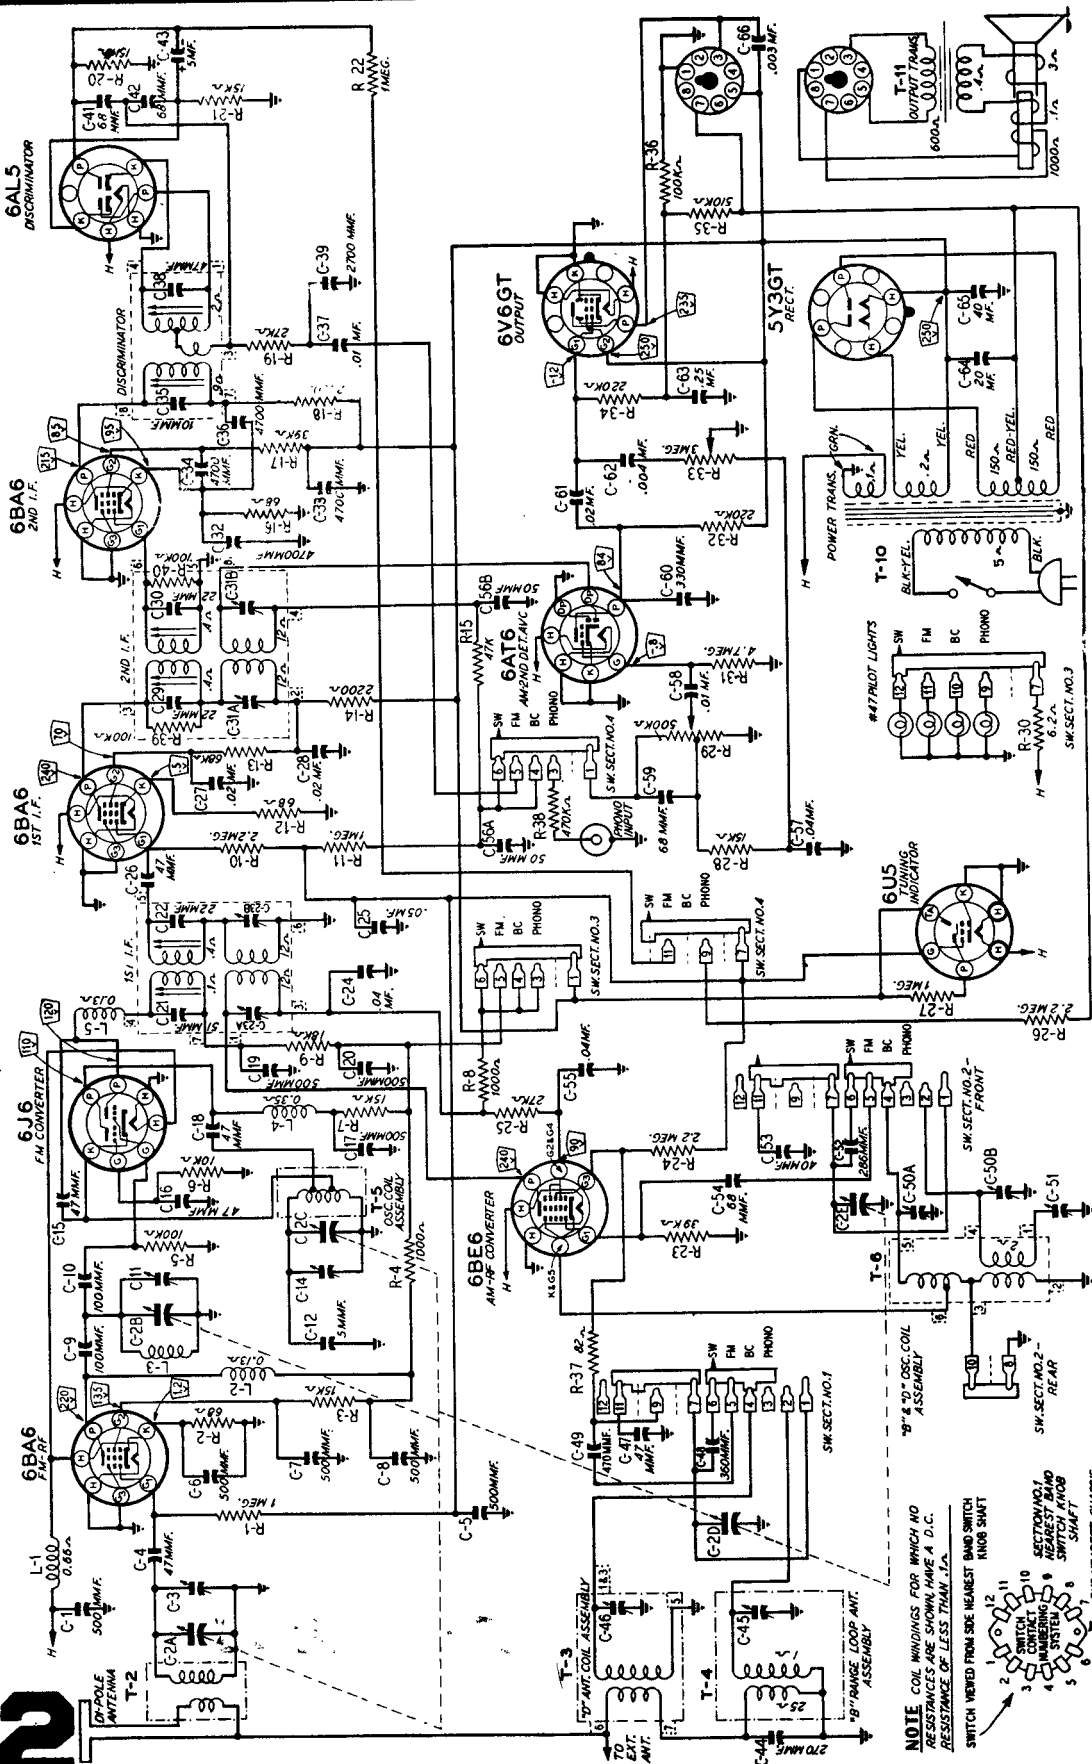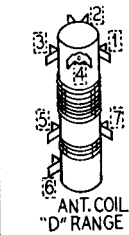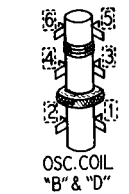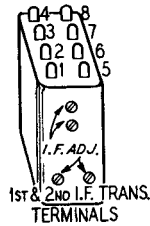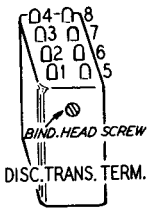

NOTE COIL WINDINGS FOR WHICH NO RESISTANCES ARE SHOWN HAVE A D.C. RESISTANCE OF LESS THAN 1.0 Ω. SWITCH VIEWED FROM SIDE NEAREST BAND SWITCH RING SHORT SECTION NO. 1 NEAREST BAND SWITCH RING SHORT SECTION NO. 2 NEAREST BAND SWITCH RING SHORT SECTION NO. 3 NEAREST BAND SWITCH RING SHORT SECTION NO. 4 NEAREST BAND SWITCH RING SHORT SECTION NO. 5 NEAREST BAND SWITCH RING SHORT SECTION NO. 6 NEAREST BAND SWITCH RING SHORT SECTION NO. 7 NEAREST BAND SWITCH RING SHORT SECTION NO. 8 NEAREST BAND SWITCH RING SHORT SECTION NO. 9 NEAREST BAND SWITCH RING SHORT SECTION NO. 10 NEAREST BAND SWITCH RING SHORT SECTION NO. 11 NEAREST BAND SWITCH RING SHORT SECTION NO. 12 NEAREST BAND SWITCH RING SHORT

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

WARDS *Airline*

MODEL 74WG-2705A

	SIGNAL GENERATOR		DUMMY ANTENNA	BAND SWITCH SETTING	CONDENSER SETTING	ADJUST TRIMMERS TO MAXIMUM
	FREQUENCY SETTING	CONNECTION AT RADIO				
I-F	455 kc	6BE6 Pin 7	.1 mf	Broadcast	Rotor Fully Open	2nd I-F C-31B & C-31A 1st I-F C-23B & C-23A
Broadcast	1620 kc	External ant. lead	200 mmf	Broadcast	Rotor Fully Open	Oscillator C-50B
	1400 kc	External antenna lead	200 mmf	Broadcast	Turn Rotor to Max. Output Set pointer to 1400 kc See Note A	Antenna C-45
	600 kc	External antenna lead	200 mmf	Broadcast	Turn Rotor to Max. Output and Rack See Note B	600 Kc padder C-51

Repeat above oscillator adjustments at 1620 and 600 KC until readjusting the oscillator Range B Trimmer C-50B causes no further improvement in output.

Short Wave	15.5 MC	External antenna lead	400 ohm	Short Wave	Rotor Fully Open	Oscillator C-50A
	15 MC	External antenna lead	400 ohm	Short Wave	Turn Rotor to Max. Output	Antenna C-46

Reassemble chassis in cabinet

Broadcast	1400 kc	External antenna lead	200 mmf	Broadcast	Turn Rotor to Max. Output	Antenna C-45
-----------	---------	-----------------------	---------	-----------	---------------------------	--------------

After each range is completed, repeat the procedure as a final check.
Note A—If the pointer is not at 1400 KC on the dial, reset pointer at the 1400 KC mark on the dial scale.

Note B—Turn the rotor back and forth and adjust the trimmer until the peak of greatest intensity is obtained.

Discriminator	10.7 MC Note B	6BA6 2nd I-F Pin 1 and Chassis	.01 mf	FM	Rotor to Full Open	Disc. Pri. ① Note A
	10.7 MC Note B	Same as above	.01 mf	FM	Same as above	Disc. Sec. Note C ②
	10.7 MC Note B	Same as above	.01 mf	FM	Same as above	Disc. Pri. ① Note A
	10.7 MC Note B	Same as above	.01 mf	FM	Same as above	Disc. Sec. Note C ②
I-F	10.7 MC	6BA6 1st I-F, Pin 1 and Chassis	.01 mf	FM	Same as above	2nd I-F Pri. Note A and D ③ 2nd I-F Sec. Note A and E ④
	10.7 MC	Connect to the FM-RF Gang Condenser terminal on underside of chassis	.01 mf	FM	Same as above	1st I-F Pri. ⑤ 1st I-F Sec. ⑥ Note A

Recheck I-F Adjustments in order given

R-F & Osc.	108.4	Disconnect dipole and connect generator to dipole terminals with resistor in series	300 ohms	FM	Rotor to full open	Oscillator C-14
	104.5	Same as above	300 ohms	FM	Tune Rotor for Max. AVC voltage	R.F. C-11
	104.5	Same as above	300 ohms	FM	Same as above	Ant. C-3

Recheck R-F and Osc. Adjustments in order given


Note A—Test Equipment connections are as given in the table. The zero center scale DC vacuum tube voltmeter is to be connected between chassis ground and the AVC line at the 1 megohm resistor R-22 and the band switch terminal (as shown in the illustration) for all adjustments except the discriminator secondary adjustment, for which see Note C.

Note B—A signal of .1 volt must be fed into the receiver for this adjustment.

Note C—Disconnect zero center DC vacuum tube voltmeter from AVC and reconnect to junction of R-19, C-37 and C-39 (See illustration). Adjust for zero voltage indication.

Note D—Before adjusting Pri. core connect 5000 ohm load resistor across the 2nd I.F. secondary terminals, (See illustration).


Note E—Disconnect 5000 ohm load resistor from secondary terminals and reconnect across the 2nd I.F. primary terminals, (See illustration).

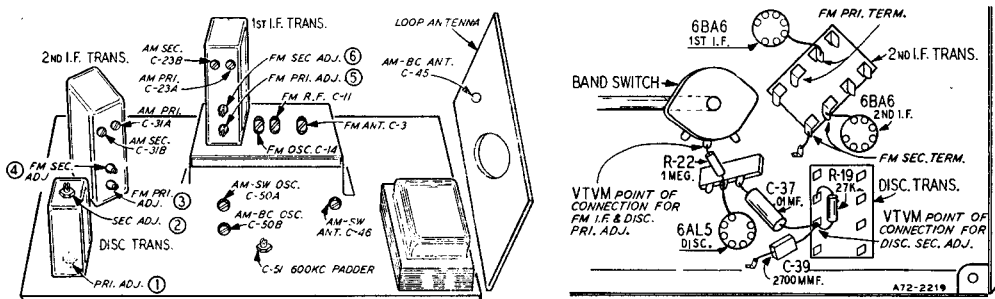

103

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

MOTOROLA
Model 67F61BN
Chassis HS-69

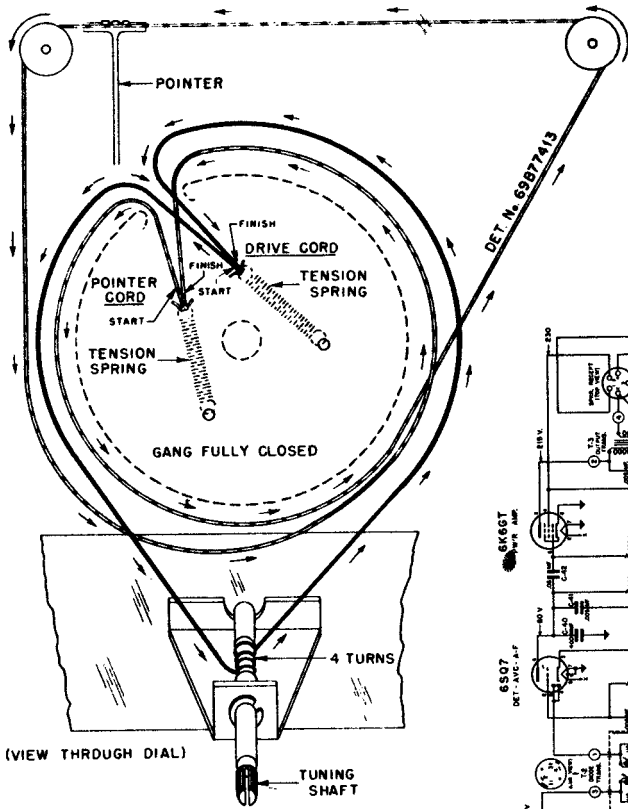

STRING DRIVE DETAIL

WAVEBAND SWITCH (K).

- "A" position - 532 to 1620 Kc.
- "B" position - 3.0 to 9.1 Mc.
- "C" position - 8.8 to 10.6 Mc.
- "D" position - 10.5 to 13.9 Mc.
- "E" position - 13.8 to 16.6 Mc.
- "F" position - 16.5 to 22.5 Mc.


Motorola

MODEL 67F61BN







CHASSIS HS-69

See page 105 for more details.

104

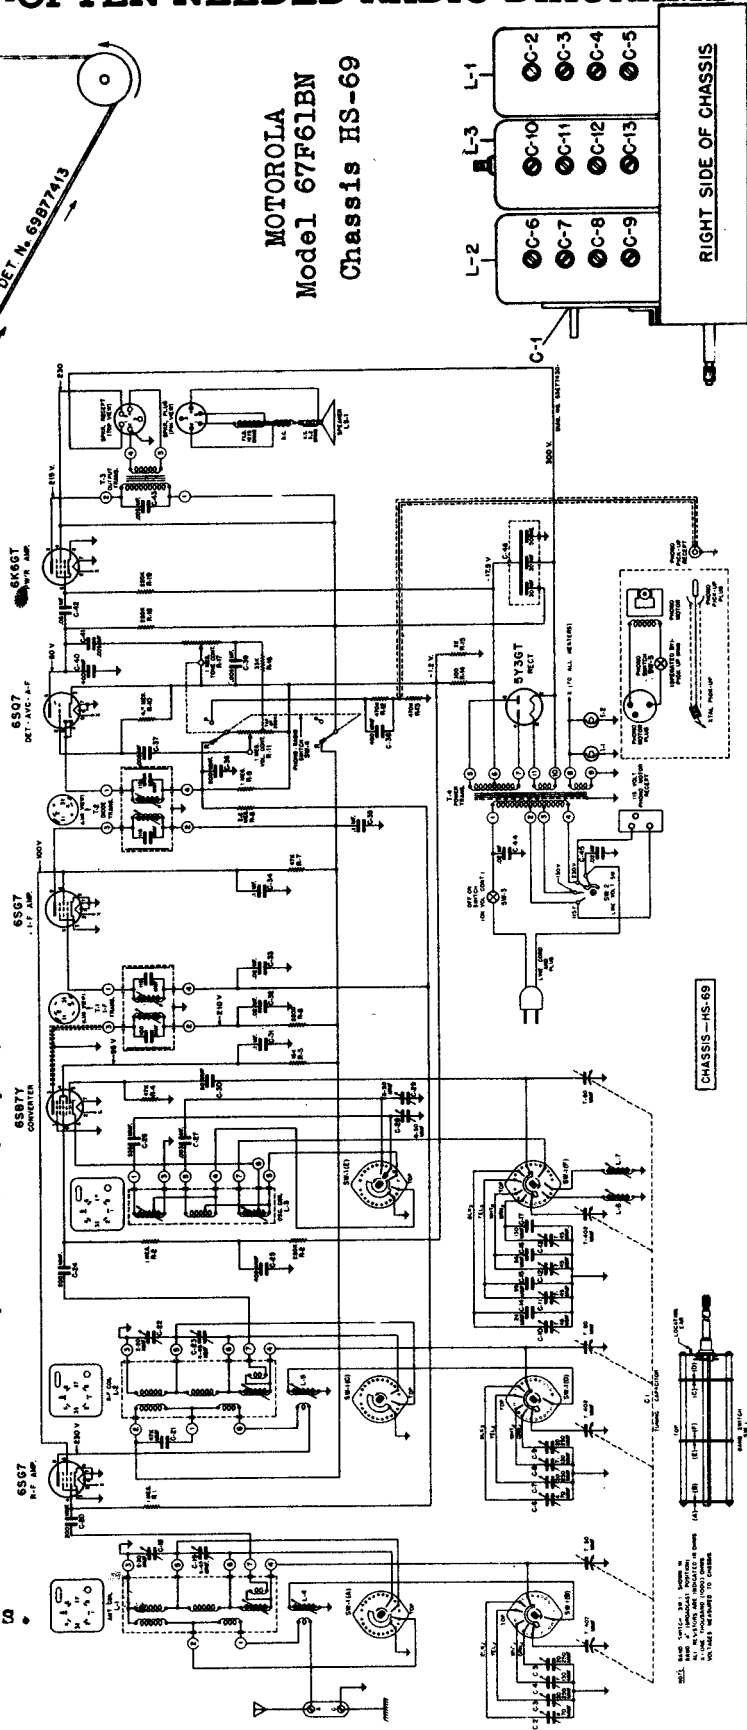

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

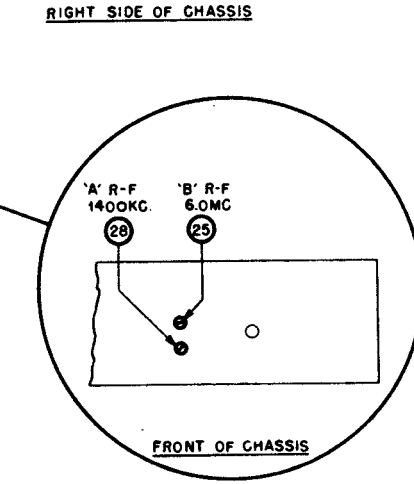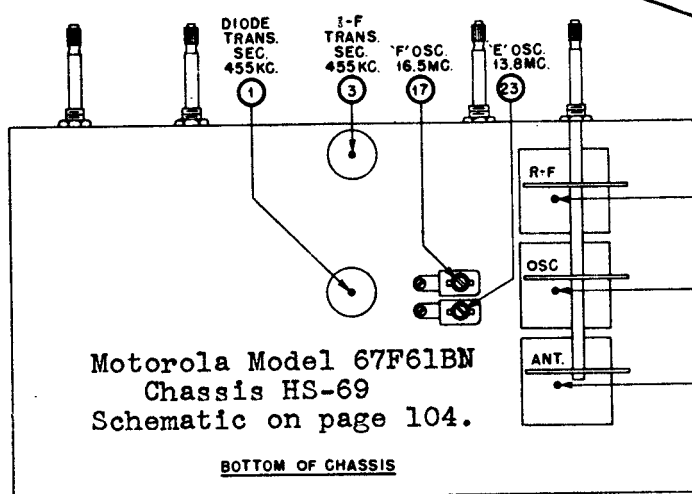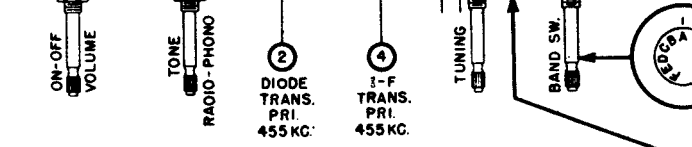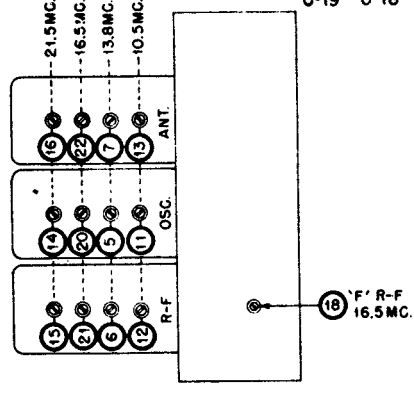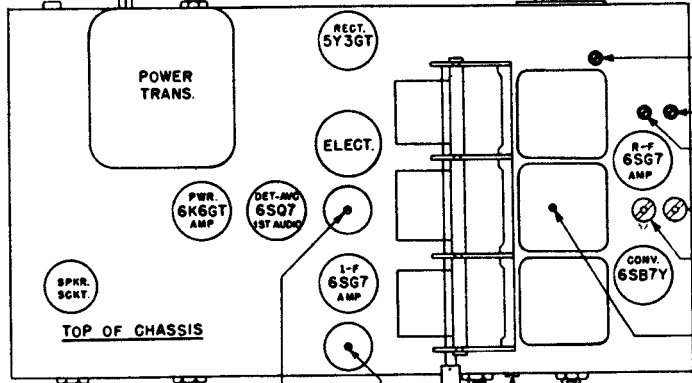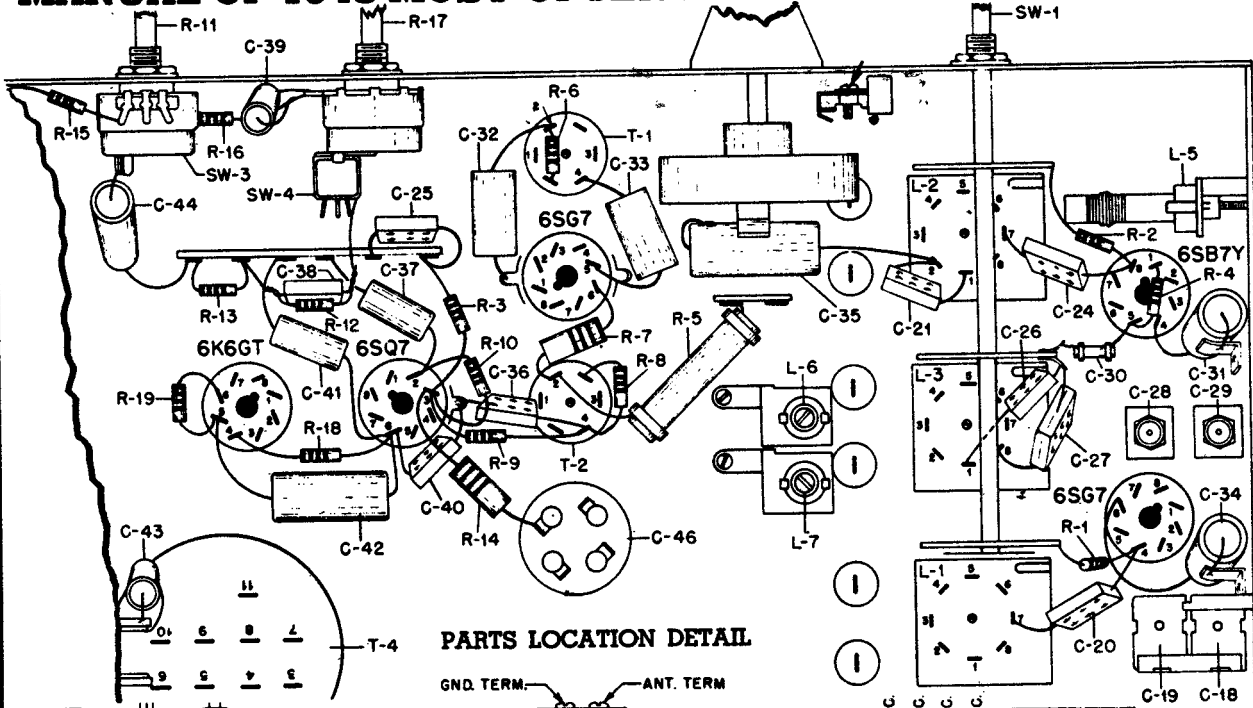

Motorola Model 67F61BN
Chassis HS-69
Schematic on page 104.

TUBE AND TRIMMER LOCATIONS

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

Motorola

CHASSIS
HS-60

MODELS 57X11 & 57X12

A low range output meter should be connected across the speaker voice coil. Set receiver volume control to maximum; for greatest accuracy keep output of receiver at approximately .05 watt throughout alignment by reducing generator output (not receiver volume control) as stages are brought into alignment. (.05 watt = .40 volt on output meter). The alignment tool should be of an insulated type.


If receiver is operated from AC line during alignment, it is suggested that an isolating transformer be used between receiver and power line. If no isolation transformer is used and hum is encountered during alignment, connect the ground side of the signal generator to B- instead of the receiver chassis.

STEP	DIAL SET TO	DUMMY	SIGNAL GENERATOR CONNECTED TO	SIGNAL GENERATOR SET TO	ADJUST TRIMMER OR CORE	REMARKS
IF ALIGNMENT						
1.	Gang fully opened	.1 mf.	Osc-Mod grid *	455 Kc	1,2,3 & 4	Adjust for maximum
RF ALIGNMENT						
2.	1600 Kc **	-	Radiation loop ***	1600 Kc	5	This sets osc. to dial scale
3.	1400 Kc	-	Radiation loop ***	1400 Kc	6	Tune signal for max. with receiver tuning knob, then peak trimmer 6.


* A convenient point is the stator of the antenna section of the tuning capacitor.

** Close gang fully and set pointer to calibration mark at left hand side of dial background; then set pointer to 1600 Kc by turning tuning knob till pointer lines up with right hand calibration mark.

*** Connect output of signal generator to a 5" diameter, 3 turn loop and bring loop close enough to receiver loop to obtain output of 50 milliwatts (.40V) on output meter. Vary distance between loops to maintain this output during alignment. Minimum distance between loops should never be less than 12".

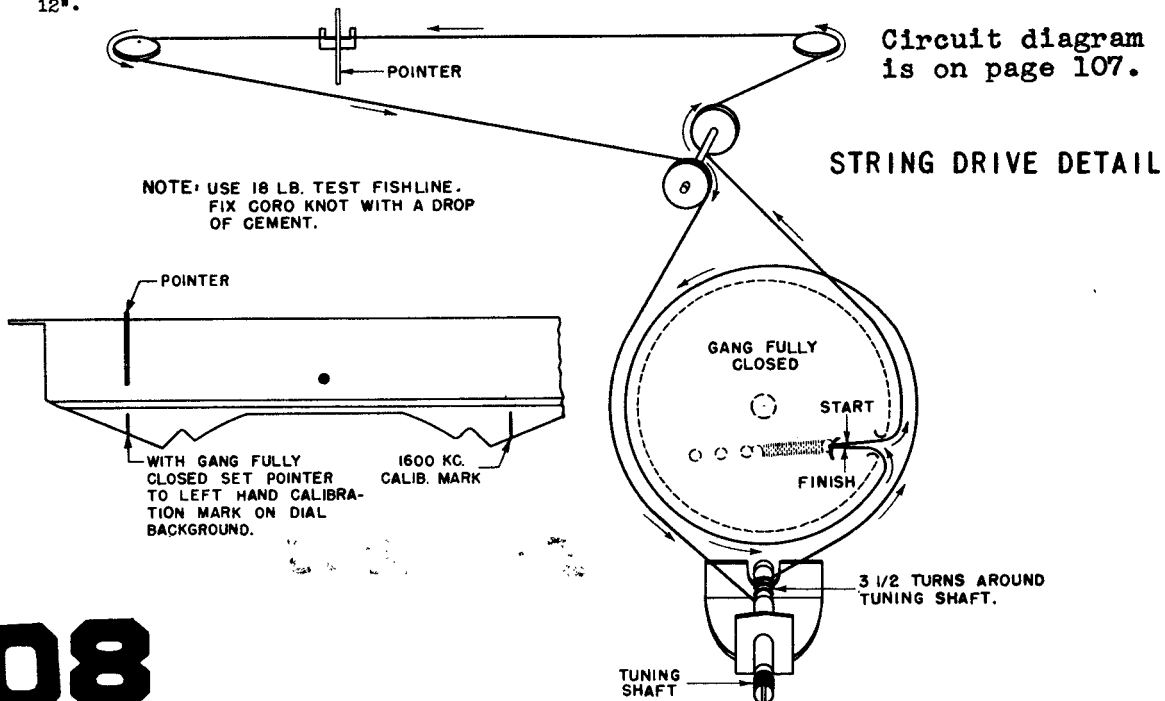

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

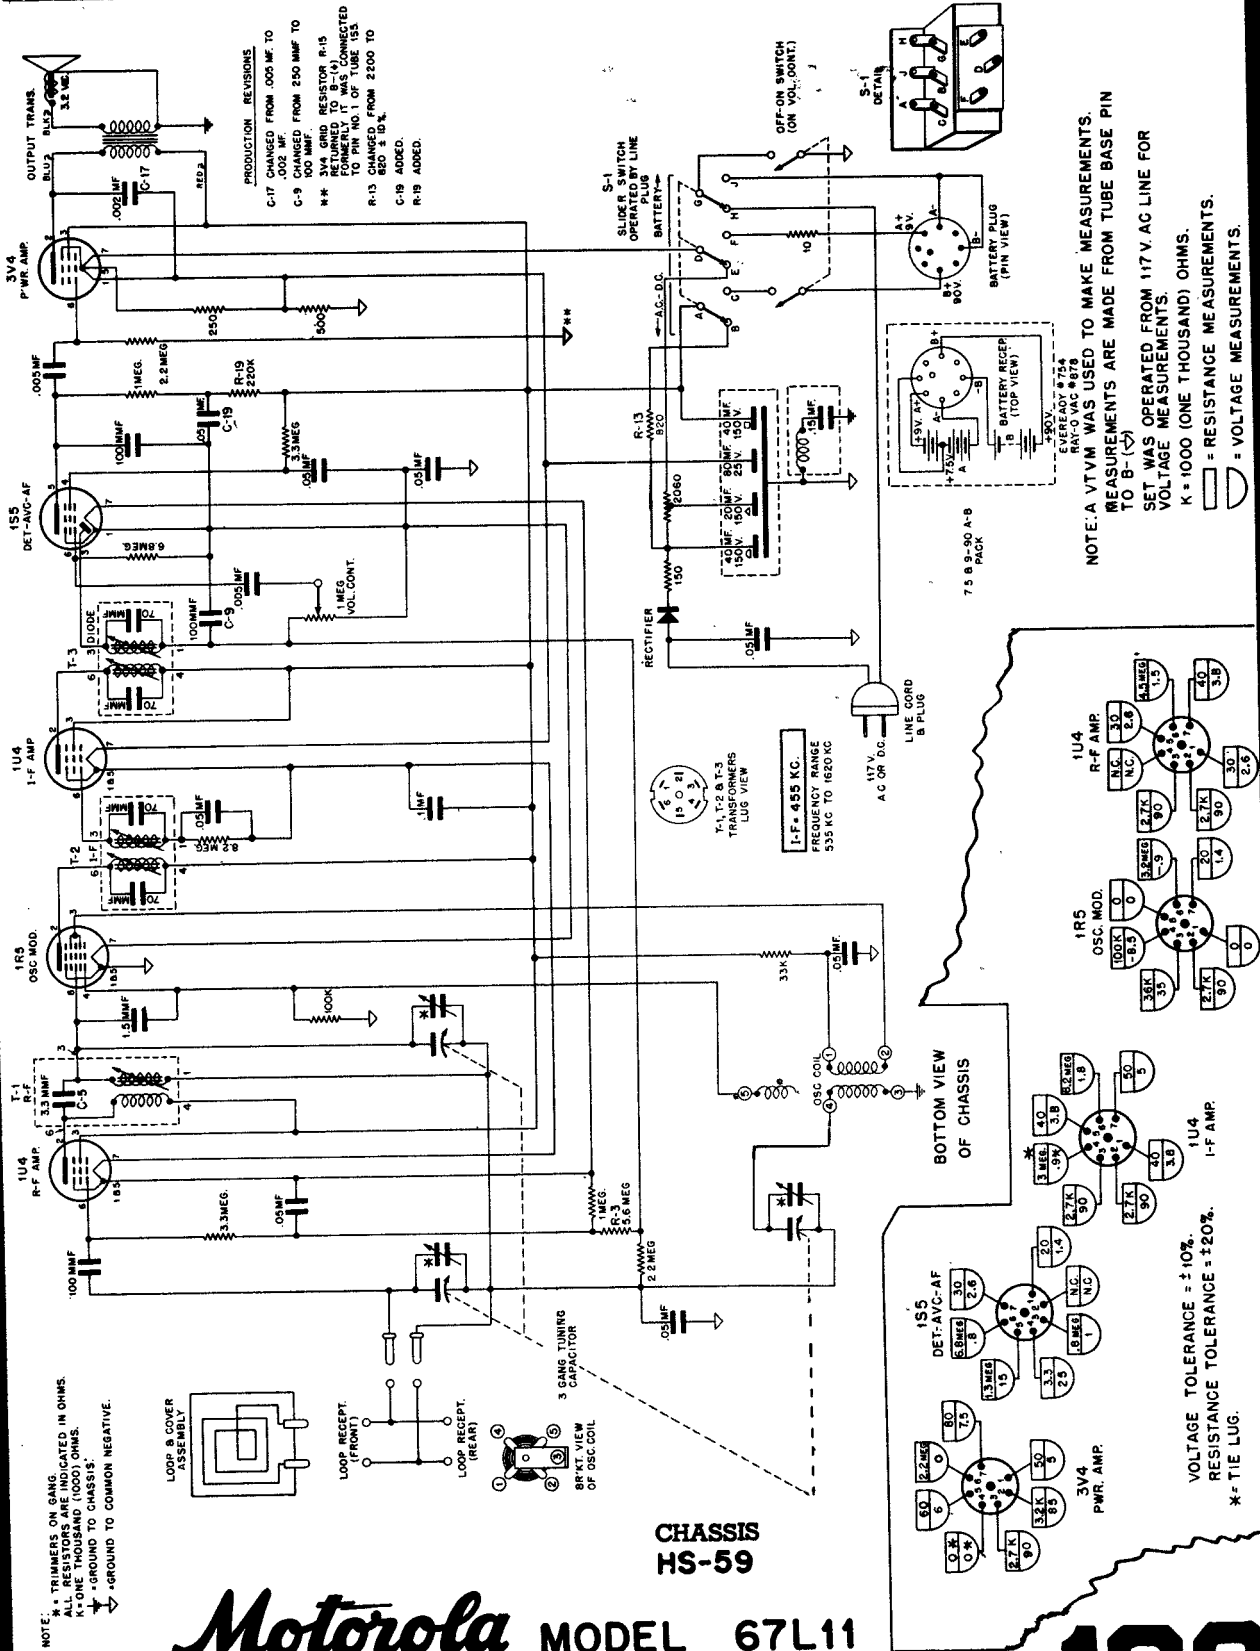

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

MOTOROLA INC.

Model 67L11, Chassis HS-59
Schematic on page 109.

R.F. COIL. The inductance of this coil is set at time of manufacture by adjusting the iron core. No resetting of this core should be made unless it has been tampered with. If so, readjustment can be made by proceeding as follows:

Normally, alignment can be made with trimmers 5, 6 and 7. However, if range of these trimmers is insufficient to obtain peak, adjustment can be made with trimmers 5A, 6A and 7A.


Tune in 600 Kc signal and peak Padder Adj. (8). Next tune in 1400 Kc signal and peak trimmer (6). Repeat both adjustments until maximum response is obtained at both ends; the last adjustment should be trimmer (6).

STEP	DIAL SET TO	DUMMY	SIGNAL GENERATOR CONNECTED TO	SIGNAL GENERATOR SET TO	ADJUST TRIMMER OR CORE	REMARKS
IF ALIGNMENT						
1.	Gang fully opened.	.1 mf	OSC-MOD grid*	455 Kc	1,2,3 & 4	Adjust for maximum output
RF ALIGNMENT						
2.	1800 Kc**	-	Radiation loop***	1800 Kc	5	This sets osc. to dial scale.
3.	1400 Kc	-	Radiation loop***	1400 Kc	6 & 7	Tune signal for max. with receiver tuning knob, then peak trimmers 6 & 7.
4.	1400 Kc	-	Radiation loop***	1400 Kc	7	With chassis assembled into cabinet, repeak antenna trimmer.


* A convenient point is the stator of the tuning capacitor.

** Close gang fully and set pointer to calibration mark at left hand side of dial background, then set to 1800 Kc by setting pointer at right hand calibration mark.


*** Connect output of signal generator to a 5" diameter, 3 turn loop and bring loop close enough to receiver loop to obtain output of 50 milliwatts (.40V) on output meter. Vary distance between loops to maintain this output during alignment. Minimum distance between loops should never be less than 12".

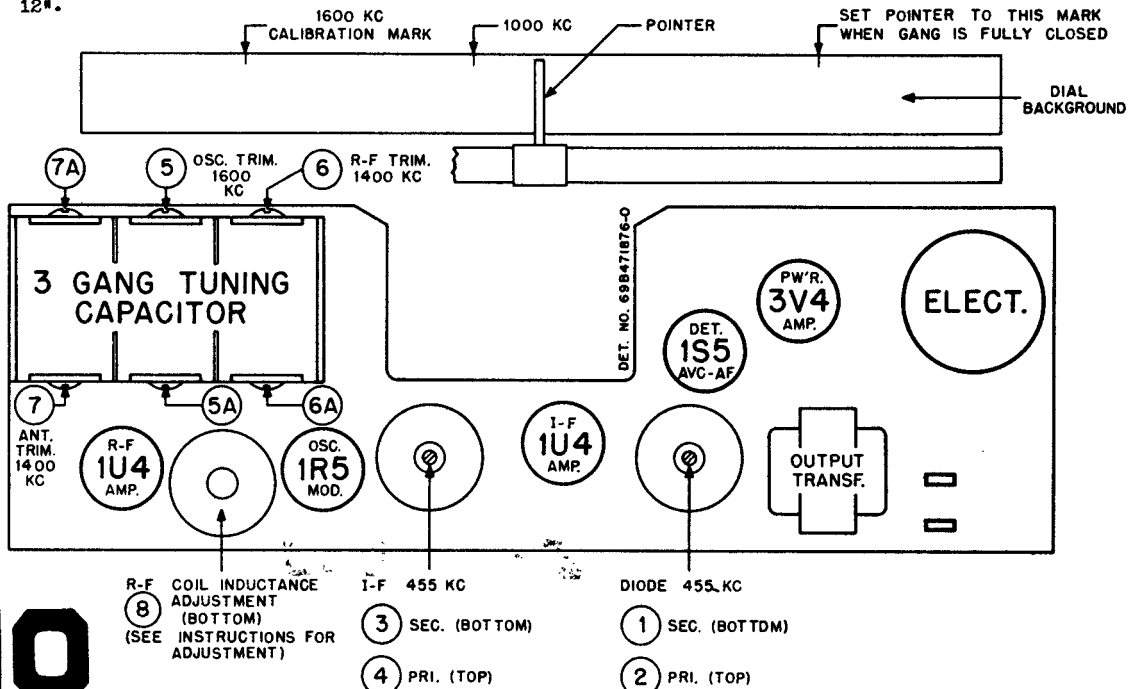

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS MOTOROLA INC.

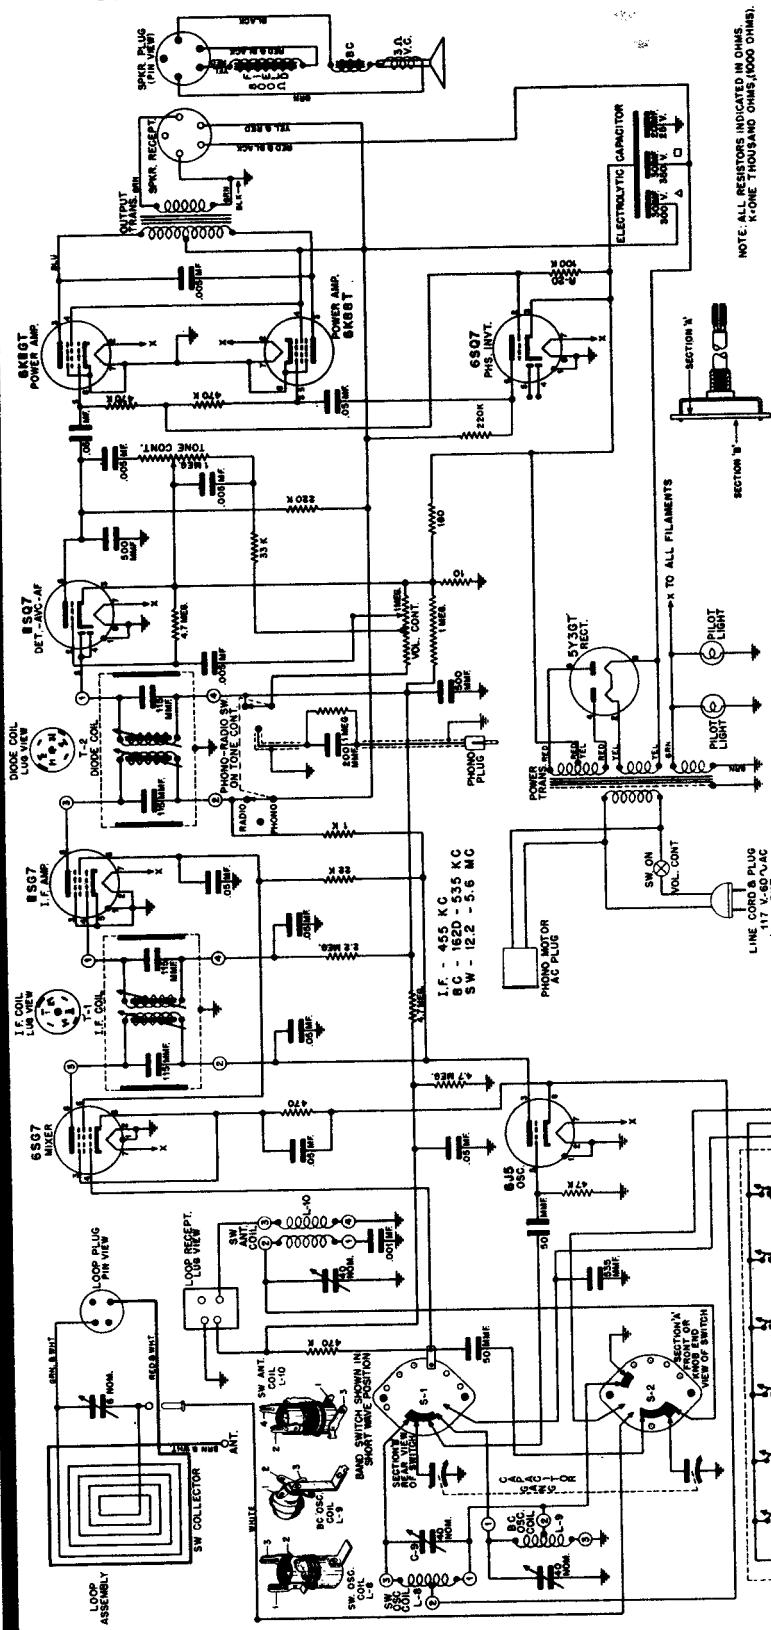

NOTE: ALL RESISTORS INDICATED IN OHMS.
K=ONE THOUSAND OHMS,(1000 OHMS).

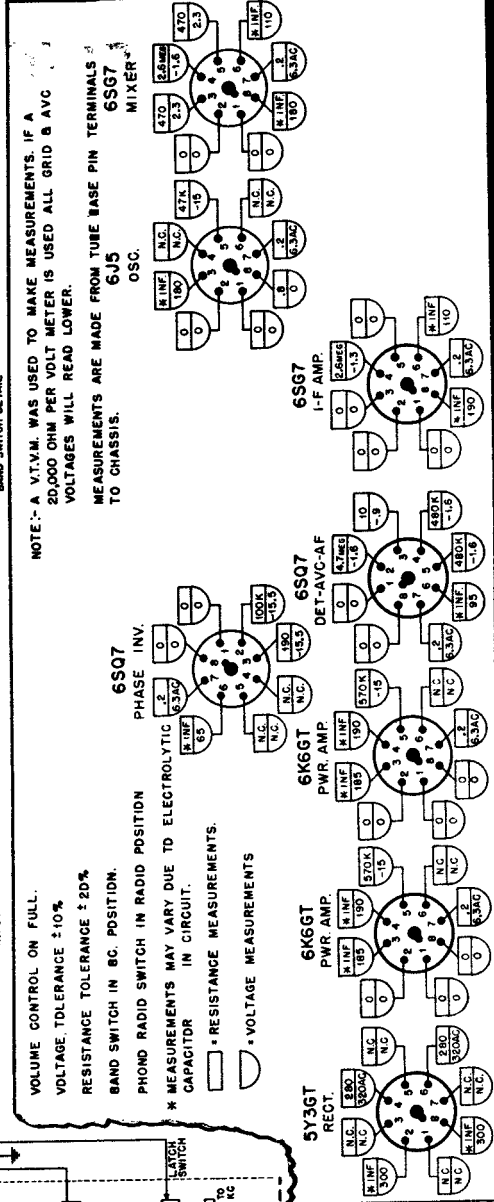


NOTE: A V.T.V.M. WAS USED TO MAKE MEASUREMENTS. IF A
20,000 OHM PER VOLT METER IS USED ALL GRID & AVC
VOLTAGES WILL READ LOWER.

MEASUREMENTS ARE MADE FROM TUBE BASE PIN TERMINALS
TO CHASSIS.

VOLUME CONTROL ON FULL.
VOLTAGE TOLERANCE $\pm 10\%$
RESISTANCE TOLERANCE $\pm 20\%$
BAND SWITCH IN BC POSITION.
PHONO RADIO SWITCH IN RADIO POSITION
* MEASUREMENTS MAY VARY DUE TO ELECTROLYTIC
CAPACITOR IN CIRCUIT.

RESISTANCE MEASUREMENTS
VOLTAGE MEASUREMENTS

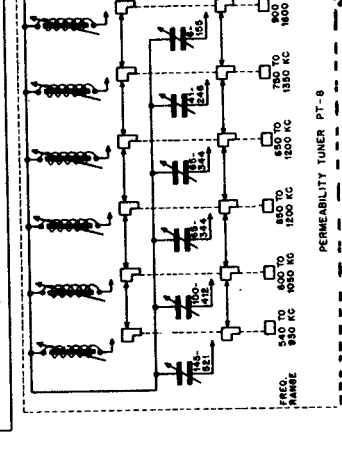

Motorola Model 85F21
Chassis HS-22
(Models 65F21, 85K21,
Chassis HS-26, HS-52,
are similar).


MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

Motorola

Model 85F21
Chassis HS-22

(Schematic on
previous page)


ALIGNMENT

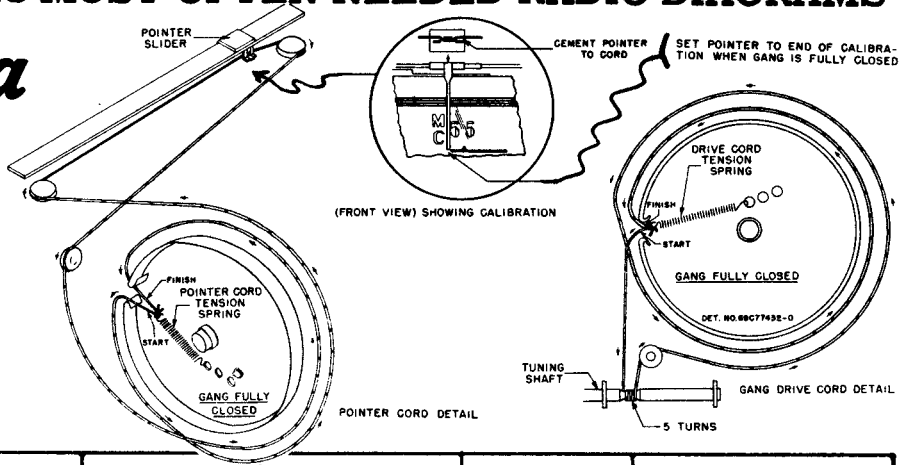

Step	Gang Setting	Band	Dummy	Generator Connected to	Generator Frequency	Trimmer or Core	Remarks
1	Fully opened	B. C	.1mf	Mixer grid & chassis	455 kc	1, 2, 3, & 4	Adjust I. F. & Diode trans. for maximum
2	Fully opened	B. C	-	Radiation loop*	1620 kc	5	Set oscillator to dial scale
3	1400 KC	B. C	-	Radiation loop*	1400 kc	6 †	Tune signal generator for max. on output meter, then peak trimmer.
4	12.2 MC	SW	50mmf	Short wave antenna terminal	12.2 Mc	7	Set osc. to dial scale.
5	11.5 MC	SW	50mmf	Short wave antenna terminal	11.5 Mc	8	Tune signal generator for max. on output meter, then peak trimmer.


† Repeat after chassis and loop are installed in cabinet.

* Connect output of signal generator to a 5" diameter, 3 turn loop. With volume on full, bring loop close enough to receiver until output of 50 milliwatts is obtained. (.38V on output meter). Vary distance between generator and receiver loops to maintain this output during alignment. Minimum distance between loops should never be less than 12".

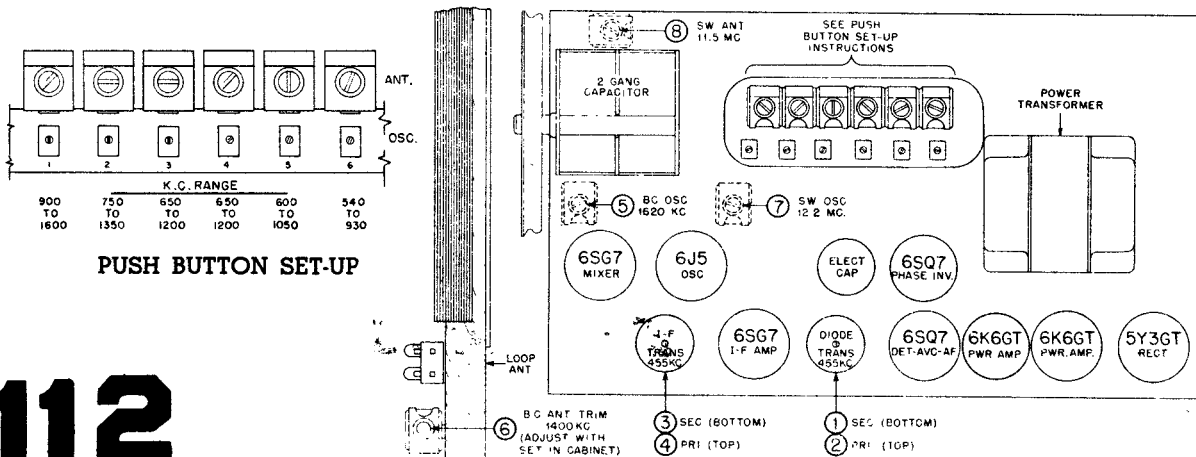


MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS


Motorola Model CT6 for Chevrolet (Many other Motorola Auto Sets for other cars are similar in some respects).

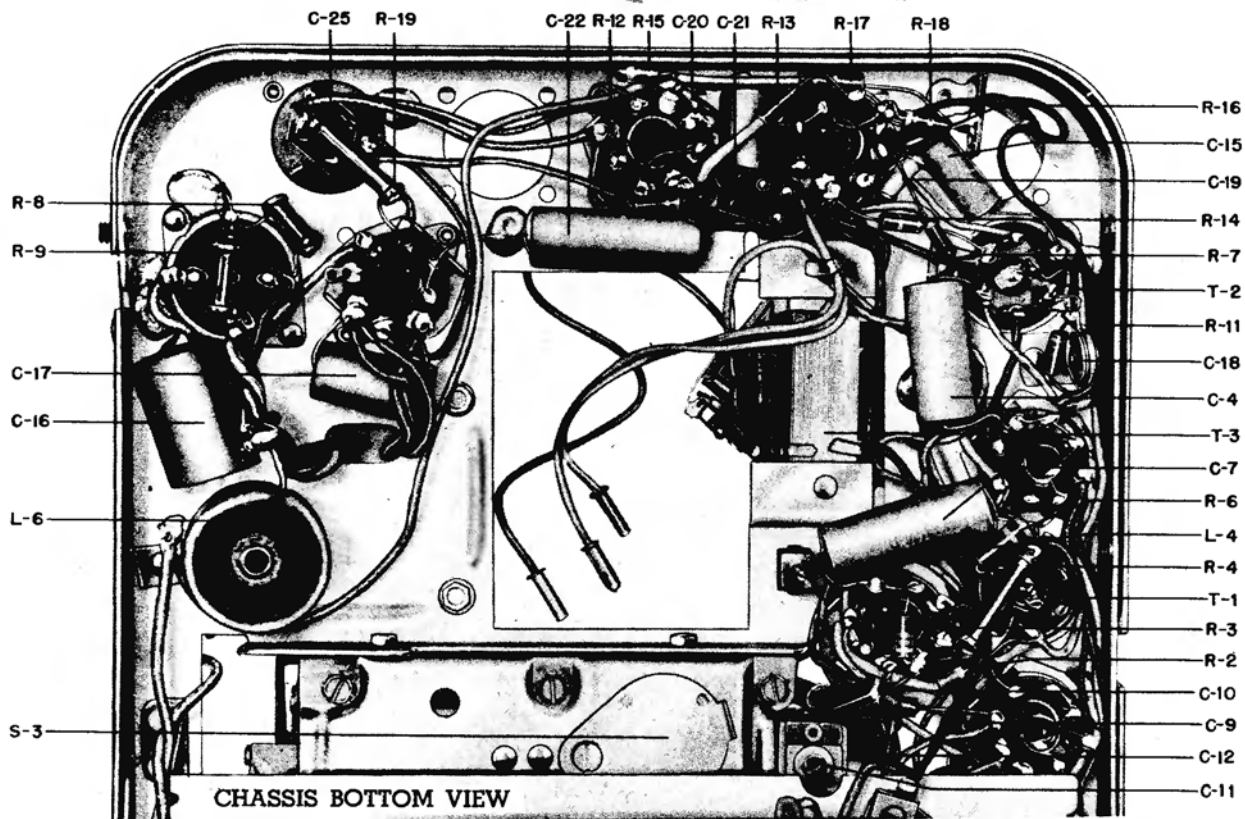

CHASSIS BOTTOM VIEW

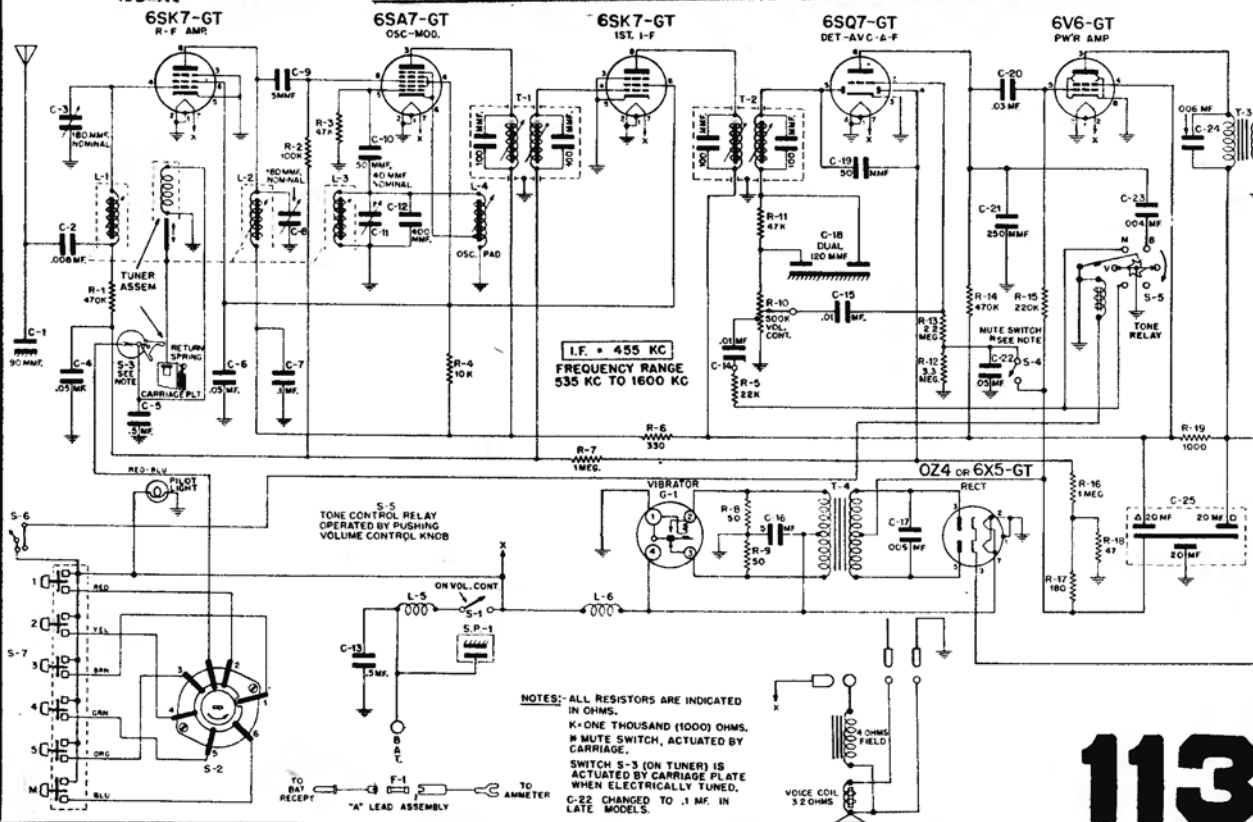

Motorola Auto Radio
Model CT6 for Chevrolet
Schematic on page 113.

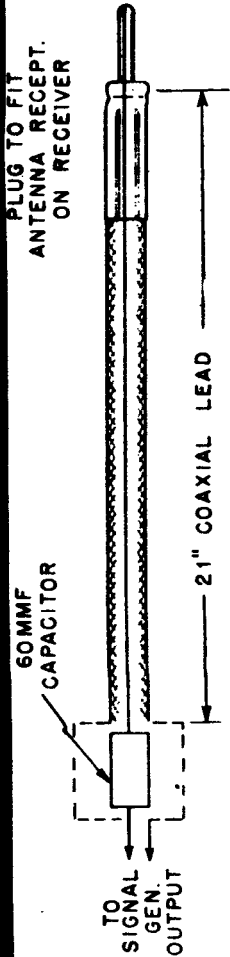

DUMMY ANTENNA CONSTRUCTION DETAIL

STEP	TUNER POSITION SET TO	DUMMY ANTENNA	SIGNAL GENERATOR LEAD CONNECTED TO	SIG. GEN. SET AT	ADJUST FOR PEAK ON OUTPUT METER
1.	High frequency end (cores out)	.1 mfd. at Sig. Gen.	Osc. Mod grid (#5 pin)	455 Kc	#1 and 2 P & S in T-1 #3 and 4 P & S in T-2
2.	High frequency end, tuning shaft against stop. Cores should be set to project 1-1/8" from cans.*	60 mfd. at Sig. Gen. in series with 21" long coax lead	Antenna Receptacle	1600 Kc	#5 Osc. coil trimmer #6 R.F. coil trimmer #7 Ant. coil trimmer
3.	EXACTLY one full turn in from high frequency end. Use knob set screw as an indicator. Start measuring turn the moment tuner carriage starts moving inward.*	"	"	1425 Kc	#8 Osc. coil core #9 R.F. coil core #10 Ant. coil core
4.	EXACTLY four more full turns in (as indicated by knob setscrew)	"	"	Power turned Off.	#11 Osc. Pad. core for maximum noise
<p>NOTE: If oscillator padder core adjustment is too far off, repeat alignment procedure, steps 2, 3, and 4. It may be necessary to repeat alignment more than once if padder adjustment has been indiscriminately tampered with.</p>					
5.	Install assembled receiver in car and peak antenna trimmer (#7) to car antenna. Extend antenna to its full height. Tune set to a spot around 1400 kc that is free of stations, and adjust antenna trimmer (#7) for maximum noise.				

* For greater accuracy in setting tuner to alignment frequencies, use gauge (Motorola Part No. 66A76825)


MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

MOTOROLA Model CT6 for Chevrolet (See also pages 113, 114)

For alignment refer to chart on page 114, and trimmer location diagrams below. Use special tool, Motorola part No. 66A76278, for adjusting tuner cores. A small screwdriver will do for I.F. and R.F. alignment. Use dummy antenna as described on page 114. A low range output meter is required. Adjustment points shown below will be exposed after front and rear covers are removed. Allow receiver to warm up, press "M" button to place automatic tuner in manual tuning position. Volume control at maximum, tone control to voice position (high position).

Pointer and Drive Cord Replacement

Remove (1) the front cover, (2) the dial background, and (3) push-button assembly. Four screws hold it in position. Do not unsolder any wire leads, just lay the push-button assembly on top of the set. The pointer and drive cords are now fully exposed.

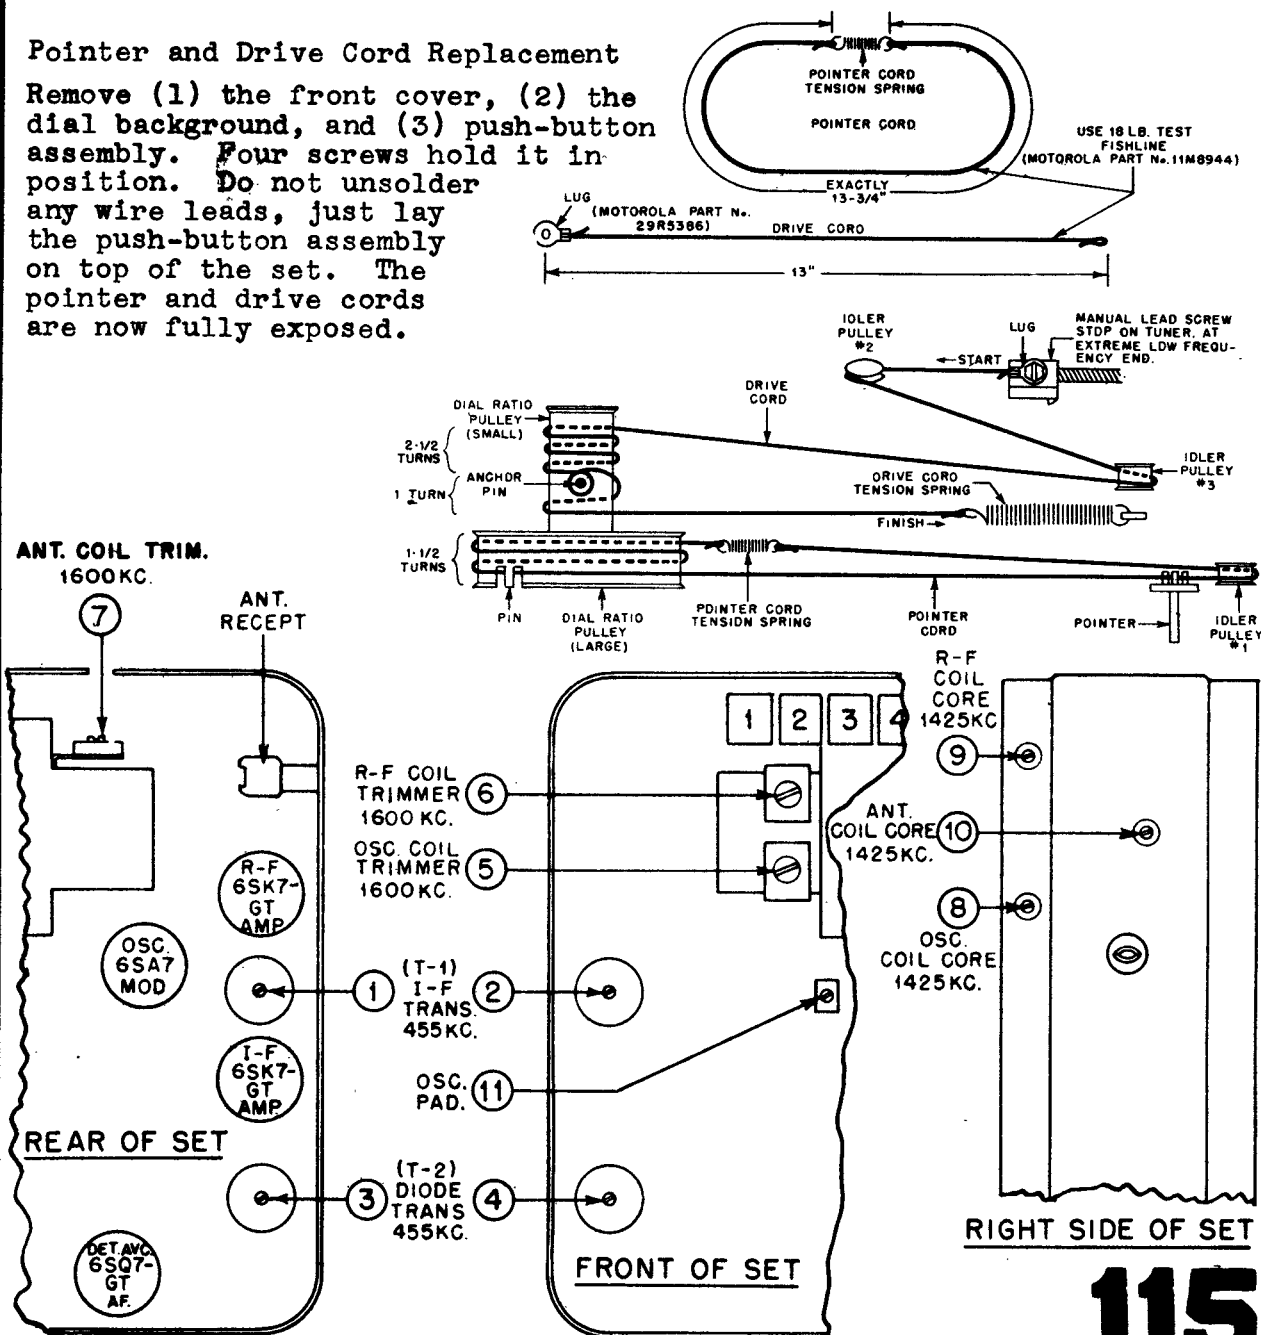



Motorola

SOLENOID TUNER ST-56

MOTOROLA INC.

Solenoid Tuners ST-56 (ST-56 - CR6, ST-56 - FD6 etc.,) are used in 1946 and 1947 Motorola automatic tuning specific auto receivers.

Fundamentally, all ST-56 tuners are the same except for the manual tuning shaft, dial cord pulleys and pushbutton switch lead lengths. These variations are brought about by mechanical differences between the specific receivers in which this tuner is used. The receiver model number is included in the tuner model number to identify which specific receiver the tuner will fit, i.e., ST-56-CR7, ST-56-BK6 etc.

This is a 3 gang permeability type tuner operated by a solenoid. Five pre-set and one manual tuning positions are provided. The frequency range is 535 to 1600 kc. The pre-set positions can be set to any frequency within this range.

The tuner is designed to operate satisfactorily with 4-1/2 to 7.3 volts input. Before attempting any service work on a tuner that operates too slowly or one that doesn't operate at all, check the battery voltage directly at the receiver spark plate. Normally, this voltage is 6.3 volts. At the moment any pushbutton is pressed, the voltage at the spark plate should not drop to less than 4-1/2 volts. If the voltage is less than 4-1/2, it is an indication of poor wiring between the car battery and receiver or a defective car battery.

This tuner depends on "dash-pot" action between the plunger and the solenoid for

proper operation. When the fit between the plunger and solenoid is too tight, the air can't get out fast enough. The result is a slow or sluggish operating tuner. All late production tuners have an adjustable air release in the solenoid end plate. Early production tuners that do not have this adjustable air release and operate sluggishly, due to dash-pot action, should have the solenoid end plate replaced with an end plate having the adjustable air release. Order part number 1X76556.

The tuner solenoid coil must be in a horizontal or near horizontal position or the tuner will not operate properly. If it is operated with the coil in a vertical position, the solenoid and carriage return spring may not be strong enough to operate tuner.

THEORY OF OPERATION

NOTE: Throughout this paragraph, it is suggested that constant reference be made to Figure 1.

When any push-button is pressed, current flows through the solenoid coil, causing the plunger to pull into the coil. Near the end of the plunger travel, through a ratchet mechanism inside the plunger, the selector switch shaft is rotated 60°, moving the selector switch and stop plate to their new position.

An instant later, the solenoid switch is opened breaking solenoid current and the carriage return spring then pulls the plunger out, closing the solenoid switch again. If the selector switch is now resting at the position selected by the push-button (cut away section of selector switch resting in front of contact selected by push-button), the solenoid plunger will continue to be pulled out until the stop plate is resting on the selected lead screw stop. In the event the selector switch

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

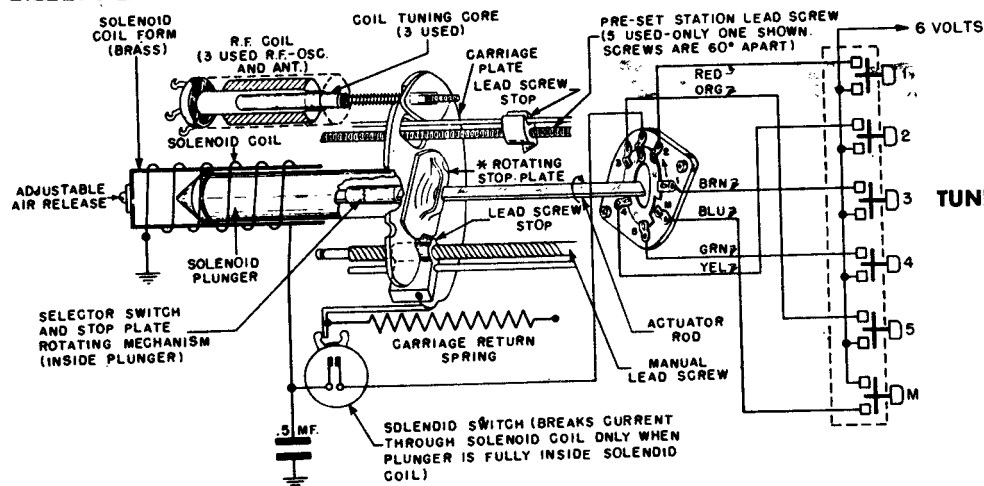


FIGURE 1.

TUNER FUNCTIONAL DETAIL

* SELECTOR SWITCH AND STOP PLATE ROTATE 60° (1/6 TURN) EACH TIME SOLENOID IS ACTUATED.

is not resting in the position selected by the push button when the solenoid plunger is on its return trip, the moment the plunger moves out far enough to actuate the solenoid switch, current will again flow through solenoid causing the plunger to be pulled in again. The plungers inward motion again rotates the stop plate and selector switch through another 60°. This last operation is repeated automatically until the selector switch comes to rest at the position selected by the push-button, at which time the solenoid circuit is opened and the plunger moves out until the stop plate is resting on the selected lead screw stop. The stops are adjusted to the desired positions during the station setting up procedure, through the set-up gear train assembly.

Refer to Figure 2 for mechanics behind station setting-up mechanism detail.

When the button on which a station is to be set up is first pressed, the tuner operates and the stop plate comes to rest against the selected lead screw stop. The pressure of the stop plate against the lead screw stop moves the lead screw forward until its shoulder rests against the tuner and plate. The square end of the lead screw does not engage in the square hole of the set-up gear until the set-up button is pushed in or the station set-up knob is turned (whichever is applicable). A latch on one end of the detent lever engages the gear lever, holding the set-up gear train in contact with the selected lead screw. Now the selected lead screw stop can be moved on its lead screw by turning the manual tuning shaft. None of the other lead screws turn because the stop plate is not resting against them. After the button is set up, pressing any other button will unlatch the gear lever and disengage the lead screw from the set-up gear. See Figure 2.

Since the coil tuning iron cores are attached to the carriage plate and move in unison with the plunger, the point at which they are brought to a stop (by means of the lead screw stop) determines the frequency to which the coils are tuned.

Dash-pot action between the plunger and the solenoid determines the tuner operating speed. The rate at which air is allowed to enter or escape through the adjustable air release determines the speed of the plunger. See Figure 1.

TO REMOVE TUNER FROM CHASSIS

Should it become necessary to remove the solenoid tuner from the receiver chassis, proceed as follows:

1. Remove the covers from the set, completely exposing the chassis.
2. Mark all leads connecting tuner to receiver.
3. Disconnect all leads connecting tuner to receiver. Do not unsolder leads from the tuner selector switch; unsolder them at the push-switch. The .5 mf paper capacitor need not be removed.
4. The tuner is held to the chassis by self-tapping screws driven into the sides of the tuner. Do not remove any other screws.

The speed at which the tuner operates is governed by dash-pot action of the solenoid plunger within the closed solenoid coil form. The rate at which air is allowed to enter or escape determines the speed of the plunger.

(Motorola Tuner ST-56)


117

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

AIR RELEASE ADJUSTMENT

An adjustable air release is provided on all late production tuners. See Fig. 3. To adjust, loosen the screw and move the eccentric washer which covers the air release hole to expose or cover more of the air release hole

as required. Early production tuners did not have a solenoid end plate with an adjustable air release. If such a tuner is slow or sluggish because of too much "daah-pot" action, replace the solenoid end plate with the adjustable air release type. Order part number 1X76556.

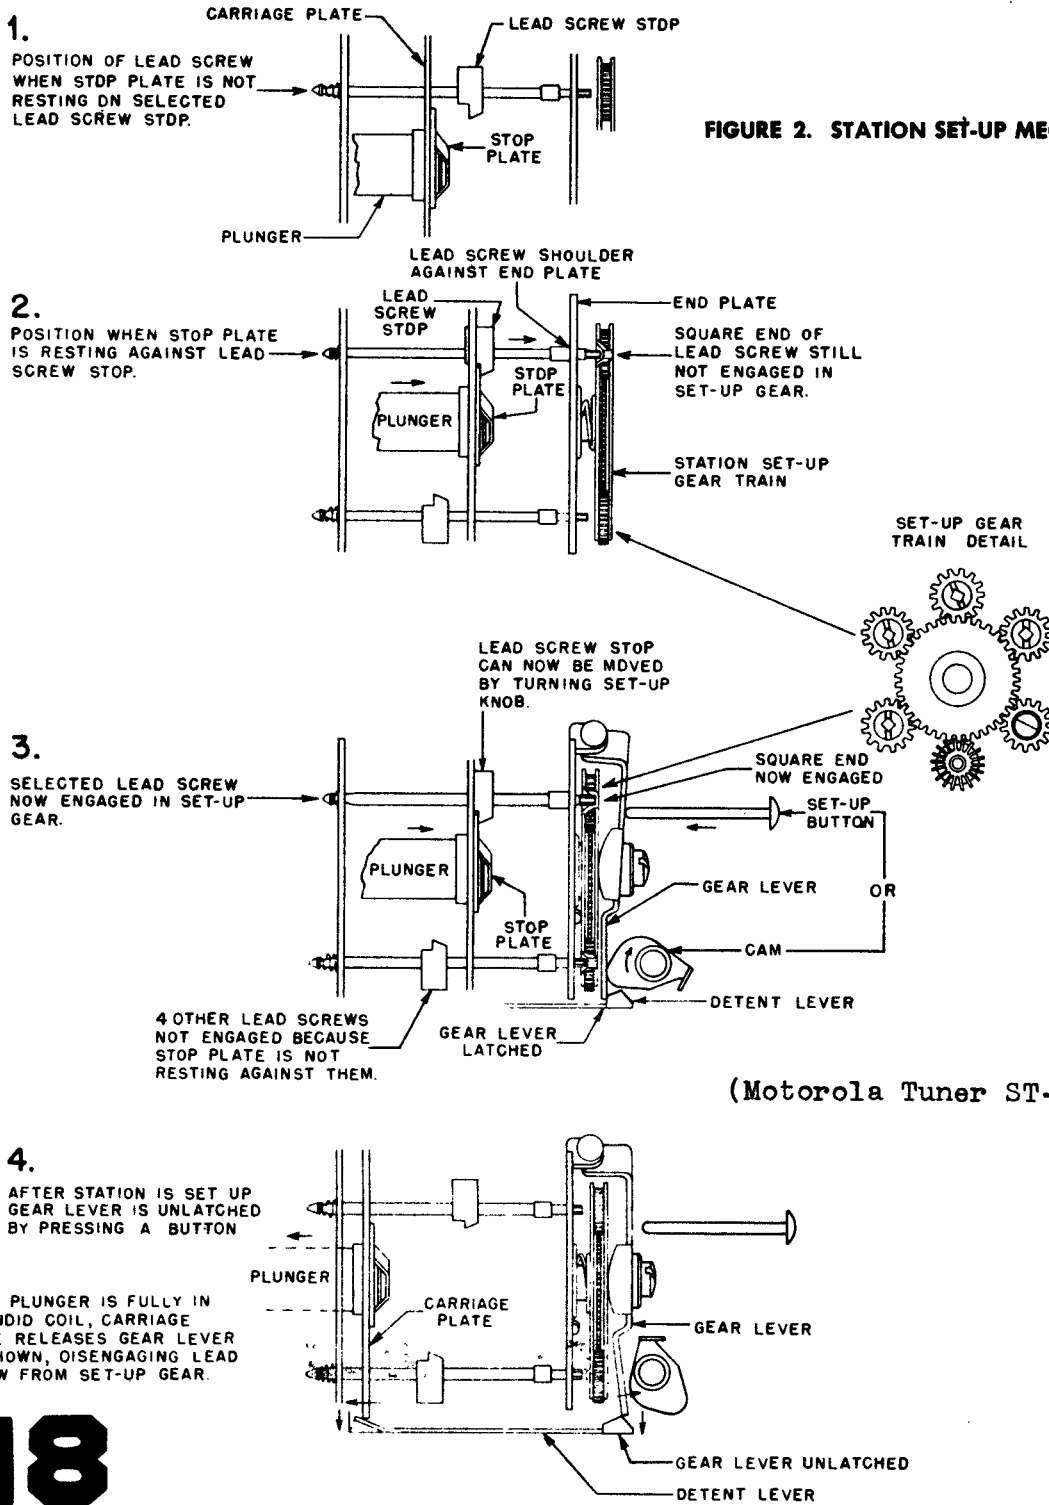

(Motorola Tuner ST-56)

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

END VIEW OF TUNER

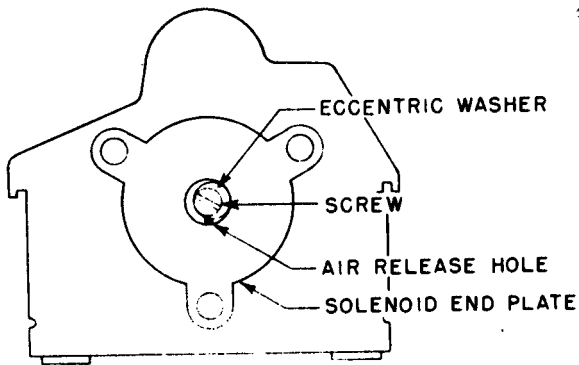


FIGURE 3. AIR RELEASE ADJUSTMENT

1. If tuner operates too slowly, open the air release hole. Open it only far enough to secure reliable operation. Too little "dash-pot" action (air release open too much) may cause the plunger to hammer and sometimes even to make the tuner operate continuously due to the selector switch rotor being turned so rapidly as to overshoot its contacts.
2. If the tuner operates too rapidly increase dash-pot action by closing the air release hole slightly. Close it only enough to eliminate hammering.


PLUNGER RATCHET ADJUSTMENT

The plunger ratchet mechanism in Figure 4. This mechanism rotates the actuator rod which, in turn, rotates the carriage stop plate and the selector switch 60° for each inward motion of the plunger.


If this adjustment is incorrect, tuner may operate continuously once current is applied.

Correct ratchet adjustment is indicated when $1/64$ to $1/32$ " clearance is observed between selector switch contacts and the selector switch rotor as shown in Figure 5. Slowly work the plunger by hand and observe clearance at each contact position. If the average clearance is not $1/64$ to $1/32$ ", correction can be made by loosening ratchet adjustment setscrew and turning actuator rod by hand until correct clearance is observed.

Before ratchet adjustment setscrew is finally tightened, push fixed ratchet $1/32$ " back into plunger. This increases spring tension against rotating ratchet, thus insuring more positive operation.

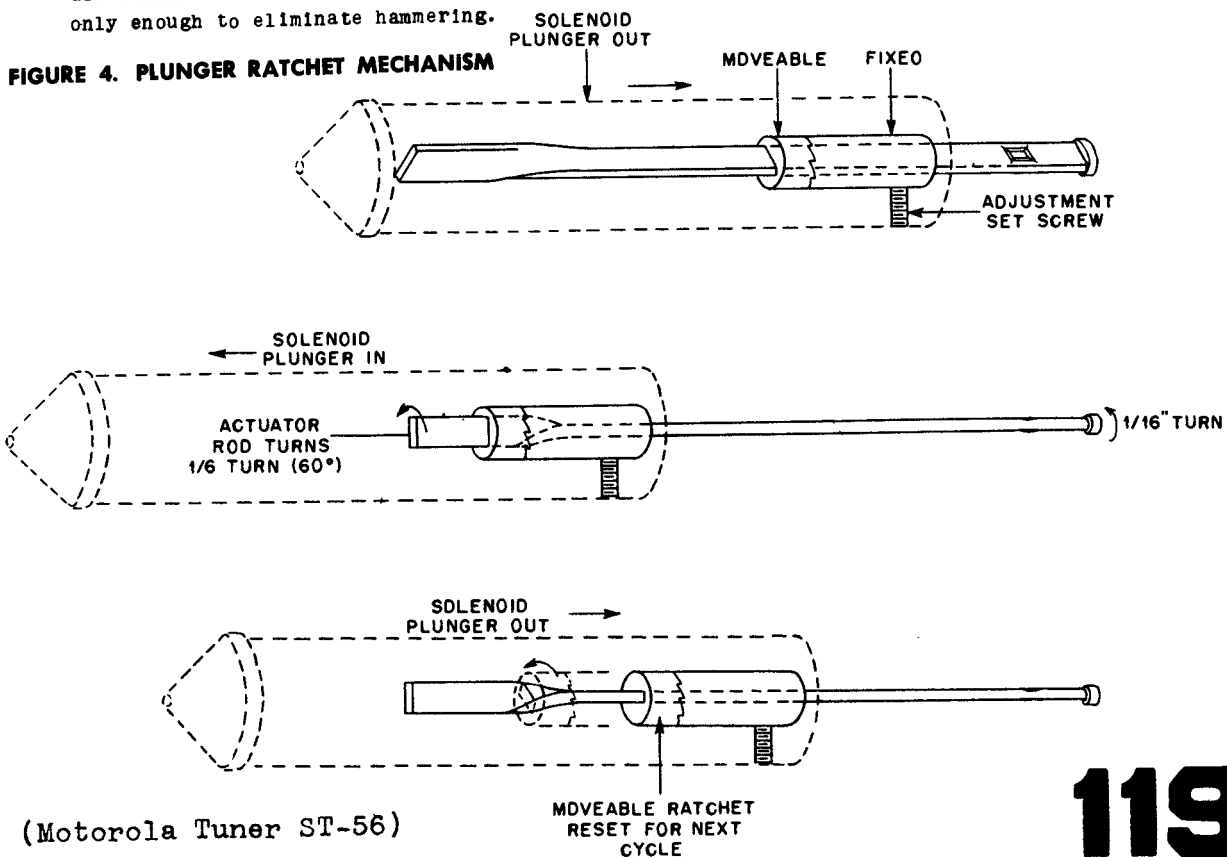

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

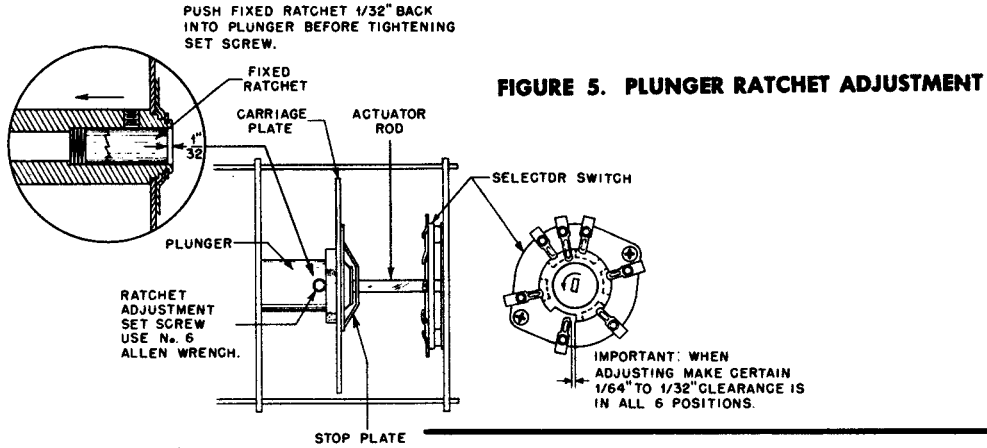


(Motorola Tuner ST-56)

SOLENOID SWITCH TRIP ADJUSTMENT


The solenoid switch tripping mechanism should be adjusted as shown in Figure 6.

If the solenoid switch is tripped too early, the ratchet mechanism may fail to operate; if it trips too late, the plunger may hammer violently or should the solenoid switch fail to trip, the plunger would be held within the solenoid.

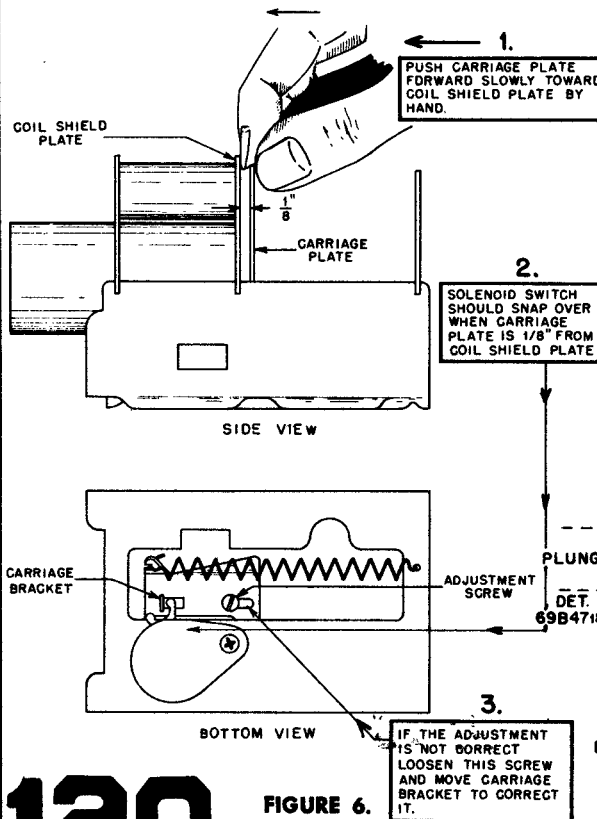

ADJUSTMENT OF GEAR LEVER LATCH

The gear lever latch holds the station set-up gear train in position while setting up stations. Failure of the latch to engage properly when the set-up button is pushed in or the station set-up knob is turned (whichever is applicable) would result in the inability to set up pre-set stations. Failure of the latch to disengage after station is set up would result in faulty automatic tuning because the lead screws might not seat themselves properly against the tuner end plate. Figure 7 above shows the latch detail and adjustment.

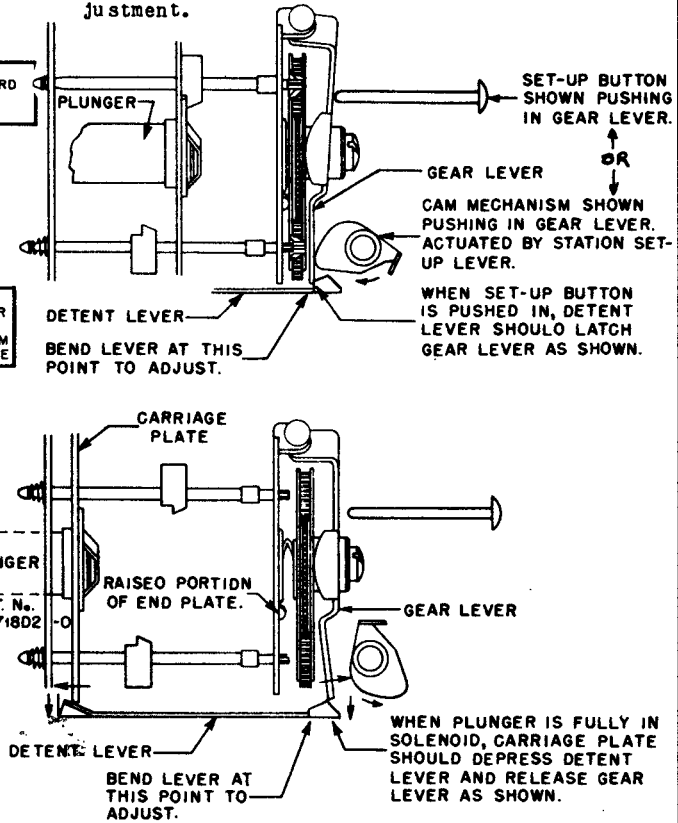

120

FIGURE 6. SOLENOID SWITCH ADJUSTMENT

FIGURE 7. GEAR LEVER LATCH ADJUSTMENT

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

SERVICE NOTES

FAILURE OF SOME LEAD SCREW TO ENGAGE IN SET-UP GEARS

If some of the lead screws fail to engage in the set-up gears during station setting up procedure, check the gear lever to see if it is bent. When the set-up button is pushed in and the gear lever latches on the detent lever, the set-up gear train should be parallel with the tuner end plate and the bottom of the gear train should be resting on the raised portions of the tuner end plate.

LUBRICATION

Should lubrication ever be required, it is recommended that a very fine grease, commercially called Lubriplate, or its equivalent, be used.

Remove all old and sticky lubricant with a solvent such as carbon tetrachloride and then, very sparingly, lubricate only the following points:

1. Carriage guide rods.
2. Actuator rod.
3. Manual lead screw.

Do not lubricate or permit lubricant to get on Selector Switch contacts. The friction drag is required for proper operation of tuner.

LEAD DRESSING

Make sure that the selector switch and solenoid coil leads are dressed so that carriage plate does not rub against them. Leads rubbing against the carriage plate may cause the tuner to stick, especially at the high frequency end.

REPLACEMENT OF SOLENOID COIL OR SOLENOID PLUNGER

Should replacement of the solenoid coil or solenoid plunger be required, it will be necessary to replace the entire tuner. A close fit between solenoid plunger and solenoid coil form is required; a proper match can only be secured at the factory. When service of this kind is required, return the tuner to the factory for exchange.

TO REPLACE ANT. R.F., OR OSC. COILS

IMPORTANT: When ordering replacement coils, order by part number and also specify the color coding (paint dots) on old coil. THE REPLACEMENT COIL SHOULD CARRY THE SAME

COLOR CODING AS THE ORIGINAL OR THE TUNER WILL NOT TRACK PROPERLY.


1. If coil is not readily accessible remove the tuner from the chassis as outlined under "TO REMOVE TUNER FROM CHASSIS."
2. Unsolder the two lugs holding the coil to the tuner plate.
3. Carefully remove the old coil. Save the thin paper washer that is found at the base of the coil.
4. Slip the paper washer over the replacement coil and slip coil into shield can.
5. Orient coil so its lugs are in same position as before and resolder to tuner plate.
6. Reassemble tuner and install in receiver.
7. Realign ANT., R.F. and OSC. stages per instructions found in the receiver service manual.

TO REPLACE ANT. R.F. OR OSC COIL TUNING CORES

1. The core which tunes the top coil is readily accessible and presents no replacement problem. To reach the two bottom coil tuning cores, remove the tuner from the chassis base as outlined under "TO REMOVE TUNER FROM CHASSIS."
2. Remove the carriage return spring.
3. Move the carriage plate back as far as it can go. The tuning cores can now be screwed "out" or "in" by grasping the portion that sticks out the back of the coil. When installing a new core, make sure that the insulating washer and adjustment clip are replaced properly. The insulating washer goes on the core side; the core adjustment clip has an ear on it and this ear must fit into a hole in the bakelite insulator on the carriage plate. Refer to Figure 8.
4. Replace the carriage return spring.
5. Install tuner in receiver.
6. Realign ANT., R.F. and OSC. stages following the instructions found in the receiver service manual.

(Motorola Tuner ST-56)

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

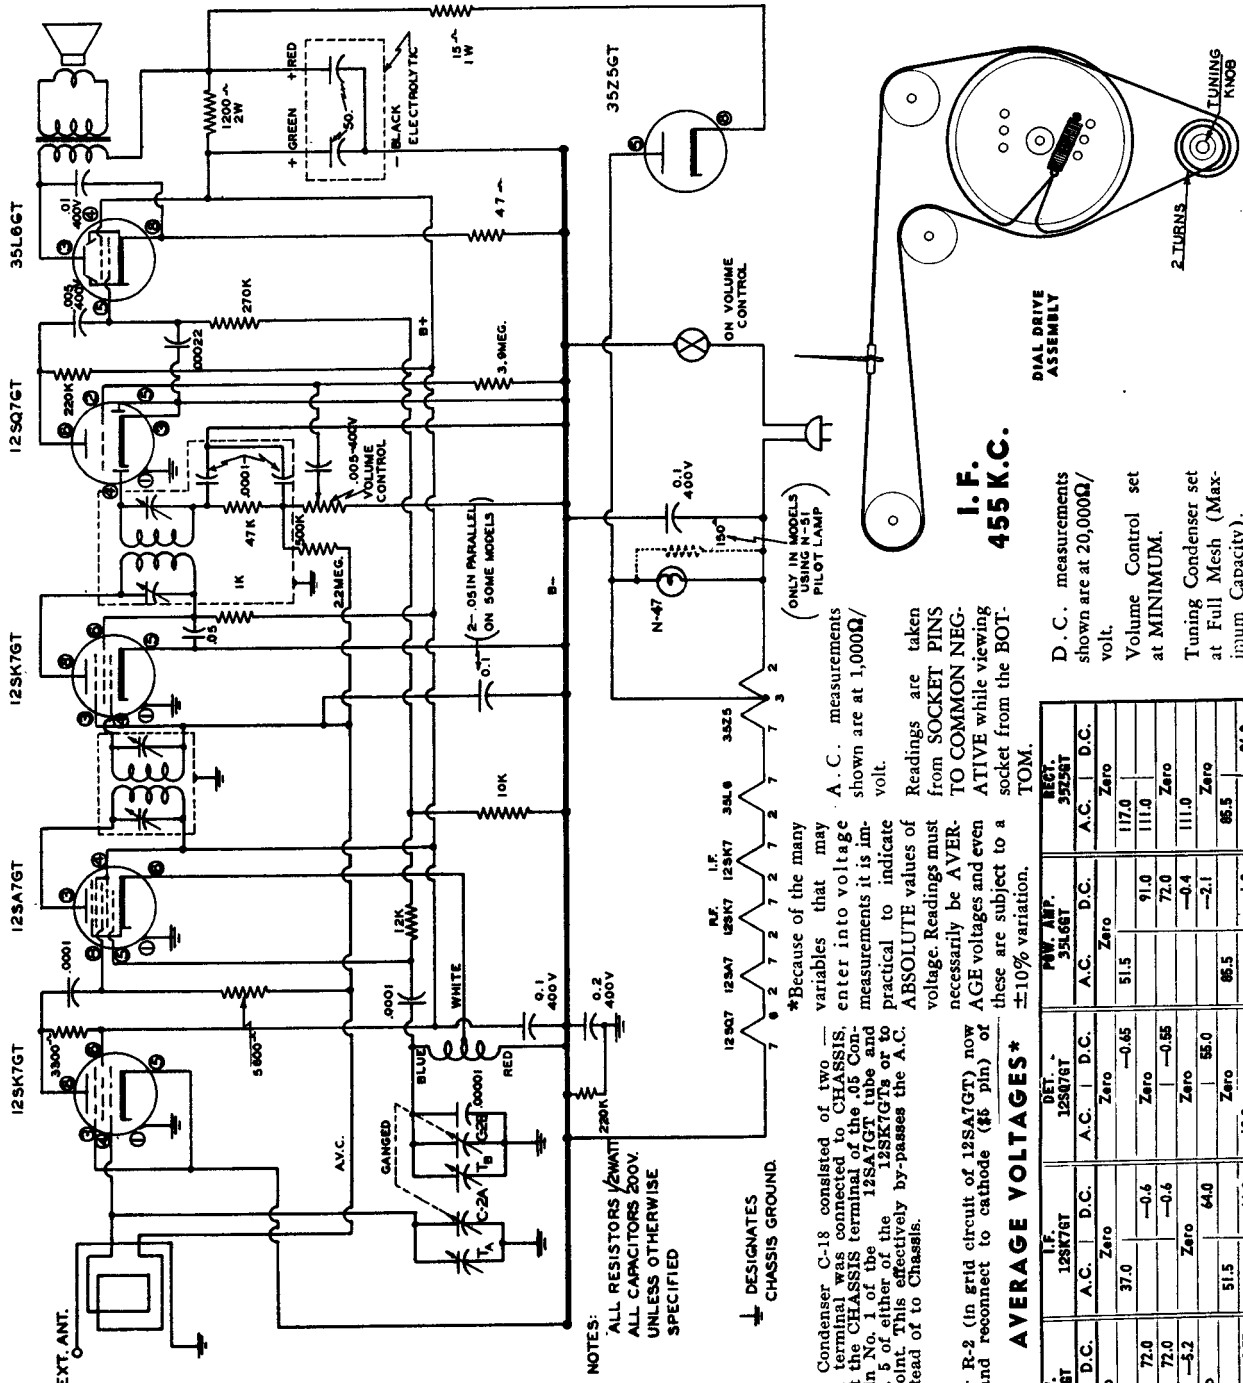

I. F. 455 K.C.

D. C. measurements shown are at 20,000Ω/volt.
Volume Control set at MINIMUM.
Tuning Condenser set at Full Mesh (Maximum Capacity).

*Because of the many variables that may enter into voltage measurements it is impractical to indicate ABSOLUTE values of voltage. Readings are taken from SOCKET PINS TO COMMON NEGATIVE while viewing these are subject to a ±10% variation.

AVERAGE VOLTAGES*

PIN NO.	I.F. 12SK7GT		DET. 12SQ7GT		PW AMP. 35L6GT		RECT. 35Z5GT	
	A.C.	D.C.	A.C.	D.C.	A.C.	D.C.	A.C.	D.C.
1	Zero	Zero	Zero	Zero	Zero	Zero	Zero	Zero
2	25.0	Zero	37.0	-0.6	51.5	91.0	117.0	
3	Zero	-0.6	Zero	-0.6	Zero	72.0	111.0	
4	Zero	-5.2	Zero	Zero	Zero	-0.4	111.0	
5	72.0	Zero	44.0	55.0	65.5	-2.1	Zero	
6	37.0	43.0	51.5	64.0	65.5	1.3	65.5	94.0
8			13.0	13.0				

HUM MODULATION:
On Early Production runs Condenser C-18 consisted of two .05 mfd. units. One ground terminal was connected to CHASSIS, the other to B-. Disconnect the CHASSIS terminal of the .05 Condenser now connected to Pin No. 1 of the 12SA7GT tube and connect this lead to Pin No. 5 of either of the 12SK7GTs or to any other convenient B- point. This effectively by-passes the A.C. Modulation hum to B- instead of to Chassis.

OSCILLATION:
Remove one side of Resistor R-2 (in grid circuit of 12SA7GT) now connected to A.V.C. bus and reconnect to cathode (#5 pin) of I.F.—12SK7GT.

NOTES:
ALL RESISTORS 1/2WATT
ALL CAPACITORS 200V.
UNLESS OTHERWISE SPECIFIED

DESIGNATES CHASSIS GROUND.


NATIONAL UNION RADIO CORPORATION

N. U. "PRESENTATION" RADIO

MODEL G-619


122

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

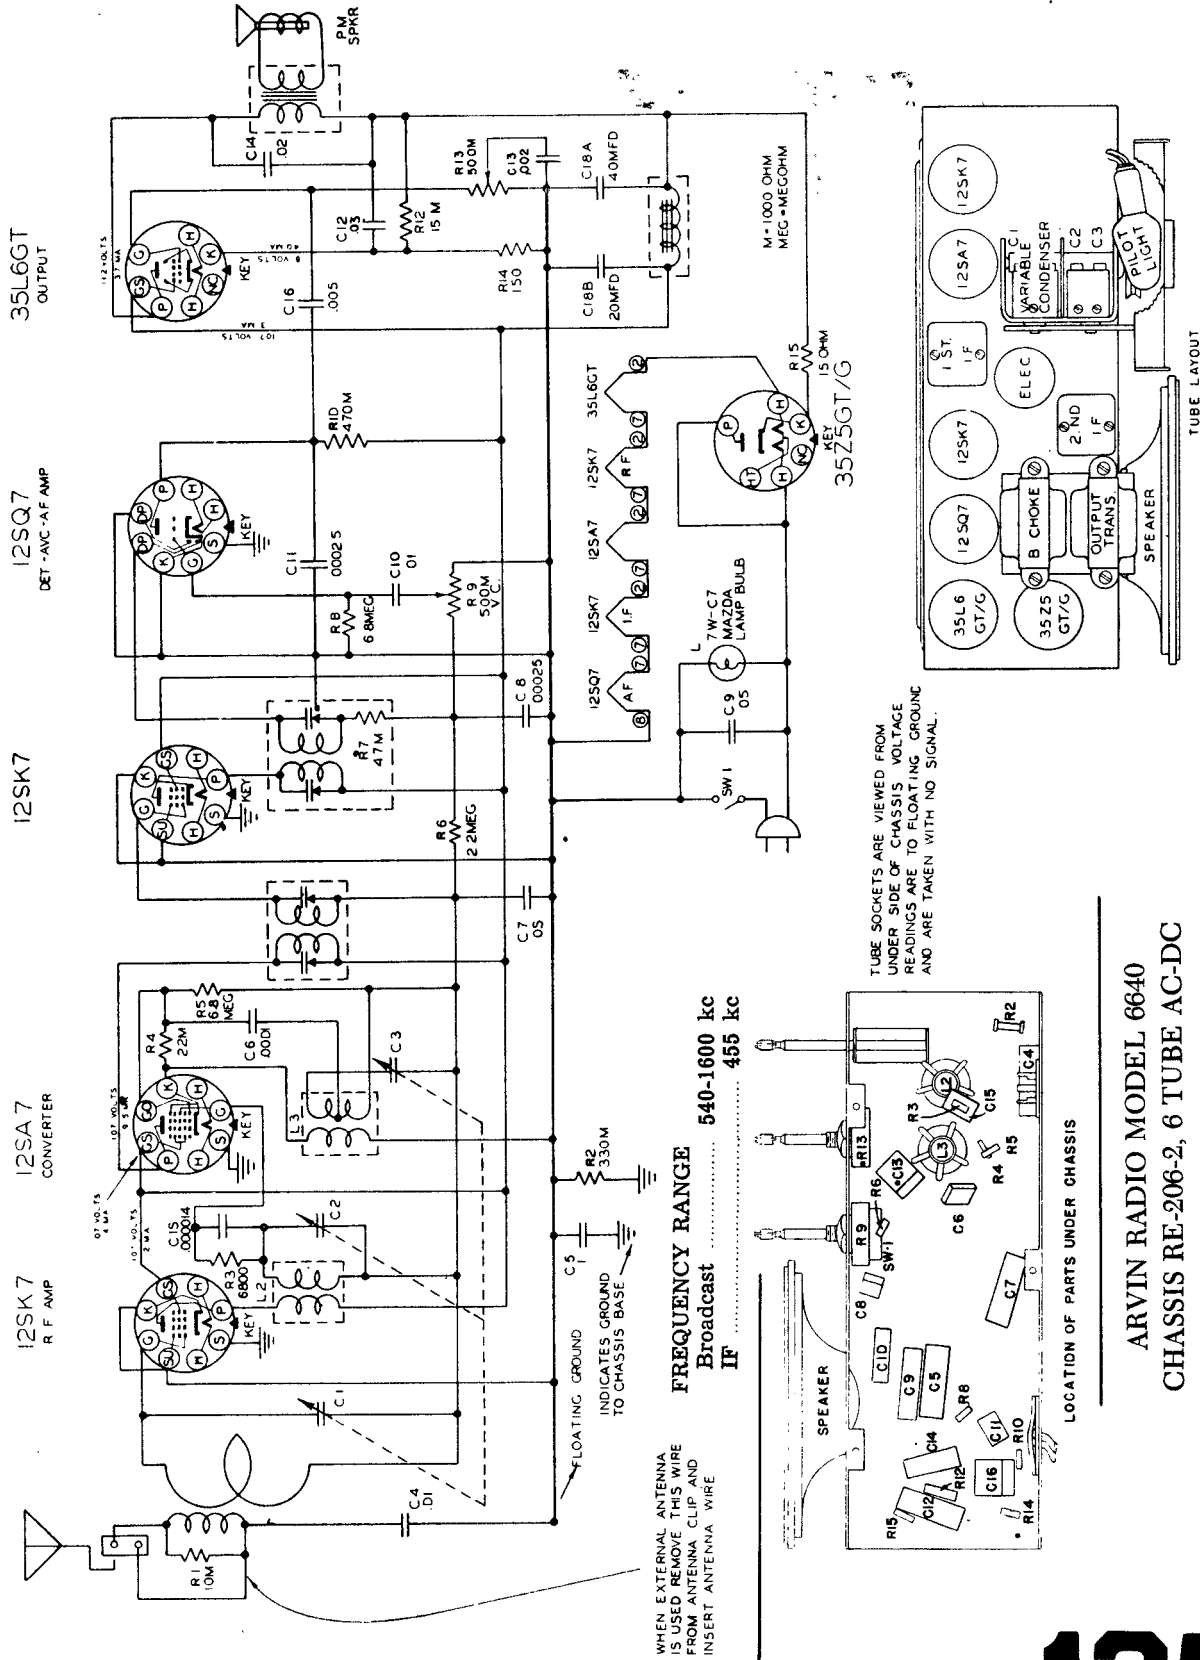




ARVIN RADIO MODEL 6640
 CHASSIS RE-206-2, 6 TUBE AC-DC

MANUFACTURED BY NOBLITT - SPARKS INDUSTRIES, INC., COLUMBUS, IND.

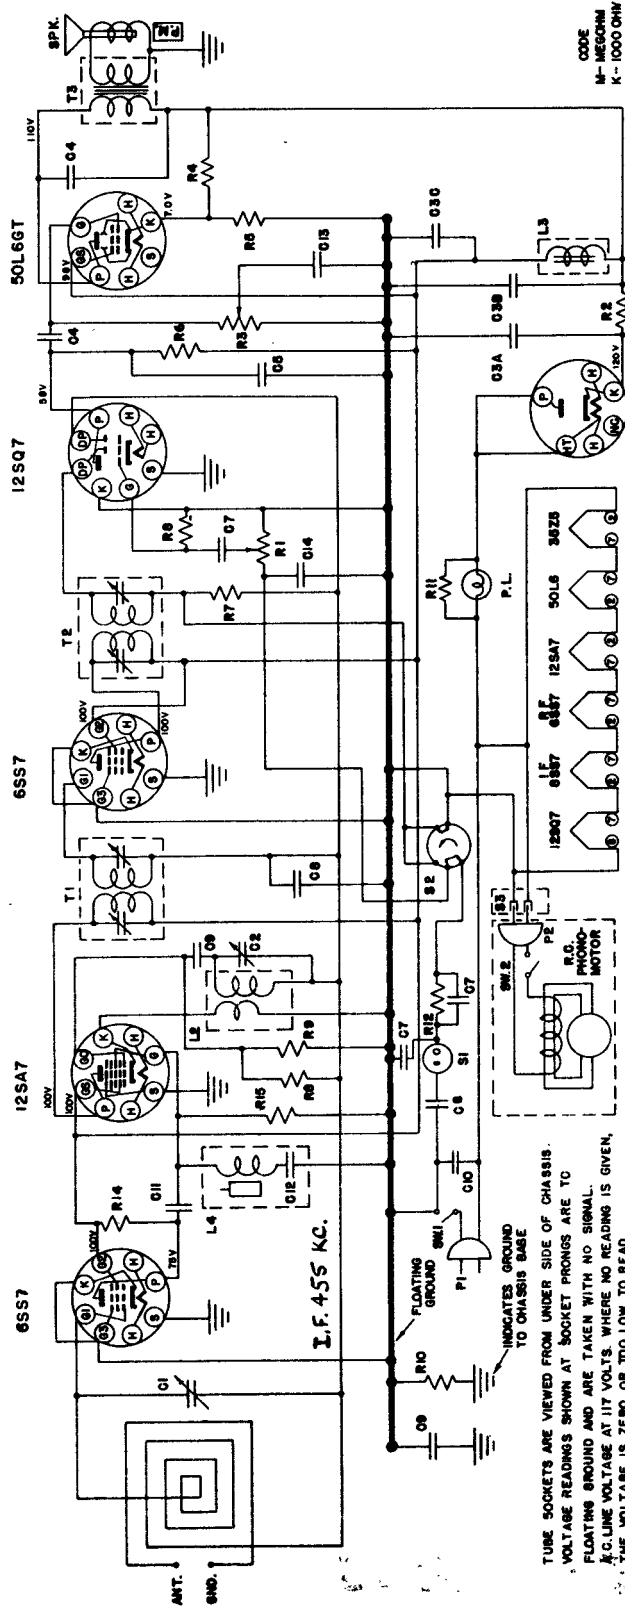

35Z5GT


REF. NO.	PART NO.	DESCRIPTION
R1	C19562	Volume Control - 1 meg.
R2	CE7060-150	Resistor, 15 ohm
R3	C19746	Tone Control & Switch
R4	C20070-123	Resistor, 12,000 ohm - 1 W.
R5	C20060-151	Resistor, 150 ohm
R6	C20080-174	Resistor, .47 meg.
R7	C20080-225	Resistor, 2.2 meg.
R8	C20060-156	Resistor, 15 meg., 1/2 W.
R9	C20060-235	Resistor, 22,000 ohm
R10	C20060-334	Resistor, 330,000 ohm
R11	C20060-331	Resistor, 330 ohm
R12	C20060-224	Resistor, .22 meg.
R13	C20060-105	Resistor, 1 megohm
R14	C20060-222	Resistor, 2200 ohm, 1/2 W.
R15	C20060-1C4	Resistor, 100,000 ohm, 1/2 W.
C1	C19584	Var. Condenser, 2 gang
C2	C19584	Var. Condenser, 2 gang
C3	A19780	Elect. Cond., 40 uf, 150 V.
C4	A19780	Elect. Cond., 10 uf, 150 V.
C5	C20068-103	Condenser, Paper, .01 uf, 400 V.
C6	C20068-5D1	Condenser, .2 uf, 400 V.
C7	A19765	Condenser, Paper, .002 uf, 400 V.
C8	C20068-5D3	Condenser, .05 uf, 200 V.
C9	C20068-500	Condenser, Mic., .00005 uf, 500 V.
C10	CE7068-503	Condenser, .05 uf, 400 V.
C11	C20068-102	Condenser, .001 uf, 500 V.
C12	A21040	Condenser, .00003 uf, 500 V.
C13	C20068-502	Condenser, .005 uf, 400 V.
C14	C20068-251	Condenser, .00025 uf, 600 V.
L1	AE19943-1	Ant. Loop Assy.
L2	AC19566-1	Osc. Coil
L3	AC21073-1	Choke, Iron Core

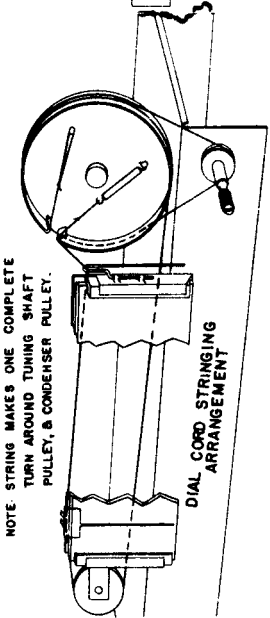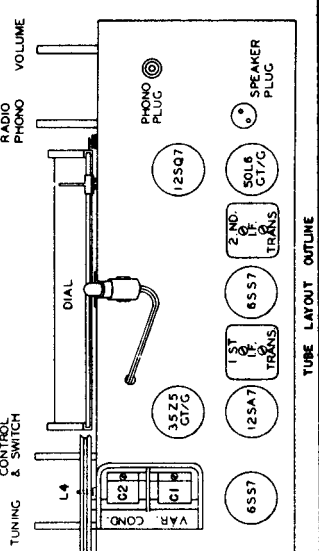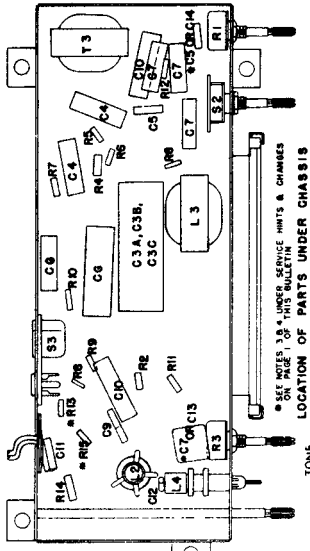

ARVIN Model 665
Chassis RE-229
Moblitt-Sparks

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

ARVIN Chassis RE-228
Models 150-TC, 151-TC

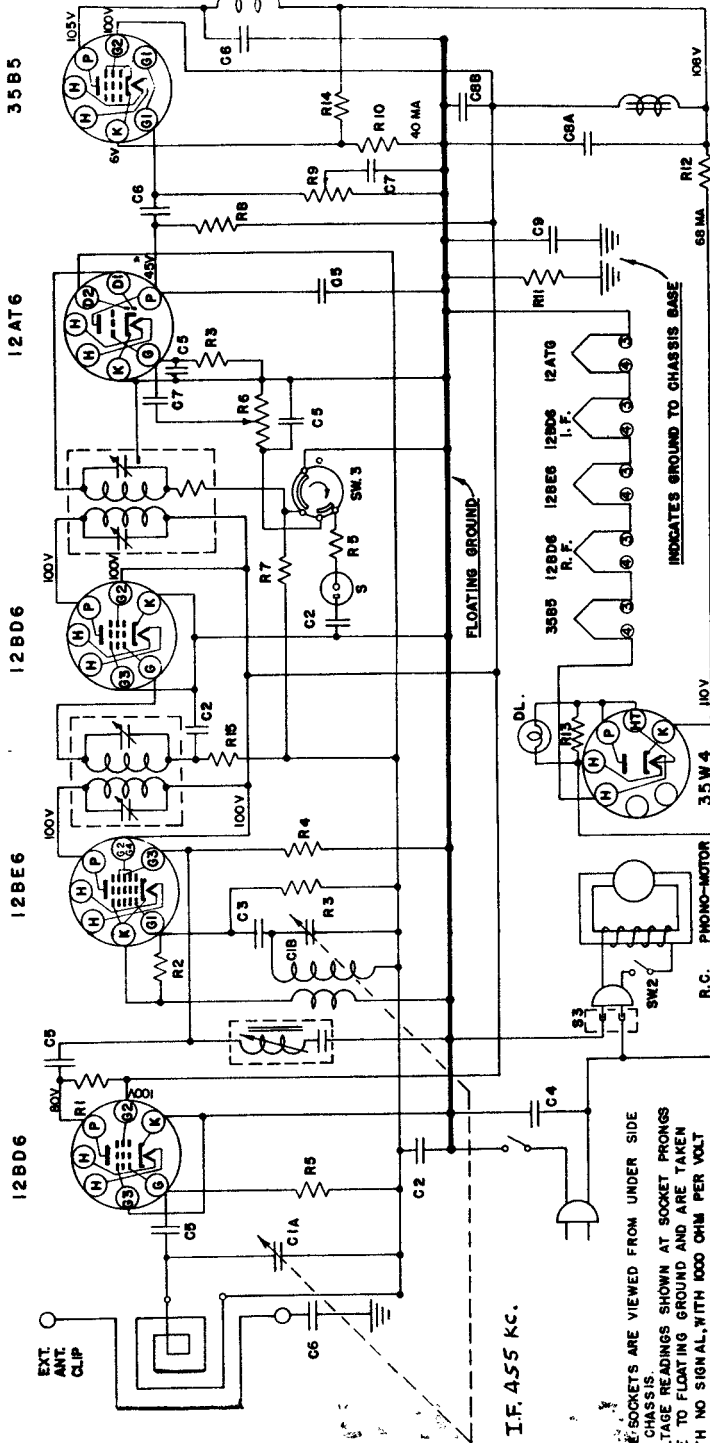

SOCKET VOLTAGE AND RESISTANCE MEASUREMENTS

TUBE	1	2	3	4	5	6	7	1	2	3	4	5	6	7
35W4	0	0	85AC	117AC	112AC	112AC	110DC	INF	INF	80	108	105	105	11250
12BD6	RF	0	37.5AC	50AC	80DC	100DC	0	4.2m	0	59	50	14K	12K	0
12BE6	**B-8DC	0	25AC	37.5AC	100DC	100DC	0	22K	.5	25	39	12K	12K	200K
12BD6	IF	0	12.5AC	25AC	100DC	100DC	0	3.0m	0	14	25	12K	12K	0
12AT6	0	0	0	12.5AC	0	0	* 45DC	10m	0	0	14	3.2m + 1.05m	482K	500K
35B5	0	5DC	50AC	85AC	105DC	100DC	0	500K	150	50	80	12K	12K	12K

All readings are taken from the socket terminal indicated to floating ground, with AC line voltage at 117V. Voltage measurements made with 1000 ohm per volt voltmeter except where indicated otherwise.
* Measured with a vacuum tube voltmeter.
** Average measured with a vacuum tube voltmeter. * 7.7V with variable condenser closed, .9.5V with variable condenser open.)
† One meg. lower resistance with Phono-Radio Sw in Phono Position.

RESISTANCE OF COILS


RESISTANCE OF COILS	RESISTANCE OF COILS
Oscillator	Second IF Transformer
Cathode winding .75 ohms	Primary winding 13 ohms
Grid winding 6. ohms	Secondary winding .13 ohms
Wave trap 26 ohms	B Choke 200 ohms
	47K Resistor in Series inside Can

REF. NO.	PART NO.	DESCRIPTION
R1	C20060-222	Resistor, 2200 ohm 1/4 W
R2	C20060-223	Resistor, 22,000 ohm 1/4 W
R3	C20060-106	Resistor, 10 megohm 1/4 W
R4	C20060-224	Resistor, .22 megohm 1/4 W
R5	C20060-105	Resistor, 1 megohm 1/4 W
R6	C19927	Volume Control, 1 megohm
R7	C20060-225	Resistor, 2.2 megohm 1/4 W
R8	C20060-474	Resistor, .47 megohm 1/4 W
R9	C19928	Tone Control & Switch, .5 megohm
R10	C20060-151	Resistor, 150 ohm 1/4 W
R11	C20060-354	Resistor, .35 megohm 1/4 W
R12	C20060-220	Resistor, 22 ohm 1/4 W
R13	C20060-331	Resistor, 330 ohm 1/4 W
R14	C20070-123	Resistor, 12,000 ohm 1/4 W
R15	C20060-104	Resistor, 1 megohm 1/4 W
C1A-C1B	AD2111-1	Variable Condenser & Pulley Assy.
C2	C20067-503	Condenser, .05 uf 200 V Paper
C3	C20068-500	Condenser, .0005 uf 500 V Mica
C4	C20068-503	Condenser, .05 uf 400 V Paper
C5	C20068-251	Condenser, .00025 uf 500 V Mica
C6	C20068-103	Condenser, .01 uf 400 V Paper
C7	C20068-502	Condenser, .005 uf 400 V Paper
C8A-C8B	A21349	Electrolytic Condenser, 50-30 uf., 150V
C9	C20068-104	Condenser, .1 uf 400 V, Paper

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

Packard-Bell

SERVICE BULLETIN — MODEL 471
PORTABLE RECEIVER

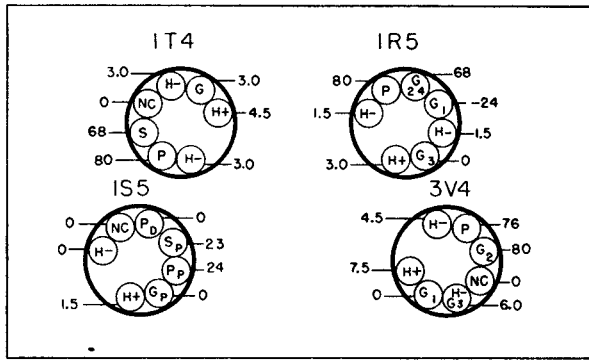

TUBE VOLTAGE CHART

NOTE: VOLTAGES TAKEN FROM B- WITH V.T.V.M.—NO SIGNAL

STAGE GAIN MEASUREMENTS

- Standard Output . . . 50 mw
- Dummy Antenna01 mfd.
- Volume Control . . . Maximum
- Converter grid to 1st I.F. grid . . . 51 X at 1000 KC
- Converter grid to 1st I.F. grid . . . 65 X at 455 KC
- 1st I.F. grid to 2nd detector . . . 55 X at 455 KC
- Overall audio gain014V at IS5 grid — 100 mw output
400 cycles


D.C. Resistance Measurements

- | | |
|-----------------------------|----------------------------|
| 1st I.F. Coil | Oscillator Coil |
| Primary 20 ohms | Primary 8 ohms |
| Secondary 20 ohms | Secondary 7 ohms |
| 2nd I.F. Coil | |
| Primary 15 ohms | |
| Secondary 15 ohms | |


ALIGNMENT CHART

STEP	CONNECT TEST OSC. TO	TEST OSC. SETTING	POINTER SETTING	ADJUST FOR MAX. OUTPUT
1	Conv. Grid .01 Mfd. Dum. Ant.	455 KC	1620 KC	I.F. Trimmers A, B, C, D
2	Conv. Grid .01 Mfd. Dum. Ant.	1620 KC	1620 KC	Oscillator Trimmer E
3	*Standard Test Loop	1500 KC	1500 KC	Ant. Trimmer F
4	*Standard Test Loop	600 KC	600 KC	Loop
5	Repeat Step No. 3			

NOTE: Hazeltine Test Loop No. 1150 or equivalent.

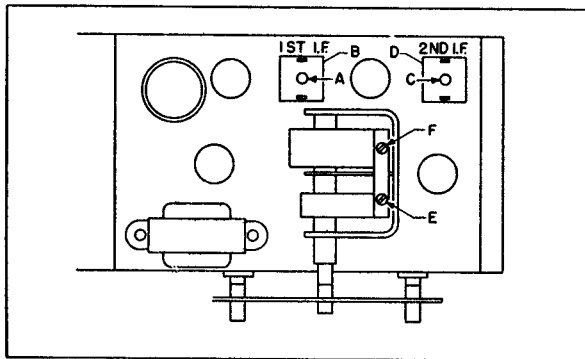


TRIMMER LOCATIONS

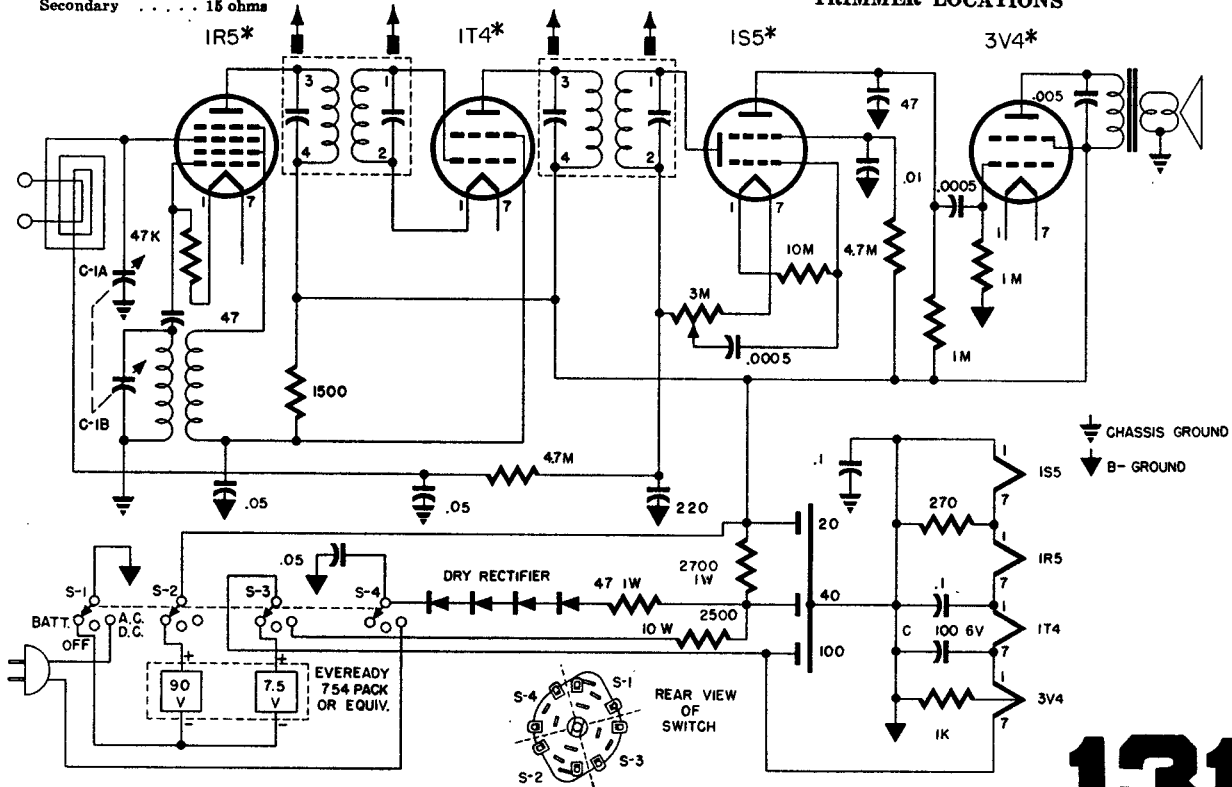

* SUPPRESSOR GRIDS TIED INTERNALLY AND NOT SHOWN IN SCHEMATIC

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

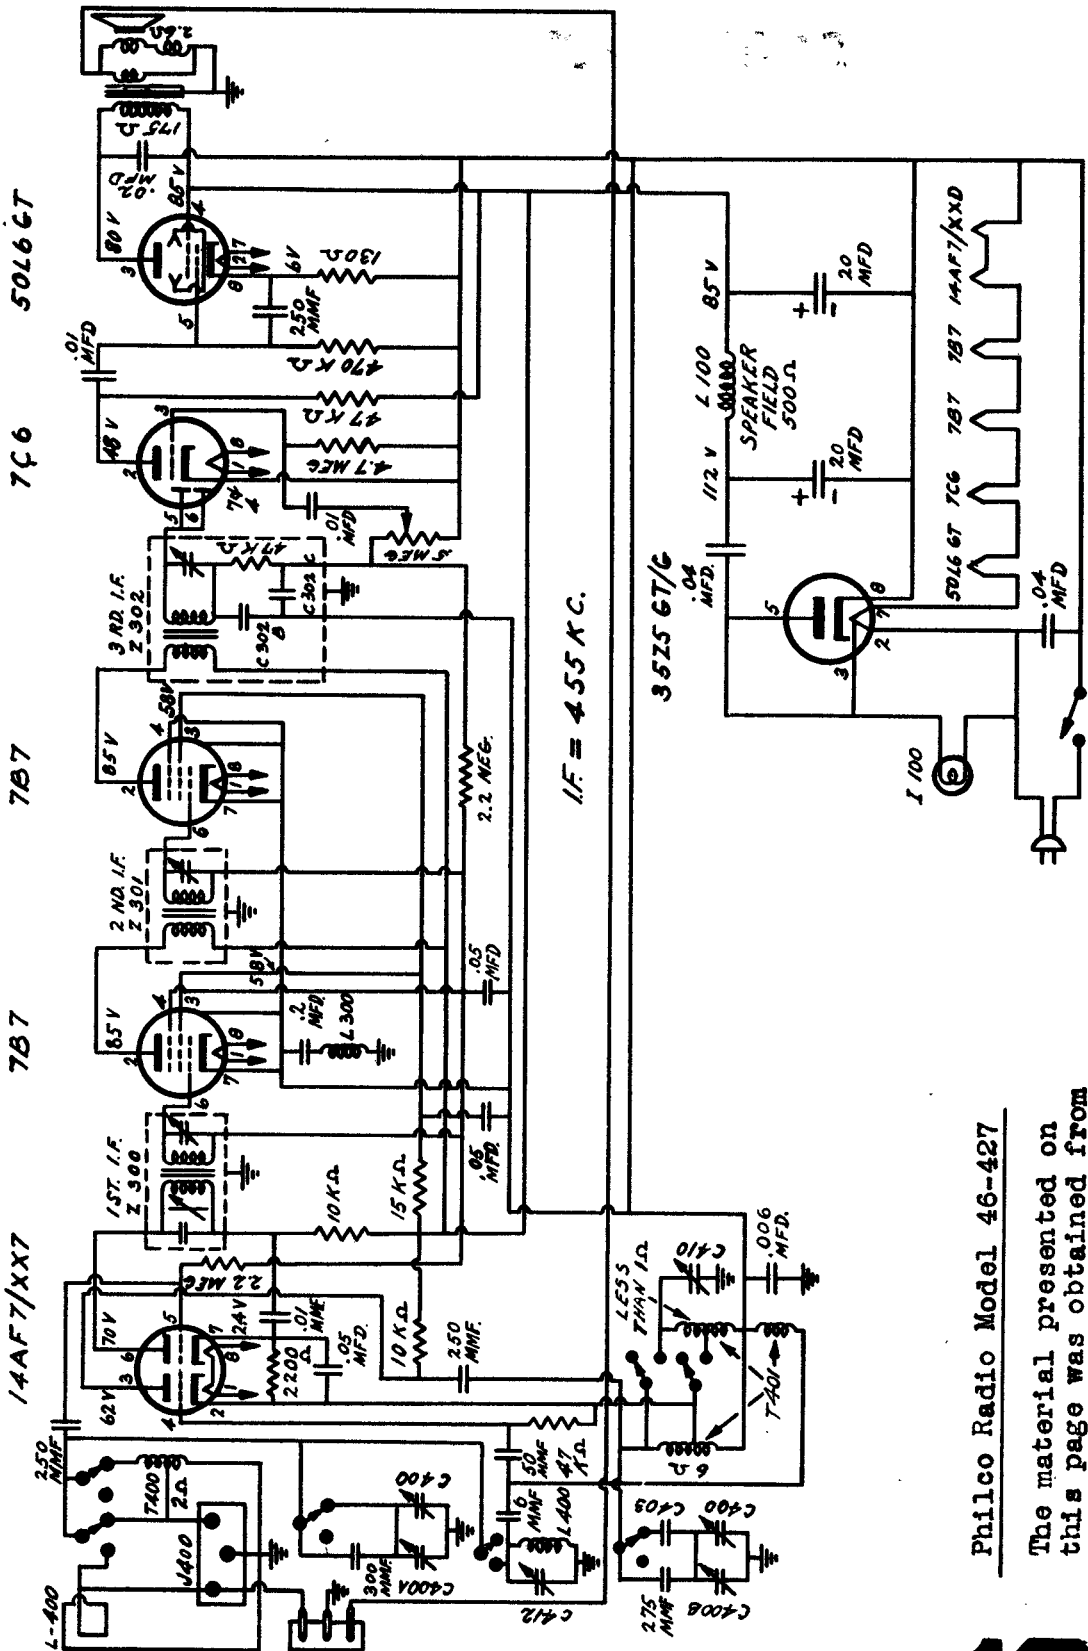


Philco Radio Model 46-427

The material presented on this page was obtained from a sample receiver.

Voltage measurements made with a 20,000 ohms/volt meter.

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

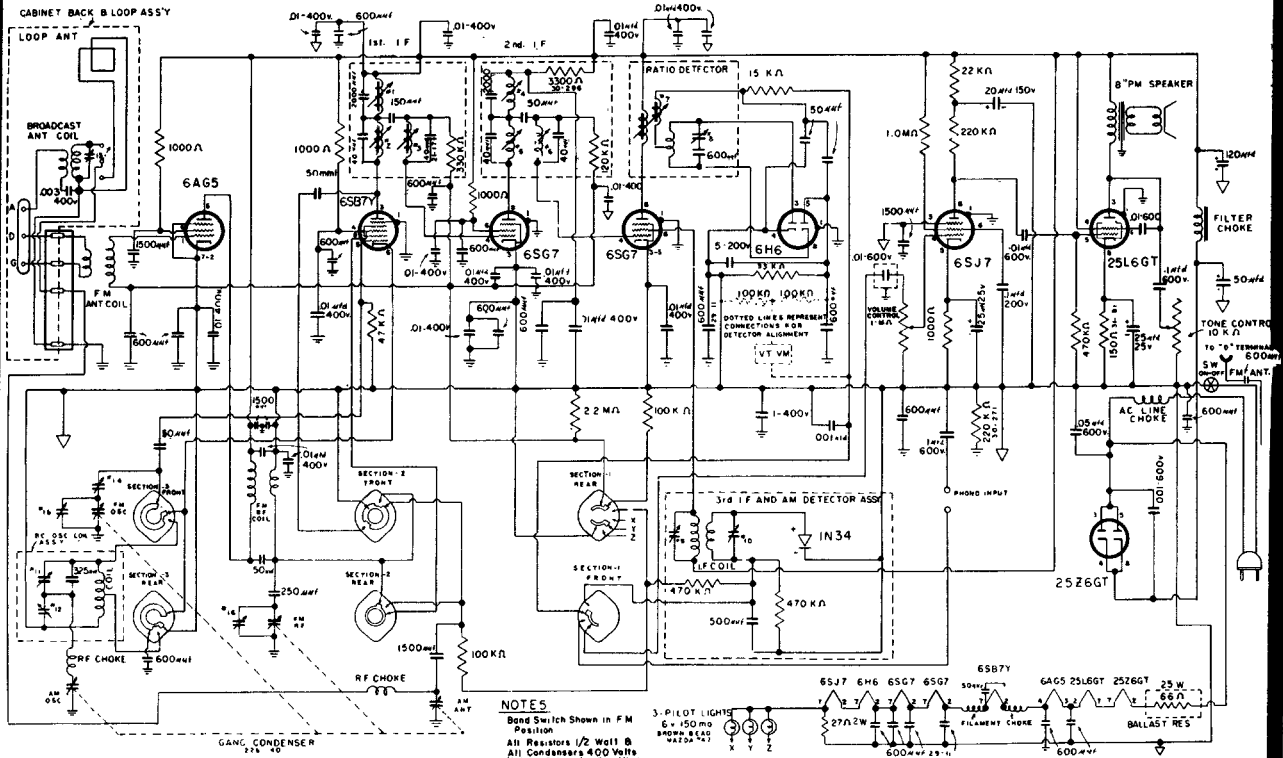

ALIGNMENT CHART


NOTES
 Band Switch Shown in FM Position
 All Resistors 1/2 Watt @
 All Condensers 400 Volts
 Unless Otherwise Specified
 ∇ = B = = Ground

CIRCUIT ALIGNED STEP	RECEIVER		SIGNAL GENERATOR		METER CONNECTIONS		TRIMMER OR SLUG ADJUST	PROCEDURE
	BAND SWITCH	DIAL POINTER	FREQ.	CONNECTIONS	TYPE See List			
AM I.F.	1	BC	55 455 KC	Through .1 MFD cop. to Grid of 6SB7Y	A	Across Voice-Coil of Speaker	1, 4, 9, 10	Adjust for Maximum Output
FM I.F.	2	FM	88 10.7 MC	Through .1 MFD cap. to Grid of 6SB7Y	A	Across Voice-Coil of Speaker	2, 3, 5, 6, 7, 8	Adjust for Maximum Output
Ratio-detector	3	FM	88 10.7 MC	Through .1 MFD cap. to Grid of 6SB7Y	B	From: Junction of two 100K resistors connected across 47K load resistor of the ratio detector. To: Audio output of ratio detector. (See Circuit Diagram)	8	Adjust meter to zero. (Check proper zero set. Meter should register reverse polarity when trimmer is turned slightly to the right, and then to the left of zero output)
Broadcast R.F.	4	BC	150 1500 KC	Through 200 mmf. cap. to Antenna "A" Post on back.	A	Across Voice-Coil of Speaker	12, 13	Adjust for maximum output
	5	BC	60 600 KC	Through 200 mmf. cap. to Antenna "A" Post on back.	A	Across Voice-Coil of Speaker	11	Adjust for maximum output while rocking variable condenser
6 REPEAT STEPS 4 5 AND REPLACE BOTTOM COVER OF CHASSIS								
Frequency Modulation	7	FM	106 106 MC	To "D" and "G" Antenna Terminals	A	Across Voice-Coil of Speaker	15, 16	Adjust for maximum output
R.F.	8	FM	90 90 MC	To "D" and "G" Antenna Terminals	A	Across Voice-Coil of Speaker	14	Adjust for maximum output
9 REPEAT STEPS 7 AND 8								

PILOT RADIO
 MODEL T-521

137

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

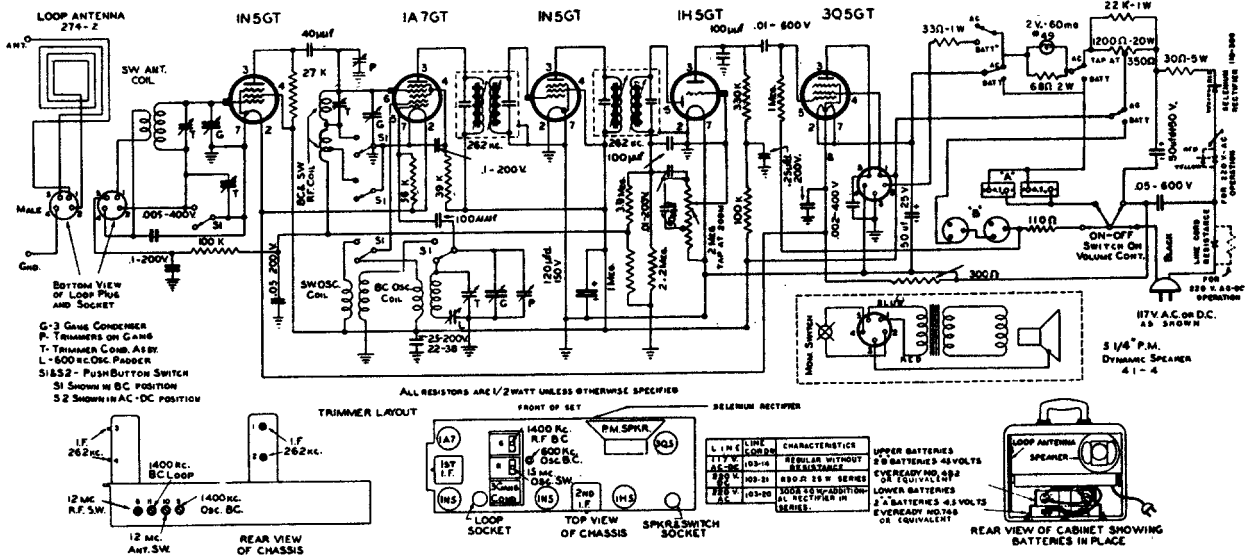

SERVICE NOTES

The location and sequence of the screws for adjusting the ANT., R.F., and I.F. circuits, are illustrated on the diagram. The I.F. amplifier may be aligned with the chassis out of the cabinet but with the loop antenna plugged in. For the I.F. alignment the signal generator must be connected to the grid of the 1A7GT tube through a .1 mfd. condenser. The R.F. trimmers should also be peaked for maximum with the chassis out of the cabinet. When aligning the ANT. trimmers, the "A" and "B" batteries must be in place, the loop antenna and receiver correctly mounted in the cabinet. The receiver may be aligned on either batteries or house current. When the receiver is aligned on the broadcast band, connect the signal generator to the ANT. post at the back through a .0002 mfd. condenser, and on the shortwave band use a 400 ohm carbon resistor.

When removing the batteries, first unscrew clamps, and then remove battery plugs. Be sure not to pull on the cables, but on the plugs themselves.

Place the new "A" and "B" batteries in position shown on diagram and replace clamps in position.

The blue and white cable, coming from the chassis, has two 2-prong plugs which are then plugged into the "A" batteries. The red and black cable has two 3-prong plugs, both of which are plugged into the "B" batteries.



ALIGNMENT NOTES

See Alignment chart on next page.

The following notes are intended for the use of an expert radio technician:

Alignment should be attempted only if the proper meter and signal generator are at your disposal. Insulated alignment tools are necessary. Output meters should include A) a low range AC meter, B) a 0-20 volt DC vacuum tube voltmeter.

The signal generator must cover the frequencies of 455 kc, 600 kc, 1500 kc, 10.7 mc, 90 mc and 106 mc.



During alignment the line voltage feeding the receiver power-supply should be kept at approximately 117 volts.

The receiver should be allowed to warm up for at least 30 minutes before making any adjustments.


The locations of adjustment screws are indicated clearly on the schematic diagram. Alignment adjustments should be made only in the sequence given in the chart.

- | | |
|-------------------------------------|-------------------------------------|
| 1-1st I.F. 455 Kc | 9- AM 3rd I.F. 455 Kc, Primary |
| 2-1st I.F. 10.7mc, Primary | 10- AM 3rd I.F. 455 Kc, Secondary |
| 3-1st I.F. 10.7mc, Secondary | 11- BC Osc. Padder |
| 4-2nd I.F. 455 Kc | 12- BC Osc. Trimmer |
| 5-2nd I.F. 10.7mc, Primary | 13- Ant. BC Trimmer (on rear cover) |
| 6-2nd I.F. 10.7mc, Secondary | 14- FM Osc. Padder |
| 7- Ratio Detector 10.7mc, Primary | 15- FM Osc. Trimmer |
| 8- Ratio Detector 10.7mc, Secondary | 16- FM R.F. Trimmer |

ALIGNMENT ADJUSTMENTS

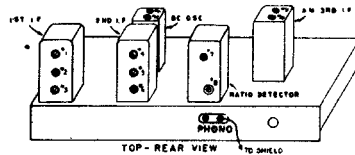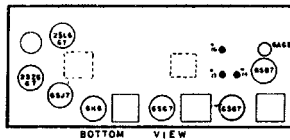


FRONT SECTION

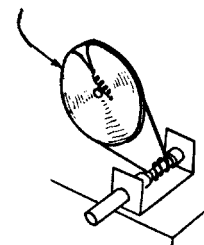

Pilot
RADIO CORPORATION

MODEL T-521

A.C.-D.C. Receiver

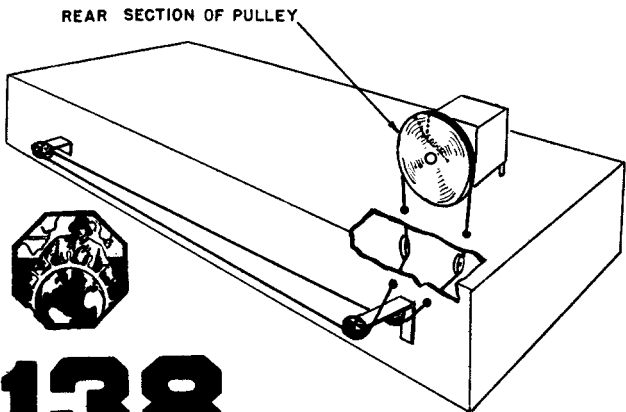

138

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS


PILOT RADIO - MODEL T-601

ALIGNMENT CHART

Tuning Range 88-108 Mc.


Insulated alignment tools are necessary. The output meter should be a D.C. vacuum tube voltmeter with a range of at least 20 volts. The signal generator should cover the frequencies of 10.7, 90 and 106 mc. Allow the PILOTUNER to warm up for at least 30 minutes before making any adjustments. The location of the adjustment screws is indicated clearly on the schematic diagram. Follow the sequence in the alignment chart.

CIRCUIT ALIGNED	STEP	RCVR. DIAL POINTER	SIGNAL GEN.		METER CONNECTIONS	TRIMMER OR SLUG ADJUSTMENT	PROCEDURE
			FREQ.	CONNECTIONS			
IF	1	88 mc	10.7 mc	Through .01 mfd. cap. to grid of 6BE6	Across two 100K resistors —indicated by dotted lines in schematic	S2, S1, S4, S3, S6, S5	Adjust for maximum output
	2		Repeat Step No. 1				
Ratio Detector	3	88 mc	10.7 mc	Same as No. 1	From: Junction of two 100K resistors TO: Audio output of ratio detector. Connections indicated by dotted lines in schematic	S1	Adjust meter to zero (Check proper zero set) Meter should register reverse polarity when slug is rotated through zero output.
Oscillator	4	90 mc	90 mc	Through carbon 300 ohm resistor to Ant. Terminal	Same as Step No. 1	P8	Same as Step No. 1
	5	106 mc	106 mc	Same as No. 4	Same as No. 1	T7	Same as No. 1
	6		Repeat Steps No. 4 & 5				
	7	90 mc	90 mc	Same as No. 4	Same as No. 1	P10	Same as No. 1
RF	8	106 mc	106 mc	Same as No. 4	Same as No. 1	T9	Same as No. 1

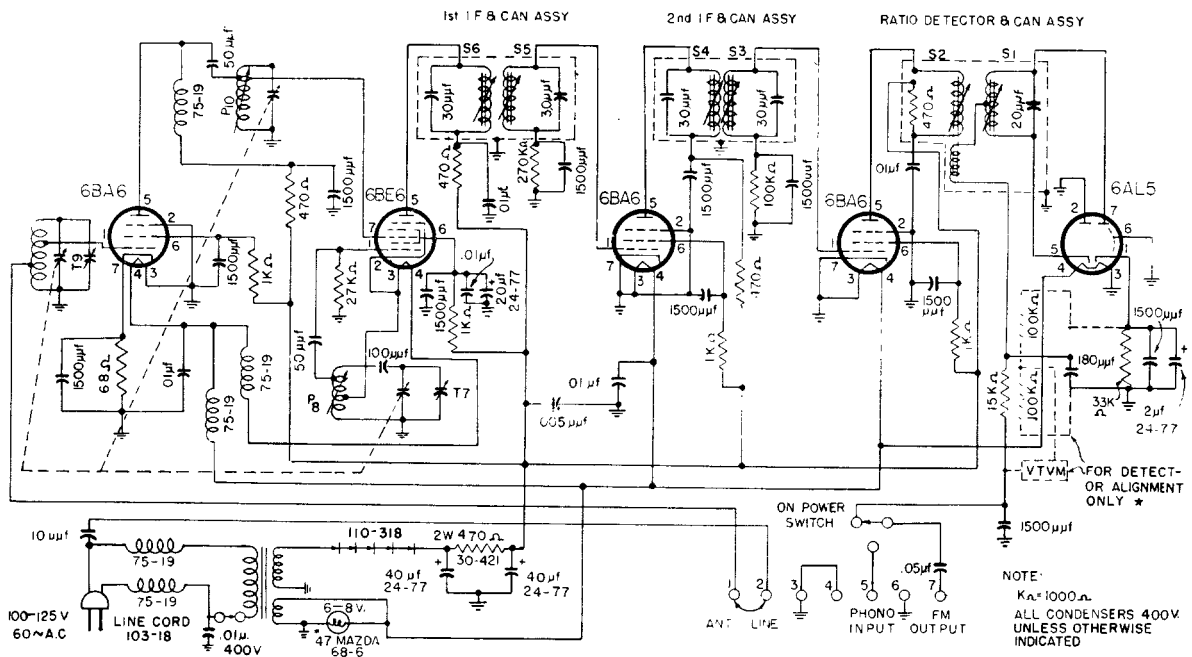

- S1 RATIO DETECTOR SEC
- S2 RATIO DETECTOR PRI
- S3 2nd IF SEC.
- S4 2nd IF PRI
- S5 1st IF SEC.
- S6 1st IF PRI
- T7 OSC TRIMMER
- P8 OSC PADDER
- T9 ANT TRIMMER
- P10 R.F. PADDER

- T9 107 MC
- T7 107 MC
- P8 107 MC
- S4 107 MC
- S5 107 MC
- S6 106 MC
- P10 90 MC
- T9 106 MC
- P10 90 MC

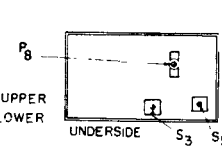

TO ALIGN RECEIVER USE FREQUENCIES AS INDICATED ON LEFT. ADJUST ALL TRIMMERS FOR MAX DC OUTPUT ACROSS 33KΩ RESISTOR IN 6AL5 CIRCUIT.
* TO ALIGN SECONDARY OF RATIO DETECTOR CONNECT METER AS INDICATED IN SCHEMATIC AND ADJUST S1 FOR ZERO OUTPUT.

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

RCA VICTOR

VICTROLA

Model 63E, 63EM

Chassis No. RS-127 Mfr. No. 274

Lubrication

Motor

The bearings of the motors furnished in these instruments are lubricated at the factory and should require no further lubrication for a period of at least one year. When lubrication is required, apply a few drops of any good grade of S.A.E. #10 oil to the bearing felts.

Turntable Spindle

When lubrication is required, apply one or two drops of Gargoyle 600W to the bearing.

Drive Wheel

Apply one or two drops of any good grade of S.A.E. #10 oil to the bearing felt.

CAUTION: Exercise extreme care to prevent getting any oil on the rubber tire or on the motor shaft. Oil on these parts will cause slippage with resultant irregular turntable speed.

Service Hints

To Remove Turntable:

Remove "C" washer from turntable spindle and lift turntable straight up.

Motor Board Disassembly

- Remove the "C" washer on turntable spindle.
- Lift turntable straight up.
- Disconnect motor plug from power plug.
- Remove two screws exposed on top of cabinet.

To replace Drive Idler

- Remove "C" washer at bottom of drive idler wheel shaft.
- Lift idler drive wheel up from motor mounting board.

To remove turntable spindle disengage the spring clip from the bottom of the turntable spindle and lift up on the spindle.

To remove the motor from the motor mounting board, remove the three nuts from the top of the motor mounting board.

To remove the switch, unscrew the two screws holding the switch assembly to the pickup assembly.

Service Hints

- Failure to start when pickup is lifted.
 - Dirty switch contacts.
 - Weak or broken spring on pickup support arm.
 - Motor connector plug broken or dirty.

To Remove Pick-up Arm

- Remove the switch.
- Remove the spring clips from the rear pivot of the support arm.
- Disengage the tone arm lift spring from the support arm.
- Remove the spring clips from the front pivot of the support arm.
- Remove the "C" washer from the pick-up pivot arm.
- Pick-up is free to be removed when the two leads from the crystal are removed.

Irregular Turntable Speed:

- Oil or grease on rubber tire of turntable drive wheel. Remove turntable and clean drive wheel tire, and inside edge of turntable with naphtha or carbon-tetrachloride.
- Insufficient tension in drive wheel tension spring.
- Lack of lubrication.

Replacement of Sapphire


CAUTION: Never bend the sapphire support wire.

The nut on the sapphire holder assembly may be locked by a light cement. Extreme care should be used when loosening the nut so that the twisting motion does not break the crystal.

Remove the two screws holding the sapphire guard in place and remove guard. Remove the small nut and washer on the threaded shaft of the sapphire holder and gently push the shaft through the hole in the armature shaft until the sapphire holder assembly comes free.


Use of a drop or two of acetone will facilitate the removal of the nut and shaft if cement has been used. Do not use force as the crystal may be broken.

Insert threaded shaft of replacement sapphire holder through armature shaft and replace the washer and nut. Make sure that the sapphire is in the correct position. Take hold at the lower end of the shaft with a pair of pliers while tightening the nut, being very careful so as not to strip the threads or break the crystal. Replace the sapphire guard, positioning it by means of the oversize screw slots. Make certain that the sapphire and its supporting wire are centered in the guard. Tighten the guard screws. Before using, check to see that the sapphire projects far enough (approx. .020") beyond the guard so that the guard will not strike the record. If necessary, bend the guard a little.

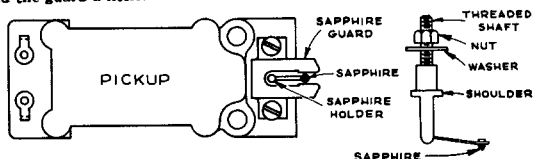

125Q7
TRIODE

50L6GT
POWER AMP.

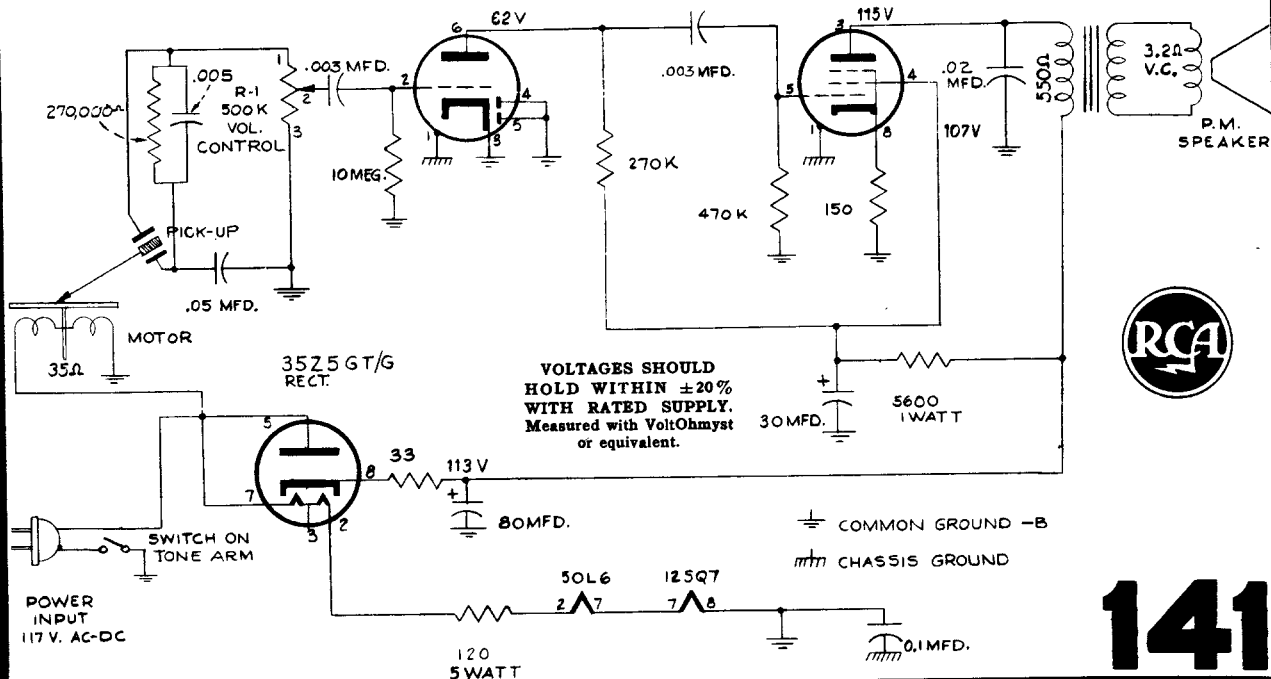

141



RCA VICTOR

65F and CV-42 Electrifier

Chassis No. (RC-1004E) (RS-1000)

Cathode Ray Alignment is the preferable method. Connections for the oscillograph are shown in the diagram.




Output Meter Alignment.—If this method is used, connect the meter across the voice coil and turn the receiver volume control to maximum.

Test Oscillator.—For all alignment operations, connect the low side of the test oscillator to the receiver chassis, and keep the output as low as possible to avoid AVC action.



Pre-Setting Dial.—With gang condenser in full mesh, the pointer should be set at the left-hand end dial calibration mark.

Step	Connect high side of the test oscillator to—	Tune test osc. to—	Turn radio dial to—	Adjust the following for maximum peak output
1	I-F grid in series with .01 mfd.	455 kc	Quiet point between 550 and 750 kc	C14, C15 (2nd I-F Trans.)
2	1A7GT grid in series with .01 mfd.			C12, C13 (1st I-F Trans.)
3	Antenna terminal in series with 200 mmfd.	1,720 kc	Tuning condenser rotor plates all out	C17 (osc.)
4		1,300 kc	1,300 kc signal	C9 (ant.)
5		455 kc	Quiet point between 550 and 750 kc	Adjust C22 for minimum output on strong 455 kc signal

Top-View

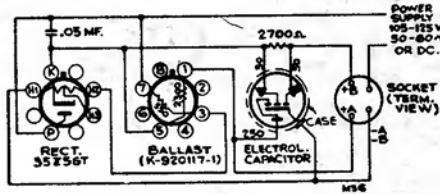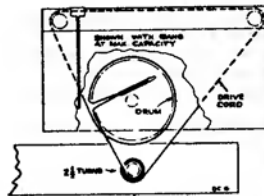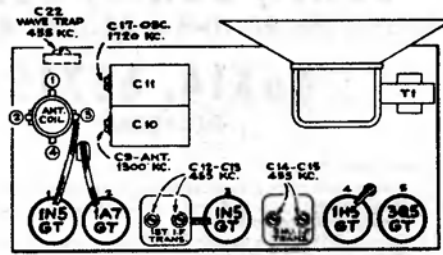

Electrifier Schematic

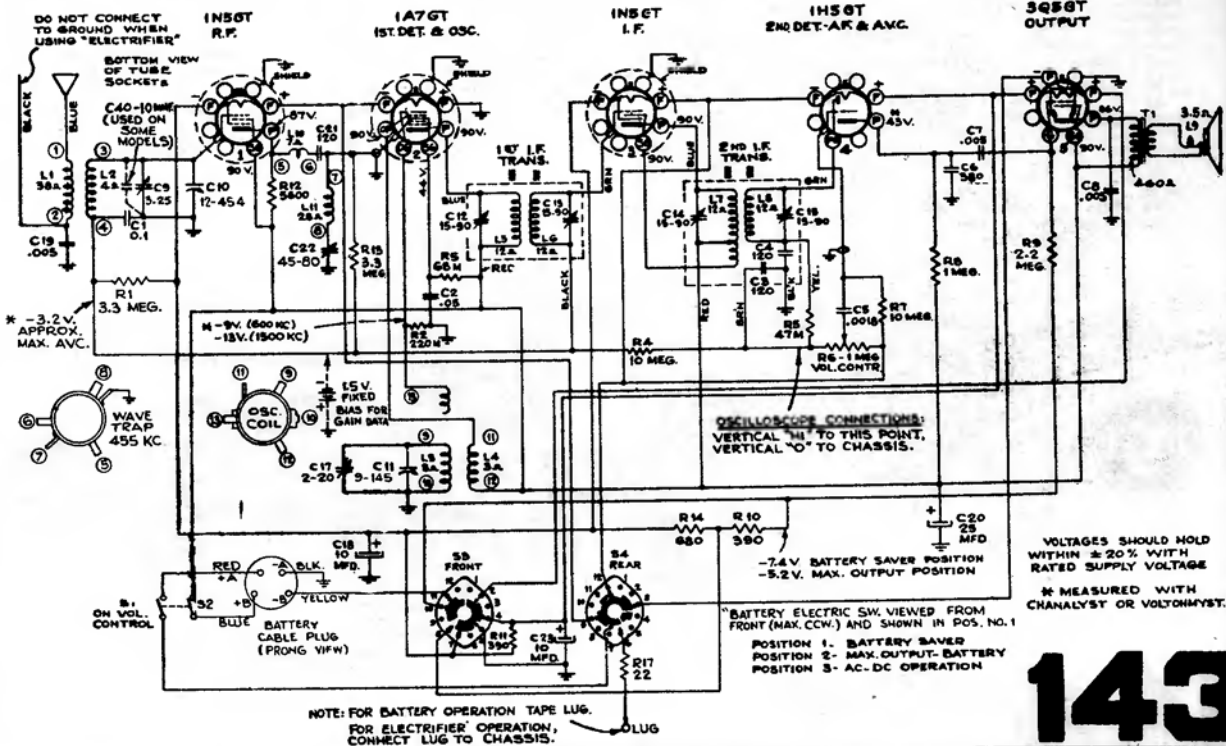

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

RCA VICTOR

66X11, 66X12, 66X13

Chassis No. RC-1046A, RC-1046, RC-1046B

66X14, 66X15

RC-1046B

Alignment Procedure

Test Oscillator.—Connect high side of test oscillator as shown in chart. Connect low side through a .01 mf capacitor to common "—B." Keep the output signal as low as possible to avoid AVC action.

Output Meter.—Connect leads between speaker voice coil and chassis. Turn volume control to maximum clockwise, tone control to maximum highs (clockwise).


Dial Pointer Adjustment.—Rotate tuning condenser fully counterclockwise (plates closed). Adjust indicator pointer to $2\frac{1}{4}$ " from left hand edge of dial back plate.

Steps	Connect the high side of test-oscillator to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output
1	Stator of C-12 in series with .01 mfd.	455 kc	Quiet-point 1,600 kc end of dial	Sec. and pri. 2nd I-F trans.
2				Sec. and pri. 1st I-F trans.
3	Ant. lead in series with 200 mmfd.	1,600 kc	1,600 kc	C14 (osc.)*
4		1,300 kc	1,300 kc	C13 ant.
5		600 kc	600 kc	L4 (osc.) Rock in
6	Repeat steps 3, 4 and 5.			

*Left hand osc. trimmer should be pre-set approx. $\frac{1}{4}$ turn from tight.

DISTANCES IN INCHES FROM LEFT HAND EDGE OF DIAL BACK PLATE



600 KC. 3IN. 1300 KC. 6 $\frac{1}{2}$ IN. 1600 KC. 6 $\frac{1}{2}$ IN.

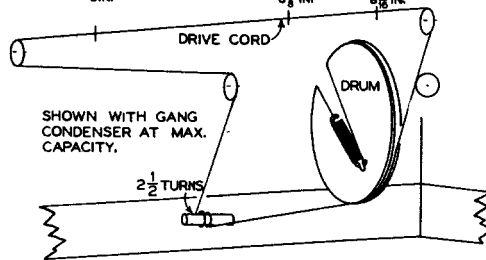


Dial-Indicator and Drive Mechanism

Critical Lead Dress

1. Dress output plate bypass capacitor (C-11 .02 mf) against chassis.
2. Dress 35L6GT plate lead (red) against chassis and away from volume control, leads and terminals.
3. Dress audio coupling capacitor (C-7 .02 mf) away from 35L6GT heater leads.
4. Dress tone control lead against front apron.
5. Dress 2nd i-f yellow and brown leads away from output plate bypass capacitor (C-11, .02 mf.) and away from all heater leads.
6. Dress lead to speaker voice coil away from tuning shaft "C" washer.
7. Dress tone control capacitor (C-10, .002 mf.) away from oscillator coil.
8. Dress all uninsulated leads away from each other and away from chassis to prevent short circuits.
9. Dress blue and green leads of both i-f transformers back in shields leaving exposed lengths as short as possible.

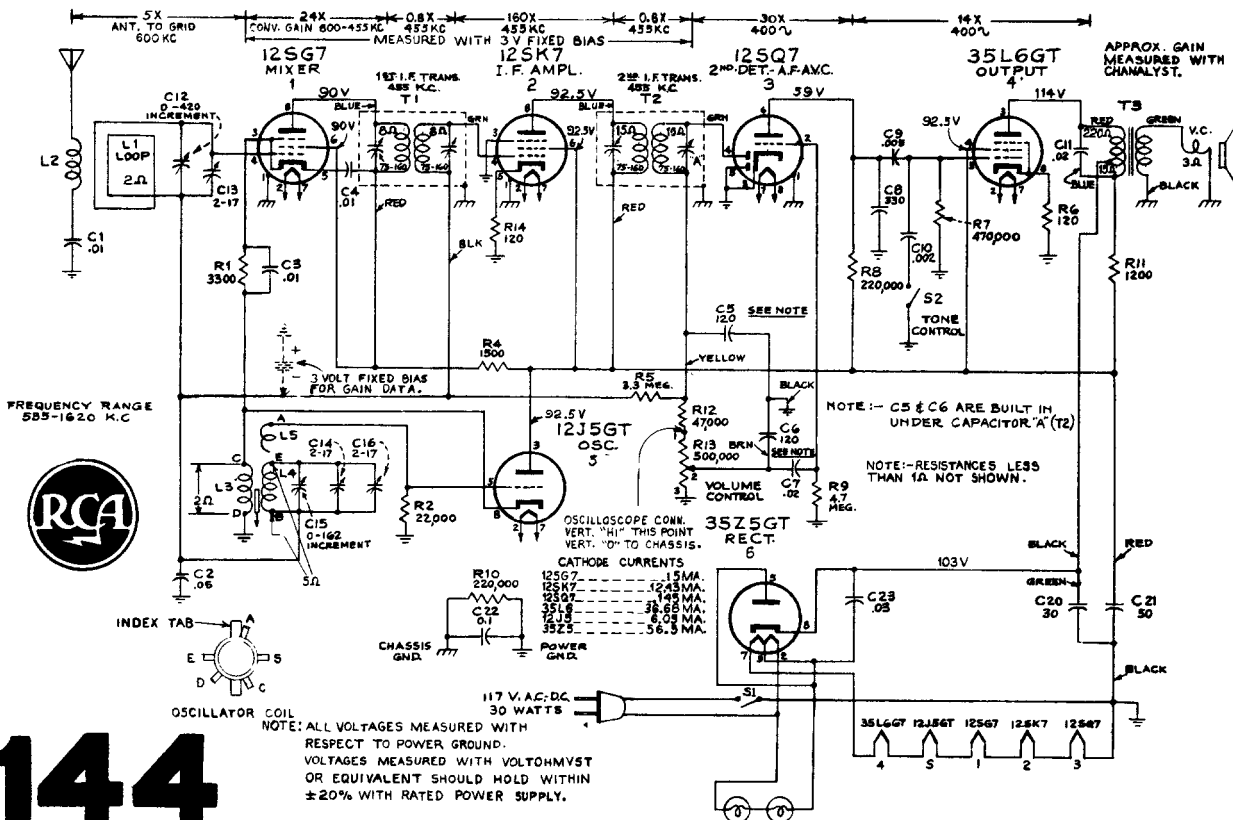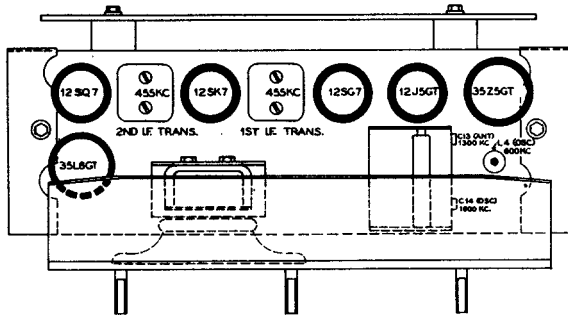

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

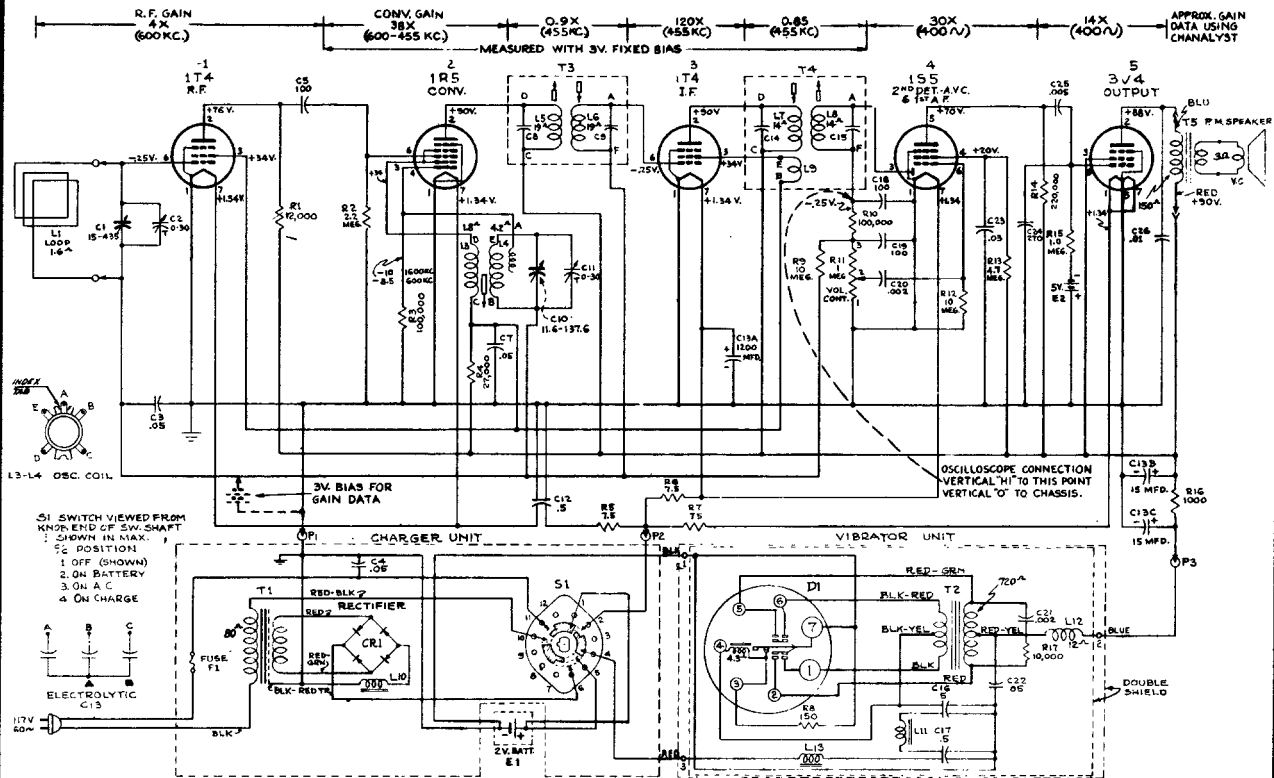

Cathode Ray Alignment is the preferable method. Connections for the oscilloscope are shown on the schematic diagram.


Output Meter Alignment.—If this method is used, connect the meter across the voice coil and turn the receiver volume control to maximum.

Test Oscillator.—For all alignment operations, connect the low side of the test oscillator to the receiver chassis and keep the oscillator output as low as possible to avoid AVC action.

Steps	Connect the high side of test-oscillator to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output
1	High side of loop (Green lead) in series with 0.1 mfd.	455 kc	Gang at max. cap.	L7, L8, 2nd I.F. trans L5, L6, 1st I.F. trans.
2	220 mmf. in series with a single turn loop 4/8 in., approx. 3 in. from receiver loop.	1600 kc	1600 kc "C"	C11 Osc. C2 R.F.
3	Bottom shield cover in place and chassis in cabinet)	600 kc	600 kc "B"	L4 Osc. Rock in
4		1600 kc	1600 kc "C"	C11 Osc.

Note.—In alignment, if possible, it is advisable to utilize an external source of "B" voltage. This will facilitate accessibility of the various trimmers.


Calibration.—It is not necessary to refer to the dial scale for calibration. Three reference marks on the dial backing arc used. With the gang completely meshed, the pointer should be set at "A" as shown in the diagram. For alignment purposes, 600 kc. will then fall at "B", and 1600 kc. will be at "C"

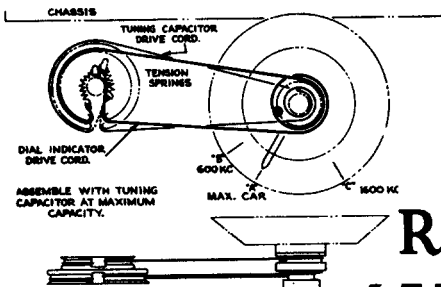

Operation.—This set operates on battery, or 117 Volt, 60 cycle AC (Battery in set, and in good condition). Provision is made so that when the set is operating on "AC" the battery is receiving a slight charge. In the "Charge" position, the rate of charge is much higher. A completely discharged battery will recharge in about 24 hours on "Charge". It is possible to overcharge the battery in the "AC" position, so it is advisable to play the receiver on "Battery" until slightly discharged whenever the battery has become fully charged on "AC"

Battery Charging.—With the cabinet back removed, two balls (1 red and 1 green) may be seen through an opening in the battery compartment cover. Both balls at top—battery full charged—Green ball sinks when battery is 20% discharged. Both balls at bottom—battery 90% discharged. Re-charge by connecting set to 115 volt 60 cycle power supply and set power switch to "CHG". Do not overcharge—check fuse if battery does not charge—do not allow battery to remain in discharged condition.

Water level.—Water Level should be checked frequently and distilled water or tap water, if it is used for cooking and drinking, added if required to bring liquid level up to the indicator line visible through the opening in the battery compartment cover. To add water; Remove line cord from power supply, remove cabinet back, remove thumb nuts and battery compartment cover, pull the battery out sufficiently to expose the red fill cap (pull on strap at bottom of battery), do not strain battery leads. Unscrew the red fill cap and add sufficient water to bring liquid level up to the indicator line.

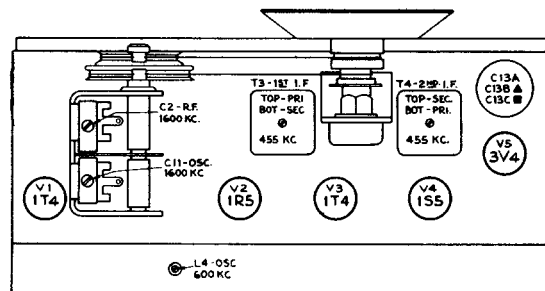


RCA VICTOR

65BR9 PORTABLE 145

Chassis No. RC-1045

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

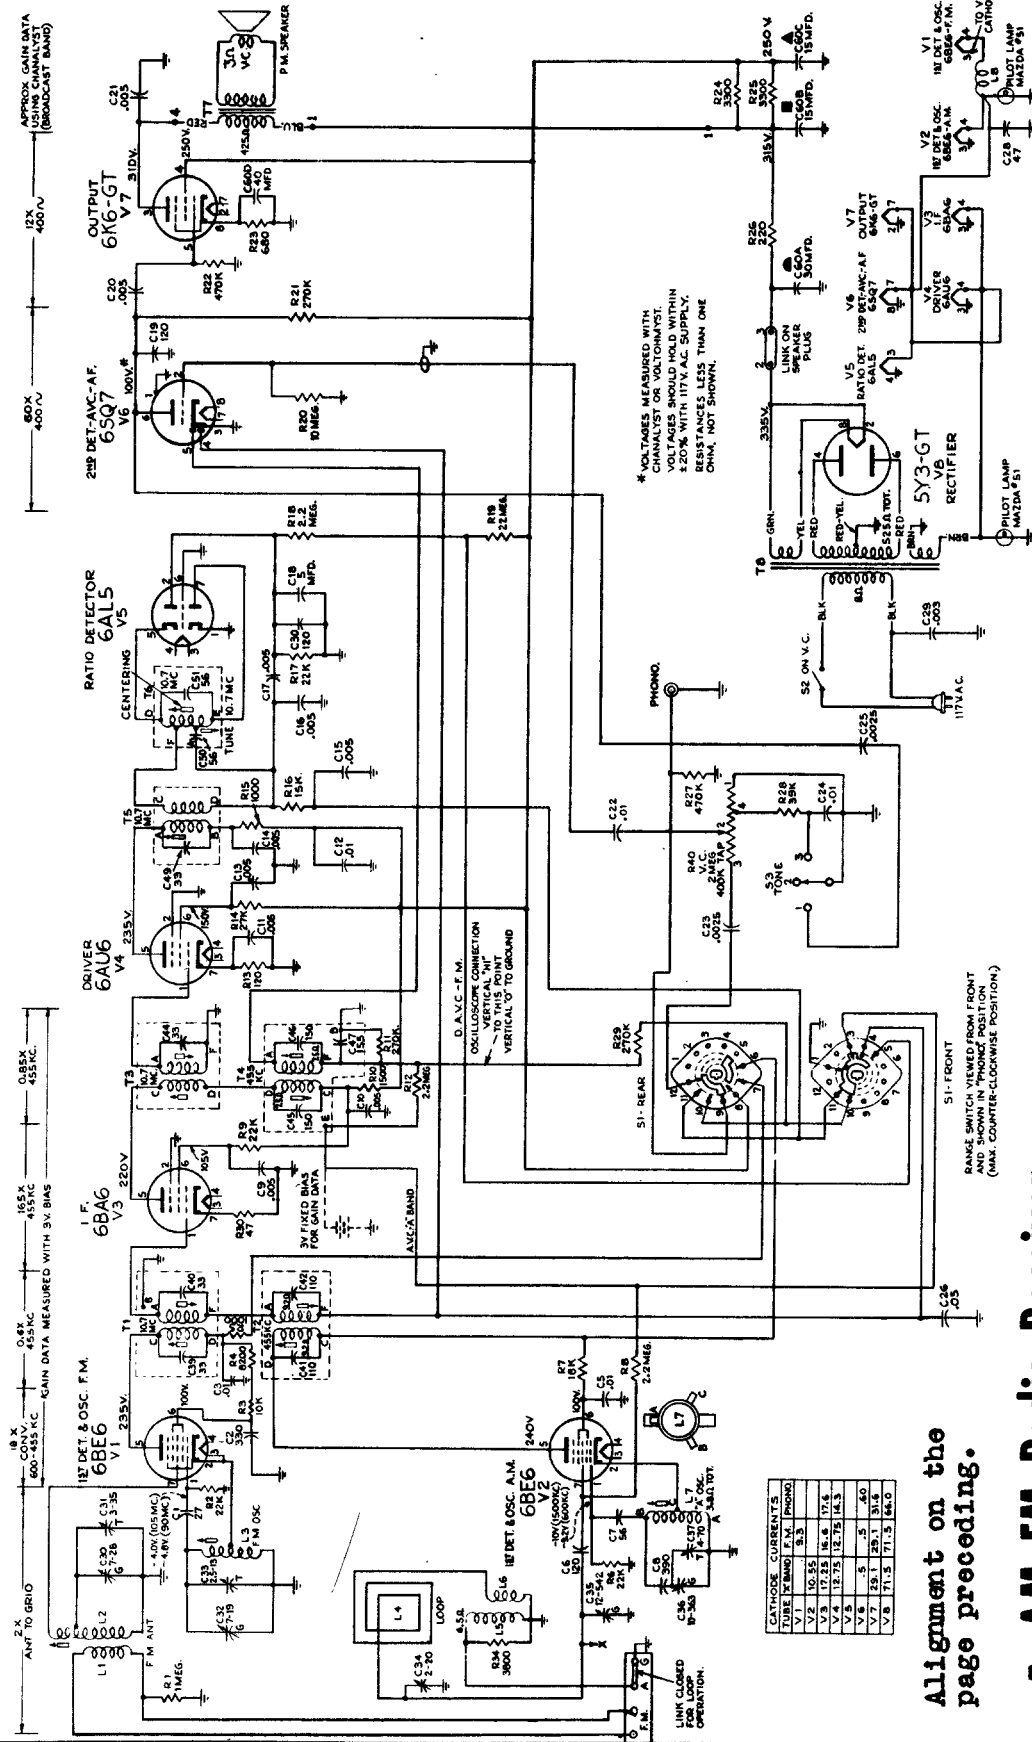

Alignment on the page preceding.

AM-FM Radio Receiver

Critical Lead Dress


1. Dress capacitor C-1 near chassis base.
2. Dress lead from pin No. 5, No. 1 6BE6 to terminal C, of transformer T1, as near the bottom of the FM shelf as possible.
3. Dress capacitor C-23 next to chassis.
4. The lead from capacitor C-23 to the high side of the volume control must be dressed next to chassis along front apron.
5. Dress resistor R-20 near chassis base.

Schematic Diagram


6. Dress all a-c leads away from volume control.
7. Solder FM antenna coil primary leads to terminal board with as short a lead length as practical.
8. Make all FM leads as short as possible. Dress of all other leads should be similar to original wiring.
9. The lead from pin No. 2, 6BA6, to ground must be dressed as close to the base and as near to the back apron as possible. This lead provides degeneration for the IP stage and neither its length, nor the point at which it is grounded to the chassis should be changed.

R C A VICTOR
Models 68R1, 68R2,
68R3, & 68R4
Chassis No. RC-608



MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

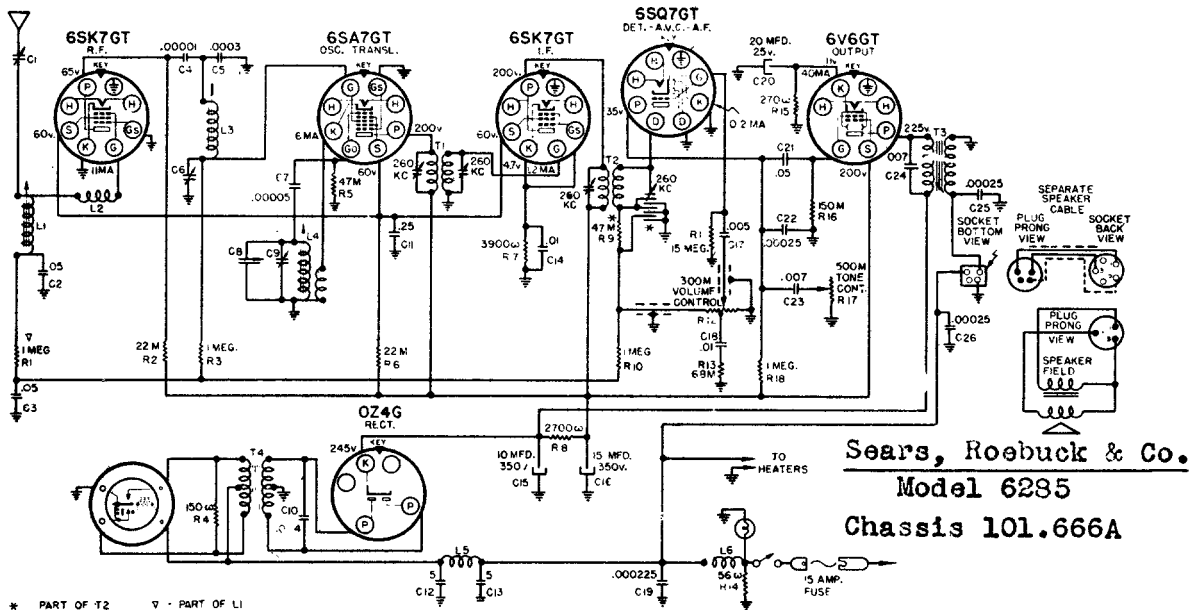

* PART OF T2 ∇ PART OF L1
TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO CHASSIS AND ARE TAKEN WITH NO SIGNAL. WHERE NO READING IS GIVEN, THE VOLTAGE IS ZERO OR TOO LOW TO READ.

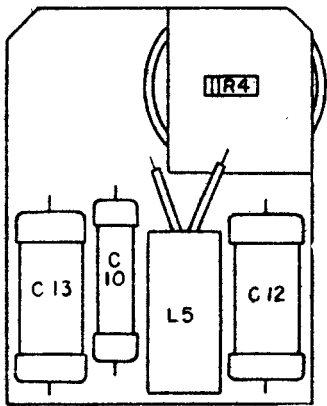

LOCATION OF PARTS UNDER POWER SUPPLY 101.666A-1B

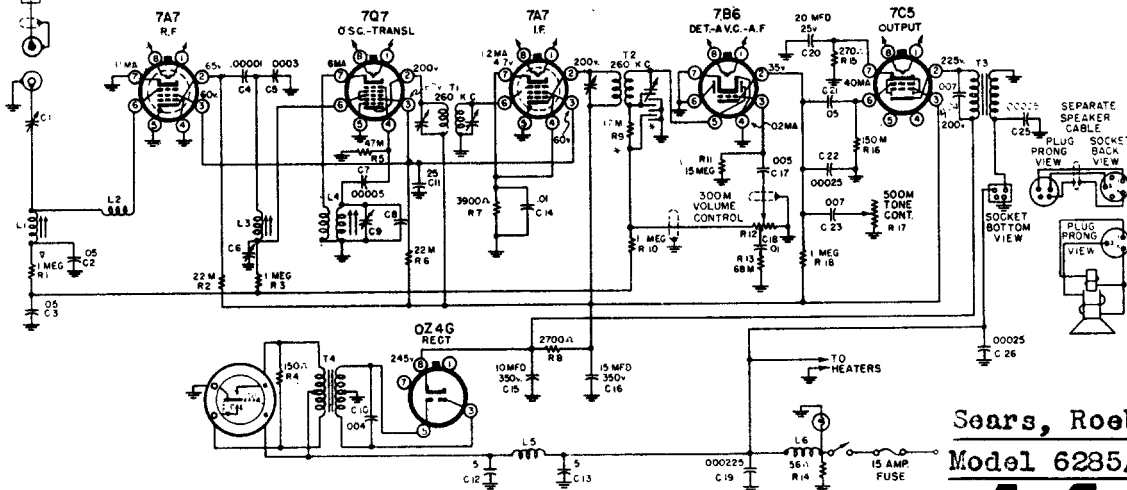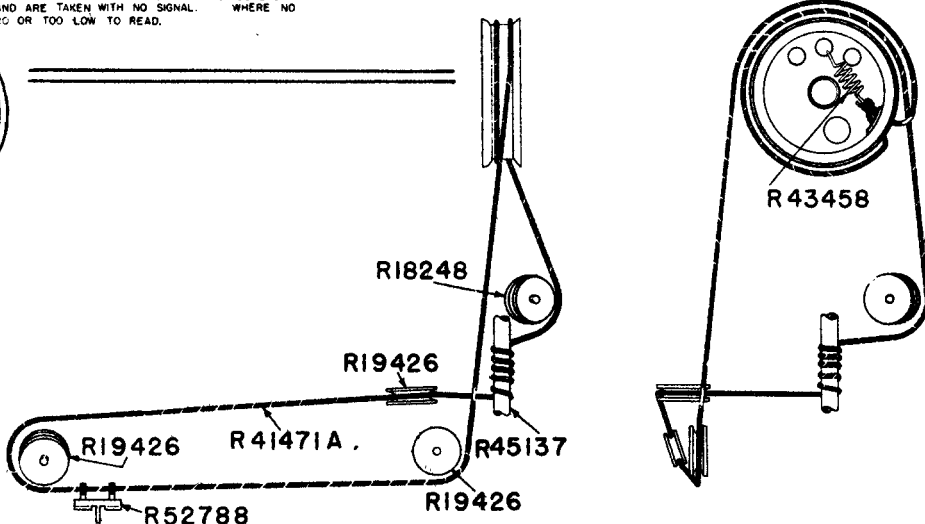


* PART OF T2 ∇ PART OF L1
TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO CHASSIS, AND ARE TAKEN WITH NO SIGNAL. WHERE NO READING IS GIVEN, THE VOLTAGE IS ZERO OR TOO LOW TO READ.
*A BATTERY - 6 VOLTS CURRENT DRAIN - 6.5 AMPERES

DIAGRAM 101.666-1B

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

Sears, Roebuck & Co. Catalog Model 8000, Chassis 132.838

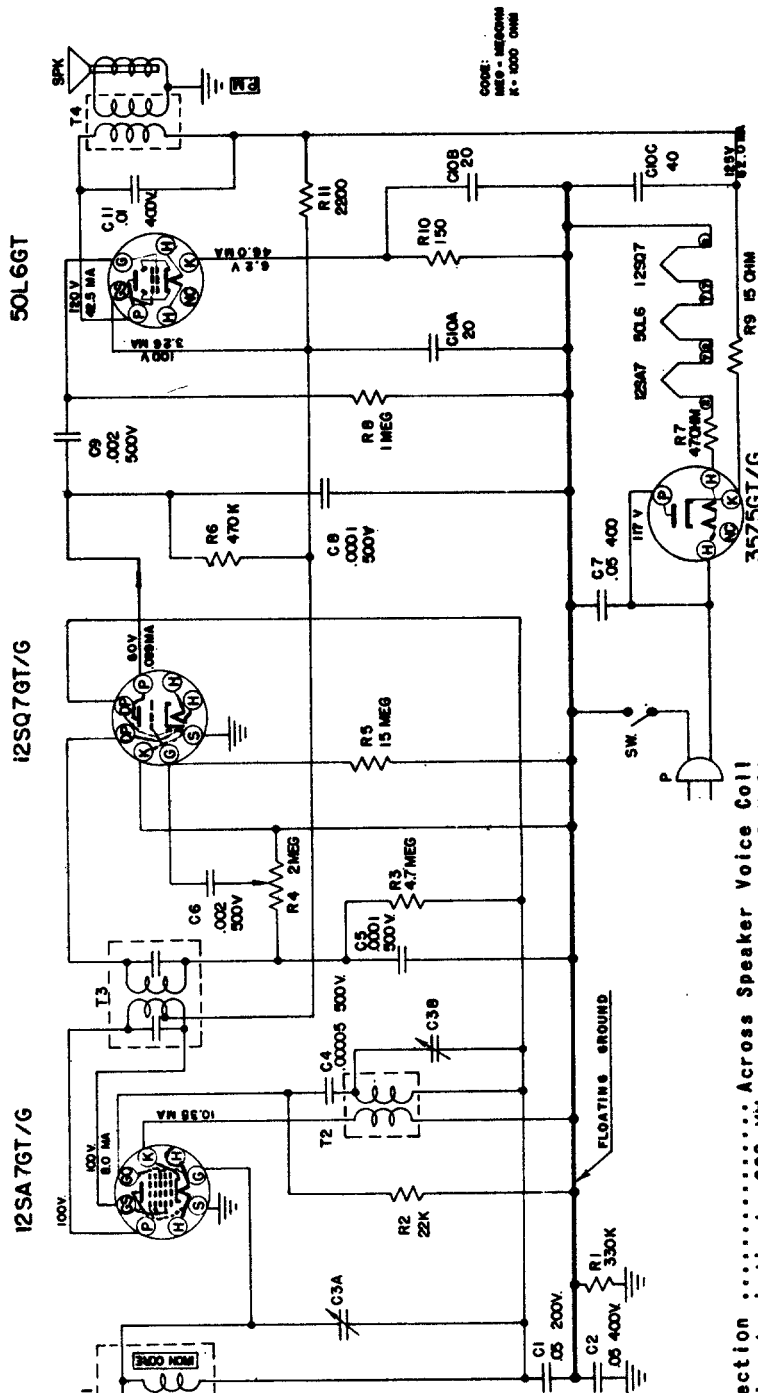

CODE:
MFG - MFGOMM
R - 1000 OHM

NOTE:
TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO FLOATING GROUND AND ARE TAKEN WITH NO SIGNAL. VOLTAGE AT 117 VOLTS WHERE NO READING IS GIVEN THE VOLTAGE IS ZERO OR TOO LOW TO READ.

Output meter connection Across Speaker Voice Coil
 Output meter reading to indicate 200 MW8 Volt
 Generator modulation 30% 400 Cycles
 Position of volume control Fully Clockwise
 Position of dial pointer with variable condenser fully closed Down



POSITION OF VARIABLE	GENERATOR FREQUENCY	DUMMY ANTIENNA	GENERATOR CONNECTION HIGH SIDE	GENERATOR CONNECTION GRD. LEAD	ADJUST TRIMMERS IN ORDER SHOWN	TRIMMER FUNCTION
Open	455 KC	.05 Mfd.	Mixer Grid	Floating Gnd	T3	IF
Open	1620 KC	50 Mmf.	*Ant. Lug	Float. Gnd.	C3B	Oscillator
1400 KC	1400 KC	50 Mmf.	*Ant. Lug	Float. Gnd.	C3A	Antenna
600 KC	600 KC	50 Mmf.	*Ant. Lug	Float. Gnd.	**Check Point	Antenna

* Antenna hank lug on antenna coil with hank removed.
 ** Check sensitivity at 600 KC. If low, adjust antenna section plates of variable for maximum output at 600 KC.
 The alignment procedure should be repeated in the original order for greatest accuracy. Always keep the output from the signal generator at its lowest possible value to make the A. V. C. action of the receiver ineffective.



SCHEMATIC LABELING	PART NO.	DESCRIPTION
R1		Resistor, 220,000 Ohms, 1/4 Watt
R2		Resistor, 22,000 Ohms, 1/4 Watt
R3		Resistor, 4,700,000 Ohms, 1/4 Watt
R4		Resistor, 2,000,000 Ohms, 1/4 Watt
R5		Resistor, 15,000,000 Ohms, 1/4 Watt
R6		Resistor, 470,000 Ohms, 1/4 Watt
R7		Resistor, 470 Ohms, 1/4 Watt
R8		Resistor, 1,000,000 Ohms, 1/4 Watt
R9		Resistor, 15 Ohms, 1/4 Watt
R10		Resistor, 150 Ohms, 1/4 Watt
R11		Resistor, 2,500 Ohms, 1/4 Watt
C1		Condenser, .05 Mfd., 200 V
C2		Condenser, .05 Mfd., 400 V
C3A, C3B		Condenser, .0001 Mfd., 500 V, Mica
C4		Condenser, .0001 Mfd., 500 V, Mica
C5		Condenser, .002 Mfd., 500 V, Mica
C6		Condenser, .002 Mfd., 500 V, Mica
C7		Condenser, .05 Mfd., 400 V
C8		Condenser, .05 Mfd., 400 V
C9		Condenser, .002 Mfd., 500 V, Mica
C10A, C10B		Condenser, .001 Mfd., 500 V, Mica
C11		Condenser, .01 Mfd., 55 Volt
T1		Coil, Antenna
T2		Coil, Oscillator
T3		Coil, IF
T4		Speaker, 4" P.M., with Output Transformer
50L6GT		50L6GT Transformer
12SQ7GT		12SQ7GT Transformer, Output
12SA7GT		12SA7GT Line Cord with Plug
12SA7GT		12SA7GT Cabinet, Ivory
12SA7GT		12SA7GT Cabinet, Dark
12SA7GT		12SA7GT Cabinet, Light
12SA7GT		12SA7GT Cabinet, Front
12SA7GT		12SA7GT Cabinet, Rear
12SA7GT		12SA7GT Cabinet, Top
12SA7GT		12SA7GT Cabinet, Bottom
12SA7GT		12SA7GT Cabinet, Side
12SA7GT		12SA7GT Cabinet, Back
12SA7GT		12SA7GT Cabinet, Front Panel
12SA7GT		12SA7GT Cabinet, Rear Panel
12SA7GT		12SA7GT Cabinet, Top Panel
12SA7GT		12SA7GT Cabinet, Bottom Panel
12SA7GT		12SA7GT Cabinet, Side Panel
12SA7GT		12SA7GT Cabinet, Back Panel

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

Sears, Roebuck & Co.
Catalog Models 7086 & 7103
Chassis 110.466, 110.466-1

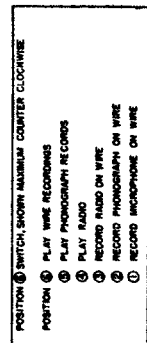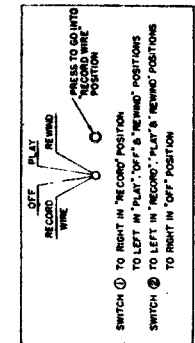

NOTE-1
NOTE-2

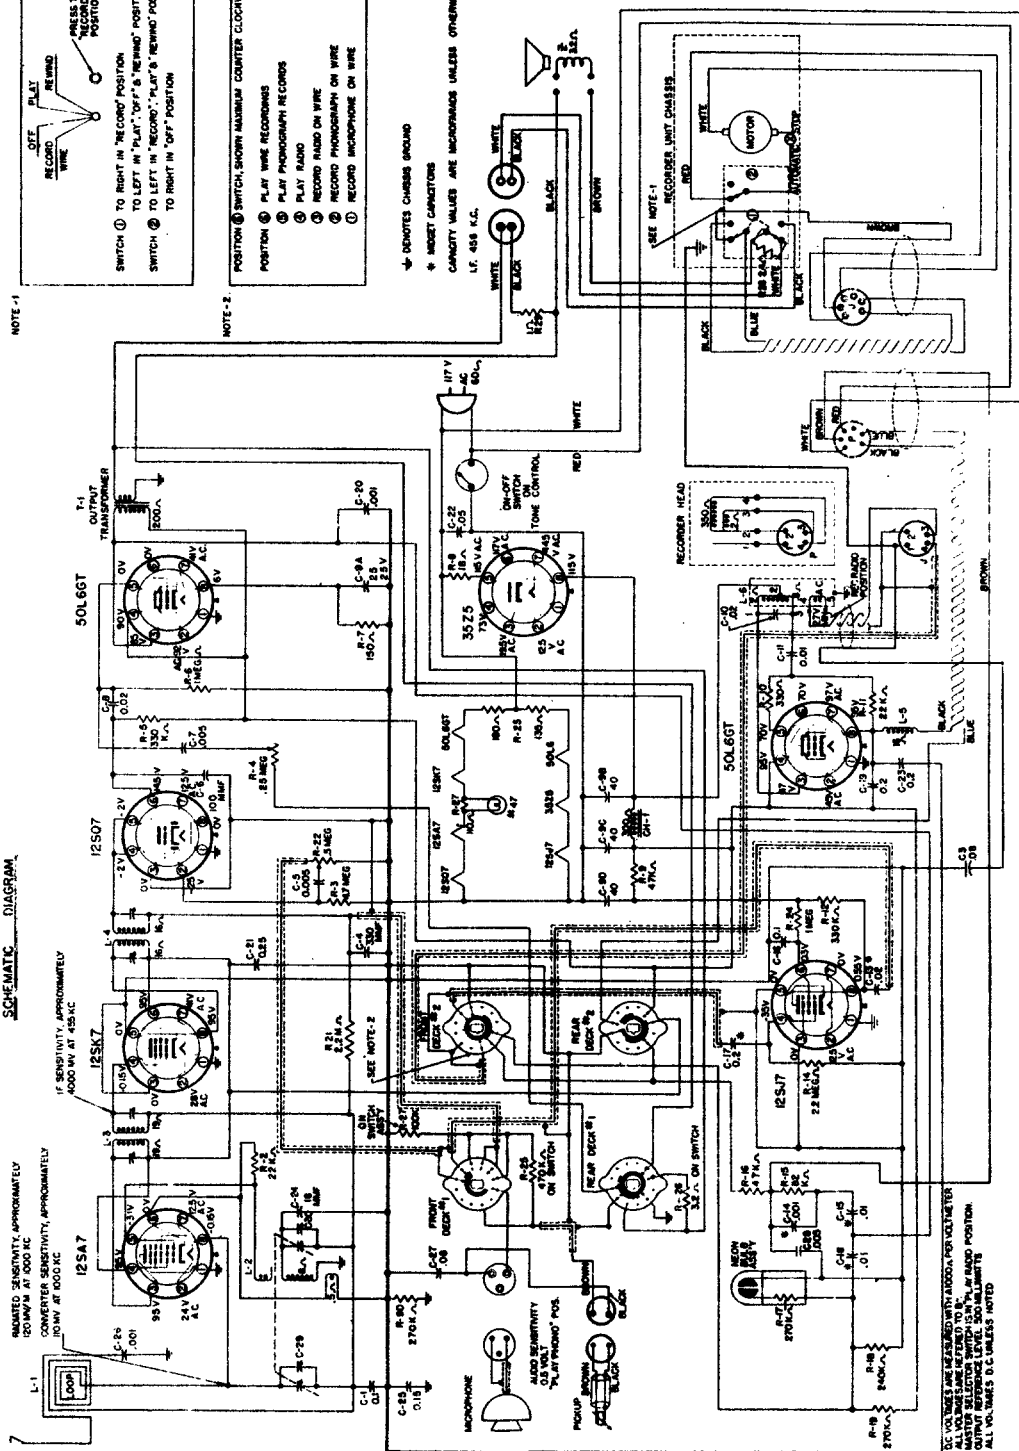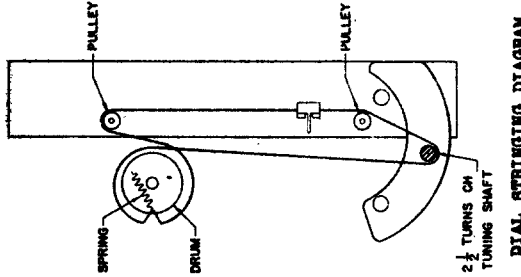


Sears, Roebuck & Co.
Catalog Models 7086 & 7103
Chassis 110.466, 110.466-1

POSITION OF VARIABLE	GENERATOR FREQUENCY	DUMMY ANTENNA	GENERATOR CONNECTION	ADJUSTMENTS (In order shown)	FUNCTION
Any I.C. 1500 I.C. 600 I.C.	455 1500 I.C. 600 I.C.	.2 mfd. *** ***	Grid. 12BA7GT *** See Note Below *** See Note Below (Check-Point)	L3, L4 C30, C29	I.F. P. Occ. R. P. (Check-Point)


***Run a wire from the output terminal of generator near the receiver. No connection is made between the signal generator and the receiver.

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

Sears, Roebuck & Co.
 Catalog Nos. 7165, 7166
 Chassis 101.823, -1, -A

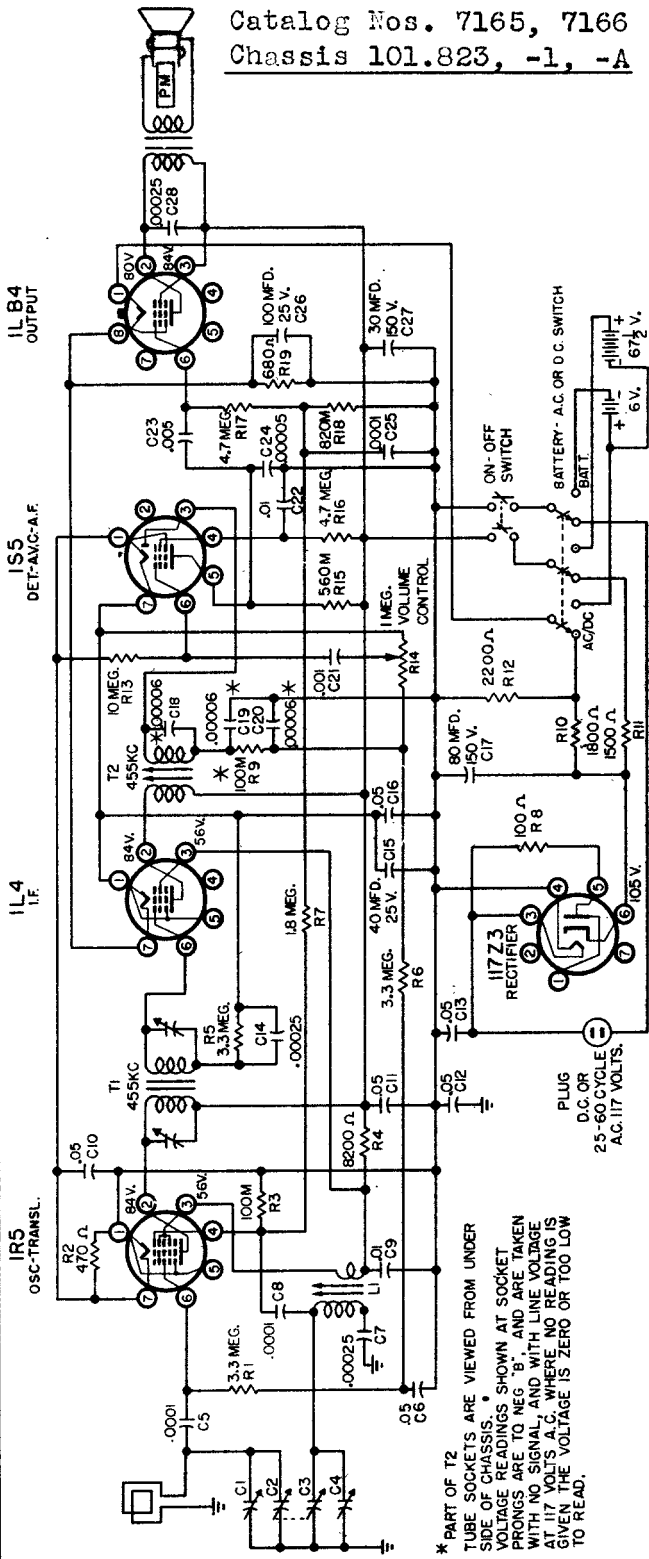


Sears, Roebuck & Co.
 Catalog Nos. 7020, 7021
 Chassis 101.807, -A

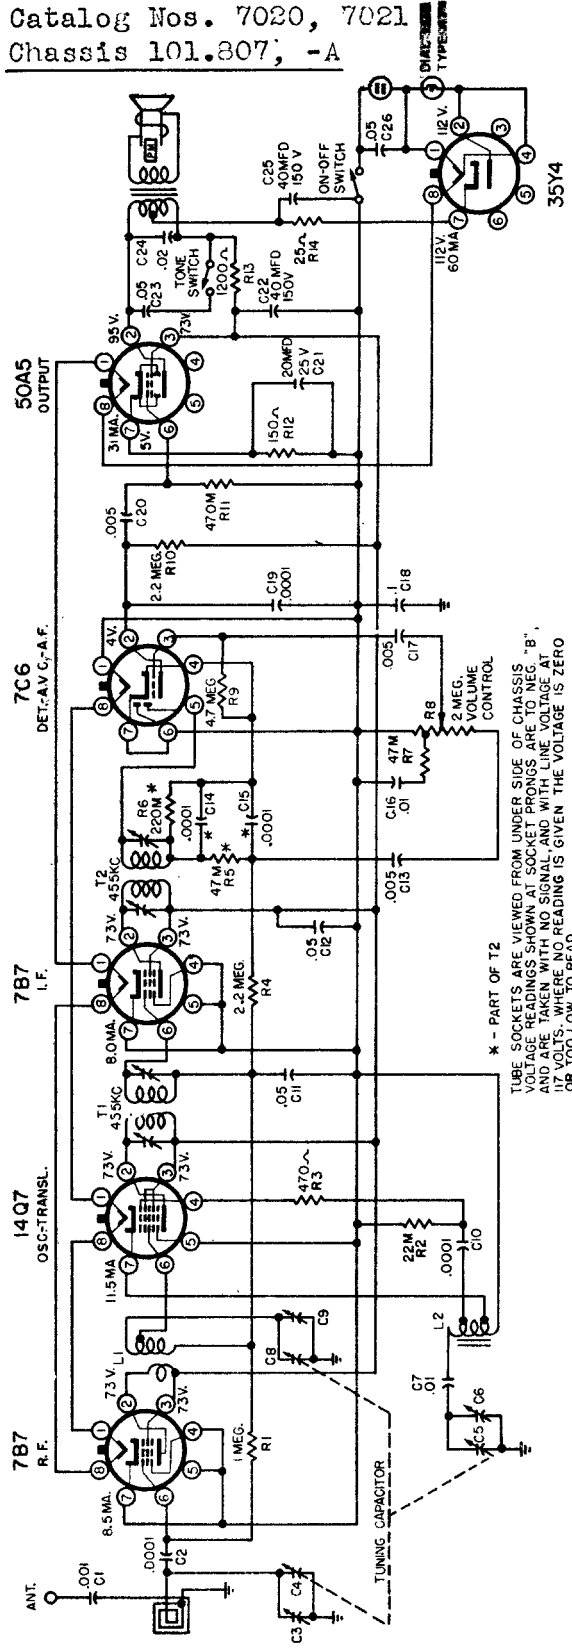

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

Sears, Roebuck & Co.
Model 8150, Chassis 109.634

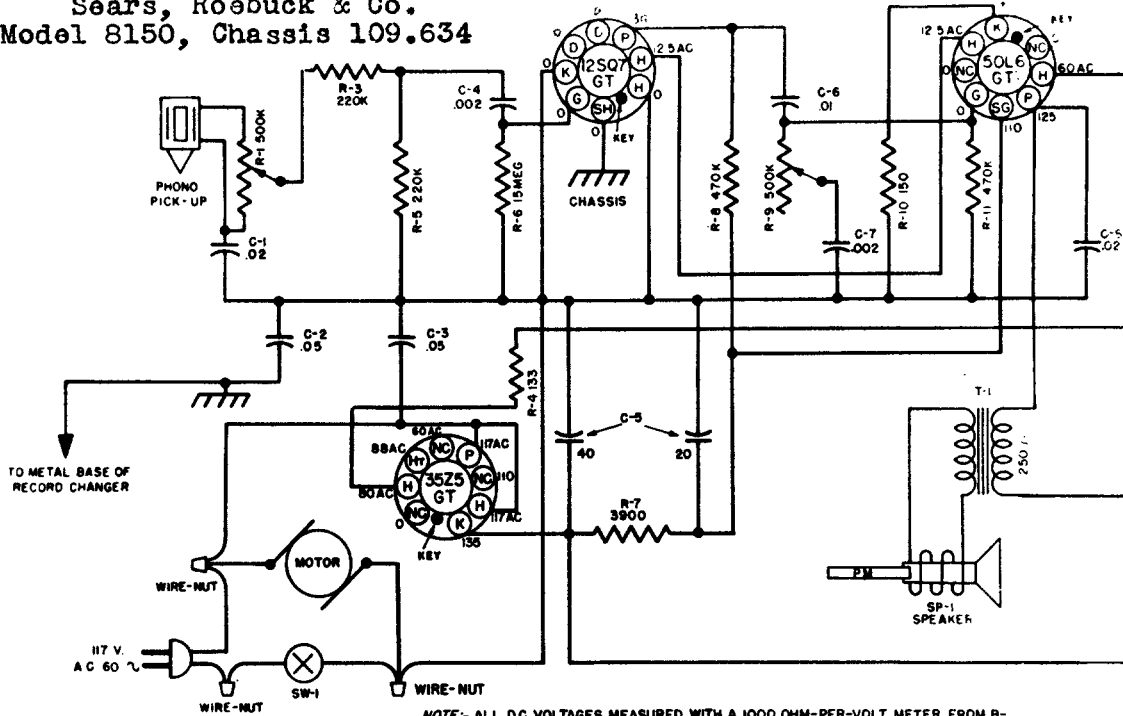

NOTE:- ALL DC VOLTAGES MEASURED WITH A 1000 OHM-PER-VOLT METER FROM B- TO SOCKET CONTACT INDICATED. ALL VOLTAGES ARE POSITIVE DC. UNLESS OTHERWISE MARKED.

VOLUME CONTROL FULLON. ZERO SIGNAL INPUT.

TONE CONTROL IN CLOCKWISE POSITION.


LINE VOLTAGE 117 VOLTS A.C.

RESISTANCE VALUES ARE IN OHMS UNLESS OTHERWISE NOTED


"K" EQUALS 1000 OHMS, "MEG" EQUALS 1,000,000 OHMS

CAPACITY VALUES ARE IN MICROFARADS UNLESS OTHERWISE NOTED.


ALL TUBE SOCKETS ARE SHOWN FROM PIN END VIEW.

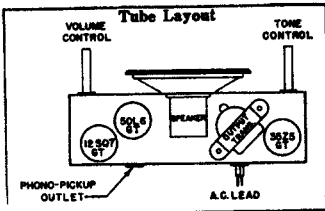

Sears, Roebuck & Co. Catalog No. 8144, Chassis 431.199

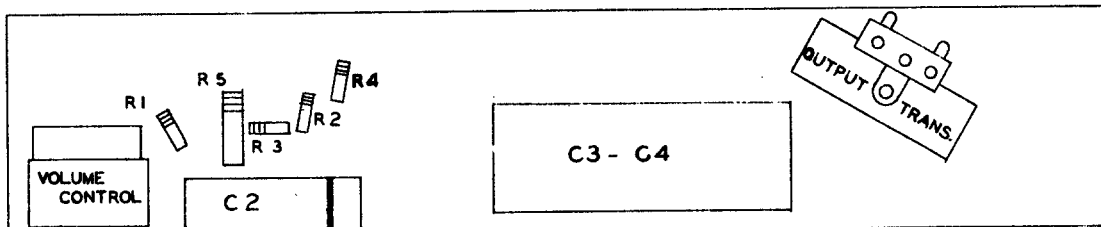


LOCATION OF PARTS UNDER CHASSIS

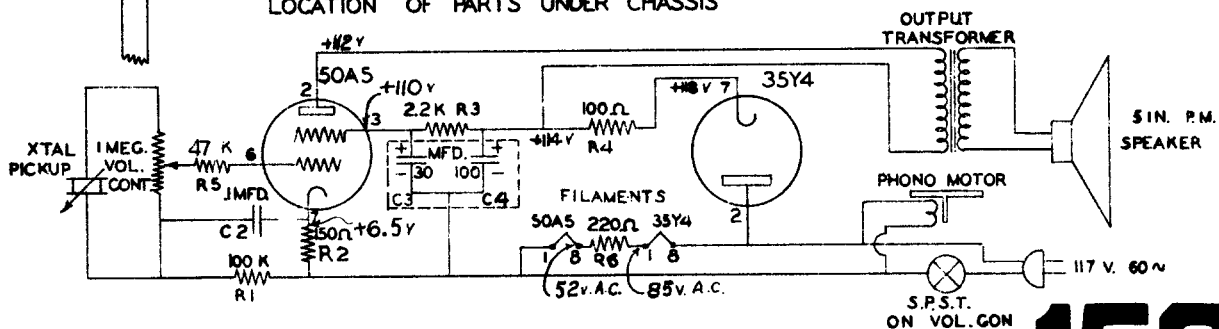

AMPLIFIER SCHEMATIC DIAGRAM 431.199

153

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

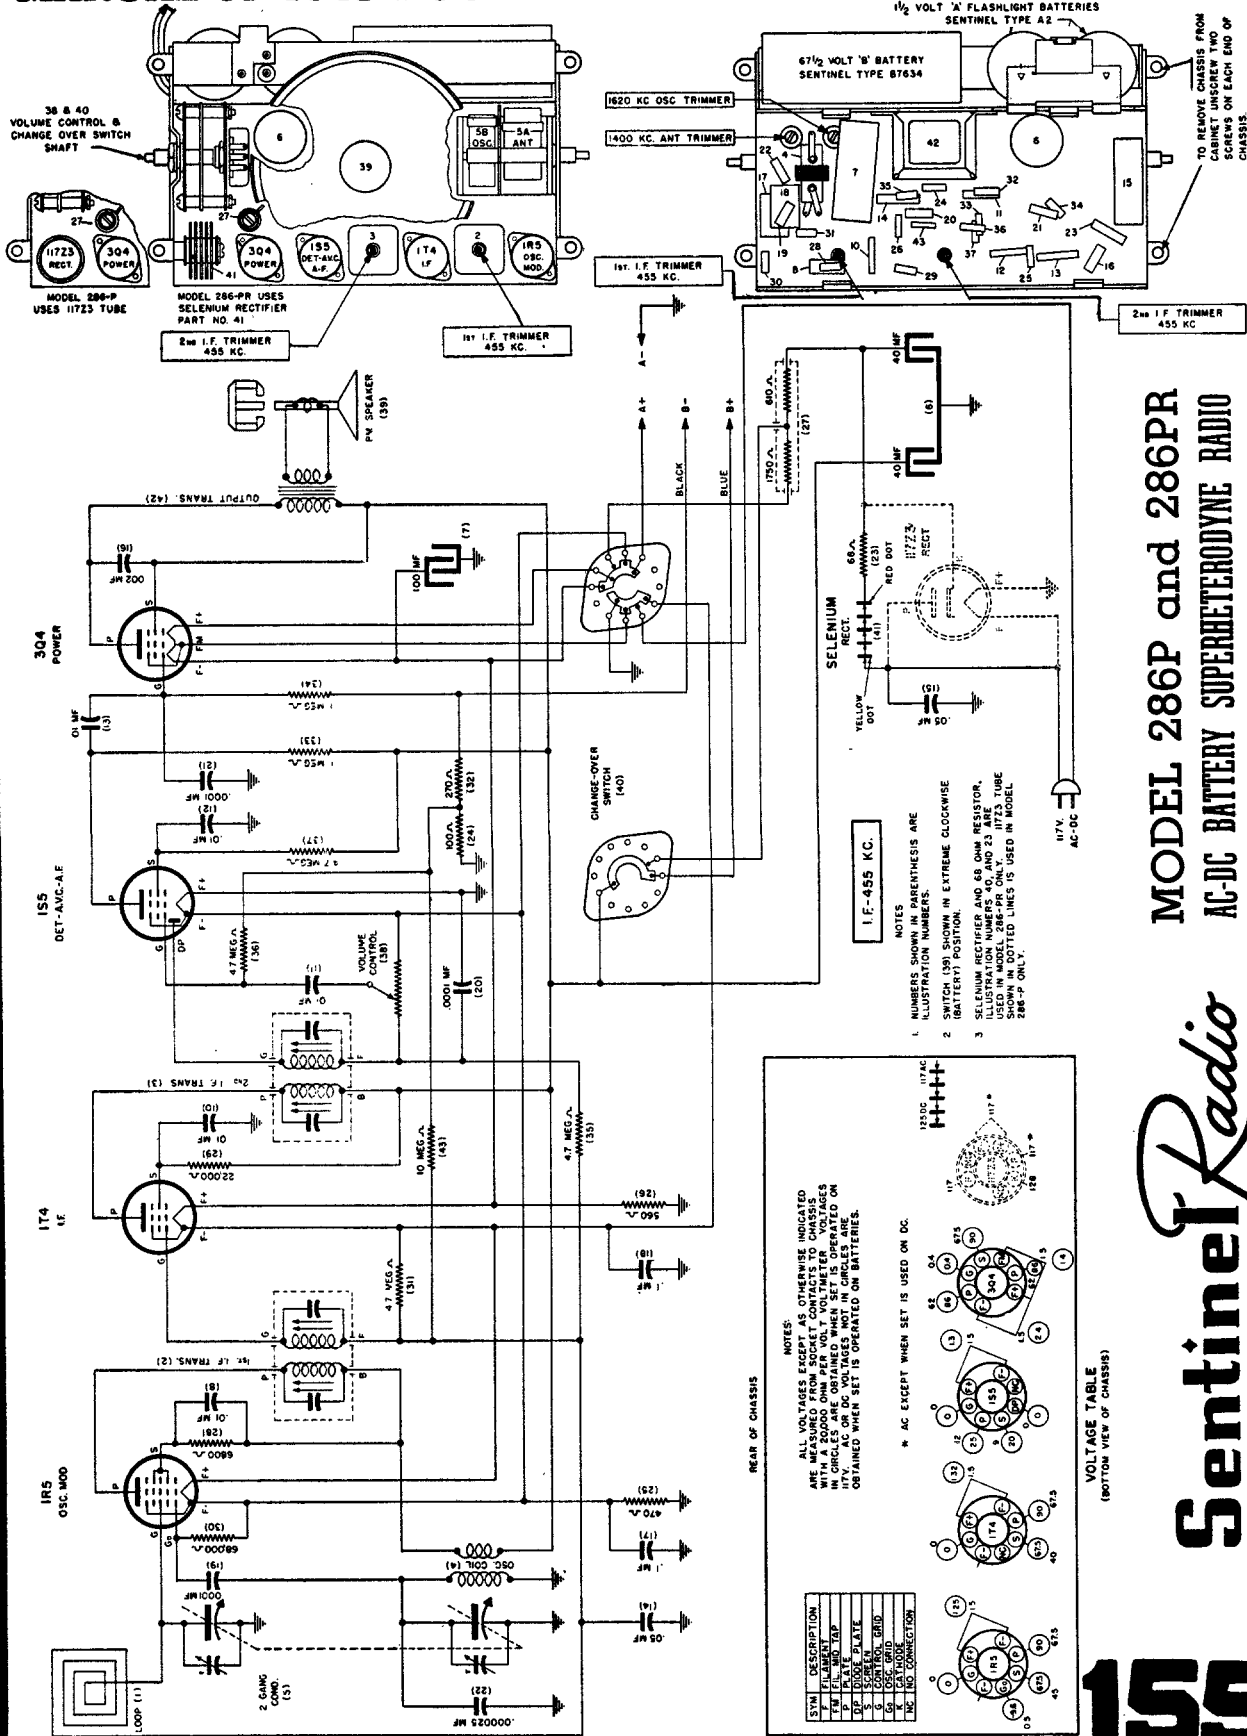


MODEL 286P and 286PR
AC-DC BATTERY SUPERHETERODYNE RADIO

Sentinel Radio

155

Sentinel Radio MODELS 293-CT and 1U-293-CT

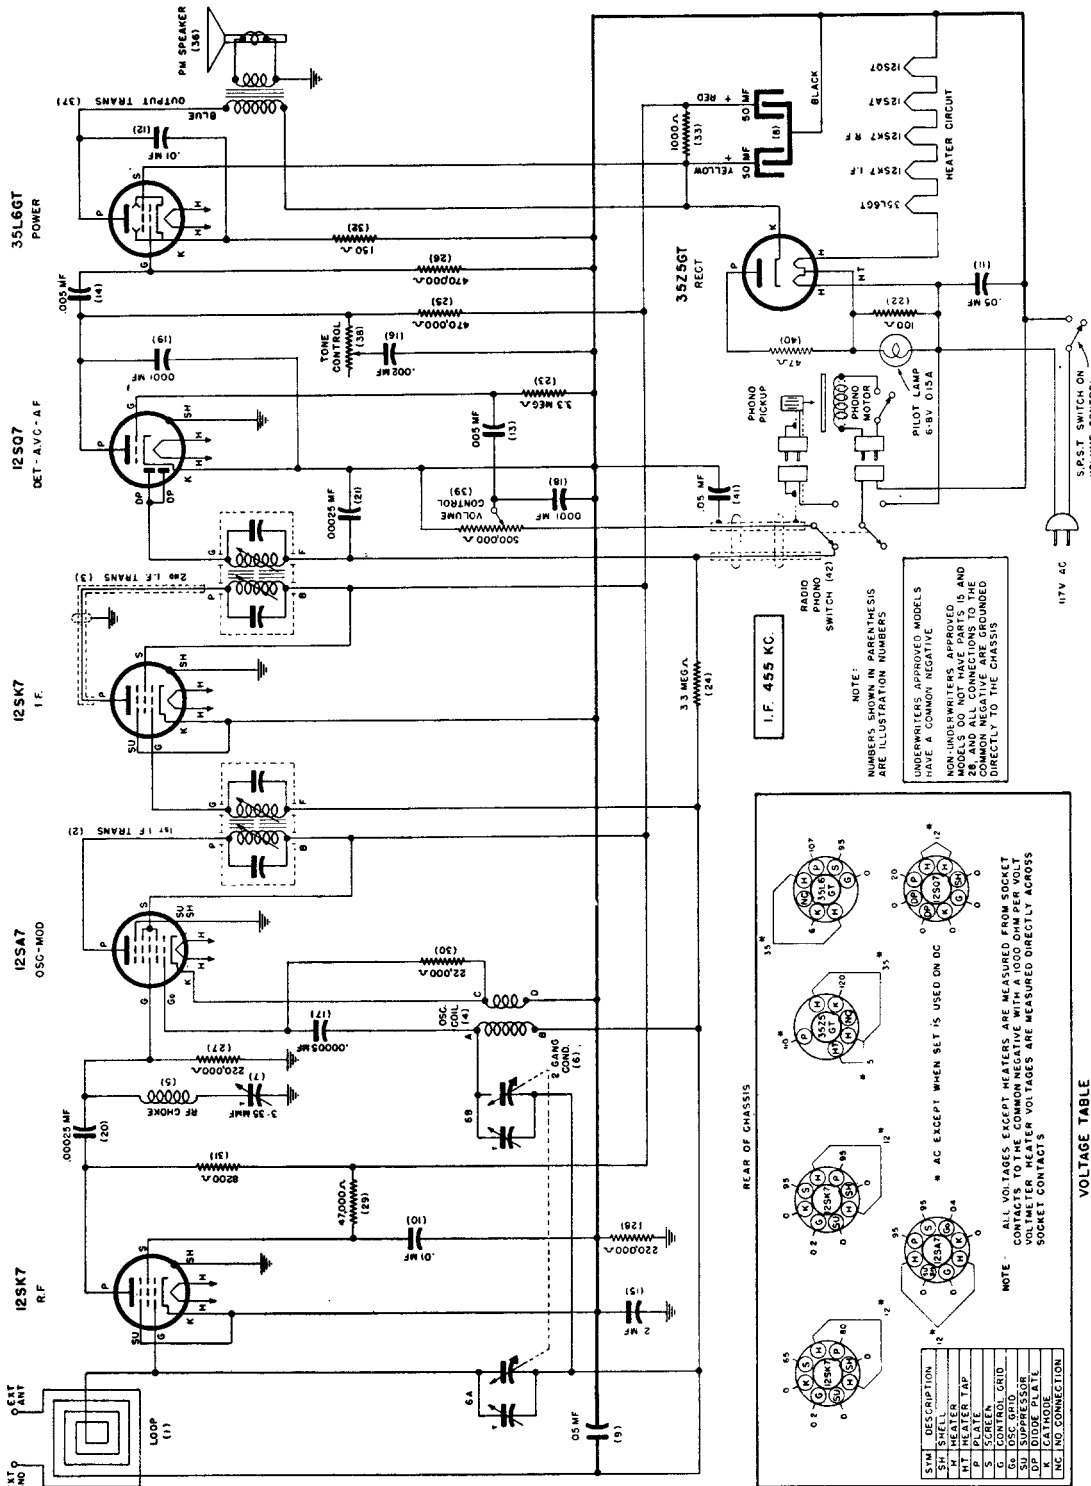

Sentinel Radio MODELS 293-CT and 1U-293-CT

ALIGNMENT PROCEDURE

For Alignment procedure read tabulations from left to right, and make the adjustment marked (1) first, (2) next, (3) third. **IMPORTANT: BEFORE ALIGNING, PLACE LOOP ANTENNA IN THE SAME POSITION IT WILL BE IN WHEN THE SET IS IN THE CABINET. BE SURE THAT IT DOES NOT MOVE WHILE ALIGNING.**

When adjusting 1650 kilocycle oscillator trimmer, 455 K.C. R.F. trimmer and 1400 kilocycle antenna trimmer, connect test oscillator to loop external antenna and ground connections with a .0002 Mfd. condenser in series with antenna lead.


TEST OSCILLATOR			Refer to parts layout diagram for location of trimmers mentioned below:
Steps	Set receiver dial to:	Adjust test oscillator frequency to:	
	Any point where no interfering signal is received	Exactly 455 K. C.	High side to grid of 12SA7 tube. Low side to chassis (if Model 293CT) or Common Negative (if Model 1U-293CT).
1	Rotate gang condenser to maximum capacity	Exactly 455 K. C.	To loop external antenna and ground connections
2	Rotate gang condenser to minimum capacity	Exactly 1650 K. C.	To loop external antenna and ground connections
3	Approximately 1400 K. C.	Approx. 1400 K. C.	To loop external antenna and ground connections

Adjust each of the 2nd I.F. transformer trimmer adjustment screws for maximum output, then adjust each of the 1st I.F. transformer trimmer adjustment screws for maximum output.


Adjust B. F. coil trimmer for minimum 455 K. C. signal.

Adjust 1650 K. C. oscillator trimmer for maximum output.

Adjust 1400 K. C. antenna trimmer for maximum output.

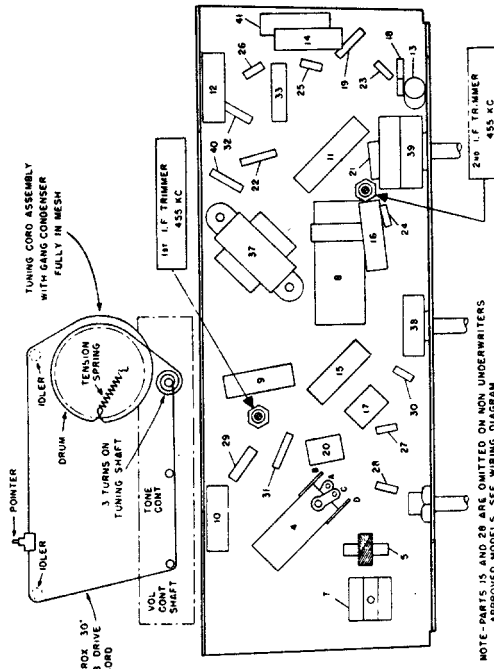

NOTE-PARTS 15 AND 28 ARE OMITTED ON NON UNDERWRITERS APPROVED MODELS. SEE WIRING DIAGRAM

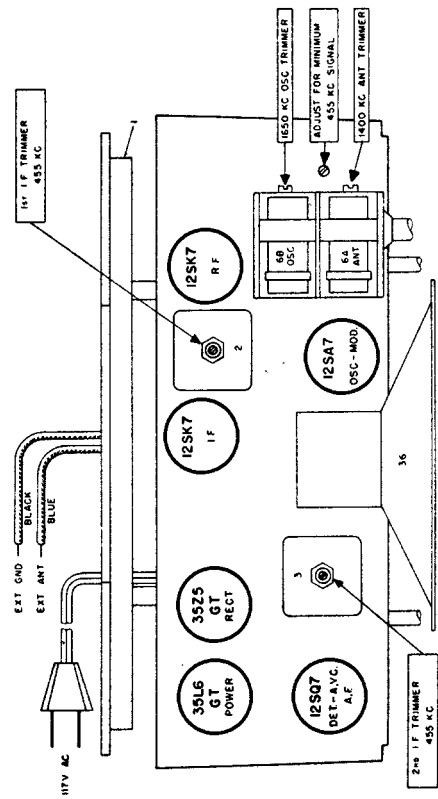

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

McMurdo Silver Company

INCORPORATED

MODEL 906 AM/FM SIGNAL GENERATOR

C1 - 10/210 mmfd. air capacitor
 C2, C2a - 3/30 mmfd. air capacitors
 C3 - 50 mmfd. tubular ceramic $\pm 20\%$
 C4a, C4b - .1 mfd., 400 volt, $\pm 20\%$
 C5a thru C5e - 500 mmfd. ceramic $\pm 20\%$
 C6, C6a - 500 mmfd. ceramic $\pm 2\%$
 C7a thru C7c - .02 mfd., 400 volt, $\pm 20\%$
 C8, C8a - .05 mfd., 400 volt $\pm 20\%$
 C9 thru C9c - 8 mfd., 350 v. elect. $\pm 20\%$
 C10, C10a - .005 mfd. mica, $\pm 20\%$
 C11 thru C11c - .05 mfd., 200 v. $\pm 20\%$
 C12 - 20 mmfd. tubular ceramic $\pm 20\%$


R1, R1c - 20 K Ω 1/2 watt, $\pm 20\%$
 R2, R2a - 5 K Ω 1/2 watt, $\pm 20\%$
 R3 - 130 Ω 1/2 watt, $\pm 5\%$
 R4 thru R4b - 30 Ω 1/2 watt, $\pm 5\%$
 R5 - 510 Ω 1/2 watt, $\pm 20\%$
 R6 thru R6b - 1.5⁺ K Ω 1/2 watt, $\pm 20\%$

R7 thru R7b - 33 Ω 1/2 watt, $\pm 5\%$
 R8 - 220 K Ω 1 watt, $\pm 20\%$
 R8a - 220 K Ω 1/2 watt, $\pm 20\%$
 R9 - 43 K Ω 1/2 watt, $\pm 20\%$
 R10 thru R10f - 100 K Ω 1/2 watt, $\pm 20\%$
 R11, R11a - 800 K Ω 1/2 watt, $\pm 1\%$
 R12, R12a - 270 K Ω 1/2 watt, $\pm 20\%$
 R13 thru R13b - 270 Ω 1/2 watt, $\pm 5\%$
 R14, R14a - 2 K Ω 2 watt, $\pm 20\%$
 R15, R15a - 500 K Ω 1/2 watt, $\pm 20\%$
 R16 - 3 Ω 2 watt, $\pm 20\%$

S 6 - Mazda S6 lamp


P1 - 125 molded potentiometer
 P2-S2 - 30 K Ω molded potentiometer
 P3 - 30 K Ω molded potentiometer
 P4, P4a - 3 K Ω w.w. potentiometer

L5, L5a - 8H., 40 MA. reactor

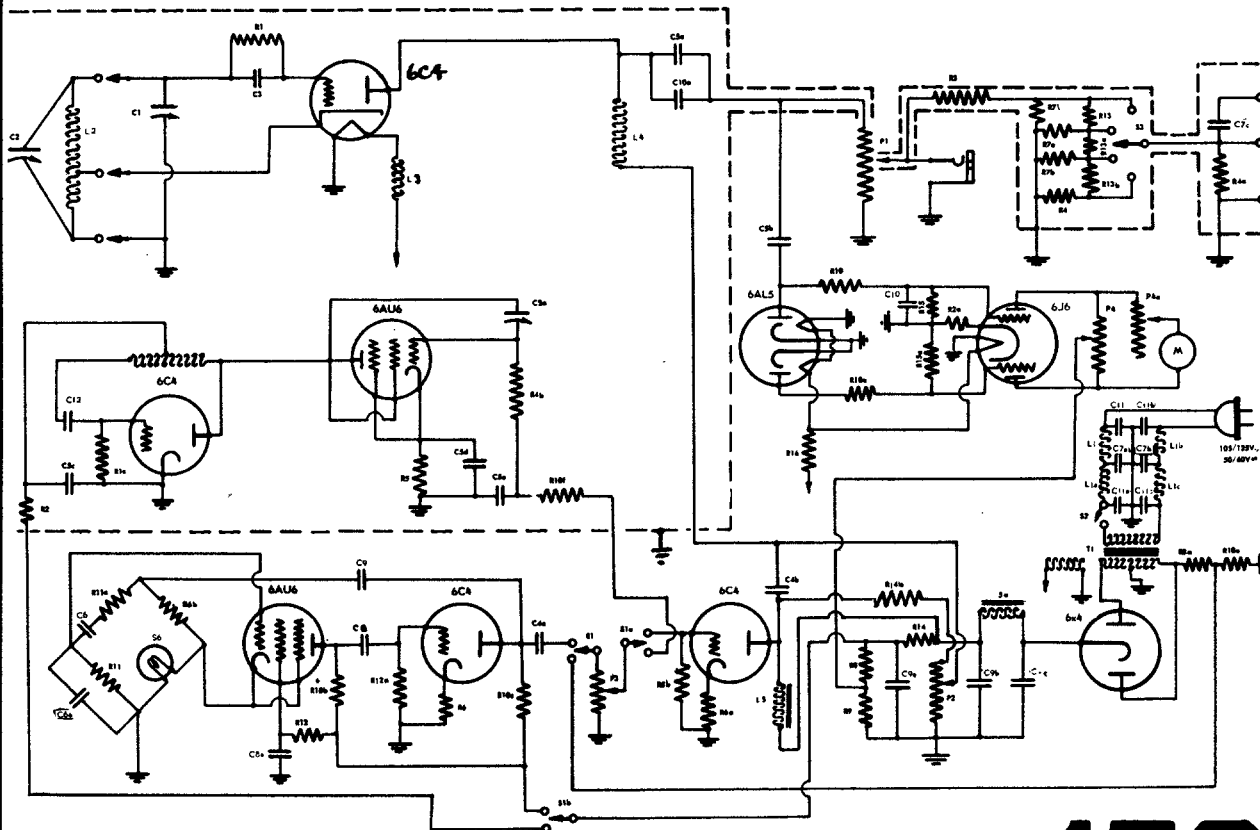

159

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

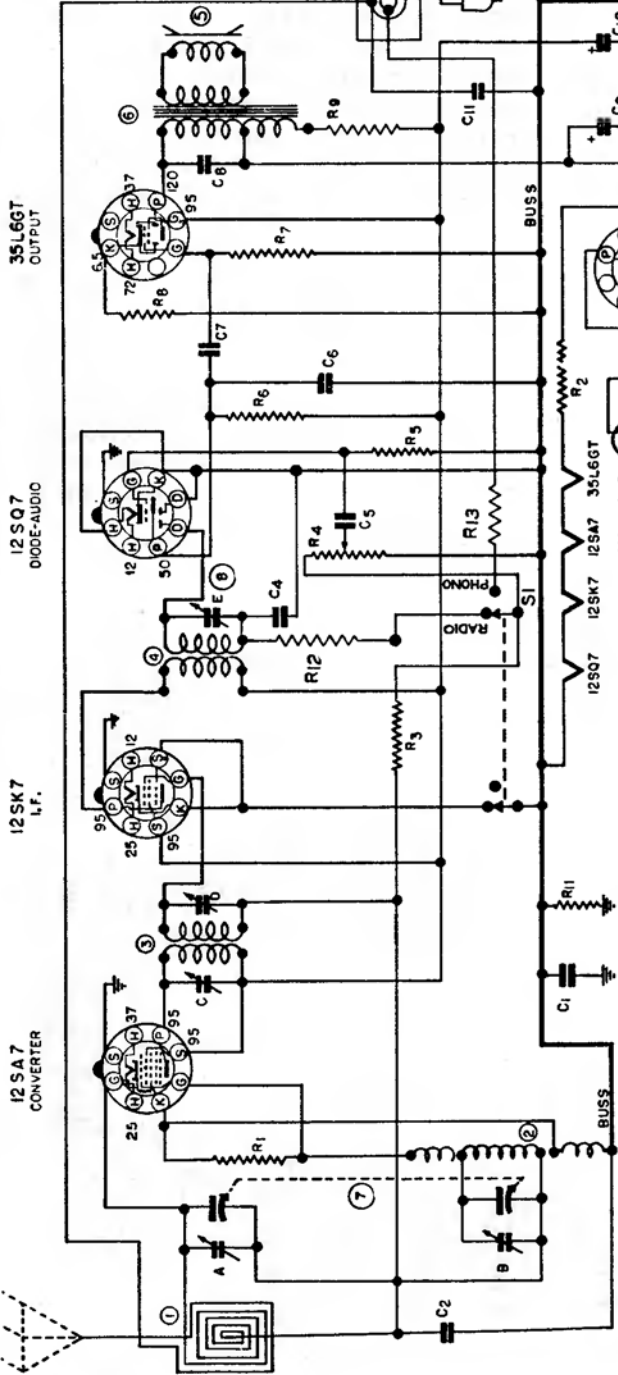

ALL VOLTAGES SHOWN ARE MEASURED FROM TERMINAL TO BUSS. LINE VOLTAGE 117A.C.


I.F. 455 KC.



Model WGFU-241.


DIAG. PART NO.	DESCRIPTION	DIAG. PART NO.	DESCRIPTION
R1	N-4025 22,000 OHM .5W 20%	C9	N-3051 40 MFD 150V ELECT
R2	N-4023 82 OHM 2W 10%	C10	40 MFD 150V
R3	N-1262 1 MEG OHM .5W 20%	C11	N-4957 .08 MFD 200V
R4	N-4087 .5 MEG OHM VOL. CON.		
R5	N-4026 6.8 MEG OHM .5W 20%	1	N-8100 ANT. COIL LOOP
R6	N-4026 220,000 OHM .5W 20%	2	N-4810 OSCILLATOR COIL
R7	N-4027 470,000 OHM .5W 20%	3	N-4813 1ST I.F. TRANSFORMER
R8	N-4067 180 OHM .5W 10%	4	N-4846 2ND I.F. TRANSF.
R9	N-5856 1000 OHM 1W 10%	5	N-8102 4" SPEAKER
R10	N-4022 33 OHM .5W 20%	6	N-4875 OUTPUT TRANSF.
R11	N-4026 220,000 OHM .5W 20%	7	N-4093 2 GANG CONDENSER
R12	N-4063 47,000 OHM .5W 20%	8	N-4048 TRIMMER
R13	N-1262 1 MEG OHM .5W 20%	9	N-5004 PHONO PICKUP
C1	N-1345 .05 MFD 200V	10	N-3848 8" TURNTABLE
C2	N-1345 .05 MFD 200V		N-3860 8" MOTOR
C3	N-1346 .05 MFD 400V		
C4	N-1376 100 MMFD MICA		
C5	N-4894 .005 MFD 800V		
C6	N-4890 500 MMFD 600V		
C7	N-1344 .01 MFD 400V		
C8	N-1376 .02 MFD 400V		

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

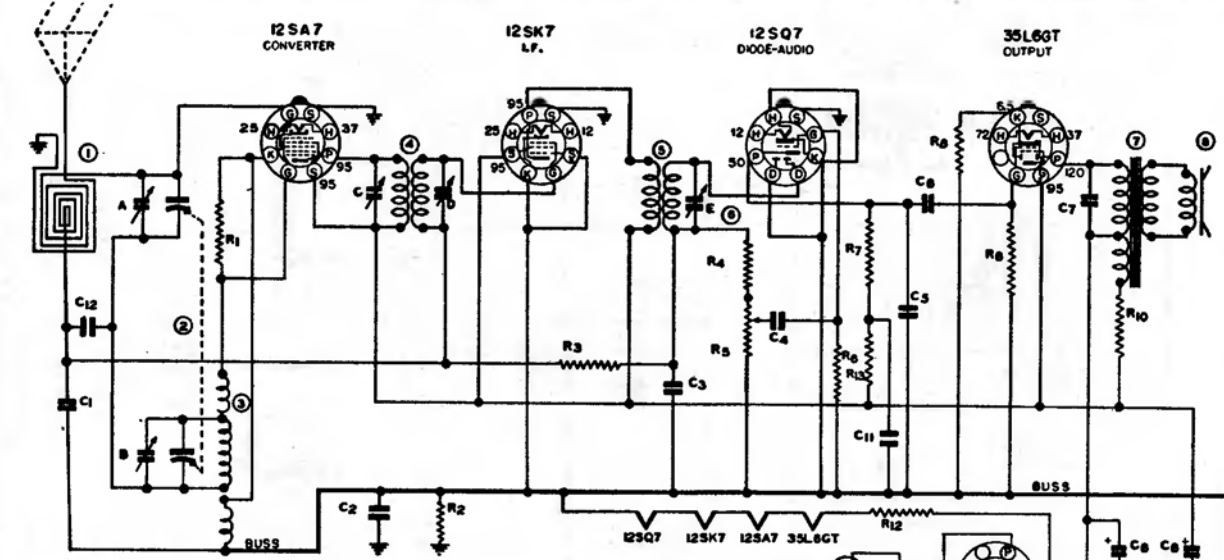

DIA. NO.	PART NO.	DESCRIPTION	DIA. NO.	PART NO.	DESCRIPTION
R1	N-4025	22,000 OHM .5W 20%	C8	N-1344	.01 MFD 400V 20%
R2	N-4028	220,000 OHM .5W 20%	C7	N-1378	.02 MFD 400V 20%
R3	N-1282	1 MEG OHM .5W 20%	C6	N-3051	40 MFD 150V ELECTRO
R4	N-4083	47,000 OHM .5W 20%	C9	N-3051	40 MFD 150V LYTC
R5	N-2087	.5 MEG VOLUME CONTROL	C10	N-1376	.05 MFD 400V 20%
R8	N-4028	220,000 OHM .5W 20%	C11	N-1351	.1 MFD 200V 20%
R7	N-4028	220,000 OHM .5W 20%	C12	N-1345	.05 MFD 200V 20%
R8	N-4087	180 OHM .5W 10%			
R9	N-4027	470,000 OHM .5W 20%	1	N-8185	LOOP COIL
R10	N-5355	1,000 OHM 1W 10%	2	N-8192	2 GANG CONDENSER
R11	N-4022	33 OHM .5W 20%	3	N-4843	OSC. COIL
R12	N-4023	82 OHM 2W 10%	4	N-4813	1ST I.F. TRANSFORMER
R13	N-4823	56,000 OHM .5W 10%	5	N-4848	2ND I.F. TRANSFORMER
			8	N-4985	TRIMMER
C1	N-1345	.05 MFD 200V 20%	7	N-8191	OUTPUT TRANSFORMER
C2	N-1345	.05 MFD 200V 20%	8	N-8187	5" SPEAKER
C3	N-8015	100 MMFD 500V 20%			
C4	N-4884	.005 MFD 800V -15+40%			
C5	N-8135	250 MMFD 500V 20%			

ALL VOLTAGES SHOWN ARE MEASURED FROM TERMINAL TO BUSS. LINE VOLTAGE 117 A.C.

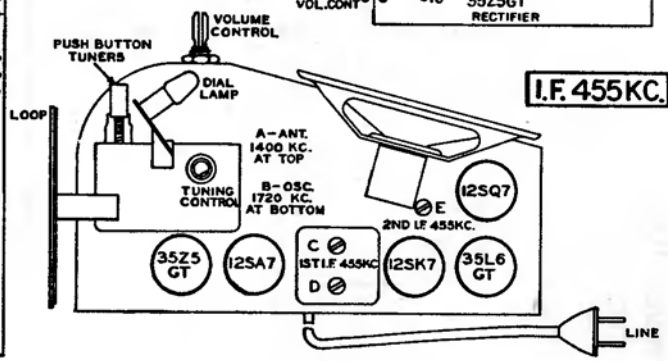

GENERAL DATA. The alignment of this receiver requires the use of a test oscillator that will cover the frequencies of 455, 600, 1400 and 1720 KC and an output meter to be connected across the primary or secondary of the output transformer. If possible, all alignments should be made with the volume control on maximum and the test oscillator output as low as possible to prevent the AVC from operating and giving false readings


CORRECT ALIGNMENT PROCEDURE. The intermediate frequency (I.F.) stages should be aligned properly as the first step. After the I.F. transformers have been properly adjusted and peaked, the broadcast band should be adjusted.

I.F. ALIGNMENT. Remove the chassis and loop antenna from the cabinet and set them up on the bench so that they occupy exactly the same respective positions on the bench as they did in the cabinet. Care should be taken to have no iron or other metal near the loop. Do not make this set-up on a metal bench. With the gang

condenser set at minimum, adjust the test oscillator to 455 KC and connect the output to the grid of the first detector tube (12SA7) through a .05 or .1 mfd. condenser. The ground on the test oscillator should be connected to the ground buss, indicated on the circuit diagram. Align all three I.F. trimmers to peak or maximum reading on the output meter.

BROADCAST BAND ALIGNMENT. Connect the test oscillator to the antenna of the set through a 100 mmfd. (.0001) condenser. With the gang condenser set at minimum capacity, set the test oscillator at 1720 KC, and adjust the oscillator (or 1720 KC trimmer) on gang condenser. Next—set the test oscillator at 1400 KC, and tune in the signal on the gang condenser. Adjust the antenna trimmer (or 1400 KC trimmer) for maximum signal. Next set the test oscillator at 600 KC, and tune in signal on condenser to check alignment of coils.

SONORA RADIO
Models WA-243, -244
WAW-243, -244

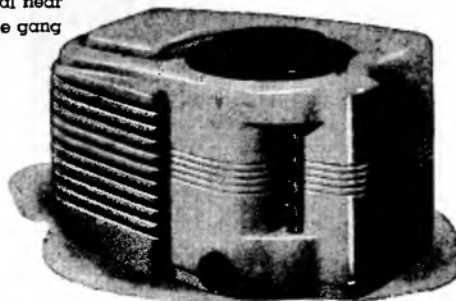


MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

3V4
OUTPUT

IS5
DIODE AUDIO

IU4
I.F.

IR5
CONVERTER

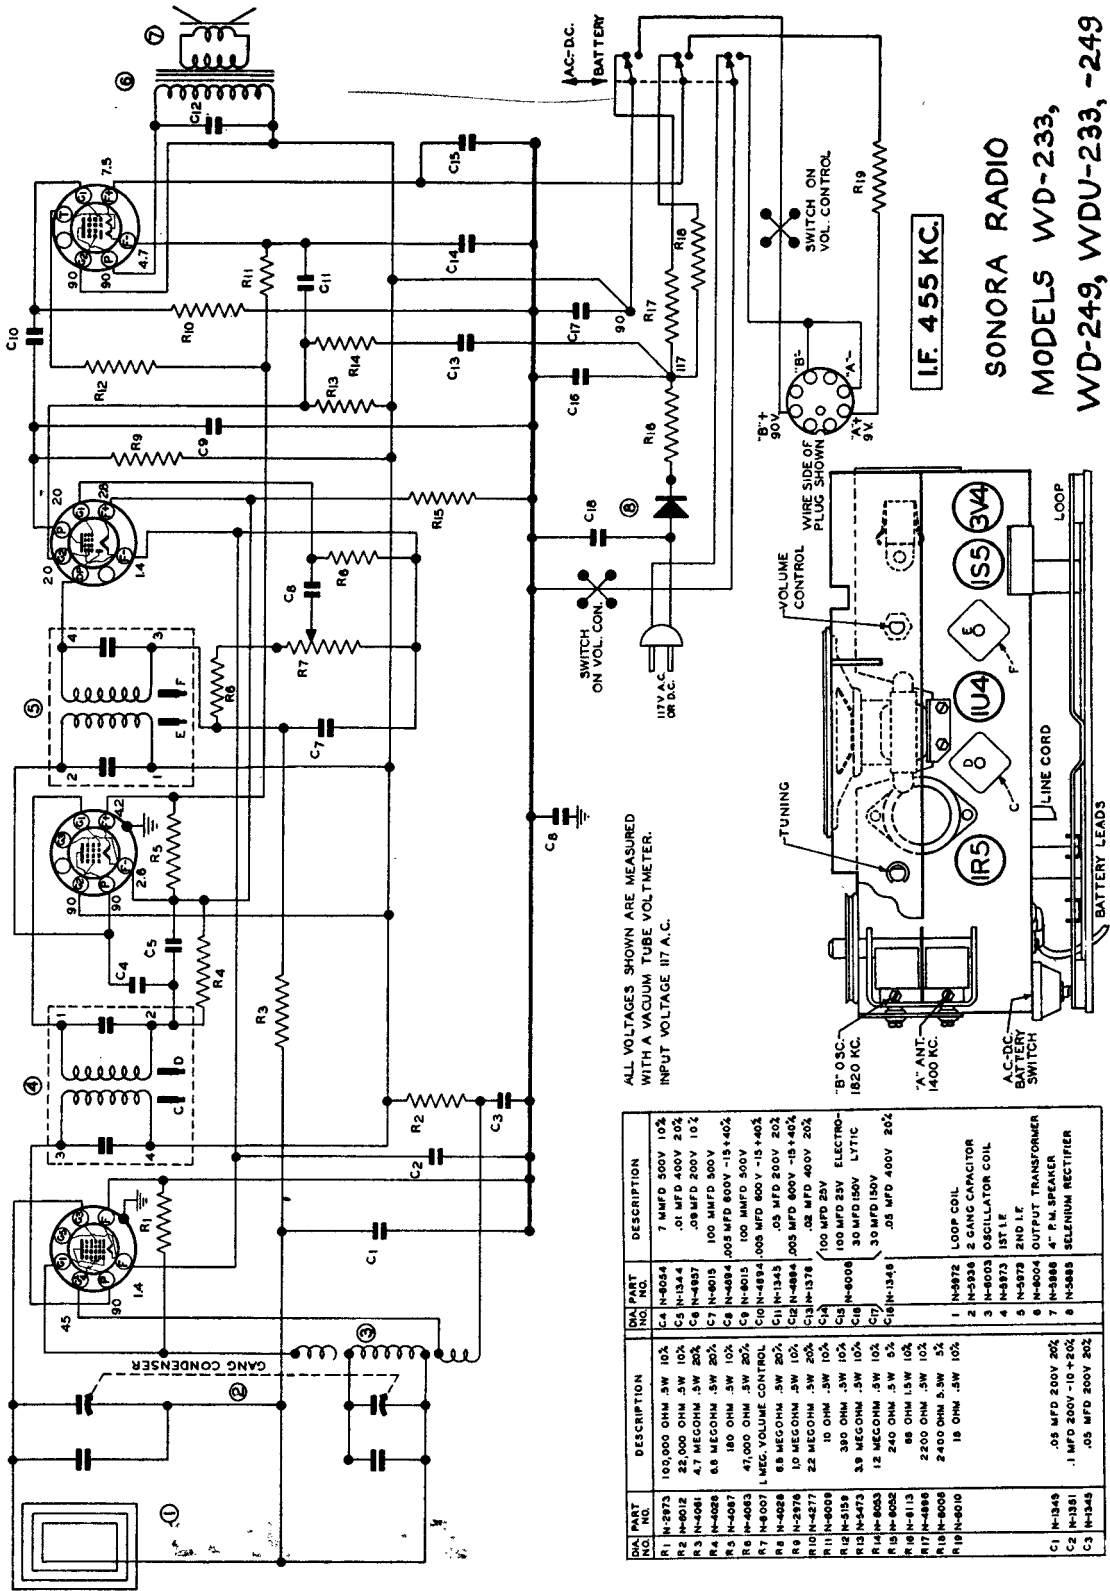

ALL VOLTAGES SHOWN ARE MEASURED
WITH A VACUUM TUBE VOLTMETER.
INPUT VOLTAGE 117 A.C.


I.F. 455 KC.

SONORA RADIO
MODELS WD-233,
WD-249, WDU-233, -249

DAI PART NO.	IRA PART NO.	DESCRIPTION	DESCRIPTION
R1 N-2973	C4 N-8054	100,000 OHM .5W 10%	7 MFD 500V 10%
R2 N-8012	C5 N-1344	22,000 OHM .5W 10%	.01 MFD 400V 20%
R3 N-4081	C6 N-4857	4.7 MEGOHM .5W 20%	.05 MFD 200V 10%
R4 N-4086	C7 N-4015	6.8 MEGOHM .5W 20%	100 MFD 500V
R5 N-4087	C8 N-4884	180 OHM .5W 10%	.005 MFD 600V -15+40%
R6 N-4083	C9 N-8015	47,000 OHM .5W 20%	100 MFD 500V
R7 N-8007	C10 N-4894	1 MEG. VOLUME CONTROL	.005 MFD 600V -15+40%
R8 N-4028	C11 N-1343	68 MEGOHM .5W 20%	.05 MFD 200V 20%
R9 N-2976	C12 N-4884	10 MEGOHM .5W 10%	.005 MFD 600V -15+40%
R10 N-4277	C13 N-1378	22 MEGOHM .5W 20%	.02 MFD 400V 20%
R11 N-8009	C14	10 OHM .5W 10%	100 MFD 25V
R12 N-5159	C15 N-4008	390 OHM .5W 10%	100 MFD 25V ELECTRO-
R13 N-5473	C16	3.9 MEGOHM .5W 10%	30 MFD 150V LYTIC
R14 N-8003	C17	12 MEGOHM .5W 10%	30 MFD 150V
R15 N-8002	C18 N-1348	240 OHM .5W 5%	.05 MFD 400V 20%
R16 N-8113		88 OHM 1.5W 10%	
R17 N-4886		2200 OHM .5W 10%	
R18 N-8006		2400 OHM .5W 5%	
R19 N-4010		18 OHM .5W 10%	
C1 N-1345	1 N-3972	.05 MFD 200V 20%	1 N-3972 LOOP COIL
C2 N-1351	2 N-3938	.1 MFD 200V -10+20%	2 N-3938 2 GANG CAPACITOR
C3 N-1345	3 N-8003	.05 MFD 200V 20%	3 N-8003 OSCILLATOR COIL
	4 N-3973	.05 MFD 200V 20%	4 N-3973 1ST I.F.
	5 N-8004	.05 MFD 200V 20%	5 N-8004 2ND I.F.
	6 N-8004	.05 MFD 200V 20%	6 N-8004 OUTPUT TRANSFORMER
	7 N-3888	.05 MFD 200V 20%	7 N-3888 4" P.M. SPEAKER
	8 N-5885	.05 MFD 200V 20%	8 N-5885 SELENIUM RECTIFIER

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

Sparton Superheterodyne Model 5-16

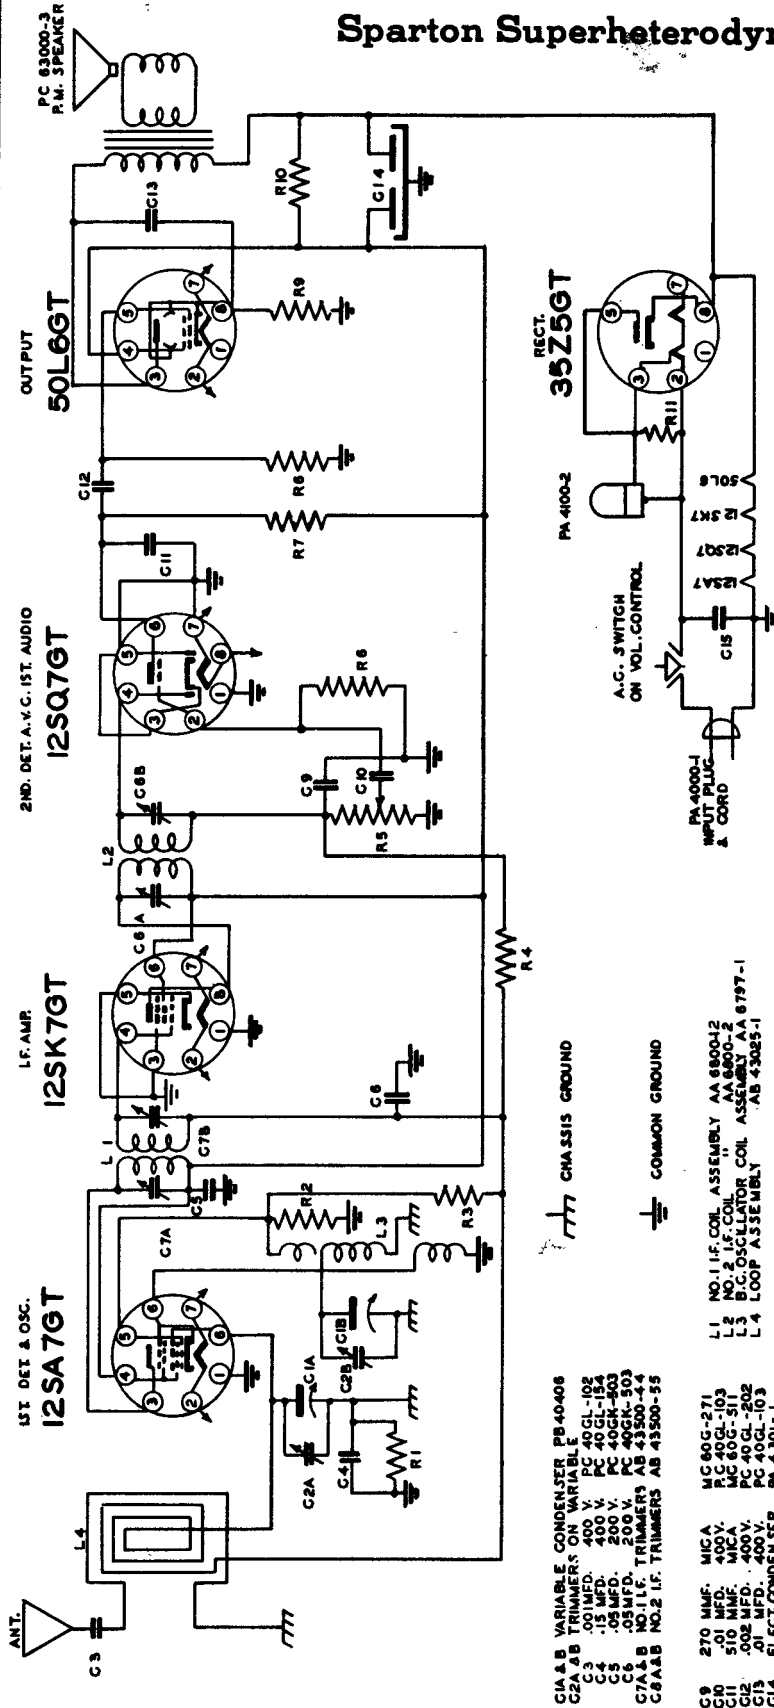


- C1A & B VARIABLE CONDENSER PB40406
- C2A AB TRIMMERS ON VARIABLE
- C3 .001MFD. 400 V. PC 40GL-102
- C4 .15 MFD. 400 V. PC 40GL-154
- C5 .05MFD. 200 V. PC 40GL-503
- C6 .05MFD. 200 V. PC 40GL-503
- C7A & B NO.1 LF. TRIMMERS AB 43500-44
- C7A & B NO.2 LF. TRIMMERS AB 43500-55
- C8 270 MUF. MICA
- C9 510 MUF. MICA
- C10 100 MFD. 400 V. PC 40GL-202
- C11 .01 MFD. 400 V. PC 40GL-103
- C12 SELECT CONDENSER YELLOW 40 MFD.
- C13 RED 30MFD. YELLOW 40 MFD.
- C14 .05 MFD. 400 V. PC 40GL-503
- C15 150,000Ω .5W BR12 N-154
- C16 22,000Ω .5W BR12 S-223
- C17 15 MEGOHM 2.2 .5W BR12 S-156
- C18 .5 MEG. VOL. CONT. .5W PA4400-3
- C19 25 MEGOHM .5W BR12 N-225
- C20 25 MEGOHM .5W BR12 S-224
- C21 470,000Ω .5W BR12 N-224
- C22 150 Ω .5W BR12 S-151
- C23 1200Ω .1W CR12 S-122
- C24 82 Ω .5W BR12 S-820
- R1 150,000Ω .5W BR12 N-154
- R2 22,000Ω .5W BR12 S-223
- R3 15 MEGOHM 2.2 .5W BR12 S-156
- R4 .5 MEG. VOL. CONT. .5W PA4400-3
- R5 25 MEGOHM .5W BR12 N-225
- R6 25 MEGOHM .5W BR12 S-224
- R7 470,000Ω .5W BR12 N-224
- R8 150 Ω .5W BR12 S-151
- R9 1200Ω .1W CR12 S-122
- R10 82 Ω .5W BR12 S-820
- R11 82 Ω .5W BR12 S-820

OPERATION	ALIGNMENT OF	GENERATOR CONNECTED TO	DUMMY ANTENNA	GENERATOR FREQUENCY	TUNING COND. SETTING	TRIMMER	REMARKS
1							Set dial pointer with left hand stop line and with condenser closed.
2	I.F.	*	**	456 KC	Open	CSA & B	Peak accurately
3	B.C.	**	Dummy Loop	1500 KC	1500 KC	C7A & B	Peak accurately
4	(Repeat operation 2 and 3).						
5	(Check calibration at 600 KC, 1000 KC, and 1500 KC).						
6	(Check operations 1 to 5 inclusive).						

* Pin No. 6 on 12SA7GT
 ** Standard Dummy
 *** Driver Loop.

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS





Model 6-26 & 6-26-PA Spartan

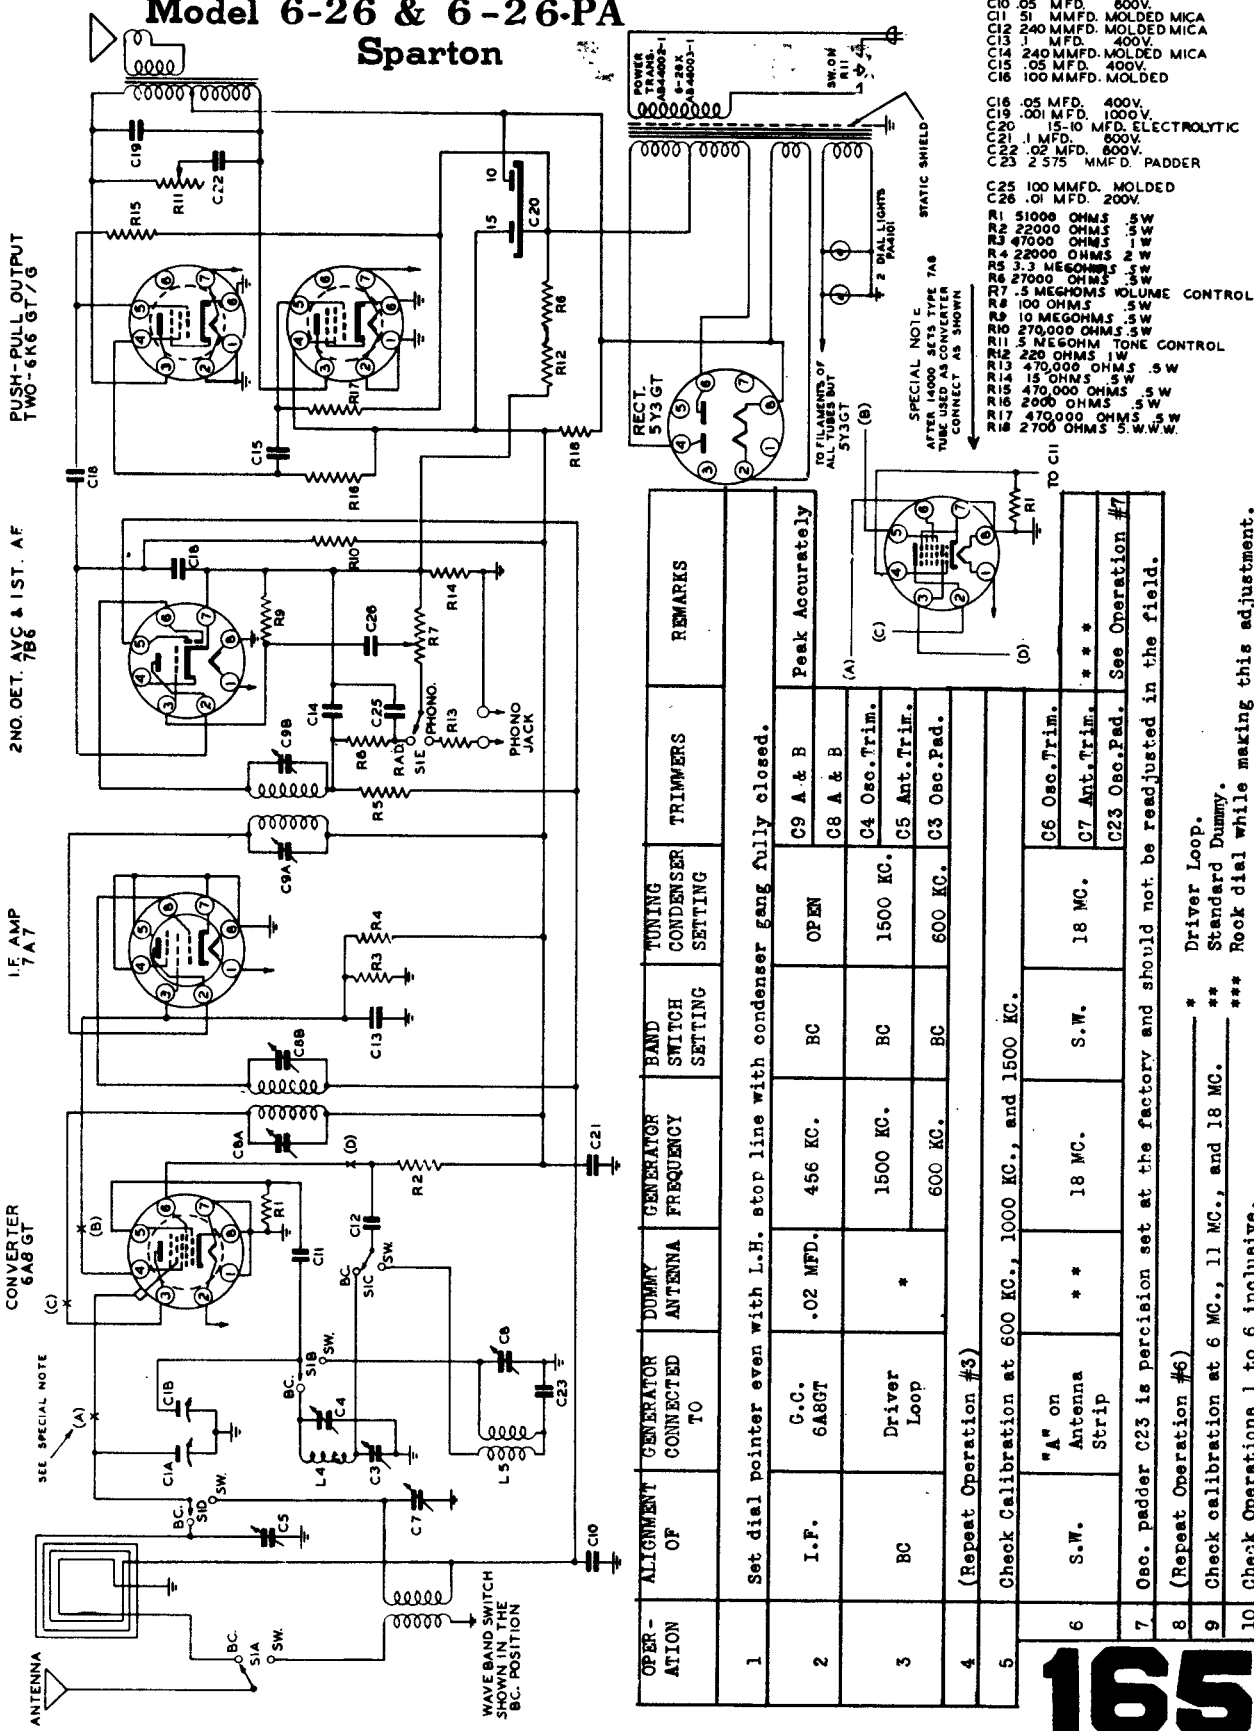


OPERATION	ALIGNMENT OF GENERATOR TO	DUMMY ANTENNA	GENERATOR FREQUENCY	BAND SWITCH SETTING	TUNING CONDENSER SETTING	TRIMMERS	REMARKS	
1			Set dial pointer even with L.H. stop line with condenser gang fully closed.					
2	I.F.	G.O. 6A8GT	456 KC.	BC	OPEN	C9 A & B C8 A & B	Peak Accurately	
3	BC	Driver Loop	1500 KC.	BC	1500 KC.	C4 Osc.Trim. C5 Ant.Trim.		
4	(Repeat Operation #3)		600 KC.	BC	600 KC.	C3 Osc.Pad.		
5	Check Calibration at 600 KC., 1000 KC., and 1500 KC.							
6	S.W.	"A" on Antenna Strip	18 MC.	S.W.	18 MC.	C6 Osc.Trim. C7 Ant.Trim.		
7	Osc. padder C23 is precision set at the factory and should not be readjusted in the field.							
8	(Repeat Operation #6)					C23 Osc.Pad.	See Operation #7	
9	Check calibrations at 6 MC., 11 MC., and 18 MC.							
10	Check Operations 1 to 6 inclusive.							

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

SERVICE DATA FOR STEWART-WARNER MODEL [A41T1] 9032-A




Lettered terminals in illustrations correspond to similarly lettered terminals on the circuit diagram.

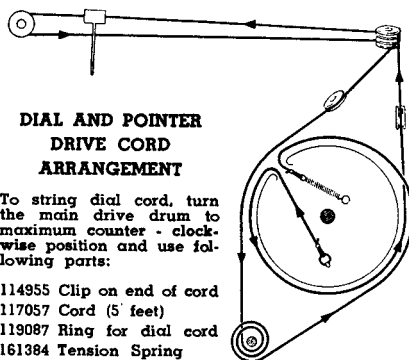


DIAL AND POINTER DRIVE CORD ARRANGEMENT

To string dial cord, turn the main drive drum to maximum counter-clockwise position and use following parts:
114955 Clip on end of cord
117057 Cord (5 feet)
119087 Ring for dial cord
161384 Tension Spring

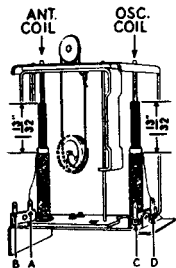

SLUG TUNER ASSEMBLY

(Drive Parts)
117057 Cord (12")
114955 Clip on cord
504012 Spring

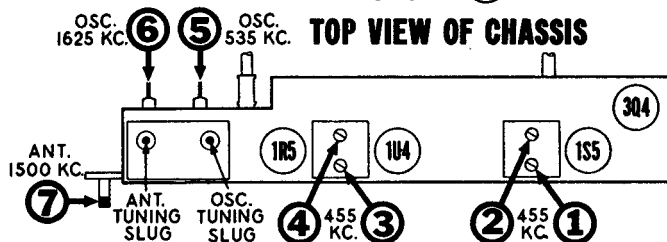

TOP VIEW OF CHASSIS


TRIMMER LOCATIONS

SOCKET VOLTAGES

Measured with voltmeter having sensitivity of 1000 ohms per volt except where indicated by (*). The (*) symbol designates a vacuum tube voltmeter measurement.

VOLUME ON FULL WITH NO SIGNAL DIAL TUNED TO 540 KC.

BOTTOM VIEW OF CHASSIS

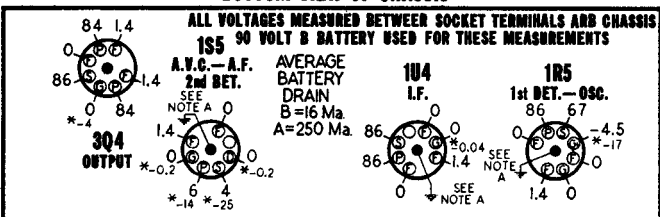

REAR OF CHASSIS


NOTE A: Grounding of center stud on tube socket is necessary to reduce capacity coupling between other pins. Oscillation may result if this ground is omitted.

CONDENSERS


12	502790	Condenser—mica 200 Mmfd. 500 volt.....
14	505179	Condenser—trimmer 30 to 270 Mmfd.....
16	505183	Condenser—ceramic 47 Mmfd. ± 2% 500 volt.....
19	502929	Condenser—mica 47 Mmfd. 500 volt.....
21, 22	502153	Condenser—.05 Mfd. 200 volt.....
27	502155	Condenser—.1 Mfd. 200 volt.....
31	502931	Condenser—mica 100 Mmfd. 500 volt.....
32	502156	Condenser—.004 Mfd. 400 volt.....
34	502159	Condenser—.05 Mfd. 200 volt.....
36	502271	Condenser—mica 260 Mmfd. 500 volt.....
38	504726	Condenser—.01 Mfd. 200 volt.....
41	505174	Condenser—electrolytic 10 Mfd. 150 volt.....
42	502263	Condenser—.5 Mfd. 150 volt.....
43	502453	Condenser—.002 Mfd. 400 volt.....

RESISTORS

13	502269	Resistor—carbon 1 Meg. 1/4 watt.....
19	502132	Resistor—carbon 100,000 Ohms 1/4 watt.....
23	502133	Resistor—carbon 220,000 Ohms 1/4 watt.....
24	502459	Resistor—carbon 6,800 Ohms 1/4 watt.....
28	502268	Resistor—carbon 1 Meg. 1/4 watt.....
30-A, B	505197	Volume control 1 Meg. (with switch).....
33	502136	Resistor—carbon 10 Meg. 1/4 watt.....
35	502269	Resistor—carbon 3.3 Meg. 1/4 watt.....
37	502268	Resistor—carbon 1 Meg. 1/4 watt.....
39	502268	Resistor—carbon 1 Meg. 1/4 watt.....
40	505184	Resistor—carbon 270 Ohms 1/4 watt.....

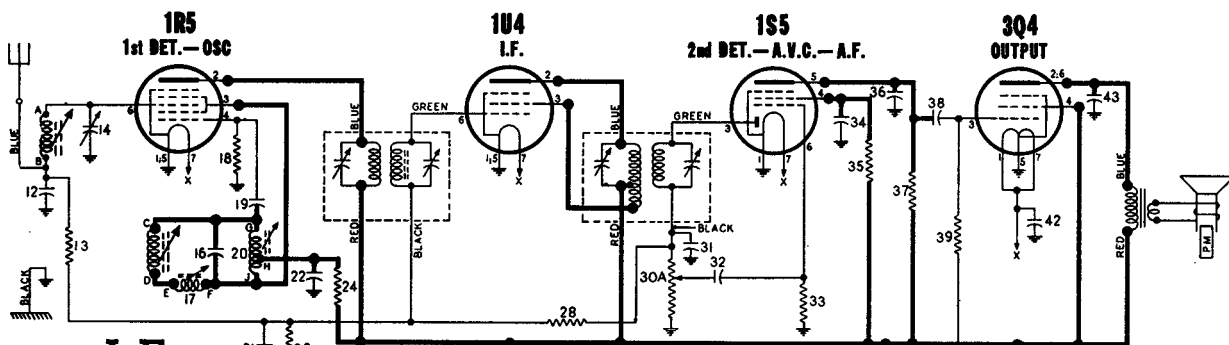


I. F. 455 KC.

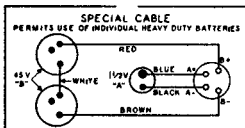

167

STEWART-WARNER MODELS [A51T1 9020-A] [A51T2 9020-B] [A51T3 9020-C]

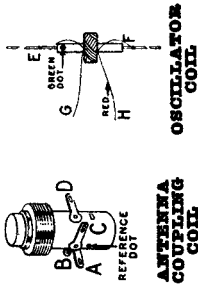

Lettered terminals in illustrations are to be connected to similarly lettered terminals on the circuit diagram.

50B5 OUTPUT

12AT6 2nd DET.—A.V.C.—A.F.

12BA6 I.F.

12BE6 1st DET.—OSC.

35W4 RECTIFIER

50B5 OUTPUT

12AT6 2nd DET.—A.V.C.—A.F.

12BA6 I.F.

12BE6 1st DET.—OSC.

35W4 RECTIFIER

50B5 OUTPUT


12AT6 2nd DET.—A.V.C.—A.F.

12BA6 I.F.


12BE6 1st DET.—OSC.

35W4 RECTIFIER

50B5 OUTPUT

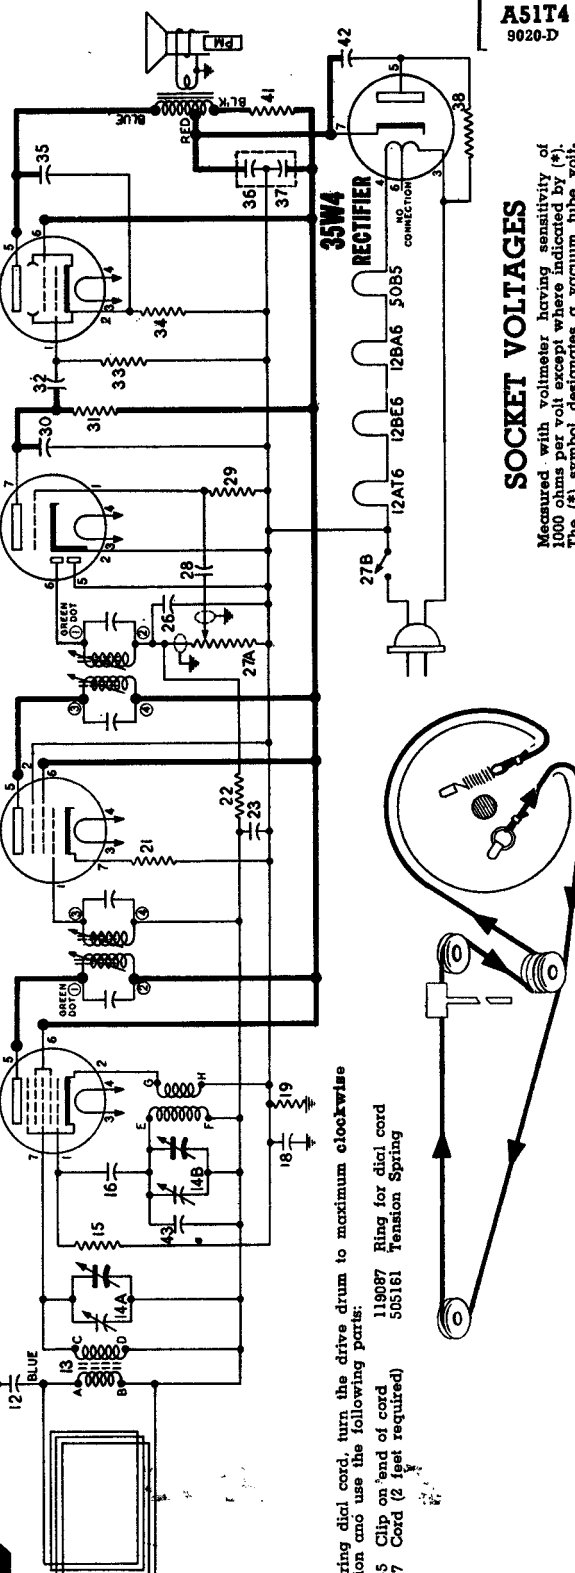


To string dial cord, turn the drive drum to maximum clockwise position and use the following parts:
 119087 Ring for dial cord
 114955 Clip on 'end of cord
 117057 Cord (2 feet required)
 505161 Tension Spring

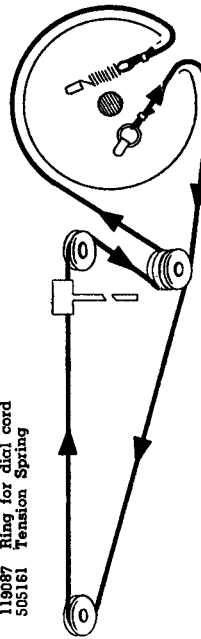

DIAL AND POINTER DRIVE CORD ARRANGEMENT

AN ALTERNATE TYPE OF I.F. TRANSFORMER WAS USED ON SOME OF THESE CHASSIS AND ITS TERMINALS ARE BOTH ACCESSIBLE FROM THE TOP OF THE CHASSIS.

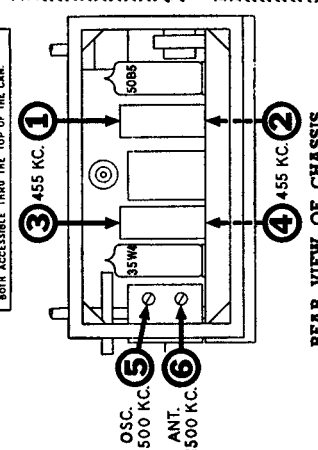

REAR VIEW OF CHASSIS

CONDENSERS	
12	502155 Condenser—0.04 Mfd. 400 volt
14	504390 Condenser—variable 50 Mmfd. 500 volt
16	504446 Condenser—0.01 Mfd. 400 volt
18	504446 Condenser—0.05 Mfd. 400 volt
22	502271 Condenser—mica 260 Mmfd. 500 volt
28	504445 Condenser—mica 260 Mmfd. 500 volt
30	502271 Condenser—0.01 Mfd. 150 volt
32	504450 Condenser—0.01 Mfd. 150 volt
35	504448 Condenser—electrolytic 20 Mfd. 150 volt
36	504431 Condenser—electrolytic 20 Mfd. 150 volt
37	504431 Condenser—0.05 Mfd. 400 volt
42	504444 Condenser—10 Mmfd. 500 volt
43	502285 Resistor—carbon 22,000 ohms 1/3 watt
15	504440 Resistor—carbon 220,000 ohms 1/3 watt
19	504435 Resistor—carbon 82 ohms 1/2 watt
21	504436 Resistor—carbon 2.2 Meg. 1/3 watt
22	504441 Volume control—with switch; 1 Meg.
27A, B	504436 Resistor—carbon 3.3 Meg. 1/3 watt
28	504438 Resistor—carbon 470,000 ohms 1/3 watt
31	504436 Resistor—carbon 150 ohms 1/2 watt
33	504437 Resistor—carbon 33 ohms 1/2 watt
34	502574 Resistor—carbon 1500 ohms 1 watt
38	504442 Resistor—carbon 1500 ohms 1 watt
41	504442 Resistor—carbon 1500 ohms 1 watt

SOCKET VOLTAGES
 Measured with voltmeter having sensitivity of 1000 ohms per volt except where indicated by (#). The (#) symbol designates a vacuum tube volt-meter measurement.

VOLUME ON FULL WITH NO SIGNAL. DIAL TUNED TO 540 KC.

12AT6 2nd DET.—A.V.C.—A.F.
 117 VOLT AC CYCLE A.C. POWER SUPPLY USED FROM THESE MEASUREMENTS.

12BA6 I.F.
 RECTIFIER VOLTAGES MEASURED ACROSS SOCKET TERMINALS. ALL OTHER VOLTAGE MEASURED BETWEEN SOCKET TERMINALS AND B—LINE.

12BE6 1st DET.—OSC.
 RECTIFIER VOLTAGES MEASURED ACROSS SOCKET TERMINALS. ALL OTHER VOLTAGE MEASURED BETWEEN SOCKET TERMINALS AND B—LINE.


35W4 RECTIFIER
 RECTIFIER VOLTAGES MEASURED ACROSS SOCKET TERMINALS. ALL OTHER VOLTAGE MEASURED BETWEEN SOCKET TERMINALS AND B—LINE.

50B5 OUTPUT
 RECTIFIER VOLTAGES MEASURED ACROSS SOCKET TERMINALS. ALL OTHER VOLTAGE MEASURED BETWEEN SOCKET TERMINALS AND B—LINE.


REAR OF CHASSIS
 NOTE A: Grounding of center stud on tube socket is necessary to reduce crosstalk coupling between other pins. Oscillation may result if this ground is omitted.

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

STEWART-WARNER MODELS [A61CR1] ; [A61CR2] ; [A61CR3] & [A61CR4] .

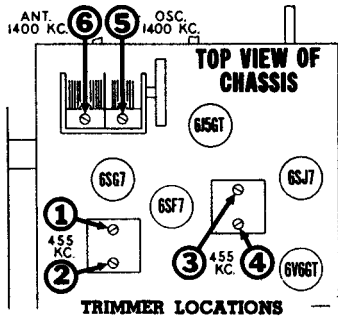

DIAL AND POINTER DRIVE CORD ARRANGEMENT
SIDE VIEW
(With dial plate removed)

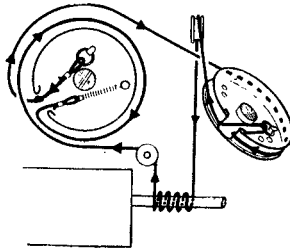

To string dial cord first slip pointer off its shaft. Then remove dial scale by taking out the six clips around its edges. Dial plate may now be taken off by removing the two screws which are visible and accessible at front of chassis. Now set gang condenser to fully open position and use the following parts:


- 114955 Clip on end of cord
- 117057 Cord (3 feet)
- 119087 Ring for dial cord
- 505161 Tension spring

SOCKET VOLTAGES

Measured with voltmeter having sensitivity of 1000 ohms per volt except where indicated by (*). The (*) symbol designates a vacuum tube voltmeter measurement.


DIAL TUNED TO 540 KC.

VOLUME ON FULL WITH NO SIGNAL
RADIO-PHONO & TONE SWITCH IN "RADIO-BASS" POSITION

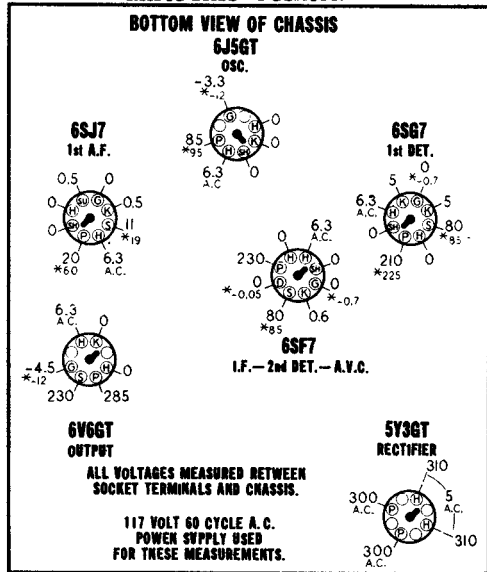


REAR OF CHASSIS

ALTERNATE TYPES OF RADIO-PHONO & TONE SWITCH 505317

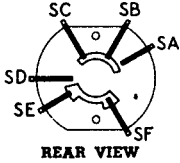

REAR VIEW

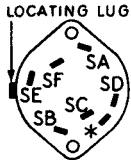


LOCATING LUG

REAR VIEW


*Not used; may serve as wiring junction point.

Lettered terminals in illustrations correspond to similarly lettered terminals on the circuit diagram



OSCILLATOR COIL 505326

DIA-GRAM NO.	PART NO.	DESCRIPTION
CONDENSERS		
13	502151	Condenser—.01 Mfd. 400 volt
14-A, B	505315	Condenser—variable gang (with drum)
16	502931	Condenser—mica 100 Mmfd. 500 volt
19	502153	Condenser—.05 Mfd. 200 volt
20	502157	Condenser—.05 Mfd. 400 volt
22	502152	Condenser—.02 Mfd. 400 volt
25	502153	Condenser—.05 Mfd. 200 volt
33	502931	Condenser—mica 100 Mmfd. 500 volt
36	502156	Condenser—.004 Mfd. 400 volt
39	502152	Condenser—.02 Mfd. 400 volt
41	502157	Condenser—.05 Mfd. 400 volt
45	502205	Condenser—.25 Mfd. 400 volt
48	502150	Condenser—.004 Mfd. 600 volt
49	502271	Condenser—mica 260 Mmfd. 500 volt
51	502410	Condenser—.1 Mfd. 400 volt
53	502152	Condenser—.02 Mfd. 400 volt
55-A, B, C	502207	Condenser—electrolytic A—20 Mfd. 400 volt B—10 Mfd. 400 volt C—20 Mfd. 25 volt
RESISTORS		
12	502466	Resistor—carbon 33,000 Ohms 1 watt
15	502131	Resistor—carbon 47,000 Ohms 1/4 watt
18	502128	Resistor—carbon 2,200 Ohms 1/4 watt
21	502288	Resistor—carbon 47,000 Ohms 1 watt
23	502459	Resistor—carbon 6,800 Ohms 1/4 watt
26	502269	Resistor—carbon 3.3 Meg. 1/4 watt
27	502264	Resistor—carbon 47 Ohms 1/4 watt
32	502131	Resistor—carbon 47,000 Ohms 1/4 watt
35-A, B	505318	Volume Control 1 Meg. (with switch)
37	502132	Resistor—carbon 100,000 Ohms 1/4 watt
38	502408	Resistor—carbon 68,000 Ohms 1/4 watt
40	502468	Resistor—carbon 4.7 Meg. 1/4 watt
42	502406	Resistor—carbon 1,500 Ohms 1/4 watt
44	502135	Resistor—carbon 2.2 Meg. 1/4 watt
50	502133	Resistor—carbon 220,000 Ohms 1/4 watt
52	502133	Resistor—carbon 220,000 Ohms 1/4 watt
54	502134	Resistor—carbon 470,000 Ohms 1/4 watt
56	504771	Resistor—carbon 3,300 Ohms 2 watt
58	502293	Resistor—wire wound 200 ohms 2 watt

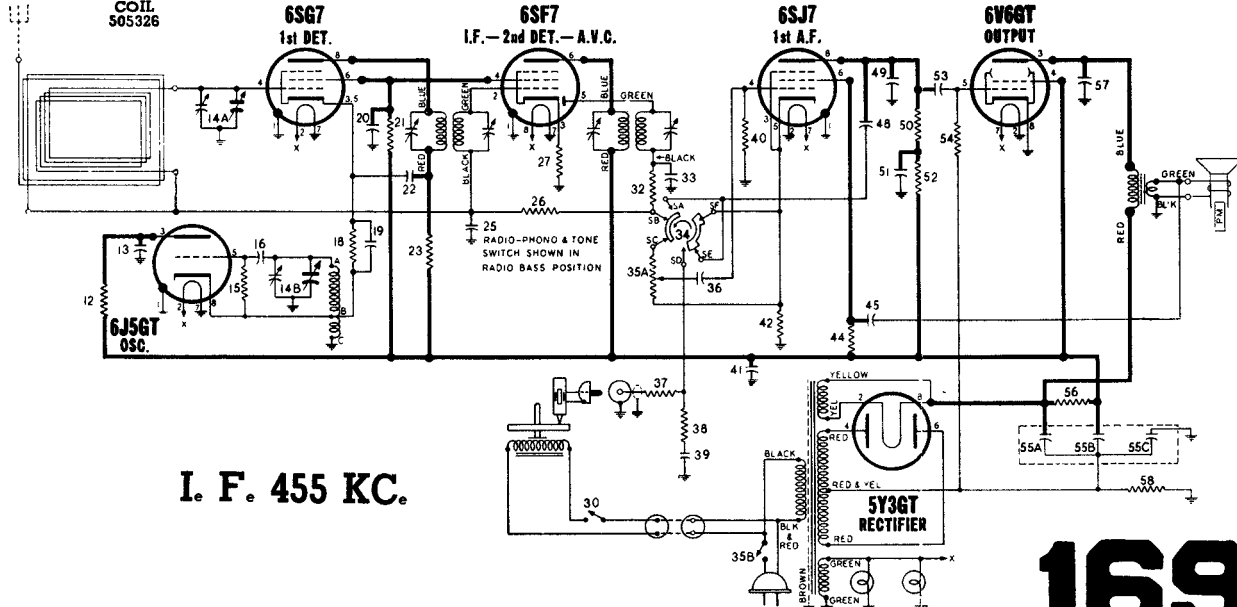


I. F. 455 KC.

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

TEMPLETONE RADIO MFG. CORP.

Models E-510 to E-519, also G-513 and G-515 are almost identical and correspond with few exceptions to the diagram below. In some sets, 14 volt tubes were used as indicated.

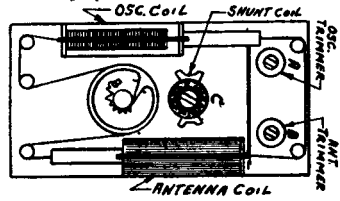

Controls: Only two controls are required for operation. The left-hand control puts set into operation, increases the volume with clockwise rotation, and includes the power switch. The right-hand control tunes the dial to the desired station.


Antenna: For normal reception, no outside aerial is required, as more than adequate pickup is obtained by the self-contained loop antenna.

At installations remote from the stations desired to be heard, improved results may be obtained by rotating the receiver for maximum response, as the loop antenna has a marked directional effect on weak signals. Reception can also be improved, and the directional effect reduced, by attaching a length of insulated wire approximately 15 to 25 feet long, to the antenna connection provided at the back of the cabinet.

Alignment: No attempt should be made to realign this receiver until it has been determined that a poor tube, or some local condition is not responsible for faulty reception. An output meter may be clipped directly across the voice coil lugs.

The Signal Generator may be connected through a 0.01 mf capacitor (used as dummy antenna) to the lug on RF section (B) of tuning capacitor. Connect ground clip of generator directly to chassis. Align the I. F. trimmers to 455 kc, using least possible input from Signal Generator to avoid developing A.V.C. voltage which would make the tuning adjustments very broad.

To align RF trimmers, remove the 0.01 mf capacitor and connect the Signal Generator leads or two or three turns of heavy wire, forming a self-supporting loop of about 7 or 8 inches diameter, placed about a foot away from the receiver's loop antenna. Again, use the least possible input from the Signal Generator. With the tuning capacitor plates completely out of mesh, and pointer at extreme left end of travel, adjust the oscillator trimmer (A) (on front section of tuning capacitor) to 1700 kc. Readjust both Signal Generator and tuning capacitor to 1550 kc and adjust the RF trimmer (B) (on rear section) for maximum response. With tuning capacitor plates fully meshed, the receiver should tune to 535 kc; however, no adjustment is required at this point. For checking purposes, four fine marks are engraved on the dial plate. These represent, in order, the pointer settings for 1550, 1000, 600 kc, and the pointer position with capacitor plates fully meshed.

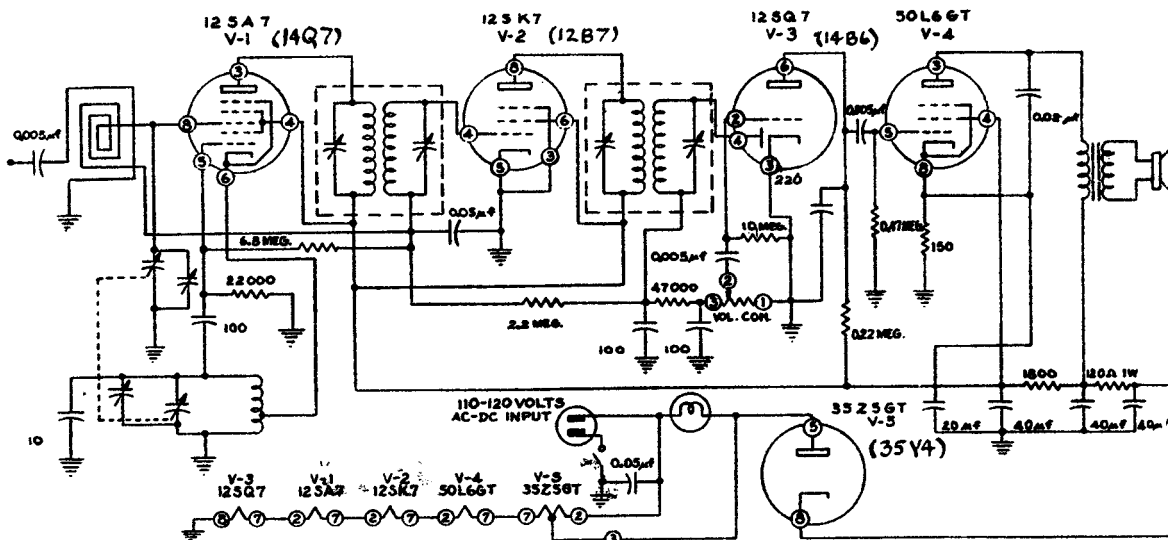


NOTES:
 1. RESISTORS ARE IN OHMS, CAPACITORS ARE IN μ mf, INDUCTORS ARE IN μ H UNLESS OTHERWISE MARKED.
 2. VOLUME CONTROL R-4 IS 0.5 MEGOHMS, WITH SWITCH S-1 MOUNTED ON REAR.
 3. IN A FEW EARLY MODELS C-12D WAS A SEPARATE 25 μ mf CAPACITOR, C-12A WAS 80 μ mf, C-12C WAS 20 μ mf AND R-11 WAS NOT USED.

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

TRAV-LER RADIO CORP.

Model 5051

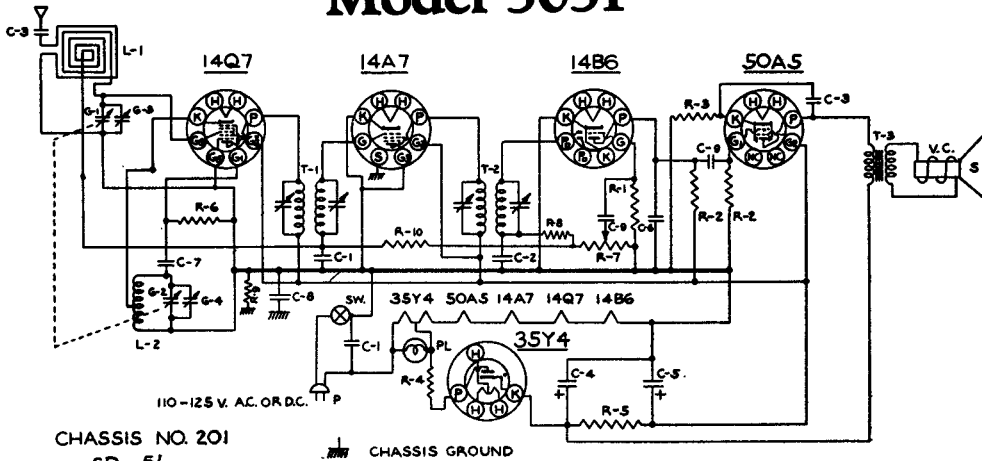

CHASSIS NO. 201
SD-51


CHASSIS GROUND

I.F. 455 KC.

PART NO.	DESCRIPTION	PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
IR-13	R-1 22 MEG RESISTOR 1/2W 20%	PC-5	G-4 OSC. TRIMMER COND.	LO-11	L-2 OSC. COIL
IR-11	R-2 470M RESISTOR 1/2W 20%	MC-2	C-1 .05 MFD. COND. 400V.	L1-1	T-1 INPUT I.F. TRANSFORMER
IR-14	R-3 150Ω RESISTOR 1/2W 20%	PC-7	C-2 .0001 MFD. MICA COND. 20%	L1-2	T-2 OUTPUT I.F. TRANSFORMER
IR-4	R-4 47Ω RESISTOR 1/2W 20%	EC-12	C-3 .01 MFD. COND. 400V.	T-3	OUTPUT SPK. TRANSFORMER
IR-15	R-5 2200Ω RESISTOR 1/2W 20%	MC-5	C-4 40 MFD. 150 V. ELECTROLYTIC CONDENSER	SPK-4	V.C. VOICE COIL
IR-16	R-6 33M RESISTOR 1/2W 20%	MC-4	C-5 20 MFD. 150 V. ELECTROLYTIC CONDENSER	PB-1	RM. SPEAKER
GC-3	R-7 1 MEG. VOLUME CONTROL GANG CONDENSER	PC-9	C-6 .0005 MFD. COND. 20%	PL	#47 PILOT BULB
VC-4	G-1	LL-6	C-7 .000056 MFD. MICA 20%	SW	A.C. SW. ON VOL. CONTROL
G-3	G-2	IR-20	C-8 .1 MFD. COND. 400 V.	CO-1	P LINE CORD
TC-7	R-8 47M 1/2W 20%		L-1 LOOP ANTENNA	TU-6	14Q7 14A7 14B6 50A5 35Y4
IR-10	R-9		R-9 220M 1/2W 20%	IR-23	R-10 3.3MEG. 1/2W. 20%
				PC-6	C-9 .005MFD. 600V

TRAV-LER RADIO CORP.

MODEL No. 5019

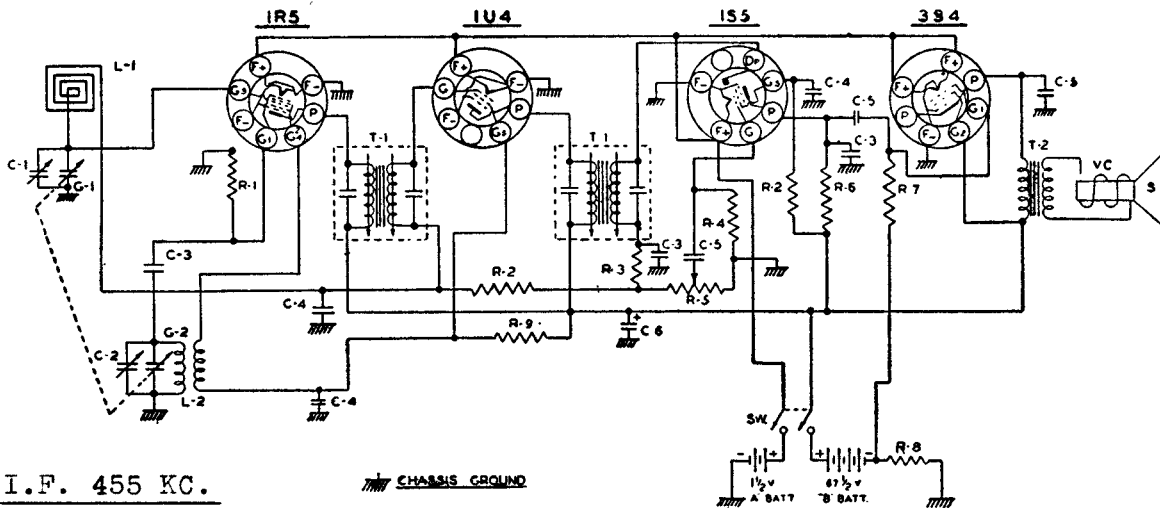


I.F. 455 KC.

CHASSIS GROUND

PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
IR-20	R-1 220M RESISTOR 1/2W 20%	GC-4	G-1 GANG CONDENSER
IR-23	R-2 3.3MEG RESISTOR 1/2W 20%	G-2	G-2 GANG CONDENSER
IR-31	R-3 82M RESISTOR 1/2W 20%	L-1	L-1 LOOP ANTENNA
IR-3	R-4 10MEG RESISTOR 1/2W 20%	LL-8	L-1 LOOP ANTENNA
VC-8	R-5 1MEG VOLUME CONTROL	LO-12	L-2 OSC. COIL
IR-12	R-6 1MEG RESISTOR 1/2W 20%	L1-5	T-1 I.F. TRANSFORMER
IR-13	R-7 2MEG RESISTOR 1/2W 20%	SW	OPST. SWITCH ON VOLUME CONTROL
IR-1	R-8 520Ω RESISTOR 1/2W 10%	T-2	SPEAKER TRANSFORMER
IR-37	R-9 10M RESISTOR 1/2W 20%	VC	VOICE COIL
TC-7	C-1 ANT. TRIMMER	S	PM SPEAKER
MC-2	C-2 OSC TRIMMER ON GANG	TU-29	IR5 IU4 IS5 394
PC-7	C-3 100MMFD MICA CONDENSER		
PC-6	C-4 .01 MFD 400V.		
PC-5	C-5 .005MFD 600 V.		
EC-7	C-6 20MFD 80WV.		

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

Trav-ler Radio Corp. Electric Phonograph Model 7004

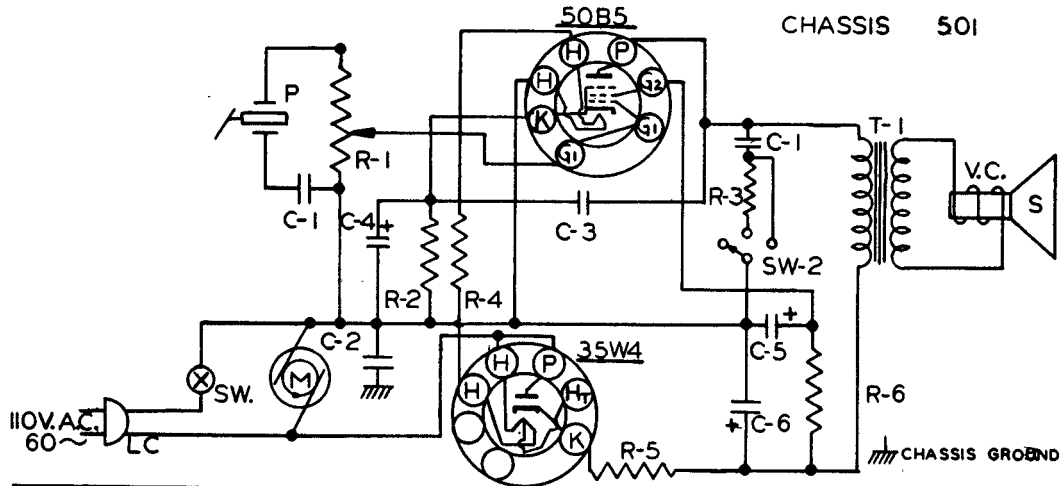


PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
VC-6	R-1 1/2 MEG. VOLUME CONTROL	M-1	M MOTOR 110V. 60~
IR-14	R-2 150Ω RESISTOR. 1/2W. 20%	CO-2	LC 9" TURNABLE
IR-7	R-3 2200Ω RESISTOR. 1/2W. 5%	SW-2	SW A.C. SW. ON VOLUME CONTR
WR-1	R-4 210Ω RESISTOR. 5W. 5% WIRE WND.	SW-2	SW2 TONE SWITCH
IR-17	R-5 39Ω RESISTOR. 1/2W. 20%	T-1	T-1 OUTPUT TRANSFORMER
IR-18	R-6 4700Ω RESISTOR. 1/2W. 20%	VC	VC VOICE COIL
PC-5	C-1 .05 MFD. CONDENSER. 400V.	S	S P.M. SPEAKER
PC-8	C-2 .01 MFD. CONDENSER. 400V.	TU-22	TU-22 50B5-35W4
PC-7	C-3 .01 MFD. CONDENSER. 400V.	P	P CRYSTAL CARTRIDGE
EC-5	C-4 10MFD. 25V. ELECTROLYTIC		L-72
	C-5 12MFD. 150V. ELECTROLYTIC		
	C-6 8DMFD. 150V. ELECTROLYTIC		

Trav-ler Radio Corp. Phonograph Models 7014 and 7015 are similar to Model 7000 described on page 154 of Volume 6, 1946 Diagram Manual.

TRAV-LER RADIO CORP.

Model 5028

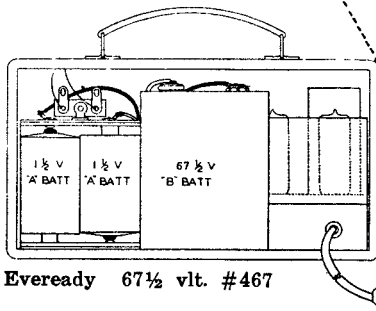


Eveready 67 1/2 vlt. #467

Burgess 67 1/2 vlt. #XX45

General 67 1/2 vlt. #W45A

Ray-O-Vac 67 1/2 vlt. #4367

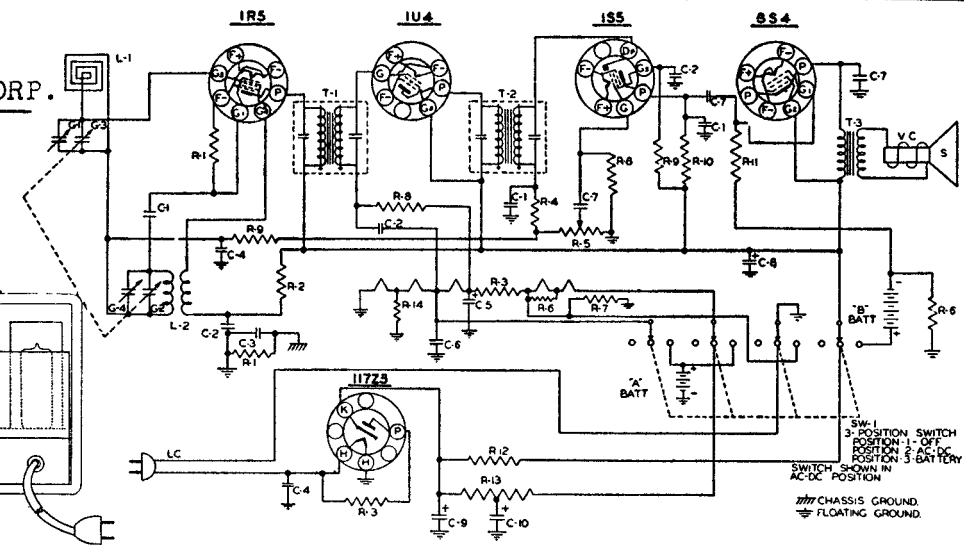


PART NO.	DESCRIPTION	PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
IR-20	R-1 220MΩ RESISTOR 1/2W 20%	PC-3	C-6 1 MFD. CONDENSER 200 WV	LI-5	T-1 INPUT I.F. TRANSFORMER
IR-17	R-2 10MΩ RESISTOR 1/2W 20%	PC-6	C-8 40 MFD. CONDENSER 600 WV	LI-5	T-2 OUTPUT I.F. TRANSFORMER
IR-31	R-3 15Ω RESISTOR 1/2W 20%	EC-14	C-9 40 MFD. 150 WV ELECTROLYTIC	T-3	SPEAKER OUTPUT TRANSFORMER
IR-14	R-4 82MΩ RESISTOR 1/2W 20%	C-10	20 MFD.	VC	VOICE COIL
IR-39	R-5 1MΩ VOLUME CONTROL	C-1	ANT TRIMMER	S	3 1/2 P.M. SPEAKER
IR-33	R-6 270Ω RESISTOR 1/2W 10%	C-2	GANG CONDENSER	TU-31	117Z3-1R5-1U4-1S5-6S4
IR-39	R-7 620Ω RESISTOR 1/2W 5%	C-3	OSC TRIMMER		
IR-23	R-8 10MΩ RESISTOR 1/2W 20%	C-4	OSC TRIMMER		
IR-13	R-9 10MΩ RESISTOR 1/2W 20%	LL-14	L-1 LOOP ANTENNA	A BATT	2"D SIZE 1 1/2 VOLT FLASHLITE CELLS
IR-13	R-10 10MΩ RESISTOR 1/2W 20%	LO 8	L-2 OSC COIL	B BATT	1-67 1/2 VOLT BATTERY
WR-7	R-11 220MΩ RESISTOR 1/2W 20%	CO-1	LC LINE CORD		
IR-1	R-12 470Ω RESISTOR 1/2 20%	SW-8	SW-1 4 POLE-3 POSITION SWITCH		
MC-2	C-1 100MFD. MICA CONDENSER				
PC-7	C-2 0.01 MFD. CONDENSER 400 WV				
PC-8	C-3 0.01 MFD. CONDENSER 400 WV				
PC-5	C-4 0.05 MFD. CONDENSER 400 WV				
EC-5	C-5 10MFD. 25V. TUNED 10WV ELECTROLYTIC				


172

I. F. 455 KC.

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

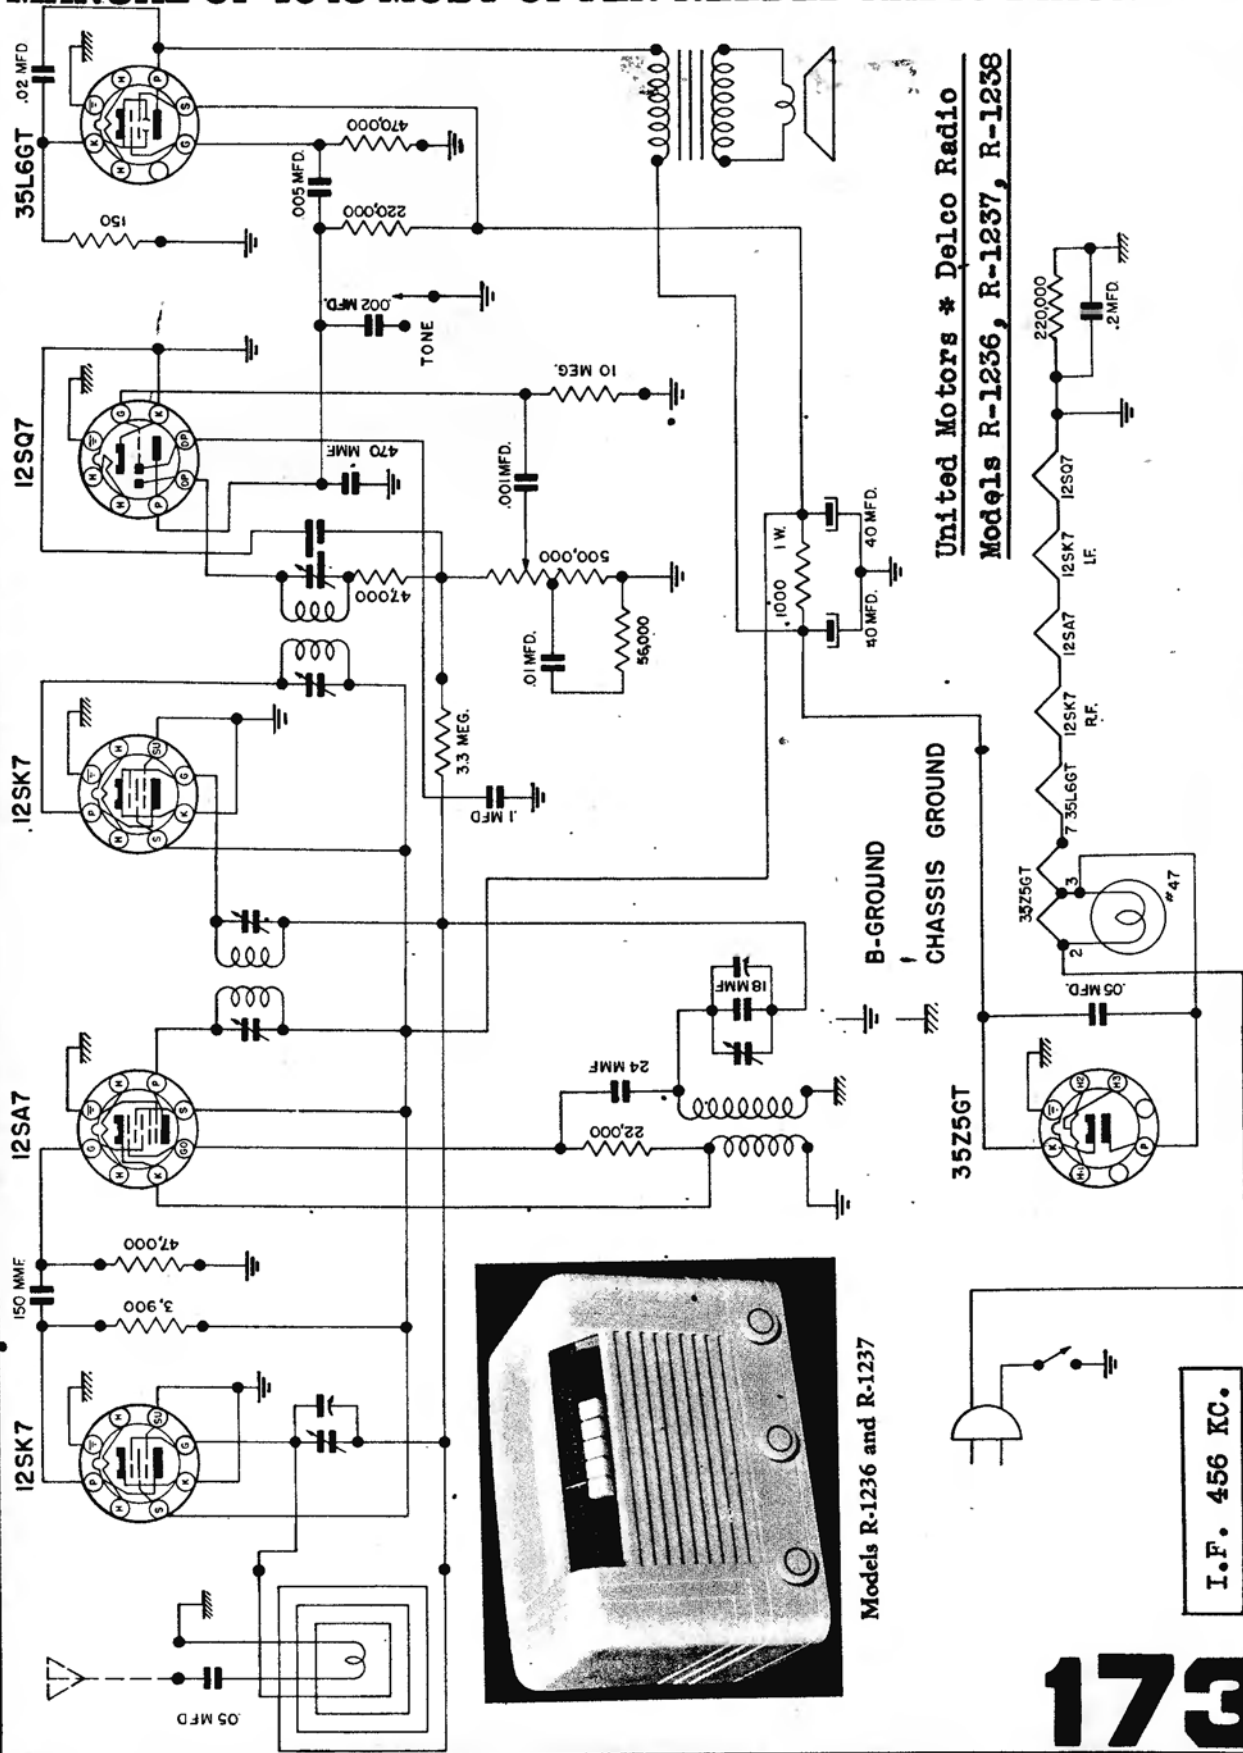

United Motors * Delco Radio
 Models R-1236, R-1237, R-1238

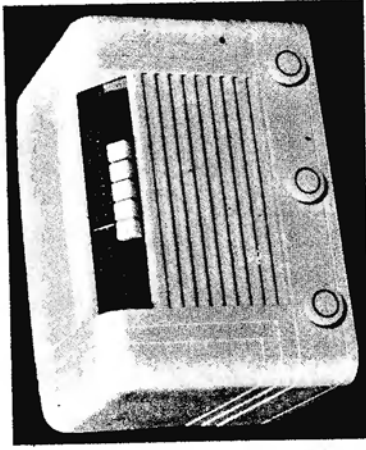

Models R-1236 and R-1237

I.F. 456 KC.

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

UNITED MOTORS SERVICE

DIVISION OF GENERAL MOTORS CORPORATION

Buick Models 980744 and 980745
For diagram see page 175.


PUSH BUTTON SET-UP

Release holding spring in bottom of button, pull button off. Loosen re-set screw and push in until it bottoms. Tune in desired station while holding in re-set screw. Release and tighten screw. Replace button.

ALIGNMENT PROCEDURE

Volume Control Maximum.

Signal Generator output minimum for satisfactory output indication.

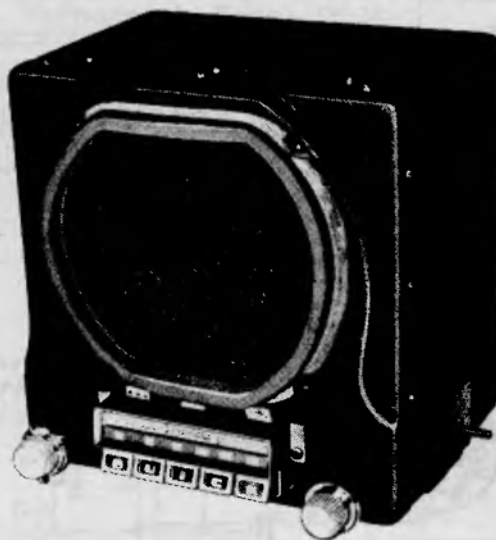

MODEL 980744


Series Condenser or Dummy Antenna	Connect To	Tune Receiver To	Signal Generator Frequency	Adjust Screws In Order
0.1 Mfd. *.000060 Mfd.	6SA7 Pin #8 Antenna Connector	No Broadcast Sig. Extreme Hi. Freq. End of Dial	262 KC 1615 KC	A B C D E F G
***.000060 Mfd.	Antenna Connector	Signal Generator	1430 KC	**J K

*Before making this adjustment turn core screws J, K, H by means of a bakelite screwdriver, so that the rear end of the cores are 1/16" from the rear of the coil form. The purpose of this adjustment is to set the cores at the correct starting point with respect to the windings.


**Cores J and K are adjusted by means of a bakelite screwdriver through the rear end of the coils. There must not be any metal in part of screwdriver inserted in the coil.

***Should it be necessary to calibrate the pointer after this adjustment, tune signal generator to 1300 KC and the receiver to the signal. Loosen dial cord pulley set screws and adjust pointer to 1300 KC. Tighten set screws.


Adjust trimmer G to match car antenna (at approx. 1400 KC) when radio is installed.

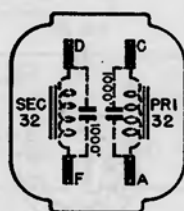


1st I. F. TRANS.

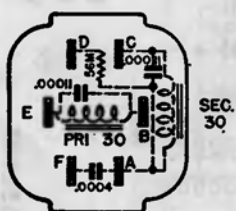


2nd I. F. TRANS.

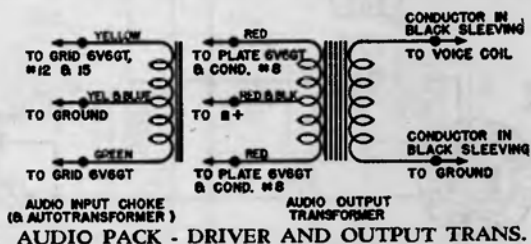

AUDIO PACK - DRIVER AND OUTPUT TRANS.

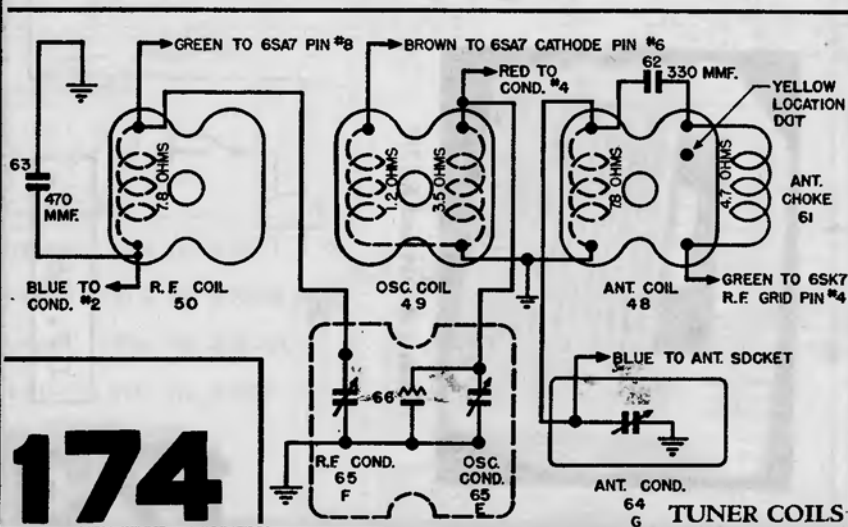


TUNER COILS

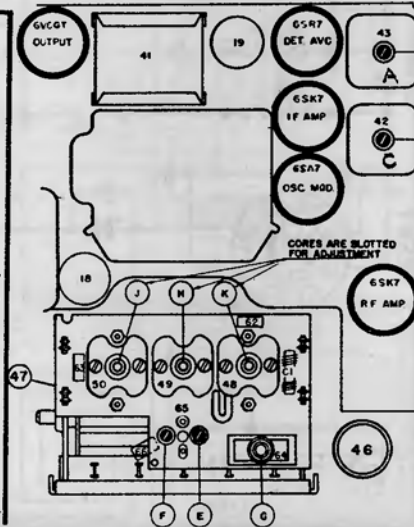


174

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

CHASSIS VIEW


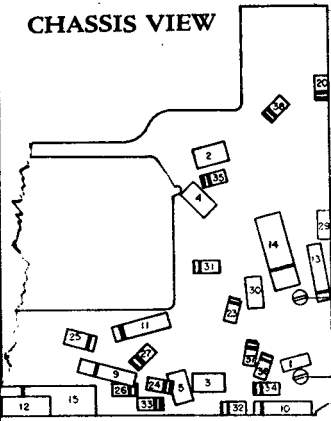


United Motors
Buick Models
980744, 980745
 See page 174
 for more data

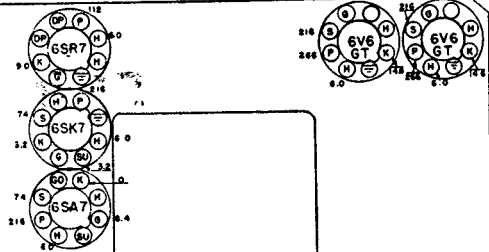

VOLTAGE READINGS BETWEEN SOCKET TERMINALS AND GROUND WITH D.C. VOLTMETER HAVING RESISTANCE OF 1000 OHMS PER VOLT. ALL READINGS TAKEN WITH 6.0 VOLTS ACROSS HEATERS. CURRENT DRAIN WITH SPEAKER AND DIAL LIGHT 7.5 AMPERES.

TOLERANCE ON VOLTAGES ± 10%

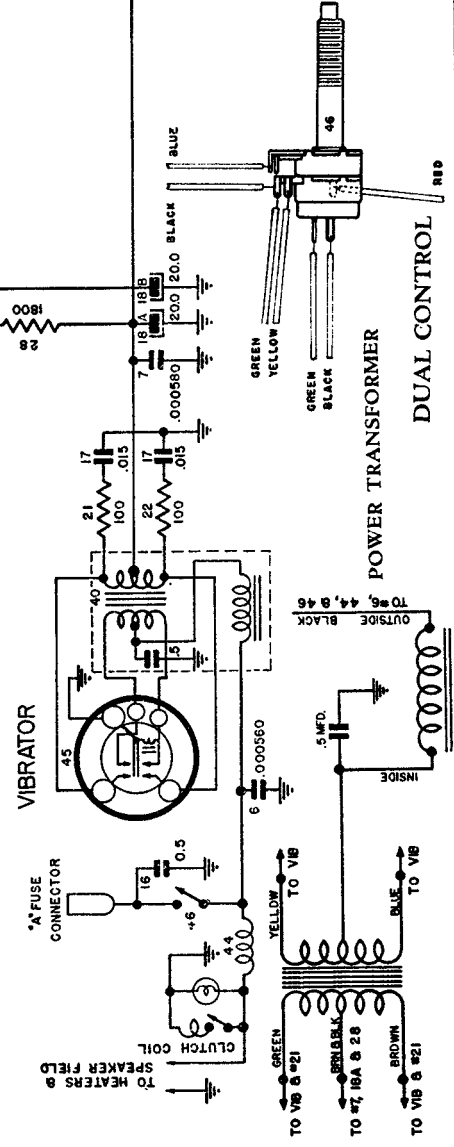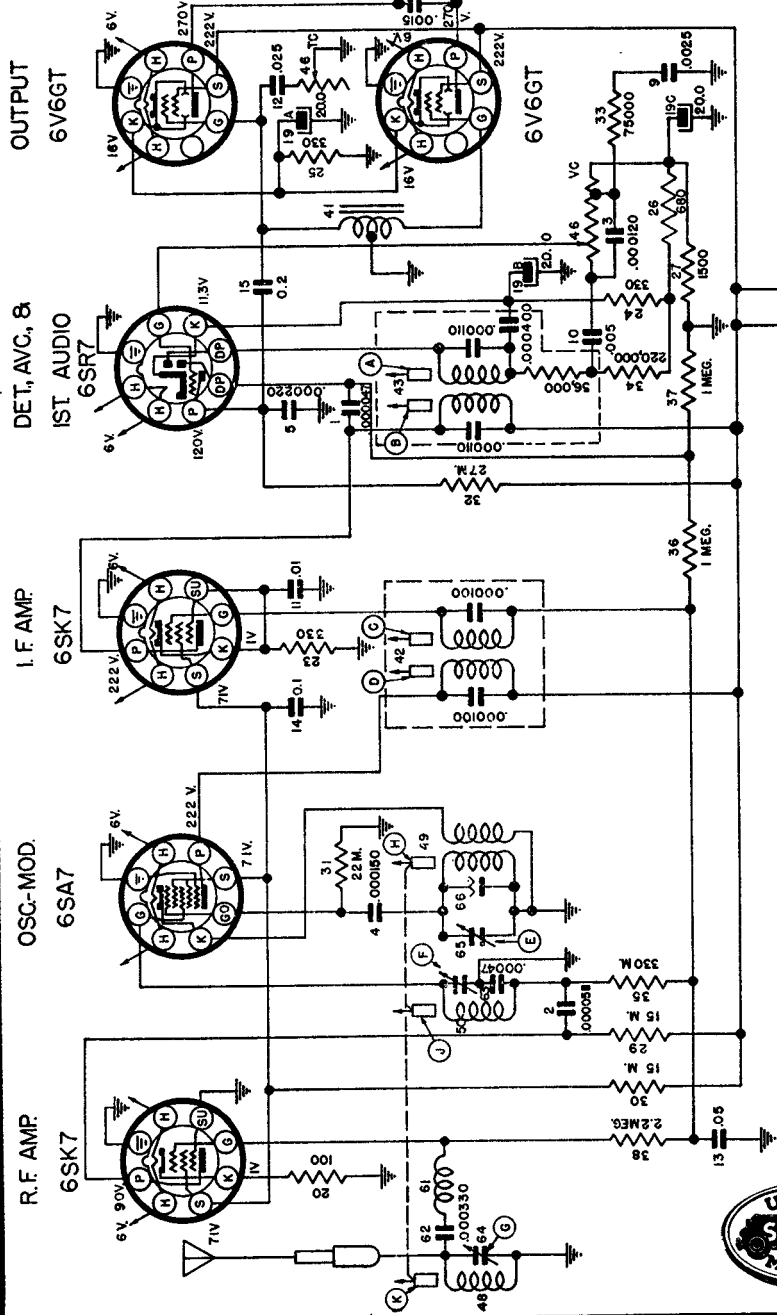


175

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

WARWICK MANUFACTURING CORPORATION

Model C110

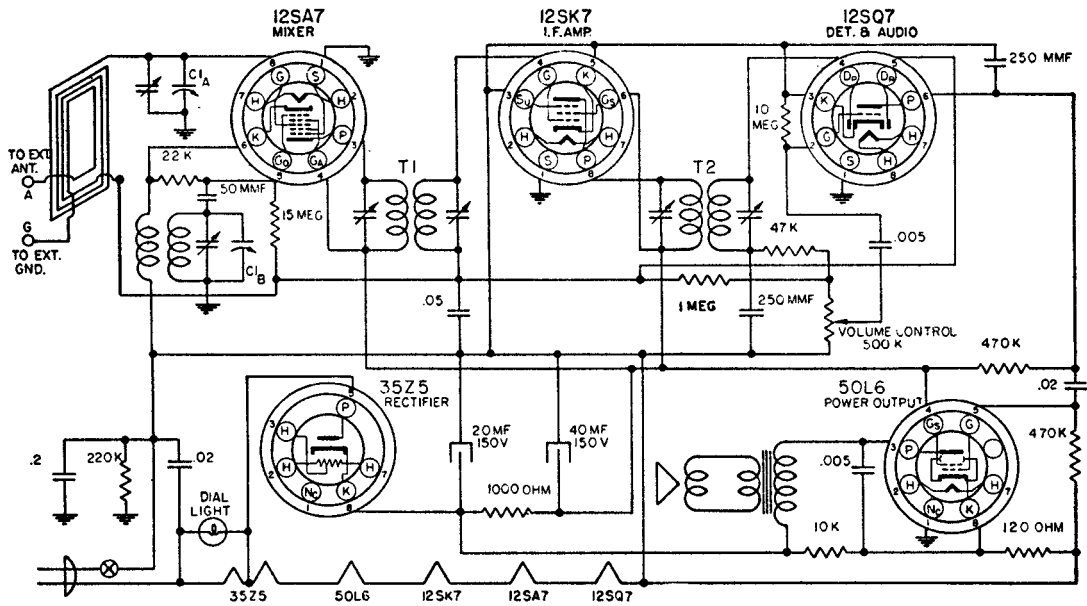



Position of Variable	Generator Frequency	Dummy Ant. Mfd.	Generator Connections	Trimmer Adjustment	Trimmer Function
Fully open	455 KC	.1	* 12SA7 Grid (Stator of C1A)	T1	Input I.F.
Fully open	455 KC	.1	* 12SA7 Grid (Stator of C1A)	T2	Output I.F.
Fully open	1725 KC	.00025	** Ant. terminal on loop	C1B	Oscillator
Tune in signal from generator	1500 KC	.00025	** Ant. terminal on loop	C1A	Antenna

* Connect ground lead of signal generator to chassis.

** Connect ground lead of signal generator to terminal marked "G" on the back of the loop.



WARWICK MANUFACTURING CORPORATION Model 11011

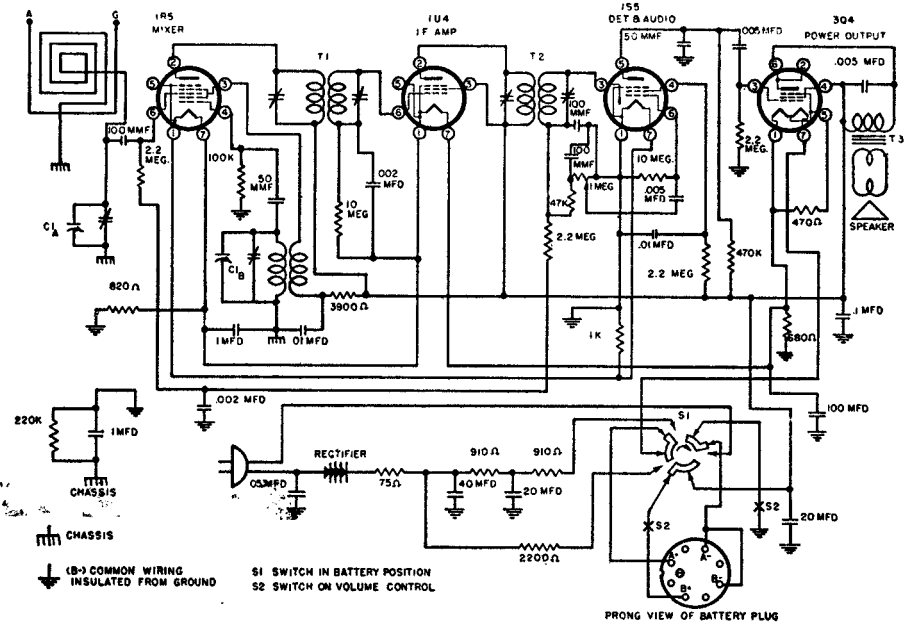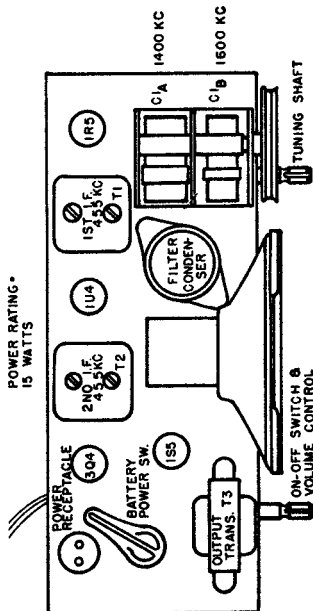


(B-) COMMON WIRING INSULATED FROM GROUND

S1 SWITCH IN BATTERY POSITION
S2 SWITCH ON VOLUME CONTROL

PRONG VIEW OF BATTERY PLUG

176

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

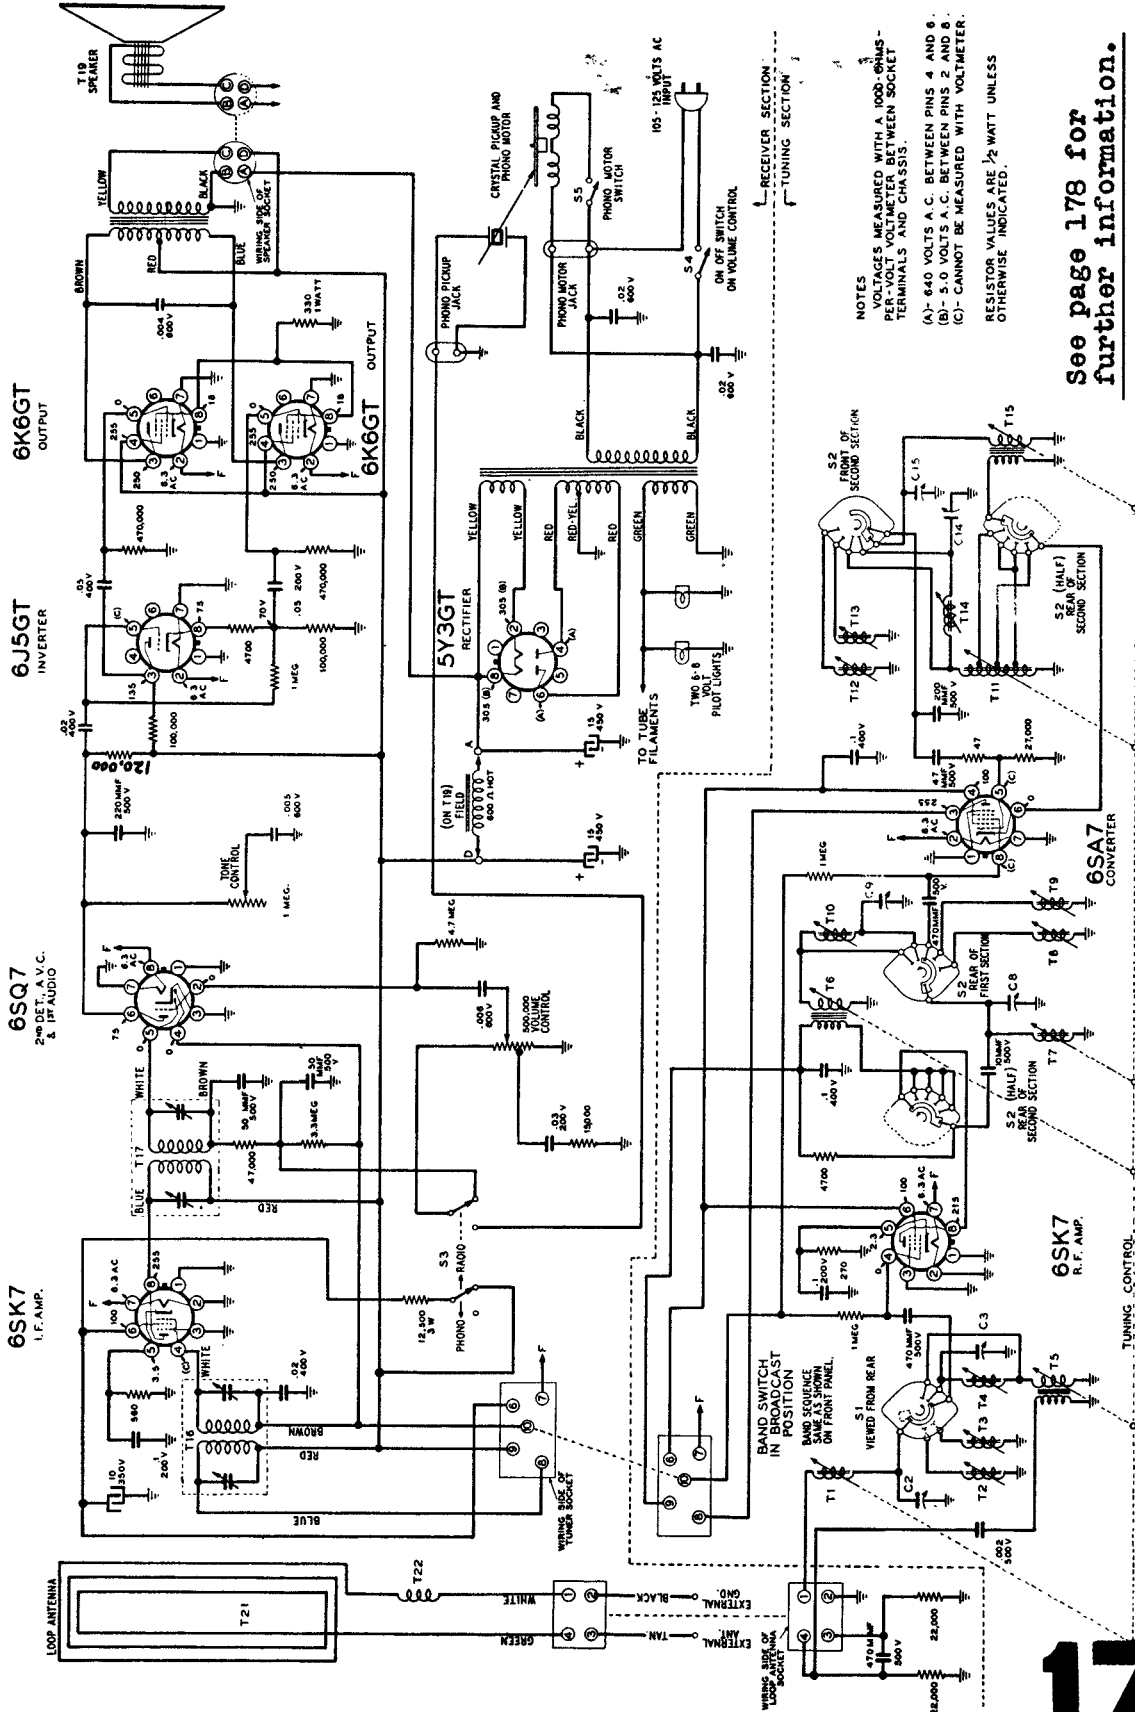

NOTES
 VOLTAGES MEASURED WITH A 1000-Ω PER-VOLT VOLTMETER BETWEEN SOCKET TERMINALS AND CHASSIS.
 (A) - 640 VOLTS A. C. BETWEEN PINS 5 AND 6.
 (B) - 5.0 VOLTS A. C. BETWEEN PINS 5 AND 6.
 (C) - CANNOT BE MEASURED WITH VOLTMETER.
 RESISTOR VALUES ARE 1/2 WATT UNLESS OTHERWISE INDICATED.

See page 178 for further information.

MODELS D1747 & D1748

WESTERN AUTO SUPPLY COMPANY

NOTE: Before removing chassis, take off escutcheon and pull pointer from pointer carriage.

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

WESTERN AUTO SUPPLY COMPANY

MODELS D1747 & D1748

ALIGNMENT PROCEDURE

Continued from page 177

MECHANICAL ADJUSTMENT—The core tuning bar (see illustration of iron cores) and dial pointer must be adjusted mechanically before any electrical alignment is attempted. Rotate the manual tuning control until the core bar is farthest from the coils. For proper adjustment the bar should be approximately 1/32 of an inch from the two rod guide angles.

With the core bar in this position, adjust the dial pointer to coincide with 1600 kc on the dial scale.


Rotate the cores of each of the three broadcast coils (see illustration) until the end of the coil is 1-5/32" from the end of the coil form. Rotate the three 9-mc cores until this dimension is 1-1/16" for these coils. After these adjustments have been made, the unit can be aligned electrically.

ELECTRICAL ADJUSTMENT—To align the set make the following preliminary adjustments: Set the tone control for treble tone; set the volume control at maximum; connect the ground post of the signal generator to the radio chassis; connect the output meter across a 3.2-ohm output load; and allow the receiver and signal generator to warm up for several minutes.


Align the set according to the sequence given in the chart. The indicated dummy antenna is to be connected in series between the signal generator output lead and the receiver. Adjust the set for maximum output; reduce the input as needed to keep the output near 1.3 volts.

Locations of all trimmers and coils are shown elsewhere in this manual. After adjustment, seal the coil cores with colodion or a similar substance (do not use cement).

BAND SWITCH SETTING	SIGNAL GENERATOR			DIAL POINTER SETTING	ADJUST TO MAXIMUM OUTPUT (in order shown)
	Frequency	Coupling Capacitor	Connection to Radio		
Broadcast (for I. F.)	455 kc	.1 mf	Grid (pin 8) of converter (6SA7)	1600 kc	Trimmers on output and input I. F. cans
Broadcast	1600 kc	200 mmf	Antenna lead	1600 kc	BC Osc. trimmer C15 BC R. F. trimmer C8 BC Ant. trimmer C2
	1400 kc	200 mmf	Antenna lead	1400 kc	Rotate cores of BC R. F. coil T7 and BC Ant. coil T1
31 Meter	9.6 mc	400 ohms	Antenna lead	9.6 mc	9 mc Osc. trimmer C14 9 mc R. F. trimmer C9 9 mc Ant. trimmer C3
49 Meter	6.1 mc	400 ohms	Antenna lead	6.1 mc	6 mc Osc. coil T14 6 mc R. F. coil T10 6 mc Ant. coil T4
25 Meter	11.8 mc	400 ohms	Antenna lead	11.8 mc	12 mc Osc. coil T13 12 mc R. F. coil T8 12 mc Ant. coil T2
19 Meter	15.2 mc	400 ohms	Antenna lead	15.2 mc	15 mc Osc. coil T12 15 mc R. F. coil T9 15 mc Ant. coil T3

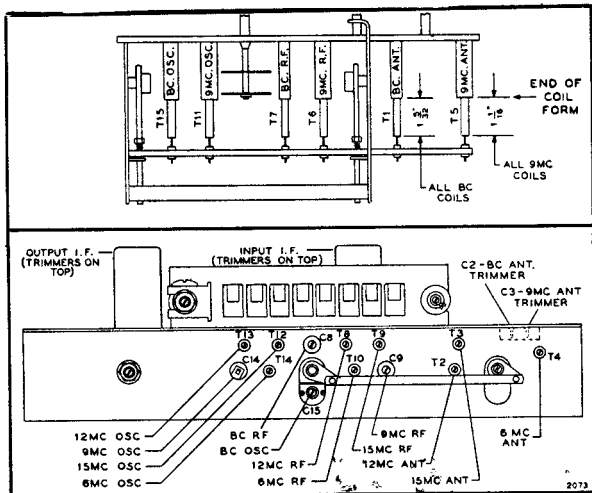


Coils and Trimmers

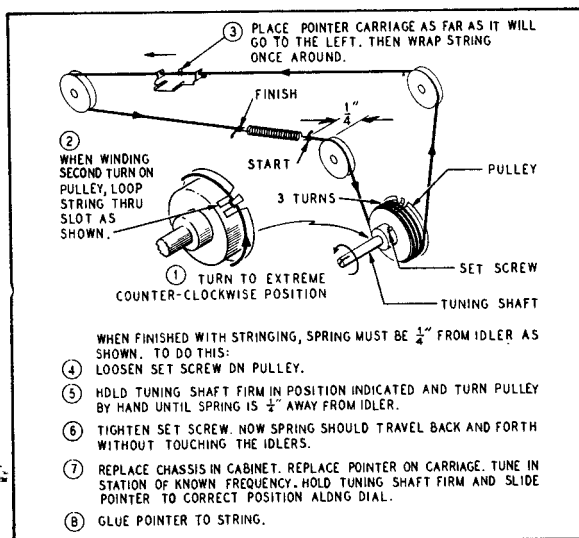

Replacement of Drive Cord


MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

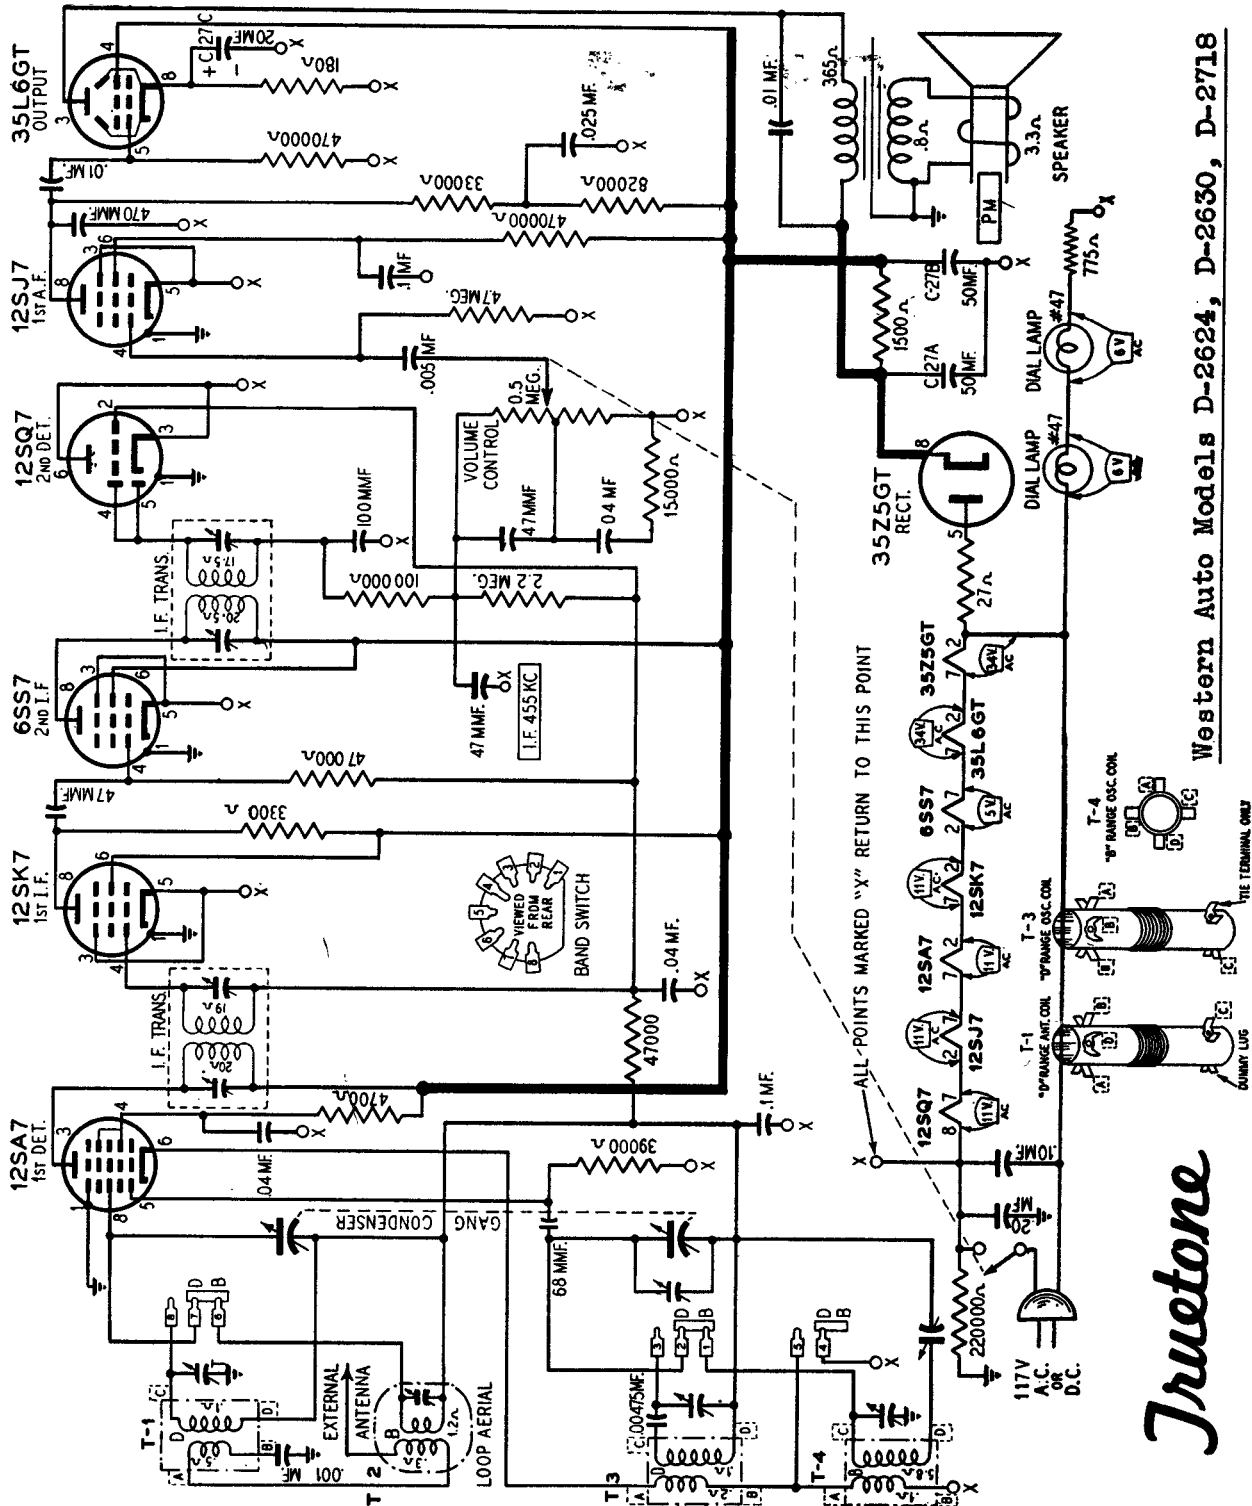

ALL POINTS MARKED "X" RETURN TO THIS POINT

Western Auto Models D-2624, D-2630, D-2718


Truetone

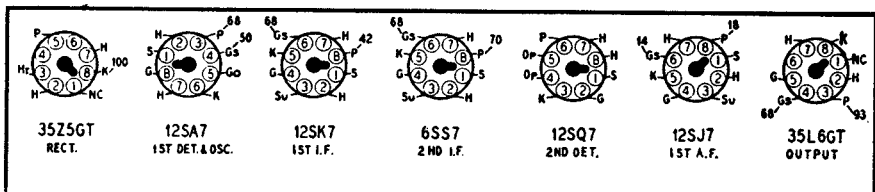

LINE VOLTAGE ... 117 VOLTS A.C.
NO SIGNAL INPUT
READINGS TAKEN WITH 1000 OHM PER VOLT METER.



ALL VOLTAGES EXCEPT HEATERS AND BIAL LAMP, ARE BETWEEN SOCKET TERMINALS AND "X" POINT. SEE SCHEMATIC FOR HEATERS.

179

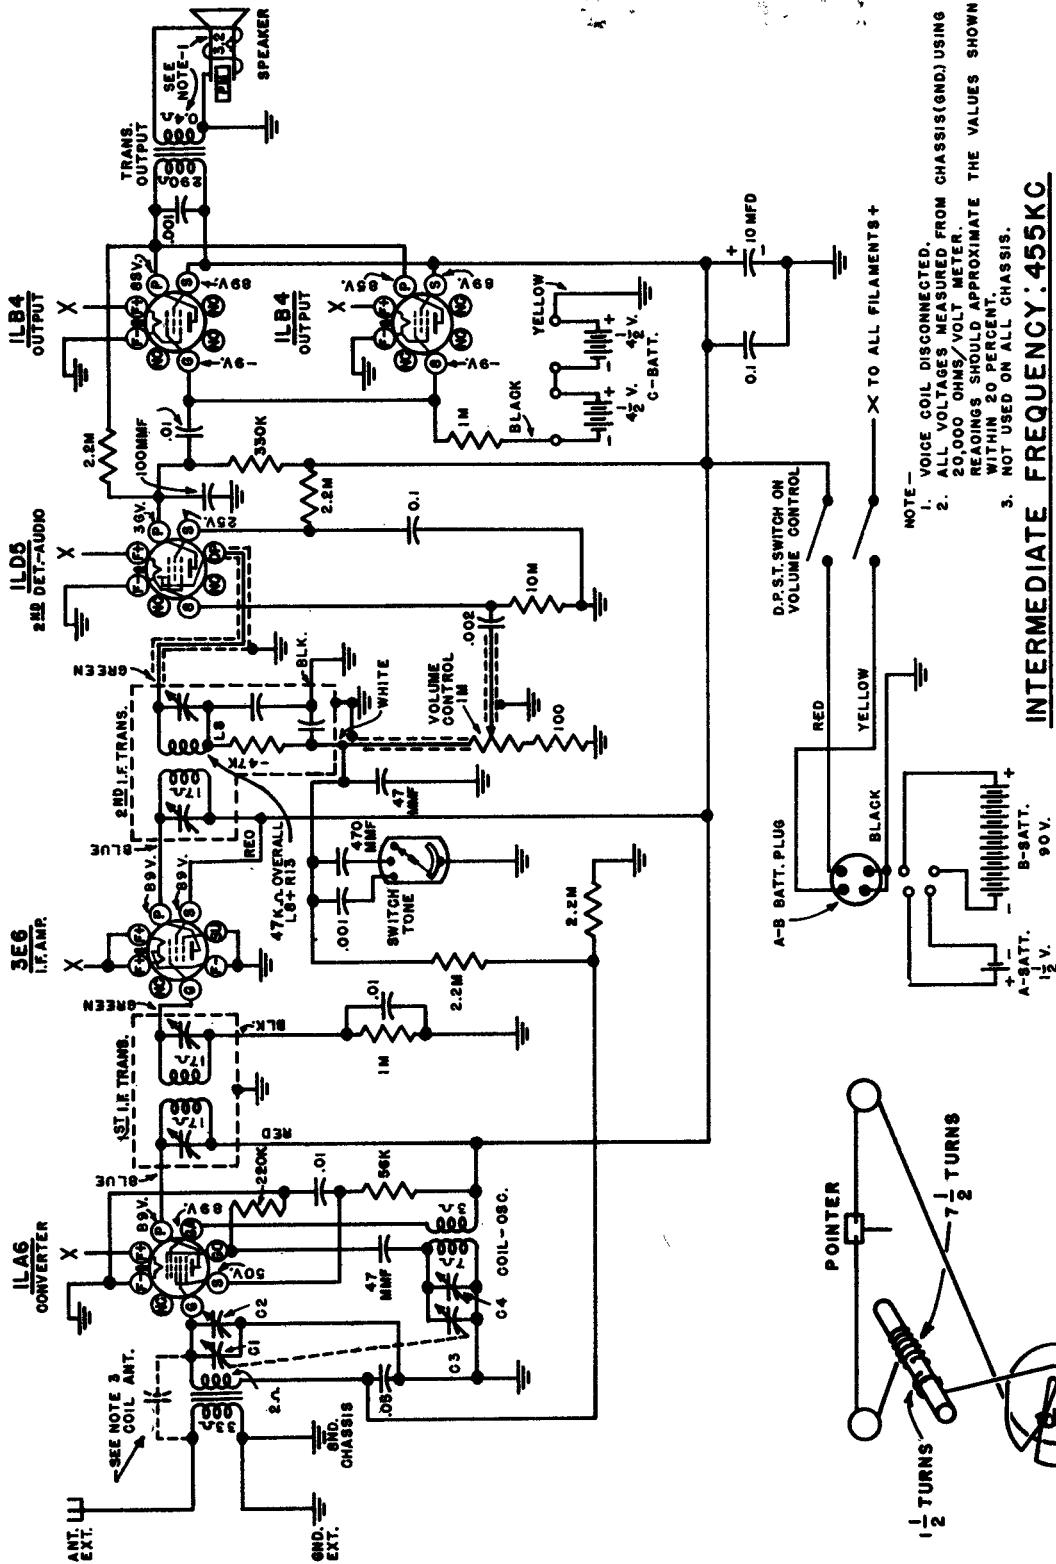

NOTE -
 1. VOICE COIL DISCONNECTED.
 2. ALL VOLTAGES MEASURED FROM CHASSIS(GND.) USING 20,000 OHMS/VOLT METER.
 READINGS SHOULD APPROXIMATE THE VALUES SHOWN WITHIN 20 PERCENT.
 3. NOT USED ON ALL CHASSIS.

INTERMEDIATE FREQUENCY: 455KC

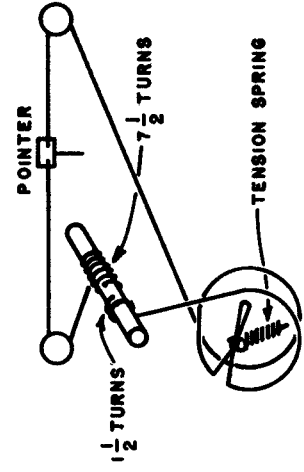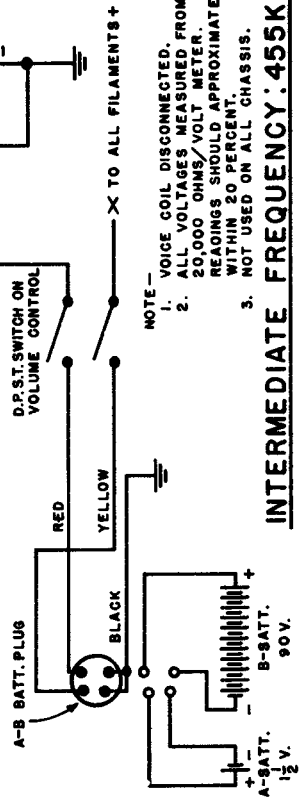

Westinghouse

RADIO TELEVISION

MODEL H-133





DIAL DRIVE MECHANISM

Westinghouse Electric

MODEL H-148


INTERMEDIATE FREQUENCY 455 KC.

- 1. SWITCHES SW 2-3-4-5 ARE SHOWN IN A.C. POSITION.
- 2. VOLTAGES MEASURED FROM COMMON NEGATIVE USING A 20,000 OHM/VOLT METER. (A.C. OPERATION - 115 V. LINE)

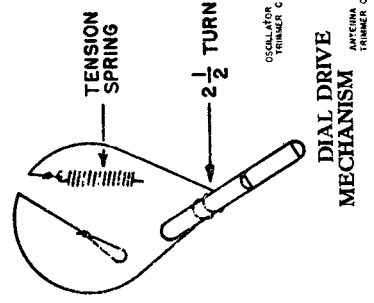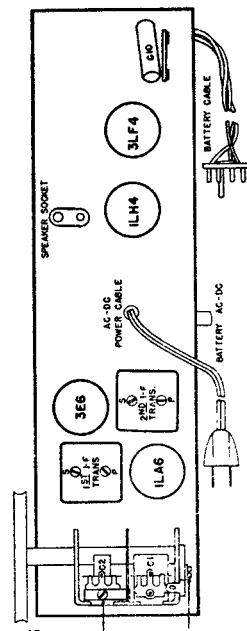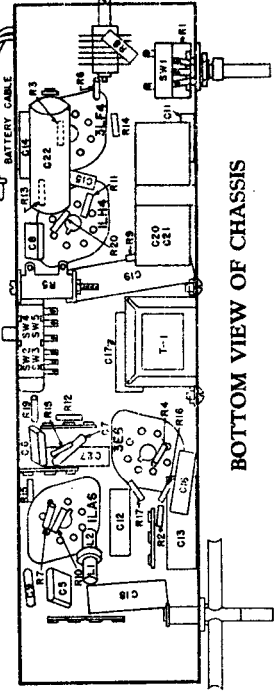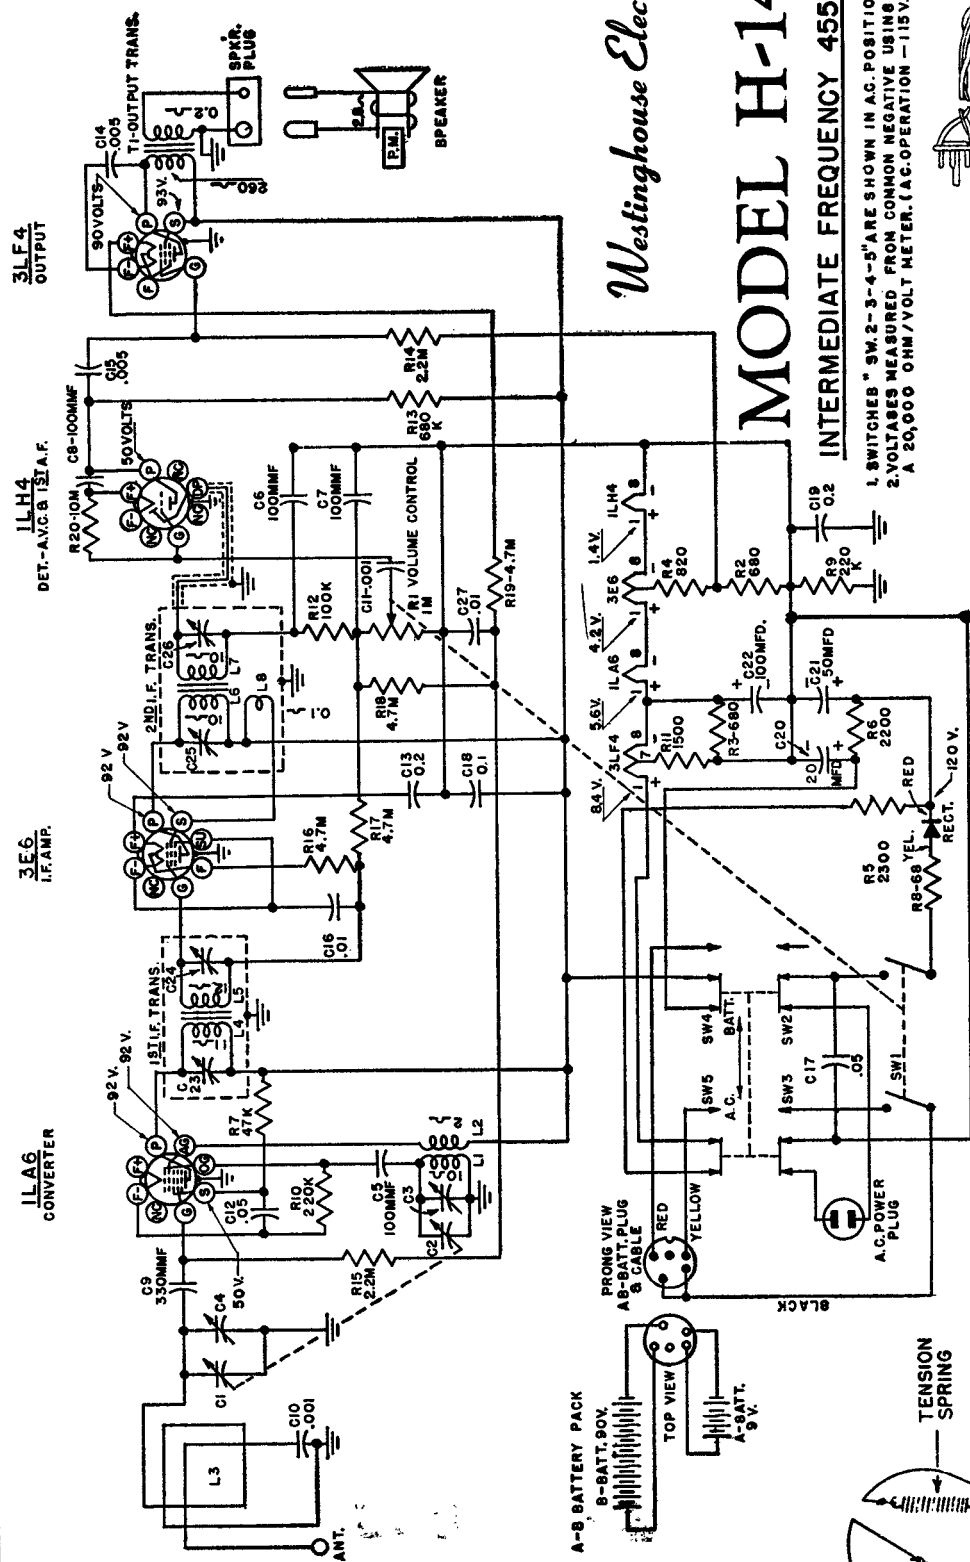

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

ALL VOLTAGES MEASURED FROM COMMON RETURN TO POINTS INDICATED WITH AN AC-DC OR VACUUM TUBE VOLTMETER AS REQUIRED.

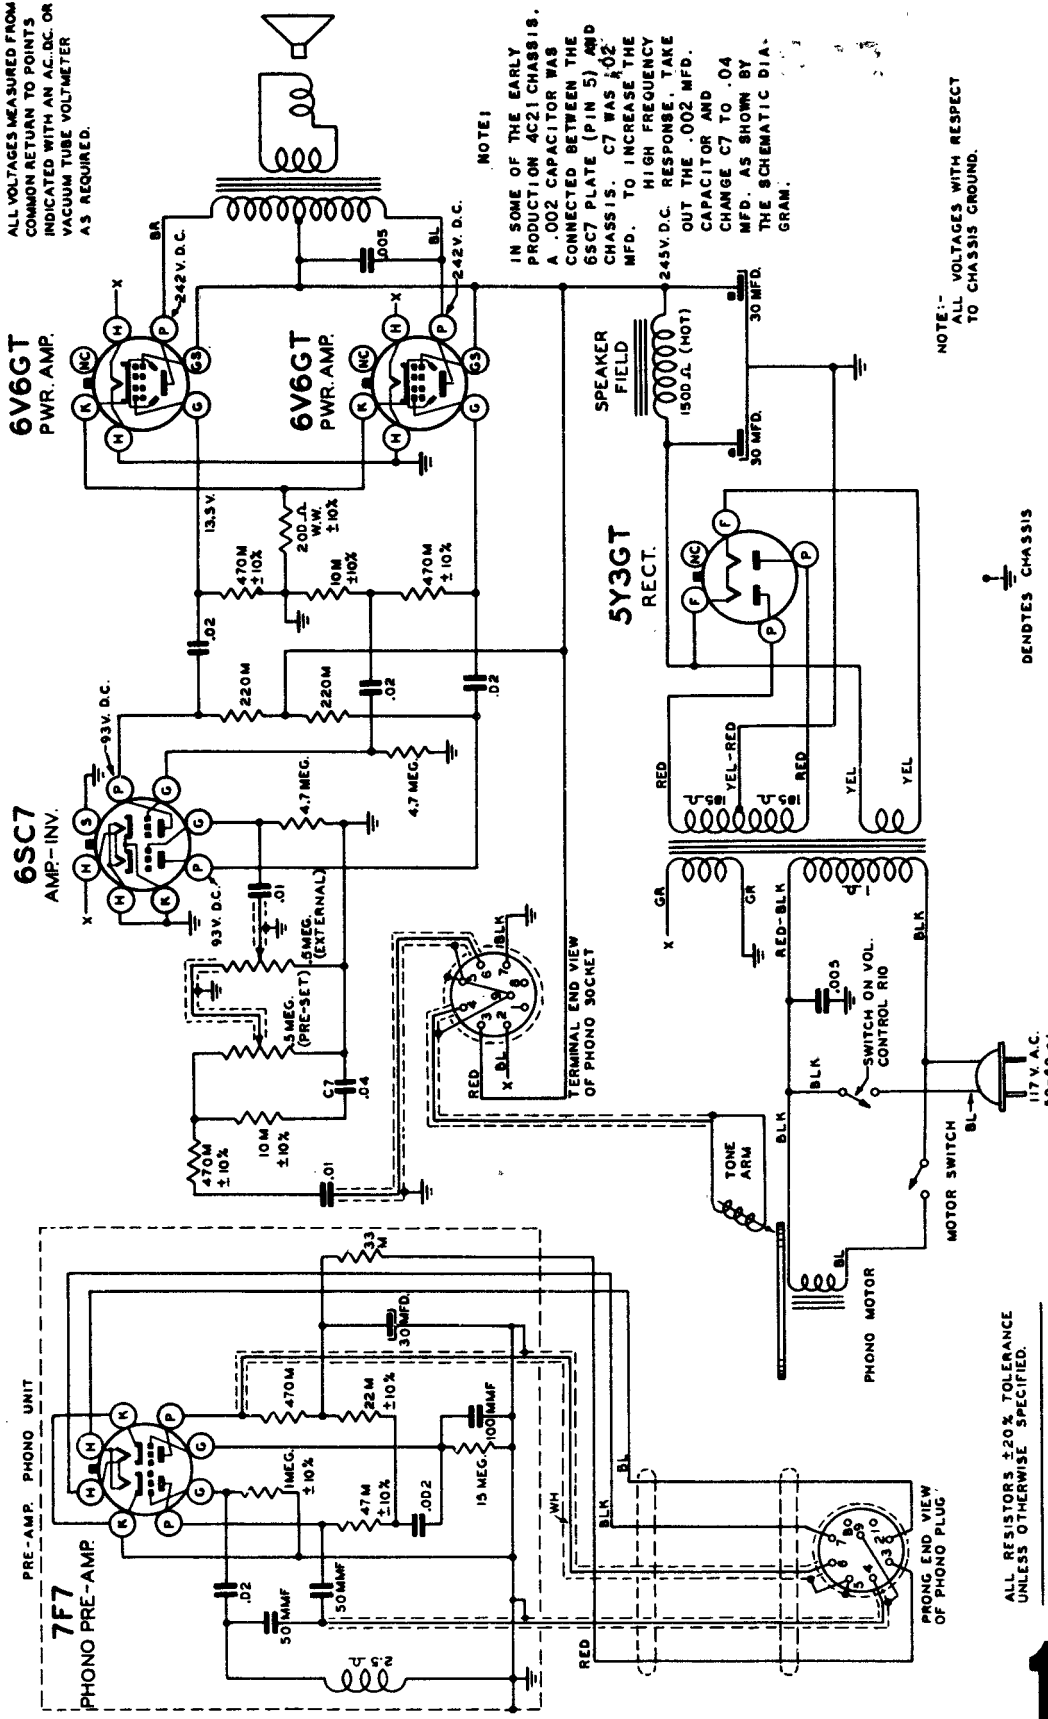

NOTE 1

IN SOME OF THE EARLY PRODUCTION 4C21 CHASSIS, A .002 CAPACITOR WAS CONNECTED BETWEEN THE 6SC7 PLATE (PIN 5) AND CHASSIS. C7 WAS 5.02 MFD. TO INCREASE THE HIGH FREQUENCY RESPONSE, TAKE OUT THE .002 MFD. CAPACITOR AND CHANGE C7 TO .04 MFD. AS SHOWN BY THE SCHEMATIC DIAGRAM.

NOTE 2: ALL VOLTAGES WITH RESPECT TO CHASSIS GROUND.

ALL RESISTORS ±20% TOLERANCE UNLESS OTHERWISE SPECIFIED.

MODEL S 12600
CHASSIS No. 4C21





187

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

Zenith Radio Corp.
Schematic on page 188


MODELS 4K040-4K040G
CHASSIS No. 4C54

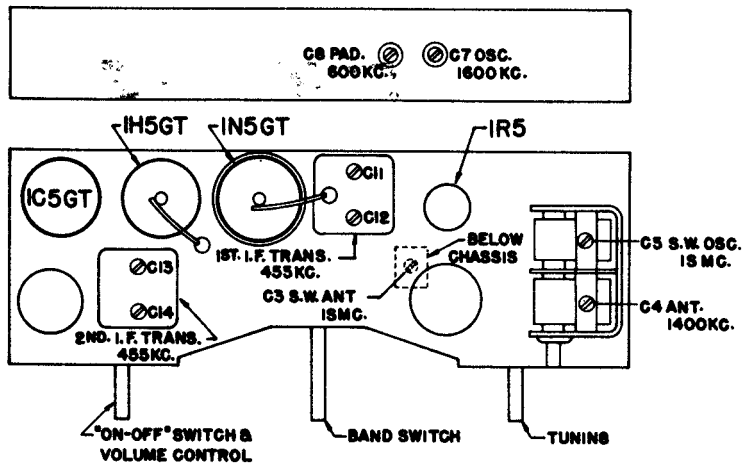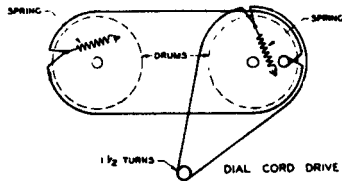

ALIGNMENT PROCEDURE

OPERATION	CONNECT OSC. TO	DUMMY ANT.	INPUT SIG. FREQUENCY	BAND	SET DIAL AT	TRIMMERS
1	Converter Grid	.5 Mfd.	455 Kc.	BC	600 Kc.	C-11, C-12, C-13, C-14
2	Ant.-Gnd.	400 ohms	18 Mc.	SW	18 Mc.	C-5
3	Ant.-Gnd.	400 ohms	400 ohms	SW	Rock Gang 18 Mc.	C-3
4	Ant.-Gnd.	200 Mmf.	1600 Kc.	BC	1600 Kc.	C-7
5	Ant.-Gnd.	200 Mmf.	1400 Kc.	BC	1400 Kc.	C-4
6	Ant.-Gnd.	200 Mmf.	600 Kc.	BC	Rock Gang 600 Kc.	C-8

Zenith Radio Corp. Changes between Chassis 11C21 and Chassis 11C21Z shown in circuit diagrams below. For complete receiver diagram and alignment see pages 190 to 192, in Volume 6, 1946 Diagram Manual.

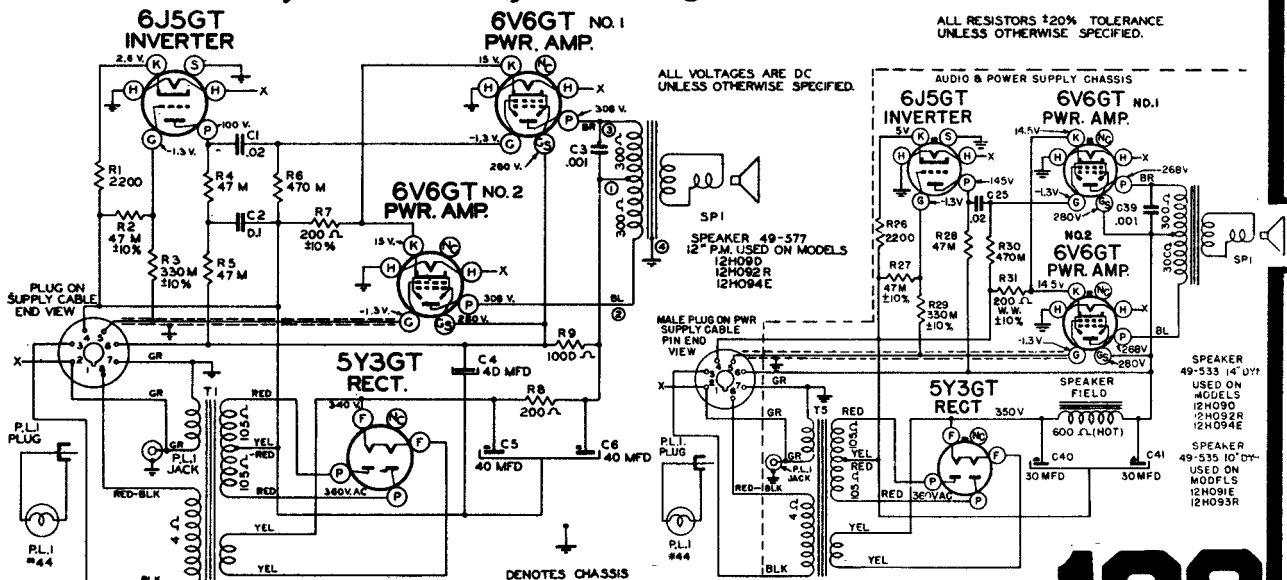

11C21Z POWER SUPPLY FOR P.M. SPEAKER

11C21 USING DYNAMIC SPEAKER


MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

Zenith Radio Corp.
Diagram on page 190

MODEL 5G003
CHASSIS No. 5C40

The alignment of chassis 5C40 is conventional and the most accurate alignment will be accomplished if the procedure is followed exactly. The IF frequency is 455 KC and all measurements, voltage, and resistance have been taken with an electronic voltohmmeter.

Stage by stage gain measurements are for reference purposes only. Gain measurements can seldom be duplicated, and are used only for comparison purposes.

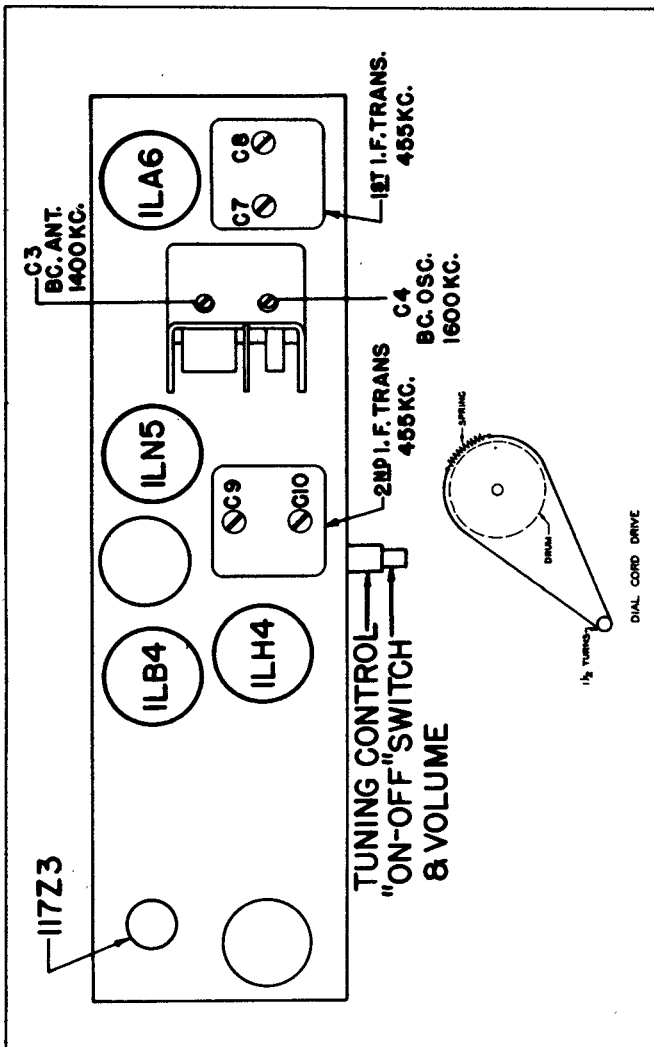


TUBE TRIMMER LOCATION AND DIAL CABLE DRAWING

ALIGNMENT PROCEDURE

OPERATION	CONNECT OSC. TO	DUMMY ANT.	INPUT SIG. FREQUENCY	SET DIAL AT	TRIMMERS	PURPOSE
1	Converter Grid	.5 Mfd.	455	600	C7, C8, C9 and C10	I.F. Alignment
2	Single Turn Loop	--	1600	1600	C4	Set Osc. to scale
3	Coupled Loosely to Wavemagnet	--	1400	1400	C3	Alignment of Antenna

MANUAL OF 1948 MOST-OFTEN-NEEDED RADIO DIAGRAMS

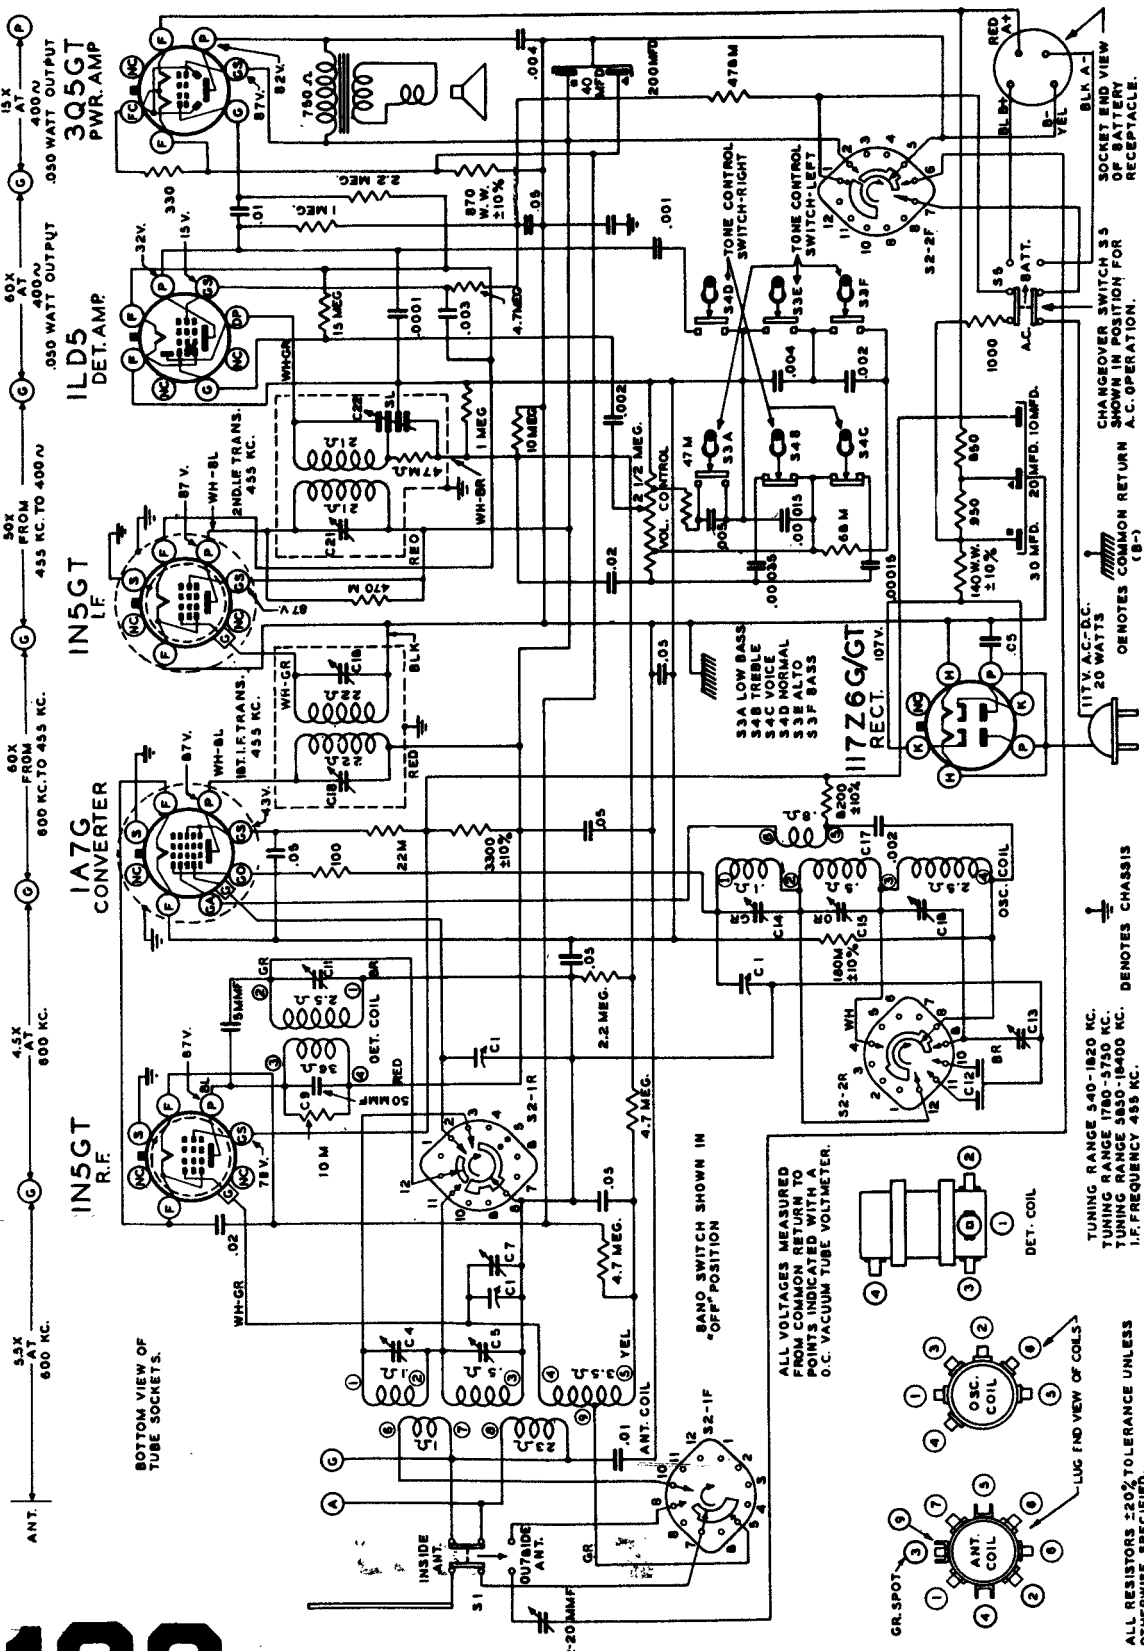

**MODELS 6G038
CHASSIS No. 6C50**

ZENITH RADIO CORP.

TUNING RANGE 540-1820 KC.
TUNING RANGE 540-1840 KC.
I.F. FREQUENCY 455 KC.

ALL RESTORERS 20% TOLERANCE UNLESS OTHERWISE SPECIFIED.